

ALPHABETICAL INDEX

SECTION **IDX****A B C D E F G H I J K L M**

GI

MA

EM

LC

EC

FE

N O P Q R S T U V W X Y Z

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX



A

AAC/V - Wiring diagram.....	EC-502
ABS (anti-lock brake system).....	BR-39
ABS - Wiring diagram	BR-44
ABS sensor rotor	AX-19
ABS/TCS C/U signal	EC-556
Absolute pressure sensor	EC-172
A/C air flow.....	HA-27, 145
A/C component layout.....	HA-21, 143
A/C compressor clutch removal and installation	HA-113, 200
A/C compressor description	HA-137
A/C compressor precaution	HA-8, 130
A/C compressor special service tool.....	HA-11, 133
A/C control linkage adjustment (manual A/C)	HA-163, 182, 185
A/C control operation (auto A/C).....	HA-25
A/C control operation (manual A/C)	HA-144
A/C diagnostic work flow (auto A/C)	HA-47
A/C diagnostic work flow (manual A/C).....	HA-154
A/C HFC134a (R134a) system precaution.....	HA-3, 125
A/C HFC134a (R134a) system service procedure.....	HA-108, 194
A/C HFC134a (R134a) system service tools	HA-12, 134
A/C HFC134a system service equip- ment precaution.....	HA-8, 130
A/C lubricant (R134a).....	HA-110, 196
A/C operational check.....	HA-48, 155
A/C performance chart.....	HA-85, 173
A/C performance test diagnoses	HA-83, 171
A/C relay	HA-81, 192
A/C self-diagnoses (auto A/C).....	HA-37
A/C service data specification.....	HA-124, 211
A/C system description (auto A/C).....	HA-25
A/C trouble diagnoses (auto A/C)	HA-29
A/C trouble diagnoses (manual A/C)	HA-147
A/C, A - Wiring diagram	HA-32
A/C, M - Wiring diagram	HA-150
Accelerator control system	FE-3
Air bag	RS-13
Air bag disposal.....	RS-25
Air bag precautions	GI-3
Air bleeding (hydraulic clutch)	CL-7
Air bleeding for brake system	BR-9
Air cleaner filter replacement.....	MA-17
Air conditioner cut control	EC-34
Air flow meter - See Mass air flow sensor	EC-164
Air mix door control linkage adjustment	HA-63, 182
Air mix. door motor	HA-61, 107, 179
Air spoiler, rear.....	BT-40
Alternator	SC-14
Ambient sensor	HA-94
Angular tightening application.....	EM-3
Antenna - See Power antenna	EL-174

Anti-lock brake system - See ABS	BR-39
Anti-lock brake system - Wiring diagram	BR-44
AP/SEN - Wiring diagram	EC-174
ASCD (automatic speed control device)	EL-191
ASCD - Wiring diagram	EL-195
A/T - Wiring diagram	AT-16
A/T - Wiring diagram - AT - FTS	AT-110
A/T - Wiring diagram - AT - MAIN	AT-99
A/T - Wiring diagram - AT - PNP/SW.....	AT-104
A/T - Wiring diagram - AT - VSS A/T	AT-116
A/T control	EC-517
A/T diagnosis communication line.....	EC-691
A/T fluid temperature sensor.....	AT-108
A/T self-diagnoses	AT-41, 49
A/T shift lock system	AT-270
A/T shift lock system - Wiring diagram	AT-271
A/T trouble diagnoses	AT-55
A/T Wiring diagram - AT - ENG SS	AT-121
A/T Wiring diagram AT - 1ST	AT-127
A/T Wiring diagram AT - 2ND	AT-133
A/T Wiring diagram AT - 3RD	AT-139
A/T Wiring diagram AT - 4TH.....	AT-146
A/T Wiring diagram AT - BA/FTS	AT-198
A/T Wiring diagram AT - LPSV	AT-168
A/T Wiring diagram AT - NONDTC	AT-216
A/T Wiring diagram AT - OVRC SV	AT-193
A/T Wiring diagram AT - SSV/A	AT-174
A/T Wiring diagram AT - SSV/B	AT-179
A/T Wiring diagram AT - TCCSIG	AT-159
A/T Wiring diagram AT - TCV	AT-153
A/T Wiring diagram AT - TPS.....	AT-185
A/T Wiring diagram AT - VSSMTR.....	AT-205
AT/C - Wiring diagram.....	EC-518
ATDIAG - Wiring diagram.....	EC-692
Audio	EL-162
AUDIO - Wiring diagram	EL-165
Audio and A/C control removal and installation - See Instrument panel	BT-28
Auto air conditioner - Wiring diagram	HA-32
Automatic amplifier.....	HA-35, 51
Automatic speed control system - See ASCD	EL-191
Automatic transmission fluid replacement.....	MA-22
Automatic transmission number	GI-43
Auxiliary air control (AAC) valve	EC-499

B

Back-up lamp	EL-66
Back-up lamp switch (M/T)	MT-9
BACK/L - Wiring diagram.....	EL-66
Ball joint (front)	SU-14
Base idle air volume initialiging.....	EC-70
Basic inspection.....	EC-113
Battery	SC-3
Baulk ring (M/T).....	MT-14
Blower and cooling unit	HA-118, 205
Blower motor	HA-67, 165

ALPHABETICAL INDEX



Blower resistor.....	HA-165
Board-on lift	GI-45
Body alignment	BT-63
Brake booster	BR-21
Brake fluid change	BR-8
Brake fluid level	MA-25
Brake fluid level and line check	BR-8
Brake hydraulic line	BR-10
Brake inspection	MA-25
Brake lines and cables inspection	MA-25
Brake master cylinder	BR-15
Brake pedal	BR-13
Bulb specifications	EL-364
Bumper, front	BT-13
Bumper, rear	BT-16
BYPS/V - Wiring diagram	EC-675, 682

C

Camshaft inspection	EM-42
Camshaft position sensor (PHASE)	EC-399
Canister-See EVAP canister	EC-35
CHARGE - Wiring diagram	SC-12
Charging system.....	SC-11
Chassis and body maintenance	MA-21
CHIME - Wiring diagram	EL-131
CIGAR - Wiring diagram	EL-149
Cigarette lighter.....	EL-149
Circuit breaker.....	EL-17
CKPS - Wiring diagram	EC-391
Closed loop control (Left bank)	EC-548
Closed loop control (Right bank)	EC-548
Closed throttle position switch	EC-508
Clutch cover.....	CL-15
Clutch disc	CL-15
Clutch fluid level.....	MA-21
Clutch master cylinder	CL-8
Clutch operating cylinder	CL-10
Clutch pedal.....	CL-6
Clutch release bearing.....	CL-13
Clutch release mechanism	CL-13
Clutch withdrawal lever.....	CL-13
Coil spring (front).....	SU-10
Coil spring (rear)	SU-25
Collision diagnosis.....	RS-68
Combination lamp, front, removal and installation	BT-13
Combination lamp, rear, removal and installation	BT-40
Combination meter.....	EL-105
Combination meter removal and instal- lation - See Instrument panel.....	BT-28
Combination switch	EL-29
Component Location (auto A/C).....	HA-29
Component Location (manual A/C)	HA-147
Compression pressure.....	EM-12
Compressor clutch removal and installation.....	HA-113, 200
Compressor description	HA-137
Compressor precaution	HA-8, 130

Compressor special service tool	HA-11, 133
Connecting rod	EM-63
Connecting rod bearing clearance	EM-67
Connecting rod bushing clearance	EM-68
Connector inspection	GI-22
Console box - See Instrument panel	BT-28
CONSULT for ABS	BR-51
CONSULT for engine	EC-94
CONSULT for TCS	BR-51
Control lever (M/T)	MT-12
Control valve (A/T)	AT-312
Converter housing installation.....	AT-284
COOL/F - Wiring diagram	EC-364, 564
Coolant mixture ratio.....	MA-12
Coolant replacement.....	MA-14
Cooling circuit (engine)	LC-8
Cooling fan control	EC-561
Cooling fan control system	LC-17
Coupling sleeve (M/T)	MT-14

GI

MA

EM

LC

EC

FE

CL

"Crankcase emission control system - See positive crankcase ventilation"	EC-52
Crankshaft	EM-65
Crankshaft position sensor (POS)	EC-391
Crankshaft position sensor (POS) chipping	EC-602
Crankshaft position sensor (REF)	EC-596
Cruise control - See ASCD	EL-191
Cylinder block	EM-60
Cylinder head	EM-39
Cylinder head bolt tightening	EM-49

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

Data link connector for Consult.....	EC-94
Daytime light system.....	EL-46
Daytime running light - See Daytime light system	EL-46
DEF - Wiring diagram	EL-152
Detonation sensor - See Knock sensor	EC-386
Diagnosis sensor unit.....	RS-18
Diagnostic trouble code (DTC) for OBD system	EC-9, 73
Diagnostic trouble code (DTC) inspec- tion priority chart	EC-129
Differential gear (FF A/T)	AT-356
Differential gear (FF M/T).....	MT-14, 28
Dimensions	GI-44
D/LOCK - Wiring diagram	EL-231
Dome light - See Interior lamp	EL-87
Door glass	BT-20
Door lock	BT-24
Door mirror	BT-61
Door trim	BT-35
Door, front	BT-19
Door, rear	BT-19
Drive plate runout	EM-68
Drive shaft (front)	AX-9
Dropping resistor (A/T)	AT-166
DTC work support	EC-105

DTRL - Wiring diagram	EL-50	
 <table border="1" style="width: 100%; border-collapse: collapse;"><tr><td style="text-align: center; padding: 5px;">E</td></tr></table>		E
E		
ECM input/output signal	EC-148	
ECTS - Wiring diagram	EC-185, 202	
EGR temperature sensor	EC-610	
EGR/TS - Wiring diagram	EC-613	
EGRC1 - Wiring diagram	EC-409, 417, 621	
Electric sun roof	EL-178	
Electrical diagnoses	GI-25	
Electrical ignition system	EC-33	
Electrical unit	Foldout	
Electrical units location	EL-340	
EMNT - Wiring diagram	EC-722	
Engine compartment	BT-64	
Engine control circuit diagram	EC-25	
Engine control component parts location	EC-21	
Engine control module (ECM)	EC-520	
Engine control system diagram and chart	EC-26	
Engine coolant temperature sensor (ECTS)	EC-183, 200	
Engine fail-safe system	EC-130	
Engine mounting control (Front)	EC-722	
Engine oil filter replacement	MA-18	
Engine oil precautions	GI-7	
Engine oil replacement	MA-17	
Engine outer component parts	EM-9	
Engine removal	EM-57	
Engine room - See Engine compartment	BT-64	
Engine serial number	GI-43	
EVAP canister	EC-36	
EVAP canister purge volume control solenoid valve	EC-35, 447, 629	
EVAP canister vent control valve	EC-453, 641, 661	
EVAP control system (small leak) diagnosis	EC-431, 472, 627	
EVAP control system pressure sensor	EC-460	
EVAP control system purge flow moni- toring diagnosis	EC-649	
EVAP vapor lines inspection	MA-20	
Evaporative emission (EVAP) system	EC-35	
Exhaust gas recirculation (EGR) valve	EC-405, 619	
Exhaust system	FE-11	
Exhaust system inspection	MA-21	
Exterior	BT-40	

F

Fan control amp.	HA-69
Fan switch	HA-165
F/FOG - Wiring diagram	EL-68
Final drive (FF A/T)	AT-356

Final drive (FF M/T)	MT-14, 28
Finisher, interior - See Trim	BT-32
Finisher, trunk lid	BT-39
Floor trim	BT-32
Fluid temperature sensor (A/T)	AT-108
Fluids	MA-11
Flywheel (clutch)	CL-15
Flywheel runout	EM-68
FO2H-L - Wiring diagram	EC-255
FO2H-R - Wiring diagram	EC-254
Fog lamp, front	EL-67
Fog lamp, front, removal and installation	BT-13
Fork rod (M/T)	MT-15
Forward clutch	AT-334
FPCM - Wiring diagram	EC-578
F/PUMP - Wiring diagram	EC-717
Freeze frame data	EC-73
FRO2LH - Wiring diagram	EC-209, 235, 247
FRO2RH - Wiring diagram	EC-208, 234, 246
Front axle	AX-2
Front bumper	BT-13
Front combination lamp removal and installation	BT-13
Front disc brake	BR-24
Front door	BT-19
Front fog lamp	EL-67
Front fog lamp removal and installation	BT-13
Front heated oxygen sensor (HO2S) (Left bank)	EC-205, 215, 223, 231, 244
Front heated oxygen sensor (HO2S) (Right bank)	EC-205, 215, 223, 231, 244
Front heated oxygen sensor heater (Left bank)	EC-252
Front heated oxygen sensor heater (Right bank)	EC-252
Front seat	BT-46
Front seat belt	RS-5
Front suspension	SU-2
Front washer	EL-143
Front wiper	EL-143
Fuel cut control (at no load & high engine speed)	EC-35
Fuel gauge	EL-105
Fuel injection system (Left bank)	EC-340, 348
Fuel injection system (Right bank)	EC-340, 348
Fuel line inspection	MA-16
Fuel precautions	GI-8
Fuel pressure check	EC-54
Fuel pressure regulator	EC-55
Fuel pressure release	EC-54
Fuel pump	EC-716
Fuel pump control module	EC-578
Fuel system	FE-5
Fuel tank temperature sensor	EC-355
Fuel tank vacuum relief valve	EC-36
FUELLH - Wiring diagram	EC-343, 351
FUELRH - Wiring diagram	EC-342, 350
Fuse	EL-17
Fuse block	Foldout

ALPHABETICAL INDEX

Fusible link EL-17

G

Garage jack and safety stand GI-46
 Gauges EL-105
 Gear components (M/T) MT-14
 Generator - See Alternator SC-14
 Generic scan tool (GST) EC-107
 Glass BT-20
 Grease MA-11
 Ground distribution EL-18

H

Harness connector EL-5
 Harness connector inspection GI-22
 Harness layout EL-344
 Hazard warning lamp EL-74
 Headlamp EL-32
 Headlamp removal and installation BT-13
 Headlining - See Roof trim BT-37
 Heated seat BT-49, EL-190
 Heater unit (heater core) HA-117, 204
 Height (Dimensions) GI-44
 HFC134a (R134a) system precaution HA-3, 125
 HFC134a (R134a) system service procedure HA-108, 194
 HFC134a (R134a) system service tools HA-12, 134
 HFC134a system service equipment precaution HA-8, 130
 High clutch AT-329
 H/LAMP - Wiring diagram EL-36
 Hood BT-13
 Horn EL-148
 HORN - Wiring diagram EL-148
 How to erase DTC for OBD system EC-85
 HSEAT - Wiring diagram EL-190

I

IACV-AAC valve EC-499
 IATS - Wiring diagram EC-180
 Identification plate GI-43
 Idle air control valve (IACV) EC-499
 Idle mixture ratio EC-58
 Idle speed EC-58
 IGN/SG - Wiring diagram EC-587
 Ignition control system EC-585
 Ignition timing EC-58
 ILL - Wiring diagram EL-81
 Illumination EL-79
 In vehicle sensor HA-98
 INJECT - Wiring diagram EC-707
 Injector EC-706
 Injector removal and installation EC-56

Input shaft (FF M/T) MT-14, 19
 Instrument panel BT-28
 Intake air temperature sensor EC-178
 Intake door control linkage adjustment HA-66, 163
 Intake door motor HA-64, 160
 Intake manifold EM-11
 Intake sensor HA-105
 Integrated homelink transmitter EL-318
 Interior BT-32
 Interior lamp EL-87
 Interior lamp on-off control EL-88
 IVIS (Infiniti vehicle immobilizer system) EL-321

J

Jacking points GI-46
 Joint connector (J/C) Foldout
 Junction box (J/B) Foldout

K

Keyless entry system - See Multi remote control system EL-247
 Knock sensor (KS) EC-386
 Knuckle spindle AX-5
 KS - Wiring diagram EC-387

L

Length (Dimensions) GI-44
 License lamp EL-57
 Lifting points GI-47
 Line pressure solenoid valve AT-166
 Line pressure test (A/T) AT-65
 Liquid gasket application EM-3
 LOAD - Wiring diagram EC-735
 Location of electrical units EL-340
 Lock, door BT-24
 Low and reverse brake AT-339
 Lubricant (R134a) A/C HA-110, 196
 Lubricants MA-11
 Lubrication circuit (engine) LC-3
 Lubrication-locks, hinges and hood latches MA-27

M

MAFS - Wiring diagram EC-168
 Magnet clutch HA-76, 113, 200
 MAIN - Wiring diagram EC-157
 Mainshaft (M/T) MT-14, 24
 Maintenance (engine) MA-13
 MAJOR OVERHALL AT-286
 Malfunction indicator lamp (MIL) EC-87

ALPHABETICAL INDEX



Manual air conditioner - Wiring diagram.....	HA-150
Manual transmission oil replacement	MA-21
Mass air flow sensor (MAFS).....	EC-164
Master cylinder (brake)	BR-15
Master cylinder (clutch)	CL-8
Meter	EL-105
METER - Wiring diagram	EL-110
MIL & Data link connectors circuit	EC-739
MIL/DL - Wiring diagram	EC-739
MIRROR - Wiring diagram.....	EL-183
Mirror defogger	EL-151
Mirror, door.....	BT-61
Misfire	EC-378
Mode door control linkage adjustment...	HA-59, 185
Mode door motor.....	HA-54, 183
Model variation	GI-41
Molding - See Exterior	BT-40
M/T major overhaul	MT-12
M/T removal and installation	MT-10
MULTI - Wiring diagram.....	EL-251
Multi-remote control system.....	EL-247
Multiport fuel injection (MFI) system	EC-31
Multiport fuel injection precautions.....	GI-6

N

NATS (Nissan anti-theft system) precautions	GI-3
NATS - Wiring diagram	EL-323
NVH troubleshooting (AX)	AX-3
NVH troubleshooting (BR).....	BR-7
NVH troubleshooting (CL)	CL-4
NVH troubleshooting (M/T)	MT-6
NVH troubleshooting (ST).....	ST-5
NVH troubleshooting (SU).....	SU-18
NVIS (Nissan vehicle immobilizer system)	EL-321
NVIS (Nissan vehicle immobilizer sys- tem) precautions	GI-3

O

Oil change (capacity)	MA-11
Oil pan (engine)	EM-13
Oil pressure (engine)	LC-4
Oil pump (A/T).....	AT-308
Oil pump (engine)	LC-4
Oil pump regulator valve (engine).....	LC-6
Oil seal replacement (engine).....	EM-36
On board diagnostic system	EC-72
Operating cylinder (clutch).....	CL-10
ORVR (On-board Refueling Vapor Recovery).....	EC-42
Overdrive control switch.....	AT-260
Overrun clutch.....	AT-334
Overrun clutch solenoid valve.....	AT-191

P

P/ANT - Wiring diagram.....	EL-175
Park/Neutral position switch.....	EC-694
Park/neutral position switch (A/T)	AT-102
Park/neutral position switch (M/T)	MT-9
Parking brake control	BR-37
Parking lamp	EL-57
PCV (positive crankcase ventilation)	EC-52
PGC/V - Wiring diagram	EC-449, 632
PHASE - Wiring diagram	EC-399
Piston assembly	EM-69
Piston pin inspection.....	EM-61
Piston ring inspection.....	EM-62
Piston to bore clearance.....	EM-64
PNP/SW - Wiring diagram	EC-696
POS - Wiring diagram	EC-602
POWER - Wiring diagram.....	EL-10
Power antenna	EL-174
Power door lock	EL-229
Power door mirror	EL-183
Power seat	EL-186
Power steering fluid level.....	MA-26, ST-7
Power steering gear.....	ST-15
Power steering hydraulic pressure	ST-9
Power steering oil pressure switch	EC-726
Power steering oil pump	ST-25
Power steering system bleeding.....	ST-7
Power supply routing	EL-9
Power transistor & ignition coil.....	EC-585
Power window	EL-216
PRE/SE - Wiring diagram	EC-462
Precautions (General)	GI-4
Pressure plate - See Clutch cover	CL-15
Pressure test (A/T)	AT-65
PST/SW - Wiring diagram	EC-727

R

Radiator	LC-16, 17
Radio - See Audio.....	EL-162
Rear air spoiler	BT-40
Rear axle	AX-17
Rear axle (disc brake type)	AX-19
Rear bumper	BT-16
Rear combination lamp removal and installation	BT-40
Rear disc brake	BR-28
Rear door	BT-19
Rear heated oxygen sensor (HO2S) ..	EC-259, 269, 279, 289, 304, 312, 320, 328
Rear heated oxygen sensor (HO2S) heater	EC-297, 335
Rear seat	BT-50
Rear seat belt.....	RS-7
Rear suspension	SU-18
Rear window	BT-59

ALPHABETICAL INDEX

Rear window defogger EL-151
 REF - Wiring diagram EC-596
 Refrigerant pressure sensor HA-81, 192
 Refrigerant connection precaution HA-4, 126
 Refrigerant discharging evacuating
 charging HA-108
 Refrigerant general precaution HA-4, 126
 Refrigerant lines HA-119, 206
 Refrigerant pressure sensor EC-731
 Refrigeration cycle HA-15, 137
 Release bearing (clutch) CL-13
 Removal and installation (A/T) AT-283
 Reverse clutch AT-326
 Reverse idler shaft (M/T) MT-14
 Reverse lamp switch (M/T) - See
 Back-up lamp switch (M/T) MT-9
 Reverse main gear (M/T) MT-14
 Revolution sensor (A/T) AT-114
 RO2H-L - Wiring diagram EC-300
 RO2H-R - Wiring diagram EC-299
 Road wheel size GI-44
 Roof trim BT-37
 Room lamp - See Interior lamp EL-87
 ROOM/L - Wiring diagram EL-91
 RRO2LH - Wiring diagram EC-263, 273, 283, 292
 RRO2RH - Wiring diagram EC-262, 272, 282, 291

S

SAE J1930 terminology list GI-50
 Seal - See Exterior BT-40
 SEAT - Wiring diagram EL-187
 Seat belt inspection MA-27, RS-9
 Seat belt pre-tensioner RS-3
 Seat belt pre-tensioner disposal RS-25
 Seat belt, front RS-5
 Seat belt, rear RS-7
 Seat, front BT-46
 Seat, rear BT-50
 SHIFT - Wiring diagram AT-271
 Shift control components (M/T) MT-15
 Shift fork (M/T) MT-15
 Shift lever MT-12
 Shift lock system AT-270
 Shift schedule AT-382
 Shift solenoid valve A (A/T) AT-172
 Shift solenoid valve B (A/T) AT-177
 Shock absorber (front) SU-11
 Shock absorber (rear) SU-25
 Side air bag RS-24
 Side trim BT-32
 Smart entrance control unit EL-310
 SMJ (super multiple junction) Foldout
 Spare tire size GI-44
 Spark plug replacement MA-18
 Speedometer EL-105
 Spiral cable RS-20
 Spring (Wheelarch) height SU-6
 SROOF - Wiring diagram EL-179

SRS - See Supplemental Restraint
 System RS-13
 SRS - Wiring diagram RS-38
 S/SIG - Wiring diagram EC-713
 Stabilizer bar (front) SU-12
 Stall test (A/T) AT-61
 Standardized relay EL-7
 START - Wiring diagram SC-7
 Start signal EC-712
 Starter SC-9
 Starting system SC-6
 Steering gear and linkage inspection MA-26
 Steering linkage ST-15
 Steering switch EL-31
 Steering wheel and column ST-10
 Steering wheel play ST-6
 Steering wheel turning force ST-8
 Stop lamp EL-65
 STOP/L - Wiring diagram EL-65
 Striking rod (M/T) MT-15
 Strut (front) SU-10
 Strut (rear) SU-23
 Sun roof, electric EL-178
 Sunload sensor HA-101
 Sunroof BT-51
 Supplemental Restraint System RS-13
 Supplemental restraint system - Wiring
 diagram RS-38
 S/VCSW - Wiring diagram EC-550
 Swirl control valve control solenoid
 valve EC-524
 Swirl control valve control vacuum
 check switch EC-550
 SWL/V - Wiring diagram EC-524
 Symbols and abbreviations GI-9
 Symptom matrix chart EC-138
 Synchronizer (M/T) MT-14
 System readiness test (SRT) code EC-74

T

Tachometer EL-105
 Tail lamp EL-57
 TAIL/L - Wiring diagram EL-59
 TCM circuit diagram AT-16
 TCM inspection table AT-95
 TCS (traction control system) BR-40
 TCS - Wiring diagram BR-43
 TCS component parts and connector
 location BR-42
 TCS control unit BR-41
 TCS system components BR-40
 TCS wheel sensors BR-42
 TFTS - Wiring diagram EC-357
 THEFT - Wiring diagram EL-284
 Theft warning system EL-277
 Thermostat LC-14
 Three way catalyst function (Left
 bank) EC-421, 426

ALPHABETICAL INDEX



Three way catalyst function (Right bank).....	EC-421, 426
Three way catalyst precautions.....	GI-6
Throttle bodies.....	EM-11
Throttle position sensor (TPS)	EC-188
Throttle position sensor adjustment	EC-113
Throttle position switch	EC-508, AT-182, 260
Throwout bearing - See Clutch release bearing	CL-13
Tie-rod	ST-15
Tie-rod ball joints.....	ST-19
Tightening torque of standard bolts.....	GI-49
Timing chain.....	EM-20
Tire rotation	MA-24
Tire size	GI-44
Torque converter installation	AT-284, 375
Torque convertor clutch solenoid valve.....	AT-151
Tow truck towing.....	GI-48
TP/SW - Wiring diagram.....	EC-511
TPS - Wiring diagram.....	EC-193
Traction control system - See TCS	BR-40
Traction control system - Wiring diagram	BR-43
Transaxle serial number	GI-43
Transmission case (M/T).....	MT-13
TRANSMT - Wiring diagram	EL-318
Tread-FR&RR (Dimensions).....	GI-44
Trim	BT-32
Trouble diagnoses	GI-35
Trunk lid	BT-16
Trunk lid finisher.....	BT-39
Trunk lid opener - See Trunk lid	BT-16
Trunk lid trim	BT-39
Trunk room trim.....	BT-39
TURN - Wiring diagram	EL-76
Turn signal lamp	EL-74
Two trip detection logic	EC-72
Two-pole lift	GI-47

U

Under body	BT-66
------------------	-------

V

Vacuum cut valve	EC-35
Vacuum cut valve bypass valve....	EC-35, 673, 679
Vacuum hose (brake system).....	BR-23

Vacuum hose drawing (Engine control)	EC-28
Valve clearance.....	EM-52
Valve guide.....	EM-44
Valve seat.....	EM-45
Valve spring.....	EM-46
Vehicle recovery (freeing a stuck vehicle).....	GI-48
Vehicle speed sensor (VSS)	EC-495
VENT/V - Wiring diagram	EC-455, 643, 664
VIAS	EC-700
VIAS - Wiring diagram	EC-700
Viscosity number (SAE)	MA-11
Viscous coupling (FF A/T).....	AT-356
Viscous coupling (FF M/T)	MT-9, 14
VSS - Wiring diagram	EC-497

W

WARN - Wiring diagram	EL-122
Warning chime	EL-129
Warning lamps	EL-121
Washer, front	EL-143
Water pump	LC-10
Water temperature gauge	EL-105
Weatherstrip - See Exterior	BT-40
Wheel alignment (front)	SU-6
Wheel alignment (rear).....	SU-20
Wheel balance	MA-23
Wheel bearing (front).....	AX-4
Wheel bearing (rear)	AX-18
Wheel hub (front).....	AX-5
Wheel hub (rear)	AX-19
Wheel sensors (TCS)	BR-42
Wheelarch height	SU-6
Wheelbase (Dimensions)	GI-44
Wide open & closed throttle position switch	EC-188
Width (Dimensions)	GI-44
WINDOW - Wiring diagram	EL-219
Window, rear	BT-59
Windshield.....	BT-59
WIPER - Wiring diagram	EL-145
Wiper, front.....	EL-143
Wiring Diagram (Cell code) list	EL-365
Wiring diagram - AT - LAN.....	AT-210
Wiring diagrams	GI-11
Withdrawal lever (clutch)	CL-13
Wrist pin - See Piston pin inspection.....	EM-61