

ALPHABETICAL INDEX

SECTION **IDX**

A B C D E F G H I J K L M

N O P Q R S T U V W X Y Z

GI
MA
EM
LG
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....EC-508
 ABS (anti-lock brake system).....BR-39
 ABS - Wiring diagramBR-44
 ABS sensor rotorAX-19
 ABS/TCS C/U signalEC-562
 Absolute pressure sensorEC-177
 A/C air flow.....HA-27, 145
 A/C component layout.....HA-21, 143
 A/C compressor clutch removal and
 installation.....HA-113, 200
 A/C compressor descriptionHA-137
 A/C compressor precautionHA-8, 130
 A/C compressor special service tool.....HA-11, 133
 A/C control linkage adjustment (manual
 A/C)HA-163, 182, 185
 A/C control operation (auto A/C).....HA-25
 A/C control operation (manual A/C)HA-144
 A/C diagnostic work flow (auto A/C)HA-47
 A/C diagnostic work flow (manual A/C).....HA-154
 A/C HFC134a (R134a) system
 precaution.....HA-3, 125
 A/C HFC134a (R134a) system service
 procedure.....HA-108, 194
 A/C HFC134a (R134a) system service
 toolsHA-12, 134
 A/C HFC134a system service equip-
 ment precaution.....HA-8, 130
 A/C lubricant (R134a).....HA-110, 196
 A/C operational check.....HA-48, 155
 A/C performance chart.....HA-85, 173
 A/C performance test diagnosesHA-83, 171
 A/C relayHA-81, 192
 A/C self-diagnoses (auto A/C).....HA-37
 A/C service data specification.....HA-124, 211
 A/C system description (auto A/C).....HA-25
 A/C trouble diagnoses (auto A/C)HA-29
 A/C trouble diagnoses (manual A/C)HA-147
 A/C, A - Wiring diagramHA-32
 A/C, M - Wiring diagramHA-150
 Accelerator control systemFE-3
 Air bagRS-13
 Air bag disposal.....RS-25
 Air bag precautionsGI-3
 Air bleeding (hydraulic clutch)CL-7
 Air bleeding for brake systemBR-9
 Air cleaner filter replacement.....MA-17
 Air conditioner cut controlEC-34
 Air flow meter - See Mass air flow
 sensorEC-169
 Air mix door control linkage
 adjustment.....HA-63, 182
 Air mix. door motorHA-61, 107, 179
 Air spoiler, rear.....BT-40
 AlternatorSC-14
 Ambient sensorHA-94
 Angular tightening application.....EM-3
 Antenna - See Power antennaEL-174

Anti-lock brake system - See ABS.....BR-39
 Anti-lock brake system - Wiring
 diagram.....BR-44
 AP/SEN - Wiring diagramEC-179
 ASCD (automatic speed control device)EL-191
 ASCD - Wiring diagramEL-195
 A/T - Wiring diagramAT-16
 A/T - Wiring diagram - AT - FTSAT-110
 A/T - Wiring diagram - AT - MAIN.....AT-99
 A/T - Wiring diagram - AT - PNP/SW.....AT-104
 A/T - Wiring diagram - AT - VSS A/TAT-116
 A/T controlEC-523
 A/T diagnosis communication line.....EC-690
 A/T fluid temperature sensor.....AT-108
 A/T self-diagnosesAT-41, 49
 A/T shift lock systemAT-270
 A/T shift lock system - Wiring diagramAT-271
 A/T trouble diagnosesAT-55
 A/T Wiring diagram - AT - ENG SSAT-121
 A/T Wiring diagram AT - 1STAT-127
 A/T Wiring diagram AT - 2NDAT-133
 A/T Wiring diagram AT - 3RDAT-139
 A/T Wiring diagram AT - 4TH.....AT-146
 A/T Wiring diagram AT - BA/FTSAT-198
 A/T Wiring diagram AT - LPSVAT-168
 A/T Wiring diagram AT - NONDTCAT-216
 A/T Wiring diagram AT - OVRCSVAT-193
 A/T Wiring diagram AT - SSV/AAT-174
 A/T Wiring diagram AT - SSV/BAT-179
 A/T Wiring diagram AT - TCCSIGAT-159
 A/T Wiring diagram AT - TCVAT-153
 A/T Wiring diagram AT - TPS.....AT-185
 A/T Wiring diagram AT - VSSMTR.....AT-205
 AT/C - Wiring diagram.....EC-524
 ATDIAG - Wiring diagram.....EC-691
 AudioEL-162
 AUDIO - Wiring diagram.....EL-165
 Audio and A/C control removal and
 installation - See Instrument panelBT-28
 Auto air conditioner - Wiring diagramHA-32
 Automatic amplifier.....HA-35, 51
 Automatic speed control system - See
 ASCDEL-191
 Automatic transmission fluid
 replacement.....MA-22
 Automatic transmission numberGI-43
 Auxiliary air control (AAC) valveEC-505

B

Back-up lampEL-67
 Back-up lamp switch (M/T)MT-9
 BACK/L - Wiring diagram.....EL-67
 Ball joint (front).....SU-14
 Base idle air volume initialiging.....EC-72
 Basic inspection.....EC-115
 BatterySC-3
 Baulk ring (M/T).....MT-14
 Blower and cooling unit.....HA-118, 205
 Blower motorHA-67, 165

ALPHABETICAL INDEX

Blower resistor.....	HA-165
Board-on lift	GI-45
Body alignment	BT-63
Brake booster	BR-21
Brake control valve (Proportioning valve)	BR-12
Brake fluid change	BR-8
Brake fluid level	MA-25
Brake fluid level and line check	BR-8
Brake hydraulic line	BR-10
Brake inspection	MA-25
Brake lines and cables inspection	MA-25
Brake master cylinder	BR-15
Brake pedal	BR-13
Bulb specifications	EL-368
Bumper, front	BT-13
Bumper, rear	BT-16
BYPS/V - Wiring diagram	EC-674, 681

C

Camshaft inspection	EM-42
Camshaft position sensor (PHASE).....	EC-405
Canister-See EVAP canister	EC-35
CHARGE - Wiring diagram	SC-12
Charging system.....	SC-11
Chassis and body maintenance	MA-21
CHIME - Wiring diagram.....	EL-131
CIGAR - Wiring diagram.....	EL-149
Cigarette lighter.....	EL-149
Circuit breaker.....	EL-17
CKPS - Wiring diagram	EC-397
Closed loop control (Left bank).....	EC-554
Closed loop control (Right bank)	EC-554
Closed throttle position switch	EC-514
Clutch cover.....	CL-15
Clutch disc	CL-15
Clutch fluid level.....	MA-21
Clutch master cylinder	CL-8
Clutch operating cylinder	CL-10
Clutch pedal.....	CL-6
Clutch release bearing.....	CL-13
Clutch release mechanism	CL-13
Clutch withdrawal lever.....	CL-13
Coil spring (front).....	SU-10
Coil spring (rear)	SU-25
Collision diagnosis.....	RS-62
Combination lamp, front, removal and installation	BT-13
Combination lamp, rear, removal and installation	BT-40
Combination meter.....	EL-104
Combination meter removal and installation - See Instrument panel.....	BT-28
Combination switch.....	EL-30
Component Location (auto A/C).....	HA-29
Component Location (manual A/C).....	HA-147
Compression pressure.....	EM-12
Compressor clutch removal and installation	HA-113, 200

Compressor description	HA-137
Compressor precaution.....	HA-8, 130
Compressor special service tool	HA-11, 133
Connecting rod.....	EM-63
Connecting rod bearing clearance.....	EM-67
Connecting rod bushing clearance	EM-68
Connector inspection.....	GI-22
Console box - See Instrument panel.....	BT-28
CONSULT for ABS	BR-50
CONSULT for engine	EC-96
CONSULT for TCS	BR-93
Control lever (M/T)	MT-12
Control valve (A/T)	AT-312
Converter housing installation.....	AT-284
COOL/F - Wiring diagram	EC-370, 570
Coolant mixture ratio.....	MA-12
Coolant replacement.....	MA-14
Cooling circuit (engine).....	LC-8
Cooling fan control	EC-567
Cooling fan control system	LC-17
Coupling sleeve (M/T)	MT-14
“Crankcase emission control system - See positive crankcase ventilation”.....	EC-52
Crankshaft.....	EM-65
Crankshaft position sensor (POS)	EC-397
Crankshaft position sensor (POS) chipping	EC-601
Crankshaft position sensor (REF).....	EC-595
Cruise control - See ASCD.....	EL-191
Cylinder block	EM-60
Cylinder head.....	EM-39
Cylinder head bolt tightening	EM-49

D

Data link connector for Consult.....	EC-96
Daytime light system.....	EL-47
Daytime running light - See Daytime light system	EL-47
DEF - Wiring diagram	EL-152
Detonation sensor - See Knock sensor	EC-392
Diagnosis sensor unit.....	RS-18
Diagnostic trouble code (DTC) for OBD system	EC-9, 75
Diagnostic trouble code (DTC) inspection priority chart.....	EC-130
Differential gear (FF A/T)	AT-356
Differential gear (FF M/T).....	MT-14, 28
Dimensions	GI-44
D/LOCK - Wiring diagram.....	EL-231
Dome light - See Interior lamp	EL-86
Door glass.....	BT-20
Door lock.....	BT-24
Door mirror.....	BT-61
Door trim	BT-35
Door, front	BT-19
Door, rear	BT-19
Drive plate runout	EM-68
Drive shaft (front).....	AX-9
Dropping resistor (A/T).....	AT-166

ALPHABETICAL INDEX

DTC work supportEC-107
DTRL - Wiring diagram.....EL-51

E

ECM input/output signalEC-149
ECTS - Wiring diagram.....EC-190, 208
EGR temperature sensorEC-609
EGR/TS - Wiring diagramEC-612
EGRC1 - Wiring diagram.....EC-415, 423, 620
Electric sun roofEL-178
Electrical diagnoses.....GI-25
Electrical ignition system.....EC-33
Electrical unitFoldout
Electrical units locationEL-340
EMNT - Wiring diagram.....EC-721
Engine compartment.....BT-64
Engine control circuit diagram.....EC-25
Engine control component parts
locationEC-21
Engine control module (ECM).....EC-526
Engine control system diagram and
chart.....EC-26
Engine coolant temperature sensor
(ECTS).....EC-188, 206
Engine fail-safe systemEC-131
Engine mounting control (Front)EC-721
Engine oil filter replacementMA-18
Engine oil precautionsGI-7
Engine oil replacementMA-17
Engine outer component partsEM-9
Engine removalEM-57
Engine room - See Engine
compartment.....BT-64
Engine serial numberGI-43
EVAP canister.....EC-36
EVAP canister purge volume control
solenoid valve.....EC-35, 453, 628
EVAP canister vent control
valveEC-459, 640, 660
EVAP control system (small leak)
diagnosisEC-437, 478, 626
EVAP control system pressure sensor.....EC-466
EVAP control system purge flow moni-
toring diagnosis.....EC-648
EVAP vapor lines inspection.....MA-20
Evaporative emission (EVAP) system.....EC-35
Exhaust gas recirculation (EGR)
valve.....EC-411, 618
Exhaust system.....FE-11
Exhaust system inspectionMA-21
ExteriorBT-40

F

Fan control ampHA-69, 75
Fan switchHA-165
F/FOG - Wiring diagramEL-69

Final drive (FF A/T)AT-356
Final drive (FF M/T)MT-14, 28
Finisher, interior - See TrimBT-32
Finisher, trunk lid.....BT-39
Floor trim.....BT-32
Fluid temperature sensor (A/T).....AT-108
FluidsMA-11
Flywheel (clutch).....CL-15
Flywheel runout.....EM-68
FO2H-L - Wiring diagramEC-261
FO2H-R - Wiring diagramEC-260
Fog lamp, front.....EL-68
Fog lamp, front, removal and
installationBT-13
Fork rod (M/T)MT-15
Forward clutch.....AT-334
F/PUMP - Wiring diagramEC-716
Freeze frame data.....EC-75
FRO2LH - Wiring diagramEC-215, 241, 253
FRO2RH - Wiring diagram.....EC-214, 240, 252
Front axle.....AX-2
Front bumperBT-13
Front combination lamp removal and
installationBT-13
Front disc brakeBR-24
Front doorBT-19
Front fog lamp.....EL-68
Front fog lamp removal and installationBT-13
Front heated oxygen sensor (HO2S)
(Left bank).....EC-211, 221, 229, 237, 250
Front heated oxygen sensor (HO2S)
(Right bank).....EC-211, 221, 229, 237, 250
Front heated oxygen sensor heater
(Left bank).....EC-258
Front heated oxygen sensor heater
(Right bank)EC-258
Front seat.....BT-46
Front seat beltRS-5
Front suspension.....SU-2
Front washerEL-143
Front wiperEL-143
Fuel cut control (at no load & high
engine speed).....EC-35
Fuel gaugeEL-104
Fuel injection system (Left bank).....EC-346, 354
Fuel injection system (Right bank)EC-346, 354
Fuel line inspectionMA-16
Fuel precautionsGI-8
Fuel pressure check.....EC-54
Fuel pressure regulatorEC-55
Fuel pressure releaseEC-54
Fuel pumpEC-715
Fuel systemFE-5
Fuel tank temperature sensorEC-361
Fuel tank vacuum relief valveEC-36
FUELLH - Wiring diagram.....EC-349, 357
FUELRH - Wiring diagramEC-348, 356
FuseEL-17
Fuse blockFoldout
Fusible linkEL-17

ALPHABETICAL INDEX

G

Garage jack and safety standGI-46
 Gauges.....EL-104
 Gear components (M/T)MT-14
 Generator - See Alternator.....SC-14
 Generic scan tool (GST)EC-109
 GlassBT-20
 Grease.....MA-11
 Ground distribution.....EL-18

H

Harness connector.....EL-5
 Harness connector inspectionGI-22
 Harness layoutEL-345
 Hazard warning lamp.....EL-73
 Headlamp.....EL-33
 Headlamp removal and installationBT-13
 Headlining - See Roof trimBT-37
 Heated seat.....BT-49, EL-190
 Heater unit (heater core).....HA-117, 204
 Height (Dimensions).....GI-44
 HFC134a (R134a) system precautionHA-3, 125
 HFC134a (R134a) system service
 procedure.....HA-108, 194
 HFC134a (R134a) system service
 toolsHA-12, 134
 HFC134a system service equipment
 precaution.....HA-8, 130
 High clutch.....AT-329
 H/LAMP - Wiring diagram.....EL-37
 Hood.....BT-13
 HornEL-148
 HORN - Wiring diagram.....EL-148
 How to erase DTC for OBD system.....EC-87
 HSEAT - Wiring diagram.....EL-190

I

IACV-AAC valveEC-505
 IATS - Wiring diagramEC-185
 Identification plate.....GI-43
 Idle air control valve (IACV).....EC-505
 Idle mixture ratio.....EC-58
 Idle speed.....EC-58
 IGN/SG - Wiring diagramEC-586
 Ignition control systemEC-584
 Ignition timingEC-58
 ILL - Wiring diagramEL-80
 IlluminationEL-78
 In vehicle sensorHA-98
 INJECT - Wiring diagramEC-706
 Injector.....EC-705
 Injector removal and installationEC-56
 Input shaft (FF M/T)MT-14, 19
 Instrument panelBT-28

Intake air temperature sensorEC-183
 Intake door control linkage adjustment..HA-66, 163
 Intake door motor.....HA-64, 160
 Intake manifold.....EM-11
 Intake sensor.....HA-105
 Integrated homelink transmitterEL-318
 InteriorBT-32
 Interior lamp.....EL-86
 Interior lamp on-off control.....EL-87
 IVIS (Infiniti vehicle immobilizer
 system).....EL-321

J

Jacking points.....GI-46
 Joint connector (J/C)Foldout
 Junction box (J/B).....Foldout

K

Keyless entry system - See Multi-re-
 mote control system.....EL-247
 Knock sensor (KS)EC-392
 Knuckle spindleAX-5
 KS - Wiring diagram.....EC-393

L

Length (Dimensions)GI-44
 License lamp.....EL-58
 Lifting pointsGI-47
 Line pressure solenoid valveAT-166
 Line pressure test (A/T)AT-65
 Liquid gasket applicationEM-3
 LOAD - Wiring diagram.....EC-734
 Location of electrical unitsEL-340
 Lock, doorBT-24
 Low and reverse brakeAT-339
 Lubricant (R134a) A/C.....HA-110, 196
 Lubricants.....MA-11
 Lubrication circuit (engine)LC-3
 Lubrication-locks, hinges and hood
 latchesMA-27

M

MAFS - Wiring diagram.....EC-173
 Magnet clutch.....HA-76, 113, 200
 MAIN - Wiring diagram.....EC-162
 Mainshaft (M/T)MT-14, 24
 Maintenance (engine)MA-13
 MAJOR OVERHALL.....AT-286
 Malfunction indicator lamp (MIL).....EC-89
 Manual air conditioner - Wiring diagram.....HA-150
 Manual transmission oil replacementMA-21

ALPHABETICAL INDEX

Mass air flow sensor (MAFS).....	EC-169
Master cylinder (brake)	BR-15
Master cylinder (clutch)	CL-8
Meter	EL-104
METER - Wiring diagram.....	EL-109
MIL & Data link connectors circuit	EC-738
MIL/DL - Wiring diagram	EC-738
MIRROR - Wiring diagram.....	EL-183
Mirror defogger	EL-151
Mirror, door.....	BT-61
Misfire	EC-384
Mode door control linkage adjustment...HA-59, 185	
Mode door motor.....	HA-54, 183
Model variation	GI-41
Molding - See Exterior	BT-40
M/T major overhaul	MT-12
M/T removal and installation	MT-10
MULTI - Wiring diagram.....	EL-251
Multi-remote control system.....	EL-247
Multiport fuel injection (MFI) system	EC-31
Multiport fuel injection precautions.....	GI-6

N

NATS (Nissan anti-theft system) precautions	GI-3
NATS - Wiring diagram.....	EL-323
NVH troubleshooting (AX)	AX-3
NVH troubleshooting (BR).....	BR-7
NVH troubleshooting (CL)	CL-4
NVH troubleshooting (M/T)	MT-6
NVH troubleshooting (ST).....	ST-5
NVH troubleshooting (SU).....	SU-18
NVIS (Nissan vehicle immobilizer system).....	EL-321
NVIS (Nissan vehicle immobilizer sys- tem) precautions	GI-3

O

Oil change (capacity)	MA-11
Oil pan (engine)	EM-13
Oil pressure (engine)	LC-4
Oil pump (A/T).....	AT-308
Oil pump (engine)	LC-4
Oil pump regulator valve (engine)	LC-6
Oil seal replacement (engine).....	EM-36
On board diagnostic system	EC-74
Operating cylinder (clutch).....	CL-10
ORVR (On-board Refueling Vapor Recovery).....	EC-42
Overdrive control switch.....	AT-260
Overrun clutch	AT-334
Overrun clutch solenoid valve.....	AT-191

P

P/ANT - Wiring diagram.....	EL-175
Park/Neutral position switch	EC-693
Park/neutral position switch (A/T)	AT-102
Park/neutral position switch (M/T).....	MT-9
Parking brake control	BR-37
Parking lamp	EL-58
PCV (positive crankcase ventilation)	EC-52
PGC/V - Wiring diagram	EC-455, 631
PHASE - Wiring diagram	EC-405
Piston assembly.....	EM-69
Piston pin inspection.....	EM-61
Piston ring inspection.....	EM-62
Piston to bore clearance.....	EM-64
PNP/SW - Wiring diagram	EC-695
POS - Wiring diagram	EC-601
POWER - Wiring diagram.....	EL-10
Power antenna.....	EL-174
Power door lock.....	EL-229
Power door mirror	EL-183
Power seat	EL-186
Power steering fluid level.....	MA-26, ST-7
Power steering gear.....	ST-15
Power steering hydraulic pressure	ST-9
Power steering oil pressure switch	EC-725
Power steering oil pump	ST-25
Power steering system bleeding.....	ST-7
Power supply routing	EL-9
Power transistor & ignition coil.....	EC-584
Power window	EL-216
PRE/SE - Wiring diagram	EC-468
Precautions (General)	GI-4
Pressure plate - See Clutch cover	CL-15
Pressure test (A/T).....	AT-65
PST/SW - Wiring diagram.....	EC-726

R

Radiator	LC-16, 17
Radio - See Audio.....	EL-162
Rear air spoiler	BT-40
Rear axle	AX-17
Rear axle (disc brake type)	AX-19
Rear bumper	BT-16
Rear combination lamp removal and installation	BT-40
Rear disc brake	BR-28
Rear door	BT-19
Rear heated oxygen sensor (HO2S).....	EC-265, 275, 285, 295, 310, 318, 326, 334
Rear heated oxygen sensor (HO2S) heater	EC-303, 341
Rear seat	BT-50
Rear seat belt.....	RS-7
Rear suspension	SU-18
Rear window	BT-59

ALPHABETICAL INDEX

Rear window defogger.....	EL-151
REF - Wiring diagram	EC-595
Refrigerant pressure sensor	HA-81, 192
Refrigerant connection precaution	HA-4, 126
Refrigerant discharging evacuating charging	HA-108
Refrigerant general precaution	HA-4, 126
Refrigerant lines	HA-119, 206
Refrigerant pressure sensor.....	EC-730
Refrigeration cycle	HA-15, 137
Release bearing (clutch).....	CL-13
Removal and installation (A/T).....	AT-283
Reverse clutch.....	AT-326
Reverse idler shaft (M/T)	MT-14
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T).....	MT-9
Reverse main gear (M/T)	MT-14
Revolution sensor (A/T).....	AT-114
RO2H-L - Wiring diagram.....	EC-306
RO2H-R - Wiring diagram.....	EC-305
Road wheel size	GI-44
Roof trim	BT-37
Room lamp - See Interior lamp	EL-86
ROOM/L - Wiring diagram	EL-90
RRO2LH - Wiring diagram...EC-269, 279, 289, 298	
RRO2RH - Wiring diagram..EC-268, 278, 288, 297	

S

SAE J1930 terminology list	GI-50
Seal - See Exterior	BT-40
SEAT - Wiring diagram	EL-187
Seat belt inspection	MA-27, RS-9
Seat belt pre-tensioner	RS-3
Seat belt pre-tensioner disposal	RS-25
Seat belt, front.....	RS-5
Seat belt, rear.....	RS-7
Seat, front	BT-46
Seat, rear	BT-50
SHIFT - Wiring diagram	AT-271
Shift control components (M/T).....	MT-15
Shift fork (M/T)	MT-15
Shift lever	MT-12
Shift lock system	AT-270
Shift schedule.....	AT-382
Shift solenoid valve A (A/T).....	AT-172
Shift solenoid valve B (A/T)	AT-177
Shock absorber (front).....	SU-11
Shock absorber (rear)	SU-25
Side air bag	RS-24
Side trim	BT-32
Smart entrance control unit	EL-310
SMJ (super multiple junction).....	Foldout
Spare tire size	GI-44
Spark plug replacement.....	MA-18
Speedometer.....	EL-104
Spiral cable.....	RS-20
Spring (Wheelarch) height	SU-6
SROOF - Wiring diagram	EL-179

SRS - See Supplemental Restraint System	RS-13	
SRS - Wiring diagram	RS-38	GI
S/SIG - Wiring diagram	EC-712	
Stabilizer bar (front).....	SU-12	
Stall test (A/T)	AT-61	MA
Standardized relay	EL-7	
START - Wiring diagram	SC-7	
Start signal.....	EC-711	EM
Starter.....	SC-9	
Starting system.....	SC-6	
Steering gear and linkage inspection	MA-26	LC
Steering linkage	ST-15	
Steering switch.....	EL-32	
Steering wheel and column	ST-10	EC
Steering wheel play	ST-6	
Steering wheel turning force.....	ST-8	
Stop lamp.....	EL-66	FE
STOP/L - Wiring diagram.....	EL-66	
Striking rod (M/T)	MT-15	
Strut (front)	SU-10	CL
Strut (rear)	SU-23	
Sun roof, electric.....	EL-178	
Sunload sensor	HA-101	MT
Sunroof.....	BT-51	
Supplemental Restraint System	RS-13	
Supplemental restraint system - Wiring diagram.....	RS-38	AT
S/VCSW - Wiring diagram	EC-556	AX
Swirl control valve control solenoid valve	EC-530	
Swirl control valve control vacuum check switch	EC-556	SU
SWL/V - Wiring diagram	EC-530	
Symbols and abbreviations	GI-9	BR
Symptom matrix chart	EC-139	
Synchronizer (M/T).....	MT-14	
System readiness test (SRT) code	EC-76	ST

T

Tachometer	EL-104	
Tail lamp.....	EL-58	BT
TAIL/L - Wiring diagram	EL-60	
TCM circuit diagram	AT-16	
TCM inspection table	AT-95	HA
TCS (traction control system)	BR-81	
TCS - Wiring diagram	BR-85	SC
TCS component parts and connector location	BR-84	
TCS control unit	BR-83	
TCS self-diagnosis	BR-91	EL
TCS system components	BR-82	
TCS trouble diagnoses.....	BR-101	
TCS wheel sensors	BR-84	
TFTS - Wiring diagram.....	EC-363	
THEFT - Wiring diagram.....	EL-284	
Theft warning system.....	EL-277	
Thermostat.....	LC-14	

ALPHABETICAL INDEX

Three way catalyst function (Left bank).....EC-427, 432
 Three way catalyst function (Right bank).....EC-427, 432
 Three way catalyst precautions.....GI-6
 Throttle bodies.....EM-11
 Throttle position sensor (TPS)EC-193
 Throttle position sensor adjustmentEC-115
 Throttle position switchEC-514, AT-182, 260
 Throwout bearing - See Clutch release bearingCL-13
 Tie-rod.....ST-15
 Tie-rod ball joints.....ST-19
 Tightening torque of standard bolts.....GI-49
 Timing chain.....EM-20
 Tire rotationMA-24
 Tire sizeGI-44
 Torque converter installation.....AT-284, 375
 Torque convertor clutch solenoid valve.....AT-151
 Tow truck towing.....GI-48
 TP/SW - Wiring diagramEC-517
 TPS - Wiring diagram.....EC-198
 Traction control system - See TCS.....BR-81
 Traction control system - Wiring diagram.....BR-85
 Transaxle serial numberGI-43
 Transmission case (M/T).....MT-13
 TRANSMT - Wiring diagram.....EL-318
 Tread-FR&RR (Dimensions).....GI-44
 TrimBT-32
 Trouble diagnosesGI-35
 Trunk lidBT-16
 Trunk lid finisher.....BT-39
 Trunk lid opener - See Trunk lidBT-16
 Trunk lid trimBT-39
 Trunk room trim.....BT-39
 TURN - Wiring diagramEL-75
 Turn signal lampEL-73
 Two trip detection logicEC-74
 Two-pole liftGI-47

U

Under bodyBT-66

V

Vacuum cut valveEC-35
 Vacuum cut valve bypass valve.....EC-35, 672, 678
 Vacuum hose (brake system).....BR-23

Vacuum hose drawing (Engine control)EC-28
 Valve clearance.....EM-52
 Valve guide.....EM-44
 Valve seat.....EM-45
 Valve spring.....EM-46
 Vehicle recovery (freeing a stuck vehicle).....GI-48
 Vehicle speed sensor (VSS)EC-501
 VENT/V - Wiring diagramEC-461, 642, 663
 VIASEC-699
 VIAS - Wiring diagramEC-699
 Viscosity number (SAE)MA-11
 Viscous coupling (FF A/T).....AT-356
 Viscous coupling (FF M/T).....MT-9, 14
 VSS - Wiring diagramEC-503

W

WARN - Wiring diagramEL-122
 Warning chimeEL-129
 Warning lampsEL-121
 Washer, front.....EL-143
 Water pumpLC-10
 Water temperature gaugeEL-104
 Weatherstrip - See ExteriorBT-40
 Wheel alignment (front).....SU-6
 Wheel alignment (rear).....SU-20
 Wheel balanceMA-23
 Wheel bearing (front).....AX-4
 Wheel bearing (rear)AX-18
 Wheel hub (front).....AX-5
 Wheel hub (rear)AX-19
 Wheel sensors (ABS).....BR-155
 Wheel sensors (TCS).....BR-155
 Wheelarch heightSU-6
 Wheelbase (Dimensions)GI-44
 Wide open & closed throttle position switchEC-193
 Width (Dimensions)GI-44
 WINDOW - Wiring diagramEL-219
 Window, rearBT-59
 Windshield.....BT-59
 WIPER - Wiring diagramEL-145
 Wiper, front.....EL-143
 Wiring Diagram (Cell code) list.....EL-369
 Wiring diagram - AT - LAN.....AT-210
 Wiring diagramsGI-11
 Withdrawal lever (clutch)CL-13
 Wrist pin - See Piston pin inspection.....EM-61