

**SECTION IDX
ALPHABETICAL INDEX**

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

A

A/C air flow	ATC-32
A/C component layout	ATC-21
A/C compressor mounting	ATC-134
A/C compressor precaution	ATC-13
A/C compressor special service tool	ATC-16
A/C control operation (auto A/C)	ATC-29
A/C diagnostic work flow (auto A/C)	ATC-93
A/C evaporator	ATC-142
A/C HFC134a (R134a) system precaution	ATC-6
A/C HFC134a (R134a) system service procedure	ATC-131
A/C HFC134a (R134a) system service tools ...	ATC-17
A/C HFC134a system service equipment precaution ...	ATC-13
A/C lubricant (R134a)	ATC-22
A/C lubrication oil	ATC-148
A/C operational check	ATC-55
A/C self-diagnoses (auto A/C)	ATC-47 , ATC-93
A/C service data specification	ATC-148
A/C system description (auto A/C)	ATC-25
A/C trouble diagnoses (auto A/C)	ATC-35
A/C, A - Wiring diagram	ATC-40
ABS - Wiring diagram	BRC-15
Accelerator control system	ACC-3
Accelerator pedal position (APP) sensor	EC-565 , EC-571 , EC-585
Accelerator pedal released position learning	EC-76
AF1B1-Wiring diagram	EC-230 , EC-240 , EC-250 , EC-261 , EC-594
AF1B2-Wiring diagram	EC-232 , EC-242 , EC-252 , EC-263 , EC-596
AF1HB1-Wiring diagram	EC-162
AF1HB2-Wiring diagram	EC-164
Air bag	SRS-3
Air bag precautions	SRS-3 , AP-2
Air bleeding for brake system	BR-13
Air cleaner and air duct	EM-16
Air cleaner filter replacement	MA-16
Air conditioner cut control	EC-26
Air flow meter - See Mass air flow sensor	EC-185 , EC-194
Air fuel ratio sensor 1	EC-227 , EC-238 , EC-248 , EC-258 , EC-592
Air fuel ratio sensor 1 heater	EC-160
Air mix. door motor	ATC-66 , ATC-123
Ambient sensor	ATC-95 , ATC-108
Angular tightening application	EM-4
APPS1 - Wiring diagram	EC-567
APPS2 - Wiring diagram	EC-573
APPS3 - Wiring diagram	EC-587
ASC/BS - Wiring diagram	EC-523
ASC/SW - Wiring diagram	EC-516
ASCBOF - Wiring diagram	EC-606
ASCD	EC-27
ASCD (automatic speed control device)	ACS-2
ASCIND - Wiring diagram	EC-613
AUDIO - Wiring diagram	AV-11

Auto air conditioner - Wiring diagram	ATC-40
Auto amp	ATC-107
Auto anti-dazzling inside mirror	GW-72 , GW-73
Automatic amplifier	ATC-45 , ATC-57 , ATC-107
Automatic transmission fluid replacement	MA-24
AV communication line	AV-83 , AV-143
AWD - Wiring diagram	TF-18
AWD control unit inspection table	TF-23
Axle	MA-29

B

Back Door	BL-179 , BL-180
Back door	BL-179 , BL-180
Back door opener - See Back door	BL-185
BACK/L - Wiring diagram	LT-164
Back-up lamp	LT-164
Basic inspection	EC-68
Battery	SC-4
Battery/Starting/Charging System Tester	SC-6 , SC-11 , SC-19
BCM (Body control module)	BCS-3
Blower motor	ATC-72 , ATC-115
Blower unit	ATC-112
Boring/horning cylinder block	EM-137
Bose speaker amp.	AV-6
Brake booster	BR-22
Brake fluid change	BR-12
Brake fluid level	MA-27
Brake fluid level and line check	BR-12
Brake hydraulic line	BR-14
Brake inspection	MA-27
Brake lines and cables inspection	MA-27
Brake master cylinder	BR-16
Brake pedal	BR-7
Brake switch	EC-541
BRK/SW - Wiring diagram	EC-542
Bulb specifications	LT-235
Bumper, front	EI-14
Bumper, rear	EI-16

C

Camshaft	EM-79
Camshaft inspection	EM-81
Camshaft position sensor (PHASE)	EC-369
CAN	DI-82
CAN - Wiring diagram	EC-152 , CVT-69
CAN (Controller Area Network)	BL-27 , BL-60 , BL-101 , GW-76 , RF-13 , SE-18
CAN communication	EC-29 , EC-151 , EC-154 , CVT-24 , CVT-68 , TF-14 , TF-36 , BRC-31 , BL-27 , BL-60 , BL-101 , GW-76 , RF-13 , SE-18
Canister-See EVAP canister	EC-33
CHARGE - Wiring diagram	SC-18
Charging system	SC-17
Chassis and body maintenance	MA-21
CHIME - Wiring diagram	DI-62
Circuit breaker	PG-16

ALPHABETICAL INDEX

Closed loop control	EC-23	D
Collision diagnosis	SRS-56	
Combination lamp, front, removal and installation		
LT-64		
Combination lamp, rear, removal and installation		
LT-184		
Combination meter	DI-4	
Combination meter removal and installation - See		
Instrument panel	IP-11	
COMM - Wiring diagram	AV-83, AV-143	
COMPAS - Wiring diagram	DI-86	
Compass	DI-83	
Component Location (auto A/C)	ATC-37	
Compression pressure	EM-96	
Compressor special service tool	ATC-16	
Condenser	ATC-141	
Connecting rod	EM-134	
Connecting rod bearing clearance	EM-138	
Connecting rod bushing clearance	EM-134	
Console box - See Instrument panel	IP-10	
Console box lamp	LT-234	
CONSULT-II for engine	EC-111	
CONSULT-II Reference value (CVT)	CVT-56	
Control units (terminal arrangement)	PG-65	
Control valve (CVT)	CVT-28	
Controller Area Network (CAN) BL-27, BL-60, BL-101, GW-76, RF-13, SE-18		
COOL/F - Wiring diagram	EC-502	
Coolant replacement	MA-14	
Coolant replacementVQ35DE	CO-9	
Cooling circuit (engine)	CO-7	
Cooling fan	CO-20	
Cooling fan motor	EC-507	
Cowl top	EI-20	
Cowl top cover	EI-20	
Crankcase ventilation system - See Positive crankcase ventilation	EC-42	
Crankshaft	EM-138	
Crankshaft position sensor (POS)	EC-362	
Crash zone sensor	SRS-51	
CVT air breather hose	CVT-212	
CVT control system	CVT-21	
CVT cross-sectional view	CVT-20	
CVT Electrical parts location	CVT-39, CVT-40	
CVT fluid checking	CVT-15, CVT-42, MA-21	
CVT fluid cooler cleaning	CVT-17	
CVT fluid replacement	CVT-16, MA-22	
CVT fluid temparature sensor	CVT-84	
CVT hydraulic control system	CVT-22	
CVT indicator	DI-51	
CVT self-diagnoses	CVT-61, CVT-67	
CVT shift lock system	CVT-203	
CVT trouble diagnoses	CVT-33	
CVTIND - Wiring diagram	DI-51	
Cylinder block	EM-114	
Cylinder head	EM-96	
Cylinder head bolt tightening	EM-99	
Daytime light system	LT-66	A
Daytime running light - See Daytime light system	LT-66	
Diagnosis sensor unit	SRS-54	B
Diagnostic trouble code (DTC) for OBD system	EC-8, WT-3	
Diagnostic trouble code (DTC) inspection priority chart EC-86, CVT-33		C
Differential side oil seal	CVT-213	
Display and amp.assembly	ATC-45, ATC-57	D
Door glass	GW-66, GW-69	
Door glass Fitting Adjustment(Front)	GW-68	
Door glass Fitting Adjustment(Rear)	GW-71	
Door lock	BL-173	
Door mirror	GW-98	
Door trim	EI-30	
Door, front	BL-169, GW-66	
Door, rear	BL-169, GW-69	
Drive belt	EM-13	
Drive shaft	MA-29	
Drive shaft (rear)	RAX-7	
Driver air bag	SRS-43	
DTC work support	EC-113	
DTRL - Wiring diagram	LT-70	
Duct and grilles	ATC-125	
ECM input/output signal	EC-102	E
ECM power supply	EC-142, EC-478	
ECM/PW - Wiring diagram	EC-479	
ECTS - Wiring diagram	EC-209	
Electric sunroof	RF-10	
Electric throttle control actuator	EM-21, EC-552, EC-563	
Electrical load signal circuit	EC-615	
Electrical unit	PG-65	
Electrical units location	PG-58	
Electronic ignition (EI) system	EC-24	
EMNT - Wiring diagram	EC-618	
Engine control circuit diagram	EC-100	
Engine control component parts location	EC-93	
Engine control module (ECM)	EC-102, EC-482	
Engine control system diagram	EC-21	
Engine coolant	CO-9	
Engine coolant temperature sensor (ECTS)	EC-207, EC-219	
Engine fail-safe system	EC-88	
Engine mounting control (Front)	EC-617	
Engine oil	LU-6	
Engine oil filter replacement	MA-18	
Engine oil precautions	GI-7	
Engine oil replacement	MA-17	
Engine removal	EM-108	
ETC1 - Wiring diagram	EC-553	
ETC2 - Wiring diagram	EC-548	
ETC3 - Wiring diagram	EC-559	
EVAP canister	EC-33	

IDX

ALPHABETICAL INDEX

EVAP canister purge volume control solenoid valve EC-398 , EC-406	Fuse and fusible link box PG-71	
EVAP canister vent control valve EC-413 , EC-420	Fusible link PG-16	
EVAP control system (small leak) diagnosis .. EC-389 , EC-444	G	
EVAP control system pressure sensor EC-427 , EC-430 , EC-436	Gauges DI-4	
EVAP control system purge flow monitoring diagnosis EC-384	Generic scan tool (GST) EC-123	
EVAP vapor lines inspection MA-20	Glass GW-11 , GW-66 , GW-69	
Evaporative emission (EVAP) system EC-30	Glove box lamp LT-234	
Evaporator ATC-142	Grille - See Exterior EI-19	
Exhaust manifold EM-25	Ground distribution PG-29	
Exhaust system EX-3	H	
Exhaust system inspection EX-3 , MA-21	H/AIM - Wiring diagram LT-101	
Expansion valve ATC-143	H/LAMP - Wiring diagram LT-11 , LT-41	
F		
F/FOG - Wiring diagram LT-106	Harness connector PG-62	
F/PUMP - Wiring diagram EC-630	Harness layout PG-38	
Floor trim EI-34	Hazard warning lamp LT-117 , LT-156	
Flow charts GI-27	Headlamp aiming control LT-101	
Fluid temperature sensor (CVT) CVT-84	Headlamp leveler - See Headlamp aiming control LT-101	
Fluorescent leak detector ATC-144	Headlamp removal and installation LT-64	
Fog lamp, front LT-104	Headlining - See Roof trim EI-35	
Freeze frame data EC-51	Heated oxygen sensor 2 (bank 1) EC-271 , EC-282 , EC-295	
Front axle FAX-6	Heated oxygen sensor 2 (bank 2) EC-271 , EC-282 , EC-295	
Front bumper EI-14	Heated oxygen sensor 2 heater (bank 1) EC-169	
Front combination lamp removal and installation LT-64	Heated oxygen sensor 2 heater (bank 2) EC-169	
Front disc brake BR-27	Heated seat SE-96	
Front door BL-169 , BL-173 , GW-66	Heater and cooling unit (Heater core) ATC-118	
Front fog lamp LT-104	HFC134a (R134a) system precaution ATC-6	
Front passenger air bag SRS-47	HFC134a (R134a) system service procedure ATC-131	
Front seat SE-101	HFC134a (R134a) system service tools ATC-17	
Front seat belt SB-3	HFC134a system service equipment precaution ATC-13	
Front seat belt pre-tensioner SB-2 , SRS-3 , SRS-53	Hood BL-13	
Front suspension FSU-5	Horn WW-58	
FTS - Wiring diagram CVT-85	HORN - Wiring diagram WW-58	
FTTS - Wiring diagram EC-332 , EC-337	How to erase DTC EC-58	
Fuel cut control (at no load high engine speed) . EC-25	HSEAT - Wiring diagram SE-98	
Fuel gauge DI-4	I	
Fuel injection system (Bank 1) EC-306 , EC-318	IATS - Wiring diagram EC-204	
Fuel injection system (Bank 2) EC-306 , EC-318	Idle air volume learning EC-76	
Fuel injector and fuel tube EM-41	Idle speed EC-73	
Fuel level sensor EC-461 , EC-463 , EC-465	Idle speed control (ISC) EC-469 , EC-471	
Fuel line inspection FL-3 , MA-16	Ignition coil EM-38 , EC-635	
Fuel precautions GI-6	Ignition control system EC-635	
Fuel pressure check EC-78	Ignition key hole illumination LT-222	
Fuel pressure release EC-78	Ignition timing EC-73	
Fuel pump EC-629	IGNSYS - Wiring diagram EC-636	
Fuel pump and gauge FL-4	Illumination control LT-234	
Fuel system FL-3	In vehicle sensor ATC-98 , ATC-109	
Fuel tank FL-9	INF/D - Wring diagram AV-74	
Fuel tank temperature sensor EC-330 , EC-336	INJECT - Wiring diagram EC-623	
Fuel tank vacuum relief valve EC-33	Injector EC-622	
FUELB1 - Wiring diagram EC-308 , EC-320		
FUELB2 - Wiring diagram EC-310 , EC-322		
Fuse PG-16		

ALPHABETICAL INDEX

Input/Output signal of TCM	CVT-24	Mirror, out side	GW-98
Instrument panel	IP-10	Misfire	EC-348
Intake air temperature sensor	EC-202, EC-222	MMSW - Wiring diagram	CVT-129
Intake door control linkage adjustment	ATC-71	Mode door control linkage adjustment	ATC-65
Intake door motor	ATC-69, ATC-116	Mode door motor	ATC-63, ATC-122
Intake manifold	EM-23	Molding - See Exterior	EI-22, EI-26, EI-28
Intake manifold collector	EM-18	Multiport fuel injection (MFI) system	EC-22
Intake sensor	ATC-104, ATC-111	Multiport fuel injection precautions	GI-6
Intake valve timing control (Bank 1)	EC-156	N	
Intake valve timing control (Bank 2)	EC-156	NATS - Wiring diagram	BL-235
Intake valve timing control solenoid valve (Bank 1)	EC-178	NAVI - Wiring diagram	AV-133
Intake valve timing control solenoid valve (Bank 2)	EC-178	Navigation system	AV-124
Integrated homelink transmitter	BL-256	NONDTC - Wiring diagram	CVT-180
Interior	EI-32	NVH troubleshooting (BR)	BR-6
Interior lamp	LT-185	NVH troubleshooting (EM)	EM-11
IPDM (Intelligent power distribution module engine room)	PG-17	NVH troubleshooting (Transfer)	TF-9
IVCB1 - Wiring diagram	EC-179	NVIS (Nissan vehicle immobilizer system)	BL-232
IVCB2 - Wiring diagram	EC-181	NVIS (Nissan vehicle immobilizer system) precautions	GI-3
IVIS (Infiniti vehicle immobilizer system) precautions ...	GI-3	O	
K			
Knock sensor (KS)	EC-357	O2H2B1 - Wiring diagram	EC-171
KS - Wiring diagram	EC-358	O2H2B2 - Wiring diagram	EC-173
L			
L/USSV - Wiring diagram	CVT-163	O2S2B1 - Wiring diagram	EC-274, EC-285, EC-298
LAN system circuit	ATC-59	O2S2B2 - Wiring diagram	EC-276, EC-287, EC-300
Line pressure and secondary pressure control	CVT-25	Oil cooler (engine)	LU-10
Line pressure solenoid valve	CVT-112, CVT-117	Oil filter	LU-9
Liquid gasket application	EM-4, LU-2	Oil pan (engine)	EM-29
Location of electrical units	PG-58	Oil pressure (engine)	LU-7
Lock-up and select control	CVT-27	Oil pump (engine)	LU-12
Lock-up select solenoid valve	CVT-162	Oil pump regulator valve (engine)	LU-12
LPSV - Wiring diagram	CVT-113	Oil seal replacement (engine)	EM-93
Lubricant (R134a) A/C	ATC-22	Oil seal replacement (front of final drive)	RFD-9
Lubrication circuit (engine)	LU-4	On board diagnostic system	EC-60
Lubrication oil A/C	ATC-148	ORVR (On-board Refueling Vapor Recovery)	EC-37
M			
MAFS - Wiring diagram	EC-188, EC-196	Out side mirror	GW-98
Magnet clutch	ATC-77	Overheat	EC-498
MAIN - Wiring diagram	EC-142	Oversize piston	EM-136
Maintenance (engine)	MA-12	P	
Major overhaul (Transfer)	TF-54	P/SCKT - Wiring diagram	WW-56
Malfunction indicator lamp (MIL)	EC-59	Park/Neutral position switch	EC-490
Mass air flow sensor (MAFS)	EC-185, EC-194	Park/neutral position switch (CVT)	CVT-77
Master cylinder (brake)	BR-16	Parking brake control	PB-4
Meter	DI-4	PCV (positive crankcase ventilation)	EC-42
METER - Wiring diagram	DI-11	Personal lamp	LT-220
MIL data link connectors circuit	EC-662	PGC/V - Wiring diagram	EC-400, EC-408
MIL/DL - Wiring diagram	EC-662	PHSB1 - Wiring diagram	EC-371
Mirror, door	GW-98	PHSB2 - Wiring diagram	EC-373

A
B
C
D
E
F
G

IDX

ALPHABETICAL INDEX

POWER - Wiring diagram	CVT-150 , PG-4	Seat, rear	SE-107
Power seat	SE-90	Second position switch	CVT-174
Power socket	WW-56	Secondary pressure sensor	CVT-133
Power steering fluid level	PS-7 , MA-28	Secondary Speed Sensor	CVT-94
Power steering oil pump	PS-30	SECPS - Wiring diagram	CVT-134
Power steering pressure (PSP) sensor	EC-473	SECPSV - Wiring diagram	CVT-124
Power steering system bleeding	PS-8	Self-diagnosis (Transfer)	TF-24
Power supply routing	PG-3	Self-diagnostic results	EC-114
Power window	GW-17	SEN/PW - Wiring diagram	EC-486
PRE/SE - Wiring diagram	EC-432 , EC-438	SESCVT - Wiring diagram	CVT-95
Precations for Leak detection dye	ATC-15	SHIFT - Wiring diagram	CVT-204 , CVT-206
Precautions (General)	GI-4	Shift control	CVT-25
Pressure control solenoid valve A	CVT-112 , CVT-117	Shift control system	CVT-198
Pressure control solenoid valve B	CVT-120 , CVT-123	Shift schedule	CVT-52 , CVT-222
Pressure test (CVT)	CVT-43	Side air bag (satellite) sensor	SRS-52
Primary pressure sensor	CVT-141	Side curtain air bag	SRS-49
Primary Speed Sensor	CVT-89	Side trim	EI-32
PRIPS - Wiring diagram	CVT-142	SMJ (super multiple junction)	PG-67
Propeller shaft	PR-4	Spark plug	EM-39
Propeller shaft on vehicle service	PR-4	Spark plug replacement	MA-19
PRSCVT - Wiring diagram	CVT-90	Specification value	EC-131
PS/SEN - Wiring diagram	EC-474	Speedometer	DI-4

R

Radiator	CO-13	Spiral cable	SRS-45
Rear axle	RAX-5	Spot lamp	LT-220
Rear bumper	EI-16	SPSW - Wiring diagram	CVT-175
Rear combination lamp removal and installation	LT-184	SROOF - Wiring diagram	RF-14
Rear disc brake	BR-33	SRS - See Supplemental Restraint System	SRS-5
Rear door	BL-169 , GW-69	SRS - Wiring diagram	SRS-13
Rear seat	SE-107	SRS Trouble diagnoses	SRS-9
Rear seat belt	SB-5	Stabilizer bar (rear)	RSU-16
Rear suspension	RSU-5	Stall Test	CVT-42
Rear washer	WW-39	Standardized relay	PG-68
Rear window defogger	GW-74	START - Wiring diagram	SC-10
Refrigerant connection precaution	ATC-8	Starter	SC-9
Refrigerant discharging evacuating charging	ATC-131	Starting system	SC-9
Refrigerant general precaution	ATC-7	Steering gear and linkage inspection	MA-28
Refrigerant lines	ATC-131	Steering wheel and column	PS-9 , PS-12
Refrigerant pressure sensor	EC-648 , ATC-82 , ATC-142	Step motor	CVT-168 , CVT-172
Refrigeration cycle	ATC-20	STM - Wiring diagram	CVT-169
Removal and installation (Transfer)	TF-52	Stop lamp	LT-156
Road test	CVT-45	Stop lamp switch	EC-541
Rocker cover	EM-47	STOP/L - Wiring diagram	LT-159
Room lamp - See Interior lamp	LT-185	STSIG - Wiring diagram	CVT-72
ROOM/L - Wiring diagram	LT-193	Sun roof, electric	RF-10
RP/SEN - Wiring diagram	EC-649	Sunload sensor	ATC-101 , ATC-110

S

SAE J1979 - Service \$01 - 09	EC-45	Suspension	MA-29
Seal - See Exterior	EI-25	Symbols and abbreviations	GI-10 , GI-23
Seat belt inspection	SB-6	Symptom matrix chart	EC-89
Seat belt, front	SB-3	System readiness test (SRT) code	EC-51
Seat belt, rear	SB-5		
Seat, front	SE-101		

T

Tachometer	DI-4
TCM circuit diagram	CVT-41
TCM function	CVT-23

ALPHABETICAL INDEX

TCM inspection table	CVT-53	Water pump	CO-22
TCV - Wiring diagram	CVT-105	Water temperature gauge	DI-4
Thermostat	CO-27	Wheel alignment (front)	FSU-5
Three way catalyst	EM-25	Wheel alignment (rear)	RSU-5
Three way catalyst function (Bank 1)	EC-378	Wheel balance	WT-54 , MA-25
Three way catalyst function (Bank 2)	EC-378	Wheel bearing (front)	FAX-6
Three way catalyst precautions	GI-6	Wheel bearing (rear)	RAX-5
Throttle control motor	EC-558	Wheel hub (front)	FAX-6
Throttle control motor relay	EC-546	Wheel hub (rear)	RAX-5
Throttle position sensor (TPS)	EC-212 , EC-341 , EC-508 , EC-510 , EC-578	Wheel sensor (VDC)	BRC-97
Throttle valve closed position learning	EC-76	Wheel sensors (ABS)	BRC-40
Timing chain	EM-60	WINDOW - Wiring diagram	GW-23
TLID - Wiring diagram	BL-190 , BL-193	Window, door	GW-66 , GW-69
Top tether strap child restraint	SB-9	Windshield	GW-11
Torque converter installation	CVT-219 , CVT-220	WIP/R - Wiring diagram	WW-41
Torque convertor clutch solenoid valve	CVT-104 , CVT-109	WIPER - Wiring diagram	WW-12
TPS1 - Wiring diagram	EC-343	Wiper and washer	WW-4
TPS2 - Wiring diagram	EC-214	Wiring Diagram (Cell code) list	PG-55
TPS3 - Wiring diagram	EC-580	Wiring diagrams	GI-15
Transverse link (front)	FSU-12	WT-T/WARN - Wiring diagram	WT-15
TRNSCV - Wiring diagram	BL-256		
Trouble diagnoses	GI-11		
Turbocharger	CO-2		
TURN - Wiring diagram	LT-122		
Turn signal lamp	LT-117 , LT-156		
Two trip detection logic	EC-45		
Tyre pressure monitoring system - trouble diagnoses ..	WT-11		

U

Unified meter and A/C amp.	DI-27
----------------------------------	-----------------------

V

Vacuum hose drawing (Engine control)	EC-99
Valve clearance	EM-88
Valve guide	EM-103 , EM-104
Valve lifter	EM-83
Valve seat	EM-105
Valve spring	EM-106 , EM-107
Variable induction air control system (VIAS) ..	EC-536 , EC-653
VDC -Wiring diagram	BRC-56
Vehicle security (theft warning) system	BL-204
Vehicle speed sensor (VSS) ..	EC-467 , EC-532 , EC-534
VEHSEC - Wiring diagram	BL-210 , BL-216
VENT/V - Wiring diagram	EC-415 , EC-422
VIAS - Wiring diagram	EC-655
VIAS/V - Wiring diagram	EC-537
VIN registration	EC-75

W

WARN - Wiring diagram	DI-39
Warning chime	DI-57
Warning lamps	DI-37

A

B

C

D

E

F

G

H

J

K

L

IDX