

# SECTION BCS

## BODY CONTROL SYSTEM

### CONTENTS

BCM			
<b>BASIC INSPECTION</b>	3	BUZZER : CONSULT-III Function .....	17
<b>DIAGNOSIS AND REPAIR WORKFLOW</b>	3	INT LAMP .....	18
Work Flow .....	3	INT LAMP : CONSULT-III Function .....	18
<b>FUNCTION DIAGNOSIS</b>	6	HEADLAMP .....	20
<b>BODY CONTROL SYSTEM</b>	6	HEADLAMP : CONSULT-III Function .....	20
System Description .....	6	WIPER .....	22
Component Parts Location .....	7	WIPER : CONSULT - III Function .....	22
<b>COMBINATION SWITCH READING SYSTEM</b>	8	FLASHER .....	23
System Diagram .....	8	FLASHER : CONSULT-III Function .....	23
System Description .....	8	AIR CONDITIONER .....	23
<b>SIGNAL BUFFER SYSTEM</b>	12	AIR CONDITIONER : CONSULT-III Function (BCM - AUTO AIR CONDITIONER) .....	23
System Diagram .....	12	INTELLIGENT KEY .....	24
System Description .....	12	INTELLIGENT KEY : CONSULT-III Function (BCM - INTELLIGENT KEY) .....	24
<b>POWER CONSUMPTION CONTROL SYSTEM</b>	13	COMB SW .....	24
System Diagram .....	13	COMB SW : CONSULT-III Function .....	24
System Description .....	13	BCM .....	25
Component Parts Location .....	15	BCM : CONSULT-III Function (BCM - BCM) .....	25
<b>DIAGNOSIS SYSTEM (BCM)</b>	16	IMMU .....	25
<b>COMMON ITEM</b>	16	IMMU : CONSULT-III Function (BCM - IMMU) .....	25
COMMON ITEM : Diagnosis Description .....	16	BATTERY SAVER .....	25
COMMON ITEM : CONSULT-III Function .....	16	BATTERY SAVER : CONSULT-III Function .....	25
<b>DOOR LOCK</b>	16	TRUNK .....	26
DOOR LOCK : CONSULT-III Function (BCM - DOOR LOCK) .....	17	TRUNK : CONSULT-III Function (BCM - TRUNK) .....	26
<b>REAR WINDOW DEFOGGER</b>	17	THEFT ALM .....	27
REAR WINDOW DEFOGGER : CONSULT-III Function (BCM - REAR DEFOGGER) .....	17	THEFT ALM : CONSULT-III Function (BCM - THEFT ALM) .....	27
<b>BUZZER</b>	17	RETAINED PWR .....	27
		RETAINED PWR : CONSULT-III Function (BCM - RETAINED PWR) .....	27

A  
B  
C  
D  
E

F  
G  
H  
I  
J  
K  
L

BCS

N  
O  
P

<b>SIGNAL BUFFER</b> .....	<b>27</b>	<b>POWER SUPPLY AND GROUND CIRCUIT</b> ....	<b>36</b>
SIGNAL BUFFER : CONSULT-III Function .....	27	Diagnosis Procedure .....	36
<b>AIR PRESSURE MONITOR</b> .....	<b>27</b>	Special Repair Requirement .....	36
AIR PRESSURE MONITOR : Diagnosis Description .....	27	<b>COMBINATION SWITCH INPUT CIRCUIT</b> .....	<b>37</b>
AIR PRESSURE MONITOR : CONSULT-III Function .....	29	Diagnosis Procedure .....	37
<b>FUSE, FUSIBLE LINK</b> .....	<b>30</b>	Special Repair Requirement .....	38
FUSE, FUSIBLE LINK : CONSULT-III Function ....	30	<b>COMBINATION SWITCH OUTPUT CIRCUIT</b> ...	<b>39</b>
<b>COMPONENT DIAGNOSIS</b> .....	<b>31</b>	Diagnosis Procedure .....	39
<b>U1000 CAN COMM CIRCUIT</b> .....	<b>31</b>	Special Repair Requirement .....	40
Description .....	31	<b>ECU DIAGNOSIS</b> .....	<b>41</b>
DTC Logic .....	31	<b>BCM (BODY CONTROL MODULE)</b> .....	<b>41</b>
Diagnosis Procedure .....	31	Reference Value .....	41
<b>U1010 CONTROL UNIT (CAN)</b> .....	<b>32</b>	Terminal Layout .....	45
DTC Logic .....	32	Physical Values .....	45
Diagnosis Procedure .....	32	Wiring Diagram-Coupe .....	64
<b>U0415 VEHICLE SPEED SIG</b> .....	<b>33</b>	Wiring Diagram-Sedan .....	73
Description .....	33	Fail Safe .....	81
DTC Logic .....	33	DTC Inspection Priority Chart .....	83
Diagnosis Procedure .....	33	DTC Index .....	85
<b>B2562 LOW VOLTAGE</b> .....	<b>34</b>	<b>SYMPTOM DIAGNOSIS</b> .....	<b>87</b>
DTC Logic .....	34	<b>COMBINATION SWITCH SYSTEM SYMPTOMS</b> .....	<b>87</b>
Diagnosis Procedure .....	34	Symptom Table .....	87
Special Repair Requirement .....	34	<b>ON-VEHICLE REPAIR</b> .....	<b>88</b>
<b>B2563 HI VOLTAGE</b> .....	<b>35</b>	<b>BCM (BODY CONTROL MODULE)</b> .....	<b>88</b>
DTC Logic .....	35	Removal and Installation .....	88
Diagnosis Procedure .....	35		
Special Repair Requirement .....	35		

# DIAGNOSIS AND REPAIR WORKFLOW

[BCM]

< BASIC INSPECTION >

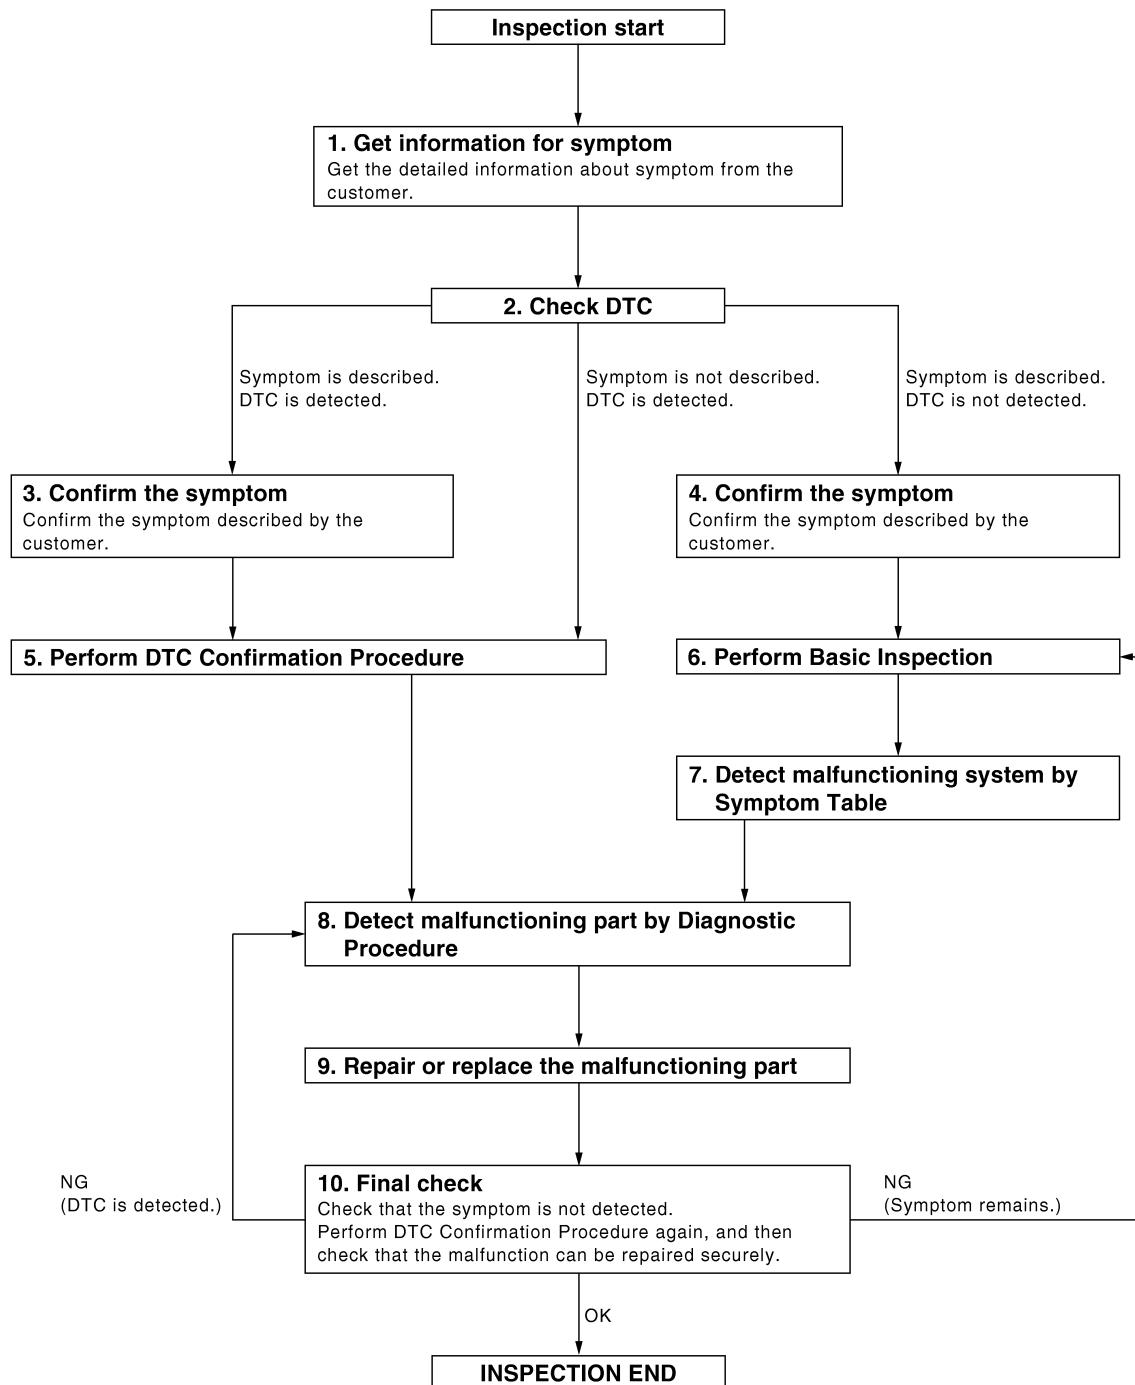
## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000001344634

OVERALL SEQUENCE



A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

DETAILED FLOW

# DIAGNOSIS AND REPAIR WORKFLOW

[BCM]

< BASIC INSPECTION >

## 1. GET INFORMATION FOR SYMPTOM

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred).

>> GO TO 2

## 2. CHECK DTC

1. Check DTC.
2. Perform the following procedure if DTC is displayed.
  - Record DTC and freeze frame data.
  - Erase DTC.
  - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Is any symptom described and any DTC detected?

Symptom is described, DTC is displayed>>GO TO 3

Symptom is described, DTC is not displayed>>GO TO 4

Symptom is not described, DTC is displayed>>GO TO 5

## 3. CONFIRM THE SYMPTOM

Confirm the symptom described by the customer.

Connect CONSULT-III to the vehicle in "DATA MONITOR" mode and check real time diagnosis results.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5

## 4. CONFIRM THE SYMPTOM

Confirm the symptom described by the customer.

Connect CONSULT-III to the vehicle in "DATA MONITOR" mode and check real time diagnosis results.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6

## 5. PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC Confirmation Procedure for the displayed DTC, and then check that DTC is detected again.

At this time, always connect CONSULT-III to the vehicle, and check diagnostic results in real time.

If two or more DTCs are detected, refer to [BCS-83, "DTC Inspection Priority Chart"](#) and determine trouble diagnosis order.

### NOTE:

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC Confirmation Procedure is not included in Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.  
If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC Confirmation Procedure.

Is DTC detected?

YES >> GO TO 8

NO >> Refer to [BCS-85, "DTC Index"](#).

## 6. PERFORM BASIC INSPECTION

Perform [BCS-3, "Work Flow"](#).

Inspection End>>GO TO 7

## 7. DETECT MALFUNCTIONING SYSTEM BY SYMPTOM TABLE

Detect malfunctioning system according to [BCS-6, "System Description"](#) based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

>> GO TO 8

# DIAGNOSIS AND REPAIR WORKFLOW

[BCM]

< BASIC INSPECTION >

A

## 8. DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

B

Inspect according to Diagnostic Procedure of the system.

**NOTE:**

The Diagnostic Procedure described based on open circuit inspection. A short circuit inspection is also required for the circuit check in the Diagnostic Procedure.

C

Is malfunctioning part detected?

D

YES >> GO TO 9

E

NO >> Check voltage of related BCM terminals using CONSULT-III.

## 9. REPAIR OR REPLACE THE MALFUNCTIONING PART

F

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnostic Procedure again after repair and replacement.
3. Check DTC. If DTC is displayed, erase it.

G

>> GO TO 10

## 10. FINAL CHECK

H

When DTC was detected in step 2, perform DTC Confirmation Procedure or Component Function Check again, and then check that the malfunction have been repaired securely.

I

When symptom was described from the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

J

Does the symptom reappear?

K

YES (DTC is detected)>>GO TO 8

L

YES (Symptom remains)>>GO TO 6

NO >> Inspection End.

BCS

N

O

P

&lt; FUNCTION DIAGNOSIS &gt;

# FUNCTION DIAGNOSIS

## BODY CONTROL SYSTEM

### System Description

INFOID:000000001344635

#### OUTLINE

- BCM (body control module) controls the various electrical components. It inputs the information required to the control from CAN communication and the signal received from each switch and sensor.
- BCM has combination switch reading function for reading the operation status of combination switches (light, turn signal, wiper and washer) in addition to a function for controlling the operation of various electrical components. It also has the signal transmission function as the passed point of signal and the power saving control function that reduces the power consumption with the ignition switch OFF.
- BCM is equipped with the diagnosis function that performs the diagnosis with CONSULT-III and various settings.

#### CAN communication control

In CAN communication, control units are connected with 2 communication lines (CAN-L, CAN-H) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives the data but selectively reads required information only.

#### CAN communication signal

Refer to the [LAN-25, "CAN Communication Signal Chart"](#).

#### BCM control function list

System	Refer to
Combination switch reading system	<a href="#">BCS-8, "System Description"</a>
Signal buffer system	<a href="#">BCS-12, "System Description"</a>
Power consumption control system	<a href="#">BCS-13, "System Description"</a>
Auto light system	<a href="#">EXL-14, "System Description"</a>
Turn signal and hazard warning lamp system	<a href="#">EXL-18, "System Description"</a>
Headlamp system (xenon type)	<a href="#">EXL-7, "System Description"</a>
Headlamp system (halogen type)	<a href="#">EXL-9, "System Description"</a>
Front fog lamp system	<a href="#">EXL-16, "System Description"</a>
Exterior lamp battery saver system	<a href="#">EXL-9, "System Description"</a>
Daytime running light system	<a href="#">EXL-11, "System Description"</a>
Interior room lamp control system	<a href="#">INL-6, "System Description"</a>
Step lamp system	<a href="#">INL-6, "System Description"</a>
Interior room lamp battery saver system	<a href="#">INL-6, "System Description"</a>
Front wiper and washer system	<a href="#">WW-6, "System Description"</a>
Warning chime system	<a href="#">WCS-4, "WARNING CHIME SYSTEM : System Description"</a>
Door lock system	<a href="#">DLK-12, "DOOR LOCK AND UNLOCK SWITCH : System Description"</a>
Trunk open system	<a href="#">DLK-22, "TRUNK LID OPENER SWITCH : System Description"</a>
Nissan vehicle immobilizer system	<a href="#">SEC-18, "System Description"</a>
Vehicle security system	<a href="#">SEC-22, "System Description"</a>
Panic alarm	
Rear window defogger system	<a href="#">DEF-6, "System Description"</a>

# BODY CONTROL SYSTEM

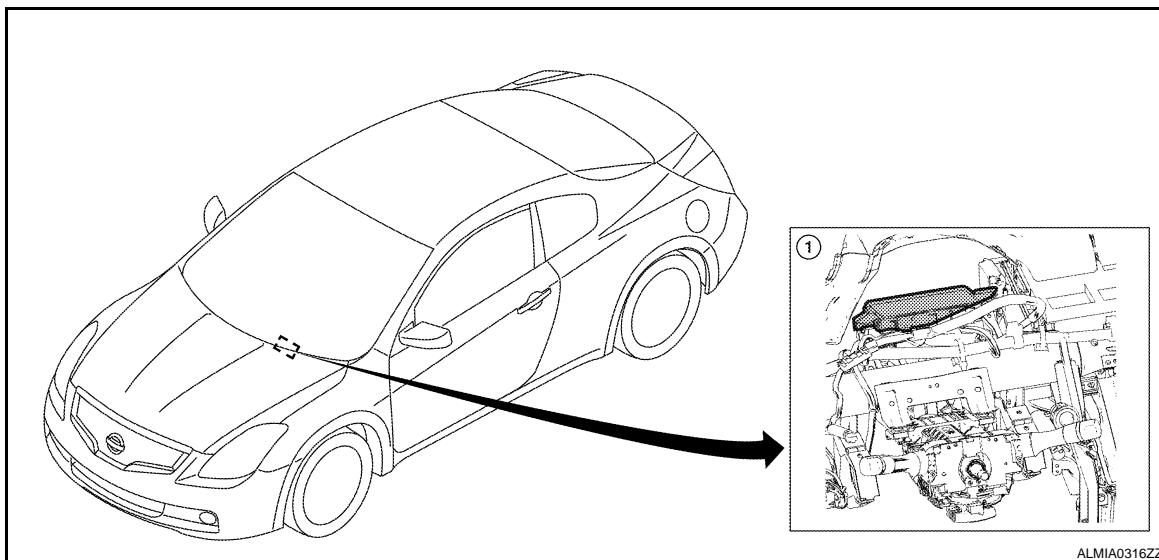
[BCM]

< FUNCTION DIAGNOSIS >

System	Refer to
Intelligent Key system/engine start system	Door lock function
	• <a href="#">DLK-14, "DOOR REQUEST SWITCH : System Description"</a> (door request switch)
	• <a href="#">DLK-19, "INTELLIGENT KEY : System Description"</a> (Intelligent Key)
	Trunk open function
	• <a href="#">DLK-24, "TRUNK REQUEST SWITCH : System Description"</a> (trunk request switch)
	• <a href="#">DLK-27, "INTELLIGENT KEY : System Description"</a> (Intelligent Key)
	Warning function
	<a href="#">DLK-29, "System Description"</a>
	Key reminder function
	<a href="#">DLK-34, "System Description"</a>
	Engine start function
	<a href="#">SEC-12, "System Description"</a>
Power window system	<ul style="list-style-type: none"> <li><a href="#">PWC-114, "System Description"</a> (LH and RH power window anti-pinches)</li> <li><a href="#">PWC-13, "System Description"</a> (LH only window anti-pinches)</li> </ul>
RAP (retained accessory power) system	<a href="#">PWC-16, "RETAINED PWR : CONSULT-III Function (BCM - RETAINED PWR)"</a>
TPMS (tire pressure monitor system)	<a href="#">WT-8, "System Description"</a>

## Component Parts Location

INFOID:0000000001344636



ALMIA0316ZZ

1. BCM M16, M17, M18, M19, M20, M21 (view with instrument panel removed) (coupe shown, sedan similar)

BCS

N

O

P


# COMBINATION SWITCH READING SYSTEM
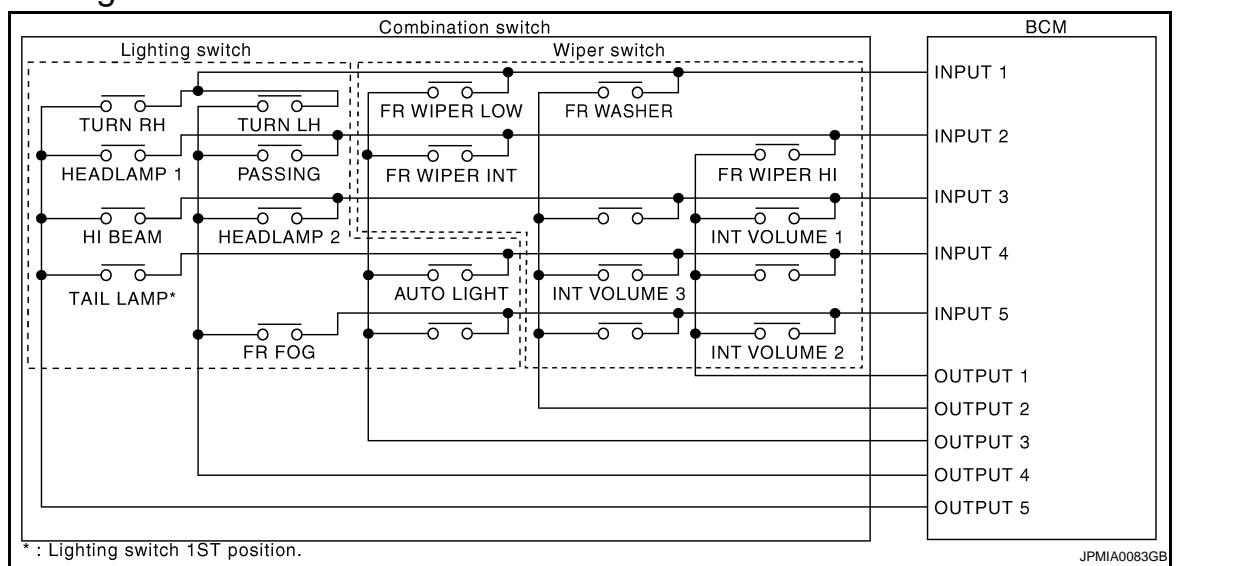
< FUNCTION DIAGNOSIS >

[BCM]

## COMBINATION SWITCH READING SYSTEM

### System Diagram




### System Description

INFOID:0000000001344638

#### OUTLINE

- BCM reads the status of the combination switch (light, turn signal, wiper and washer) and recognizes the status of each switch.
- BCM is a combination of 5 output terminals (OUTPUT 1 - 5) and 5 input terminals (INPUT 1 - 5). It reads a maximum of 20 switch status.
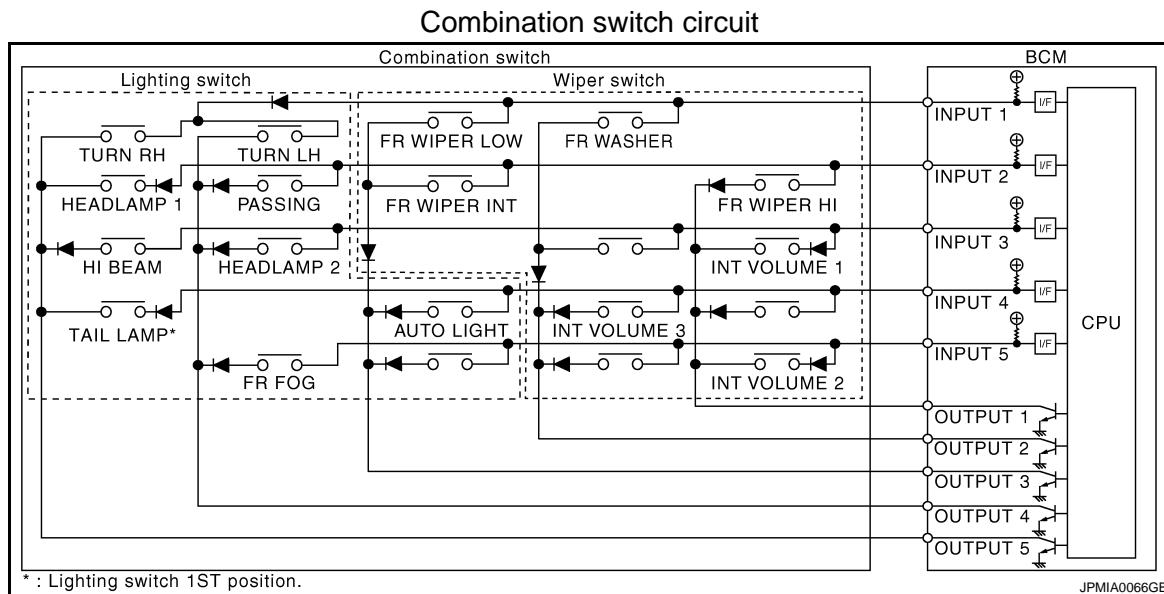
#### COMBINATION SWITCH MATRIX



#### Combination switch INPUT-OUTPUT system list

System	OUTPUT 1	OUTPUT 2	OUTPUT 3	OUTPUT 4	OUTPUT 5
INPUT 1	—	FR WASHER	FR WIPER LOW	TURN LH	TURN RH
INPUT 2	FR WIPER HI	—	FR WIPER INT	PASSING	HEADLAMP 1
INPUT 3	INT VOLUME 1	—	—	HEADLAMP 2	HI BEAM

# COMBINATION SWITCH READING SYSTEM

[BCM]

< FUNCTION DIAGNOSIS >

System	OUTPUT 1	OUTPUT 2	OUTPUT 3	OUTPUT 4	OUTPUT 5
INPUT 4	—	INT VOLUME 3	AUTO LIGHT	—	TAIL LAMP
INPUT 5	INT VOLUME 2	—	—	FR FOG	—

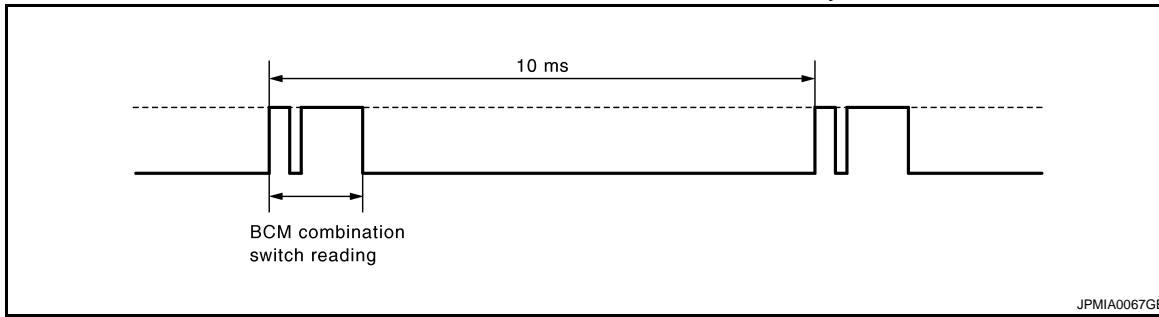
**NOTE:**

Headlamp has a dual system switch.

## COMBINATION SWITCH READING FUNCTION

### Description


- BCM reads the status of the combination switch at 10ms interval normally.



**NOTE:**

BCM reads the status of the combination switch at 60ms interval when BCM is controlled at low power consumption mode.

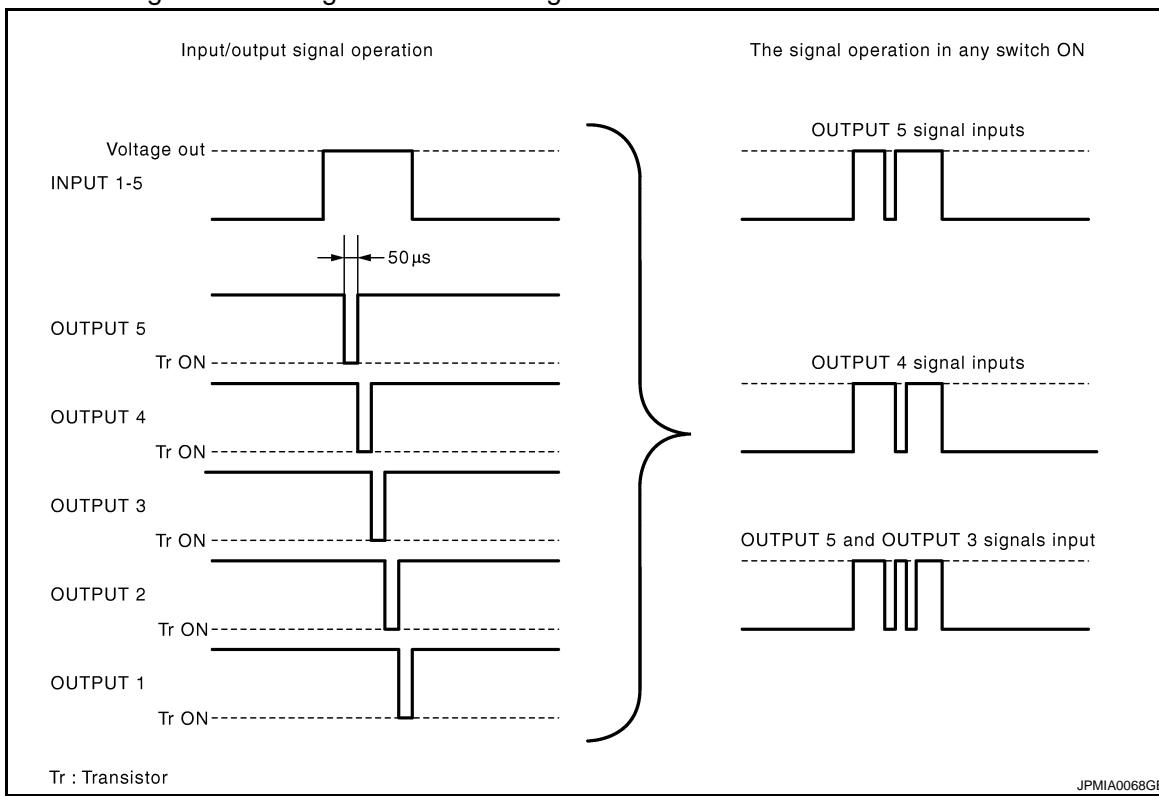- BCM operates as follows and judges the status of the combination switch.
- INPUT 1 - 5 outputs the voltage waveforms of 5 systems simultaneously.
- It operates the transistor on OUTPUT side in the following order: OUTPUT 5 → 4 → 3 → 2 → 1.
- The voltage waveform of INPUT corresponding to the formed circuit changes according to the operation of the transistor on OUTPUT side if any (1 or more) switches are ON.
- It reads this change of the voltage as the status signal of the combination switch.



### Operation Example

In the following operation example, the combination of the status signals of the combination switch is replaced as follows: INPUT 1 - 5 to "1 - 5" and OUTPUT 1 - 5 to "A - E".


Example 1: When a switch (TURN RH switch) is turned ON

# COMBINATION SWITCH READING SYSTEM

[BCM]

## < FUNCTION DIAGNOSIS >

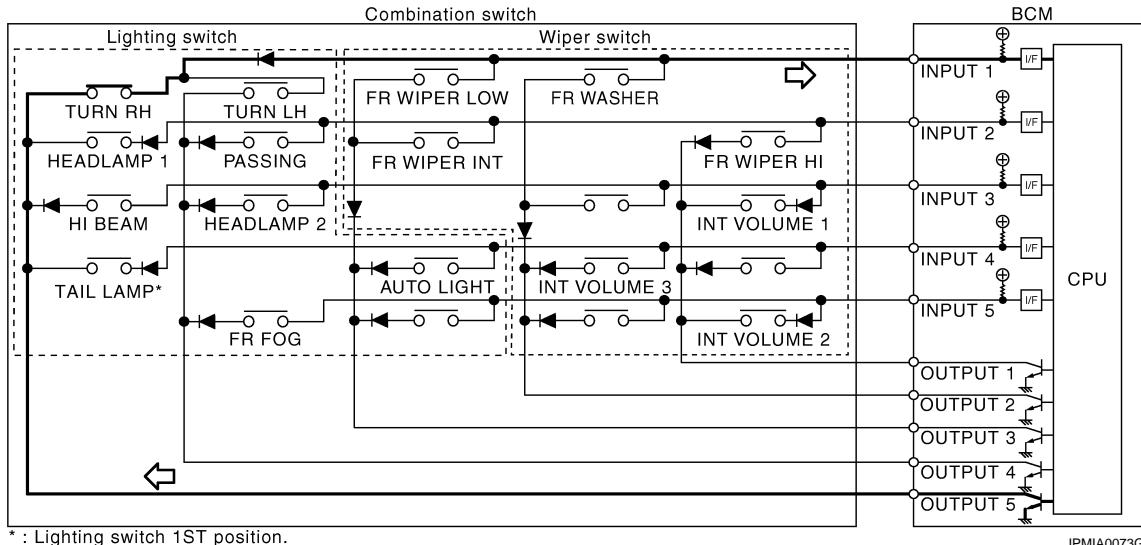
- The circuit between INPUT 1 and OUTPUT 5 is formed when the TURN RH switch is turned ON.



- BCM detects the combination switch status signal "1E" when the signal of OUTPUT 5 is input to INPUT 1.
- BCM judges that the TURN RH switch is ON when the signal "1E" is detected.
- Example 2: When some switches (TURN RH switch, FR WIPER LOW switch) are turned ON

Example 2: When some switches (turn RH switch, front wiper LO switch) are turned ON

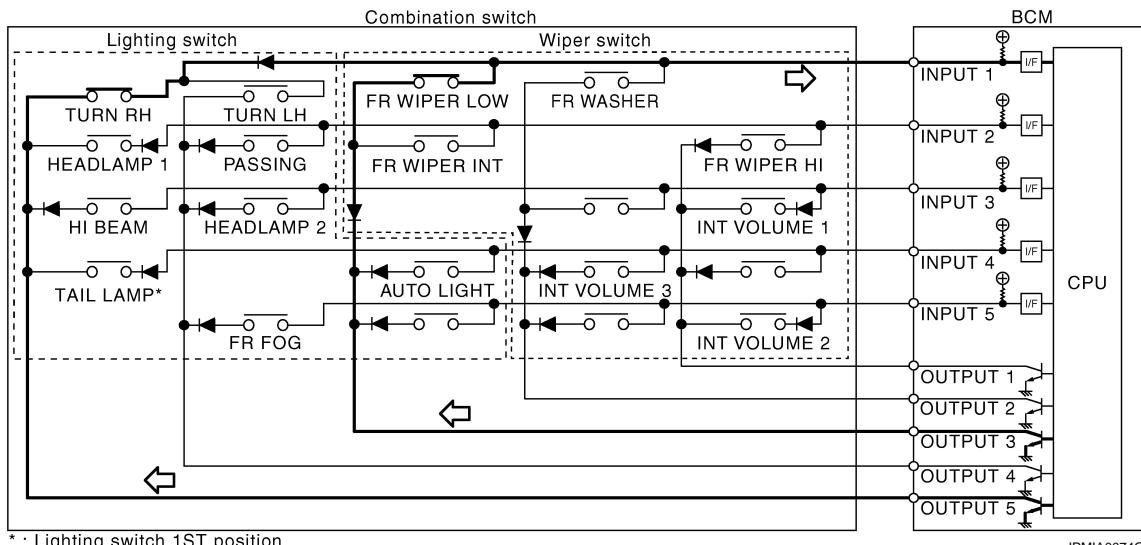- The circuits between INPUT 1 and OUTPUT 5 and between INPUT 1 and OUTPUT 3 are formed when the TURN RH switch and FR WIPER LOW switch are turned ON.



- BCM detects the combination switch status signal "1CE" when the signals of OUTPUT 3 and OUTPUT 5 are input to INPUT 1.
- BCM judges that the TURN RH switch and FR WIPER LOW switch are ON when the signal "1CE" is detected.

**WIPER INTERMITTENT DIAL POSITION SETTING (FRONT WIPER INTERMITTENT OPERATION)**  
BCM judges the wiper intermittent dial 1 - 7 by the status of INT VOLUME 1, 2, and 3 switches.

# COMBINATION SWITCH READING SYSTEM

< FUNCTION DIAGNOSIS >

[BCM]

Wiper intermittent dial position	Intermittent operation delay interval	INT VOLUME switch ON/OFF status		
		INT VOLUME 1 switch	INT VOLUME 2 switch	INT VOLUME 3 switch
1	Short ↑  ↓ Long	ON	ON	ON
2		ON	ON	OFF
3		ON	OFF	OFF
4		OFF	OFF	OFF
5		OFF	OFF	ON
6		OFF	ON	ON
7		OFF	ON	OFF

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

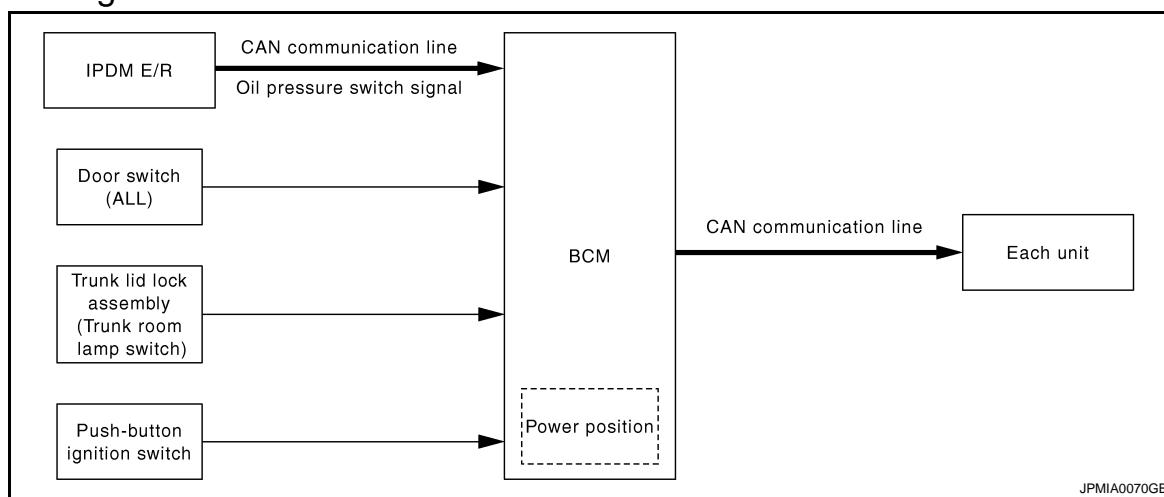
# SIGNAL BUFFER SYSTEM

< FUNCTION DIAGNOSIS >

[BCM]

## SIGNAL BUFFER SYSTEM

### System Diagram



### System Description

INFOID:0000000001344640

#### OUTLINE

BCM has the signal transmission function that outputs/transmits each input/received signal to each unit.

#### Signal transmission function list

Signal name	Input	Output	Description
<ul style="list-style-type: none"><li>• Ignition switch ON signal</li><li>• Ignition switch signal</li></ul>	Engine switch (push switch)	IPDM E/R (CAN)	Inputs the push-button ignition switch (push switch) signal and transmits the ignition switch status judged with BCM via CAN communication.
Door switch signal	Any door switch	<ul style="list-style-type: none"><li>• Combination meter (CAN)</li><li>• IPDM E/R (CAN)</li></ul>	Inputs the door switch signal and transmits it via CAN communication.
Trunk switch signal	Trunk room lamp switch	Combination meter (CAN)	Inputs the trunk room lamp switch signal and transmits the trunk switch signal via CAN communication.
Oil pressure switch signal	IPDM E/R (CAN)	Combination meter (CAN)	Transmits the received oil pressure switch signal via CAN communication.

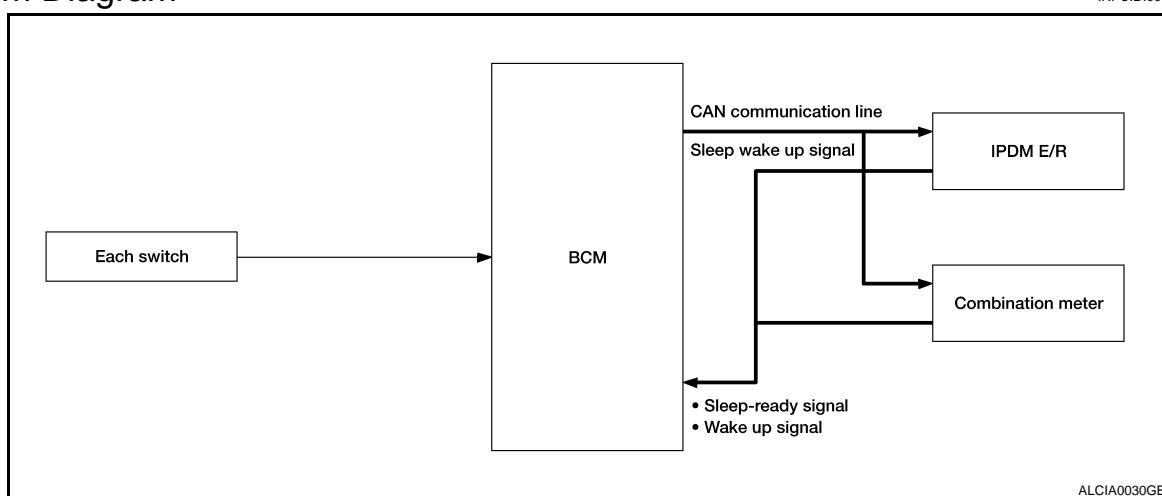
# POWER CONSUMPTION CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

[BCM]

## POWER CONSUMPTION CONTROL SYSTEM

### System Diagram



### System Description

INFOID:0000000001344642

#### OUTLINE

- BCM incorporates a power saving control function that reduces the power consumption according to the vehicle status.
- BCM switches the status (control mode) by itself with the power saving control function. It performs the sleep request to each unit (IPDM E/R and combination meter) that operates with the ignition switch OFF.

#### Normal mode (wake-up)

- CAN communication is normally performed with other units
- Each control with BCM is operating properly

#### CAN communication sleep mode (CAN sleep)

- CAN transmission is stopped
- Control with BCM only is operating

#### Low power consumption mode (BCM sleep)

- Low power consumption control is active
- CAN transmission is stopped

### LOW POWER CONSUMPTION CONTROL WITH BCM

BCM reduces the power consumption with the following operation in the low power consumption mode.

- The reading interval of the each switches changes from 10 ms interval to 60 ms interval.

#### Sleep mode activation

- BCM receives the sleep-ready signal (ready) from IPDM E/R and combination meter via CAN communication.
- BCM transmits the sleep wake up signal (sleep) to each unit when all of the CAN sleep conditions are fulfilled.
- Each unit stops the transmission of CAN communication with the sleep wakeup signal. BCM is in CAN communication sleep mode.
- BCM is in the low power consumption mode and perform the low power consumption control when all of the BCM sleep conditions are fulfilled with CAN sleep condition.

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

# POWER CONSUMPTION CONTROL SYSTEM

[BCM]

## < FUNCTION DIAGNOSIS >

### Sleep condition

CAN sleep condition	BCM sleep condition
<ul style="list-style-type: none"> <li>Receiving the sleep-ready signal (ready) from all units</li> <li>Ignition switch: OFF</li> <li>Vehicle security system alarm and panic alarm : No operation</li> <li>Warning lamp: Not operation</li> <li>Intelligent Key system buzzer: No operation</li> <li>Trunk room lamp switch status: No change</li> <li>Brake switch: OFF</li> <li>Key slot status: No change</li> <li>Turn signal indicator lamp: No operation</li> <li>Exterior lamp: OFF</li> <li>Door lock status: No change</li> <li>CONSULT-III communication status: No communication</li> <li>Meter display signal : Non-transmission</li> <li>Electronic steering column lock operation: No operation</li> <li>Door switch status: No change</li> <li>Rear window defogger: OFF</li> </ul>	<ul style="list-style-type: none"> <li>Interior room lamp battery saver: Time out</li> <li>RAP system: OFF</li> <li>Power window switch communication: No transmission</li> <li>Push-button ignition switch (push switch) illumination: OFF</li> <li>NATS: No operation</li> <li>Remote keyless entry receiver communication status: No communication</li> <li>Tire pressure monitor system: Stop</li> </ul>

### Wake-up operation

- BCM changes from the low power consumption mode to the CAN communication sleep mode when the any of the BCM wake-up conditions is fulfilled. Only the control with BCM is activated.
- BCM transmits the sleep wake up signal (wake up) to each unit when any of the CAN wake-up conditions is fulfilled. It changes from the low power consumption mode or the CAN communication sleep mode to the normal mode.
- Each unit starts the transmission of CAN communication with the sleep wake up signal. In addition, the combination meter transmits the wake up signal to BCM via CAN communication to report the CAN communication start.

### Wake-up condition

BCM wake-up condition	CAN wake-up condition
<ul style="list-style-type: none"> <li>Door unlock sensor: OFF→ON, ON→OFF</li> <li>Door lock lock assembly LH (key cylinder switch): Lock or unlock</li> <li>Door lock switch: OFF→ON</li> <li>Door unlock switch: OFF→ON</li> <li>Trunk lid opener switch: OFF→ON</li> <li>Power window serial link communication: Receiving</li> <li>Remote keyless entry receiver: Receiving valid keyfob</li> </ul>	<ul style="list-style-type: none"> <li>Receiving the sleep-ready signal (Not-ready) from any units</li> <li>Key slot: OFF→ON, ON→OFF</li> <li>Push-button ignition switch (push switch): OFF→ON</li> <li>Hazard switch: OFF→ON</li> <li>PASSING switch: OFF→ON, ON→OFF</li> <li>TAIL LAMP switch: OFF→ON</li> <li>Driver door switch: OFF→ON, ON→OFF</li> <li>Passenger door switch: OFF → ON, ON → OFF</li> <li>Trunk room lamp switch: OFF→ON, ON→OFF</li> <li>Driver door request switch: OFF→ON</li> <li>Passenger door request switch: OFF→ON</li> <li>Trunk request switch: OFF→ON</li> <li>Stop lamp switch 2 signal: ON</li> <li>Clutch interlock switch: OFF→ON</li> <li>Remote keyless entry receiver: Receiving valid keyfob</li> </ul>

# POWER CONSUMPTION CONTROL SYSTEM

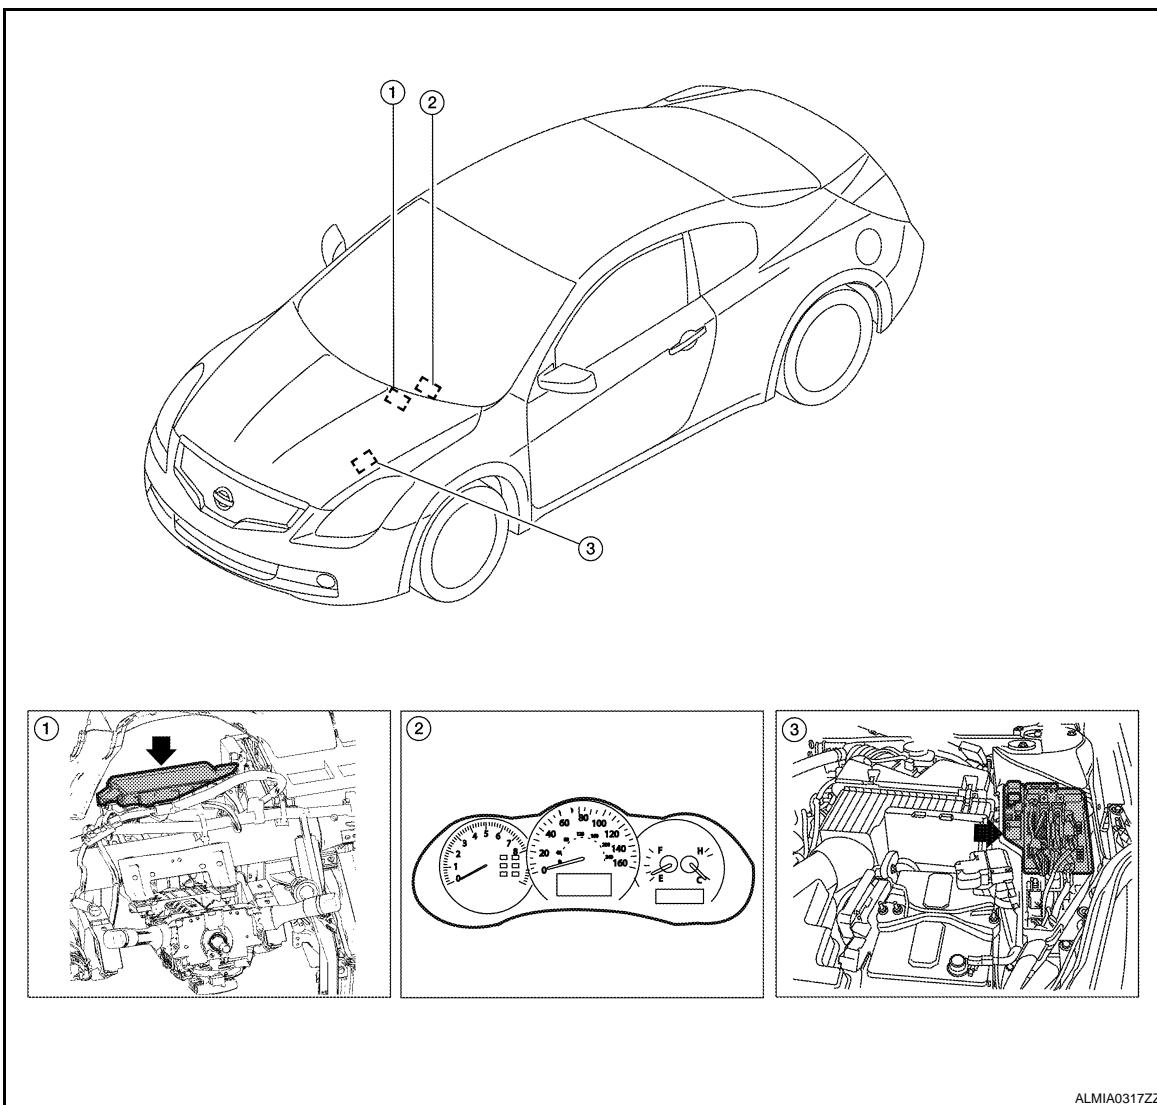
< FUNCTION DIAGNOSIS >

[BCM]

Component Parts Location

INFOID:000000001344643

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P



1. BCM M16, M17, M18, M19, M20, M21 (view with instrument panel removed) (coupe shown, sedan similar)
2. Combination meter M24
3. IPDM E/R E16, E17, E18, E200, E201, F10

BCS

# DIAGNOSIS SYSTEM (BCM)

[BCM]

< FUNCTION DIAGNOSIS >

## DIAGNOSIS SYSTEM (BCM)

### COMMON ITEM

#### COMMON ITEM : Diagnosis Description

INFOID:000000001344644

#### BCM CONSULT-III FUNCTION

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
WORK SUPPORT	Changes the setting for each system function.
SELF-DIAG RESULTS	Displays the diagnosis results judged by BCM.
CAN DIAG SUPPORT MNTR	Monitors the reception status of CAN communication viewed from BCM.
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.
ECU IDENTIFICATION	The BCM part number is displayed.
CONFIGURATION	This function is not used even though it is displayed.

#### SYSTEM APPLICATION

BCM can perform the following functions for each system.

##### NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

System	Sub system selection item	Diagnosis mode		
		WORK SUPPORT	DATA MONITOR	ACTIVE TEST
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Exterior lamp	HEADLAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
Air conditioner	AIR CONDITIONER		×	
Intelligent Key system	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
BCM	BCM	×		
Immobilizer	IMMU		×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Trunk open	TRUNK		×	
Vehicle security system	THEFT ALM	×	×	×
RAP system	RETAINED PWR		×	
Signal buffer system	SIGNAL BUFFER		×	×
TPMS	AIR PRESSURE MONITOR	×	×	

#### COMMON ITEM : CONSULT-III Function

##### ECU IDENTIFICATION

Displays the BCM part No.

##### SELF-DIAG RESULT

Refer to [BCS-85, "DTC Index"](#).

##### DOOR LOCK

INFOID:000000001344645

# DIAGNOSIS SYSTEM (BCM)

[BCM]

< FUNCTION DIAGNOSIS >

DOOR LOCK : CONSULT-III Function (BCM - DOOR LOCK)

INFOID:000000003183616

A

## WORK SUPPORT

Work Item	Description
DOOR LOCK-UNLOCK SET	<ul style="list-style-type: none"><li>• ON</li><li>• OFF</li></ul>
ANTI-LOCK OUT SET	<ul style="list-style-type: none"><li>• ON</li><li>• OFF</li></ul>

B

C

D

E

F

G

H

I

J

## DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [ON/OFF]	Indicates condition of ignition switch in ON position
KEY ON SW [ON/OFF]	Indicates condition of key switch
CDL LOCK SW [ON/OFF]	Indicates condition of door lock and unlock switch
CDL UNLOCK SW [ON/OFF]	Indicates condition of door lock and unlock switch
DOOR SW-DR [ON/OFF]	Indicates condition of front door switch LH
DOOR SW-AS [ON/OFF]	Indicates condition of front door switch RH
DOOR SW-RR [ON/OFF]	Indicates condition of rear door switch RH
DOOR SW-RL [ON/OFF]	Indicates condition of rear door switch LH
BACK DOOR SW [ON/OFF]	Indicates condition of back door switch
KEY CYL LK-SW [ON/OFF]	Indicates condition of lock signal from door key cylinder switch
KEY CYL UN-SW [ON/OFF]	Indicates condition of unlock signal from door key cylinder switch
I-KEY LOCK [ON/OFF]	Indicates condition of lock signal from Intelligent Key
I-KEY UNLOCK [ON/OFF]	Indicates condition of unlock signal from Intelligent Key

K

L

## ACTIVE TEST

Test Item	Description
DOOR LOCK	This test is able to check door lock operation [ALL LOCK/ALL UNLOCK/DR UNLOCK/OTHER UNLOCK].
TRUNK/BACK DOOR	This test is able to check trunk/back door lock operation [LOCK (SET)/UNLOCK (RELEASE)].

M

BCS

## REAR WINDOW DEFOGGER

REAR WINDOW DEFOGGER : CONSULT-III Function (BCM - REAR DEFOGGER)

INFOID:000000003183617

N

## DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [ON/OFF]	Indicates condition of ignition switch in ON position
IGN ACC SW [ON/OFF]	Indicates condition of ignition switch in ACC position
REAR DEF SW [ON/OFF]	Displays "Press (ON)/other (OFF)" status determined with the rear window defogger switch

O

P

## BUZZER

BUZZER : CONSULT-III Function

INFOID:000000001344646

Q

## CONSULT-III APPLICATION ITEMS

# DIAGNOSIS SYSTEM (BCM)

[BCM]

## < FUNCTION DIAGNOSIS >

Test item	Diagnosis mode	Description
BUZZER	Data monitor	Displays BCM input data in real time.
BUZZER	Active test	Operation of electrical loads can be checked by sending driving signal to them.

## DATA MONITOR

Display item [Unit]	Description
VEH SPEED 1 [Km/h]	Value of vehicle speed signal received from ABS actuator and electric unit (control unit) with CAN communication line.
PUSH SW [On/Off]	Status of push button ignition switch judged by BCM.
UNLK SEN -DR [On/Off]	Status of door lock assembly (door unlock sensor) judged by BCM.
KEY SW-SLOT [On/Off]	Status of key slot judged by BCM.
TAIL LAMP SW [On/Off]	Status of each switch judged by BCM using the combination SW readout function.
FR FOG SW [On/Off]	Status of front fog lamp switch judged by BCM.
DOOR SW -DR [On/Off]	Status of driver side door switch judged by BCM.

## ACTIVE TEST

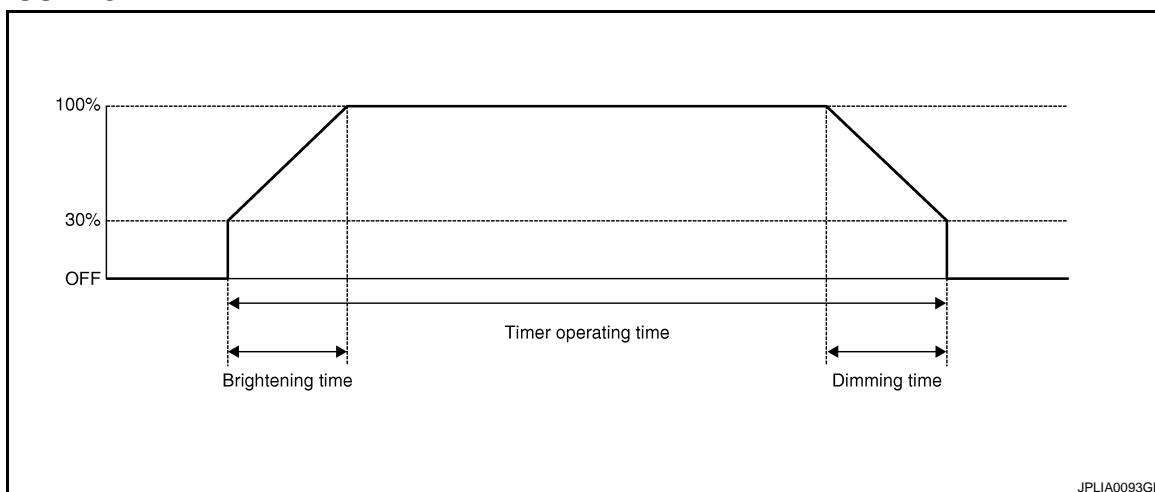
Display item [Unit]	Description
IGN KEY WARN ALM	The key warning chime operation can be checked by operating the relevant function (On/Off).
SEAT BELT WARN TEST	The seat belt warning chime operation can be checked by operating the relevant function (On/Off).
ID REGIST WARNING	The ID regist warning chime operation can be checked by operating the relevant function (On/Off).
LIGHT WARN ALM	The light warning chime operation can be checked by operating the relevant function (On/Off).

## INT LAMP

### INT LAMP : CONSULT-III Function

INFOID:0000000001344647

## WORK SUPPORT



# DIAGNOSIS SYSTEM (BCM)

[BCM]

< FUNCTION DIAGNOSIS >

Service item	Setting item	Setting	
ROOM LAMP TIMER SET	MODE 2	7.5 sec.	Sets the interior room lamp ON time. (Timer operating time)
	MODE 3*	15 sec.	
	MODE 4	30 sec.	
SET I/L D-UNLCK INTCON	ON*	With the interior room lamp timer function	
	OFF	Without the interior room lamp timer function	
ROOM LAMP ON TIME SET	MODE 1	0.5 sec.	Sets the interior room lamp gradual brightening time.
	MODE 2*	1 sec.	
	MODE 3	2 sec.	
	MODE 4	3 sec.	
	MODE 5	0 sec.	
ROOM LAMP OFF TIME SET	MODE 1	0.5 sec.	Sets the interior room lamp gradual dimming time.
	MODE 2	1 sec.	
	MODE 3	2 sec.	
	MODE 4*	3 sec.	
	MODE 5	0 sec.	
R LAMP TIMER LOGIC SET	ON* (MODE 1)	Interior room lamp timer activates with synchronizing all doors.	
	OFF (MODE 2)	Interior room lamp timer activates with synchronizing the driver door only.	

\* : Initial setting

## DATA MONITOR

Monitor item [Unit]	Description
REQ SW-DR [ON/OFF]	The switch status input from request switch (driver side)
REQ SW-AS [ON/OFF]	The switch status input from front request switch (passenger side)
PUSH SW [ON/OFF]	The switch status input from push-button ignition switch
KEY SW-SLOT [ON/OFF]	Key switch status input from key slot
DOOR SW-DR [ON/OFF]	The switch status input from front door switch LH
DOOR SW-AS [ON/OFF]	The switch status input from front door switch RH
DOOR SW-RR [ON/OFF]	The switch status input from rear door switch RH
DOOR SW-RL [ON/OFF]	The switch status input from rear door switch LH
DOOR SW-BK [ON/OFF]	<b>NOTE:</b> The item is indicated, not monitored.
CDL LOCK SW [ON/OFF]	Lock switch status received from central door lock switch by power window switch serial link
CDL UNLOCK SW [ON/OFF]	Unlock switch status received from central door lock switch by power window switch serial link
KEY CYL LK-SW [ON/OFF]	Lock switch status received from key cylinder switch by power window switch serial link

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

# DIAGNOSIS SYSTEM (BCM)

[BCM]

< FUNCTION DIAGNOSIS >

Monitor item [Unit]	Description
KEY CYL UN-SW [ON/OFF]	Unlock switch status received from key cylinder switch by power window switch serial link
TRNK/HAT MNTR [ON/OFF]	The switch status input from trunk room lamp switch
RKE-LOCK [ON/OFF]	Lock signal status received from remote keyless entry receiver
RKE-UNLOCK [ON/OFF]	Unlock signal status received from remote keyless entry receiver

## ACTIVE TEST

Test item	Operation	Description
INT LAMP	ON	Outputs the interior room lamp control signal to turn map lamp and personal lamp ON (Map lamp switch is in DOOR position).
	OFF	Stops the interior room lamp control signal to turn map lamp and personal lamp OFF.
STEP LAMP TEST	ON	Outputs the step lamp control signal to turn step lamp ON.
	OFF	Stops the step lamp control signal to turn step lamp OFF.
LUGGAGE LAMP TEST	ON	Outputs the luggage room lamp control signal to turn step lamp ON.
	OFF	Stops the luggage room lamp control signal to turn step lamp ON.

## HEADLAMP

### HEADLAMP : CONSULT-III Function

INFOID:000000001344648

## WORK SUPPORT

Service item	Setting item	Setting
BATTERY SAVER SET	ON <sup>1</sup>	With the exterior lamp battery saver function
	OFF	Without the exterior lamp battery saver function
ILL DELAY SET <sup>2</sup>	MODE 1 <sup>1</sup>	45 sec.
	MODE 2	Without the function
	MODE 3	30 sec.
	MODE 4	60 sec.
	MODE 5	90 sec.
	MODE 6	120 sec.
	MODE 7	150 sec.
	MODE 8	180 sec.
CUSTOM A/LIGHT SETTING <sup>2</sup>	MODE 1 <sup>1</sup>	Normal
	MODE 2	More sensitive setting than normal setting (Turns ON earlier than normal operation.)
	MODE 3	More sensitive setting than MODE 2 (Turns ON earlier than MODE 2.)
	MODE 4	Less sensitive setting than normal setting (Turns ON later than normal operation.)

1 : Initial setting

2: With auto light system

## DATA MONITOR

# DIAGNOSIS SYSTEM (BCM)

[BCM]

< FUNCTION DIAGNOSIS >

Monitor item [Unit]	Description
PUSH SW [ON/OFF]	The switch status input from push-button ignition switch
ENGINE STATE [STOP/STALL/CRANK/RUN]	The engine status received from ECM with CAN communication
VEH SPEED 1 [km/h]	The value of the vehicle speed received from combination meter with CAN communication
KEY SW-SLOT [ON/OFF]	Key switch status input from key slot
TURN SIGNAL R [ON/OFF]	Each switch status that BCM judges from the combination switch reading function
TURN SIGNAL L [ON/OFF]	
TAIL LAMP SW [ON/OFF]	
HI BEAM SW [ON/OFF]	
HEAD LAMP SW1 [ON/OFF]	
HEAD LAMP SW2 [ON/OFF]	
PASSING SW [ON/OFF]	
AUTO LIGHT SW <sup>1</sup> [ON/OFF]	
FR FOG SW [ON/OFF]	
DOOR SW-DR [ON/OFF]	The switch status input from front door switch LH
DOOR SW-AS [ON/OFF]	The switch status input from front door switch RH
DOOR SW-RR [ON/OFF]	The switch status input from rear door switch RH
DOOR SW-RL [ON/OFF]	The switch status input from rear door switch LH
DOOR SW-BK <sup>2</sup> [ON/OFF]	—
OPTICAL (LIGHT) SENSOR [V] <sup>1</sup>	The value of exterior brightness voltage input from the optical sensor

1: With auto light system.

2: The item is indicated, not monitored.

## ACTIVE TEST

Test item	Operation	Description
TAIL LAMP	ON	Transmits the Position light request signal to IPDM E/R with CAN communication to turn the tail lamp ON.
	OFF	Stops the tail lamp request signal transmission.

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

# DIAGNOSIS SYSTEM (BCM)

[BCM]

< FUNCTION DIAGNOSIS >

Test item	Operation	Description
HEAD LAMP	HI	Transmits the high beam request signal with CAN communication to turn the headlamp (HI)
	LO	Transmits the low beam request signal with CAN communication to turn the headlamp (LO).
	OFF	Stops the high & low beam request signal transmission.
FR FOG LAMP	ON	Transmits the front fog lights request signal to IPDM E/R with CAN communication to turn the front fog lamp ON.
	OFF	Stops the front fog lights request signal transmission.
DAYTIME RUNNING LIGHT*	ON	—
	OFF	—
CORNERRING LAMP*	RH	—
	LH	—
	OFF	—
ILL DIM SIGNAL*	ON	—
	OFF	—

\*: The item is indicated, not monitored.

## WIPER

### WIPER : CONSULT - III Function

INFOID:0000000001344649

## WORK SUPPORT

Service item	Setting item	Description
WIPER SPEED SETTING	ON	With vehicle speed (Front wiper intermittent time linked with the vehicle speed and wiper dial position)
	OFF*	Without vehicle speed (Front wiper intermittent time linked with the wiper dial position)

\* : Factory setting

## DATA MONITOR

Monitor Item [Unit]	Description
PUSH SW	Displays the status of the engine switch (push switch) judged by BCM.
VEH SPEED 1 [km/h]	Displays the value of the vehicle speed signal received from combination meter with CAN communication.
FR WIPER HI [OFF/ON]	Status of each switch judged by BCM using the combination switch reading function
FR WIPER LOW [OFF/ON]	
FR WASHER SW [OFF/ON]	
FR WIPER INT [OFF/ON]	
FR WIPER STOP [OFF/ON]	Displays the status of the front wiper auto stop signal received from IPDM E/R with CAN communication.
INT VOLUME [1 – 7]	Status of each switch judged by BCM using the combination switch reading function

## ACTIVE TEST

# DIAGNOSIS SYSTEM (BCM)

[BCM]

< FUNCTION DIAGNOSIS >

Test item	Operation	Description
FRONT WIPER	HI	Transmits the front wiper request signal (HI) to IPDM E/R with CAN communication to operate the front wiper HI operation.
	LO	Transmits the front wiper request signal (LO) to IPDM E/R with CAN communication to operate the front wiper LO operation.
	INT	Transmits the front wiper request signal (INT) to IPDM E/R with CAN communication to operate the front wiper INT operation.
	OFF	Stops transmitting the front wiper request signal to stop the front wiper operation.

## FLASHER

### FLASHER : CONSULT-III Function

INFOID:000000001344650

Work support

Service item	Setting item	Setting
HAZARD ANSWER BACK	LOCK ONLY*	Activated when locking.
	UNLK ONLY	Activated when unlocking.
	LOCK/UNLK	Activated when locking/unlocking
	OFF	Not activated

\* : Initial setting

## Data monitor

Monitor item [Unit]	Description
TURN SIGNAL R [ON/OFF]	Each switch condition that BCM judges from the combination switch reading function
TURN SIGNAL L [ON/OFF]	
HAZARD SW [ON/OFF]	The switch status input from the hazard warning switch
RKE LOCK [ON/OFF]	The lock signal status received from the keyless receiver
RKE UNLOCK [ON/OFF]	The unlock signal status received from the keyless receiver
RKE PANIC [ON/OFF]	The panic alarm signal status received from the keyless receiver

## Active test

Test item	Operation	Description
FLASHER	RH	Blinks right turn signal lamp.
	LH	Blinks left turn signal lamp.
	OFF	Turns turn signal lamps (right and left) OFF.

## AIR CONDITIONER

### AIR CONDITIONER : CONSULT-III Function (BCM - AUTO AIR CONDITIONER)

INFOID:000000003183910

## DATA MONITOR

# DIAGNOSIS SYSTEM (BCM)

[BCM]

< FUNCTION DIAGNOSIS >

Monitor Item [Unit]	Contents
IGN ON SW [ON/OFF]	Display [ignition switch position (On)/(Off), ACC position (Off)] status as judged from ignition switch signal
FAN ON SIG [ON/OFF]	Display [FAN (On)/FAN (Off)] status as judged from blower fan motor switch signal
AIR COND SW [ON/OFF]	Display [COMP (On)/COMP (Off)] status as judged from air conditioner switch signal

## INTELLIGENT KEY

### INTELLIGENT KEY : CONSULT-III Function (BCM - INTELLIGENT KEY)

INFOID:0000000003183911

#### DATA MONITOR

Monitor Item [Unit]	Condition
PUSH SW [ON/OFF]	Indicates condition of ignition knob switch
I-KEY LOCK [ON/OFF]	Indicates condition of lock signal from Intelligent Key
I-KEY UNLOCK [ON/OFF]	Indicates [condition of unlock signal from Intelligent Key
I-KEY PW DWN [ON/OFF]	Indicates condition of all power window signal from Intelligent Key
I-KEY TRUNK [ON/OFF]	Indicates condition of trunk open signal from Intelligent Key
I-KEY PANIC [ON/OFF]	Indicates condition of panic signal from Intelligent Key

## COMB SW

### COMB SW : CONSULT-III Function

INFOID:0000000001344651

#### DATA MONITOR

Monitor item [UNIT]	Description
FR WIPER HI [OFF/ON]	Displays the status of the FR WIPER HI switch in combination switch judged by BCM with the combination switch reading function.
FR WIPER LOW [OFF/ON]	Displays the status of the FR WIPER LOW switch in combination switch judged by BCM with the combination switch reading function.
FR WASHER SW [OFF/ON]	Displays the status of the FR WASHER switch in combination switch judged by BCM with the combination switch reading function.
FR WIPER INT [OFF/ON]	Displays the status of the FR WIPER INT switch in combination switch judged by BCM with the combination switch reading function.
FR WIPER STOP [OFF/ON]	Displays the status of the front wiper stop position signal received from IPDM E/R via CAN communication.
INT VOLUME [1 - 7]	Displays the status of wiper intermittent dial position judged by BCM with the combination switch reading function
TURN SIGNAL R [OFF/ON]	Displays the status of the TURN RH switch in combination switch judged by BCM with the combination switch reading function.
TURN SIGNAL L [OFF/ON]	Displays the status of the TURN LH switch in combination switch judged by BCM with the combination switch reading function.
TAIL LAMP SW [OFF/ON]	Displays the status of the TAIL LAMP switch in combination switch judged by BCM with the combination switch reading function.
HI BEAM SW [OFF/ON]	Displays the status of the HI BEAM switch in combination switch judged by BCM with the combination switch reading function.
HEAD LAMP SW 1 [OFF/ON]	Displays the status of the HEADLAMP 1 switch in combination switch judged by BCM with the combination switch reading function.
HEAD LAMP SW 2 [OFF/ON]	Displays the status of the HEADLAMP 2 switch in combination switch judged by BCM with the combination switch reading function.

# DIAGNOSIS SYSTEM (BCM)

[BCM]

## < FUNCTION DIAGNOSIS >

Monitor item [UNIT]	Description
PASSING SW [OFF/ON]	Displays the status of the PASSING switch in combination switch judged by BCM with the combination switch reading function.
AUTO LIGHT SW* [OFF/ON]	Displays the status of the AUTO LIGHT switch in combination switch judged by BCM with the combination switch reading function.
FR FOG SW [OFF/ON]	Displays the status of the FR FOG switch in combination switch judged by BCM with the combination switch reading function.

\*: With autolamp system

## BCM

### BCM : CONSULT-III Function (BCM - BCM)

INFOID:0000000003183912

## WORK SUPPORT

Item	Description
RESET SETTING VALUE	Return a value set with WORK SUPPORT of each system to a default value in factory shipment.

## IMMU

### IMMU : CONSULT-III Function (BCM - IMMU)

INFOID:0000000003183913

## DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [ON/OFF]	Indicates condition of ignition switch in ON position.

## ACTIVE TEST

Test Item	Description
THEFT IND	This test is able to check security indicator operation [ON/OFF].

## BATTERY SAVER

### BATTERY SAVER : CONSULT-III Function

INFOID:0000000001344653

## WORK SUPPORT

Service item	Setting item	Setting	
BATTERY SAVER SET	ON*	With the exterior lamp battery saver function	
	OFF	Without the exterior lamp battery saver function	
ROOM LAMP BAT SAV SET	ON*	With the interior room lamp battery saver function	
	OFF	Without the interior room lamp battery saver function	
ROOM LAMP TIMER SET	MODE 1*	30 min.	Sets the interior room lamp battery saver timer operating time.
	MODE 2	60 min.	

\* : Initial setting

## DATA MONITOR

Monitor item [Unit]	Description
REQ SW-DR [ON/OFF]	The switch status input from request switch (driver side)
REQ SW-AS [ON/OFF]	The switch status input from front request switch (passenger side)

A

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P

BCS

# DIAGNOSIS SYSTEM (BCM)

[BCM]

< FUNCTION DIAGNOSIS >

Monitor item [Unit]	Description
PUSH SW [ON/OFF]	The switch status input from push-button ignition switch
KEY SW-SLOT [ON/OFF]	Key switch status input from key slot
DOOR SW-DR [ON/OFF]	The switch status input from front door switch LH
DOOR SW-AS [ON/OFF]	The switch status input from front door switch RH
DOOR SW-RR [ON/OFF]	The switch status input from rear door switch RH
DOOR SW-RL [ON/OFF]	The switch status input from rear door switch LH
DOOR SW-BK [ON/OFF]	<b>NOTE:</b> The item is indicated, not monitored.
CDL LOCK SW [ON/OFF]	Lock switch status received from central door lock switch by power window switch serial link
CDL UNLOCK SW [ON/OFF]	Unlock switch status received from central door lock switch by power window switch serial link
KEY CYL LK-SW [ON/OFF]	Lock switch status received from key cylinder switch by power window switch serial link
KEY CYL UN-SW [ON/OFF]	Unlock switch status received from key cylinder switch by power window switch serial link
TRNK/HAT MNTR [ON/OFF]	The switch status input from trunk room lamp switch
RKE-LOCK [ON/OFF]	Lock signal status received from remote keyless entry receiver
RKE-UNLOCK [ON/OFF]	Unlock signal status received from remote keyless entry receiver

## ACTIVE TEST

Test item	Operation	Description
BATTERY SAVER	OFF	Cuts the interior room lamp power supply to turn interior room lamp OFF.
	ON	Outputs the interior room lamp power supply to turn interior room lamp ON.*

\* : Each lamp switch is in ON position.

## TRUNK

### TRUNK : CONSULT-III Function (BCM - TRUNK)

INFOID:000000003183914

## DATA MONITOR

Monitor Item [Unit]	Contents
IGN ON SW [ON/OFF]	Indicates condition of ignition switch in ON position
I-KEY TRUNK [ON/OFF]	Indicates condition of Intelligent Key back door opening operation
TRUNK OPNR SW [ON/OFF]	Indicates condition of back door opener switch.
VEHICLE SPEED [ON/OFF]	Indicates condition of vehicle speed signal from combination meter

## ACTIVE TEST

# DIAGNOSIS SYSTEM (BCM)

[BCM]

< FUNCTION DIAGNOSIS >

Test Item	Description
TRUNK/BACK DOOR	This test is able to check back door open operation. Back door open when "OPEN" on CONSULT-III screen is touched.

A

## THEFT ALM

### THEFT ALM : CONSULT-III Function (BCM - THEFT ALM)

INFOID:0000000003183915

B

## WORK SUPPORT

Work Item	Description
SECURITY ALARM SET	Vehicle security function mode can be changed in this mode. • ON: Vehicle security function is ON. • OFF: Vehicle security function is OFF.

C

## RETAINED PWR

### RETAINED PWR : CONSULT-III Function (BCM - RETAINED PWR)

INFOID:0000000003183916

F

## Data monitor

Monitor Item [Unit]	Description
DOOR SW-DR [ON/OFF]	Indicates condition of front door switch LH.
DOOR SW-AS [ON/OFF]	Indicates condition of front door switch RH.

G

## SIGNAL BUFFER

### SIGNAL BUFFER : CONSULT-III Function

INFOID:0000000001344654

H

## DATA MONITOR

Monitor item [UNIT]	Description
PUSH SW [OFF/ON]	Displays the status of the push-button ignition switch (push switch) judged by BCM.

I

## ACTIVE TEST

Test item	Operation	
OIL PRESSURE SW	OFF	OFF
	ON	BCM transmits the oil pressure switch signal to the combination meter via CAN communication, which illuminates the oil pressure warning lamp.

J

## AIR PRESSURE MONITOR

### AIR PRESSURE MONITOR : Diagnosis Description

INFOID:0000000001344655

K

## DESCRIPTION

During driving, the TPMS receives the signal transmitted from the transmitter installed in each wheel, when the tire pressure becomes low. The control unit (BCM) of this system has pressure judgment and trouble diagnosis functions.

L

When the TPMS detects low inflation pressure or another unusual symptom, the warning lamps in the combination meter comes on.

M

## SELF DIAGNOSTIC PROCEDURE (WITH CONSULT-III)

With CONSULT-III

N

O

P

# DIAGNOSIS SYSTEM (BCM)

[BCM]

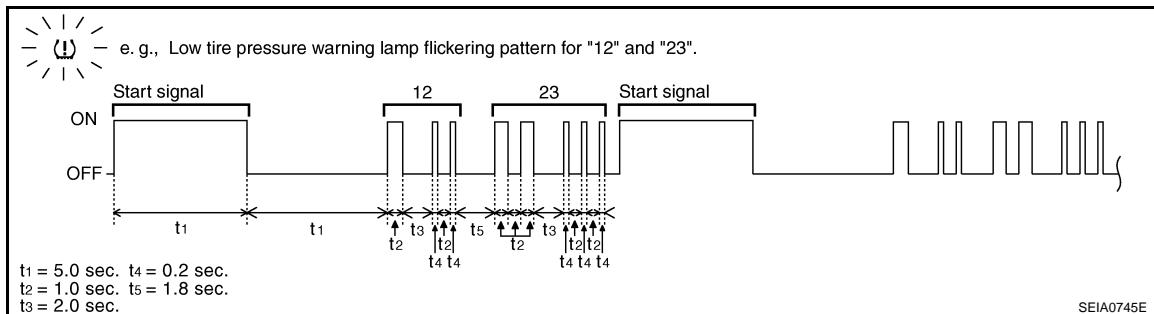
## < FUNCTION DIAGNOSIS >

- Touch "SELF-DIAG RESULTS" display shows malfunction experienced since the last erasing operation. Refer to [BCS-85, "DTC Index"](#).

## SELF DIAGNOSTIC PROCEDURE (WITHOUT CONSULT-III)

Without CONSULT-III

To start the self-diagnostic results mode, ground terminal of the tire pressure warning check connector. The malfunction location is indicated by the warning lamp flashing.



### NOTE:

When the low tire warning lamp flashes 5 Hz and continues repeating it, the system is normal.

Flickering pattern	Items	Diagnostic items detected when...	Check item
15	Tire pressure value (Front LH)	Front LH tire pressure drops to 181 kPa (1.8 kg/cm, 26 psi) or less.	
16	Tire pressure value (Front RH)	Front RH tire pressure drops to 181 kPa (1.8 kg/cm, 26 psi) or less.	
17	Tire pressure value (Rear RH)	Rear RH tire pressure drops to 181 kPa (1.8 kg/cm, 26 psi) or less.	
18	Tire pressure value (Rear LH)	Rear LH tire pressure drops to 181 kPa (1.8 kg/cm, 26 psi) or less.	
21	Transmitter no data (Front LH)	Data from front LH transmitter can not be received.	
22	Transmitter no data (Front RH)	Data from front RH transmitter can not be received.	
23	Transmitter no data (Rear RH)	Data from Rear RH transmitter can not be received.	WT-24
24	Transmitter no data (Rear LH)	Data from Rear LH transmitter can not be received.	
31	Transmitter checksum error (Front LH)	Checksum data from front LH transmitter is malfunctioning.	
32	Transmitter checksum error (Front RH)	Checksum data from front RH transmitter is malfunctioning.	WT-24
33	Transmitter checksum error (Rear RH)	Checksum data from rear RH transmitter is malfunctioning.	
34	Transmitter checksum error (Rear LH)	Checksum data from rear RH transmitter is malfunctioning.	
35	Transmitter pressure data error (Front LH)	Air pressure data from front LH transmitter is malfunction.	
36	Transmitter pressure data error (Front RH)	Air pressure data from front RH transmitter is malfunction.	
37	Transmitter pressure data error (Rear RH)	Air pressure data from rear RH transmitter is malfunction.	WT-24
38	Transmitter pressure data error (Rear LH)	Air pressure data from rear LH transmitter is malfunction.	
41	Transmitter function code error (Front LH)	Function code data from front LH transmitter is malfunction.	
42	Transmitter function code error (Front RH)	Function code data from front RH transmitter is malfunction.	
43	Transmitter function code error (Rear RH)	Function code data from rear RH transmitter is malfunction.	WT-24
44	Transmitter function code error (Rear LH)	Function code data from rear LH transmitter is malfunction.	

# DIAGNOSIS SYSTEM (BCM)

[BCM]

< FUNCTION DIAGNOSIS >

Flickering pattern	Items	Diagnostic items detected when...	Check item
45	Transmitter battery voltage low (Front LH)	Battery voltage of front LH transmitter drops.	WT-24
46	Transmitter battery voltage low (Front RH)	Battery voltage of front RH transmitter drops.	
47	Transmitter battery voltage low (Rear RH)	Battery voltage of rear RH transmitter drops.	
48	Transmitter battery voltage low (Rear LH)	Battery voltage of rear LH transmitter drops.	
52	Vehicle speed signal error	Speed signal is not detected.	WT-24
53	BCM failure about TPMS	Tire pressure monitoring system malfunction in BCM	WT-24
No flickering	Tire pressure warning check switch	Tire pressure warning switch circuit is open.	–

## ERASE SELF-DIAGNOSIS

With CONSULT-III

1. Perform applicable inspection of malfunctioning item and then repair or replace.
2. Turn ignition switch "ON" and select "SELF-DIAG RESULTS" mode for "AIR PRESSURE MONITOR" with CONSULT-III.
3. Touch "ERASE" on CONSULT-III screen to erase memory.

Without CONSULT-III

- In order to make it easier to find the cause of hard-to-duplicate malfunctions, malfunction information is stored into the control unit as necessary during use by the user. This memory is not erased no matter how many times the ignition switch is turned "ON" and "OFF".
- However, this information is erased by turning ignition switch "OFF" after performing self-diagnostic or by erasing the memory using the CONSULT-III.

## AIR PRESSURE MONITOR : CONSULT-III Function

INFOID:000000001344656

### WORK SUPPORT MODE

ID Read

The registered ID number is displayed.

ID Regist

Refer to [WT-6, "ID Registration Procedure"](#).

### SELF-DIAG RESULTS MODE

Operation Procedure

Refer to [BCS-85, "DTC Index"](#).

BCS

### DATA MONITOR MODE

Screen of data monitor mode is displayed. Refer to [BCS-41, "Reference Value"](#).

#### NOTE:

When malfunction is detected, CONSULT-III perform REAL-TIME DIAGNOSIS. Also, any malfunction detected while in this mode will be displayed at real time.

### ACTIVE TEST MODE

#### NOTE:

Before performing the self-diagnosis, be sure to register the ID, or else the actual malfunction may be different from that displayed on CONSULT-III.

### TEST ITEM LIST

Test item	Content
WARNING LAMP	This test is able to check to make sure that the warning lamp turns on.
ID REGIST WARNING	This test is able to check to make sure that the buzzer sounds or the warning lamp turns on.

# DIAGNOSIS SYSTEM (BCM)

[BCM]

< FUNCTION DIAGNOSIS >

Test item	Content
FLASHER	This test is able to check to make sure that each turn signal lamp turns on.
HORN	This test is able to check to make sure that the horn sounds.

## FUSE, FUSIBLE LINK

### FUSE, FUSIBLE LINK : CONSULT-III Function

INFOID:000000001344652

## WORK SUPPORT

Item	Description
RESET SETTING VALUE	Return a value set with WORK SUPPORT of each system to a default value in factory shipment.

&lt; COMPONENT DIAGNOSIS &gt;

# COMPONENT DIAGNOSIS

## U1000 CAN COMM CIRCUIT

### Description

INFOID:0000000001344657

Refer to [LAN-7, "System Description"](#).

### DTC Logic

INFOID:0000000001344658

### DTCT DETECTION LOGIC

CONSULT-III display description	DTCT Detection Condition	Possible cause
CAN COMM CIRCUIT [U1000]	When any listed module cannot communicate CAN communication signal continuously for 2 seconds or more with ignition switch ON	<p>In CAN communication system, any item (or items) of the following listed below is malfunctioning.</p> <ul style="list-style-type: none"> <li>• Transmission</li> <li>• Receiving (ECM)</li> <li>• Receiving (VDC/TCS/ABS)</li> <li>• Receiving (METER/M&amp;A)</li> <li>• Receiving (TCM)</li> <li>• Receiving (IPDM E/R)</li> </ul>

### Diagnosis Procedure

INFOID:0000000001344659

#### 1. PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 second or more.
2. Check "SELF- DIAG RESULTS".

Is "CAN COMM CIRCUIT" displayed?

- YES    >> Refer to [LAN-8, "CAN Communication Control Circuit"](#).  
 NO    >> Refer to [GI-42, "Intermittent Incident"](#).

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

# U1010 CONTROL UNIT (CAN)

[BCM]

< COMPONENT DIAGNOSIS >

## U1010 CONTROL UNIT (CAN)

### DTC Logic

INFOID:0000000001344660

#### DTC DETECTION LOGIC

CONSULT-III display description	DTC Detection Condition	Possible cause
CAN COMM CIRCUIT [U1010]	BCM detected internal CAN communication circuit malfunction.	BCM

#### Diagnosis Procedure

INFOID:0000000001344661

##### 1. REPLACE BCM

When DTC U1010 is detected, replace BCM.

>> Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).

&lt; COMPONENT DIAGNOSIS &gt;

**U0415 VEHICLE SPEED SIG****Description**

INFOID:0000000001344662

U0415 is displayed if any unusual condition is present in the reception status of the vehicle speed signal from the ABS actuator and electric unit (control unit).

**DTC Logic**

INFOID:0000000001344663

**DTC DETECTION LOGIC**

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
U0415	VEHICLE SPEED SIG [U0415]	When the vehicle speed signal received from the ABS actuator and electric unit (control unit) remains abnormal for 2 seconds or more.	<ul style="list-style-type: none"> <li>• ABS actuator and electric unit (control unit)</li> <li>• BCM</li> </ul>

**DTC CONFIRMATION PROCEDURE****1. DTC CONFIRMATION**

1. Erase the DTC.
2. Turn ignition switch OFF.
3. Perform the "SELF-DIAG RESULTS" of CONSULT-III, after the ignition switch has been turned ON for 2 seconds or more.

Is any DTC detected?

- YES    >> Refer to [BCS-85, "DTC Index"](#).  
 NO    >> Inspection End.

**Diagnosis Procedure**

INFOID:0000000001344664

**1. ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAG RESULTS**

Perform "SELF-DIAG RESULTS" of ABS actuator and electric unit (control unit) with CONSULT-III. Refer to [BCR-12, "CONSULT-III Function \(ABS\)"](#).

Is any DTC detected?

- YES    >> Repair or replace the malfunctioning part.  
 NO    >> Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).

BCS

&lt; COMPONENT DIAGNOSIS &gt;

**B2562 LOW VOLTAGE****DTC Logic**

INFOID:0000000001344665

**DTC DETECTION LOGIC**

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Possible cause
B2562	LOW VOLTAGE	When the power supply voltage to BCM remains less than 8.8 V for 1.5 seconds or more	Harness or connector (power supply circuit)

**DTC CONFIRMATION PROCEDURE****1. DTC CONFIRMATION**

1. Erase DTC.
2. Turn ignition switch OFF.
3. Perform the "SELF-DIAG RESULTS" of CONSULT-III, after the ignition switch has been turned ON for 1.5 seconds or more.

Is any DTC detected?YES    >> Refer to [BCS-34. "Diagnosis Procedure"](#).

NO      &gt;&gt; Inspection End.

**Diagnosis Procedure**

INFOID:0000000001344666

**1. CHECK BATTERY VOLTAGE**

Check battery voltage.

Is battery voltage less than 8.8V?Yes    >> Charge battery and retest. Refer to [PG-70, "Work Flow"](#).

No      &gt;&gt; GO TO 2

**2. CHECK POWER SUPPLY CIRCUIT**Check BCM power supply circuit. Refer to [BCS-36, "Diagnosis Procedure"](#).Is the circuit OK?Yes    >> Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).

No      &gt;&gt; Repair or replace the malfunctioning part.

**Special Repair Requirement**

INFOID:0000000001344667

**1. REQUIRED WORK WHEN REPLACING BCM**

Initialize control unit. Refer to CONSULT-III Operation Manual.

&gt;&gt; Work end.

&lt; COMPONENT DIAGNOSIS &gt;

**B2563 HI VOLTAGE****DTC Logic**

INFOID:0000000001344668

**DTC DETECTION LOGIC**

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Possible cause
B2563	HI VOLTAGE	When the power supply voltage to BCM remains more than 18 V for 90 seconds or more	Harness or connector (power supply circuit)

**DTC CONFIRMATION PROCEDURE****1. DTC CONFIRMATION**

1. Erase DTC.
2. Turn ignition switch OFF.
3. Perform the "SELF-DIAG RESULTS" of CONSULT-III, after the ignition switch has been turned on for 90 seconds or more.

Is any DTC detected?YES    >> Refer to [BCS-35, "Diagnosis Procedure"](#).

NO      &gt;&gt; Inspection End.

**Diagnosis Procedure**

INFOID:0000000001344669

**1. CHECK BATTERY VOLTAGE**

Check battery voltage.

Is battery voltage greater than 18V?Yes    >> Check vehicle battery charging system. Refer to [PG-70, "Work Flow"](#).

No      &gt;&gt; GO TO 2

**2.CHECK POWER SUPPLY CIRCUIT**Check BCM power supply circuit. Refer to [BCS-36, "Diagnosis Procedure"](#).Is the circuit OK?Yes    >> Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).

No      &gt;&gt; Repair or replace the malfunctioning part.

**Special Repair Requirement**

INFOID:0000000001344670

**1. REQUIRED WORK WHEN REPLACING BCM**

Initialize control unit. Refer to CONSULT-III Operation Manual.

BCS

&gt;&gt; Work end.

N

O

P

# POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

[BCM]

## POWER SUPPLY AND GROUND CIRCUIT

### Diagnosis Procedure

INFOID:0000000001344671

#### 1. CHECK FUSE AND FUSIBLE LINK

Check if the following BCM fuse or fusible link are blown.

Terminal No.	Signal name	Fuse and fusible link No.
1		I
11	Battery power supply	10

Is the fuse or fusible link blown?

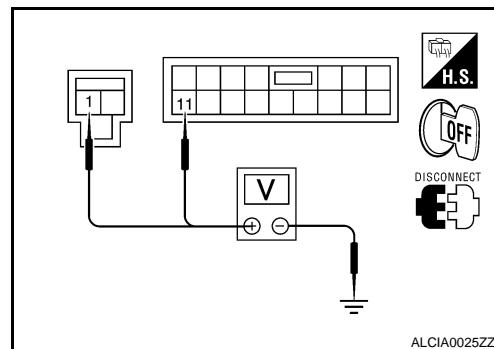
YES >> Replace the blown fuse or fusible link after repairing the affected circuit.

NO >> GO TO 2

#### 2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM.
3. Check voltage between BCM harness connector and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
BCM		Ground
Connector	Terminal	
M16	1	
M17	11	Battery voltage



Is the measurement normal?

YES >> GO TO 3

NO >> Repair or replace harness.

#### 3. CHECK GROUND CIRCUIT

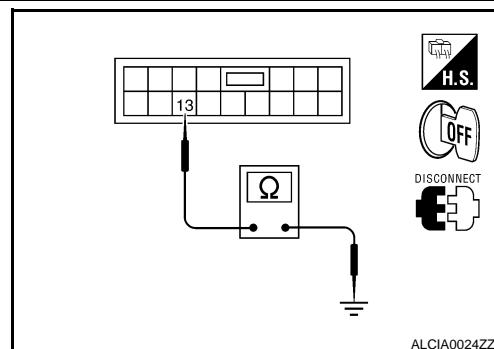
Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M17	13		Yes

Does continuity exist?

YES >> Inspection End.

NO >> Repair or replace harness.



### Special Repair Requirement

INFOID:0000000001344672

#### 1. REQUIRED WORK WHEN REPLACING BCM

Initialize control unit. Refer to CONSULT-III Operation Manual.

>> Work end.

# COMBINATION SWITCH INPUT CIRCUIT

[BCM]

< COMPONENT DIAGNOSIS >

## COMBINATION SWITCH INPUT CIRCUIT

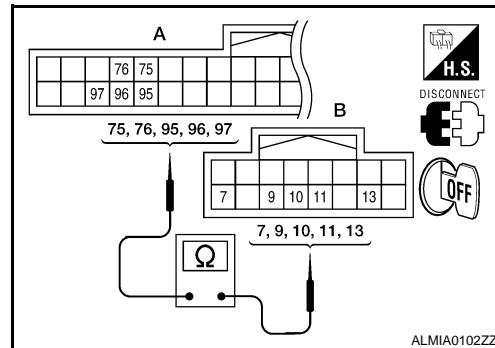
### Diagnosis Procedure

INFOID:0000000001344673

#### 1. CHECK INPUT 1 - 5 SYSTEM CIRCUIT FOR OPEN

1. Turn the ignition switch OFF.
2. Disconnect the BCM and combination switch.
3. Check continuity between BCM harness connector and combination switch harness connector.

System	BCM		Combination switch		Continuity
	Connector	Terminal	Connector	Terminal	
INPUT 1	M19 (A)	95	M28 (B)	11	Yes
INPUT 2		97		9	
INPUT 3		76		7	
INPUT 4		96		10	
INPUT 5		75		13	



Does continuity exist?


YES >> GO TO 2

NO >> Repair or replace harness.

#### 2. CHECK INPUT 1 - 5 SYSTEM CIRCUIT FOR SHORT

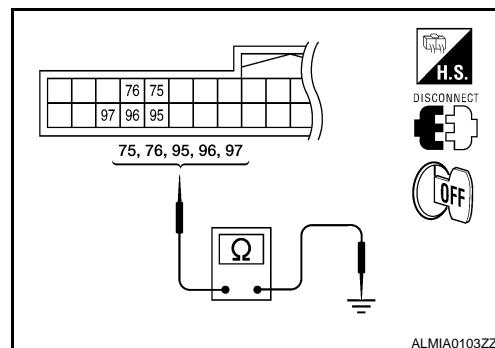Check for continuity between BCM harness connector and ground.

System	BCM		Continuity
	Connector	Terminal	
INPUT 1	M19	95	No
INPUT 2		97	
INPUT 3		76	
INPUT 4		96	
INPUT 5		75	



Does continuity exist?


YES >> Repair or replace harness.

NO >> GO TO 3

#### 3. CHECK BCM OUTPUT VOLTAGE

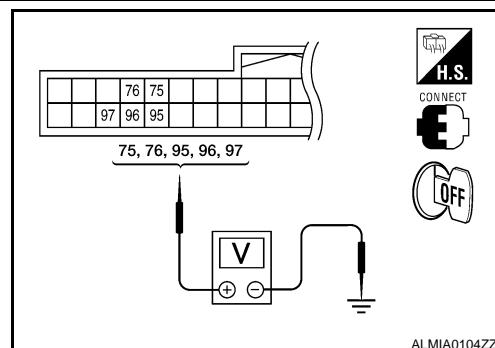1. Connect the BCM.
2. Check voltage between BCM harness connector and ground.

System	Terminals			Voltage (Approx.)			
	(+) (-)		Ground				
	BCM						
	Connector	Terminal					
INPUT 1	M19	95	Refer to BCS-45, "Physical Values".				
INPUT 2		97					
INPUT 3		76					
INPUT 4		96					
INPUT 5		75					



Is the measurement normal?

YES >> GO TO 4

# COMBINATION SWITCH INPUT CIRCUIT

[BCM]

< COMPONENT DIAGNOSIS >

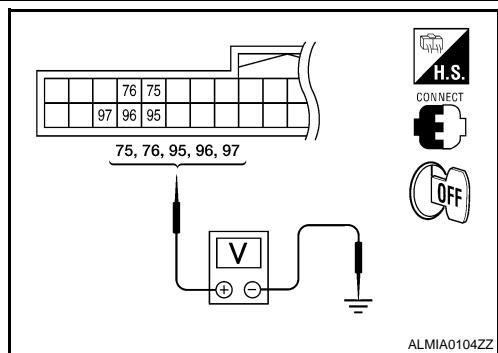
NO    >> Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).

## 4. CHECK BCM INPUT SIGNAL

1. Connect the combination switch.
2. Turn ON any switch in the system that is malfunctioning.
3. Check voltage between BCM harness connector and ground.

System	Terminals		Voltage (Approx.)
	(+)	(-)	
	BCM		
INPUT 1	M19	Connector	Terminal
			95
			97
			76
			96
INPUT 2			75
INPUT 3			
INPUT 4			
INPUT 5			

Refer to [BCS-45, "Physical Values"](#).



Is the measurement normal when any of the switches is turned ON?

YES    >> Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).

NO    >> Replace the combination switch. Refer to [WW-46, "Removal and Installation"](#).

## Special Repair Requirement

INFOID:0000000001344674

### 1. REQUIRED WORK WHEN REPLACING BCM

Initialize control unit. Refer to CONSULT-III Operation Manual.

>> Work end.

# COMBINATION SWITCH OUTPUT CIRCUIT

[BCM]

< COMPONENT DIAGNOSIS >

## COMBINATION SWITCH OUTPUT CIRCUIT

### Diagnosis Procedure

INFOID:0000000001344675

#### 1. CHECK OUTPUT 1 - 5 SYSTEM CIRCUIT FOR OPEN

1. Turn the ignition switch OFF.
2. Disconnect the BCM and combination switch.
3. Check continuity between BCM harness connector and combination switch harness connector.

System	BCM		Combination switch		Continuity
	Connector	Terminal	Connector	Terminal	
OUTPUT 1	M18 (A)	51	M28 (B)	12	Yes
OUTPUT 2		52		14	
OUTPUT 3		53		5	
OUTPUT 4		54		2	
OUTPUT 5		50		8	

Does continuity exist?

YES >> GO TO 2

NO >> Repair or replace harness.

#### 2. CHECK OUTPUT 1 - 5 SYSTEM CIRCUIT FOR SHORT

Check for continuity between BCM harness connector and ground.

System	BCM		Continuity
	Connector	Terminal	
OUTPUT 1	M18	51	No
OUTPUT 2		52	
OUTPUT 3		53	
OUTPUT 4		54	
OUTPUT 5		50	

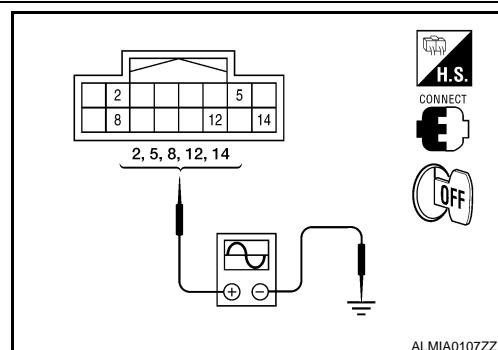
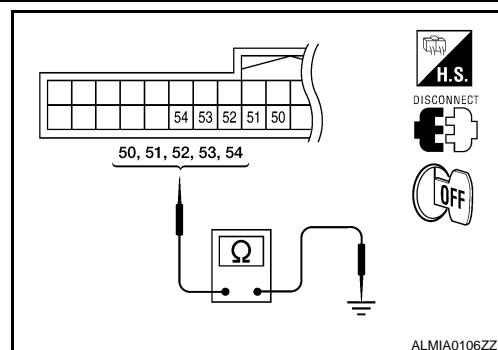
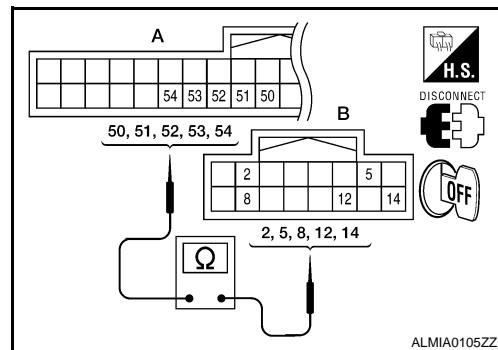
Does continuity exist?

YES >> Repair or replace harness.

NO >> GO TO 3

#### 3. CHECK COMBINATION SWITCH OUTPUT VOLTAGE

1. Connect the BCM and combination switch.
2. Turn ON any switch in the system that is malfunctioning.
3. Check voltage between combination switch harness connector and ground.




BCS

# COMBINATION SWITCH OUTPUT CIRCUIT
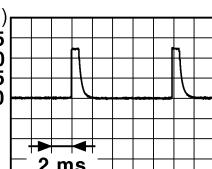
< COMPONENT DIAGNOSIS >

[BCM]

System	Terminals		Value (Approx.)
	(+)	(-)	
	Combination switch	Connec-tor	
OUTPUT 1	M28	12	Value (Approx.)  JPMIA0041GB 1.4 V
OUTPUT 2		14	
OUTPUT 3		5	
OUTPUT 4		2	
OUTPUT 5		8	

Is the measurement normal when any of the switches is turned ON?

YES    >> Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).

NO      >> Replace the combination switch. Refer to [WW-46, "Removal and Installation"](#).

## Special Repair Requirement

INFOID:0000000001344676

### 1. REQUIRED WORK WHEN REPLACING BCM

Initialize control unit. Refer to CONSULT-III Operation Manual.

>> Work end.

# BCM (BODY CONTROL MODULE)

[BCM]

< ECU DIAGNOSIS >

## ECU DIAGNOSIS

### BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000001344677

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

### VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	OFF
	Front wiper switch HI	ON
FR WIPER LOW	Other than front wiper switch LO	OFF
	Front wiper switch LO	ON
FR WASHER SW	Front washer switch OFF	OFF
	Front washer switch ON	ON
FR WIPER INT	Other than front wiper switch INT	OFF
	Front wiper switch INT	ON
FR WIPER STOP	Front wiper is not in STOP position	OFF
	Front wiper is in STOP position	ON
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	Wiper intermittent dial position
TURN SIGNAL R	Other than turn signal switch RH	OFF
	Turn signal switch RH	ON
TURN SIGNAL L	Other than turn signal switch LH	OFF
	Turn signal switch LH	ON
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	OFF
	Lighting switch 1ST or 2ND	ON
HI BEAM SW	Other than lighting switch HI	OFF
	Lighting switch HI	ON
HEAD LAMP SW 1	Other than lighting switch 2ND	OFF
	Lighting switch 2ND	ON
HEAD LAMP SW 2	Other than lighting switch 2ND	OFF
	Lighting switch 2ND	ON
PASSING SW	Other than lighting switch PASS	OFF
	Lighting switch PASS	ON
AUTO LIGHT SW	Other than lighting switch AUTO	OFF
	Lighting switch AUTO	ON
FR FOG SW	Front fog lamp switch OFF	OFF
	Front fog lamp switch ON	ON
DOOR SW-DR	Driver door closed	OFF
	Driver door opened	ON
DOOR SW-AS	Passenger door closed	OFF
	Passenger door opened	ON
DOOR SW-RR	Rear door RH closed	OFF
	Rear door RH opened	ON
DOOR SW-RL	Rear door LH closed	OFF
	Rear door LH opened	ON

# BCM (BODY CONTROL MODULE)

[BCM]

< ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
DOOR SW-BK	<b>NOTE:</b> This item is displayed, but cannot be monitored.	OFF
CDL LOCK SW	Other than power door lock switch LOCK	OFF
	Power door lock switch LOCK	ON
CDL UNLOCK SW	Other than power door lock switch UNLOCK	OFF
	Power door lock switch UNLOCK	ON
KEY CYL LK-SW	Other than driver door key cylinder LOCK position	OFF
	Driver door key cylinder LOCK position	ON
KEY CYL UN-SW	Other than driver door key cylinder UNLOCK position	OFF
	Driver door key cylinder UNLOCK position	ON
KEY CYL SW-TR	<b>NOTE:</b> This item is displayed, but cannot be monitored.	OFF
HAZARD SW	When hazard switch is not pressed	OFF
	When hazard switch is pressed	ON
REAR DEF SW	When rear window defogger switch is pressed	ON
FAN ON SIG	When AUTO switch or fan switch is pressed	ON
AIR COND SW	When A/C switch is pressed	ON
TR CANCEL SW	Trunk lid opener cancel switch OFF	OFF
	Trunk lid opener cancel switch ON	ON
TR/BD OPEN SW	Trunk lid opener switch OFF	OFF
	While the trunk lid opener switch is turned ON	ON
TRNK/HAT MNTR	Trunk lid closed	OFF
	Trunk lid opened	ON
RKE-LOCK	When LOCK button of Intelligent Key is not pressed	OFF
	When LOCK button of Intelligent Key is pressed	ON
RKE-UNLOCK	When UNLOCK button of Intelligent Key is not pressed	OFF
	When UNLOCK button of Intelligent Key is pressed	ON
RKE-TR/BD	When TRUNK OPEN button of Intelligent Key is not pressed	OFF
	When TRUNK OPEN button of Intelligent Key is pressed	ON
RKE-PANIC	When PANIC button of Intelligent Key is not pressed	OFF
	When PANIC button of Intelligent Key is pressed	ON
RKE-P/W OPEN	When UNLOCK button of Intelligent Key is not pressed and held	OFF
	When UNLOCK button of Intelligent Key is pressed and held	ON
RKE-MODE CHG	When LOCK/UNLOCK button of Intelligent Key is not pressed and held simultaneously	OFF
	When LOCK/UNLOCK button of Intelligent Key is pressed and held simultaneously	ON
OPTICAL (LIGHT) SEN-SOR	When outside of the vehicle is bright	Close to 5 V
	When outside of the vehicle is dark	Close to 0 V
REQ SW-DR	When driver door request switch is not pressed	OFF
	When driver door request switch is pressed	ON
REQ SW-AS	When passenger door request switch is not pressed	OFF
	When passenger door request switch is pressed	ON
REQ SW-BD/TR	When trunk request switch is not pressed	OFF
	When trunk request switch is pressed	ON

# BCM (BODY CONTROL MODULE)

[BCM]

< ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status	
PUSH SW	When engine switch (push switch) is not pressed	OFF	A
	When engine switch (push switch) is pressed	ON	
IGN RLY-F/B	Ignition switch OFF or ACC	OFF	B
	Ignition switch ON	ON	
ACC RLY-F/B	Ignition switch OFF	OFF	C
	Ignition switch ACC or ON	ON	
CLUTCH SW	When the clutch pedal is not depressed	OFF	D
	When the clutch pedal is depressed	ON	
BRAKE SW 1	When the brake pedal is not depressed	ON	E
	When the brake pedal is depressed	OFF	
DETE/CANCL SW	When selector lever is in P position	OFF	F
	When selector lever is in any position other than P	ON	
SFT PN/N SW	When selector lever is in any position other than P or N	OFF	G
	When selector lever is in P or N position	ON	
S/L-LOCK	Electronic steering column lock LOCK status	OFF	H
	Electronic steering column lock UNLOCK status	ON	
S/L-UNLOCK	Electronic steering column lock UNLOCK status	OFF	I
	Electronic steering column lock LOCK status	ON	
S/L RELAY-F/B	Ignition switch OFF or ACC	OFF	J
	Ignition switch ON	ON	
UNLK SEN-DR	Driver door UNLOCK status	OFF	K
	Driver door LOCK status	ON	
PUSH SW-IPDM	When engine switch (push switch) is not pressed	OFF	L
	When engine switch (push switch) is pressed	ON	
IGN RLY1 F/B	Ignition switch OFF or ACC	OFF	BCS
	Ignition switch ON	ON	
DETE SW -IPDM	When selector lever is in P position	OFF	N
	When selector lever is in any position other than P	ON	
SFT PN -IPDM	When selector lever is in any position other than P or N	OFF	O
	When selector lever is in P or N position	ON	
SFT P-MET	When selector lever is in any position other than P	OFF	P
	When selector lever is in P position	ON	
SFT N-MET	When selector lever is in any position other than N	OFF	
	When selector lever is in N position	ON	
ENGINE STATE	Engine stopped	STOP	
	While the engine stalls	STALL	
	At engine cranking	CRANK	
	Engine running	RUN	
S/L LOCK-IPDM	Electronic steering column lock LOCK status	OFF	
	Electronic steering column lock UNLOCK status	ON	
S/L UNLCK-IPDM	Electronic steering column lock UNLOCK status	OFF	
	Electronic steering column lock LOCK status	ON	
S/L RELAY-REQ	Ignition switch OFF or ACC	OFF	
	Ignition switch ON	ON	

# BCM (BODY CONTROL MODULE)

[BCM]

< ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
VEH SPEED 1	While driving	Equivalent to speedometer reading
VEH SPEED 2	While driving	Equivalent to speedometer reading
DR DOOR STATE	Driver door LOCK status	LOCK
	Wait with selective UNLOCK operation (5 seconds)	READY
	Driver door UNLOCK status	UNLK
AS DOOR STATE	Passenger door LOCK status	LOCK
	Wait with selective UNLOCK operation (5 seconds)	READY
	Passenger door UNLOCK status	UNLK
ID OK FLAG	Ignition switch ACC or ON	RESET
	Ignition switch OFF	SET
PRMT ENG STAT	When the engine start is prohibited	RESET
	When the engine start is permitted	SET
PRMT RKE STAT	<b>NOTE:</b> This item is displayed, but cannot be monitored.	RESET
KEY SW -SLOT	When Intelligent Key is not inserted into key slot	OFF
	When Intelligent Key is inserted into key slot	ON
RKE OPE COUN1	During the operation of Intelligent Key	Operation frequency of Intelligent Key
RKE OPE COUN2	<b>NOTE:</b> This item is displayed, but cannot be monitored.	Operation frequency of Intelligent Key
AIR PRESS FL	Ignition switch ON (only when the signal from the transmitter is received)	Air pressure of front LH tire
AIR PRESS FR	Ignition switch ON (only when the signal from the transmitter is received)	Air pressure of front RH tire
AIR PRESS RR	Ignition switch ON (only when the signal from the transmitter is received)	Air pressure of rear RH tire
AIR PRESS RL	Ignition switch ON (only when the signal from the transmitter is received)	Air pressure of rear LH tire
ID REGST FL1	When ID of front LH tire transmitter is registered	DONE
	When ID of front LH tire transmitter is not registered	YET
ID REGST FR1	When ID of front RH tire transmitter is registered	DONE
	When ID of front RH tire transmitter is not registered	YET
ID REGST RR1	When ID of rear RH tire transmitter is registered	DONE
	When ID of rear RH tire transmitter is not registered	YET
ID REGST RL1	When ID of rear LH tire transmitter is registered	DONE
	When ID of rear LH tire transmitter is not registered	YET
WARNING LAMP	Tire pressure indicator OFF	OFF
	Tire pressure indicator ON	ON

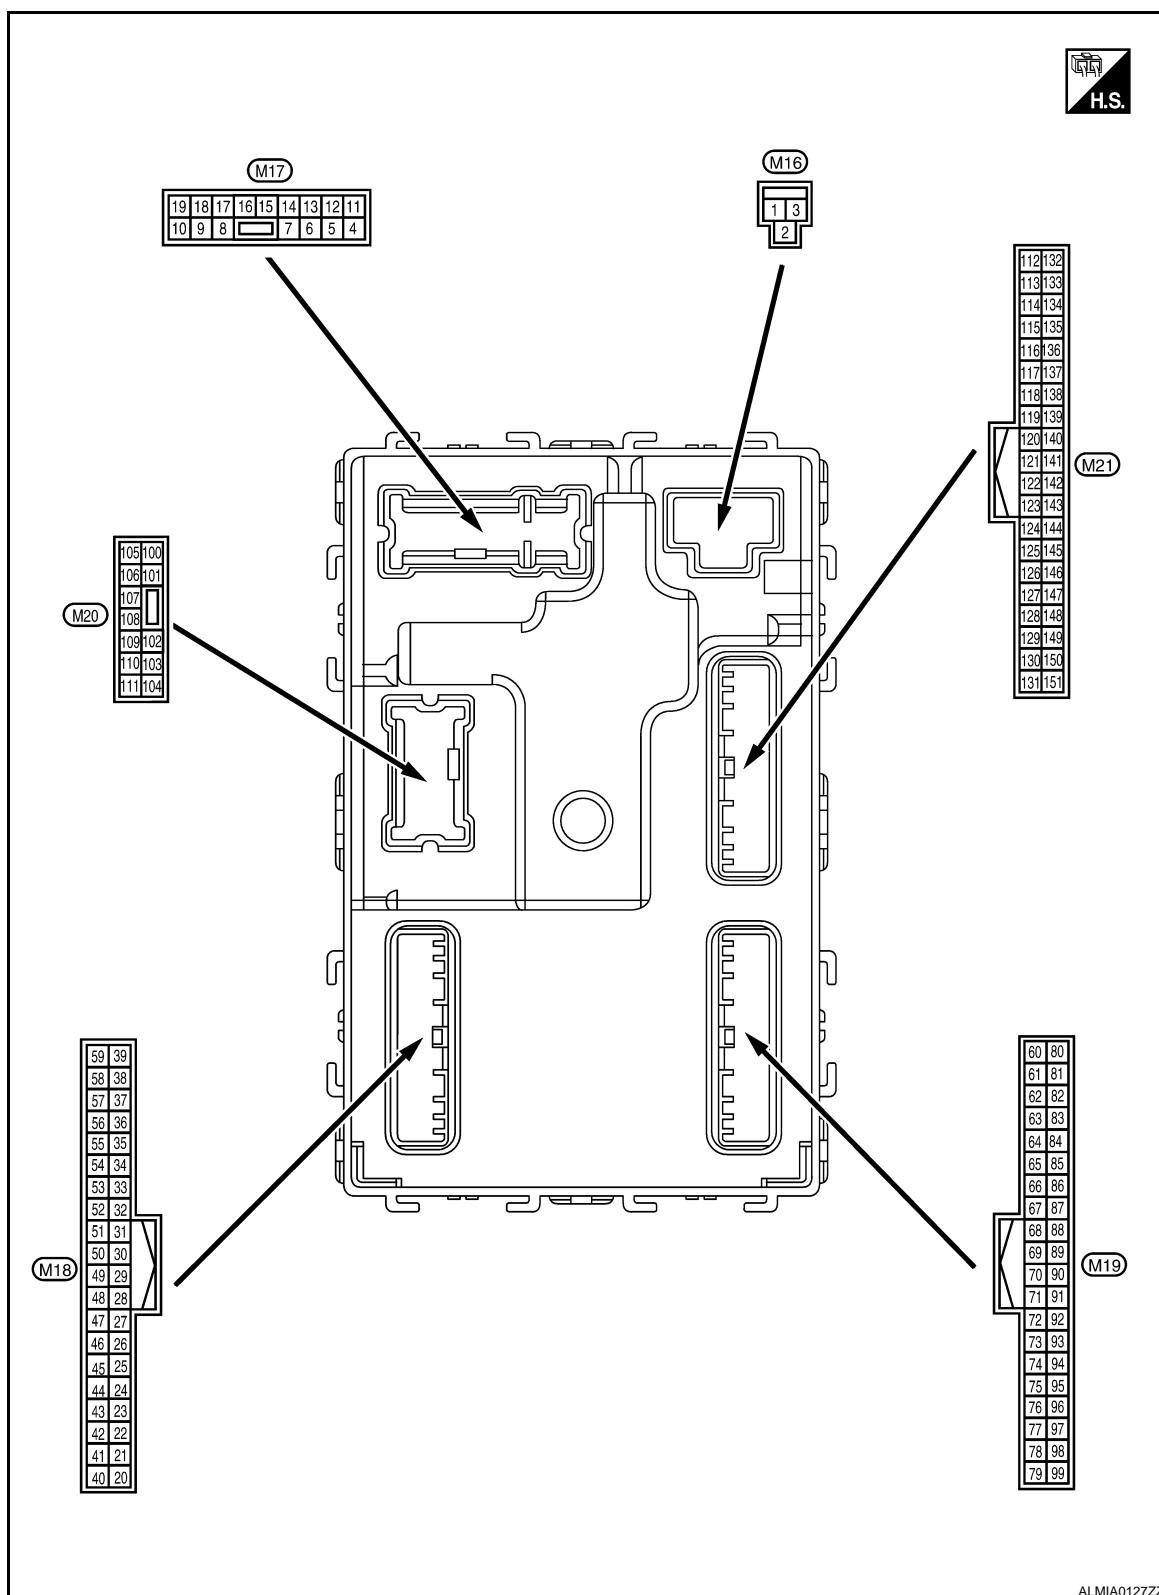
# BCM (BODY CONTROL MODULE)

[BCM]

< ECU DIAGNOSIS >

Terminal Layout

INFOID:0000000001344678




Physical Values

INFOID:0000000001344679

# BCM (BODY CONTROL MODULE)

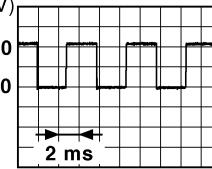[BCM]




< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
1 (W/B)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (R/Y)	Ground	Battery power supply output	Output	Ignition switch OFF		Battery voltage
3 (L/W)	Ground	Ignition power supply output	Output	Ignition switch ON		Battery voltage
4 (P/W)	Ground	Interior room lamp power supply	Output	After passing the interior room lamp battery saver operation time		0V
				Any other time after passing the interior room lamp battery saver operation time		Battery voltage
5 (G/Y)	Ground	Front door RH UN-LOCK	Output	Front door RH	UNLOCK (actuator is activated)	Battery voltage
					Other than UNLOCK (actuator is not activated)	0V
7 (R/W)	Ground	Step lamp	Output	Step lamp	ON	0V
					OFF	Battery voltage
8 (V)	Ground	All doors LOCK	Output	All doors	LOCK (actuator is activated)	Battery voltage
					Other than LOCK (actuator is not activated)	0V
9 (G)	Ground	Front door LH UN-LOCK	Output	Front door LH	UNLOCK (actuator is activated)	Battery voltage
					Other than UNLOCK (actuator is not activated)	0V
10 <sup>1</sup> (G/Y)	Ground	Rear door RH and rear door LH UN-LOCK	Output	Rear door RH and rear door LH	UNLOCK (actuator is activated)	Battery voltage
					Other than UNLOCK (actuator is not activated)	0V
11 (Y/R)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
13 (B)	Ground	Ground	—	Ignition switch ON		0V
14 (R/Y)	Ground	Engine switch (push switch) illumination ground	Input	Tail lamp	OFF	0V
					ON	<b>NOTE:</b> When the illumination brightening/dimming level is in the neutral position  JSNIA0010GB
15 (Y/L)	Ground	ACC indicator lamp	Output	Ignition switch	OFF	Battery voltage
					ACC or ON	0V

# BCM (BODY CONTROL MODULE)

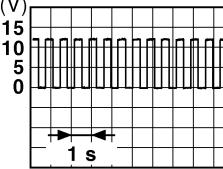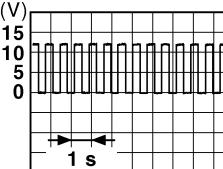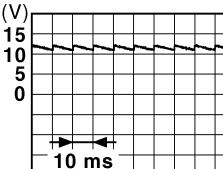[BCM]

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
17 (G/B)	Ground	Turn signal (RH)	Output	Ignition switch ON	Turn signal switch OFF	0V
					Turn signal switch RH	 PKID0926E 6.5 V
18 (G/Y)	Ground	Turn signal (LH)	Output	Ignition switch ON	Turn signal switch OFF	0V
					Turn signal switch LH	 PKID0926E 6.5 V
19 (Y)	Ground	Room lamp timer control	Output	Interior room lamp	OFF	Battery voltage
					ON	0V
21 (P/B)	Ground	Optical sensor signal	Input	Ignition switch ON	When outside of the vehicle is bright	Close to 5V
					When outside of the vehicle is dark	Close to 0V
22 (R/Y)	Ground	Clutch interlock switch	Input	Clutch interlock switch	OFF (clutch pedal is not depressed)	0V
					ON (clutch pedal is depressed)	Battery voltage
24 (R/W)	Ground	Stop lamp switch 1	Input	—		Battery voltage
26 (O/L)	Ground	Stop lamp switch 2	Input	Stop lamp switch	OFF (brake pedal is not depressed)	0V
					ON (brake pedal is depressed)	Battery voltage
				ICC brake hold relay (with ICC)	OFF	0V
					ON	Battery voltage
27 (G/W)	Ground	Front door lock as- sembly LH (unlock sensor)	Input	Front door LH	LOCK status	 JPMIA0011GB 11.8V
					UNLOCK status	0V
29 (Y)	Ground	Key slot switch	Input	When Intelligent Key is inserted into key slot		Battery voltage
				When Intelligent Key is not inserted into key slot		0V

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N




O

P

# BCM (BODY CONTROL MODULE)

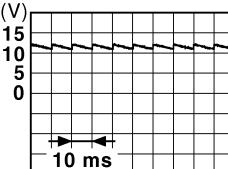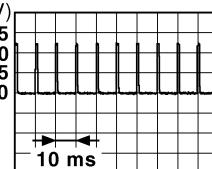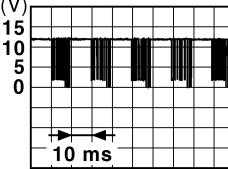[BCM]





< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
30 (V/Y)	Ground	ACC feedback signal	Input	Ignition switch	OFF	0
					ACC or ON	Battery voltage
31 (G)	Ground	Rear window defogger feedback signal	Input	Rear window de-fogger switch	OFF	0V
					ON	Battery voltage
32 (R/B)	Ground	Front door RH switch	Input	Front door RH switch	OFF (when front door RH closes)	 <small>JPMIA0011GB</small> <b>11.8 V</b>
					ON (when front door RH opens)	
33 (SB)	Ground	Compressor ON signal	Input	A/C switch	OFF	5V
					ON	0V
34 <sup>2</sup> (L/R)	Ground	Front door lock assembly LH (key cylinder switch) (unlock)	Input	Front door lock assembly LH (key cylinder switch)	OFF (neutral)	5V
					ON (unlock)	0V
36 <sup>2</sup> (GR)	Ground	Lock switch signal	Input	Door lock/unlock switch	Lock	Battery voltage
					Unlock	0V
37 (O)	Ground	Trunk lid opener cancel switch	Input	Trunk lid opener cancel switch	CANCEL	 <small>JPMIA0012GB</small> <b>1.1V</b>
					ON	
38 (GR/W)	Ground	Rear window defogger ON signal	Input	Rear window de-fogger switch	OFF	5V
					ON	0V
39 <sup>2</sup> (GR/R)	Ground	Unlock switch signal	Input	Door lock/unlock switch	Unlock	Battery voltage
					Lock	0V
40 <sup>3</sup> (Y/G)	Ground	Power window serial link	Input/ Output	Ignition switch ON		 <small>JPMIA0013GB</small> <b>10.2V</b>
41 (W)	Ground	Engine switch (push switch) illumination	Output	Engine switch (push switch) illumination	ON	5.5V
					OFF	0V

# BCM (BODY CONTROL MODULE)

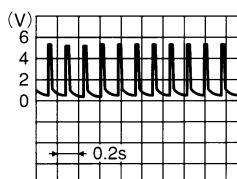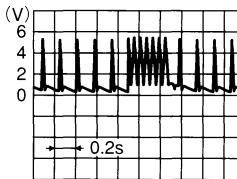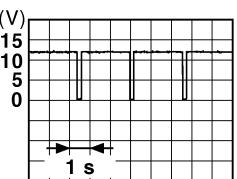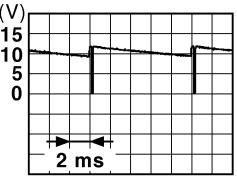[BCM]

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
42 (R)	Ground	LOCK indicator lamp	Output	LOCK indicator lamp	ON	0V
					OFF	Battery voltage
45 (P)	Ground	Receiver & sensor ground	Input	Ignition switch ON		0V
46 (V/W)	Ground	Receiver & sensor power supply output	Output	Ignition switch	OFF	0V
					ACC or ON	5.0V
47 (G/O)	Ground	Tire pressure receiver signal	Input/ Output	Ignition switch ON	Standby state	 OCC3881D
					When receiving the signal from the transmitter	 OCC3880D
48 (R/G)	Ground	Selector lever P/N position signal	Input	Selector lever	P or N position	12.0V
					Except P and N positions	0V
49 (L/O)	Ground	Security indicator signal	Output	Security indicator	ON	0V
					Blinking	 JPMIA0014GB 11.3V
					OFF	Battery voltage
50 (LG/ B)	Ground	Combination switch OUTPUT 5	Output	Combination switch (Wiper intermittent dial 4)	All switch OFF	0V
					Lighting switch 1ST	
					Lighting switch high-beam	
					Lighting switch 2ND	
					Turn signal switch RH	
						 JPMIA0031GB 10.7V

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

# BCM (BODY CONTROL MODULE)

[BCM]

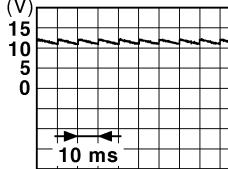
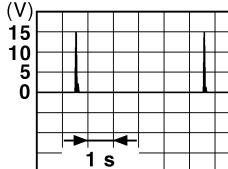
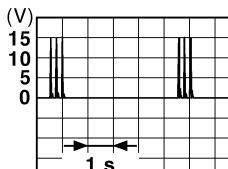
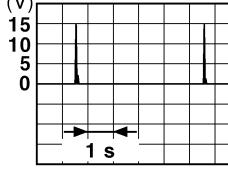
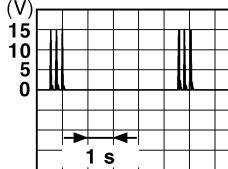
< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
(+)	(-)	Signal name	Input/ Output		
51 (L/W)	Ground	Combination switch OUTPUT 1	Output	Combination switch	All switch OFF (Wiper intermittent dial 4)
					Front wiper switch HI (Wiper intermittent dial 4)
					Any of the conditions below with all switch OFF <ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 2</li> <li>• Wiper intermittent dial 3</li> <li>• Wiper intermittent dial 6</li> <li>• Wiper intermittent dial 7</li> </ul>
52 (G/B)	Ground	Combination switch OUTPUT 2	Output	Combination switch	All switch OFF (Wiper intermittent dial 4)
					Front washer switch ON (Wiper intermittent dial 4)
					Any of the conditions below with all switch OFF <ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 5</li> <li>• Wiper intermittent dial 6</li> </ul>
53 (LG/ R)	Ground	Combination switch OUTPUT 3	Output	Combination switch (Wiper intermit- tent dial 4)	All switch OFF
					Front wiper switch INT
					Front wiper switch LO
54 (G/Y)	Ground	Combination switch OUTPUT 4	Output	Combination switch (Wiper intermit- tent dial 4)	Lighting switch AUTO
					All switch OFF
					Front fog lamp switch ON
55 (BR/ W)	Ground	Front blower monitor	Input	Front blower mo- tor switch	Lighting switch 2ND
					Lighting switch flash-to- pass
					Turn signal switch LH
56 <sup>2</sup> (L/B)	Ground	Front door lock as- sembly LH (key cylin- der switch) (lock)	Input	Front door lock assembly LH (key cylinder switch)	ON
					OFF (neutral)
57 (W)	Ground	Tire pressure warn- ing check switch	Input	—	
					5V

# BCM (BODY CONTROL MODULE)

[BCM]

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	A B C D E F G H I J K L <b>BCS</b> N O P	
(+)	(-)	Signal name	Input/ Output				
58 (SB)	Ground	Front door LH switch	Input	Front door LH switch	OFF (front door LH CLOSE)	 11.8V	A B C D E F G H I J K L <b>BCS</b> N O P
					ON (front door LH OPEN)	0V	
59 (G/R)	Ground	Rear window defogger relay	Output	Rear window defogger	Active	Battery voltage	E F G H I J K L <b>BCS</b> N O P
					Not activated	0V	
60 (B/R)	Ground	Front console antenna 2 (-)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compartment	 JMKA0062GB	H I J K L <b>BCS</b> N O P
					When Intelligent Key is not in the passenger compartment	 JMKA0063GB	
61 (W/R)	Ground	Center console antenna 2 (+)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compartment	 JMKA0062GB	K L <b>BCS</b> N O P
					When Intelligent Key is not in the passenger compartment	 JMKA0063GB	

# BCM (BODY CONTROL MODULE)

[BCM]

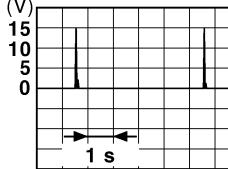
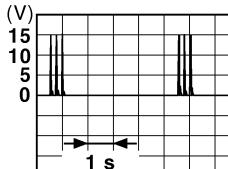
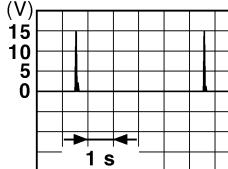
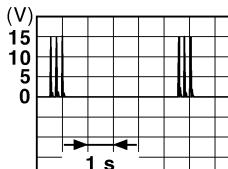
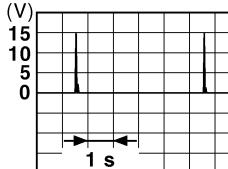
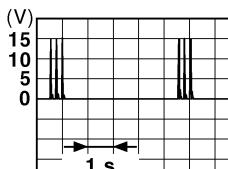
< ECU DIAGNOSIS >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	(+)	(-)		
62 (B/Y)	Ground	Front outside handle RH antenna (-)	Output	When Intelligent Key is in the antenna detection area
				When the front door RH request switch is oper- ated with ignition switch OFF
63 (LG)	Ground	Front outside handle RH antenna (+)	Output	When Intelligent Key is in the antenna detection area
				When the front door RH request switch is oper- ated with ignition switch OFF
64 (V)	Ground	Front outside handle LH antenna (-)	Output	When Intelligent Key is in the antenna detection area
				When the front door LH request switch is oper- ated with ignition switch OFF

# BCM (BODY CONTROL MODULE)

[BCM]

< ECU DIAGNOSIS >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)	
	(+)	(-)			
65 (P)	Ground	Front outside handle LH antenna (+)	Output	When Intelligent Key is in the antenna detection area	 (V) 15 10 5 0 1 s <small>JMKIA0062GB</small>
				When the front door LH request switch is operated with ignition switch OFF	 (V) 15 10 5 0 1 s <small>JMKIA0063GB</small>
66 (R)	Ground	Instrument panel antenna (-)	Output	When Intelligent Key is in the passenger compartment	 (V) 15 10 5 0 1 s <small>JMKIA0062GB</small>
				When Intelligent Key is not in the passenger compartment	 (V) 15 10 5 0 1 s <small>JMKIA0063GB</small>
67 (G)	Ground	Instrument panel antenna (+)	Output	When Intelligent Key is in the passenger compartment	 (V) 15 10 5 0 1 s <small>JMKIA0062GB</small>
				When Intelligent Key is not in the passenger compartment	 (V) 15 10 5 0 1 s <small>JMKIA0063GB</small>

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N






O

P

# BCM (BODY CONTROL MODULE)

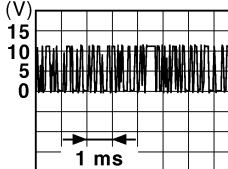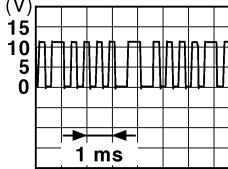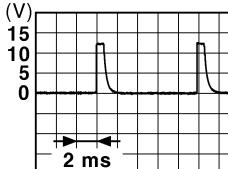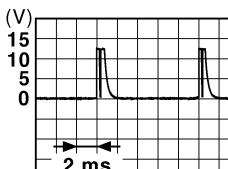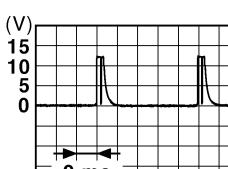[BCM]






< ECU DIAGNOSIS >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)		
	(+)	(-)				
68 (G/O)	Ground	NATS antenna amp (built in key slot)	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelligent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
69 (O)	Ground	NATS antenna amp (built in key slot)	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelligent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
70 (R/B)	Ground	Ignition relay-2 control	Output	Ignition switch	OFF or ACC	0V
					ON	Battery voltage
71 (L/O)	Ground	Remote keyless entry receiver signal	Input/ Output	During waiting		 JMKIA0064GB
				When operating either button on Intelligent Key		 JMKIA0065GB
75 (R/Y)	Ground	Combination switch INPUT 5	Input	Combination switch	All switch OFF (Wiper intermittent dial 4)	 1.4V JPMIA0041GB
					Front fog lamp switch ON (Wiper intermittent dial 4)	 1.3V JPMIA0037GB
					Any of the conditions below with all switch OFF <ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 2</li> <li>• Wiper intermittent dial 6</li> <li>• Wiper intermittent dial 7</li> </ul>	 1.3V JPMIA0040GB

# BCM (BODY CONTROL MODULE)

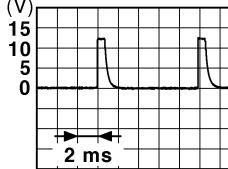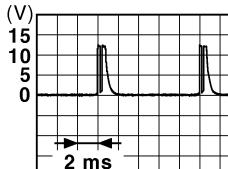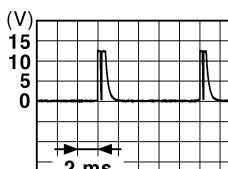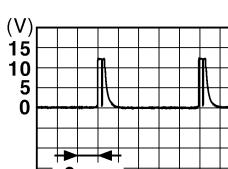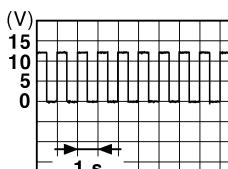[BCM]

< ECU DIAGNOSIS >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)		
	(+)	(-)				
76 (R/G)	Ground	Combination switch INPUT 3	Input	Combination switch	All switch OFF (Wiper intermittent dial 4)	
					 JPMIA0041GB 1.4V	
					Lighting switch high-beam (Wiper intermittent dial 4)	
					 JPMIA0036GB 1.3V	
					Lighting switch 2ND (Wiper intermittent dial 4)	
					 JPMIA0037GB 1.3V	
					Any of the conditions below with all switch OFF • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3	
					 JPMIA0040GB 1.3V	
77 (BR)	Ground	Engine switch (push switch)	Input	Engine switch (push switch)	Pressed	0V
					Not pressed	Battery voltage
78 (P)	Ground	CAN-L	Input/ Output		—	—
79 (L)	Ground	CAN-H	Input/ Output		—	—
80 (R/L)	Ground	Key slot illumination	Output	Key slot illumina- tion	OFF	0V
					Blinking	 JPMIA0015GB 6.5V
					ON	Battery voltage

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N



O

P

# BCM (BODY CONTROL MODULE)

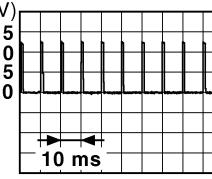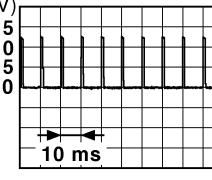[BCM]






< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
81 (LG)	Ground	ON indicator lamp	Output	Ignition switch	OFF or ACC	0V
					ON	Battery voltage
83 (L)	Ground	ACC relay control	Output	Ignition switch	OFF	0V
					ACC or ON	Battery voltage
84 (Y/R)	Ground	A/T device	Output	—		Battery voltage
85 (L/O)	Ground	Electronic steering column lock condition No. 1	Input	Electronic steering column lock	Lock status	0V
					Unlock status	Battery voltage
86 (G/R)	Ground	Electronic steering column lock condition No. 2	Input	Electronic steering column lock	Lock status	Battery voltage
					Unlock status	0V
87 (G/B)	Ground	Selector lever P position switch	Input	Selector lever	P position	0V
					Any position other than P	Battery voltage
88 (P/L)	Ground	Front door RH request switch	Input	Front door RH request switch	ON (pressed)	0V
					OFF (not pressed)	 JPMIA0016GB 1.0V
89 (B/W)	Ground	Front door LH request switch	Input	Front door LH request switch	ON (pressed)	0V
					OFF (not pressed)	 JPMIA0016GB 1.0V
90 (Y)	Ground	Blower fan motor relay control	Output	Ignition switch	OFF or ACC	0V
					ON	Battery voltage
91 (L/R)	Ground	Remote keyless entry receiver power supply	Output	Ignition switch OFF		Battery voltage
94 (G/Y)	Ground	Steering wheel lock unit power supply	Output	Ignition switch	OFF or ACC	Battery voltage
					ON	0V

# BCM (BODY CONTROL MODULE)

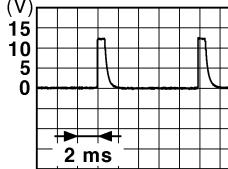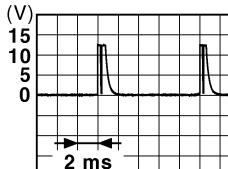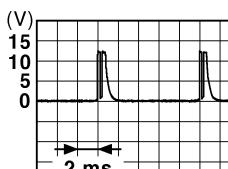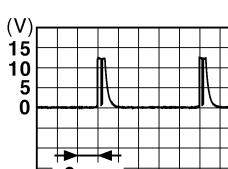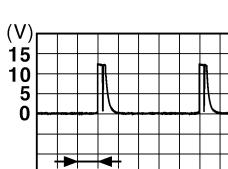[BCM]




< ECU DIAGNOSIS >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)	
	(+)	(-)	Signal name	Input/ Output	
95 (R/W)	Ground	Combination switch INPUT 1	Combination switch (Wiper intermit- tent dial 4)	Input	All switch OFF
					 JPMIA0041GB 1.4V
					 JPMIA0037GB 1.3V
					 JPMIA0036GB 1.3V
					 JPMIA0038GB 1.3V
					 JPMIA0039GB 1.3V

# BCM (BODY CONTROL MODULE)

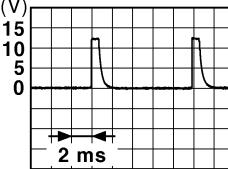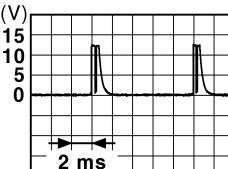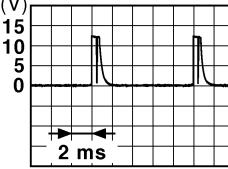[BCM]







< ECU DIAGNOSIS >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)	
	(+)	(-)	Signal name	Input/ Output	
96 (P/B)	Ground	Combination switch INPUT 4	Input	Combination switch	All switch OFF (Wiper intermittent dial 4)
					 JPMIA0041GB 1.4V
					 JPMIA0038GB 1.3V
					 JPMIA0036GB 1.3V
				Any of the conditions below with all switch OFF <ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 5</li> <li>• Wiper intermittent dial 6</li> </ul>	 JPMIA0039GB 1.3V

# BCM (BODY CONTROL MODULE)

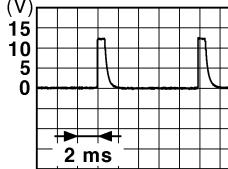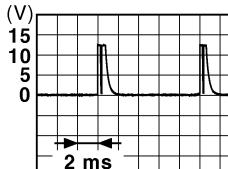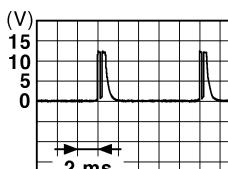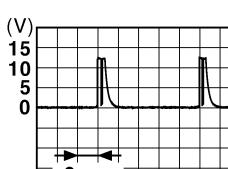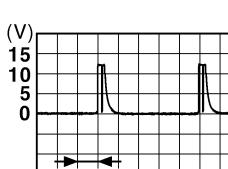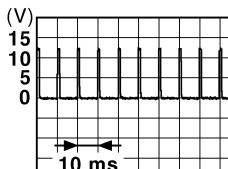[BCM]

< ECU DIAGNOSIS >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)		
	(+)	(-)	Signal name	Input/ Output		
97 (R/B)	Ground	Combination switch INPUT 2	Input	Combination switch (Wiper intermittent dial 4)	All switch OFF	 JPMIA0041GB 1.4V
					Lighting switch flash-to-pass	 JPMIA0037GB 1.3V
					Lighting switch 2ND	 JPMIA0036GB 1.3V
					Front wiper switch INT	 JPMIA0038GB 1.3V
					Front wiper switch HI	 JPMIA0040GB 1.3V
98 (G/O)	Ground	Hazard switch	Input	Hazard switch	Pressed	0 V
					Not pressed	 JPMIA0012GB 1.1V

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O


P

# BCM (BODY CONTROL MODULE)

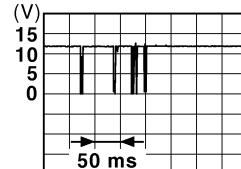
[BCM]

< ECU DIAGNOSIS >


Terminal No. (Wire color)		Description		Condition	Value (Approx.)
(+)	(-)	Signal name	Input/ Output		
99 (L/Y)	Ground	Electronic steering column lock unit communication	Input/ Output	Electronic steering column lock	LOCK status
					LOCK or UNLOCK
					For 15 seconds after UN-LOCK
					15 seconds or later after UNLOCK
103 (V)	Ground	Trunk lid opening.	Output	Trunk lid	Open (trunk lid opener actuator is activated)
					Close (trunk lid opener actuator is not activated)
110 (V/W)	Ground	Trunk room lamp	Output	Trunk room lamp	ON
					OFF
114 (B)	Ground	Trunk room antenna 1 (-)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compartment
					When Intelligent Key is not in the passenger compartment



JMKIA0066GB

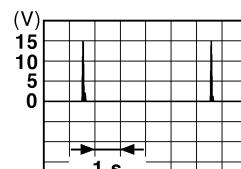

JMKIA0062GB






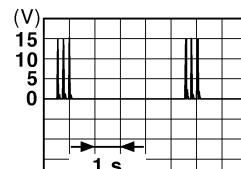


JMKIA0063GB

# BCM (BODY CONTROL MODULE)

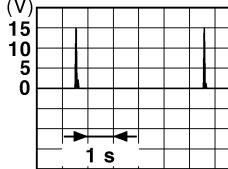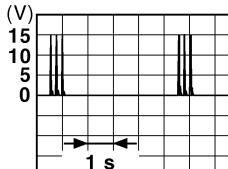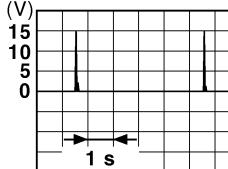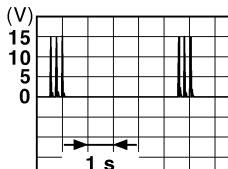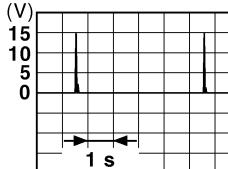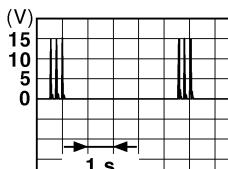[BCM]




< ECU DIAGNOSIS >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)	A B C D E F G H I J K L BCS N O P	
	(+)	(-)				
115 (W)	Ground	Trunk room antenna 1 (+)	Output	When Intelligent Key is in the passenger compart- ment  Ignition switch OFF	 (V) 15 10 5 0 1 s <small>JMKIA0062GB</small>	A B C D E F G H I J K L BCS N O P
					 (V) 15 10 5 0 1 s <small>JMKIA0063GB</small>	
118 (L/O)	Ground	Rear bumper anten- na (-)	Output	When the trunk lid request switch is operated with ignition switch OFF	 (V) 15 10 5 0 1 s <small>JMKIA0062GB</small>	A B C D E F G H I J K L BCS N O P
					 (V) 15 10 5 0 1 s <small>JMKIA0063GB</small>	
119 (BR/ W)	Ground	Rear bumper anten- na (+)	Output	When the trunk lid request switch is operated with ignition switch OFF	 (V) 15 10 5 0 1 s <small>JMKIA0062GB</small>	A B C D E F G H I J K L BCS N O P
					 (V) 15 10 5 0 1 s <small>JMKIA0063GB</small>	

# BCM (BODY CONTROL MODULE)

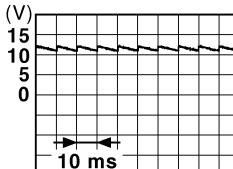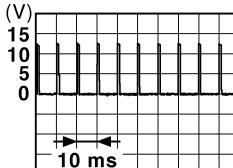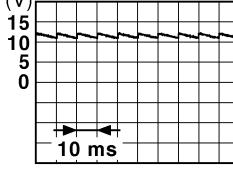[BCM]

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
127 (BR/ W)	Ground	Ignition relay (IPDM E/R) control	Output	Ignition switch	OFF or ACC	Battery voltage
					ON	0V
130 (Y/G)	Ground	Trunk room lamp switch	Input	Trunk room lamp switch	OFF (trunk is closed)	 JPMIA0011GB 11.8V
					ON (trunk is open)	0V
132 (R)	Ground	Starter motor relay control	Output	Ignition switch OFF (M/T vehi- cle)	When the clutch pedal is depressed	Battery voltage
					When the clutch pedal is not depressed	0V
				Ignition switch ON (other than M/ T vehicle)	When selector lever is in P or N position and the brake is depressed	Battery voltage
					When selector lever is in P or N position and the brake is not depressed	0V
141 (G/R)	Ground	Trunk request switch	Input	Trunk request switch	ON (pressed)	0V
					OFF (not pressed)	 JPMIA0016GB 1.0V
144 (GR)	Ground	Request switch buzz- er	Output	Request switch buzzer	Sounding	0V
					Not sounding	Battery voltage
147 (L/R)	Ground	Trunk lid opener switch	Input	Trunk lid opener switch	Pressed	0V
					Not pressed	 JPMIA0011GB 11.8V

# BCM (BODY CONTROL MODULE)

[BCM]

< ECU DIAGNOSIS >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)	A B C D E F G H I J K L M N O P	
	(+)	(-)				
148 <sup>1</sup> (R/W)	Ground	Rear door RH switch	Input	Rear door RH switch	OFF (when rear door RH closes)	 <small>JPMIA0011GB</small> 11.8V
					ON (when rear door RH opens)	0V
149 <sup>1</sup> (R/B)	Ground	Rear door LH switch	Input	Rear door LH switch	OFF (when rear door LH closes)	 <small>JPMIA0011GB</small> 11.8V
					ON (when rear door LH opens)	0V

1: Sedan only

2: With LH front window anti-pinch

3: With LH and RH front window anti-pinch

# BCM (BODY CONTROL MODULE)

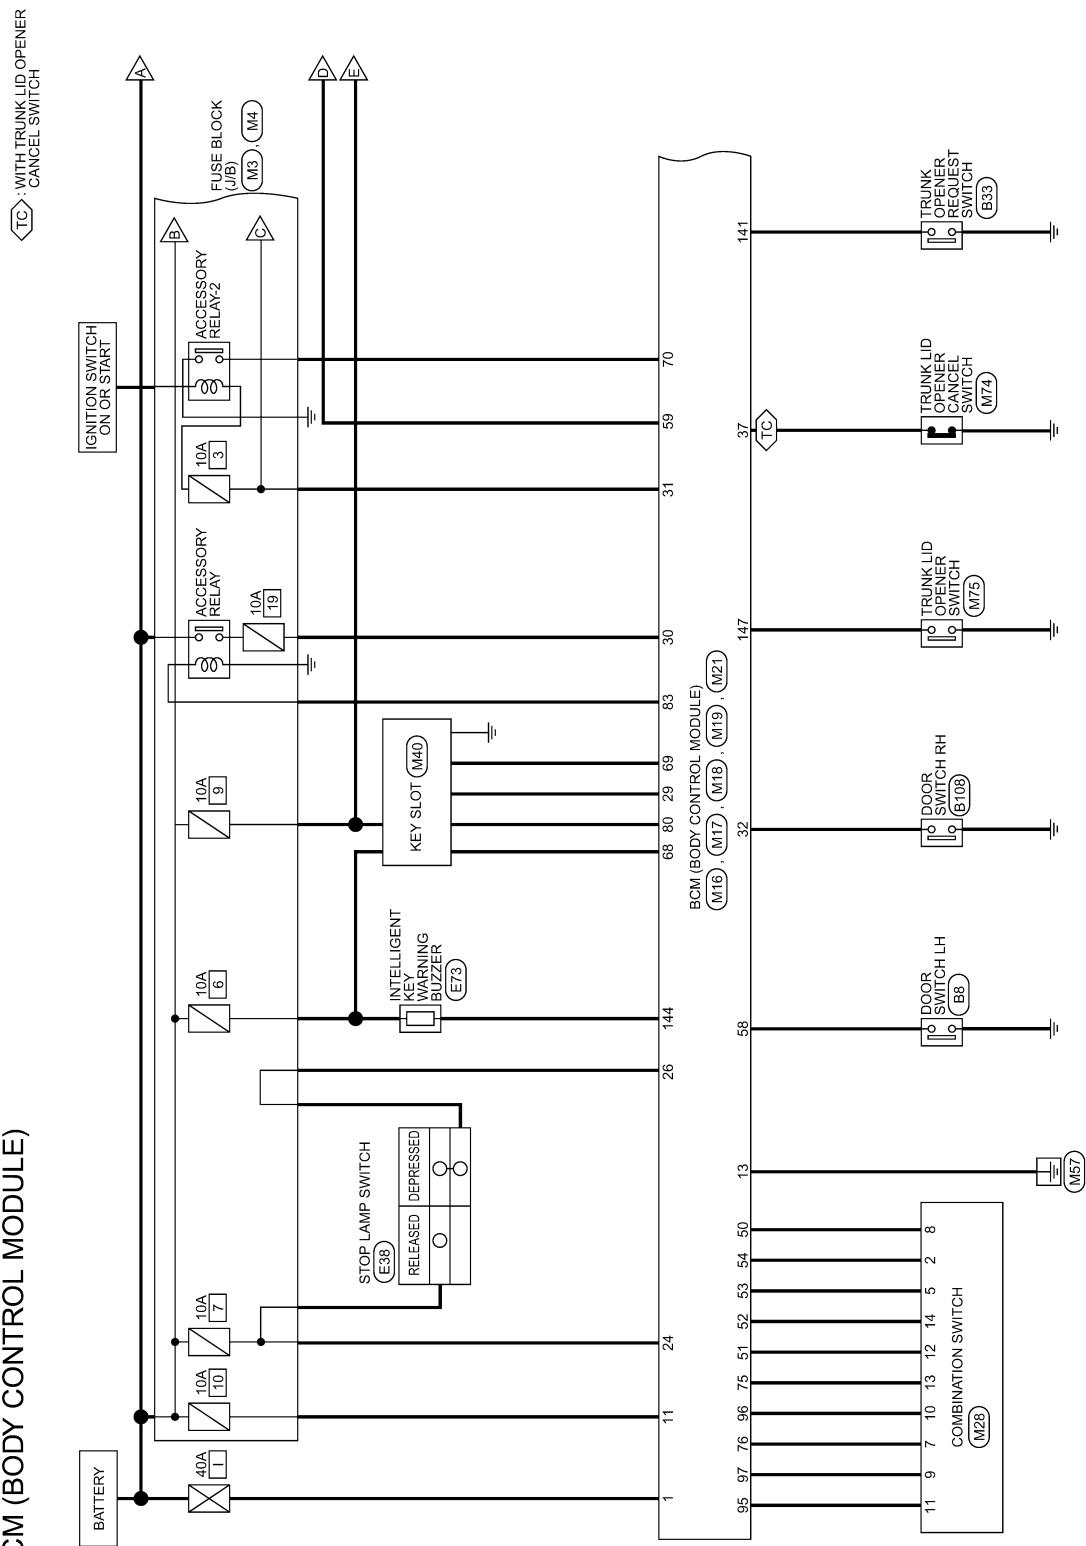
< ECU DIAGNOSIS >

[BCM]

## Wiring Diagram-Coupe

INFOID:0000000001344680

### BCM (BODY CONTROL MODULE)




AWMWAA0034G

# BCM (BODY CONTROL MODULE)

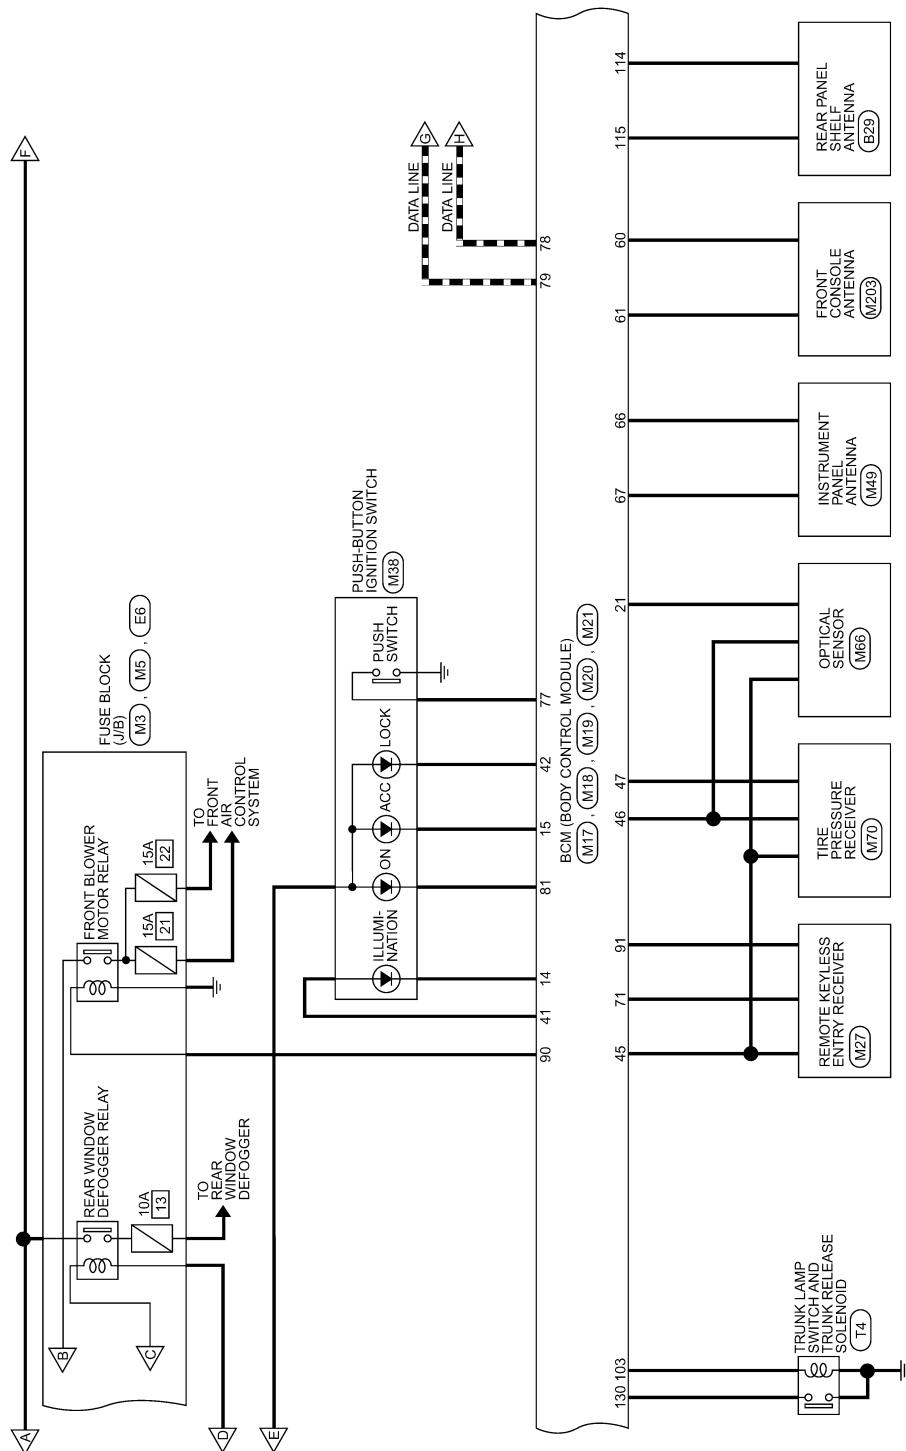[BCM]

< ECU DIAGNOSIS >

■ : DATA LINE



A B C D E F G H I J K L M N O P


BCS

AWMWAA0035G

# BCM (BODY CONTROL MODULE)
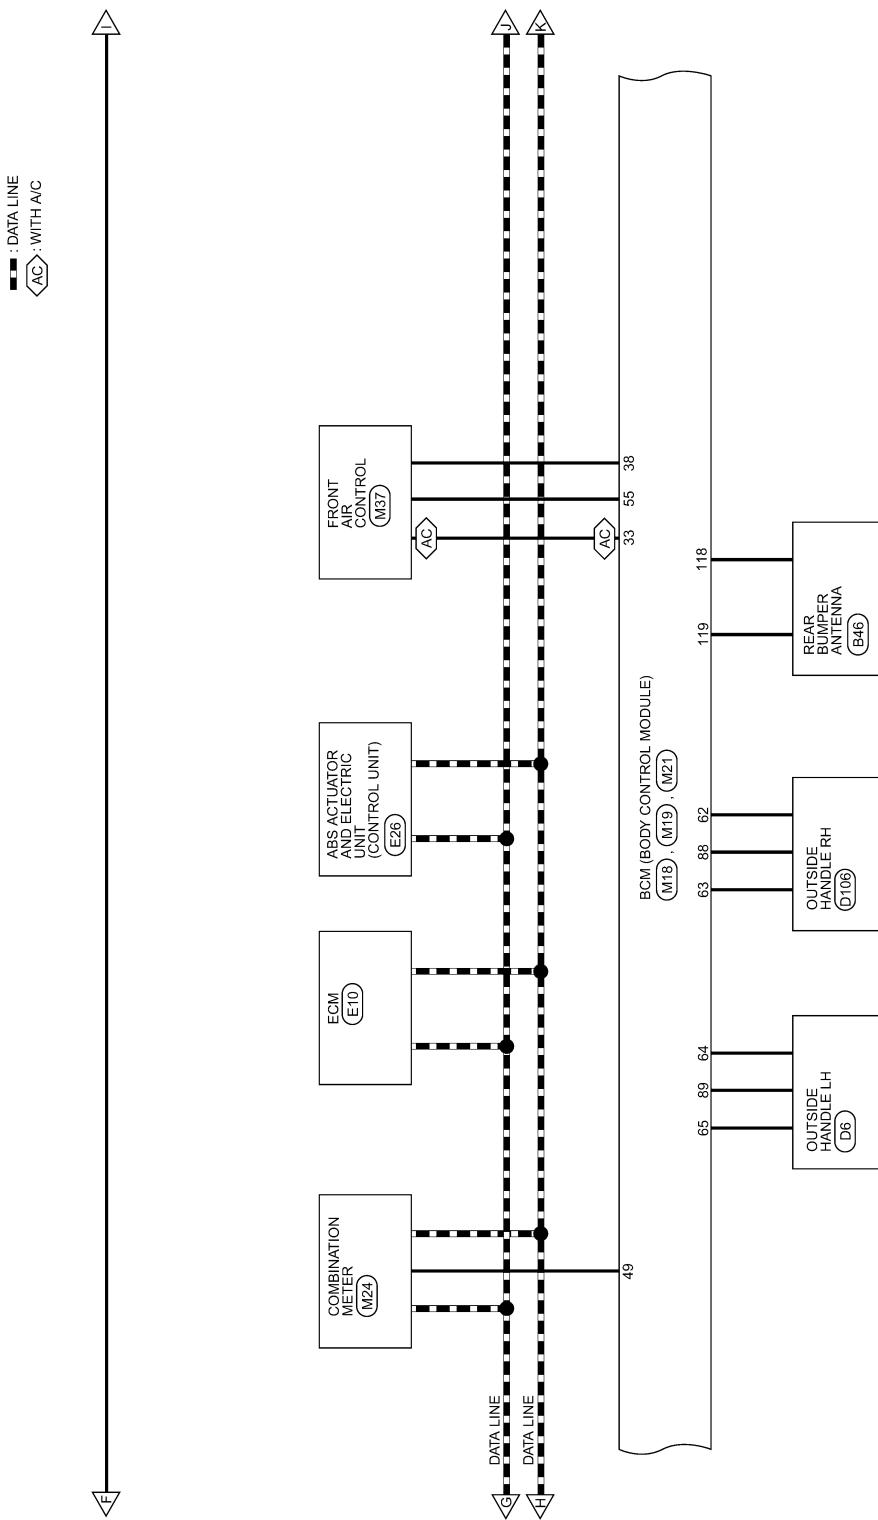
< ECU DIAGNOSIS >

[BCM]




AWMW0036G

# BCM (BODY CONTROL MODULE)

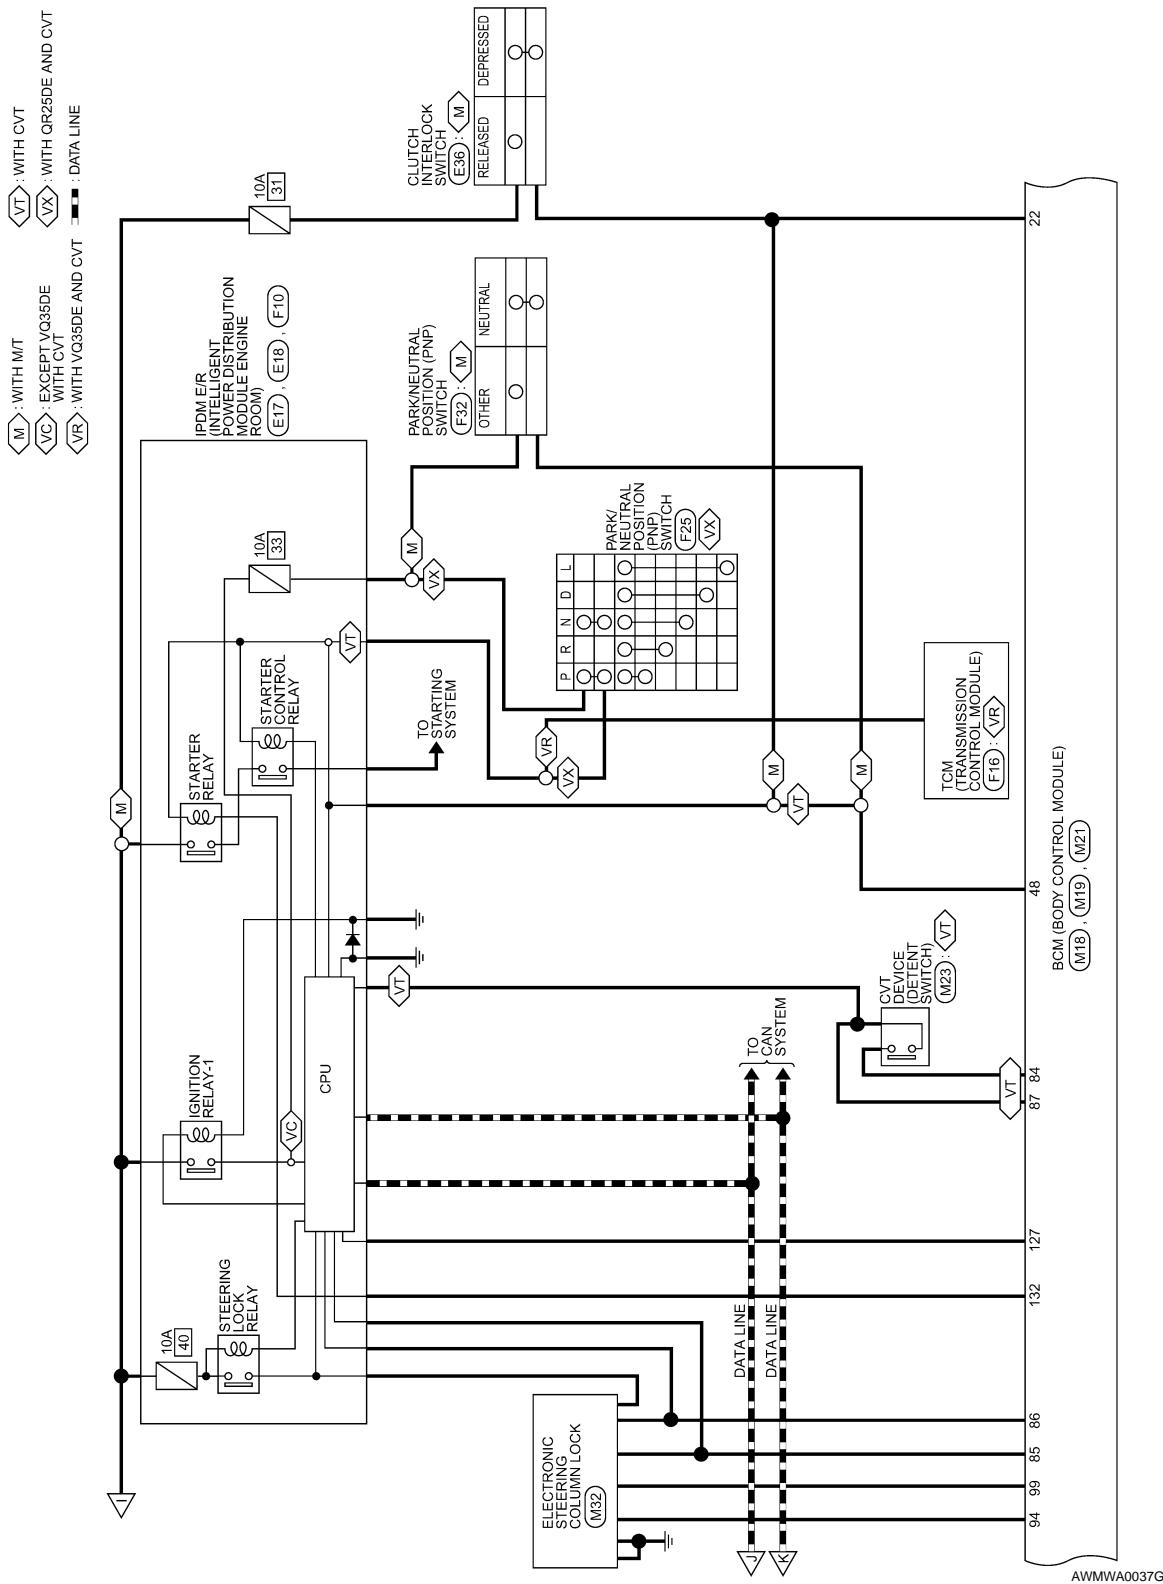[BCM]

< ECU DIAGNOSIS >




AWMWA0037G

# BCM (BODY CONTROL MODULE)
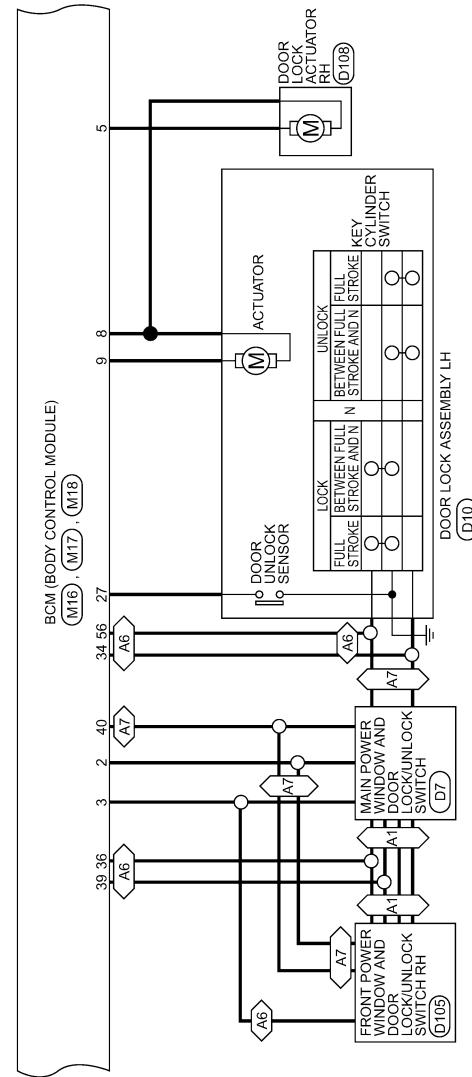
< ECU DIAGNOSIS >

[BCM]

Ⓐ WITH LEFT POWER WINDOW ANTI-PINCH SYSTEM  
Ⓑ WITH LEFT AND RIGHT POWER WINDOW ANTI-PINCH SYSTEM




AWMWAA0038G

# BCM (BODY CONTROL MODULE)

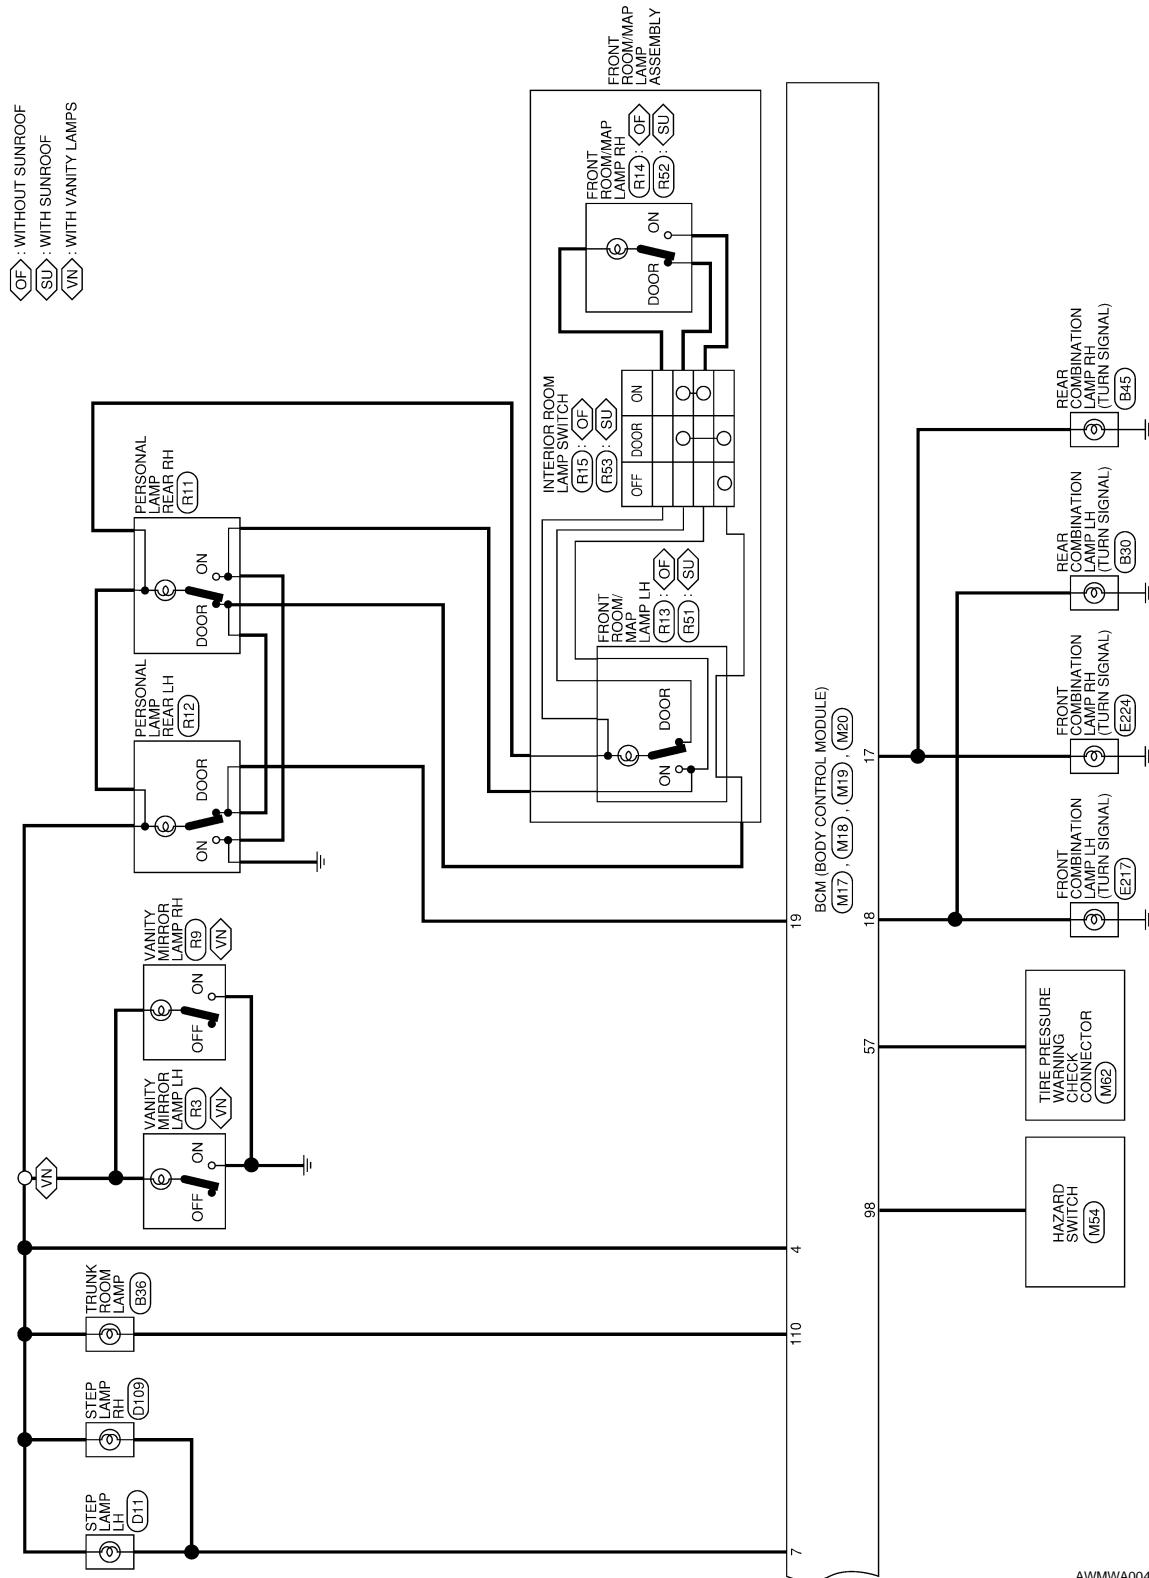[BCM]

< ECU DIAGNOSIS >



AWMWAA0045G

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[BCM]

Terminal No.	Color of Wire	Signal Name
9	G	CDL_DRFLL
10	GY	CDL_RR_RL_BACK
11	Y/R	BAT_BCM_FUSE
12	-	-
13	B	GND1
14	R/Y	LOW_SIDE_PUSH_LL_E_D_OUTPUT
15	Y/L	ACC_LED
16	-	-
17	GB	FR_FLASHIER
18	GY	FL_FLASHIER
19	Y	ROOM_LAMP_OUTPUT


Connector No.	M17
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W/B	BAT_POWER_F/L
2	R/Y	P/W_POWER_SUPPL_Y_PERM
3	L/W	POWER_WINDOW_POWER_SUPPLY_(RAP)



Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN



Terminal No.	Color of Wire	Signal Name
47	G/O	KEYLESS_TUNER_SI
48	R/G	SHIFT_N/P
49	L/O	IMMO_LED
50	LG/B	INPUT_5
51	L/W	INPUT_1
52	GB	INPUT_2
53	LG/R	INPUT_3
54	GY	INPUT_4
55	BR/W	BLOWER_FAN_SW
56	LB	DOOR_KEY/C_LOCK_SW
57	W	TPMS_MODE_TRIGGER_SW
58	SB	DR_DOOR_SW
59	G/R	REAR_DEFROGER_REL

Terminal No.	Color of Wire	Signal Name
27	G/W	DOOR_LOCK_STATUS
28	-	-
29	Y	FOB_IN_SW_1
30	V/Y	ACC_F/B
31	G	IGN_F/B
32	RB	AS_DOOR_SW
33	SB	AIRCON_SW
34	L/R	DOOR_KEY/C_UNLOCK_SW
35	-	-
36	G/R	CENTRAL_UNLOCK_SW
37	O	TRUNK_CANCEL_SW
38	GRW	REAR_DEFROGER_SW
39	GR/R	CENTRAL_UNLOCK_SW
40	Y/G	PW_K-LINE
41	W	PUSH_LED
42	R	S/L_LOCK_LED
43	-	-
44	-	-
45	P	GND_RF2_AVL
46	V/W	A/L_SENS_KEYLESS_PLY

ALMIA0060GB

# BCM (BODY CONTROL MODULE)

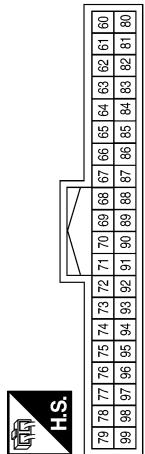
< ECU DIAGNOSIS >

[BCM]

Terminal No.	Color of Wire	Signal Name
82	-	-
83	L	ACC_CONT
84	Y/R	AT_DEVICE_OUT
85	L/O	S/L_CONDITION_1
86	G/R	S/L_CONDITION_2
87	G/B	SHIFT_P
88	P/L	AS_REQUEST
89	B/W	DR_REQUEST_SWITCH
90	Y	IGN2_CONT
91	L/R	RF1_POWER_SUPPLY_SWITCH
92	-	-
93	-	-
94	G/Y	S/L_POWER_SUPPLY_12V
95	R/W	OUTPUT_1
96	P/B	OUTPUT_4
97	R/B	OUTPUT_2

Terminal No.	Color of Wire	Signal Name
98	G/O	HAZARD_SW
99	L/Y	S/L_K-LINE
66	R	ROOM_ANT_1_B
67	G	ROOM_ANT_1_A
68	G/O	FOB_READER_CLOCK
69	O	FOB_READER_DATA
70	R/B	IGN_ELEC_CONT
71	L/O	RF1_TUNER_SIGNAL
72	-	-
73	-	-
75	R/Y	OUTPUT_5
76	R/G	OUTPUT_3
77	BR	ENG_START_SW
78	P	CAN-L
79	L	CAN-H
80	R/L	FOB_SLOT_ILLUMINATION
81	LG	IGN_ON_LED

Terminal No.	Color of Wire	Signal Name
60	B/R	ROOM_ANT_2_B
61	W/R	ROOM_ANT_2_A
62	B/Y	AS_DOOR_ANT_B
63	LG	AS_DOOR_ANT_A
64	V	DR_DOOR_ANT_B
65	P	DR_DOOR_ANT_A



H.S.

Terminal No.	Color of Wire	Signal Name
100	-	-
101	-	-
102	-	-
103	V	CDL_BACK_TRUNK
104	-	-
105	-	-
106	-	-
107	-	-
108	-	-
109	-	-
110	V/W	TRUNK_LAMP_OUTPUT
111	-	-

H.S.

A B C D E F G H I J K L M N O P

BCS


ALMIA0061GB

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[BCM]


Connector No.	M21
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
119	BR/W	BACK_DOOR_ANT_A
120	-	-
121	-	-
122	-	-
123	-	-
124	-	-
125	-	-
126	-	-
127	BR/W	IGN_USM_CONT1
128	-	-
129	-	-
130	Y/G	TRUNK_SW
131	-	-
132	R	ST_CONT_USM
133	-	-
134	-	-
135	-	-
136	-	-
137	-	-
138	-	-
139	-	-
140	-	-
141	G/R	TRUNK_REQUEST_SW
142	-	-
143	-	-
144	GR	BUZZER
145	-	-
146	-	-
147	L/R	BACK_TRUNK_OPENER
148	-	-
149	-	-
150	-	-
151	-	-

Terminal No.	Color of Wire	Signal Name
131	30	129
131	150	128
131	150	125
131	150	124
131	150	123
131	150	122
131	150	121
131	150	120
131	150	119
131	150	118
131	150	117
131	150	116
131	150	115
131	150	114
131	150	113
131	150	112
131	150	111
131	150	110
131	150	109
131	150	108
131	150	107
131	150	106
131	150	105
131	150	104
131	150	103
131	150	102
131	150	101
131	150	100
131	150	99
131	150	98
131	150	97
131	150	96
131	150	95
131	150	94
131	150	93
131	150	92
131	150	91
131	150	90
131	150	89
131	150	88
131	150	87
131	150	86
131	150	85
131	150	84
131	150	83
131	150	82
131	150	81
131	150	80
131	150	79
131	150	78
131	150	77
131	150	76
131	150	75
131	150	74
131	150	73
131	150	72
131	150	71
131	150	70
131	150	69
131	150	68
131	150	67
131	150	66
131	150	65
131	150	64
131	150	63
131	150	62
131	150	61
131	150	60
131	150	59
131	150	58
131	150	57
131	150	56
131	150	55
131	150	54
131	150	53
131	150	52
131	150	51
131	150	50
131	150	49
131	150	48
131	150	47
131	150	46
131	150	45
131	150	44
131	150	43
131	150	42
131	150	41
131	150	40
131	150	39
131	150	38
131	150	37
131	150	36
131	150	35
131	150	34
131	150	33
131	150	32

Connector No.	M22
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
112	-	-
113	-	-
114	B	TRUNK_ANT_1_B
115	W	TRUNK_ANT_1_A
116	-	-
117	-	-
118	L/O	BACK_DOOR_ANT_B

# BCM (BODY CONTROL MODULE)

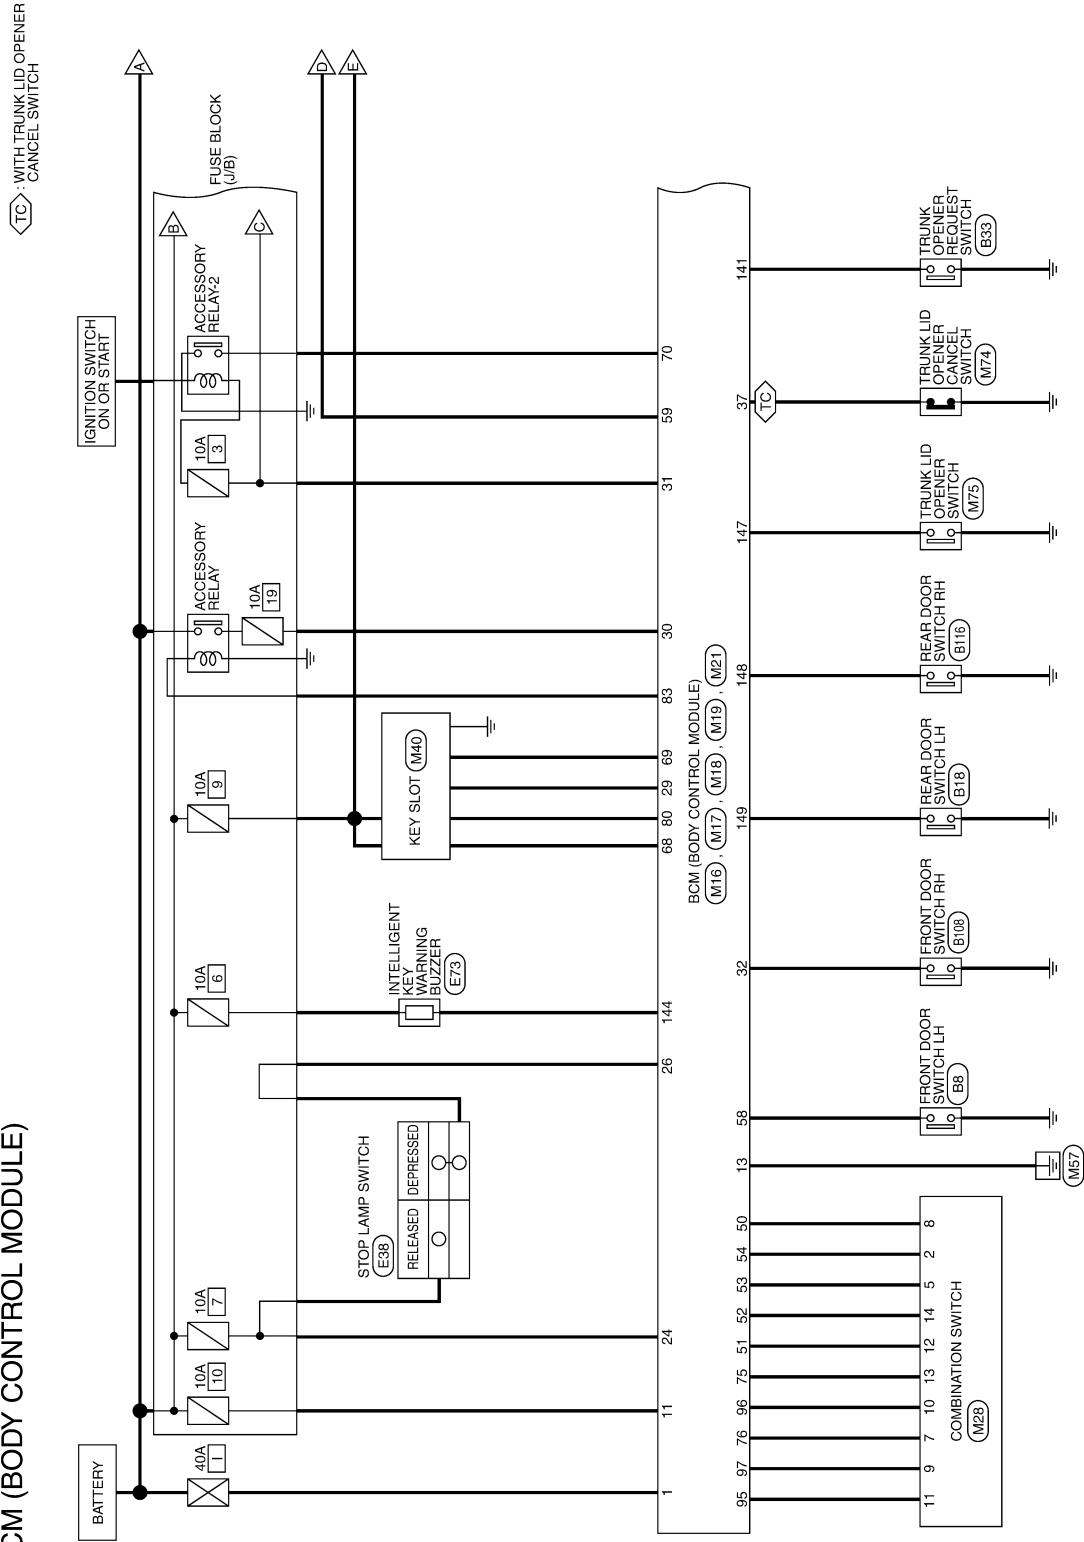
[BCM]

< ECU DIAGNOSIS >

Wiring Diagram-Sedan

INFOID:0000000003140469

**BCM (BODY CONTROL MODULE)**



AWMWKA0148G


**BCS**

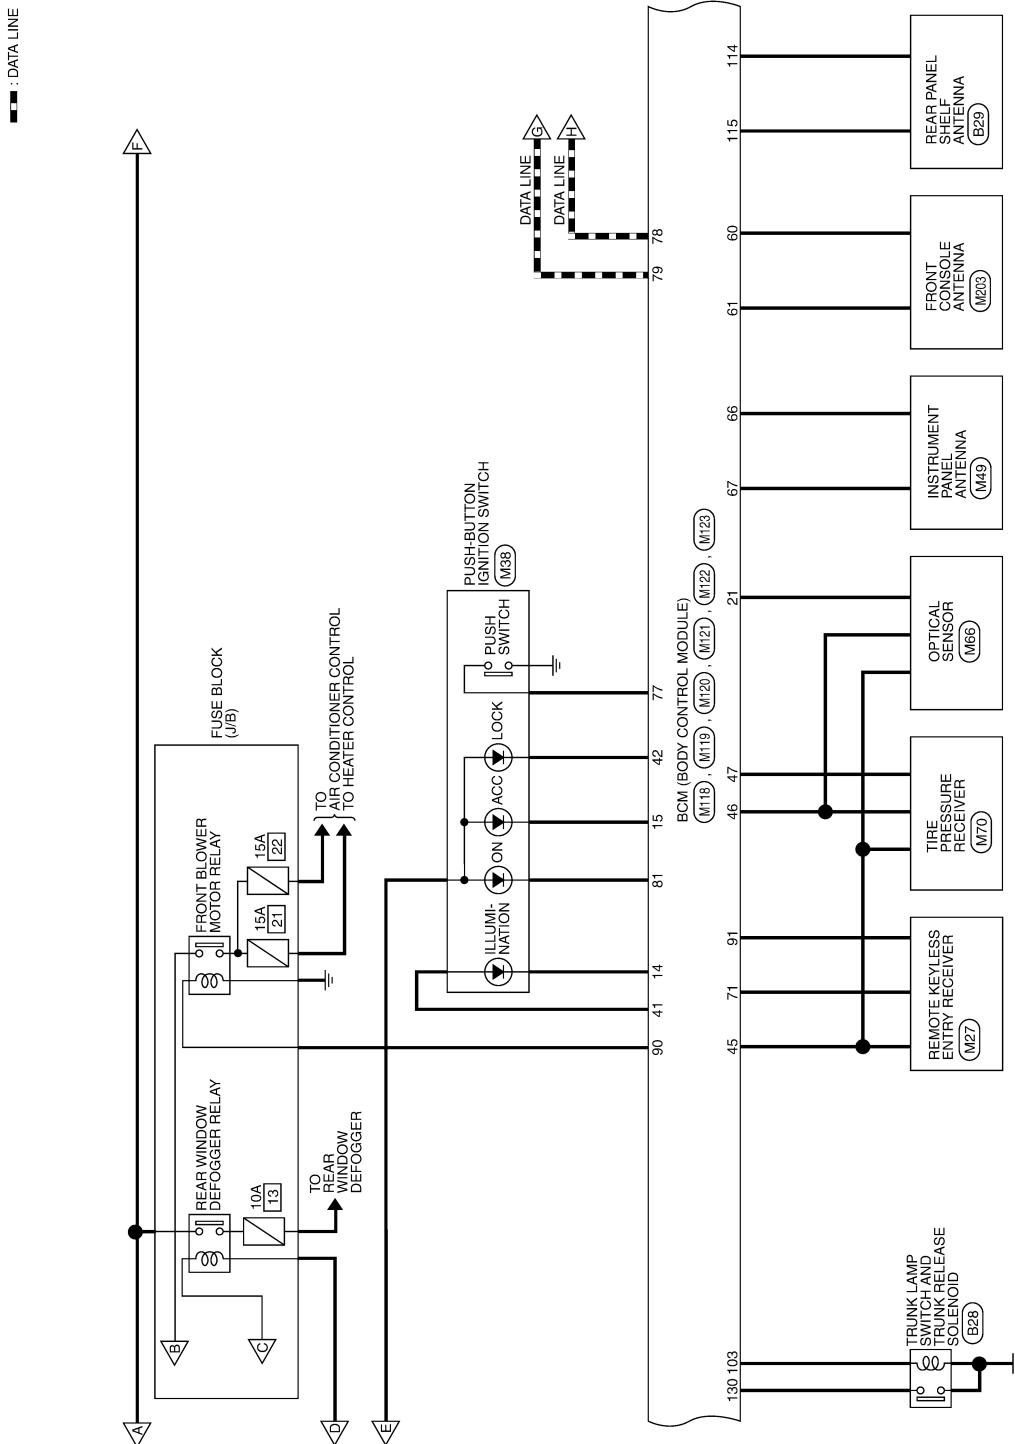A B C D E F G H I J K L M N O P Q R S

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[BCM]




AWMW0149G

# BCM (BODY CONTROL MODULE)

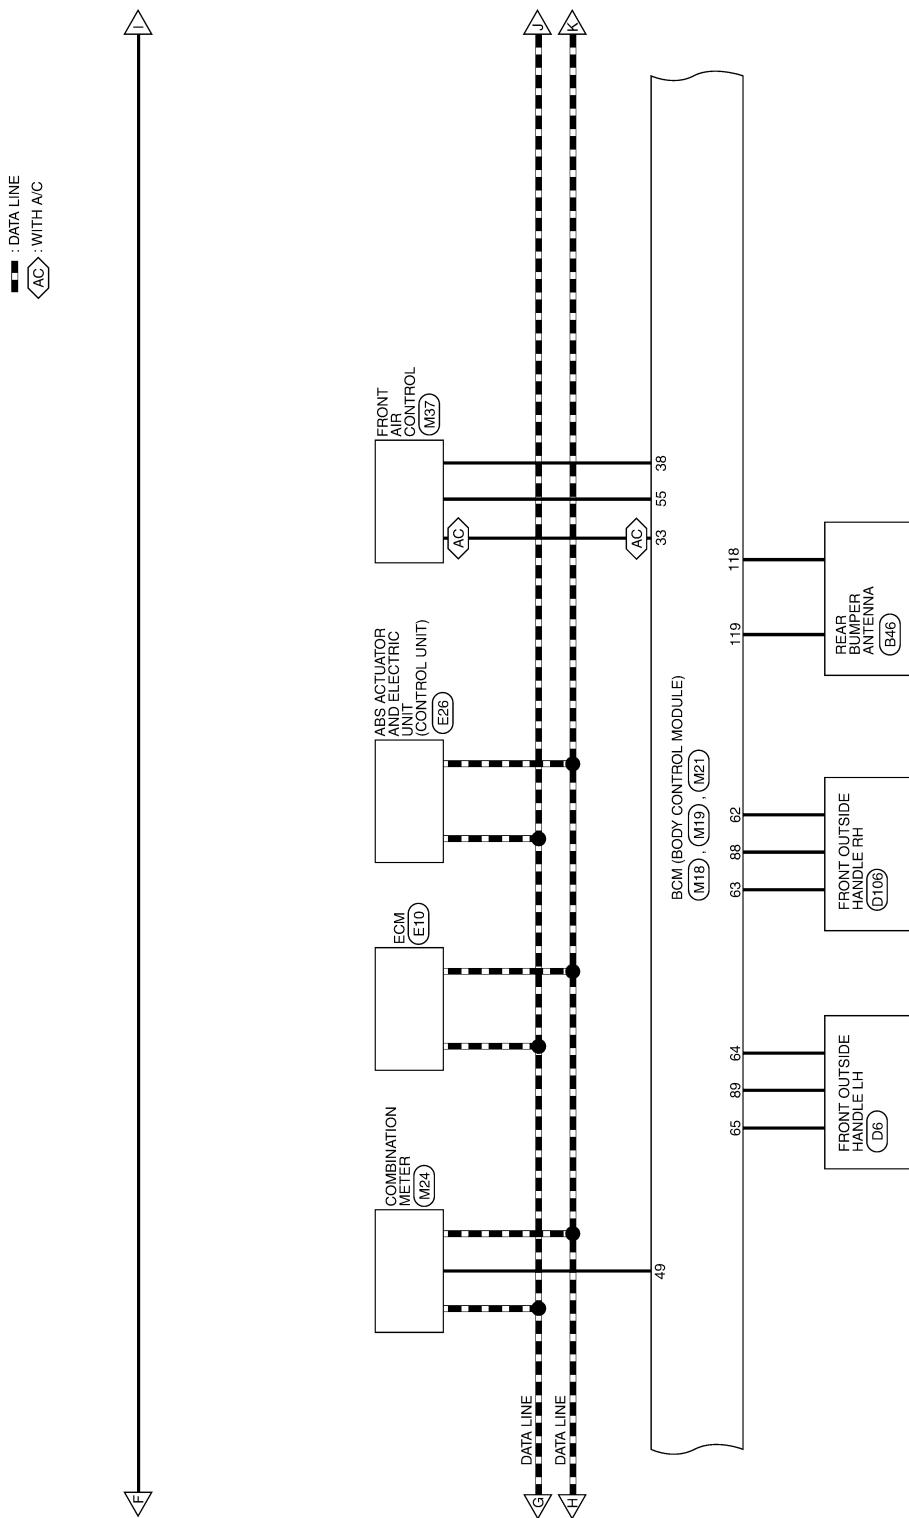[BCM]

< ECU DIAGNOSIS >



AWMW0150G

BCS

N

O


P

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# BCM (BODY CONTROL MODULE)
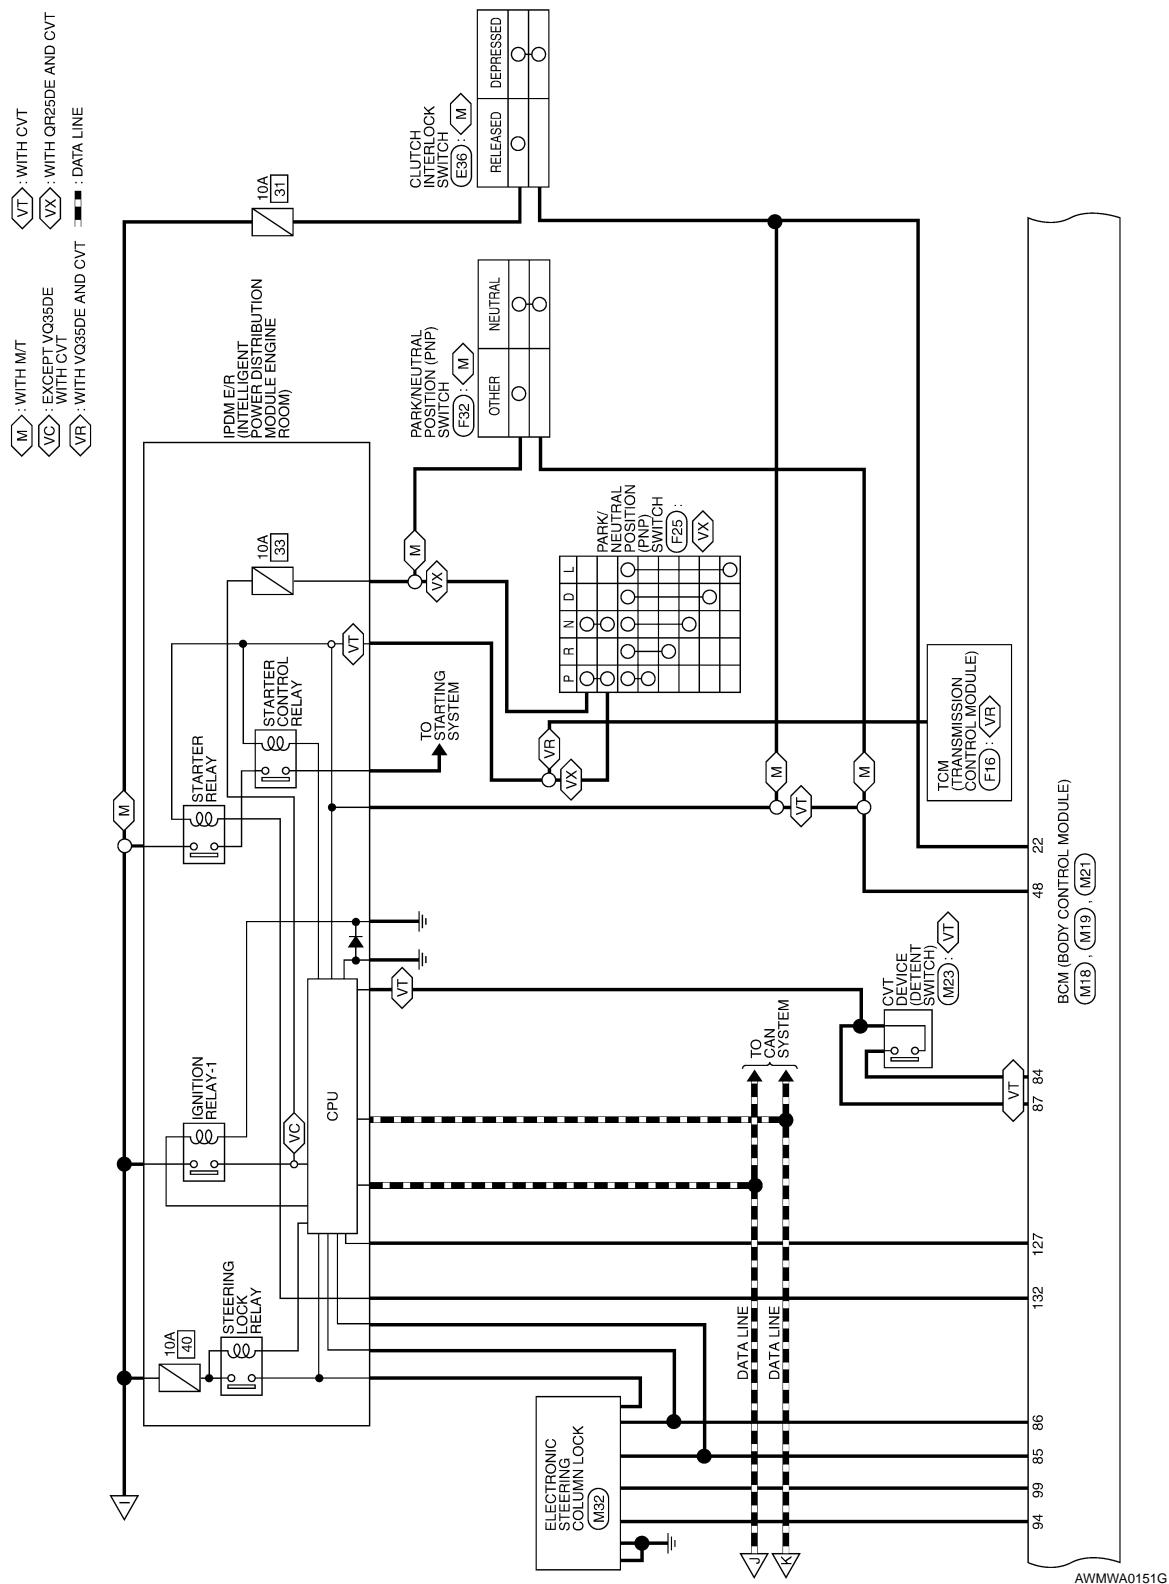
< ECU DIAGNOSIS >

[BCM]




AWMWA0151G

# BCM (BODY CONTROL MODULE)

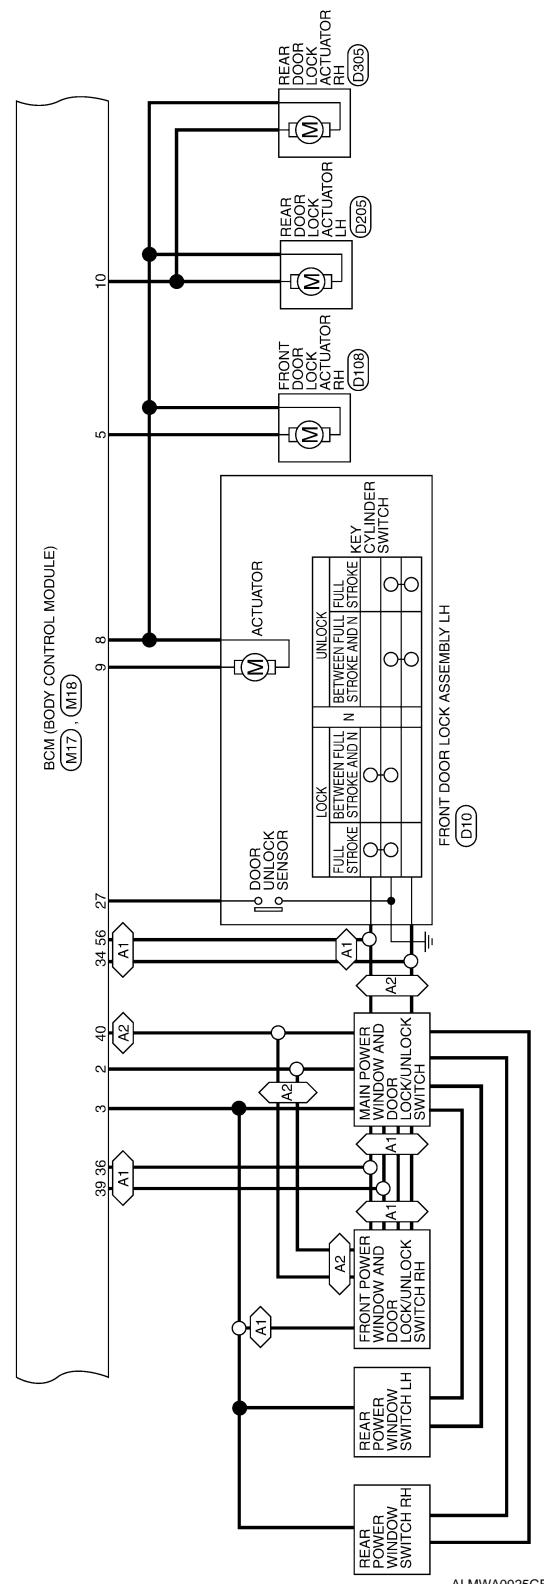[BCM]

< ECU DIAGNOSIS >

Ⓐ1 : WITH LEFT FRONT ONLY POWER WINDOW ANTI-PINCH SYSTEM  
Ⓐ2 : WITH LEFT AND RIGHT FRONT POWER WINDOW ANTI-PINCH SYSTEM




ALMWA0025GE

BCS

# BCM (BODY CONTROL MODULE)
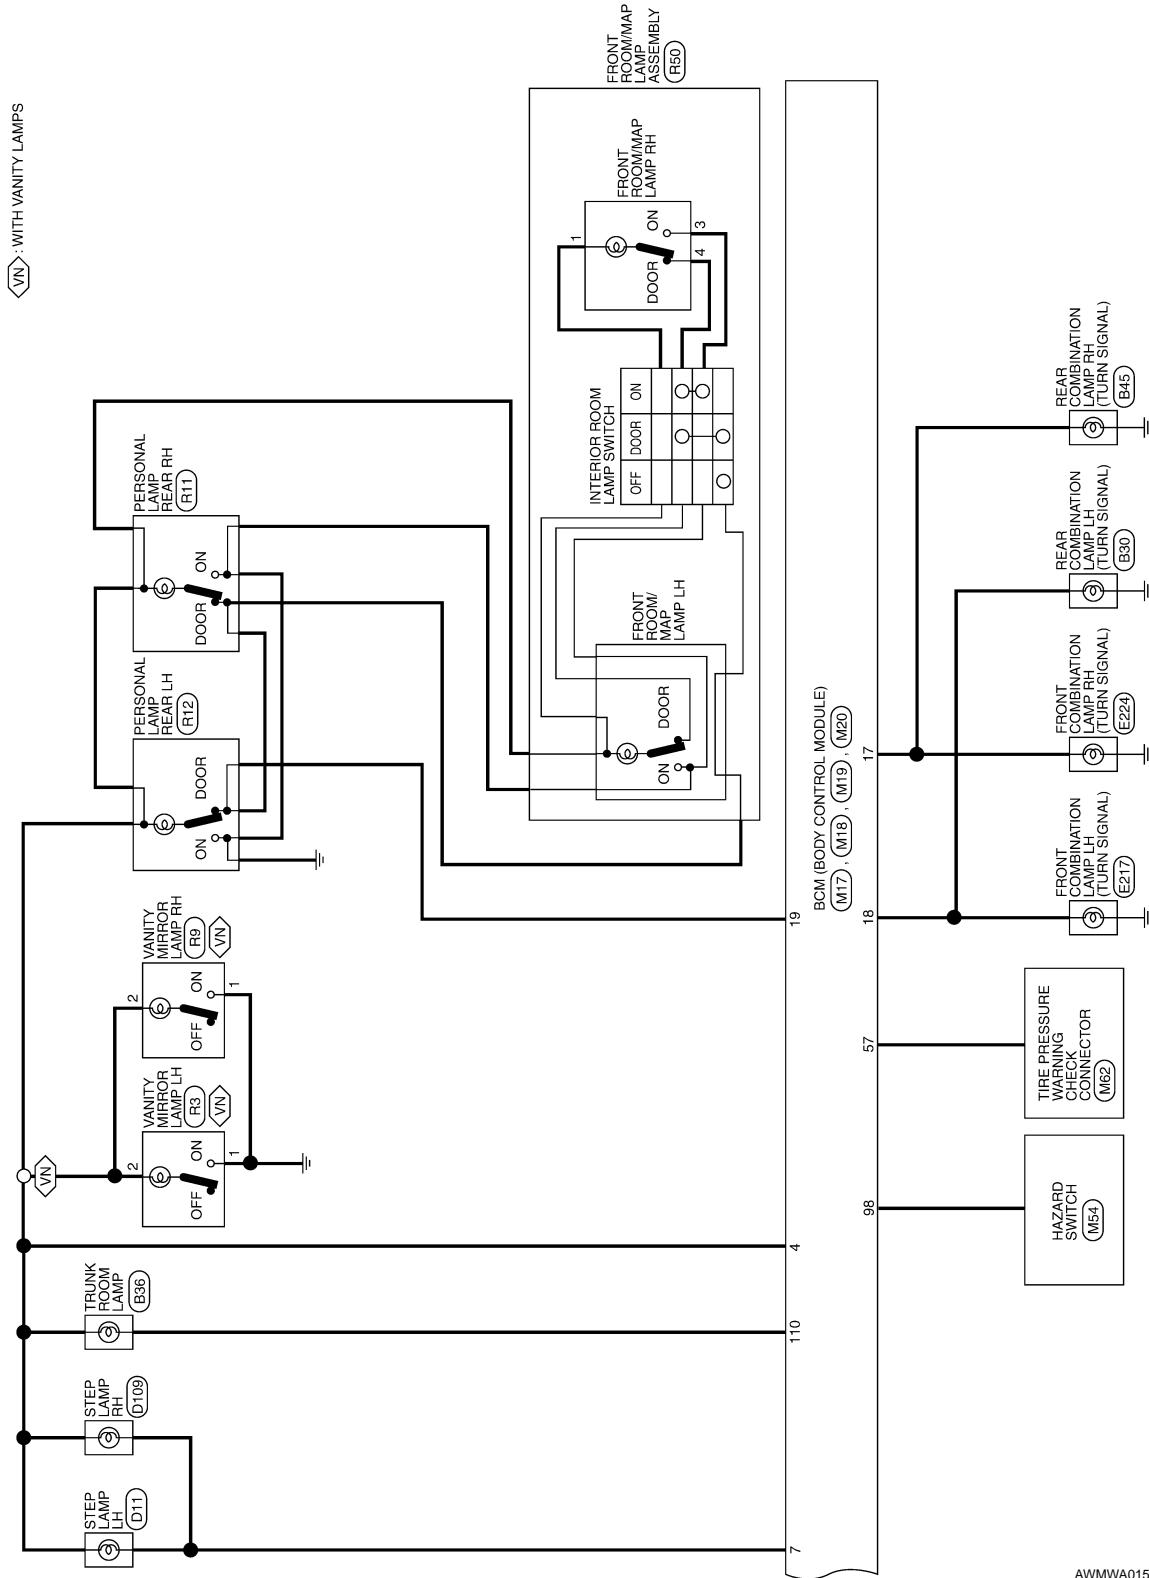
< ECU DIAGNOSIS >

[BCM]



AWMW0A0152G

# BCM (BODY CONTROL MODULE)


[BCM]

< ECU DIAGNOSIS >

## BCM (BODY CONTROL MODULE) CONNECTORS

Connector No.	Color of Wire	Signal Name
M16	W/B	BAT_POWER_F/L
BCM (BODY CONTROL MODULE)	R/Y	PW_POWER_SUPPL_Y_PERM
BLACK	L/W	POWER_WINDOW_POWER_SUPPLY_(RAP)
		

Connector No.	Color of Wire	Signal Name
M17	G	CDL_DRFL
BCM (BODY CONTROL MODULE)	G/Y	CDL_RR_RL_BACK
WHITE	Y/R	BAT_BCM_FUSE
		

Terminal No.	Color of Wire	Signal Name
9	G	CDL_DRFL
10	G/Y	CDL_RR_RL_BACK
11	Y/R	BAT_BCM_FUSE
12	-	-
13	B	GND1
14	R/Y	LOW_SIDE_PUSH_LIED_OUTPUT
15	Y/L	ACC_LED
16	-	-
17	G/B	FR_FLASHER
18	G/Y	FL_FLASHER
19	Y	ROOM_LAMP_OUTPUT

Terminal No.	Color of Wire	Signal Name
27	G/W	DOOR_LOCK_STATUS
28	-	-
29	Y	FOB_IN_SW_1
30	V/Y	ACC_F/B
31	G	GN_F/B
32	R/B	AS_DOOR_SW
33	SB	AIRCON_SW
34	L/R	DOOR_KEY/C_UNLOCK_SW
35	-	-
36	G/R	CENTRAL_UNLOCK_SW
37	O	TRUNK_CANCEL_SW
38	GRW	REAR_DEFROGGER_SW
39	G/R	CENTRAL_UNLOCK_SW
40	Y/G	PW_K-LINE
41	W	PUSH_LED
42	R	S/L_LOCK_LED
43	-	-
44	-	-
45	P	GND_RF2_A/L
46	V/W	A/L_SENS_KEYLESS_TUNER_POWER_SUPPLY

Terminal No.	Color of Wire	Signal Name
39	38	37
39	58	57
39	56	55
39	54	53
39	52	51
39	50	49
39	48	47
39	46	45
39	44	43
39	42	41
39	40	39
39	37	36
39	35	34
39	33	32
39	31	30
39	29	28
39	27	26
39	25	24
39	23	22
39	21	20
40	41	40
40	42	41
40	43	42
40	44	43
40	45	44
40	46	45
40	47	46
40	48	47
40	49	48
40	50	49
40	51	50
40	52	51
40	53	52
40	54	53
40	55	54
40	56	55
40	57	56
40	58	57
41	42	41
41	43	42
41	44	43
41	45	44
41	46	45
41	47	46
41	48	47
41	49	48
41	50	49
41	51	50
41	52	51
41	53	52
41	54	53
41	55	54
41	56	55
41	57	56
41	58	57
41	59	58
41	60	59
41	61	60
41	62	61
41	63	62
41	64	63
41	65	64
41	66	65
41	67	66
41	68	67
41	69	68
41	70	69
41	71	68
41	72	67
41	73	66
41	74	65
41	75	64
41	76	63
41	77	62
41	78	61
41	79	60
41	80	59
41	81	58
41	82	57
41	83	56
41	84	55
41	85	54
41	86	53
41	87	52
41	88	51
41	89	50
41	90	49
41	91	48
41	92	47
41	93	46
41	94	45
41	95	44
41	96	43
41	97	42
41	98	41
41	99	40
41	100	39
41	101	38
41	102	37
41	103	36
41	104	35
41	105	34
41	106	33
41	107	32
41	108	31
41	109	30
41	110	29
41	111	28
41	112	27
41	113	26
41	114	25
41	115	24
41	116	23
41	117	22
41	118	21
41	119	20



# BCM (BODY CONTROL MODULE)

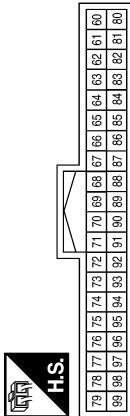
< ECU DIAGNOSIS >

[BCM]

Terminal No.	Color of Wire	Signal Name	Terminal No.	Color of Wire	Signal Name
66	R	ROOM_ANT_1_B	84	Y/R	AT_DEVICE_OUT
67	G	ROOM_ANT_1_A	85	L/O	S/L_CONDITION_1
68	G/O	FOB_READER_CLOCK	86	G/R	S/L_CONDITION_2
69	O	FOB_READER_DATA	87	G/B	SHIFT_P
70	R/B	IGN_ELEC_CONT	88	P/L	AS_REQUEST
71	L/O	RF1_TUNER_SIGNAL	89	B/W	DR_REQUEST
72	-	-	90	Y	SWITCH
73	-	-	91	L/R	IGN2_CONT
75	R/Y	OUTPUT_5	92	-	SWITCH
76	R/G	OUTPUT_3	93	-	-
77	BR	ENG_START_SW	94	G/Y	RF1_POWER_SUPPLY_12V
78	P	CAN-L	95	R/W	OUTPUT_1
79	L	CAN-H	96	P/B	OUTPUT_4
60	B/R	ROOM_ANT_2_B	97	R/B	OUTPUT_2
61	W/R	ROOM_ANT_2_A	98	G/O	HAZARD_SW
62	B/Y	AS_DOOR_ANT_B	99	L/Y	S/L_K-LINE
63	L/G	AS_DOOR_ANT_A			
64	V	DR_DOOR_ANT_B			
65	P	DR_DOOR_ANT_A			

Terminal No.	Color of Wire	Signal Name
79	78	77
78	77	76
76	75	74
75	73	71
73	71	69
69	68	67
67	66	65
65	64	63
63	62	61
61	60	60
99	98	97
98	97	96
96	95	94
94	93	92
92	91	90
90	89	88
88	87	86
86	85	84
84	83	82
82	81	80

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
60	B/R	ROOM_ANT_2_B
61	W/R	ROOM_ANT_2_A
62	B/Y	AS_DOOR_ANT_B
63	L/G	AS_DOOR_ANT_A
64	V	DR_DOOR_ANT_B
65	P	DR_DOOR_ANT_A



Terminal No.	Color of Wire	Signal Name
100	-	-
101	-	-
102	-	-
103	V	CDL_BACK_TRUNK
104	-	-
105	-	-
106	-	-
107	-	-
108	-	-
109	-	-
110	V/W	TRUNK_LAMP_OUTPUT
111	-	-

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE




# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >


[BCM]

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name	Terminal No.	Color of Wire	Signal Name
119	BR/W	BACK_DOOR_ANT_A	1	R/L	WASH_MTR
120	-	-	2	G/Y	OUTPUT_4
121	-	-	3	-	-
122	-	-	4	-	-
123	-	-	5	L/G/R	OUTPUT_3
124	-	-	6	B	GND
125	-	-	7	R/G	INPUT_3
126	-	-	8	L/G/B	OUTPUT_5
127	BR/W	IGN_USM_CONT1	9	R/B	INPUT_2
128	-	-	10	P/B	INPUT_4
129	-	-	11	R/W	INPUT_1
130	Y/G	TRUNK_SW	12	L/W	OUTPUT_1
131	-	-	13	R/Y	INPUT_5
132	R	ST_CONT_USM	14	G/B	OUTPUT_2
133	-	-	15	-	-
134	-	-	16	-	-
135	-	-			
136	-	-			
137	-	-			
138	-	-			
139	-	-			
140	-	-			
141	G/R	TRUNK_REQUEST_SW			
142	-	-			
143	-	-			
144	GR	BUZZER			
145	-	-			
146	-	-			
147	L/R	BACK_TRUNK_OPENER			
148	R/W	RR_DOOR_SW			
149	R/B	RL_DOOR_SW			
150	-	-			
151	-	-			

Terminal No.	Color of Wire	Signal Name
112	-	-
113	-	-
114	B	TRUNK_ANT_1_B
115	W	TRUNK_ANT_1_A
116	-	-
117	-	-
118	L/O	BACK_DOOR_ANT_B

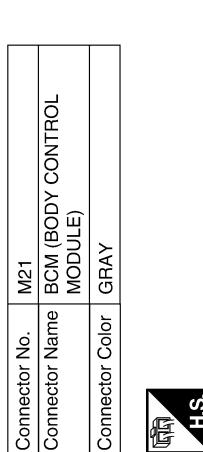

Terminal No.	Color of Wire	Signal Name
112	-	-
113	-	-
114	B	TRUNK_ANT_1_B
115	W	TRUNK_ANT_1_A
116	-	-
117	-	-
118	L/O	BACK_DOOR_ANT_B

BCS

N

O

P

A B C D E F G H I K L M P

Fail Safe

AWMIA0294GB

INFOID:0000000001344681

Display contents of CONSULT	Fail-safe	Cancellation
B2013: ID DISCORD BCM-S/L	Inhibit engine cranking	Erase DTC
B2014: CHAIN OF S/L-BCM	Inhibit engine cranking	Erase DTC
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC

# BCM (BODY CONTROL MODULE)

[BCM]

< ECU DIAGNOSIS >

Display contents of CONSULT	Fail-safe	Cancellation
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI-SCANNING	Inhibit engine cranking	Erase DTC
B2557: VEHICLE SPEED	Inhibit electronic steering column lock	When normal vehicle speed signals have been received from ABS actuator and electric unit (control unit) for 500 ms
B2560: STARTER CONT RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> <li>• Starter control relay signal</li> <li>• Starter relay status signal</li> </ul>
B2562: LO VOLTAGE	<ul style="list-style-type: none"> <li>• Inhibit engine cranking</li> <li>• Inhibit electronic steering column lock</li> </ul>	100 ms after the power supply voltage increases to more than 8.8 V
B2563: HI VOLTAGE	<ul style="list-style-type: none"> <li>• Inhibit engine cranking</li> <li>• Inhibit electronic steering column lock</li> </ul>	500 ms after the power supply voltage decreases to less than 18 V
B2601: SHIFT POSITION	Inhibit electronic steering column lock	500 ms after the following signal reception status becomes consistent <ul style="list-style-type: none"> <li>• Selector lever P position switch signal</li> <li>• P range signal (CAN)</li> </ul>
B2602: SHIFT POSITION	Inhibit electronic steering column lock	5 seconds after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>• Ignition switch is in the ON position</li> <li>• Selector lever P position switch signal: Except P position (battery voltage)</li> <li>• Vehicle speed: 4 /h or more</li> </ul>
B2603: SHIFT POSI STATUS	Inhibit electronic steering column lock	500 ms after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>• Ignition switch is in the ON position</li> <li>• Selector lever P position switch signal: Except P position (battery voltage)</li> <li>• Selector lever P/N position signal: Except P and N positions (0 V)</li> </ul>
B2604: PNP SW	Inhibit electronic steering column lock	500 ms after any of the following BCM recognition conditions is fulfilled <ul style="list-style-type: none"> <li>• Status 1 <ul style="list-style-type: none"> <li>- Ignition switch is in the ON position</li> <li>- Selector lever P/N position signal: P and N position (battery voltage)</li> <li>- P range signal or N range signal (CAN): ON</li> </ul> </li> <li>• Status 2 <ul style="list-style-type: none"> <li>- Ignition switch is in the ON position</li> <li>- Selector lever P/N position signal: Except P and N positions (0 V)</li> <li>- P range signal and N range signal (CAN): OFF</li> </ul> </li> </ul>
B2605: PNP SW	Inhibit electronic steering column lock	500 ms after any of the following BCM recognition conditions is fulfilled <ul style="list-style-type: none"> <li>• Ignition switch is in the ON position</li> <li>• Power position: IGN</li> <li>• Selector lever P/N position signal: Except P and N positions (0 V)</li> <li>• Interlock/PNP switch signal (CAN): OFF</li> <li>• Status 2 <ul style="list-style-type: none"> <li>- Ignition switch is in the ON position</li> <li>- Selector lever P/N position signal: P or N position (battery voltage)</li> <li>- PNP switch signal (CAN): ON</li> </ul> </li> </ul>
B2606: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> <li>• Electronic steering column lock relay signal (Request signal)</li> <li>• Electronic steering column lock relay signal (Condition signal)</li> </ul>

# BCM (BODY CONTROL MODULE)

[BCM]

< ECU DIAGNOSIS >

Display contents of CONSULT	Fail-safe	Cancellation
B2607: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> <li>• Electronic steering column lock relay signal (Request signal)</li> <li>• Electronic steering column lock relay signal (Condition signal)</li> </ul>
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> <li>• Starter motor relay control signal</li> <li>• Starter relay status signal (CAN)</li> </ul>
B2609: S/L STATUS	<ul style="list-style-type: none"> <li>• Inhibit engine cranking</li> <li>• Inhibit electronic steering column lock</li> </ul>	When the following electronic steering column lock conditions agree <ul style="list-style-type: none"> <li>• BCM electronic steering column lock control status</li> <li>• Electronic steering column lock condition No. 1 signal status</li> <li>• Electronic steering column lock condition No. 2 signal status</li> </ul>
B260A: IGNITION RELAY	Inhibit engine cranking	500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> <li>• IGN relay (IPDM E/R) control signal: OFF (Battery voltage)</li> <li>• Ignition ON signal (CAN to IPDM E/R): OFF (Request signal)</li> <li>• Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)</li> </ul>
B260F: ENG STATE SIG LOST	Maintains the power supply position attained at the time of DTC detection	When any of the following conditions is fulfilled <ul style="list-style-type: none"> <li>• Power position changes to ACC</li> <li>• Receives engine status signal (CAN)</li> </ul>
B2612: S/L STATUS	<ul style="list-style-type: none"> <li>• Inhibit engine cranking</li> <li>• Inhibit electronic steering column lock</li> </ul>	When any of the following conditions is fulfilled <ul style="list-style-type: none"> <li>• Electronic steering column lock unit status signal (CAN) is received normally</li> <li>• The BCM electronic steering column lock control status matches the electronic steering column lock status recognized by the electronic steering column lock unit status signal (CAN from IPDM E/R)</li> </ul>
B2617: STARTER RELAY CIRC	Inhibit engine cranking	1 second after the starter motor relay control inside BCM becomes normal
B2618: BCM	Inhibit engine cranking	1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal
B2619: BCM	Inhibit engine cranking	1 second after the electronic steering column lock unit power supply output control inside BCM becomes normal
B261E: VEHICLE TYPE	Inhibit engine cranking	BCM initialization
B26E1: ENG STATE NO RECIV	Inhibit engine cranking	When any of the following conditions is fulfilled <ul style="list-style-type: none"> <li>• Power position changes to ACC</li> <li>• Receives engine status signal (CAN)</li> </ul>

## DTC Inspection Priority Chart

INFOID:000000001344682

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

BCS

Priority	DTC
1	<ul style="list-style-type: none"> <li>• B2562: LOW VOLTAGE</li> <li>• B2563: HI VOLTAGE</li> <li>• B261E: VEHICLE TYPE</li> </ul>
2	<ul style="list-style-type: none"> <li>• U1000: CAN COMM CIRCUIT</li> <li>• U1010: CONTROL UNIT (CAN)</li> </ul>
3	<ul style="list-style-type: none"> <li>• B2190: NATS ANTENNA AMP</li> <li>• B2191: DIFFERENCE OF KEY</li> <li>• B2192: ID DISCORD BCM-ECM</li> <li>• B2193: CHAIN OF BCM-ECM</li> </ul>

# BCM (BODY CONTROL MODULE)

[BCM]

< ECU DIAGNOSIS >

Priority	DTC
4	<ul style="list-style-type: none"> <li>• B2013: ID DISCORD BCM-S/L</li> <li>• B2014: CHAIN OF S/L-BCM</li> <li>• B2553: IGNITION RELAY</li> <li>• B2555: STOP LAMP</li> <li>• B2556: PUSH-BTN IGN SW</li> <li>• B2557: VEHICLE SPEED</li> <li>• B2560: STARTER CONT RELAY</li> <li>• B2601: SHIFT POSITION</li> <li>• B2602: SHIFT POSITION</li> <li>• B2603: SHIFT POSI STATUS</li> <li>• B2604: PNP SW</li> <li>• B2605: PNP SW</li> <li>• B2606: S/L RELAY</li> <li>• B2607: S/L RELAY</li> <li>• B2608: STARTER RELAY</li> <li>• B2609: S/L STATUS</li> <li>• B260A: IGNITION RELAY</li> <li>• B260B: STEERING LOCK UNIT</li> <li>• B260C: STEERING LOCK UNIT</li> <li>• B260D: STEERING LOCK UNIT</li> <li>• B260F: ENG STATE SIG LOST</li> <li>• B2611: ACC RELAY</li> <li>• B2612: S/L STATUS</li> <li>• B2614: ACC RELAY CIRC</li> <li>• B2615: BLOWER RELAY CIRC</li> <li>• B2616: IGN RELAY CIRC</li> <li>• B2617: STARTER RELAY CIRC</li> <li>• B2618: BCM</li> <li>• B2619: BCM</li> <li>• B261A: PUSH-BTN IGN SW</li> <li>• B26E1: ENG STATE NO RECIV</li> <li>• C1729: VHCL SPEED SIG ERR</li> <li>• U0415: VEHICLE SPEED SIG</li> </ul>
5	<ul style="list-style-type: none"> <li>• C1704: LOW PRESSURE FL</li> <li>• C1705: LOW PRESSURE FR</li> <li>• C1706: LOW PRESSURE RR</li> <li>• C1707: LOW PRESSURE RL</li> <li>• C1708: [NO DATA] FL</li> <li>• C1709: [NO DATA] FR</li> <li>• C1710: [NO DATA] RR</li> <li>• C1711: [NO DATA] RL</li> <li>• C1712: [CHECKSUM ERR] FL</li> <li>• C1713: [CHECKSUM ERR] FR</li> <li>• C1714: [CHECKSUM ERR] RR</li> <li>• C1715: [CHECKSUM ERR] RL</li> <li>• C1716: [PRESSDATA ERR] FL</li> <li>• C1717: [PRESSDATA ERR] FR</li> <li>• C1718: [PRESSDATA ERR] RR</li> <li>• C1719: [PRESSDATA ERR] RL</li> <li>• C1720: [CODE ERR] FL</li> <li>• C1721: [CODE ERR] FR</li> <li>• C1722: [CODE ERR] RR</li> <li>• C1723: [CODE ERR] RL</li> <li>• C1724: [BATT VOLT LOW] FL</li> <li>• C1725: [BATT VOLT LOW] FR</li> <li>• C1726: [BATT VOLT LOW] RR</li> <li>• C1727: [BATT VOLT LOW] RL</li> <li>• C1734: CONTROL UNIT</li> </ul>
6	<ul style="list-style-type: none"> <li>• B2621: INSIDE ANTENNA</li> <li>• B2622: INSIDE ANTENNA</li> <li>• B2623: INSIDE ANTENNA</li> </ul>

# BCM (BODY CONTROL MODULE)

[BCM]

< ECU DIAGNOSIS >

## DTC Index

INFOID:000000001344683

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

### NOTE:

Details of time display

- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
- 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

CONSULT display	Fail-safe	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—	—
U1000: CAN COMM CIRCUIT	—	—	—	<a href="#">BCS-31</a>
U1010: CONTROL UNIT (CAN)	—	—	—	<a href="#">BCS-32</a>
U0415: VEHICLE SPEED SIG	—	—	—	<a href="#">BCS-33</a>
B2013: ID DISCORD BCM-S/L	×	—	—	<a href="#">SEC-41</a>
B2014: CHAIN OF S/L-BCM	×	—	—	<a href="#">SEC-42</a>
B2190: NATS ANTENNA AMP	×	—	—	<a href="#">SEC-34</a>
B2191: DIFFERENCE OF KEY	×	—	—	<a href="#">SEC-38</a>
B2192: ID DISCORD BCM-ECM	×	—	—	<a href="#">SEC-39</a>
B2193: CHAIN OF BCM-ECM	×	—	—	<a href="#">SEC-40</a>
B2553: IGNITION RELAY	—	—	—	<a href="#">PCS-56</a>
B2555: STOP LAMP	—	—	—	<a href="#">SEC-46</a>
B2556: PUSH-BTN IGN SW	—	×	—	<a href="#">SEC-49</a>
B2557: VEHICLE SPEED	×	×	—	<a href="#">SEC-51</a>
B2560: STARTER CONT RELAY	×	×	—	<a href="#">SEC-52</a>
B2562: LOW VOLTAGE	—	—	—	<a href="#">BCS-34</a>
B2563: HI VOLTAGE	×	×	—	<a href="#">BCS-35</a>
B2601: SHIFT POSITION	×	×	—	<a href="#">SEC-53</a>
B2602: SHIFT POSITION	×	×	—	<a href="#">SEC-57</a>
B2603: SHIFT POSI STATUS	×	×	—	<a href="#">SEC-60</a>
B2604: PNP SW	×	×	—	<a href="#">SEC-64</a>
B2605: PNP SW	×	×	—	<a href="#">SEC-66</a>
B2606: S/L RELAY	×	×	—	<a href="#">SEC-68</a>
B2607: S/L RELAY	×	×	—	<a href="#">SEC-69</a>
B2608: STARTER RELAY	×	×	—	<a href="#">SEC-71</a>
B2609: S/L STATUS	×	×	—	<a href="#">SEC-73</a>
B260A: IGNITION RELAY	×	×	—	<a href="#">PCS-58</a>
B260B: STEERING LOCK UNIT	—	×	—	<a href="#">SEC-78</a>
B260C: STEERING LOCK UNIT	—	×	—	<a href="#">SEC-79</a>
B260D: STEERING LOCK UNIT	—	×	—	<a href="#">SEC-80</a>
B260F: ENG STATE SIG LOST	×	×	—	<a href="#">SEC-81</a>
B2611: ACC RELAY	—	—	—	<a href="#">PCS-59</a>
B2612: S/L STATUS	×	×	—	<a href="#">SEC-83</a>

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[BCM]

CONSULT display	Fail-safe	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
B2614: ACC RELAY CIRC	—	×	—	<a href="#">PCS-61</a>
B2615: BLOWER RELAY CIRC	—	×	—	<a href="#">PCS-64</a>
B2616: IGN RELAY CIRC	—	×	—	<a href="#">PCS-67</a>
B2617: STARTER RELAY CIRC	×	×	—	<a href="#">SEC-88</a>
B2618: BCM	×	×	—	<a href="#">PCS-70</a>
B2619: BCM	×	×	—	<a href="#">SEC-90</a>
B261A: PUSH-BTN IGN SW	—	×	—	<a href="#">SEC-91</a>
B261E: VEHICLE TYPE	×	× (Turn ON for 15 seconds)	—	<a href="#">SEC-94</a>
B2621: INSIDE ANTENNA	—	—	—	<a href="#">DLK-44</a>
B2622: INSIDE ANTENNA	—	—	—	<a href="#">DLK-47</a>
B2623: INSIDE ANTENNA	—	—	—	<a href="#">DLK-50</a>
B26E1: ENG STATE NO RES	×	×	—	<a href="#">SEC-82</a>
C1704: LOW PRESSURE FL	—	—	×	<a href="#">WT-23</a>
C1705: LOW PRESSURE FR	—	—	×	<a href="#">WT-23</a>
C1706: LOW PRESSURE RR	—	—	×	<a href="#">WT-23</a>
C1707: LOW PRESSURE RL	—	—	×	<a href="#">WT-23</a>
C1708: [NO DATA] FL	—	—	×	<a href="#">WT-13</a>
C1709: [NO DATA] FR	—	—	×	<a href="#">WT-13</a>
C1710: [NO DATA] RR	—	—	×	<a href="#">WT-13</a>
C1711: [NO DATA] RL	—	—	×	<a href="#">WT-13</a>
C1712: [CHECKSUM ERR] FL	—	—	×	<a href="#">WT-14</a>
C1713: [CHECKSUM ERR] FR	—	—	×	<a href="#">WT-14</a>
C1714: [CHECKSUM ERR] RR	—	—	×	<a href="#">WT-14</a>
C1715: [CHECKSUM ERR] RL	—	—	×	<a href="#">WT-14</a>
C1716: [PRESSDATA ERR] FL	—	—	×	<a href="#">WT-15</a>
C1717: [PRESSDATA ERR] FR	—	—	×	<a href="#">WT-15</a>
C1718: [PRESSDATA ERR] RR	—	—	×	<a href="#">WT-15</a>
C1719: [PRESSDATA ERR] RL	—	—	×	<a href="#">WT-15</a>
C1720: [CODE ERR] FL	—	—	×	<a href="#">WT-14</a>
C1721: [CODE ERR] FR	—	—	×	<a href="#">WT-14</a>
C1722: [CODE ERR] RR	—	—	×	<a href="#">WT-14</a>
C1723: [CODE ERR] RL	—	—	×	<a href="#">WT-14</a>
C1724: [BATT VOLT LOW] FL	—	—	×	<a href="#">WT-14</a>
C1725: [BATT VOLT LOW] FR	—	—	×	<a href="#">WT-14</a>
C1726: [BATT VOLT LOW] RR	—	—	×	<a href="#">WT-14</a>
C1727: [BATT VOLT LOW] RL	—	—	×	<a href="#">WT-14</a>
C1729: VHCL SPEED SIG ERR	—	—	×	<a href="#">WT-16</a>

# COMBINATION SWITCH SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[BCM]

## SYMPTOM DIAGNOSIS

### COMBINATION SWITCH SYSTEM SYMPTOMS

#### Symptom Table

INFOID:000000001344684

1. Perform the data monitor of CONSULT-III to check for any malfunctioning item.
2. Check the malfunction combinations.

Malfunction item: x

Malfunction combination	Data monitor item													
	FR WIPER HI	FR WIPER LOW	FR WASHER SW	FR WIPER INT	INT VOLUME	TURN SIGNAL R	TURN SIGNAL L	TAIL LAMP SW	HI BEAM SW	HEAD LAMP SW 1	HEAD LAMP SW 2	PASSING SW	AUTO LIGHT SW	FR FOG SW
A		x	x			x	x							
B	x			x						x		x		
C					x				x		x			
D					x			x					x	
E					x									x
F	x				x									
G			x		x									
H		x		x									x	
I							x				x	x		x
J						x		x	x	x				
K	All Items													
L	If only one item is detected or the item is not applicable to the combinations A to K													

3. Identify the malfunctioning part from the agreed combination and repair or replace the part.

Malfunction combination	Malfunctioning part	Repair or replace
A	Combination switch INPUT 1 circuit	Inspect the combination switch input circuit applicable to the malfunctioning part. Refer to <a href="#">BCS-37, "Diagnosis Procedure"</a> .
B	Combination switch INPUT 2 circuit	
C	Combination switch INPUT 3 circuit	
D	Combination switch INPUT 4 circuit	
E	Combination switch INPUT 5 circuit	
F	Combination switch OUTPUT 1 circuit	Inspect the combination switch output circuit applicable to the malfunctioning part. Refer to <a href="#">BCS-39, "Diagnosis Procedure"</a> .
G	Combination switch OUTPUT 2 circuit	
H	Combination switch OUTPUT 3 circuit	
I	Combination switch OUTPUT 4 circuit	
J	Combination switch OUTPUT 5 circuit	
K	BCM	Replace BCM. Refer to <a href="#">BCS-88, "Removal and Installation"</a> .
L	Combination switch	Replace the combination switch. Refer to <a href="#">WW-46, "Removal and Installation"</a> .

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
  
BCS  
  
N  
O  
P

&lt; ON-VEHICLE REPAIR &gt;

## ON-VEHICLE REPAIR

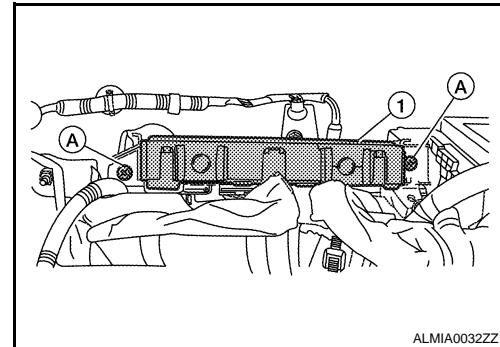
### BCM (BODY CONTROL MODULE)

#### Removal and Installation

INFOID:0000000001344685

##### REMOVAL

1. Remove the combination meter. Refer to MWI-172, "Removal and Installation".
2. Remove the BCM screws (A), and pull out the BCM (1).
3. Disconnect the BCM connector and remove the BCM (1).



ALMIA0032ZZ

##### INSTALLATION

Installation is the reverse order of removal.

**NOTE:**

- When replacing BCM, it must be configured. Refer to the CONSULT-III operation manual for the initialization procedure.
- When replacing BCM, perform initialization of the NATS system and registration of all the intelligent ignition key IDs. Refer to the CONSULT-III operation manual for the initialization procedure.
- When replacing BCM, if new BCM does not come with keyfobs attached, all existing keyfobs must be re-registered.