

WT
SECTION
ROAD WHEELS & TIRES

A
B
C
D

WT

CONTENTS

| | | |
|--|--|----|
| BASIC INSPECTION | Special Repair Requirement | F |
| DIAGNOSIS AND REPAIR WORKFLOW | C1729 VEHICLE SPEED SIGNAL | |
| Repair Work Flow | Description | G |
| INSPECTION AND ADJUSTMENT | DTC Logic | |
| Preliminary Check | Diagnosis Procedure | H |
| Transmitter Wake Up Operation | Special Repair Requirement | |
| ID Registration Procedure | C1734 CONTROL UNIT | |
| FUNCTION DIAGNOSIS | Description | I |
| TPMS | DTC Logic | |
| System Diagram | Diagnosis Procedure | J |
| System Description | Special Repair Requirement | |
| System Components | ECU DIAGNOSIS | |
| DIAGNOSIS SYSTEM (BCM) | BCM (BODY CONTROL MODULE) | |
| CONSULT-III Function (BCM) | Reference Value | K |
| Self-Diagnosis (Without CONSULT-III) | Terminal Layout | |
| COMPONENT DIAGNOSIS | Physical Values | L |
| C1708 - C1711 DATA FROM TRANSMITTER | Wiring Diagram | |
| NOT BEING RECEIVED | Self-Diagnosis (With CONSULT-III) | M |
| Description | Self-Diagnosis (Without CONSULT-III) | |
| DTC Logic | SYMPTOM DIAGNOSIS | |
| Diagnosis Procedure | TPMS | |
| Special Repair Requirement | Symptom Table | N |
| C1712 - C1715, C1720 - C1723, C1724 - | LOW TIRE PRESSURE WARNING LAMP | |
| C1727 TRANSMITTER MALFUNCTION | DOES NOT TURN ON | O |
| Description | Low Tire Pressure Warning Lamp Does Not Come | |
| DTC Logic | On When Ignition Switch Is Turned On | 52 |
| Diagnosis Procedure | LOW TIRE PRESSURE WARNING LAMP | |
| Special Repair Requirement | STAYS ON | P |
| C1716 - C1719 TRANSMITTER PRESSURE | Low Tire Pressure Warning Lamp Stays On When | |
| MALFUNCTION | Ignition Switch Is Turned On | 53 |
| Description | LOW TIRE PRESSURE WARNING LAMP | |
| DTC Logic | BLINKS | 54 |
| Diagnosis Procedure | | |

| | | | |
|--|-----------|--|-----------|
| Low Tire Pressure Warning Lamp Flashes When Ignition Switch Is Turned On | 54 | Commercial Service Tools | 59 |
| HAZARD WARNING LAMPS FLASH | 55 | ON-VEHICLE MAINTENANCE | 60 |
| Hazard Warning Lamps Flash When Ignition Switch Is Turned On | 55 | ROAD WHEEL | 60 |
| ID REGISTRATION CANNOT BE COMPLETED | 56 | Inspection | 60 |
| ID Registration Cannot Be Completed | 56 | ON-VEHICLE REPAIR | 61 |
| NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING | 57 | TIRE PRESSURE RECEIVER | 61 |
| NVH Troubleshooting Chart | 57 | Removal and Installation | 61 |
| PRECAUTION | 58 | ROAD WHEEL TIRE ASSEMBLY | 62 |
| PRECAUTIONS | 58 | Adjustment | 62 |
| Supplemental Restraint System (SRS) AIR BAG and SEAT BELT PRE-TENSIONER | 58 | REMOVAL AND INSTALLATION | 64 |
| Precautions Necessary for Steering Wheel Rotation after Battery Disconnect | 58 | TRANSMITTER | 64 |
| Precaution for work | 58 | Removal and Installation | 64 |
| PREPARATION | 59 | SERVICE DATA AND SPECIFICATIONS (SDS) | 66 |
| PREPARATION | 59 | SERVICE DATA AND SPECIFICATIONS (SDS) | 66 |
| Special Service Tool | 59 | Road Wheel | 66 |
| | | Tire | 66 |

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

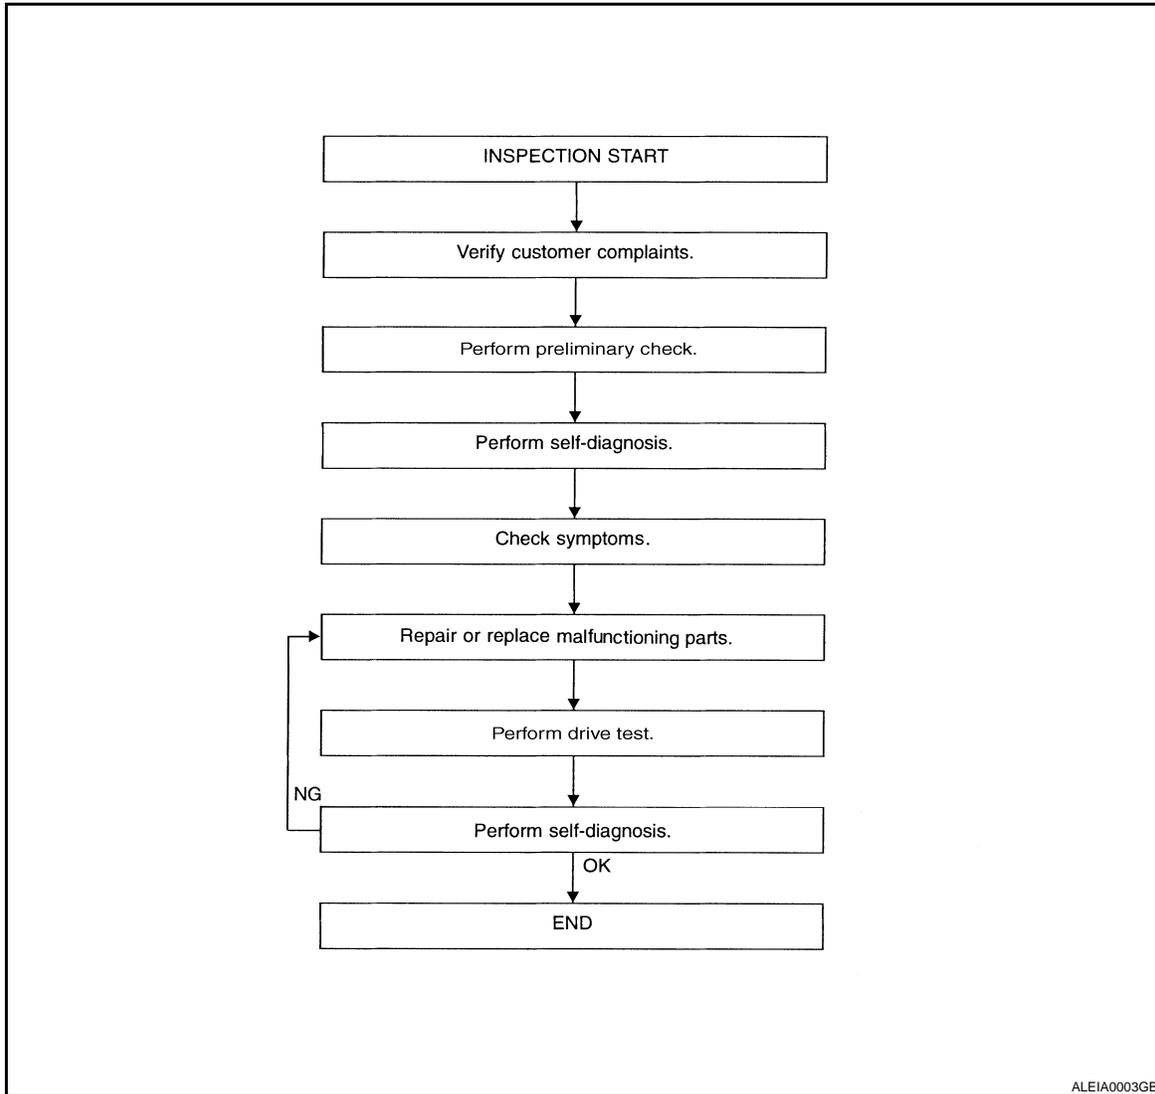
BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Repair Work Flow

INFOID:000000003895051

WORK FLOW



[WT-5. "Preliminary Check"](#)

[WT-48. "Self-Diagnosis \(With CONSULT-III\)"](#)

[WT-51. "Symptom Table"](#)

DETAILED FLOW

1. CUSTOMER INFORMATION

Interview the customer to obtain detailed information about the symptom.

>> GO TO 2

2. PRELIMINARY CHECK

Perform preliminary check. Refer to [WT-5. "Preliminary Check"](#)

>> GO TO 3

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WT

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

3.SELF-DIAGNOSIS

Perform SELF-DIAGNOSIS. Refer to [WT-48, "Self-Diagnosis \(With CONSULT-III\)"](#) (with CONSULT-III) or [WT-49, "Self-Diagnosis \(Without CONSULT-III\)"](#) (without CONSULT-III).

>> GO TO 4

4.SYMPTOM

Check for symptoms. Refer to [WT-51, "Symptom Table"](#).

>> GO TO 5

5.MALFUNCTIONING PARTS

Repair or replace the applicable parts.

>> GO TO 6

6.DRIVE TEST

1. Perform a drive test.
2. Check the low tire pressure warning lamp.

>> GO TO 7

7.SELF-DIAGNOSIS

Perform SELF-DIAGNOSIS. Refer to [WT-48, "Self-Diagnosis \(With CONSULT-III\)"](#) (with CONSULT-III) or [WT-49, "Self-Diagnosis \(Without CONSULT-III\)"](#) (without CONSULT-III).

Are any DTC's displayed?

- YES >> GO TO 5
NO >> Inspection End

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

INSPECTION AND ADJUSTMENT

Preliminary Check

INFOID:000000003895052

1. TIRE PRESSURE

Check all tire pressures. Refer to [WT-66, "Tire"](#).

Is the inspection result normal?

- YES >> GO TO 2
- NO >> Adjust tire pressure to specified value.

2. LOW TIRE PRESSURE WARNING LAMP

Check low tire pressure warning lamp activation.

Does the low tire pressure warning lamp activate for one second when ignition switch is turned ON?

- YES >> GO TO 3
- NO >> GO TO [WT-52, "Low Tire Pressure Warning Lamp Does Not Come On When Ignition Switch Is Turned On"](#).

3. BCM CONNECTOR

1. Disconnect BCM harness connectors.
2. Check terminals for damage or loose connection.
3. Reconnect harness connector.

Is the inspection result normal?

- YES >> GO TO 4
- NO >> Repair or replace damaged parts.

4. TRANSMITTER ACTIVATION TOOL

Check battery in transmitter activation tool.

Is the inspection result normal?

- YES >> Perform SELF-DIAGNOSIS. Refer to [WT-48, "Self-Diagnosis \(With CONSULT-III\)"](#).
- NO >> Replace battery in transmitter activation tool.

Transmitter Wake Up Operation

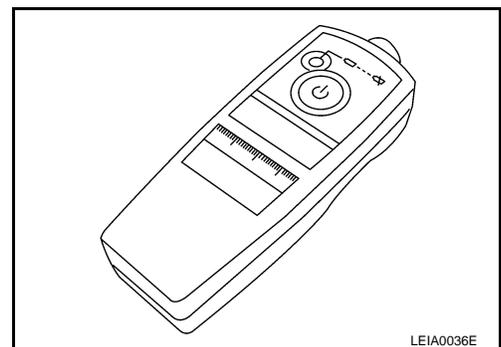
INFOID:000000003895053

NOTE:

This procedure must be done after replacement of a low tire pressure warning transmitter or BCM. New replacement transmitters are provided "asleep" and must first be "woken up" using Transmitter Activation Tool J-45295 before ID registration can be performed.

1. Turn ignition switch ON. Push the transmitter activation tool against the tire near the front left transmitter. Press the button for 5 seconds. The hazard warning lamps flash per the following diagram.

Tool number : (J-45295)




LEIA0036E

2. Repeat this procedure for each tire in the following order: FL, FR, RR, RL.

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

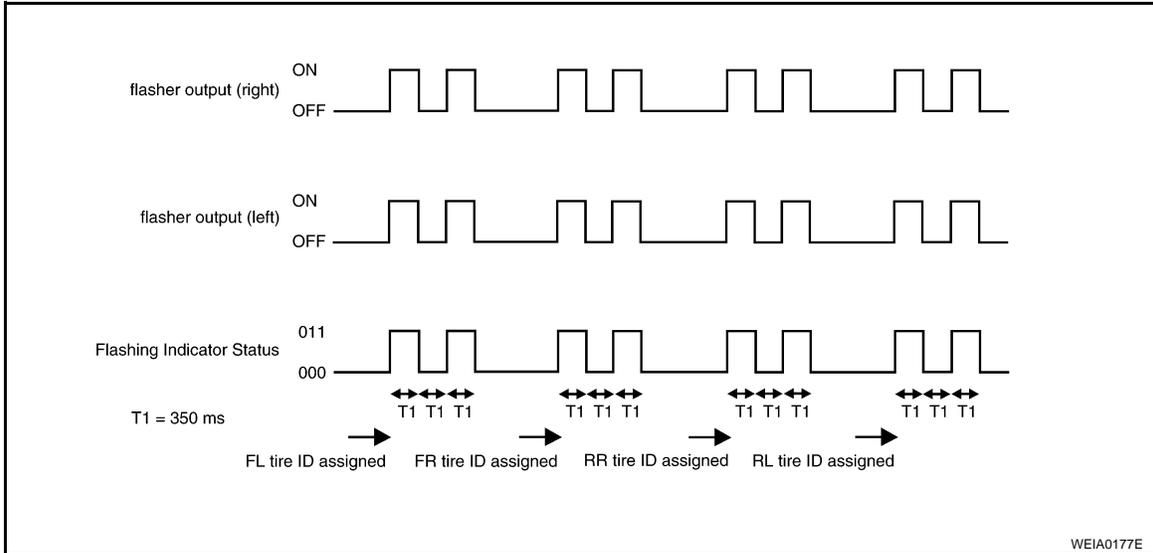- When the BCM finishes assigning each tire ID, the BCM flashes the hazard warning lamps and sends flashing indicator status by CAN according to the following time chart.



- After completing wake up of all transmitters, make sure low tire pressure warning lamp goes out.

ID Registration Procedure

INFOID:000000003895054

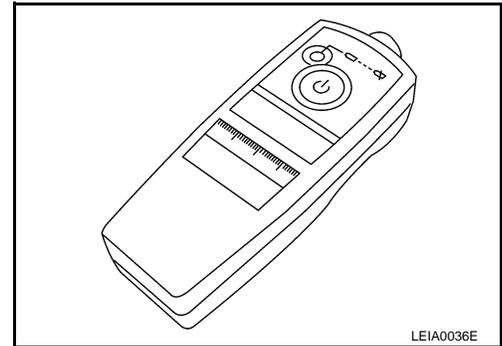
ID REGISTRATION WITH TRANSMITTER ACTIVATION TOOL

NOTE:

This procedure must be done after replacement of a low tire pressure warning transmitter or BCM. New replacement transmitters are provided "asleep" and must first be "woken up" using Transmitter Activation Tool J-45295 before ID registration can be performed.

- Connect CONSULT-III.
- Select "ID REGIST" under BCM.
- Push the transmitter activation tool against the tire near the front left transmitter. Press the button for 5 seconds.

Tool number : (J-45295)



- Register the IDs in order from FR LH, FR RH, RR RH and RR LH. When ID registration of each wheel has been completed, the hazard warning lamps flash.

| Step | Activation tire position | Hazard warning lamp | CONSULT-III |
|------|--------------------------|---------------------|----------------------|
| 1 | Front LH | 2 times flashing | "YET" ↓ "DONE" |
| 2 | Front RH | | |
| 3 | Rear RH | | |
| 4 | Rear LH | | |

- After completing all ID registrations, press "END" to complete the procedure.

NOTE:

Be sure to register all of the IDs in order from FR LH, FR RH, RR RH, to RR LH, or the self-diagnostic results display will not function properly.

ID REGISTRATION WITHOUT TRANSMITTER ACTIVATION TOOL

NOTE:

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

This procedure must be done after replacement of a low tire pressure warning transmitter or BCM. New replacement transmitters are provided "asleep" and must first be "woken up" using Transmitter Activation Tool J-45295 before ID registration can be performed.

1. Connect CONSULT-III.
2. Select "ID REGIST" under BCM.
3. Adjust the tire pressures to the values shown in the table and drive the vehicle at 40 km/h (25 MPH) or more for a few minutes.

| Tire position | Tire pressure kPa (kg/cm ² , psi) |
|---------------|--|
| Front LH | 250 (2.5, 36) |
| Front RH | 230 (2.3, 33) |
| Rear RH | 210 (2.1, 30) |
| Rear LH | 190 (1.9, 27) |

4. After completing all ID registrations, press "END" to complete the procedure.

| Activation tire position | CONSULT-III |
|--------------------------|----------------------|
| Front LH | "YET" ↓ "DONE" |
| Front RH | |
| Rear RH | |
| Rear LH | |

5. Inflate all tires to proper pressure. Refer to [WT-66, "Tire"](#).

TPMS

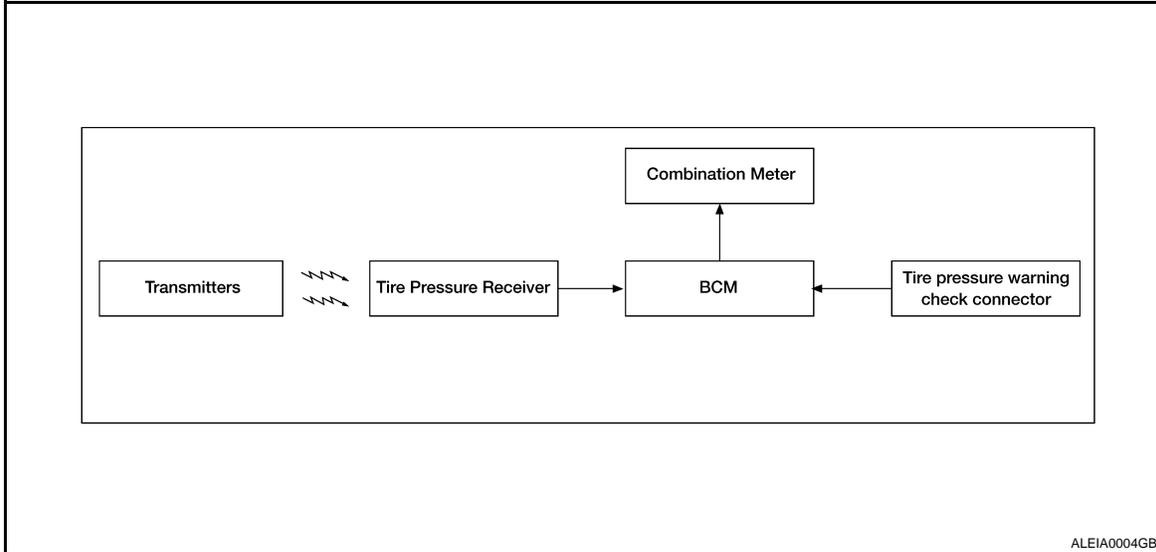
< FUNCTION DIAGNOSIS >

FUNCTION DIAGNOSIS

TPMS

System Diagram

INFOID:000000003895055




System Description

INFOID:000000003895056

BODY CONTROL MODULE (BCM)


The BCM (1) is shown with the combination meter removed. The BCM reads the air pressure signal received by the tire pressure receiver, and controls the low tire pressure warning lamp as shown below. It also has a self-diagnosis function to detect a system malfunction.

| Condition | Low tire pressure warning lamp |
|--|---|
| System normal | On for 1 second after ignition ON |
| Tire pressure less than 174.1 kPa (1.775 kg/cm ² , 25.25 psi) | ON |
| Tire pressure monitoring system malfunction | After key ON, flashes once per second for 1 minute, then stays ON |

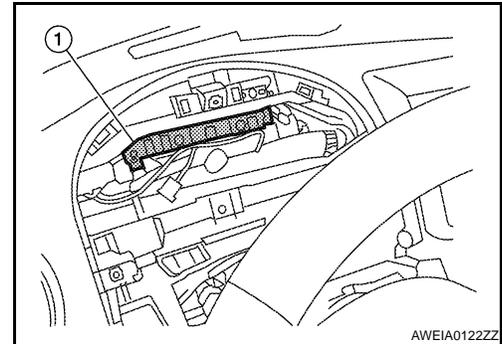

TRANSMITTER

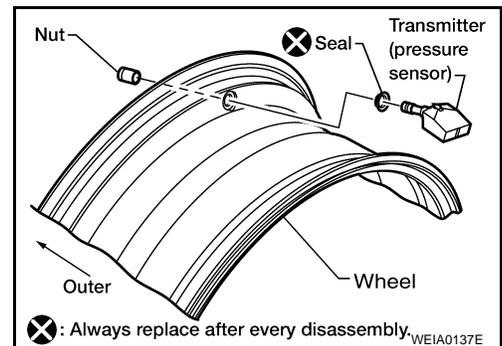A sensor-transmitter integrated with a valve is installed in each wheel. It transmits a detected air pressure signal in the form of a radio wave when the vehicle is moving. The radio signal is received by the tire pressure receiver.




TIRE PRESSURE RECEIVER

TPMS


< FUNCTION DIAGNOSIS >

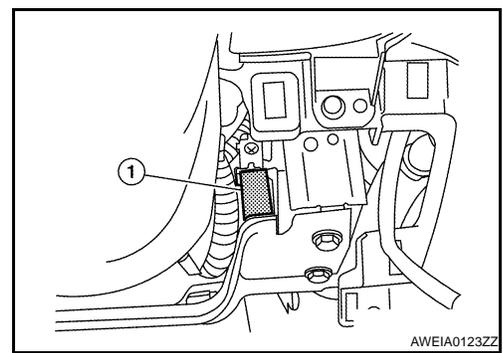The tire pressure receiver (1) is located on the RH side of the steering column, and is shown with the lower instrument panel LH removed. The tire pressure receiver receives the air pressure signal transmitted by the transmitter in each wheel.




COMBINATION METER

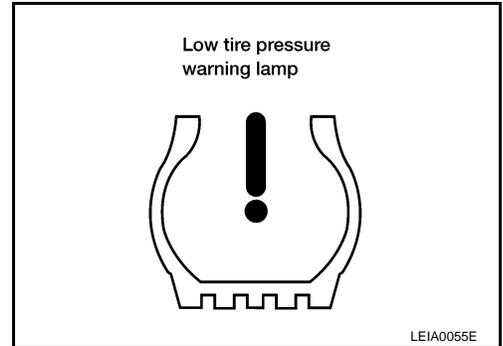The combination meter receives tire pressure status from the BCM using CAN communication. When a low tire pressure condition is sensed by the BCM, the low tire pressure warning lamp is activated.



TIRE PRESSURE WARNING CHECK CONNECTOR

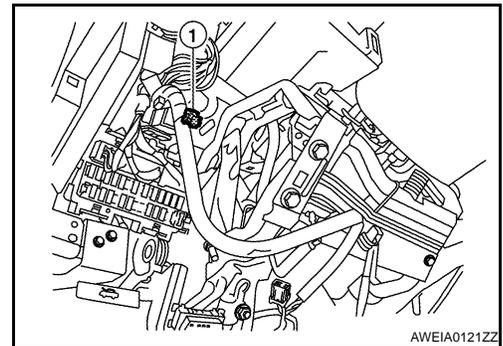The tire pressure warning check connector can be grounded in order to initiate self-diagnosis without a CONSULT-III. Refer to [WT-12. "Self-Diagnosis \(Without CONSULT-III\)"](#). The tire pressure warning check connector (1) is located behind the lower portion of the instrument panel LH, above the hood release handle.




A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

TPMS

< FUNCTION DIAGNOSIS >

System Components

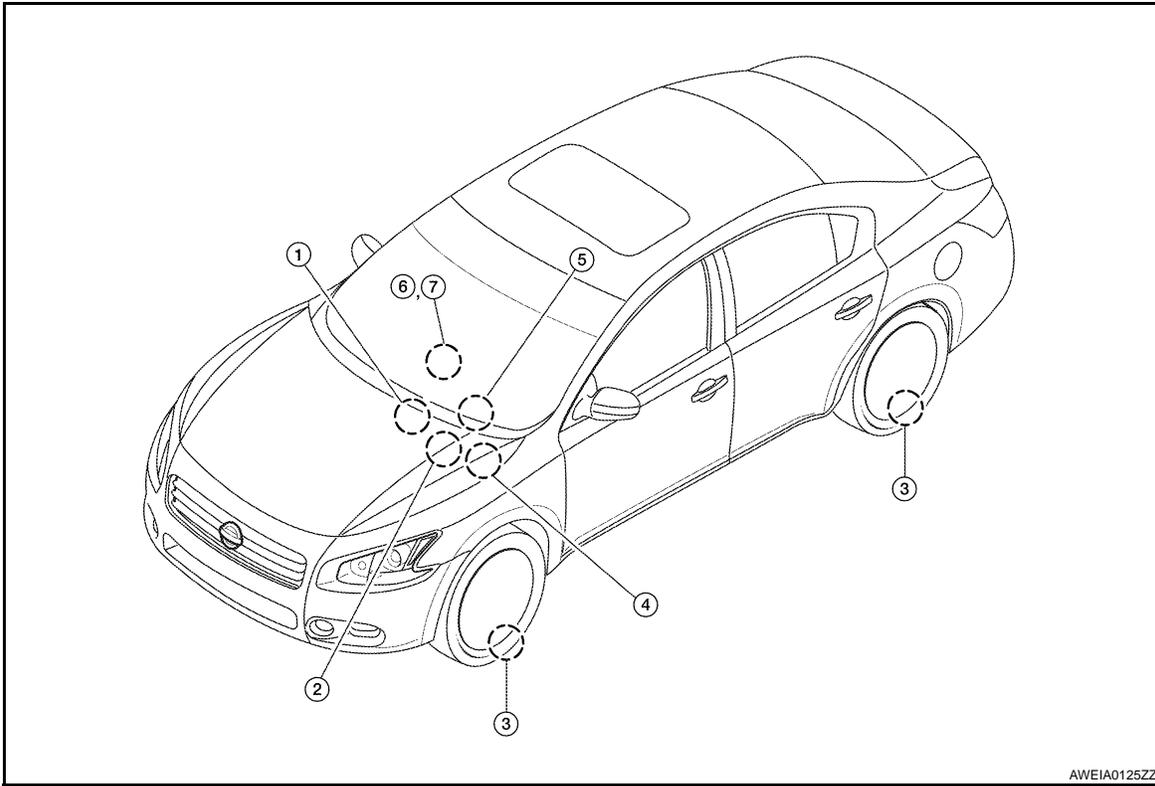INFOID:000000003895057



AWEIA0125ZZ

- | | | |
|--|---------------------------|--|
| 1. Tire pressure receiver M70 | 2. BCM M16, M17, M18, M19 | 3. Transmitters |
| 4. Tire pressure warning check connector M62 | 5. Combination meter M24 | 6. AV control unit M134, M139 (with NAVI) AV control unit M44, M46 (without NAVI) |
| 7. Display unit M142 (with NAVI) Display unit M141 (without NAVI) | | |

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

DIAGNOSIS SYSTEM (BCM)

CONSULT-III Function (BCM)

INFOID:000000003895058

CONSULT-III DIAGNOSTIC MODES

CONSULT-III can display each diagnostic item using the diagnostic test modes as shown.

| Diagnostic mode | Description |
|--------------------------|--|
| Work Support | Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed. |
| Data Monitor | Displays BCM input/output data in real time. |
| Active Test | Operation of electrical loads can be checked by sending drive signal to them. |
| Self-Diagnostic Results | Displays BCM self-diagnosis results. |
| CAN Diag Support Monitor | The result of transmit/receive diagnosis of CAN communication can be read. |
| ECU Identification | BCM part number can be read. |
| Configuration | Performs BCM configuration read/write functions. |

DESCRIPTION

During driving, the tire pressure monitoring system receives the signal transmitted from the transmitter installed in each wheel, and turns on the low tire pressure warning lamp when the tire pressure becomes low. The control unit (BCM) for this system has pressure judgement and self-diagnosis functions.

FUNCTION

When the tire pressure monitoring system detects low inflation pressure or an internal malfunction, the low tire pressure warning lamp in the combination meter comes on. The malfunction is indicated by the low tire pressure warning lamp flashing.

CONSULT-III Application to Tire Pressure Monitoring System

| ITEM | SELF-DIAGNOSTIC RESULTS | DATA MONITOR |
|---------------------------|-------------------------|--------------|
| Front - Left transmitter | × | × |
| Front - Right transmitter | × | × |
| Rear - Left transmitter | × | × |
| Rear - Right transmitter | × | × |
| Warning lamp | — | × |
| Vehicle speed | × | — |
| CAN Communication | × | — |

× : Applicable

— : Not applicable

Data Monitor Mode

| MONITOR | CONDITION | SPECIFICATION |
|--|---|---|
| AIR PRESS FL AIR PRESS FR AIR PRESS RR AIR PRESS RL | <ul style="list-style-type: none"> Drive vehicle for a few minutes. <p>or</p> <ul style="list-style-type: none"> Ignition switch ON and activation tool is transmitting activation signals. | Tire pressure (kPa or psi) |
| ID REGST FL1 ID REGST FR1 ID REGST RR1 ID REGST RL1 | Ignition switch ON | ID not registered: YET ID registered: DONE |
| WARNING LAMP | | Low tire pressure warning lamp on: ON |
| BUZZER | | Low tire pressure warning lamp off: OFF |

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

NOTE:

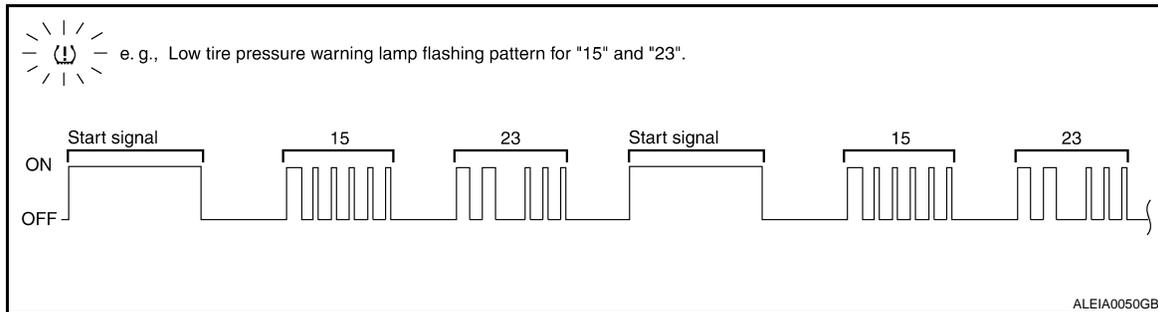
Before performing the self-diagnosis, be sure to register the ID, or the actual malfunction location may be different from that displayed on CONSULT-III.

Self-Diagnosis (Without CONSULT-III)

INFOID:000000004176203

SELF DIAGNOSTIC PROCEDURE (WITHOUT CONSULT-III)

1. Turn ignition switch ON.
2. Ground the tire pressure warning check connector to initiate self diagnosis.
3. Compare the flashing pattern with the flash code chart below.



NOTE:

The system is normal when the low tire pressure warning lamp flashes 5 times and continues repeating. Self-diagnosis results are erased automatically by turning the ignition switch OFF.

| Flash Code | Malfunction part | Reference page |
|----------------------|--|-----------------------|
| 15 16 17 18 | Tire pressure dropped below specified value. Refer to WT-8, "System Description" . | — |
| 21 22 23 24 | Transmitter no data (FL) Transmitter no data (FR) Transmitter no data (RR) Transmitter no data (RL) | WT-13 |
| 31 32 33 34 | Transmitter checksum error (FL) Transmitter checksum error (FR) Transmitter checksum error (RR) Transmitter checksum error (RL) | WT-15 |
| 35 36 37 38 | Transmitter pressure data error (FL) Transmitter pressure data error (FR) Transmitter pressure data error (RR) Transmitter pressure data error (RL) | WT-17 |
| 41 42 43 44 | Transmitter function code error (FL) Transmitter function code error (FR) Transmitter function code error (RR) Transmitter function code error (RL) | WT-15 |
| 45 46 47 48 | Transmitter battery voltage low (FL) Transmitter battery voltage low (FR) Transmitter battery voltage low (RR) Transmitter battery voltage low (RL) | WT-15 |
| 52 | Vehicle speed signal | WT-18 |
| 53 | TPMS malfunction in BCM | WT-19 |

C1708 - C1711 DATA FROM TRANSMITTER NOT BEING RECEIVED

< COMPONENT DIAGNOSIS >

COMPONENT DIAGNOSIS

C1708 - C1711 DATA FROM TRANSMITTER NOT BEING RECEIVED

Description

INFOID:000000004173729

Tire pressure data for one or more transmitters is not being received by the BCM.

DTC Logic

INFOID:000000004173730

DTC DETECTION LOGIC

| DTC | CONSULT-III | DTC detecting condition |
|-------|------------------|--|
| C1708 | [NO - DATA] - FL | Data from FL transmitter cannot be received. |
| C1709 | [NO - DATA] - FR | Data from FR transmitter cannot be received. |
| C1710 | [NO - DATA] - RR | Data from RR transmitter cannot be received. |
| C1711 | [NO - DATA] - RL | Data from RL transmitter cannot be received. |

DTC CONFIRMATION PROCEDURE

1.ID REGISTRATION AND VEHICLE DRIVING

1. Carry out ID registration of all transmitters. Refer to [WT-6. "ID Registration Procedure"](#).
2. Drive at a speed of 40 km/h (25 MPH) or more for 3 minutes, and then drive the vehicle at any speed for 10 minutes.
3. Check all tire pressures with CONSULT-III within 5 minutes.

Does "DATA MONITOR ITEM" display tire pressure as normal without any warning lamp?

YES >> Inspection End.

NO >> Refer to [WT-13. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000003895060

MALFUNCTION CODE NO. 21, 22, 23 OR 24 (DTC C1708, C1709, C1710 OR C1711)

1.CHECK BCM

Drive for several minutes. Check all tire pressures with CONSULT-III.

Are all tire pressures displayed as 0 kPa?

YES >> GO TO 2

NO >> GO TO 3

2.CHECK TIRE PRESSURE RECEIVER CONNECTOR

Check tire pressure receiver connector for damage or loose connections.

Is the inspection result normal?

YES >> Replace BCM, then GO TO 3. Refer to [BCS-87. "Removal and Installation"](#).

NO >> Repair or replace tire pressure receiver connector.

3.PERFORM ID REGISTRATION

Carry out ID registration of all transmitters. Refer to [WT-6. "ID Registration Procedure"](#).

Is there a tire that cannot register ID?

YES >> Replace malfunctioning transmitter, then GO TO 5. Refer to [WT-64. "Removal and Installation"](#).

NO >> GO TO 4

4.DRIVE VEHICLE

1. Drive at a speed of 40 km/h (25 MPH) or more for several minutes without stopping.
2. Check all tire pressures with CONSULT-III within 15 minutes after vehicle speed becomes 17 km/h (11 MPH).

Does "DATA MONITOR ITEM" display tire pressure as normal without any warning lamp?

YES >> Inspection End.

C1708 - C1711 DATA FROM TRANSMITTER NOT BEING RECEIVED

< COMPONENT DIAGNOSIS >

NO >> GO TO 5

5.ID REGISTRATION AND VEHICLE DRIVING

1. Carry out ID registration of all transmitters. Refer to [WT-6, "ID Registration Procedure"](#).
2. Drive at a speed of 40 km/h (25 MPH) or more for 3 minutes, and then drive the vehicle at any speed for 10 minutes.
3. Check all tire pressures with CONSULT-III within 5 minutes.

Does "DATA MONITOR ITEM" display tire pressure as normal without any warning lamp?

YES >> Inspection End.

NO >> Proceed to the inspection applicable to DTC.

Special Repair Requirement

INFOID:000000004173731

Perform preliminary check. Refer to [WT-5, "Preliminary Check"](#).

C1712 - C1715, C1720 - C1723, C1724 - C1727 TRANSMITTER MALFUNCTION

< COMPONENT DIAGNOSIS >

C1712 - C1715, C1720 - C1723, C1724 - C1727 TRANSMITTER MALFUNCTION

Description

INFOID:000000004173733

One or more transmitters are malfunctioning internally.

DTC Logic

INFOID:000000004173734

DTC DETECTION LOGIC

| DTC | CONSULT-III | DTC detecting condition |
|-------|--------------------------|---|
| C1712 | [CHECKSUM - ERR] - FL | Checksum data from FL transmitter is malfunctioning. |
| C1713 | [CHECKSUM - ERR] - FR | Checksum data from FR transmitter is malfunctioning. |
| C1714 | [CHECKSUM - ERR] - RR | Checksum data from RR transmitter is malfunctioning. |
| C1715 | [CHECKSUM - ERR] - RL | Checksum data from RL transmitter is malfunctioning. |
| C1720 | [CODE - ERR] - FL | Function code data from FL transmitter is malfunctioning. |
| C1721 | [CODE - ERR] - FR | Function code data from FR transmitter is malfunctioning. |
| C1722 | [CODE - ERR] - RR | Function code data from RR transmitter is malfunctioning. |
| C1723 | [CODE - ERR] - RL | Function code data from RL transmitter is malfunctioning. |
| C1724 | [BATT - VOLT - LOW] - FL | Battery voltage of FL transmitter drops. |
| C1725 | [BATT - VOLT - LOW] - FR | Battery voltage of FR transmitter drops. |
| C1726 | [BATT - VOLT - LOW] - RR | Battery voltage of RR transmitter drops. |
| C1727 | [BATT - VOLT - LOW] - RL | Battery voltage of RL transmitter drops. |

DTC CONFIRMATION PROCEDURE

1. DRIVE VEHICLE

1. Drive at a speed of 40 km/h (25 MPH) or more for 3 minutes, and then drive the vehicle at any speed for 10 minutes.
2. Check all tire pressures with CONSULT-III within 5 minutes.

Does "DATA MONITOR ITEM" display tire pressure as normal without any warning lamp?

YES >> Inspection End.

NO >> Refer to [WT-15. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000003895061

MALFUNCTION CODE NO. 31, 32, 33, 34, 41, 42, 43, 44, 45, 46, 47 OR 48 (DTC C1712, C1713, C1714, C1715, C1720, C1721, C1722, C1723, C1724, C1725, C1726 OR C1727)

1. PERFORM ID REGISTRATION

1. Carry out ID registration of all transmitters. Refer to [WT-6. "ID Registration Procedure"](#).
2. Drive at a speed of 40 km/h (25 MPH) or more for 3 minutes, and then drive the vehicle at any speed for 10 minutes.

>> GO TO 2

2. REPLACE TRANSMITTER

1. Check low tire pressure warning lamp again for flashing, replace malfunctioning transmitter. Refer to [WT-64. "Removal and Installation"](#).
2. Carry out ID registration of all transmitters. Refer to [WT-6. "ID Registration Procedure"](#).

Can ID registration of all transmitters be completed?

YES >> GO TO 3

NO >> GO TO [WT-13. "Diagnosis Procedure"](#).

C1712 - C1715, C1720 - C1723, C1724 - C1727 TRANSMITTER MALFUNCTION

< COMPONENT DIAGNOSIS >

3. DRIVE VEHICLE

1. Drive at a speed of 40 km/h (25 MPH) or more for 3 minutes, and then drive the vehicle at any speed for 10 minutes.
2. Check all tire pressures with CONSULT-III within 5 minutes.

Does "DATA MONITOR ITEM" display tire pressure as normal without any warning lamp?

YES >> Inspection End.

NO >> Replace malfunctioning transmitter, and perform Step 3 again. Refer to [WT-64. "Removal and Installation"](#).

Special Repair Requirement

INFOID:000000004173743

Perform preliminary check. Refer to [WT-5. "Preliminary Check"](#).

C1716 - C1719 TRANSMITTER PRESSURE MALFUNCTION

< COMPONENT DIAGNOSIS >

C1716 - C1719 TRANSMITTER PRESSURE MALFUNCTION

Description

INFOID:000000004173736

Air pressure data from one or more transmitters is out of range.

DTC Logic

INFOID:000000004173737

DTC DETECTION LOGIC

| DTC | CONSULT - III | DTC detecting condition |
|-------|----------------------|--|
| C1716 | [PRESSDATA - ERR] FL | Air pressure data from FL transmitter is malfunctioning. |
| C1717 | [PRESSDATA - ERR] FR | Air pressure data from FR transmitter is malfunctioning. |
| C1718 | [PRESSDATA - ERR] RR | Air pressure data from RR transmitter is malfunctioning. |
| C1719 | [PRESSDATA - ERR] RL | Air pressure data from RL transmitter is malfunctioning. |

DTC CONFIRMATION PROCEDURE

1.ID REGISTRATION AND VEHICLE DRIVING

1. Carry out ID registration of all transmitters. Refer to [WT-6. "ID Registration Procedure"](#).
2. Drive at a speed of 40 km/h (25 MPH) or more for 3 minutes, and then drive the vehicle at any speed for 10 minutes.
3. Check all tire pressures with CONSULT-III within 5 minutes.

Does "DATA MONITOR ITEM" display tire pressure as normal without any warning lamp?

- YES >> Inspection End.
NO >> Refer to [WT-17. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000003895062

MALFUNCTION CODE NO. 35, 36, 37 OR 38 (DTC C1716, C1717, C1718 OR C1719)

1.CHECK ALL TIRE PRESSURES

Check all tire pressures. Refer to [WT-66. "Tire"](#).

Are there any tires with pressure of 64 psi or more?

- YES >> Adjust tire pressure to specified value.
NO >> GO TO 2

2.ID REGISTRATION AND VEHICLE DRIVING

1. Carry out ID registration of all transmitters. Refer to [WT-6. "ID Registration Procedure"](#).
2. Drive at a speed of 40 km/h (25 MPH) or more for several minutes without stopping.
3. Check all tire pressures with CONSULT-III within 15 minutes after vehicle speed becomes 17 km/h (11 MPH).

Does "DATA MONITOR ITEM" display 64 psi or more?

- YES >> Replace malfunctioning transmitter, then GO TO 3. Refer to [WT-64. "Removal and Installation"](#).
NO >> GO TO 3

3.ID REGISTRATION AND VEHICLE DRIVING

1. Carry out ID registration of all transmitters. Refer to [WT-6. "ID Registration Procedure"](#).
2. Drive at a speed of 40 km/h (25 MPH) or more for 3 minutes, and then drive the vehicle at any speed for 10 minutes.
3. Check all tire pressures with CONSULT-III within 5 minutes.

Does "DATA MONITOR ITEM" display tire pressure as normal without any warning lamp?

- YES >> Inspection End.
NO >> Proceed to the inspection applicable to DTC.

Special Repair Requirement

INFOID:000000004173744

Perform preliminary check. Refer to [WT-5. "Preliminary Check"](#).

C1729 VEHICLE SPEED SIGNAL

< COMPONENT DIAGNOSIS >

C1729 VEHICLE SPEED SIGNAL

Description

INFOID:000000004173739

The vehicle speed signal is not being detected by the BCM.

DTC Logic

INFOID:000000004173740

DTC DETECTION LOGIC

| DTC | CONSULT - III | DTC detecting condition |
|-------|--------------------|-----------------------------------|
| C1729 | VHCL SPEED SIG ERR | Vehicle speed signal is in error. |

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

1. On "SELECT DIAG MODE", select the "SELF-DIAG RESULT" screen.
2. Check display contents on "SELF DIAG RESULT" screen.

Is the "CAN COMM CIRCUIT" displayed in the self-diagnosis display?

YES >> Refer to [WT-18, "Diagnosis Procedure"](#).

NO >> Inspection End.

Diagnosis Procedure

INFOID:000000003895063

MALFUNCTION CODE NO. 52 (DTC C1729)

1. CHECK SELF-DIAGNOSTIC RESULTS

1. On "SELECT DIAG MODE", select the "SELF-DIAG RESULT" screen.
2. Check display contents on "SELF DIAG RESULT" screen.

Is the "CAN COMM CIRCUIT" displayed in the self-diagnosis display?

YES >> Perform trouble diagnosis for CAN communication system. Refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).

NO >> Check combination meter. Refer to [MWI-29, "CONSULT-III Function \(METER/M&A\)"](#).

Special Repair Requirement

INFOID:000000004173745

Perform preliminary check. Refer to [WT-5, "Preliminary Check"](#).

C1734 CONTROL UNIT

< COMPONENT DIAGNOSIS >

C1734 CONTROL UNIT

Description

INFOID:000000004173741

An internal malfunction has been detected in the TPMS function of the BCM.

DTC Logic

INFOID:000000004173742

DTC DETECTION LOGIC

| DTC | CONSULT - III | DTC detecting condition |
|-------|---------------|--------------------------|
| C1734 | CONTROL UNIT | TPMS malfunction in BCM. |

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

1. On "SELECT DIAG MODE", select the "SELF-DIAG RESULT" screen.
2. Check display contents on "SELF DIAG RESULT" screen.

Is C1734 displayed in the self-diagnosis display?

- YES >> Refer to [WT-19. "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000003895064

MALFUNCTION CODE NO. 53 (DTC C1734)

1. SELF-DIAGNOSTIC RESULTS

1. On "SELECT DIAG" mode, select the "SELF-DIAG RESULT" screen for BCM.
2. Check display contents on "SELF-DIAG RESULT".

Does self-diagnostic results indicate any DTC other than C1734?

- YES >> Perform trouble diagnosis for DTC. Refer to [BCS-82. "DTC Index"](#).
NO >> GO TO 2.

2. CHECK BCM HARNESS CONNECTORS

Check BCM harness connectors for damage or loose connections.

Are the BCM harness connectors damaged or loose?

- YES >> Repair or replace damaged parts.
NO >> GO TO 3.

3. BCM POWER SUPPLY AND GROUND

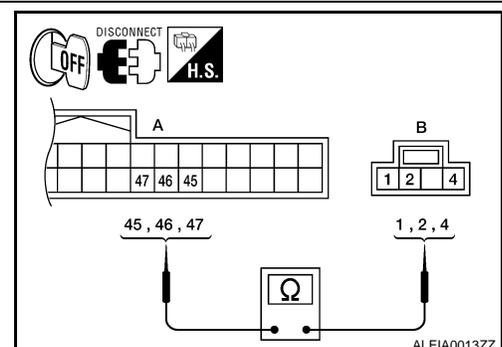
Check BCM power supply and ground. Refer to [BCS-87. "Removal and Installation"](#).

Are the power supply and grounds normal?

- YES >> GO TO 4.
NO >> Repair power supply or grounds as necessary.

4. CHECK HARNESS BETWEEN BCM AND TIRE PRESSURE RECEIVER

1. Turn ignition switch OFF.
2. Disconnect BCM harness connector M18 (A) and tire pressure receiver harness connector M70 (B).
3. Check continuity between BCM harness connector and tire pressure receiver harness connector.



C1734 CONTROL UNIT

< COMPONENT DIAGNOSIS >

| BCM | | Tire pressure receiver | | Continuity |
|-----------|----------|------------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M18 | 45 | M70 | 1 | YES |
| | 46 | | 4 | |
| | 47 | | 2 | |

Does continuity exist?

YES >> GO TO 5.

NO >> Repair circuits as necessary.

5. BCM INPUT/OUTPUT SIGNALS

Check BCM input/output signals. Refer to [BCS-47. "Reference Value"](#).

Are the inputs and outputs normal?

YES >> Inspection End.

NO >> Replace BCM. Refer to [BCS-87. "Removal and Installation"](#).

Special Repair Requirement

INFOID:000000004173746

Perform preliminary check. Refer to [WT-5. "Preliminary Check"](#).

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

ECU DIAGNOSIS

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000004335448

VALUES ON THE DIAGNOSIS TOOL

| Monitor Item | Condition | Value/Status |
|----------------|---|----------------------------------|
| FR WIPER HI | Other than front wiper switch HI | OFF |
| | Front wiper switch HI | ON |
| FR WIPER LOW | Other than front wiper switch LO | OFF |
| | Front wiper switch LO | ON |
| FR WASHER SW | Front washer switch OFF | OFF |
| | Front washer switch ON | ON |
| FR WIPER INT | Other than front wiper switch INT | OFF |
| | Front wiper switch INT | ON |
| FR WIPER STOP | Front wiper is not in STOP position | OFF |
| | Front wiper is in STOP position | ON |
| INT VOLUME | Wiper intermittent dial is in a dial position 1 - 7 | Wiper intermittent dial position |
| TURN SIGNAL R | Other than turn signal switch RH | OFF |
| | Turn signal switch RH | ON |
| TURN SIGNAL L | Other than turn signal switch LH | OFF |
| | Turn signal switch LH | ON |
| TAIL LAMP SW | Other than lighting switch 1ST and 2ND | OFF |
| | Lighting switch 1ST or 2ND | ON |
| HI BEAM SW | Other than lighting switch HI | OFF |
| | Lighting switch HI | ON |
| HEAD LAMP SW 1 | Other than lighting switch 2ND | OFF |
| | Lighting switch 2ND | ON |
| HEAD LAMP SW 2 | Other than lighting switch 2ND | OFF |
| | Lighting switch 2ND | ON |
| PASSING SW | Other than lighting switch PASS | OFF |
| | Lighting switch PASS | ON |
| AUTO LIGHT SW | Other than lighting switch AUTO | OFF |
| | Lighting switch AUTO | ON |
| FR FOG SW | Front fog lamp switch OFF | OFF |
| | Front fog lamp switch ON | ON |
| DOOR SW-DR | Driver door closed | OFF |
| | Driver door opened | ON |
| DOOR SW-AS | Passenger door closed | OFF |
| | Passenger door opened | ON |
| DOOR SW-RR | Rear door RH closed | OFF |
| | Rear door RH opened | ON |
| DOOR SW-RL | Rear door LH closed | OFF |
| | Rear door LH opened | ON |

A

B

C

D

WT

F

G

H

I

J

K

L

M

N

O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

| Monitor Item | Condition | Value/Status |
|----------------|---|--------------|
| DOOR SW-BK | NOTE: This item is displayed, but cannot be monitored. | OFF |
| CDL LOCK SW | Other than power door lock switch LOCK | OFF |
| | Power door lock switch LOCK | ON |
| CDL UNLOCK SW | Other than power door lock switch UNLOCK | OFF |
| | Power door lock switch UNLOCK | ON |
| KEY CYL LK-SW | Other than driver door key cylinder LOCK position | OFF |
| | Driver door key cylinder LOCK position | ON |
| KEY CYL UN-SW | Other than driver door key cylinder UNLOCK position | OFF |
| | Driver door key cylinder UNLOCK position | ON |
| KEY CYL SW-TR | NOTE: This item is displayed, but cannot be monitored. | OFF |
| HAZARD SW | When hazard switch is not pressed | OFF |
| | When hazard switch is pressed | ON |
| REAR DEF SW | When rear window defogger switch is pressed | ON |
| TR CANCEL SW | Trunk lid opener cancel switch OFF | OFF |
| | Trunk lid opener cancel switch ON | ON |
| TR/BD OPEN SW | Trunk lid opener switch OFF | OFF |
| | While the trunk lid opener switch is turned ON | ON |
| TRNK/HAT MNTR | Trunk lid closed | OFF |
| | Trunk lid opened | ON |
| RKE-LOCK | When LOCK button of Intelligent Key is not pressed | OFF |
| | When LOCK button of Intelligent Key is pressed | ON |
| RKE-UNLOCK | When UNLOCK button of Intelligent Key is not pressed | OFF |
| | When UNLOCK button of Intelligent Key is pressed | ON |
| RKE-TR/BD | When TRUNK OPEN button of Intelligent Key is not pressed | OFF |
| | When TRUNK OPEN button of Intelligent Key is pressed | ON |
| RKE-PANIC | When PANIC button of Intelligent Key is not pressed | OFF |
| | When PANIC button of Intelligent Key is pressed | ON |
| RKE-P/W OPEN | When UNLOCK button of Intelligent Key is not pressed and held | OFF |
| | When UNLOCK button of Intelligent Key is pressed and held | ON |
| RKE-MODE CHG | When LOCK/UNLOCK button of Intelligent Key is not pressed and held simultaneously | OFF |
| | When LOCK/UNLOCK button of Intelligent Key is pressed and held simultaneously | ON |
| OPTICAL SENSOR | When outside of the vehicle is bright | Close to 5 V |
| | When outside of the vehicle is dark | Close to 0 V |
| REQ SW-DR | When front door request switch is not pressed (driver side) | OFF |
| | When front door request switch is pressed (driver side) | ON |
| REQ SW-AS | When front door request switch is not pressed (passenger side) | OFF |
| | When front door request switch is pressed (passenger side) | ON |
| REQ SW-RL | When rear door request switch is not pressed (driver side) | OFF |
| | When rear door request switch is pressed (driver side) | ON |
| REQ SW-RR | When rear door request switch is not pressed (passenger side) | OFF |
| | When rear door request switch is pressed (passenger side) | ON |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

| Monitor Item | Condition | Value/Status | |
|----------------|--|--------------|----|
| REQ SW-BD/TR | When trunk request switch is not pressed | OFF | A |
| | When trunk request switch is pressed | ON | |
| PUSH SW | When engine switch (push switch) is not pressed | OFF | B |
| | When engine switch (push switch) is pressed | ON | |
| IGN RLY 2-F/B | Ignition switch OFF or ACC | OFF | C |
| | Ignition switch ON | ON | |
| ACC RLY-F/B | Ignition switch OFF | OFF | D |
| | Ignition switch ACC or ON | ON | |
| CLUTCH SW | NOTE: This item is displayed, but cannot be monitored. | OFF | |
| BRAKE SW 1 | When the brake pedal is not depressed | ON | WT |
| | When the brake pedal is depressed | OFF | |
| DETE/CANCL SW | When selector lever is in P position | OFF | F |
| | When selector lever is in any position other than P | ON | |
| SFT PN/N SW | When selector lever is in any position other than P or N | OFF | G |
| | When selector lever is in P or N position | ON | |
| S/L-LOCK | Electronic steering column lock LOCK status | OFF | H |
| | Electronic steering column lock UNLOCK status | ON | |
| S/L-UNLOCK | Electronic steering column lock UNLOCK status | OFF | I |
| | Electronic steering column lock LOCK status | ON | |
| S/L RELAY-F/B | Ignition switch OFF or ACC | OFF | J |
| | Ignition switch ON | ON | |
| UNLK SEN-DR | Driver door UNLOCK status | OFF | K |
| | Driver door LOCK status | ON | |
| PUSH SW-IPDM | When engine switch (push switch) is not pressed | OFF | L |
| | When engine switch (push switch) is pressed | ON | |
| IGN RLY1 F/B | Ignition switch OFF or ACC | OFF | M |
| | Ignition switch ON | ON | |
| DETE SW -IPDM | When selector lever is in P position | OFF | N |
| | When selector lever is in any position other than P | ON | |
| SFT PN -IPDM | When selector lever is in any position other than P or N | OFF | O |
| | When selector lever is in P or N position | ON | |
| SFT P-MET | When selector lever is in any position other than P | OFF | P |
| | When selector lever is in P position | ON | |
| SFT N-MET | When selector lever is in any position other than N | OFF | |
| | When selector lever is in N position | ON | |
| ENGINE STATE | Engine stopped | STOP | |
| | While the engine stalls | STALL | |
| | At engine cranking | CRANK | |
| | Engine running | RUN | |
| S/L LOCK-IPDM | Electronic steering column lock LOCK status | OFF | |
| | Electronic steering column lock UNLOCK status | ON | |
| S/L UNLCK-IPDM | Electronic steering column lock UNLOCK status | OFF | |
| | Electronic steering column lock LOCK status | ON | |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

| Monitor Item | Condition | Value/Status |
|----------------|---|--|
| S/L RELAY-REQ | Ignition switch OFF or ACC | OFF |
| | Ignition switch ON | ON |
| VEH SPEED 1 | While driving | Equivalent to speedometer reading |
| VEH SPEED 2 | While driving | Equivalent to speedometer reading |
| DOOR STAT-DR | Driver door LOCK status | LOCK |
| | Wait with selective UNLOCK operation (5 seconds) | READY |
| | Driver door UNLOCK status | UNLK |
| DOOR STAT-AS | Passenger door LOCK status | LOCK |
| | Wait with selective UNLOCK operation (5 seconds) | READY |
| | Passenger door UNLOCK status | UNLK |
| ID OK FLAG | Ignition switch ACC or ON | RESET |
| | Ignition switch OFF | SET |
| PRMT ENG STAT | When the engine start is prohibited | RESET |
| | When the engine start is permitted | SET |
| PRMT RKE STAT | NOTE: This item is displayed, but cannot be monitored. | RESET |
| KEY SW -SLOT | When Intelligent Key is not inserted into key slot | OFF |
| | When Intelligent Key is inserted into key slot | ON |
| RKE OPE COUN1 | During the operation of Intelligent Key | Operation frequency of Intelligent Key |
| RKE OPE COUN2 | NOTE: This item is displayed, but cannot be monitored. | Operation frequency of Intelligent Key |
| CONFIRM ID ALL | The key ID that the key slot receives does not accord with any key ID registered to BCM. | YET |
| | The key ID that the key slot receives accords with any key ID registered to BCM. | DONE |
| CONFIRM ID4 | The key ID that the key slot receives does not accord with the fourth key ID registered to BCM. | YET |
| | The key ID that the key slot receives accords with the fourth key ID registered to BCM. | DONE |
| CONFIRM ID3 | The key ID that the key slot receives does not accord with the third key ID registered to BCM. | YET |
| | The key ID that the key slot receives accords with the third key ID registered to BCM. | DONE |
| CONFIRM ID2 | The key ID that the key slot receives does not accord with the second key ID registered to BCM. | YET |
| | The key ID that the key slot receives accords with the second key ID registered to BCM. | DONE |
| CONFIRM ID1 | The key ID that the key slot receives does not accord with the first key ID registered to BCM. | YET |
| | The key ID that the key slot receives accords with the first key ID registered to BCM. | DONE |
| TP 4 | The ID of fourth key is not registered to BCM | YET |
| | The ID of fourth key is registered to BCM | DONE |
| TP 3 | The ID of third key is not registered to BCM | YET |
| | The ID of third key is registered to BCM | DONE |
| TP 2 | The ID of second key is not registered to BCM | YET |
| | The ID of second key is registered to BCM | DONE |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >


| Monitor Item | Condition | Value/Status | |
|--------------|--|-------------------------------|----|
| TP 1 | The ID of first key is not registered to BCM | YET | A |
| | The ID of first key is registered to BCM | DONE | |
| AIR PRESS FL | Ignition switch ON (only when the signal from the transmitter is received) | Air pressure of front LH tire | B |
| AIR PRESS FR | Ignition switch ON (only when the signal from the transmitter is received) | Air pressure of front RH tire | C |
| AIR PRESS RR | Ignition switch ON (only when the signal from the transmitter is received) | Air pressure of rear RH tire | |
| AIR PRESS RL | Ignition switch ON (only when the signal from the transmitter is received) | Air pressure of rear LH tire | D |
| ID REGST FL1 | When ID of front LH tire transmitter is registered | DONE | WT |
| | When ID of front LH tire transmitter is not registered | YET | |
| ID REGST FR1 | When ID of front RH tire transmitter is registered | DONE | |
| | When ID of front RH tire transmitter is not registered | YET | |
| ID REGST RR1 | When ID of rear RH tire transmitter is registered | DONE | F |
| | When ID of rear RH tire transmitter is not registered | YET | |
| ID REGST RL1 | When ID of rear LH tire transmitter is registered | DONE | G |
| | When ID of rear LH tire transmitter is not registered | YET | |
| WARNING LAMP | Tire pressure indicator OFF | OFF | H |
| | Tire pressure indicator ON | ON | |
| BUZZER | Tire pressure warning alarm is not sounding | OFF | I |
| | Tire pressure warning alarm is sounding | ON | |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal Layout

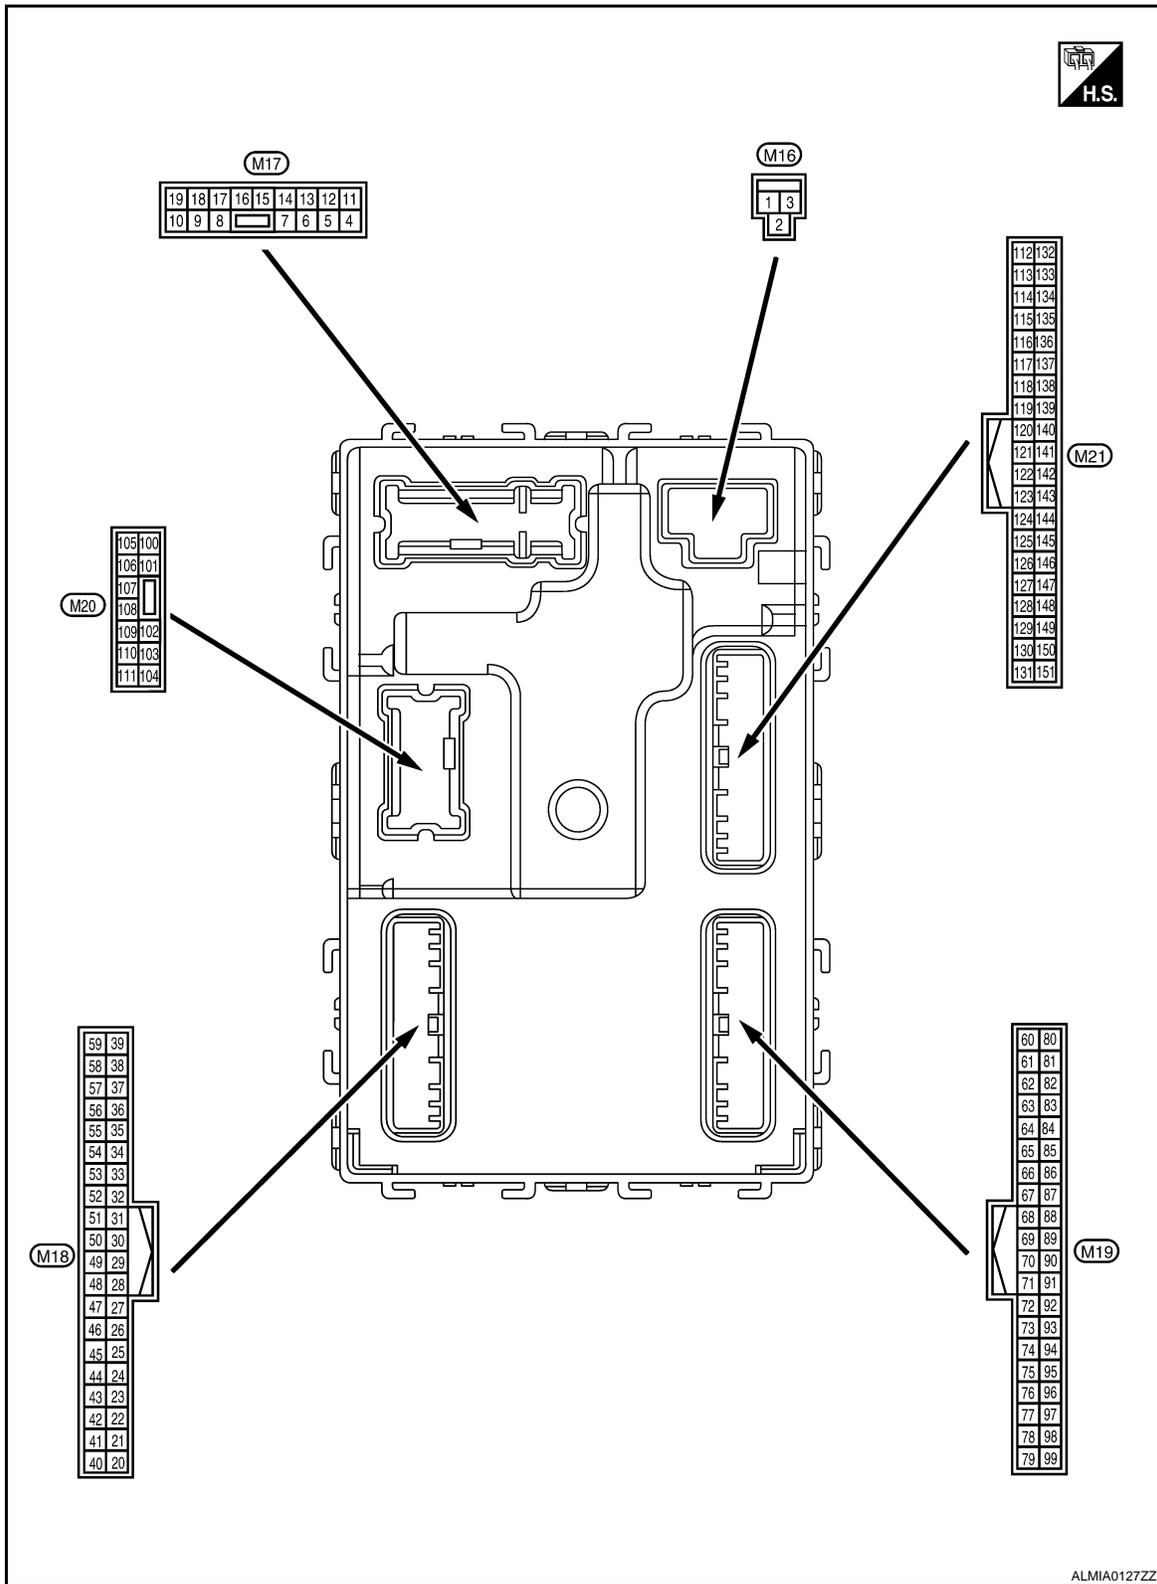INFOID:000000004335449




Physical Values

INFOID:000000004335450

BCM (BODY CONTROL MODULE)



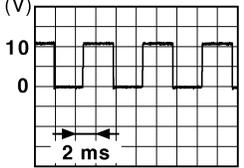
< ECU DIAGNOSIS >

| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|---|------------------|--|---|--|
| | | Signal name | Input/ Output | | | |
| (+) | (-) | | | | | |
| 1 (W/B) | Ground | Battery power supply | Input | Ignition switch OFF | | Battery voltage |
| 2 (R/Y) | Ground | Battery power supply output | Output | Ignition switch OFF | | Battery voltage |
| 3 (L/W) | Ground | Ignition power supply output | Output | Ignition switch ON | | Battery voltage |
| 4 (P/W) | Ground | Interior room lamp power supply | Output | After passing the interior room lamp battery saver operation time | | 0V |
| | | | | Any other time after passing the interior room lamp battery saver operation time | | Battery voltage |
| 5 (G) | Ground | Front door RH UNLOCK | Output | Front door RH | UNLOCK (actuator is activated) | Battery voltage |
| | | | | | Other than UNLOCK (actuator is not activated) | 0V |
| 7 (R/W) | Ground | Step lamp | Output | Step lamp | ON | 0V |
| | | | | | OFF | Battery voltage |
| 8 (V) | Ground | All doors LOCK | Output | All doors | LOCK (actuator is activated) | Battery voltage |
| | | | | | Other than LOCK (actuator is not activated) | 0V |
| 9 (L) | Ground | Front door LH UNLOCK | Output | Front door LH | UNLOCK (actuator is activated) | Battery voltage |
| | | | | | Other than UNLOCK (actuator is not activated) | 0V |
| 10 (G) | Ground | Rear door RH and rear door LH UNLOCK | Output | Rear door RH and rear door LH | UNLOCK (actuator is activated) | Battery voltage |
| | | | | | Other than UNLOCK (actuator is not activated) | 0V |
| 11 (Y/R) | Ground | Battery power supply | Input | Ignition switch OFF | | Battery voltage |
| 13 (B) | Ground | Ground | — | Ignition switch ON | | 0V |
| 14 (GR/W) | Ground | Engine switch (push switch) illumination ground | Input | Tail lamp | OFF | 0V |
| | | | | | ON | <p>NOTE: When the illumination brightening/dimming level is in the neutral position</p>  <p style="text-align: right; font-size: small;">JSNIA0010GB</p> |
| 15 (Y/L) | Ground | ACC indicator lamp | Output | Ignition switch | OFF | Battery voltage |
| | | | | | ACC or ON | 0V |

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P




BCM (BODY CONTROL MODULE)
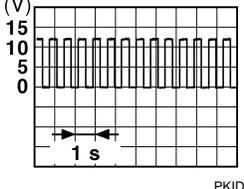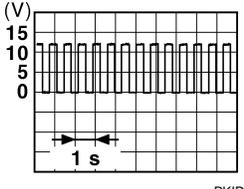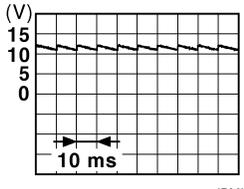
< ECU DIAGNOSIS >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|---|------------------|---|---|
| (+) | (-) | Signal name | Input/ Output | | |
| 17 (G/B) | Ground | Turn signal (RH) | Output | Ignition switch ON | Turn signal switch OFF 0V |
| | | | | Turn signal switch RH |  6.5 V |
| 18 (G/Y) | Ground | Turn signal (LH) | Output | Ignition switch ON | Turn signal switch OFF 0V |
| | | | | Turn signal switch LH |  6.5 V |
| 19 (Y) | Ground | Room lamp timer control | Output | Interior room lamp | OFF Battery voltage |
| | | | | ON | 0V |
| 21 (P/B) | Ground | Optical sensor signal | Input | Ignition switch ON | When outside of the vehicle is bright Close to 5V |
| | | | | When outside of the vehicle is dark Close to 0V | |
| 24 (R/W) | Ground | Stop lamp switch 1 | Input | — | Battery voltage |
| 26 (O/L) | Ground | Stop lamp switch 2 | Input | Stop lamp switch | OFF (brake pedal is not depressed) 0V |
| | | | | ON (brake pedal is depressed) Battery voltage | |
| 27 (O) | Ground | Front door lock assembly LH (unlock sensor) | Input | Front door LH | LOCK status  11.8V |
| | | | | UNLOCK status 0V | |
| 29 (Y) | Ground | Key slot switch | Input | When Intelligent Key is inserted into key slot Battery voltage | |
| | | | | When Intelligent Key is not inserted into key slot 0V | |
| 30 (V/Y) | Ground | ACC feedback signal | Input | Ignition switch | OFF 0 |
| | | | | ACC or ON Battery voltage | |
| 31 (G) | Ground | Rear window defogger feedback signal | Input | Rear window defogger switch | OFF 0V |
| | | | | ON Battery voltage | |

BCM (BODY CONTROL MODULE)

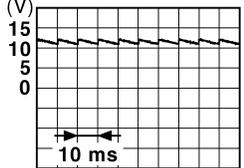
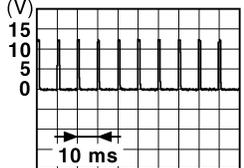
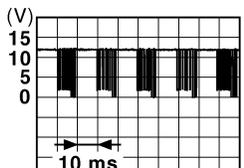
< ECU DIAGNOSIS >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|--|------------------|--|--|
| | | Signal name | Input/ Output | | |
| (+) | (-) | | | | |
| 32 (R/B) | Ground | Front door RH switch | Input | Front door RH switch |  <p style="text-align: center;">11.8 V</p> |
| | | | | OFF (when front door RH closes) | 0V |
| 37 (O) | Ground | Trunk lid opener cancel switch | Input | Trunk lid opener cancel switch |  <p style="text-align: center;">1.1V</p> |
| | | | | CANCEL | 0V |
| 38 (GR/W) | Ground | Rear window defogger ON signal | Input | Rear window defogger switch | OFF |
| | | | | ON | 0V |
| 40 (Y/G) | Ground | Power window serial link | Input/ Output | Ignition switch ON |  <p style="text-align: center;">10.2V</p> |
| | | | | Ignition switch OFF or ACC | 0V |
| 41 (W) | Ground | Engine switch (push switch) illumination | Output | Engine switch (push switch) illumination | ON |
| | | | | OFF | 0V |
| 42 (R) | Ground | LOCK indicator lamp | Output | LOCK indicator lamp | ON |
| | | | | OFF | Battery voltage |
| 45 (P) | Ground | Receiver & sensor ground | Input | Ignition switch ON | 0V |
| 46 (V/W) | Ground | Receiver & sensor power supply output | Output | Ignition switch | OFF |
| | | | | ACC or ON | 5.0V |

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P





BCM (BODY CONTROL MODULE)
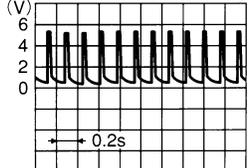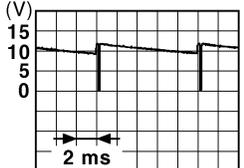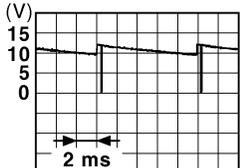
< ECU DIAGNOSIS >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|------------------------------------|------------------|---|---|---|
| (+) | (-) | Signal name | Input/ Output | | | |
| 47 (G/O) | Ground | Tire pressure receiver signal | Input/ Output | Ignition switch ON | Standby state  OCC3881D | |
| | | | | When receiving the signal from the transmitter  OCC3880D | | |
| 48 (R/G) | Ground | Selector lever P/N position signal | Input | Selector lever | P or N position 12.0V Except P and N positions 0V | |
| | | | | 49 (L/O) | Ground | Security indicator signal |
| OFF Battery voltage | | | | | | |
| 50 (LG/B) | Ground | Combination switch OUTPUT 5 | Output | Combination switch (Wiper intermittent dial 4) | All switch OFF 0V | |
| | | | | | Lighting switch 1ST |  JPMIA0031GB 10.7V |
| | | | | | Lighting switch high-beam | |
| | | | | | Lighting switch 2ND | |
| Turn signal switch RH | | | | | | |
| 51 (L/W) | Ground | Combination switch OUTPUT 1 | Output | Combination switch | All switch OFF (Wiper intermittent dial 4) 0V | |
| | | | | | Front wiper switch HI (Wiper intermittent dial 4) |  JPMIA0032GB 10.7V |
| | | | | | Any of the conditions below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3 • Wiper intermittent dial 6 • Wiper intermittent dial 7 | |

BCM (BODY CONTROL MODULE)
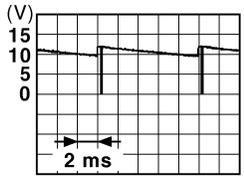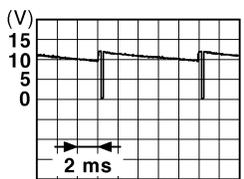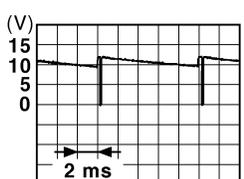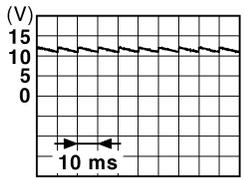
< ECU DIAGNOSIS >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | | |
|------------------------------|--------|---|------------------|---|---|---|----|
| (+) | (-) | Signal name | Input/ Output | | | | |
| 52 (G/B) | Ground | Combination switch OUTPUT 2 | Output | Combination switch | All switch OFF (Wiper intermittent dial 4) | 0V | |
| | | | | | Front washer switch ON (Wiper intermittent dial 4) |  | |
| | | | | | Any of the conditions below with all switch OFF | | |
| | | | | | <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6 | | |
| | | | | | 10.7V | | |
| 53 (LG/ R) | Ground | Combination switch OUTPUT 3 | Output | Combination switch (Wiper intermit- tent dial 4) | All switch OFF | 0V | |
| | | | | | Front wiper switch INT |  | |
| | | | | | Front wiper switch LO | | |
| | | | | | Lighting switch AUTO | | |
| | | | | | 10.7V | | |
| 54 (G/Y) | Ground | Combination switch OUTPUT 4 | Output | Combination switch (Wiper intermit- tent dial 4) | All switch OFF | 0V | |
| | | | | | Front fog lamp switch ON |  | |
| | | | | | Lighting switch 2ND | | |
| | | | | | Lighting switch flash-to- pass | | |
| | | | | | 10.7V | | |
| 57 (W) | Ground | Tire pressure warn- ing check switch | Input | — | 5V | | |
| 58 (SB) | Ground | Front door LH switch | Input | Front door LH switch | OFF (front door LH CLOSE) |  | |
| | | | | | ON (front door LH OPEN) | | 0V |
| 59 (G/R) | Ground | Rear window defog- ger relay | Output | Rear window de- fogger | Active | Battery voltage | |
| | | | | Not activated | 0V | | |

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|-------------------------------------|------------------|--|---|
| (+) | (-) | Signal name | Input/ Output | | |
| 60 (B/R) | Ground | Front console antenna 2 (-) | Output | Ignition switch OFF | <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the passenger compartment | <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |
| 61 (W/R) | Ground | Center console antenna 2 (+) | Output | Ignition switch OFF | <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the passenger compartment | <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |
| 62 (V) | Ground | Front outside handle RH antenna (-) | Output | When the front door RH request switch is operated with ignition switch OFF | <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the antenna detection area | <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |

BCM (BODY CONTROL MODULE)





< ECU DIAGNOSIS >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|--|------------------|--|---|
| (+) | (-) | Signal name | Input/ Output | | |
| 63 (P) | Ground | Front outside handle RH antenna (+) | Output | When the front door RH request switch is operated with ignition switch OFF | <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the antenna detection area | <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |
| 64 (V) | Ground | Front outside handle LH antenna (-) | Output | When the front door LH request switch is operated with ignition switch OFF | <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the antenna detection area | <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |
| 65 (P) | Ground | Front outside handle LH antenna (+) | Output | When the front door LH request switch is operated with ignition switch OFF | <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the antenna detection area | <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

BCM (BODY CONTROL MODULE)
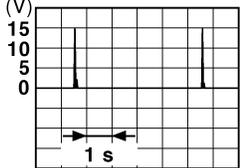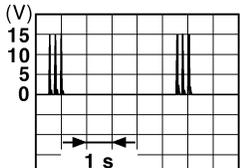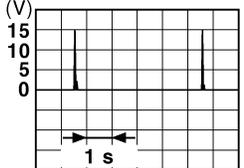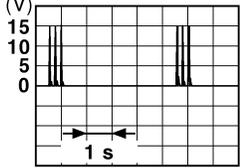
< ECU DIAGNOSIS >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|--------------------------------------|------------------|------------------------|--|
| (+) | (-) | Signal name | Input/ Output | | |
| 66 (R) | Ground | Instrument panel antenna (-) | Output | Ignition switch OFF | When Intelligent Key is in the passenger compartment  JMKIA0062GB |
| | | | | | When Intelligent Key is not in the passenger compartment  JMKIA0063GB |
| 67 (G) | Ground | Instrument panel antenna (+) | Output | Ignition switch OFF | When Intelligent Key is in the passenger compartment  JMKIA0062GB |
| | | | | | When Intelligent Key is not in the passenger compartment  JMKIA0063GB |
| 68 (G/O) | Ground | NATS antenna amp (built in key slot) | Input/ Output | During waiting | Ignition switch is pressed while inserting the Intelligent Key into the key slot. Just after pressing ignition switch. Pointer of tester should move. |
| 69 (O) | Ground | NATS antenna amp (built in key slot) | Input/ Output | During waiting | Ignition switch is pressed while inserting the Intelligent Key into the key slot. Just after pressing ignition switch. Pointer of tester should move. |
| 70 (R/B) | Ground | Ignition relay-2 control | Output | Ignition switch | OFF or ACC 0V |
| | | | | ON | Battery voltage |

BCM (BODY CONTROL MODULE)






< ECU DIAGNOSIS >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|--------------------------------------|------------------|---|---|
| (+) | (-) | Signal name | Input/ Output | | |
| 71 (L/O) | Ground | Remote keyless entry receiver signal | Input/ Output | During waiting | <p style="text-align: right; font-size: small;">JMKIA0064GB</p> |
| | | | | When operating either button on Intelligent Key | <p style="text-align: right; font-size: small;">JMKIA0065GB</p> |
| 75 (R/Y) | Ground | Combination switch INPUT 5 | Input | Combination switch | <p>All switch OFF (Wiper intermittent dial 4)</p> <p style="text-align: right; font-size: small;">JPMIA0041GB</p> <p style="text-align: center;">1.4V</p> |
| | | | | Combination switch | <p>Front fog lamp switch ON (Wiper intermittent dial 4)</p> <p style="text-align: right; font-size: small;">JPMIA0037GB</p> <p style="text-align: center;">1.3V</p> |
| | | | | Combination switch | <p>Any of the conditions below with all switch OFF</p> <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 6 • Wiper intermittent dial 7 <p style="text-align: right; font-size: small;">JPMIA0040GB</p> <p style="text-align: center;">1.3V</p> |

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

BCM (BODY CONTROL MODULE)
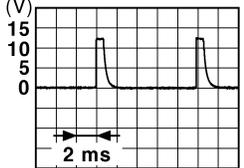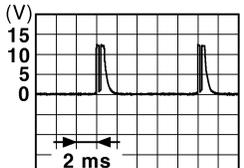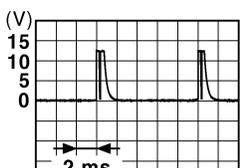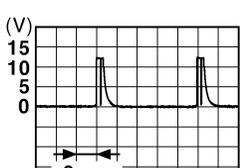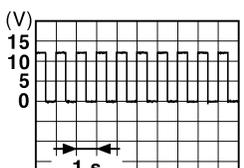
< ECU DIAGNOSIS >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|--------------------------------|------------------|--------------------------------|--|---|
| (+) | (-) | Signal name | Input/ Output | | | |
| 76 (R/G) | Ground | Combination switch INPUT 3 | Input | Combination switch | All switch OFF (Wiper intermittent dial 4) |  <p style="text-align: right; font-size: small;">JPMIA0041GB</p> <p style="text-align: center;">1.4V</p> |
| | | | | | Lighting switch high-beam (Wiper intermittent dial 4) |  <p style="text-align: right; font-size: small;">JPMIA0036GB</p> <p style="text-align: center;">1.3V</p> |
| | | | | | Lighting switch 2ND (Wiper intermittent dial 4) |  <p style="text-align: right; font-size: small;">JPMIA0037GB</p> <p style="text-align: center;">1.3V</p> |
| | | | | | Any of the conditions below with all switch OFF | <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3  <p style="text-align: right; font-size: small;">JPMIA0040GB</p> <p style="text-align: center;">1.3V</p> |
| 77 (BR) | Ground | Engine switch (push switch) | Input | Engine switch (push switch) | Pressed | 0V |
| | | | | Not pressed | Battery voltage | |
| 78 (P) | Ground | CAN-L | Input/ Output | — | — | |
| 79 (L) | Ground | CAN-H | Input/ Output | — | — | |
| 80 (R/L) | Ground | Key slot illumination | Output | Key slot illumina- tion | OFF | 0V |
| | | | | | Blinking |  <p style="text-align: right; font-size: small;">JPMIA0015GB</p> <p style="text-align: center;">6.5V</p> |
| | | | | | ON | Battery voltage |

BCM (BODY CONTROL MODULE)






< ECU DIAGNOSIS >

| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|---|------------------|--------------------------------------|---------------------------|--|
| (+) | (-) | Signal name | Input/ Output | | | |
| 81 (Y/L) | Ground | ON indicator lamp | Output | Ignition switch | OFF or ACC | 0V |
| | | | | | ON | Battery voltage |
| 83 (L) | Ground | ACC relay control | Output | Ignition switch | OFF | 0V |
| | | | | | ACC or ON | Battery voltage |
| 84 (Y/R) | Ground | A/T device | Output | — | | Battery voltage |
| 85 (L/O) | Ground | Electronic steering column lock condition No. 1 | Input | Electronic steer- ing column lock | Lock status | 0V |
| | | | | | Unlock status | Battery voltage |
| 86 (G/R) | Ground | Electronic steering column lock condition No. 2 | Input | Electronic steer- ing column lock | Lock status | Battery voltage |
| | | | | | Unlock status | 0V |
| 87 (G/B) | Ground | Selector lever P posi- tion switch | Input | Selector lever | P position | 0V |
| | | | | | Any position other than P | Battery voltage |
| 88 (R) | Ground | Front door RH re- quest switch | Input | Front door RH re- quest switch | ON (pressed) | 0V |
| | | | | | OFF (not pressed) | <p style="text-align: right; font-size: small;">JPMIA0016GB 1.0V</p> |
| 89 (R) | Ground | Front door LH re- quest switch | Input | Front door LH re- quest switch | ON (pressed) | 0V |
| | | | | | OFF (not pressed) | <p style="text-align: right; font-size: small;">JPMIA0016GB 1.0V</p> |
| 90 (Y) | Ground | Blower fan motor re- lay control | Output | Ignition switch | OFF or ACC | 0V |
| | | | | | ON | Battery voltage |
| 91 (L/R) | Ground | Remote keyless entry receiver power sup- ply | Output | Ignition switch OFF | | Battery voltage |
| 94 (G/Y) | Ground | Steering wheel lock unit power supply | Output | Ignition switch | OFF or ACC | Battery voltage |
| | | | | | ON | 0V |

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P





BCM (BODY CONTROL MODULE)
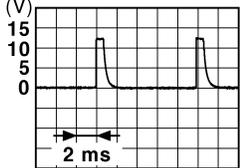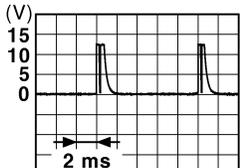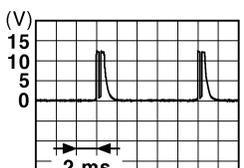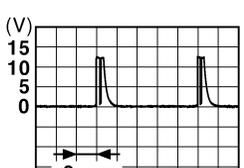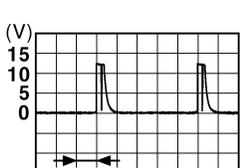
< ECU DIAGNOSIS >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|-------------------------------|------------------|--|--|
| (+) | (-) | Signal name | Input/ Output | | |
| 95 (R/W) | Ground | Combination switch INPUT 1 | Input | Combination switch (Wiper intermittent dial 4) | All switch OFF <div style="text-align: right;">  <p>1.4V</p> </div> |
| | | | | | Turn signal switch LH <div style="text-align: right;">  <p>1.3V</p> </div> |
| | | | | | Turn signal switch RH <div style="text-align: right;">  <p>1.3V</p> </div> |
| | | | | | Front wiper switch LO <div style="text-align: right;">  <p>1.3V</p> </div> |
| | | | | | Front washer switch ON <div style="text-align: right;">  <p>1.3V</p> </div> |

BCM (BODY CONTROL MODULE)



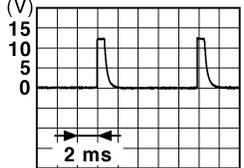
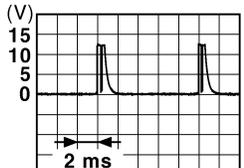
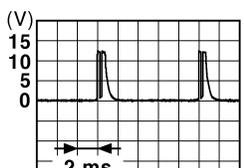
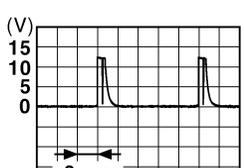
< ECU DIAGNOSIS >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|-------------------------------|------------------|-----------------------|---|
| (+) | (-) | Signal name | Input/ Output | | |
| 96 (P/B) | Ground | Combination switch INPUT 4 | Input | Combination switch | All switch OFF (Wiper intermittent dial 4) <div style="text-align: right;">  <p style="text-align: right; margin-right: 50px;">1.4V</p> <p style="text-align: right; font-size: small;">JPMIA0041GB</p> </div> |
| | | | | | Lighting switch AUTO (Wiper intermittent dial 4) <div style="text-align: right;">  <p style="text-align: right; margin-right: 50px;">1.3V</p> <p style="text-align: right; font-size: small;">JPMIA0038GB</p> </div> |
| | | | | | Lighting switch 1ST (Wiper intermittent dial 4) <div style="text-align: right;">  <p style="text-align: right; margin-right: 50px;">1.3V</p> <p style="text-align: right; font-size: small;">JPMIA0036GB</p> </div> |
| | | | | | Any of the conditions below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6 <div style="text-align: right;">  <p style="text-align: right; margin-right: 50px;">1.3V</p> <p style="text-align: right; font-size: small;">JPMIA0039GB</p> </div> |

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P




BCM (BODY CONTROL MODULE)
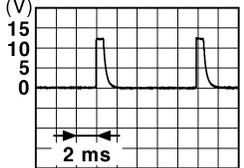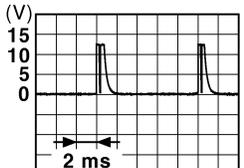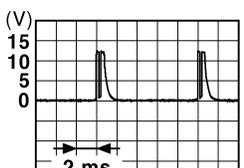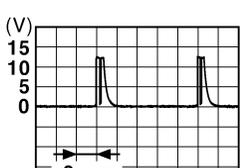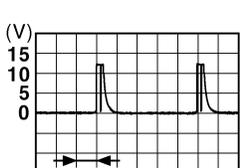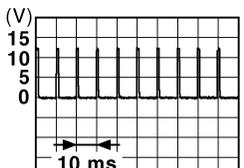
< ECU DIAGNOSIS >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|-------------------------------|------------------|--|--|---|
| (+) | (-) | Signal name | Input/ Output | | | |
| 97 (R/B) | Ground | Combination switch INPUT 2 | Input | Combination switch (Wiper intermittent dial 4) | All switch OFF |  <small>JPMIA0041GB</small> 1.4V |
| | | | | | Lighting switch flash-to-pass |  <small>JPMIA0037GB</small> 1.3V |
| | | | | | Lighting switch 2ND |  <small>JPMIA0036GB</small> 1.3V |
| | | | | | Front wiper switch INT |  <small>JPMIA0038GB</small> 1.3V |
| | | | | | Front wiper switch HI |  <small>JPMIA0040GB</small> 1.3V |
| | | | | | Pressed | 0 V |
| 98 (G/O) | Ground | Hazard switch | Input | Hazard switch | Not pressed  <small>JPMIA0012GB</small> 1.1V | |

BCM (BODY CONTROL MODULE)
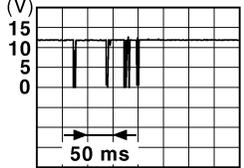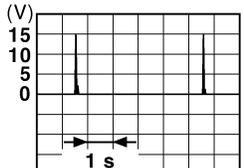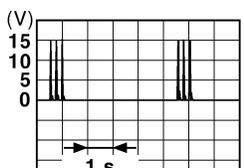
< ECU DIAGNOSIS >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|--|------------------|--------------------------------------|--|---|
| (+) | (-) | Signal name | Input/ Output | | | |
| 99 (L/Y) | Ground | Electronic steering column lock unit com- munication | Input/ Output | Electronic steer- ing column lock | LOCK status | Battery voltage |
| | | | | | LOCK or UNLOCK |  <small>JMKIA0066GB</small> |
| | | | | | For 15 seconds after UN- LOCK | Battery voltage |
| | | | | | 15 seconds or later after UNLOCK | 0V |
| 103 (V) | Ground | Trunk lid opening. | Output | Trunk lid | Open (trunk lid opener ac- tuator is activated) | Battery voltage |
| | | | | | Close (trunk lid opener ac- tuator is not activated) | 0V |
| 110 (V/W) | Ground | Trunk room lamp | Output | Trunk room lamp | ON | 0V |
| | | | | | OFF | Battery voltage |
| 114 (B) | Ground | Trunk room antenna 1 (-) | Output | Ignition switch OFF | When Intelligent Key is in the passenger compart- ment |  <small>JMKIA0062GB</small> |
| | | | | | When Intelligent Key is not in the passenger compart- ment |  <small>JMKIA0063GB</small> |

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P




BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|------------------------------|------------------|--|---|
| (+) | (-) | Signal name | Input/ Output | | |
| 115 (W) | Ground | Trunk room antenna 1 (+) | Output | Ignition switch OFF | <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the passenger compart- ment | <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |
| 118 (L/O) | Ground | Rear bumper anten- na (-) | Output | When the trunk lid request switch is operated with ignition switch OFF | <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the antenna detection area | <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |
| 119 (BR/ W) | Ground | Rear bumper anten- na (+) | Output | When the trunk lid request switch is operated with ignition switch OFF | <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the antenna detection area | <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |

BCM (BODY CONTROL MODULE)
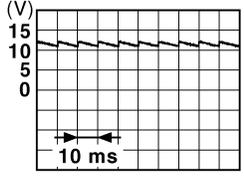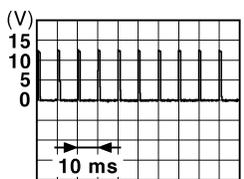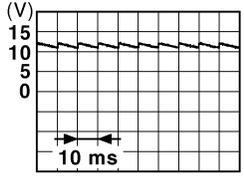
< ECU DIAGNOSIS >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|--------------------------------------|------------------|--|--|--|
| | | Signal name | Input/ Output | | | |
| (+) | (-) | | | | | |
| 127 (BR/ W) | Ground | Ignition relay (IPDM E/R) control | Output | Ignition switch | OFF or ACC | Battery voltage |
| | | | | | ON | 0V |
| 130 (W) | Ground | Trunk room lamp switch | Input | Trunk room lamp switch | OFF (trunk is closed) |  11.8V |
| | | | | | ON (trunk is open) | 0V |
| 132 (R) | Ground | Starter motor relay control | Output | Ignition switch OFF (M/T vehi- cle) | When the clutch pedal is depressed | Battery voltage |
| | | | | | When the clutch pedal is not depressed | 0V |
| | | | | Ignition switch ON (other than M/ T vehicle) | When selector lever is in P or N position and the brake is depressed | Battery voltage |
| | | | | | When selector lever is in P or N position and the brake is not depressed | 0V |
| 141 (BR) | Ground | Trunk request switch | Input | Trunk request switch | ON (pressed) | 0V |
| | | | | | OFF (not pressed) |  1.0V |
| 144 (GR) | Ground | Request switch buzzer | Output | Request switch buzzer | Sounding | 0V |
| | | | | | Not sounding | Battery voltage |
| 147 (L/R) | Ground | Trunk lid opener switch | Input | Trunk lid opener switch | Pressed | 0V |
| | | | | | Not pressed | Battery voltage |
| 148 (R/W) | Ground | Rear door RH switch | Input | Rear door RH switch | OFF (when rear door RH closes) |  11.8V |
| | | | | | ON (when rear door RH opens) | 0V |


A
B
C
D
F
G
H
I
J
K
L
M
N
O
P

WT

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|---------------------|------------------|------------------------------|--------------------------------|
| (+) | (-) | Signal name | Input/ Output | | |
| 149 (R/B) | Ground | Rear door LH switch | Input | Rear door LH switch | OFF (when rear door LH closes) |
| | | | | ON (when rear door LH opens) | 0V |

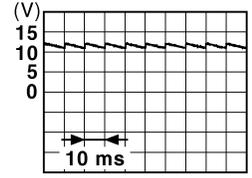

JPMIA0011GB

11.8V

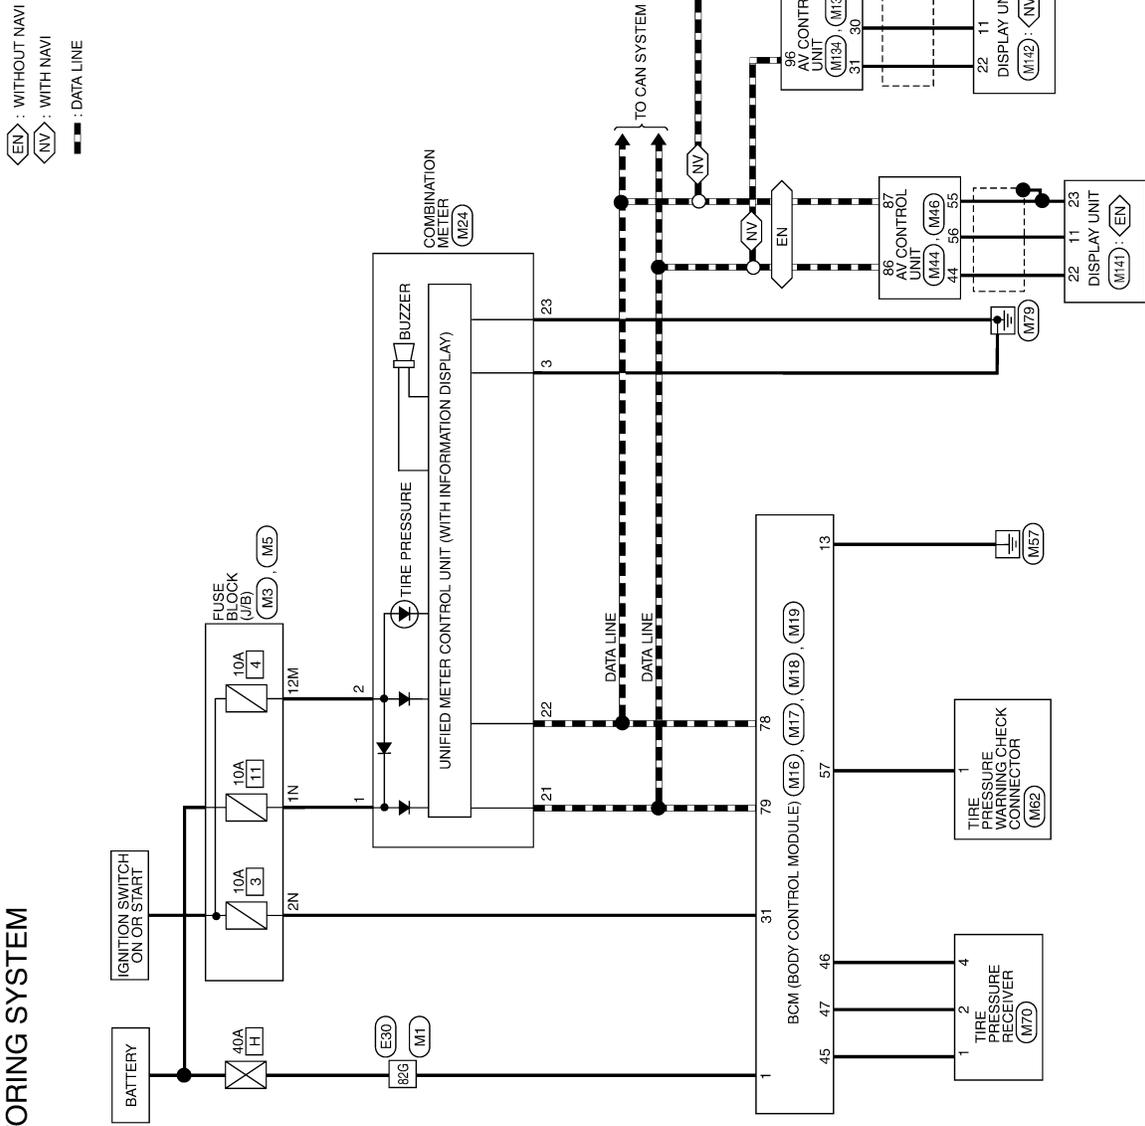
BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Wiring Diagram

INFOID:000000003895067

TIRE PRESSURE MONITORING SYSTEM



◻ : WITHOUT NAVI
 ◻ : WITH NAVI
 - - - : DATA LINE

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P


ABEWA0012GE

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >


TIRE PRESSURE MONITORING SYSTEM CONNECTORS

| | |
|-----------------|--------------|
| Connector No. | M1 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |

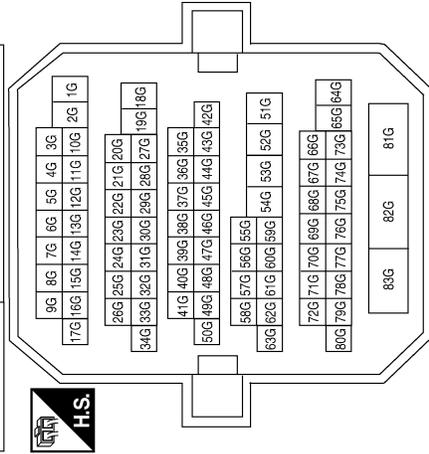


| | | |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 82G | W/B | - |

| | |
|-----------------|------------------|
| Connector No. | M3 |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Color | WHITE |

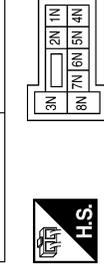

| | | |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 1N | W/L | - |
| 2N | G | - |

| | |
|-----------------|------------------|
| Connector No. | M5 |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Color | WHITE |

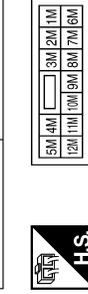


| | | |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 12M | O | - |

| | |
|-----------------|---------------------------|
| Connector No. | M16 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Color | BLACK |



| | | |
|--------------|---------------|---------------|
| Terminal No. | Color of Wire | Signal Name |
| 1 | W/B | BAT POWER F/L |

| | |
|-----------------|---------------------------|
| Connector No. | M17 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Color | WHITE |

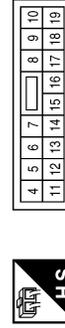

| | | |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 13 | B | GND1 |

ABEIA0036GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

| | |
|-----------------|---------------------------|
| Connector No. | M18 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Color | GREEN |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|---------------------|
| 31 | G | IGN F/B |
| 45 | P | GND RF2 A/L |
| 46 | V/W | A/L POWER SUPPLY 5V |
| 47 | G/O | RF2 TUNER SIGNAL |
| 57 | W | TPMS MODE |

| | |
|-----------------|---------------------------|
| Connector No. | M19 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Color | BLACK |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 78 | P | CAN-L |
| 79 | L | CAN-H |

| | |
|-----------------|-------------------|
| Connector No. | M24 |
| Connector Name | COMBINATION METER |
| Connector Color | WHITE |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|--------------|
| 1 | W/L | BAT |
| 2 | O | IGN |
| 3 | B | GND(POWER) |
| 21 | L | CAN-H |
| 22 | P | CAN-L |
| 23 | B | GND(CIRCUIT) |

| | |
|-----------------|--------------------------------|
| Connector No. | M44 |
| Connector Name | AV CONTROL UNIT (WITHOUT NAVI) |
| Connector Color | WHITE |

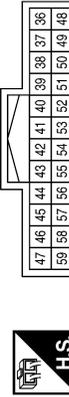

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 44 | BR | DISP IT |
| 55 | SHIELD | SHIELD |
| 56 | Y | IT DISP |

| | |
|-----------------|--------------------------------|
| Connector No. | M46 |
| Connector Name | AV CONTROL UNIT (WITHOUT NAVI) |
| Connector Color | WHITE |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 86 | L | CAN-H |
| 87 | P | CAN-L |

| | |
|-----------------|---------------------------------------|
| Connector No. | M62 |
| Connector Name | TIRE PRESSURE WARNING CHECK CONNECTOR |
| Connector Color | WHITE |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1 | W | LOW TIRE |

ABEIA0037GB

A B C D E F G H I J K L M N O P

WT

BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS >

| | |
|-----------------|------------------------|
| Connector No. | M70 |
| Connector Name | TIRE PRESSURE RECEIVER |
| Connector Color | WHITE |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1 | P | GND |
| 2 | G/O | SIGNAL |
| 4 | V/W | POWER |

| | |
|-----------------|-----------------------------|
| Connector No. | M134 |
| Connector Name | AV CONTROL UNIT (WITH NAVI) |
| Connector Color | WHITE |

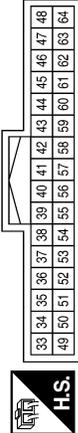


| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 30 | Y | IT DISP |
| 31 | BR | DISP IT |
| 32 | SHIELD | SHIELD |

| | |
|-----------------|-----------------------------|
| Connector No. | M139 |
| Connector Name | AV CONTROL UNIT (WITH NAVI) |
| Connector Color | WHITE |

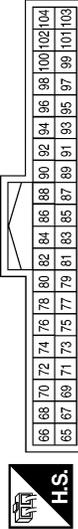


| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 96 | L | CAN-H |
| 97 | P | CAN-L |

| | |
|-----------------|-----------------------------|
| Connector No. | M141 |
| Connector Name | DISPLAY UNIT (WITHOUT NAVI) |
| Connector Color | WHITE |

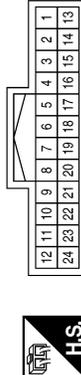


| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 11 | Y | IT DISP |
| 22 | BR | DISP IT |
| 23 | SHIELD | SHIELD |

| | |
|-----------------|--------------------------|
| Connector No. | M142 |
| Connector Name | DISPLAY UNIT (WITH NAVI) |
| Connector Color | WHITE |

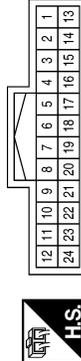

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 11 | Y | IT DISP |
| 22 | BR | DISP IT |
| 23 | SHIELD | SHIELD |

| | |
|-----------------|--------------|
| Connector No. | E30 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |

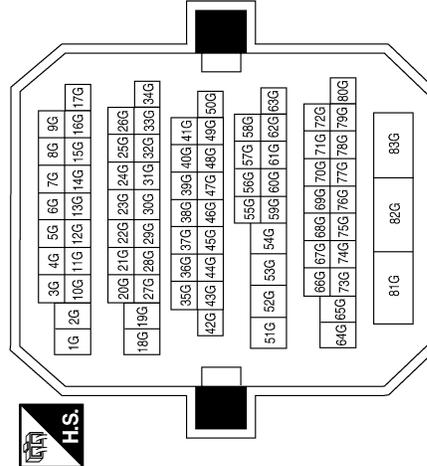

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 82G | LG | - |

Self-Diagnosis (With CONSULT-III)

FUNCTION

Self-Diagnostic Results Mode

ABEIA0038GB

INFOID:000000003895068

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

| Diagnostic item | Diagnostic item is detected when ... | Reference page |
|--|--|-----------------------|
| LOW - PRESSURE - FL [C1704] LOW - PRESSURE - FR [C1705] LOW - PRESSURE - RR [C1706] LOW - PRESSURE - RL [C1707] | Tire pressures dropped below specified value. Refer to WT-8 , " System Description ". | — |
| [NO-DATA] - FL [C1708] [NO-DATA] - FR [C1709] [NO-DATA] - RR [C1710] [NO-DATA] - RL [C1711] | Data from FL transmitter cannot be received. Data from FR transmitter cannot be received. Data from RR transmitter cannot be received. Data from RL transmitter cannot be received. | WT-13 |
| [CHECKSUM- ERR] - FL [C1712] [CHECKSUM- ERR] - FR [C1713] [CHECKSUM- ERR] - RR [C1714] [CHECKSUM- ERR] - RL [C1715] | Checksum data from FL transmitter is malfunctioning. Checksum data from FR transmitter is malfunctioning. Checksum data from RR transmitter is malfunctioning. Checksum data from RL transmitter is malfunctioning. | WT-15 |
| [PRESSDATA- ERR] - FL [C1716] [PRESSDATA- ERR] - FR [C1717] [PRESSDATA- ERR] - RR [C1718] [PRESSDATA- ERR] - RL [C1719] | Air pressure data from FL transmitter is malfunctioning. Air pressure data from FR transmitter is malfunctioning. Air pressure data from RR transmitter is malfunctioning. Air pressure data from RL transmitter is malfunctioning. | WT-17 |
| [CODE- ERR] - FL [C1720] [CODE- ERR] - FR [C1721] [CODE- ERR] - RR [C1722] [CODE- ERR] - RL [C1723] | Function code data from FL transmitter is malfunctioning. Function code data from FR transmitter is malfunctioning. Function code data from RR transmitter is malfunctioning. Function code data from RL transmitter is malfunctioning. | WT-15 |
| [BATT - VOLT - LOW] - FL [C1724] [BATT - VOLT - LOW] - FR [C1725] [BATT - VOLT - LOW] - RR [C1726] [BATT - VOLT - LOW] - RL [C1727] | Battery voltage of FL transmitter drops. Battery voltage of FR transmitter drops. Battery voltage of RR transmitter drops. Battery voltage of RL transmitter drops. | WT-15 |
| VHCL_SPEED_SIG_ERR [C1729] | Vehicle speed signal is in error. | WT-18 |
| CONTROL MODULE [C1734] | TPMS malfunction in BCM. | WT-19 |

NOTE:

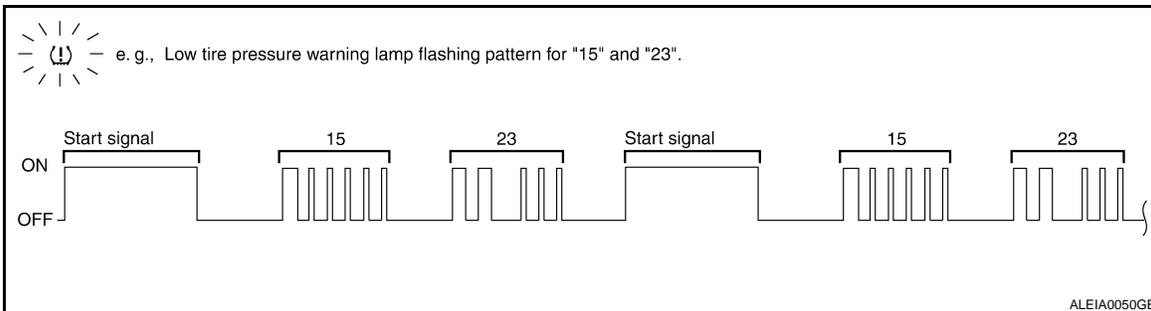
Before performing the self-diagnosis, be sure to register the ID or else the actual malfunction location may be different from that displayed on CONSULT-III.

Self-Diagnosis (Without CONSULT-III)

INFOID:000000003895069

SELF DIAGNOSTIC PROCEDURE (WITHOUT CONSULT-III)

1. Turn ignition switch ON.
2. Ground the tire pressure warning check connector to initiate self diagnosis.
3. Compare the flashing pattern with the flash code chart below.



NOTE:

The system is normal when the low tire pressure warning lamp flashes 5 times and continues repeating. Self-diagnosis results are erased automatically by turning the ignition switch OFF.

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

| Flash Code | Malfunction part | Reference page |
|----------------------|--|-----------------------|
| 15 16 17 18 | Tire pressure dropped below specified value. Refer to WT-8, "System Description" . | — |
| 21 22 23 24 | Transmitter no data (FL) Transmitter no data (FR) Transmitter no data (RR) Transmitter no data (RL) | WT-13 |
| 31 32 33 34 | Transmitter checksum error (FL) Transmitter checksum error (FR) Transmitter checksum error (RR) Transmitter checksum error (RL) | WT-15 |
| 35 36 37 38 | Transmitter pressure data error (FL) Transmitter pressure data error (FR) Transmitter pressure data error (RR) Transmitter pressure data error (RL) | WT-17 |
| 41 42 43 44 | Transmitter function code error (FL) Transmitter function code error (FR) Transmitter function code error (RR) Transmitter function code error (RL) | WT-15 |
| 45 46 47 48 | Transmitter battery voltage low (FL) Transmitter battery voltage low (FR) Transmitter battery voltage low (RR) Transmitter battery voltage low (RL) | WT-15 |
| 52 | Vehicle speed signal | WT-18 |
| 53 | TPMS malfunction in BCM | WT-19 |

TPMS

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

TPMS

Symptom Table

INFOID:000000003895070

| Symptom | Reference |
|--|-----------------------|
| Low tire pressure warning lamp does not come on when ignition switch is turned ON. | WT-52 |
| Low tire pressure warning lamp stays on when ignition switch is turned ON. | WT-53 |
| Low tire pressure warning lamp flashes when ignition switch is turned ON. | WT-54 |
| Hazard warning lamps flash when ignition switch is turned ON. | WT-55 |
| ID registration cannot be completed. | WT-56 |

A

B

C

D

WT

F

G

H

I

J

K

L

M

N

O

P

LOW TIRE PRESSURE WARNING LAMP DOES NOT TURN ON

< SYMPTOM DIAGNOSIS >

LOW TIRE PRESSURE WARNING LAMP DOES NOT TURN ON

Low Tire Pressure Warning Lamp Does Not Come On When Ignition Switch Is Turned On

INFOID:000000003895071

DIAGNOSTIC PROCEDURE

1.SELF-DIAGNOSTIC RESULT CHECK

Using CONSULT-III, check display contents of BCM in SELF-DIAGNOSIS.

Is "CAN COMM CIRCUIT" displayed in the self-diagnosis display items?

- YES >> Malfunction in CAN communication system. Refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).
- NO >> GO TO 2

2.CHECK COMBINATION METER

Check combination meter operation. Refer to [MWI-29, "CONSULT-III Function \(METER/M&A\)"](#).

Is the inspection result normal?

- YES >> GO TO 3
- NO >> Replace combination meter. Refer to [IP-12, "Removal and Installation"](#).

3.CHECK LOW TIRE PRESSURE WARNING LAMP

Disconnect BCM harness connector.

Does the low tire pressure warning lamp activate?

- YES >> Replace BCM. Refer to [BCS-87, "Removal and Installation"](#).
- NO >> Check combination meter operation.

LOW TIRE PRESSURE WARNING LAMP STAYS ON

< SYMPTOM DIAGNOSIS >

LOW TIRE PRESSURE WARNING LAMP STAYS ON

Low Tire Pressure Warning Lamp Stays On When Ignition Switch Is Turned On

INFOID:000000003895072

DIAGNOSTIC PROCEDURE

1.CHECK BCM CONNECTORS

1. Turn ignition switch OFF.
2. Disconnect BCM harness connectors.
3. Check terminals for damage or loose connections.

Is the inspection result normal?

- YES >> GO TO 2
NO >> Repair or replace damaged parts.

2.CHECK BCM POWER SUPPLY AND GROUND CIRCUITS

Refer to [BCS-41. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-87. "Removal and Installation"](#).
NO >> Repair BCM circuits.

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

LOW TIRE PRESSURE WARNING LAMP BLINKS

< SYMPTOM DIAGNOSIS >

LOW TIRE PRESSURE WARNING LAMP BLINKS

Low Tire Pressure Warning Lamp Flashes When Ignition Switch Is Turned On

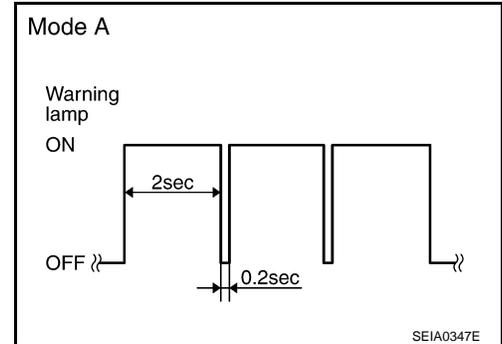
INFOID:000000003895073

NOTE:

If low tire pressure warning lamp flashes as shown, the system is normal.

Flash Mode A

- This mode shows transmitter status is OFF-mode.
Carry out transmitter wake up operation. Refer to [WT-5. "Transmitter Wake Up Operation"](#).



DIAGNOSTIC PROCEDURE

1. CHECK BCM CONNECTORS

1. Turn ignition switch OFF.
2. Disconnect BCM harness connectors.
3. Check terminals for damage or loose connections.

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair or replace damaged parts.

2. CHECK TIRE PRESSURE WARNING CHECK CONNECTOR CIRCUIT

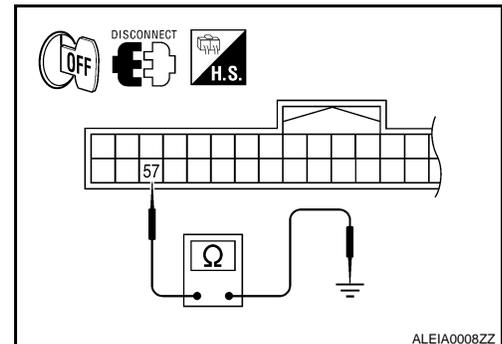
Check continuity between BCM harness connector M18 terminal 57 and ground.

Continuity should not exist.

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-87. "Removal and Installation"](#).

NO >> Repair circuit for short to ground.



HAZARD WARNING LAMPS FLASH

< SYMPTOM DIAGNOSIS >

HAZARD WARNING LAMPS FLASH

Hazard Warning Lamps Flash When Ignition Switch Is Turned On

INFOID:000000003895074

DIAGNOSTIC PROCEDURE

1. CHECK BCM GROUND CIRCUIT

Check BCM ground circuit. Refer to [BCS-41, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-87, "Removal and Installation"](#).

NO >> Repair BCM ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WT

ID REGISTRATION CANNOT BE COMPLETED

< SYMPTOM DIAGNOSIS >

ID REGISTRATION CANNOT BE COMPLETED

ID Registration Cannot Be Completed

INFOID:000000003895075

DIAGNOSTIC PROCEDURE

1. PERFORM ID REGISTRATION OF ALL TRANSMITTERS

Carry out ID registration of all transmitters. Refer to [WT-6, "ID Registration Procedure"](#).

Can ID registration of all transmitters be completed?

YES >> Inspection End.

NO >> GO TO [WT-13, "Diagnosis Procedure"](#).

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

NVH Troubleshooting Chart

INFOID:000000003895076

Use chart below to help you find the cause of the symptom. If necessary, repair or replace these parts.

| Symptom | | Possible cause and SUSPECTED PARTS | | | | | | | | | | Reference page | | | | | |
|-------------------------------|------------|------------------------------------|--------------|-----------|-------------------------|------------------|-----------------------|----------------|---------------------|---------------------------------|-------------------------------|---|-------------|-------------|-------|----------|-------|
| | | Improper installation, looseness | Out-of-round | Imbalance | Incorrect tire pressure | Uneven tire wear | Deformation or damage | Non-uniformity | Incorrect tire size | FRONT AXLE AND FRONT SUSPENSION | REAR AXLE AND REAR SUSPENSION | TIRES | ROAD WHEELS | DRIVE SHAFT | BRAKE | STEERING | |
| Noise | TIRES | Noise | x | x | x | x | x | x | x | x | x | x | x | x | x | x | WT-60 |
| | | Shake | x | x | x | x | x | x | x | x | x | x | x | x | x | x | WT-60 |
| | | Vibration | | | | x | | | | x | x | x | | x | | | WT-60 |
| | | Shimmy | x | x | x | x | x | x | x | x | x | x | x | | x | x | WT-66 |
| | | Shudder | x | x | x | x | x | x | | x | x | x | x | | x | x | WT-60 |
| | ROAD WHEEL | Noise | x | x | x | | | x | | | x | x | x | x | x | x | — |
| | | Shake | x | x | x | | | x | | | x | x | x | x | x | x | — |
| | | Shimmy, Shudder | x | x | x | | | x | | | x | x | x | | x | x | WT-66 |
| Poor quality ride or handling | | x | x | x | | | x | | | x | x | x | | | | WT-66 | |
| | | x | x | x | | | x | | | x | x | x | | | | WT-66 | |
| | | | | | | | | | | | | Refer to TIRES in this chart. | | | | | |
| | | | | | | | | | | | | Refer to ROAD WHEEL in this chart. | | | | | |
| | | | | | | | | | | | | FAX-2. "NVH Troubleshooting Chart", FSU-2. "NVH Troubleshooting Chart" | | | | | |
| | | | | | | | | | | | | RAX-2. "NVH Troubleshooting Chart", RSU-2. "NVH Troubleshooting Chart" | | | | | |
| | | | | | | | | | | | | BR-5. "NVH Troubleshooting Chart" | | | | | |
| | | | | | | | | | | | | ST-8. "NVH Troubleshooting Chart" | | | | | |

x: Applicable

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WT

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Supplemental Restraint System (SRS) AIR BAG and SEAT BELT PRE-TENSIONER

INFOID:000000003895077

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precautions Necessary for Steering Wheel Rotation after Battery Disconnect

INFOID:000000004394045

NOTE:

- Before removing and installing any control units, first turn the push-button ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

This vehicle is equipped with a push-button ignition switch and a steering lock unit.

If the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the battery disconnected or discharged, follow the procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.

NOTE:

Supply power using jumper cables if battery is discharged.

2. Carry the Intelligent Key or insert it to the key slot and turn the push-button ignition switch to ACC position. (At this time, the steering lock will be released.)
3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.
4. Perform the necessary repair operation.
5. When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the push-button ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the push-button ignition switch is turned to LOCK position.)
6. Perform self-diagnosis check of all control units using CONSULT-III.

Precaution for work

INFOID:000000003895078

- After removing and installing the opening/closing parts, be sure to carry out fitting adjustments to check their operation.
- Check the lubrication level, damage, and wear of each part. If necessary, grease or replace it.

PREPARATION

< PREPARATION >

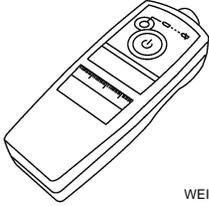
PREPARATION

PREPARATION

Special Service Tool


INFOID:000000003895079

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

| Tool number (Kent-Moore No.) Tool name | Description |
|---|--|
| KV991B1000 (J-45295) Transmitter activation tool  <p style="text-align: right;">WEIA0144E</p> | <ul style="list-style-type: none"> • Transmitter wake up operation • ID registration procedure |

Commercial Service Tools

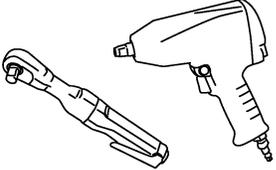INFOID:000000003895080

| Tool name | Description |
|--|--------------------------|
| Power tool  <p style="text-align: right;">PBIC0190E</p> | Loosening bolts and nuts |

ROAD WHEEL

< ON-VEHICLE MAINTENANCE >

ON-VEHICLE MAINTENANCE

ROAD WHEEL

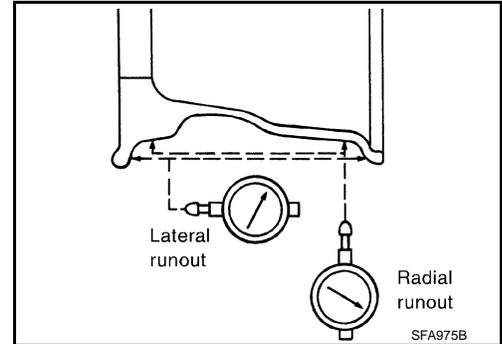
Inspection

INFOID:000000003895081

ALUMINUM WHEEL

1. Check tires for wear and improper inflation.
2. Check wheels for deformation, cracks and other damage. If deformed, remove wheel and check wheel runout.
 - a. Remove tire from aluminum wheel and mount on a tire balance machine. Refer to [WT-64. "Removal and Installation"](#) to remove transmitter.
 - b. Set dial indicator as shown and rotate the wheel to check for runout.
 - Replace wheel if runout exceeds specification.

Wheel runout Refer to [WT-66](#).



TIRE PRESSURE RECEIVER

< ON-VEHICLE REPAIR >

ON-VEHICLE REPAIR

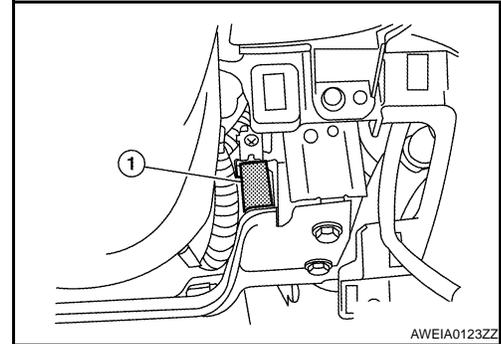
TIRE PRESSURE RECEIVER

Removal and Installation

INFOID:000000003895082

REMOVAL

1. Remove instrument lower cover (LH). Refer to [JP-11, "Exploded View"](#).
2. Locate tire pressure receiver (1) to the right of the steering column and disconnect tire pressure receiver electrical connector.
3. Remove tire pressure receiver (1) from bracket using a suitable tool to release the bracket.



INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

ROAD WHEEL TIRE ASSEMBLY

< ON-VEHICLE REPAIR >

ROAD WHEEL TIRE ASSEMBLY

Adjustment

INFOID:000000003895083

WHEEL BALANCE

1. Remove inner and outer balance weights from the wheel.

CAUTION:

- Be careful not to scratch the wheel during removal procedures.

2. Using releasing agent, remove double-faced adhesive tape from the wheel.

CAUTION:

- Be careful not to scratch the wheel during removal.
- After removing double-faced adhesive tape, wipe clean traces of releasing agent from the wheel.

3. Set wheel on wheel balancer using the center hole as a guide. Start the tire balance machine.

- If a tire balance machine has adhesion balance weight mode settings and drive-in weight mode setting, select and adjust a drive-in weight mode suitable for wheels.

4. When inner and outer unbalance values are shown on the wheel balancer indicator, multiply outer unbalance value by 1.6 to determine balance weight that should be used. Select the outer balance weight with a value closest to the calculated value and install it to the designated outer position of, or at the designated angle in relation to the road wheel.

CAUTION:

- Do not install the inner balance weight before installing the outer balance weight.
- Before installing the balance weight, be sure to clean the mating surface of the wheel.

Indicated unbalance value $\times 5/3$ = balance weight to be installed

Calculation example:

23 g (0.81 oz.) $\times 5/3$ = 38.33 g (1.35 oz.) = 40 g (1.41 oz.) balance weight (closer to calculated balance weight value)

Note that balance weight value must be closer to the calculated balance weight value.

Example:

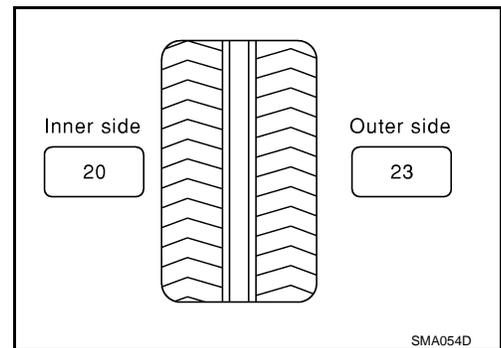
37.4 g = 35 g (1.23 oz.)

37.5 g = 40 g (1.41 oz.)


- a. Install balance weight in the position shown.
- b. When installing balance weight to wheels, set it into the grooved area on the inner wall of the wheel as shown so that the balance weight center is aligned with the wheel balancer indication position (angle).

CAUTION:

- Always use genuine Nissan adhesion balance weights.
- Balance weights are not reusable; always replace with new ones.
- Do not install more than three sheets of balance weights.



SMA054D

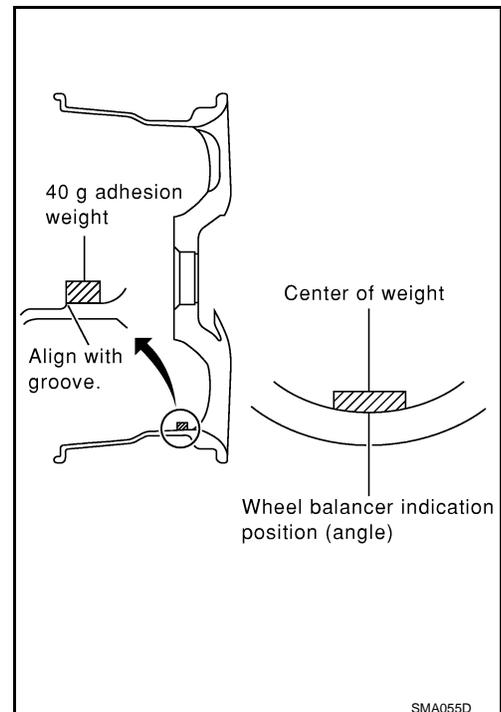

SMA055D

ROAD WHEEL TIRE ASSEMBLY

< ON-VEHICLE REPAIR >

- c. If calculated balance weight value exceeds 50 g (1.76 oz.), install two balance weight sheets in line with each other as shown.

CAUTION:

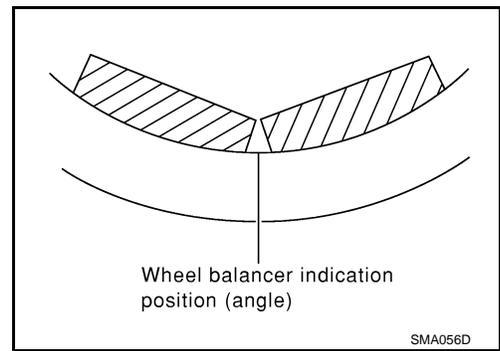
Do not install one balance weight sheet on top of another.

5. Start wheel balancer again.
6. Install drive-in balance weight on inner side of road wheel in the wheel balancer indication position (angle).

CAUTION:

Do not install more than two balance weights.

7. Start wheel balancer. Make sure that inner and outer residual unbalance values are 5 g (0.18 oz.) each or below.
 - If either residual unbalance value exceeds 5 g (0.18 oz.), repeat installation procedures.



Allowable unbalance : Refer to [WT-66, "Road Wheel"](#).

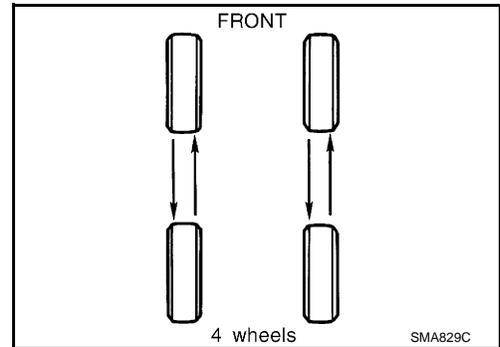
TIRE ROTATION

- Use power tool to remove wheel and tire assembly.
- Follow the maintenance schedule for tire rotation service intervals. Refer to [MA-7, "FOR NORTH AMERICA : Explanation of General Maintenance"](#).

CAUTION:

- Do not include the T-type spare tire when rotating the tires.
- When installing wheels, tighten them diagonally by dividing the work two to three times in order to prevent the wheels from developing any distortion.
- Be careful not to tighten wheel nut at torque exceeding the criteria for preventing strain of disc rotor.

Wheel nut tightening torque : 112 N·m (11 kg·m, 83 ft·lb)



TRANSMITTER

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

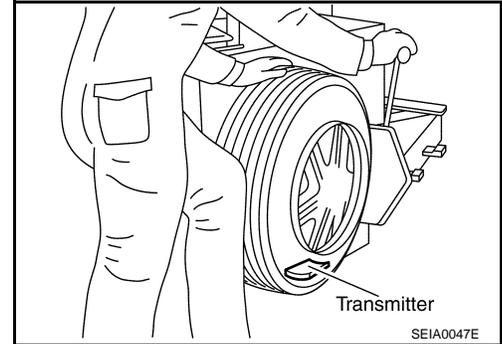
TRANSMITTER

Removal and Installation


INFOID:000000003895084

REMOVAL

1. Deflate tire. Unscrew transmitter retaining nut and allow transmitter to fall into tire.
2. Gently bounce tire so that transmitter falls to bottom of tire. Place on tire changing machine and break both tire beads ensuring that the transmitter remains at the bottom of the tire.




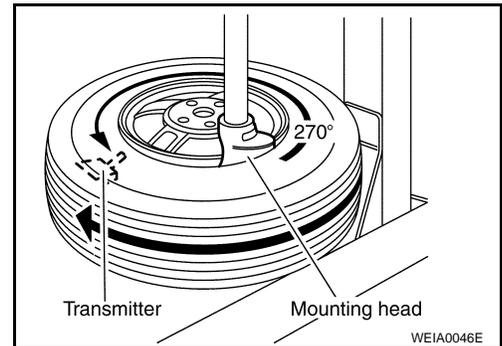3. Turn tire so that valve hole is at bottom and bounce so that transmitter is near valve hole. Carefully lift tire onto turntable and position valve hole (and transmitter) 270 degrees from mounting/dismounting head.
4. Lubricate tire well and remove first side of the tire. Reach inside the tire and remove the transmitter.



INSTALLATION

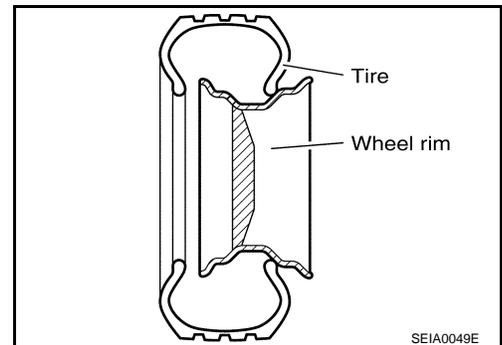1. Put first side of tire onto rim.



2. Apply suitable silicone lubricant to new transmitter seal, then install seal on transmitter. Refer to [MA-17, "FOR NORTH AMERICA : Fluids and Lubricants"](#) (for North America), [MA-18, "FOR MEXICO : Fluids and Lubricants"](#) (for Mexico).

NOTE:

Always replace the seal after ever disassembly.

TRANSMITTER

< REMOVAL AND INSTALLATION >

3. Mount transmitter on rim and tighten nut.

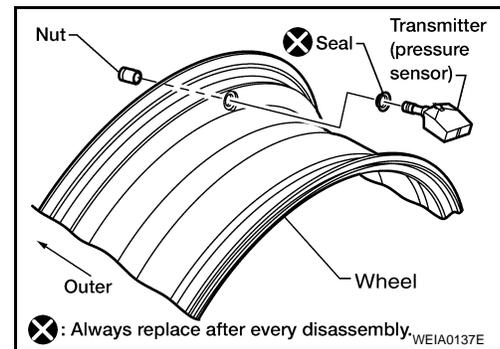
CAUTION:

Speed for tightening nut should be less than 10 rpm.

NOTE:

Make sure no burrs exist in the valve stem hole of the wheel.

Transmitter nut : 7.7 N·m (0.79 kg·m, 68 in·lb)




4. Place wheel on turntable of tire machine. Ensure that transmitter is 270 degrees from mounting head when second side of tire is fitted.

NOTE:

Do not touch transmitter at mounting head.

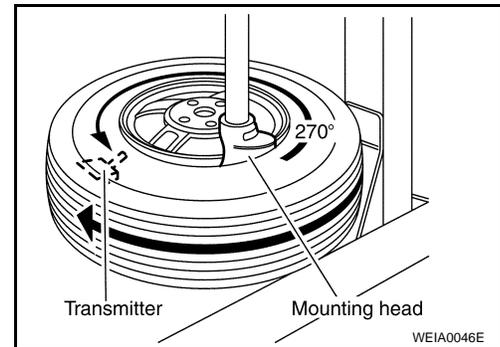5. Lubricate tire well and fit second side of tire as normal. Ensure that tire does not rotate relative to rim.
6. Inflate tire and balance the wheel and tire assembly. Refer to [WT-62, "Adjustment"](#).
7. Install wheel and tire assembly in appropriate wheel position on vehicle. Refer to [WT-62, "Adjustment"](#).



NOTE:

If replacing the transmitter, the transmitter wake up operation must be performed. Refer to [WT-5, "Transmitter Wake Up Operation"](#).

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Road Wheel

INFOID:000000003895085

| Standard item | | Allowable value |
|-----------------------------|----------------------------|------------------------------------|
| | | Aluminum |
| Wheel runout | Lateral deflection | Less than 0.3 mm (0.012 in) |
| | Radial deflection | |
| Allowable unbalance | Dynamic (At rim flange) | Less than 5 g (0.18 oz) (one side) |
| | Static (At rim flange) | Less than 10 g (0.35 oz) |
| Wheel nut tightening torque | | 112 N·m (11 kg·m, 83 ft·lb) |

Tire

INFOID:000000003895086

Unit: kPa (kg/cm², psi)

| Tire size | Air pressure | |
|------------|-------------------|---------------|
| | Conventional tire | Spare tire |
| P245/45R18 | 230 (2.3, 33) | — |
| P245/40R19 | 240 (2.4, 35) | — |
| T145/80D17 | — | 420 (4.2, 60) |