

SECTION **CVT**

**CVT**

A  
B  
CVT

CONTENTS

<b>INDEX FOR DTC</b> .....	<b>6</b>	Cross-Sectional View - RE0F09A .....	<b>18</b>	F
Alphabetical Index .....	6	Control System .....	19	
DTC No. Index .....	7	Hydraulic Control System .....	20	
<b>PRECAUTIONS</b> .....	<b>8</b>	TCM Function .....	21	G
Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	8	CONTROL SYSTEM OUTLINE .....	21	
Precautions for TCM and CVT Assembly Replacement .....	8	CONTROL SYSTEM DIAGRAM .....	21	
EEPROM ERASING PATTERNS .....	8	CAN Communication .....	22	H
METHOD FOR ERASING THE EEPROM IN THE TCM .....	8	SYSTEM DESCRIPTION .....	22	
METHOD FOR WRITING DATA FROM THE ROM ASSEMBLY IN THE TRANSAXLE .....	9	Input/Output Signal of TCM .....	22	I
CHECK METHOD .....	9	Line Pressure and Secondary Pressure Control ...	23	
Removal and Installation Procedure for CVT Unit Connector .....	9	NORMAL CONTROL .....	23	J
REMOVAL .....	9	FEEDBACK CONTROL .....	23	
INSTALLATION .....	9	Shift Control .....	23	K
Precautions .....	10	"D" POSITION .....	24	
Service Notice or Precautions .....	11	"S" POSITION .....	24	L
CVT FLUID COOLER SERVICE .....	11	"L" POSITION .....	24	
OBD-II SELF-DIAGNOSIS .....	11	"M" POSITION .....	24	
Wiring Diagrams and Trouble Diagnosis .....	11	DOWNHILL ENGINE BRAKE CONTROL (AUTO ENGINE BRAKE CONTROL) .....	24	M
<b>PREPARATION</b> .....	<b>12</b>	ACCELATION CONTROL .....	24	
Special Service Tools .....	12	Lock-up and Select Control .....	25	
Commercial Service Tools .....	13	TORQUE CONVERTER CLUTCH AND SELECT CONTROL VALVE CONTROL .....	25	
<b>CVT FLUID</b> .....	<b>14</b>	Control Valve .....	26	
Checking CVT Fluid .....	14	FUNCTION OF CONTROL VALVE .....	26	
FLUID LEVEL CHECK .....	14	<b>ON BOARD DIAGNOSTIC (OBD) SYSTEM</b> .....	<b>27</b>	
Changing CVT Fluid .....	15	Introduction .....	27	
CVT Fluid Cooler Cleaning .....	15	OBD-II Function for CVT System .....	27	
CVT FLUID COOLER CLEANING PROCEDURE .....	15	One or Two Trip Detection Logic of OBD-II .....	27	
CVT FLUID COOLER DIAGNOSIS PROCEDURE .....	16	ONE TRIP DETECTION LOGIC .....	27	
CVT FLUID COOLER INSPECTION PROCEDURE .....	17	TWO TRIP DETECTION LOGIC .....	27	
CVT FLUID COOLER FINAL INSPECTION .....	17	OBD-II Diagnostic Trouble Code (DTC) .....	27	
<b>CVT SYSTEM</b> .....	<b>18</b>	HOW TO READ DTC AND 1ST TRIP DTC .....	27	
		HOW TO ERASE DTC .....	28	
		HOW TO ERASE DTC (WITH CONSULT-II) .....	29	
		HOW TO ERASE DTC (WITH GST) .....	29	
		Malfunction Indicator Lamp (MIL) .....	30	
		DESCRIPTION .....	30	
		<b>TROUBLE DIAGNOSIS</b> .....	<b>31</b>	
		DTC Inspection Priority Chart .....	31	

Fail-safe .....	31	Possible Cause .....	78
FAIL-SAFE FUNCTION .....	31	DTC Confirmation Procedure .....	78
How to Perform Trouble Diagnosis for Quick and		WITH CONSULT-II .....	78
Accurate Repair .....	32	Diagnostic Procedure .....	79
INTRODUCTION .....	32	<b>DTC P0705 PARK/NEUTRAL POSITION SWITCH...80</b>	
WORK FLOW .....	33	Description .....	80
DIAGNOSTIC WORKSHEET .....	34	CONSULT-II Reference Value .....	80
CVT Electrical Parts Location (With Manual Mode)..	37	On Board Diagnosis Logic .....	80
CVT Electrical Parts Location (Without Manual		Possible Cause .....	80
Mode) .....	38	DTC Confirmation Procedure .....	80
Circuit Diagram .....	39	WITH CONSULT-II .....	81
Inspections Before Trouble Diagnosis .....	40	WITH GST .....	81
CVT FLUID CHECK .....	40	Wiring Diagram — CVT — PNP/SW .....	82
STALL TEST .....	40	Diagnostic Procedure .....	84
LINE PRESSURE TEST .....	42	Component Inspection .....	87
Road Test .....	44	PNP SWITCH .....	87
DESCRIPTION .....	44	<b>DTC P0710 CVT FLUID TEMPERATURE SENSOR</b>	
CONSULT-II SETTING PROCEDURE .....	44	<b>CIRCUIT .....</b>	<b>88</b>
Check Before Engine Is Started .....	47	Description .....	88
Check at Idle .....	47	CONSULT-II Reference Value .....	88
Cruise Test .....	51	On Board Diagnosis Logic .....	88
Vehicle Speed When Shifting Gears .....	55	Possible Cause .....	88
TCM Input/Output Signal Reference Values .....	56	DTC Confirmation Procedure .....	88
TCM TERMINAL CONNECTOR LAYOUT .....	56	WITH CONSULT-II .....	88
TCM INSPECTION TABLE .....	56	WITH GST .....	88
CONSULT-II .....	59	Wiring Diagram — CVT — FTS .....	89
FUNCTION .....	59	Diagnostic Procedure .....	90
CONSULT-II REFERENCE VALUE .....	59	Component Inspection .....	92
CONSULT-II SETTING PROCEDURE .....	61	CVT FLUID TEMPERATURE SENSOR .....	92
SELF-DIAGNOSTIC RESULT MODE .....	62	<b>DTC P0715 INPUT SPEED SENSOR CIRCUIT (PRI</b>	
DATA MONITOR MODE .....	64	<b>SPEED SENSOR) .....</b>	<b>93</b>
HOW TO ERASE SELF-DIAGNOSTIC		Description .....	93
RESULTS .....	67	CONSULT-II Reference Value .....	93
WORK SUPPORT MODE .....	68	On Board Diagnosis Logic .....	93
Diagnostic Procedure Without CONSULT-II .....	70	Possible Cause .....	93
OBD-II SELF-DIAGNOSTIC PROCEDURE		DTC Confirmation Procedure .....	93
(WITH GST) .....	70	WITH CONSULT-II .....	93
<b>DTC U1000 CAN COMMUNICATION LINE .....</b>	<b>71</b>	WITH GST .....	93
Description .....	71	Wiring Diagram — CVT — PRSCVT .....	94
On Board Diagnosis Logic .....	71	Diagnostic Procedure .....	95
Possible Cause .....	71	<b>DTC P0720 VEHICLE SPEED SENSOR CVT (SEC-</b>	
DTC Confirmation Procedure .....	71	<b>ONDARY SPEED SENSOR) .....</b>	<b>98</b>
WITH CONSULT-II .....	71	Description .....	98
WITH GST .....	71	CONSULT-II Reference Value .....	98
Wiring Diagram — CVT — CAN .....	72	On Board Diagnosis Logic .....	98
Diagnostic Procedure .....	73	Possible Cause .....	98
<b>DTC P0615 START SIGNAL CIRCUIT .....</b>	<b>74</b>	DTC Confirmation Procedure .....	98
Description .....	74	WITH CONSULT-II .....	98
CONSULT-II Reference Value .....	74	WITH GST .....	98
On Board Diagnosis Logic .....	74	Wiring Diagram — CVT — SESCOVT .....	99
Possible Cause .....	74	Diagnostic Procedure .....	100
DTC Confirmation Procedure .....	74	<b>DTC P0725 ENGINE SPEED SIGNAL .....</b>	<b>104</b>
WITH CONSULT-II .....	74	Description .....	104
Wiring Diagram — CVT — STSIG .....	75	CONSULT-II Reference Value .....	104
Diagnostic Procedure .....	76	On Board Diagnosis Logic .....	104
<b>DTC P0703 STOP LAMP SWITCH CIRCUIT .....</b>	<b>78</b>	Possible Cause .....	104
Description .....	78	DTC Confirmation Procedure .....	104
CONSULT-II Reference Value .....	78	WITH CONSULT-II .....	104
On Board Diagnosis Logic .....	78	Diagnostic Procedure .....	104

<b>DTC P0730 BELT DAMAGE</b> .....	<b>106</b>	CONSULT-II Reference Value .....	124	
Description .....	106	On Board Diagnosis Logic .....	124	A
CONSULT-II Reference Value .....	106	Possible Cause .....	124	
On Board Diagnosis Logic .....	106	DTC Confirmation Procedure .....	124	
Possible Cause .....	106	WITH CONSULT-II .....	124	B
DTC Confirmation Procedure .....	106	WITH GST .....	124	
WITH CONSULT-II .....	106	Diagnostic Procedure .....	125	
Diagnostic Procedure .....	107	<b>DTC P0778 PRESSURE CONTROL SOLENOID B</b>		<b>CVT</b>
<b>DTC P0740 TORQUE CONVERTER CLUTCH</b>		<b>ELECTRICAL (SEC PRESSURE SOLENOID</b>		
<b>SOLENOID VALVE</b> .....	<b>108</b>	<b>VALVE)</b> .....	<b>127</b>	
Description .....	108	Description .....	127	
CONSULT-II Reference Value .....	108	CONSULT-II Reference Value .....	127	D
On Board Diagnosis Logic .....	108	On Board Diagnosis Logic .....	127	
Possible Cause .....	108	Possible Cause .....	127	
DTC Confirmation Procedure .....	108	DTC Confirmation Procedure .....	127	E
WITH CONSULT-II .....	108	WITH CONSULT-II .....	127	
WITH GST .....	108	WITH GST .....	127	
Wiring Diagram — CVT — TCV .....	109	Wiring Diagram — CVT — SECPSV .....	128	F
Diagnostic Procedure .....	110	Diagnostic Procedure .....	129	
Component Inspection .....	112	Component Inspection .....	131	
TORQUE CONVERTER CLUTCH SOLENOID		PRESSURE CONTROL SOLENOID VALVE B		G
VALVE .....	112	(SECONDARY PRESSURE SOLENOID VALVE)		
<b>DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)</b>	<b>113</b>		131	
Description .....	113	<b>DTC P0826 MANUAL MODE SWITCH CIRCUIT</b>	<b>132</b>	
CONSULT-II Reference Value .....	113	Description .....	132	H
On Board Diagnosis Logic .....	113	CONSULT-II Reference Value .....	132	
Possible Cause .....	113	On Board Diagnosis Logic .....	132	
DTC Confirmation Procedure .....	113	Possible Cause .....	132	I
WITH CONSULT-II .....	113	DTC Confirmation Procedure .....	132	
WITH GST .....	113	WITH CONSULT-II .....	132	
Diagnostic Procedure .....	114	Wiring Diagram — CVT — MMSW .....	133	J
<b>DTC P0745 LINE PRESSURE SOLENOID VALVE</b>	<b>116</b>	Diagnostic Procedure .....	134	
Description .....	116	Component Inspection .....	136	
CONSULT-II Reference Value .....	116	MANUAL MODE SWITCH .....	136	
On Board Diagnosis Logic .....	116	CVT Position Indicator .....	136	K
Possible Cause .....	116	DIAGNOSTIC PROCEDURE .....	136	
DTC Confirmation Procedure .....	116	<b>DTC P0840 TRANSMISSION FLUID PRESSURE</b>		
WITH CONSULT-II .....	116	<b>SENSOR A CIRCUIT (SEC PRESSURE SENSOR)</b>	<b>137</b>	L
WITH GST .....	116	Description .....	137	
Wiring Diagram — CVT — LPSV .....	117	CONSULT-II Reference Value .....	137	
Diagnostic Procedure .....	118	On Board Diagnosis Logic .....	137	
Component Inspection .....	120	Possible Cause .....	137	M
PRESSURE CONTROL SOLENOID VALVE A		DTC Confirmation Procedure .....	137	
(LINE PRESSURE SOLENOID VALVE) .....	120	WITH CONSULT-II .....	137	
<b>DTC P0746 PRESSURE CONTROL SOLENOID A</b>		WITH GST .....	137	
<b>PERFORMANCE (LINE PRESSURE SOLENOID</b>		Wiring Diagram — CVT — SECPS .....	138	
<b>VALVE)</b> .....	<b>121</b>	Diagnostic Procedure .....	139	
Description .....	121	<b>DTC P0841 PRESSURE SENSOR FUNCTION</b>	<b>142</b>	
CONSULT-II Reference Value .....	121	Description .....	142	
On Board Diagnosis Logic .....	121	CONSULT-II Reference Value .....	142	
Possible Cause .....	121	On Board Diagnosis Logic .....	142	
DTC Confirmation Procedure .....	121	Possible Cause .....	142	
WITH CONSULT-II .....	121	DTC Confirmation Procedure .....	142	
WITH GST .....	121	WITH CONSULT-II .....	142	
Diagnostic Procedure .....	122	Diagnostic Procedure .....	143	
<b>DTC P0776 PRESSURE CONTROL SOLENOID B</b>		<b>DTC P0845 TRANSMISSION FLUID PRESSURE</b>		
<b>PERFORMANCE (SEC PRESSURE SOLENOID</b>		<b>SENSOR B CIRCUIT (PRI PRESSURE SENSOR)</b>	<b>145</b>	
<b>VALVE)</b> .....	<b>124</b>	Description .....	145	
Description .....	124	CONSULT-II Reference Value .....	145	

On Board Diagnosis Logic .....	145	On Board Diagnosis Logic .....	166
Possible Cause .....	145	Possible Cause .....	166
DTC Confirmation Procedure .....	145	DTC Confirmation Procedure .....	166
WITH CONSULT-II .....	145	WITH CONSULT-II .....	166
WITH GST .....	145	WITH GST .....	166
Wiring Diagram — CVT — PRIPS .....	146	Wiring Diagram — CVT — L/USSV .....	167
Diagnostic Procedure .....	147	Diagnostic Procedure .....	168
<b>DTC P0868 SECONDARY PRESSURE DOWN ....</b>	<b>150</b>	Component Inspection .....	170
Description .....	150	LOCK-UP SELECT SOLENOID VALVE .....	170
CONSULT-II Reference Value .....	150	<b>DTC P1745 LINE PRESSURE CONTROL .....</b>	<b>171</b>
On Board Diagnosis Logic .....	150	Description .....	171
Possible Cause .....	150	On Board Diagnosis Logic .....	171
DTC Confirmation Procedure .....	150	Possible Cause .....	171
WITH CONSULT-II .....	150	DTC Confirmation Procedure .....	171
Diagnostic Procedure .....	151	WITH CONSULT-II .....	171
<b>DTC P1701 TRANSMISSION CONTROL MODULE</b>		Diagnostic Procedure .....	171
<b>(POWER SUPPLY) .....</b>	<b>153</b>	<b>DTC P1777 STEP MOTOR - CIRCUIT .....</b>	<b>172</b>
Description .....	153	Description .....	172
On Board Diagnosis Logic .....	153	CONSULT-II Reference Value .....	172
Possible Cause .....	153	On Board Diagnosis Logic .....	172
DTC Confirmation Procedure .....	153	Possible Cause .....	172
WITH CONSULT-II .....	153	DTC Confirmation Procedure .....	172
Wiring Diagram — CVT — POWER .....	154	WITH CONSULT-II .....	172
Diagnostic Procedure .....	155	WITH GST .....	172
<b>DTC P1705 THROTTLE POSITION SENSOR .....</b>	<b>158</b>	Wiring Diagram — CVT — STM .....	173
Description .....	158	Diagnostic Procedure .....	174
CONSULT-II Reference Value .....	158	Component Inspection .....	175
On Board Diagnosis Logic .....	158	STEP MOTOR .....	175
Possible Cause .....	158	<b>DTC P1778 STEP MOTOR - FUNCTION .....</b>	<b>176</b>
DTC Confirmation Procedure .....	158	Description .....	176
WITH CONSULT-II .....	158	CONSULT-II Reference Value .....	176
Diagnostic Procedure .....	159	On Board Diagnosis Logic .....	176
<b>DTC P1722 ESTM VEHICLE SPEED SIGNAL .....</b>	<b>160</b>	Possible Cause .....	176
Description .....	160	DTC Confirmation Procedure .....	176
CONSULT-II Reference Value .....	160	WITH CONSULT-II .....	176
On Board Diagnosis Logic .....	160	WITH GST .....	177
Possible Cause .....	160	Diagnostic Procedure .....	177
DTC Confirmation Procedure .....	160	<b>SECOND POSITION SWITCH .....</b>	<b>178</b>
WITH CONSULT-II .....	160	Description .....	178
Diagnostic Procedure .....	161	CONSULT-II Reference Value .....	178
<b>DTC P1723 CVT SPEED SENSOR FUNCTION ....</b>	<b>162</b>	Wiring Diagram — CVT — SPSW .....	179
Description .....	162	Diagnostic Procedure .....	180
On Board Diagnosis Logic .....	162	Component Inspection .....	181
Possible Cause .....	162	SECOND POSITION SWITCH .....	181
DTC Confirmation Procedure .....	162	<b>TROUBLE DIAGNOSIS FOR SYMPTOMS .....</b>	<b>182</b>
WITH CONSULT-II .....	162	Wiring Diagram — CVT — NONDTC .....	182
Diagnostic Procedure .....	163	CVT Indicator Lamp Does Not Come On .....	186
<b>DTC P1726 ELECTRIC THROTTLE CONTROL</b>		SYMPTOM: .....	186
<b>SYSTEM .....</b>	<b>164</b>	DIAGNOSTIC PROCEDURE .....	186
Description .....	164	Engine Cannot Be Started in “P” or “N” Position ..	188
On Board Diagnosis Logic .....	164	SYMPTOM: .....	188
Possible Cause .....	164	DIAGNOSTIC PROCEDURE .....	188
DTC Confirmation Procedure .....	164	In “P” Position, Vehicle Moves Forward or Backward	
WITH CONSULT-II .....	164	When Pushed .....	189
Diagnostic Procedure .....	165	SYMPTOM: .....	189
<b>DTC P1740 LOCK-UP SELECT SOLENOID VALVE</b>		DIAGNOSTIC PROCEDURE .....	189
<b>CIRCUIT .....</b>	<b>166</b>	In “N” Position, Vehicle Moves .....	190
Description .....	166	SYMPTOM: .....	190
CONSULT-II Reference Value .....	166	DIAGNOSTIC PROCEDURE .....	190

Large Shock "N" → "R" Position .....	191	SHIFT LOCK HARNESS CONNECTOR TERMINALS LAYOUT .....	214	A
SYMPTOM: .....	191	SHIFT LOCK CONTROL UNIT INSPECTION TABLE .....	214	
DIAGNOSTIC PROCEDURE .....	191	Component Inspection .....	215	B
Vehicle Does Not Creep Backward in "R" Position	193	SHIFT LOCK SOLENOID .....	215	
SYMPTOM: .....	193	DETENTION SWITCH .....	215	
DIAGNOSTIC PROCEDURE .....	193	DETENTION SWITCH .....	215	
Vehicle Does Not Creep Forward in "D", "S" or "L" Position .....	195	KEY LOCK SOLENOID .....	215	CVT
SYMPTOM: .....	195	KEY SWITCH .....	216	
DIAGNOSTIC PROCEDURE .....	195	STOP LAMP SWITCH .....	216	
CVT Does Not Shift .....	197	<b>AIR BREATHER HOSE</b> .....	<b>217</b>	D
SYMPTOM: .....	197	Removal and Installation .....	217	
DIAGNOSTIC PROCEDURE .....	197	<b>DIFFERENTIAL SIDE OIL SEAL</b> .....	<b>218</b>	E
Cannot Be Changed to Manual Mode .....	199	Removal and Installation .....	218	
SYMPTOM: .....	199	COMPONENTS .....	218	
DIAGNOSTIC PROCEDURE .....	199	REMOVAL .....	218	
CVT Does Not Shift in Manual Mode .....	200	INSTALLATION .....	219	F
SYMPTOM: .....	200	<b>CVT FLUID COOLER VALVE</b> .....	<b>220</b>	
DIAGNOSTIC PROCEDURE .....	200	Removal and Installation .....	220	
Cannot Be Changed to Second Position .....	202	COMPONENTS .....	220	G
SYMPTOM: .....	202	REMOVAL .....	221	
DIAGNOSTIC PROCEDURE .....	202	INSTALLATION .....	223	
Cannot Be Changed to "L" Position .....	203	Component Inspection .....	223	H
SYMPTOM: .....	203	<b>TRANSAXLE ASSEMBLY</b> .....	<b>224</b>	
DIAGNOSTIC PROCEDURE .....	203	Removal and Installation .....	224	
Vehicle Does Not Decelerate by Engine Brake ...	205	COMPONENTS (2WD MODELS) .....	224	I
SYMPTOM: .....	205	COMPONENTS (AWD MODELS) .....	225	
DIAGNOSTIC PROCEDURE .....	205	REMOVAL .....	225	
<b>SHIFT CONTROL SYSTEM</b> .....	<b>207</b>	INSPECTION .....	228	J
Removal and Installation .....	207	INSTALLATION .....	229	
COMPONENTS (WITH MANUAL MODE) .....	207	<b>SERVICE DATA AND SPECIFICATIONS (SDS) ...</b>	<b>231</b>	
COMPONENTS (WITHOUT MANUAL MODE) .....	208	General Specifications .....	231	K
REMOVAL .....	209	Vehicle Speed When Shifting Gears .....	231	
INSTALLATION .....	209	Stall Speed .....	231	
Adjustment of CVT Position .....	209	Line Pressure .....	231	L
Checking of CVT Position .....	209	Solenoid Valves .....	232	
<b>CVT SHIFT LOCK SYSTEM</b> .....	<b>211</b>	CVT Fluid Temperature Sensor .....	232	
Description .....	211	Primary Speed Sensor .....	232	
Shift Lock System Electrical Parts Location .....	211	Secondary Speed Sensor .....	232	M
Wiring Diagram — CVT — SHIFT .....	212	Removal and Installation .....	232	
Shift Lock Control Unit Reference Values .....	214			

# INDEX FOR DTC

## INDEX FOR DTC

PFP:00024

### Alphabetical Index

ACS001S6

**NOTE:**

If DTC U1000 is displayed with other DTC, first perform the trouble diagnosis for DTC U1000. Refer to [CVT-71](#).

Items (CONSULT-II screen terms)	DTC		Reference page
	OBD-II	Except OBD-II	
	CONSULT-II GST*1	CONSULT-II only "TRANSMISSION"	
A/T TCC S/V FNCTN	P0744	P0744	<a href="#">CVT-113</a>
ATF TEMP SEN/CIRC	P0710	P0710	<a href="#">CVT-88</a>
BELT DAMG	—	P0730	<a href="#">CVT-106</a>
BRAKE SW/CIRC	—	P0703	<a href="#">CVT-78</a>
CAN COMM CIRCUIT	U1000	U1000	<a href="#">CVT-71</a>
CVT SPD SEN/FNCTN	—	P1723	<a href="#">CVT-162</a>
ENGINE SPEED SIG	—	P0725	<a href="#">CVT-104</a>
ELEC TH CONTROL	—	P1726	<a href="#">CVT-164</a>
ESTM VEH SPD SIG	—	P1722	<a href="#">CVT-160</a>
INPUT SPD SEN/CIRC	P0715	P0715	<a href="#">CVT-93</a>
L/PRESS CONTROL	—	P1745	<a href="#">CVT-171</a>
L/PRESS SOL/CIRC	P0745	P0745	<a href="#">CVT-116</a>
LU-SLCT SOL/CIRC	P1740	P1740	<a href="#">CVT-166</a>
MANUAL MODE SWITCH	—	P0826	<a href="#">CVT-132</a>
PNP SW/CIRC	P0705	P0705	<a href="#">CVT-80</a>
PRESS SEN/FNCTN	—	P0841	<a href="#">CVT-142</a>
PRS CNT SOL/A FCTN	P0746	P0746	<a href="#">CVT-121</a>
PRS CNT SOL/B CIRC	P0778	P0778	<a href="#">CVT-127</a>
PRS CNT SOL/B FCTN	P0776	P0776	<a href="#">CVT-124</a>
SEC/PRESS DOWN	—	P0868	<a href="#">CVT-150</a>
STARTER RELAY/CIRC	—	P0615	<a href="#">CVT-74</a>
STEP MOTR CIRC	P1777	P1777	<a href="#">CVT-172</a>
STEP MOTR/FNC	P1778	P1778	<a href="#">CVT-176</a>
TCC SOLENOID/CIRC	P0740	P0740	<a href="#">CVT-108</a>
TCM-POWER SUPPLY	—	P1701	<a href="#">CVT-153</a>
TP SEN/CIRC A/T	—	P1705	<a href="#">CVT-158</a>
TR PRS SENS/A CIRC	P0840	P0840	<a href="#">CVT-137</a>
TR PRS SENS/B CIRC	P0845	P0845	<a href="#">CVT-145</a>
VEH SPD SEN/CIR AT	P0720	P0720	<a href="#">CVT-98</a>

\*1: These numbers are prescribed by SAE J2012.

# INDEX FOR DTC

## DTC No. Index

ACS001S7

### NOTE:

If DTC U1000 is displayed with other DTC, first perform the trouble diagnosis for DTC U1000. Refer to [CVT-71](#).

DTC		Items (CONSULT-II screen terms)	Reference page
OBD-II	Except OBD-II		
CONSULT-II GST*1	CONSULT-II only "TRANSMISSION"		
—	P0615	STARTER RELAY/CIRC	<a href="#">CVT-74</a>
—	P0703	BRAKE SW/CIRC	<a href="#">CVT-78</a>
P0705	P0705	PNP SW/CIRC	<a href="#">CVT-80</a>
P0710	P0710	ATF TEMP SEN/CIRC	<a href="#">CVT-88</a>
P0715	P0715	INPUT SPD SEN/CIRC	<a href="#">CVT-93</a>
P0720	P0720	VEH SPD SEN/CIR AT	<a href="#">CVT-98</a>
—	P0725	ENGINE SPEED SIG	<a href="#">CVT-104</a>
—	P0730	BELT DAMG	<a href="#">CVT-106</a>
P0740	P0740	TCC SOLENOID/CIRC	<a href="#">CVT-108</a>
P0744	P0744	A/T TCC S/V FNCTN	<a href="#">CVT-113</a>
P0745	P0745	L/PRESS SOL/CIRC	<a href="#">CVT-116</a>
P0746	P0746	PRS CNT SOL/A FCTN	<a href="#">CVT-121</a>
P0776	P0776	PRS CNT SOL/B FCTN	<a href="#">CVT-124</a>
P0778	P0778	PRS CNT SOL/B CIRC	<a href="#">CVT-127</a>
—	P0826	MANUAL MODE SWITCH	<a href="#">CVT-132</a>
P0840	P0840	TR PRS SENS/A CIRC	<a href="#">CVT-137</a>
—	P0841	PRESS SEN/FNCTN	<a href="#">CVT-142</a>
P0845	P0845	TR PRS SENS/B CIRC	<a href="#">CVT-145</a>
—	P0868	SEC/PRESS DOWN	<a href="#">CVT-150</a>
—	P1701	TCM-POWER SUPPLY	<a href="#">CVT-153</a>
—	P1705	TP SEN/CIRC A/T	<a href="#">CVT-158</a>
—	P1722	ESTM VEH SPD SIG	<a href="#">CVT-160</a>
—	P1723	CVT SPD SEN/FNCTN	<a href="#">CVT-162</a>
—	P1726	ELEC TH CONTROL	<a href="#">CVT-164</a>
P1740	P1740	LU-SLCT SOL/CIRC	<a href="#">CVT-166</a>
—	P1745	L/PRESS CONTROL	<a href="#">CVT-171</a>
P1777	P1777	STEP MOTR CIRC	<a href="#">CVT-172</a>
P1778	P1778	STEP MOTR/FNC	<a href="#">CVT-176</a>
U1000	U1000	CAN COMM CIRCUIT	<a href="#">CVT-71</a>

\*1: These numbers are prescribed by SAE J2012.

# PRECAUTIONS

## PRECAUTIONS

PF0:00001

### Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

ACS003KX

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

### Precautions for TCM and CVT Assembly Replacement

ACS001SA

#### **CAUTION:**

- Check if new data (Unit ID) are entered correctly after replacing CVT assembly and erasing data in TCM. (Connect CONSULT-II, and then turn ignition switch OFF.)
- When replacing CVT assembly or TCM, refer to the pattern table below and erase the EEPROM in the TCM if necessary.

#### EEPROM ERASING PATTERNS

CVT assembly	TCM	Erasing EEPROM in TCM	Remarks
Replaced	Replaced	Not required	Not required because the EEPROM in the TCM is in the default state. (CVT assembly must be replaced first.)
Not replaced	Replaced	Not required	Not required because the EEPROM in the TCM is in the default state.
Replaced	Not replaced	Required	Required because data has been written in the EEPROM in the TCM and because the TCM cannot write data from the ROM assembly in the transmission.

#### METHOD FOR ERASING THE EEPROM IN THE TCM

1. Connect CONSULT-II to data link connector.
2. Turn ignition switch ON. Confirm that CONSULT-II is turned “ON”.
3. Move selector lever to “R” position.
4. Touch “START (NISSAN BASED VHCL)” on CONSULT-II.
5. Select “SELF-DIAG RESULTS” mode for “TRANSMISSION” with CONSULT-II.
6. Brake switch “ON”.
7. Press the accelerator pedal (0.5/8 - 4/8 throttle) not to exceed the half, and hold it in the half or less open position. (This will set the closed throttle position signal to “OFF” and the wide open throttle position signal to “OFF”.)
8. Touch “ERASE” on CONSULT-II, and then touch “YES”.
9. Wait 3 seconds and then release the accelerator pedal.
10. Turn ignition switch OFF.

# PRECAUTIONS

## METHOD FOR WRITING DATA FROM THE ROM ASSEMBLY IN THE TRANSAXLE

In the following procedure, the TCM reads data from the ROM assembly and writes it to the EEPROM in the TCM.

1. With the EEPROM in the TCM erased.
2. Move selector lever to "P" position.
3. Turn ignition switch ON.

## CHECK METHOD

- Normal: About 2 seconds after the ignition switch ON, the CVT indicator lamp lights up for 2 seconds.
- Non-standard: Even after the ignition switch ON, the CVT indicator lamp does not light up after 2 seconds or illuminates immediately.

### CAUTION:

Perform in the P or N position.

## Cope for Non-standard


- Replace the CVT assembly.
- Replace the TCM.

## Removal and Installation Procedure for CVT Unit Connector

ACS003L1



### REMOVAL

- Rotate bayonet ring counterclockwise, pull out CVT unit harness connector upward and remove it.

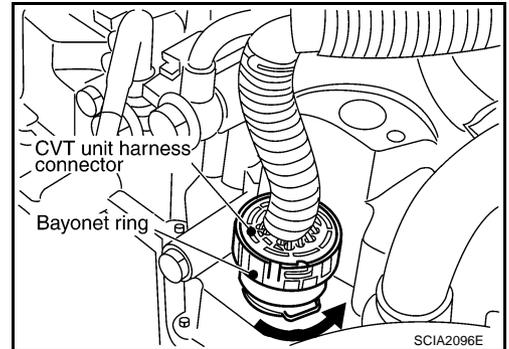

### INSTALLATION


1. Align  $\Delta$  marking on CVT unit harness connector terminal body with  $\square$  marking on bayonet ring, insert CVT unit harness connector, and then rotate bayonet ring clockwise.
2. Rotate bayonet ring clockwise until  $\Delta$  marking on CVT unit harness connector terminal body is aligned with the slit on bayonet ring as shown in the figure (correctly fitting condition), install CVT unit harness connector to CVT unit harness connector terminal body.

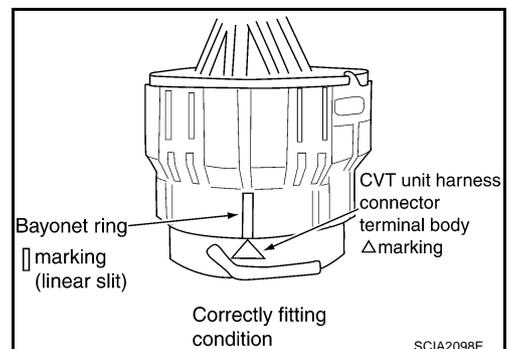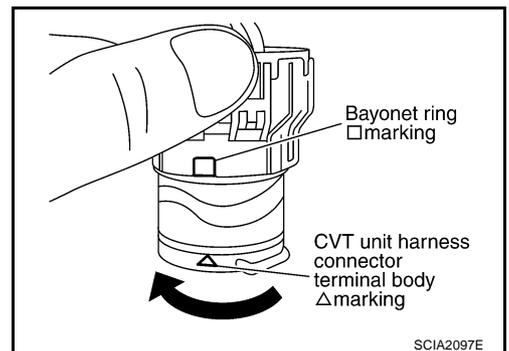

# PRECAUTIONS

## CAUTION:

- Securely align  $\Delta$  marking on CVT unit harness connector terminal body with bayonet ring slit. Then, be careful not to make a half fit condition as shown in the figure.
- Do not mistake the slit of bayonet ring for other dent portion.

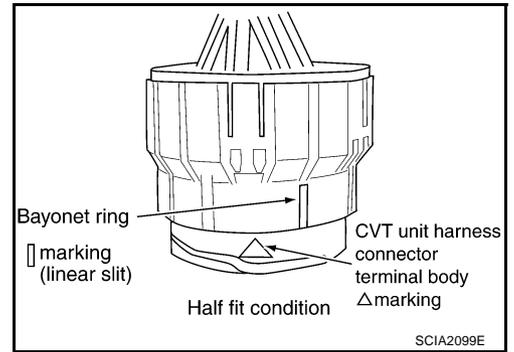


ACS001SB

## Precautions


### NOTE:

If any malfunctions occur in the RE0F09A model transaxle, replace the entire transaxle assembly.


- Before connecting or disconnecting the TCM harness connector, turn ignition switch OFF and disconnect negative battery cable. Because battery voltage is applied to TCM even if ignition switch is turned OFF.

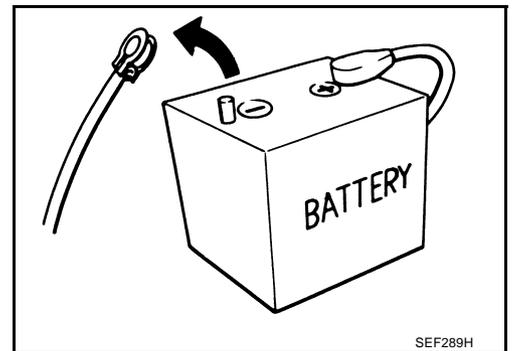

- When connecting or disconnecting pin connectors into or from TCM, take care not to damage pin terminals (bend or break).  
When connecting pin connectors make sure that there are not any bends or breaks on TCM pin terminal.

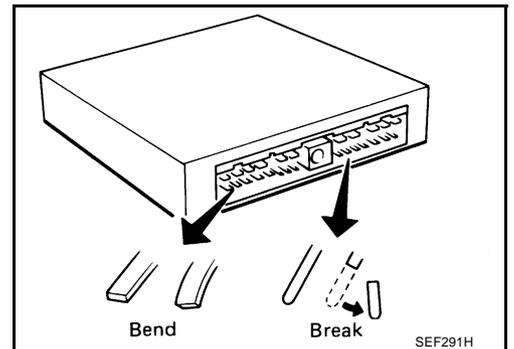


- Before replacing TCM, perform TCM input/output signal inspection and make sure whether TCM functions properly or not. Refer to [CVT-56. "TCM INSPECTION TABLE"](#).

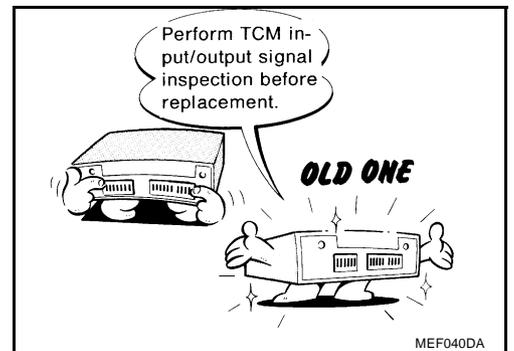

## PRECAUTIONS

- After performing each TROUBLE DIAGNOSIS, perform “DTC (Diagnostic Trouble Code) CONFIRMATION PROCEDURE”. If the repair is completed the DTC should not be displayed in the “DTC CONFIRMATION PROCEDURE”.
- Always use the specified brand of CVT fluid. Refer to [MA-11, "Fluids and Lubricants"](#).
- Use paper rags, not cloth rags, during work.
- After replacing the CVT fluid, dispose of the waste oil using the methods prescribed by law, ordinance, etc.

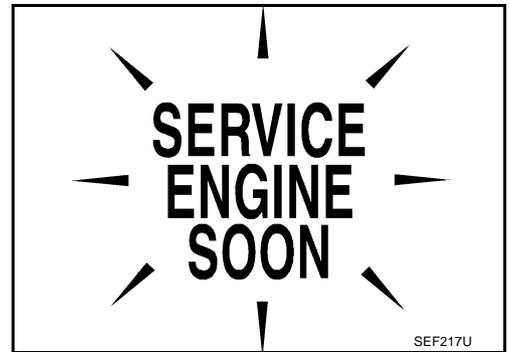

ACS001SC

### Service Notice or Precautions CVT FLUID COOLER SERVICE

If CVT fluid contains frictional material (clutches, bands, etc.), or if an CVT is replaced, inspect and clean the CVT fluid cooler mounted in the radiator or replace the radiator. Flush cooler lines using cleaning solvent and compressed air after repair. For CVT fluid cooler cleaning procedure, refer to [CVT-15, "CVT Fluid Cooler Cleaning"](#). For radiator replacement, refer to [CO-13, "RADIATOR"](#).

### OBD-II SELF-DIAGNOSIS

- CVT self-diagnosis is performed by the TCM in combination with the ECM. The results can be read through the blinking pattern of the malfunction indicator lamp (MIL). Refer to the table on [CVT-62, "Display Items List"](#) for the indicator used to display each self-diagnostic result.
- The self-diagnostic results indicated by the MIL are automatically stored in both the ECM and TCM memories.  
**Always perform the procedure on [CVT-28, "HOW TO ERASE DTC"](#) to complete the repair and avoid unnecessary blinking of the MIL.**

For details of OBD-II, refer to [EC-47, "ON BOARD DIAGNOSTIC \(OBD\) SYSTEM"](#).

- **Certain systems and components, especially those related to OBD, may use the new style slide-locking type harness connector. For description and how to disconnect, refer to [PG-62, "HARNESS CONNECTOR"](#).**

### Wiring Diagrams and Trouble Diagnosis

ACS001SD

When you read wiring diagrams, refer to the following:

- [GI-14, "How to Read Wiring Diagrams"](#).
- [PG-3, "POWER SUPPLY ROUTING CIRCUIT"](#) for power distribution circuit.

When you perform trouble diagnosis, refer to the following:

- [GI-10, "How to Follow Trouble Diagnoses"](#).
- [GI-26, "How to Perform Efficient Diagnosis for an Electrical Incident"](#).

# PREPARATION





## PREPARATION

PFP:00002

### Special Service Tools

ACS001SE

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

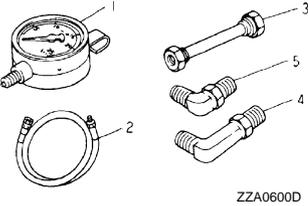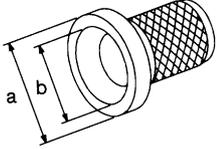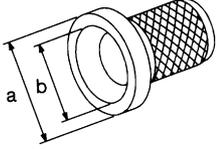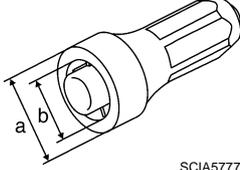
Tool number (Kent-Moore No.) Tool name	Description
ST2505S001 (J-34301-C) Oil pressure gauge set 1 ST25051001 ( — ) Oil pressure gauge 2 ST25052000 ( — ) Hose 3 ST25053000 ( — ) Joint pipe 4 ST25054000 ( — ) Adapter 5 ST25055000 ( — ) Adapter	Measuring line pressure 
KV40100621 (J-25273) Drift a: 76 mm (2.99 in) dia. b: 69 mm (2.72 in) dia.	Installing differential side oil seal <ul style="list-style-type: none"> <li>● With AWD models</li> <li>● Converter housing side (right)</li> </ul> 
ST33400001 (J-26082) Drift a: 60 mm (2.36 in) dia. b: 47 mm (1.85 in) dia.	Installing differential side oil seal <ul style="list-style-type: none"> <li>● Transaxle case side (left)</li> </ul> 
ST33400001 (J-47005) Drift a: 69.85 mm (2.75 in) dia. b: 49.53 mm (1.95 in) dia.	Installing differential side oil seal <ul style="list-style-type: none"> <li>● With 2WD models</li> <li>● Converter housing side (right)</li> </ul> 

# PREPARATION

## Commercial Service Tools

ACS001SF

(Tool number) Tool name	Description
(31197CA000) Drive plate location guide a: 14 mm (0.55 in) dia.	Installing transaxle assembly
(31093CA000) Slinger	Removing and installing transaxle assembly
(31092CA000) Slinger	Removing and installing transaxle assembly
Power tool	Loosening nuts and bolts

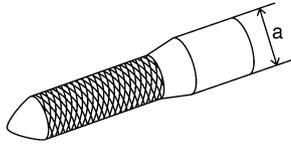


SCIA2013E



SCIA2014E



SCIA2015E

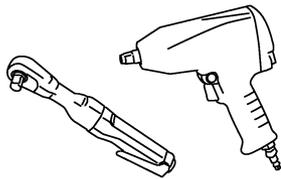

PBIC0190E


A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

## CVT FLUID


### Checking CVT Fluid FLUID LEVEL CHECK

Fluid level should be checked with the fluid warmed up to 50 to 80°C (122 to 176°F). The fluid level check procedure is as follows:

1. Check for fluid leakage.
2. With the engine warmed up, drive the vehicle in an urban area. When ambient temperature is 20°C (68°F), it takes about 10 minutes for the CVT fluid to warm up to 50 - 80°C (122 - 176°F).
3. Park the vehicle on a level surface.
4. Apply parking brake firmly.
5. With engine at idle, while depressing brake pedal, move shift selector throughout the entire shift range.

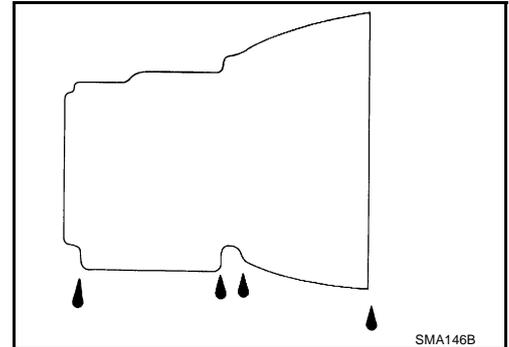


6. Pull out the CVT fluid level gauge from the CVT fluid charging pipe after pressing the tab on the CVT fluid level gauge to release the lock.

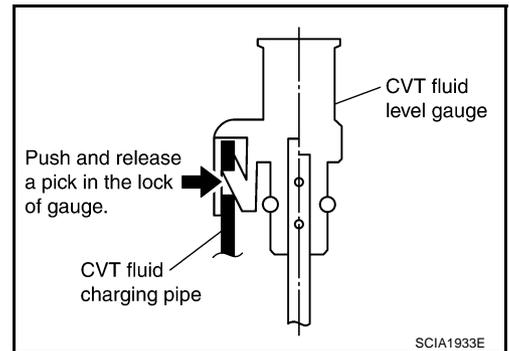

7. Wipe fluid off the CVT fluid level gauge and rotate the CVT fluid level gauge attached for 180° to securely insert the CVT fluid level gauge until it meets the end of the CVT fluid charging pipe.

**CAUTION:**


**When wiping away the CVT fluid level gauge, always use lint-free paper, not a cloth one.**

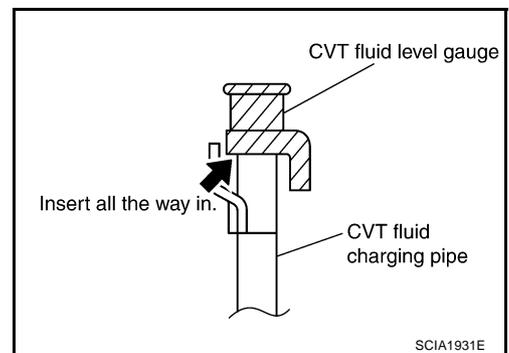

8. Place the selector lever in "P" or "N" and make sure the fluid level is within the specified range.


**CAUTION:**

- When CVT fluid level gauge reinstall, insert CVT fluid charging pipe until CVT fluid level gauge is locking surely.

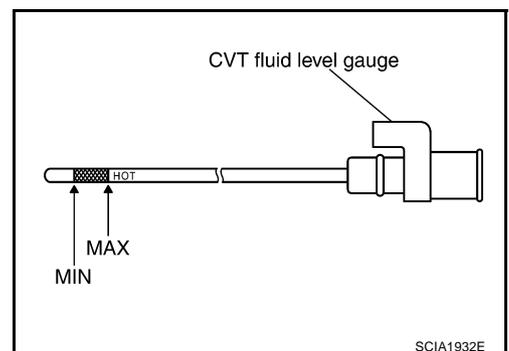

# CVT FLUID

9. Check CVT fluid condition.
  - If CVT fluid is very dark or smells burned, check operation of CVT. Flush cooling system after repair of CVT.
  - If CVT fluid contains frictional material (clutches, bands, etc.), replace radiator and flush cooler line using cleaning solvent and compressed air after repair of CVT. Refer to [CO-13, "RADIATOR"](#) and [CVT-15, "CVT Fluid Cooler Cleaning"](#).

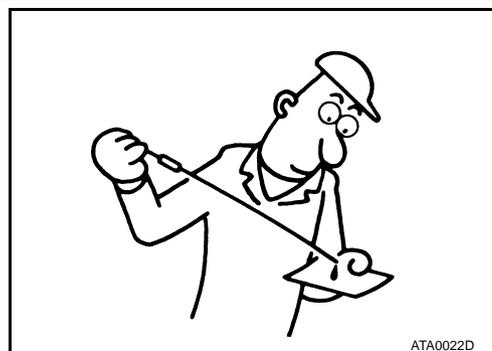

ACS002KX

## Changing CVT Fluid

1. Warm up CVT fluid by driving the vehicle for 10 minutes.
2. Drain CVT fluid from CVT fluid cooler hose (return side) and refill with new CVT fluid at CVT fluid charging pipe with the engine running at idle speed.
3. Refill until new CVT fluid comes out from CVT fluid cooler hose (return side). About 30 to 50% extra fluid will be required for this procedure.

### CVT fluid:

**Genuine NISSAN CVT fluid NS-2**

### Fluid capacity:

**Approx. 10.2 ℓ (10-6/8 US qt, 9 Imp qt)**

### CAUTION:

- Use only **Genuine NISSAN CVT fluid NS-2**. Do not mix with other fluid.
  - Using CVT fluid other than **Genuine NISSAN CVT fluid NS-2** will deteriorate in driveability and CVT durability, and may damage the CVT, which is not covered by the warranty.
  - When filling CVT fluid, take care not to scatter heat generating parts such as exhaust.
  - Delete CVT fluid deterioration date with **CONSULT-II** after changing CVT fluid. Refer to [CVT-69, "Check CVT Fluid Deterioration Date"](#).
4. Check fluid level and condition.

## CVT Fluid Cooler Cleaning

ACS004MD

Whenever an automatic transaxle is repaired, overhauled, or replaced, the CVT fluid cooler mounted in the radiator must be inspected and cleaned.

Metal debris and friction material, if present, can become trapped in the CVT fluid cooler. This debris can contaminate the newly serviced CVT or, in severe cases, can block or restrict the flow of CVT fluid. In either case, malfunction of the newly serviced CVT may result.

Debris, if present, may build up as CVT fluid enters the cooler inlet. It will be necessary to back flush the cooler through the cooler outlet in order to flush out any built up debris.


### CVT FLUID COOLER CLEANING PROCEDURE

1. Position an oil pan under the transaxle's inlet and outlet cooler hoses.
2. Identify the inlet and outlet fluid cooler hoses.
3. Disconnect the fluid cooler inlet and outlet rubber hoses from the steel cooler tubes or bypass valve.

#### NOTE:

Replace the cooler hoses if rubber material from the hose remains on the tube fitting.

4. Allow any CVT fluid that remains in the cooler hoses to drain into the oil pan.

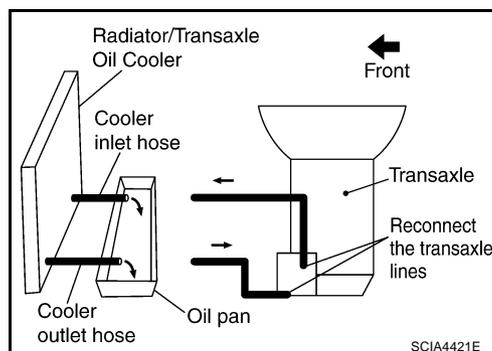

# CVT FLUID

5. Insert the extension adapter hose of a can of Transmission Cooler Cleaner (Nissan P/N 999MP-AM006) into the cooler outlet hose.

**CAUTION:**

- **Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.**
- **Spray cooler cleaner only with adequate ventilation.**
- **Avoid contact with eyes and skin.**
- **Do not breath vapors or spray mist.**

6. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until fluid flows out of the cooler inlet hose for 5 seconds.

7. Insert the tip of an air gun into the end of the cooler outlet hose.

8. Wrap a shop rag around the air gun tip and of the cooler outlet hose.

9. Blow compressed air regulated to 5 - 9 kg/cm<sup>2</sup> (70 - 130 psi) through the cooler outlet hose for 10 seconds to force out any remaining fluid.

10. Repeat steps 5 through 9 three additional times.

11. Position an oil pan under the banjo bolts that connect the fluid cooler steel lines to the transaxle.

12. Remove the banjo bolts.



13. Flush each steel line from the cooler side back toward the transaxle by spraying Transmission Cooler Cleaner in a continuous stream for 5 seconds.

14. Blow compressed air regulated to 5 - 9 kg/cm<sup>2</sup> (70 - 130 psi) through each steel line from the cooler side back toward the transaxle for 10 seconds to force out any remaining fluid.

15. Ensure all debris is removed from the steel cooler lines.

16. Ensure all debris is removed from the banjo bolts and fittings.

17. Perform [CVT-16, "CVT FLUID COOLER DIAGNOSIS PROCEDURE"](#) .

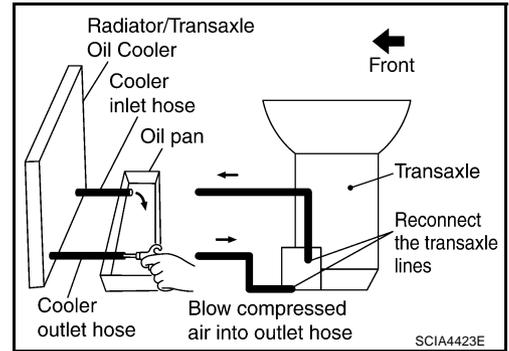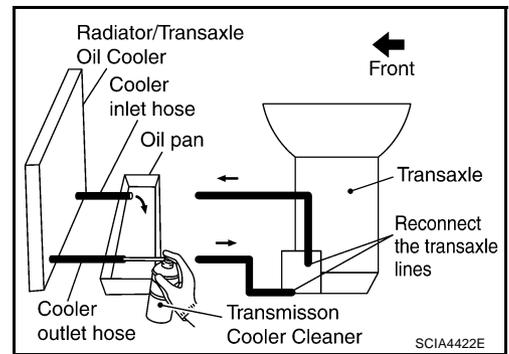

## CVT FLUID COOLER DIAGNOSIS PROCEDURE

**NOTE:**


Insufficient cleaning of the cooler inlet hose exterior may lead to inaccurate debris identification.

1. Position an oil pan under the transaxle's inlet and outlet cooler hoses.
2. Clean the exterior and tip of the cooler inlet hose.
3. Insert the extension adapter hose of a can of Transmission Cooler Cleaner (Nissan P/N 999MP-AM006) into the cooler outlet hose.

**CAUTION:**


- **Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.**
- **Spray cooler cleaner only with adequate ventilation.**
- **Avoid contact with eyes and skin.**
- **Do not breath vapors or spray mist.**

4. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until fluid flows out of the cooler inlet hose for 5 seconds.

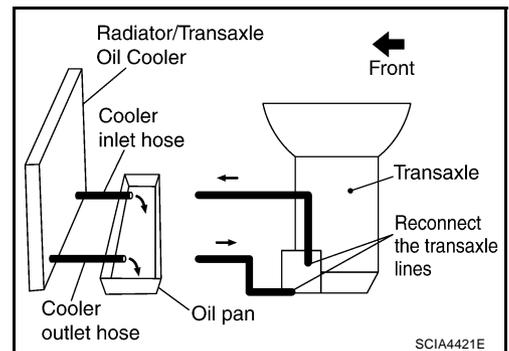


# CVT FLUID

5. Tie a common white, basket-type coffee filter to the end of the cooler inlet hose.

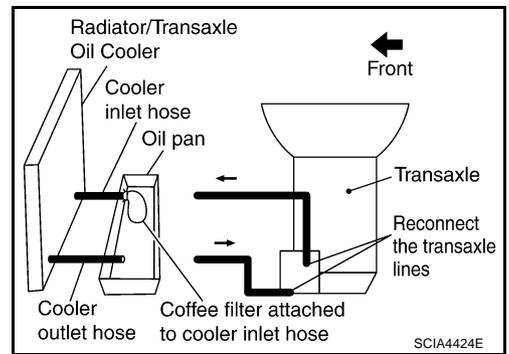


6. Insert the tip of an air gun into the end of the cooler outlet hose.
7. Wrap a shop rag around the air gun tip and end of cooler outlet hose.
8. Blow compressed air regulated to 5 - 9 kg/cm<sup>2</sup> (70 - 130 psi) through the cooler outlet hose to force any remaining CVT fluid into the coffee filter.
9. Remove the coffee filter from the end of the cooler inlet hose.
10. Perform [CVT-17, "CVT FLUID COOLER INSPECTION PROCEDURE"](#).

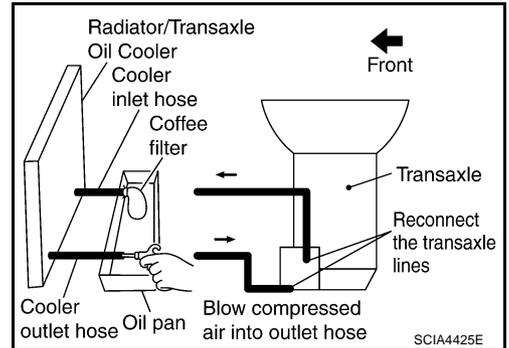


## CVT FLUID COOLER INSPECTION PROCEDURE

1. Inspect the coffee filter for debris.
  - a. If small metal debris less than 1mm (0.040 in) in size or metal powder is found in the coffee filter, this is normal. If normal debris is found, the CVT fluid cooler/radiator can be re-used and the procedure is ended.

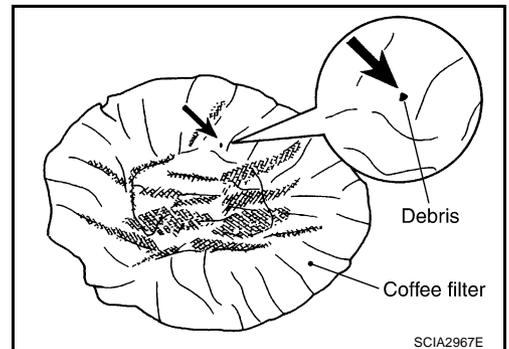

- b. If one or more pieces of debris are found that are over 1 mm (0.040 in) in size and/or peeled clutch facing material is found in the coffee filter, the fluid cooler is not serviceable. The radiator/fluid cooler must be replaced and the inspection procedure is ended.

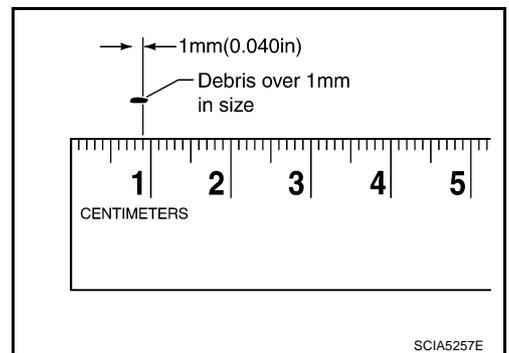

## CVT FLUID COOLER FINAL INSPECTION

After performing all procedures, ensure that all remaining oil is cleaned from all components.


# CVT SYSTEM

PFP:31036

## CVT SYSTEM

### Cross-Sectional View - RE0F09A

ACS0020F

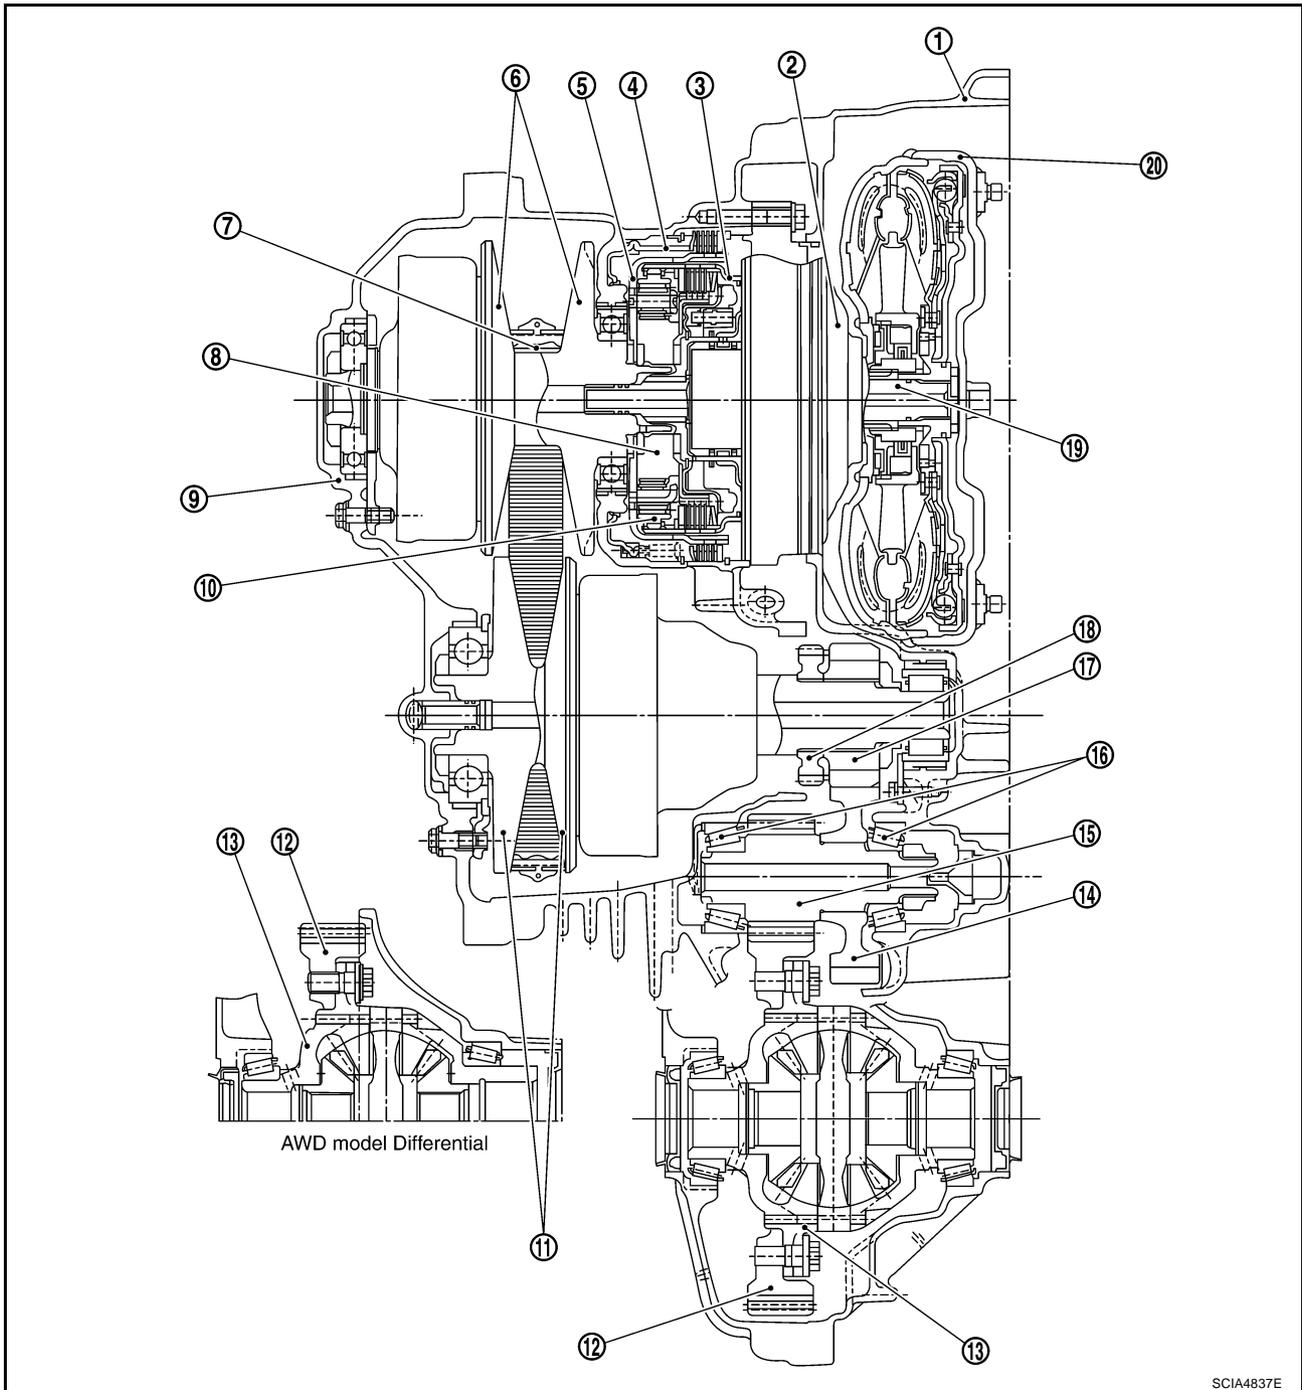


SCIA4837E

- |                          |                      |                    |
|--------------------------|----------------------|--------------------|
| 1. Converter housing     | 2. Oil pump          | 3. Forward clutch  |
| 4. Reverse brake         | 5. Planetary carrier | 6. Primary pulley  |
| 7. Steel belt            | 8. Sun gear          | 9. Side cover      |
| 10. Internal gear        | 11. Secondary pulley | 12. Final gear     |
| 13. Differential case    | 14. Idler gear       | 15. Reduction gear |
| 16. Taper roller bearing | 17. Output gear      | 18. Parking gear   |
| 19. Input shaft          | 20. Torque converter |                    |

# CVT SYSTEM

## Control System


ACS0029J

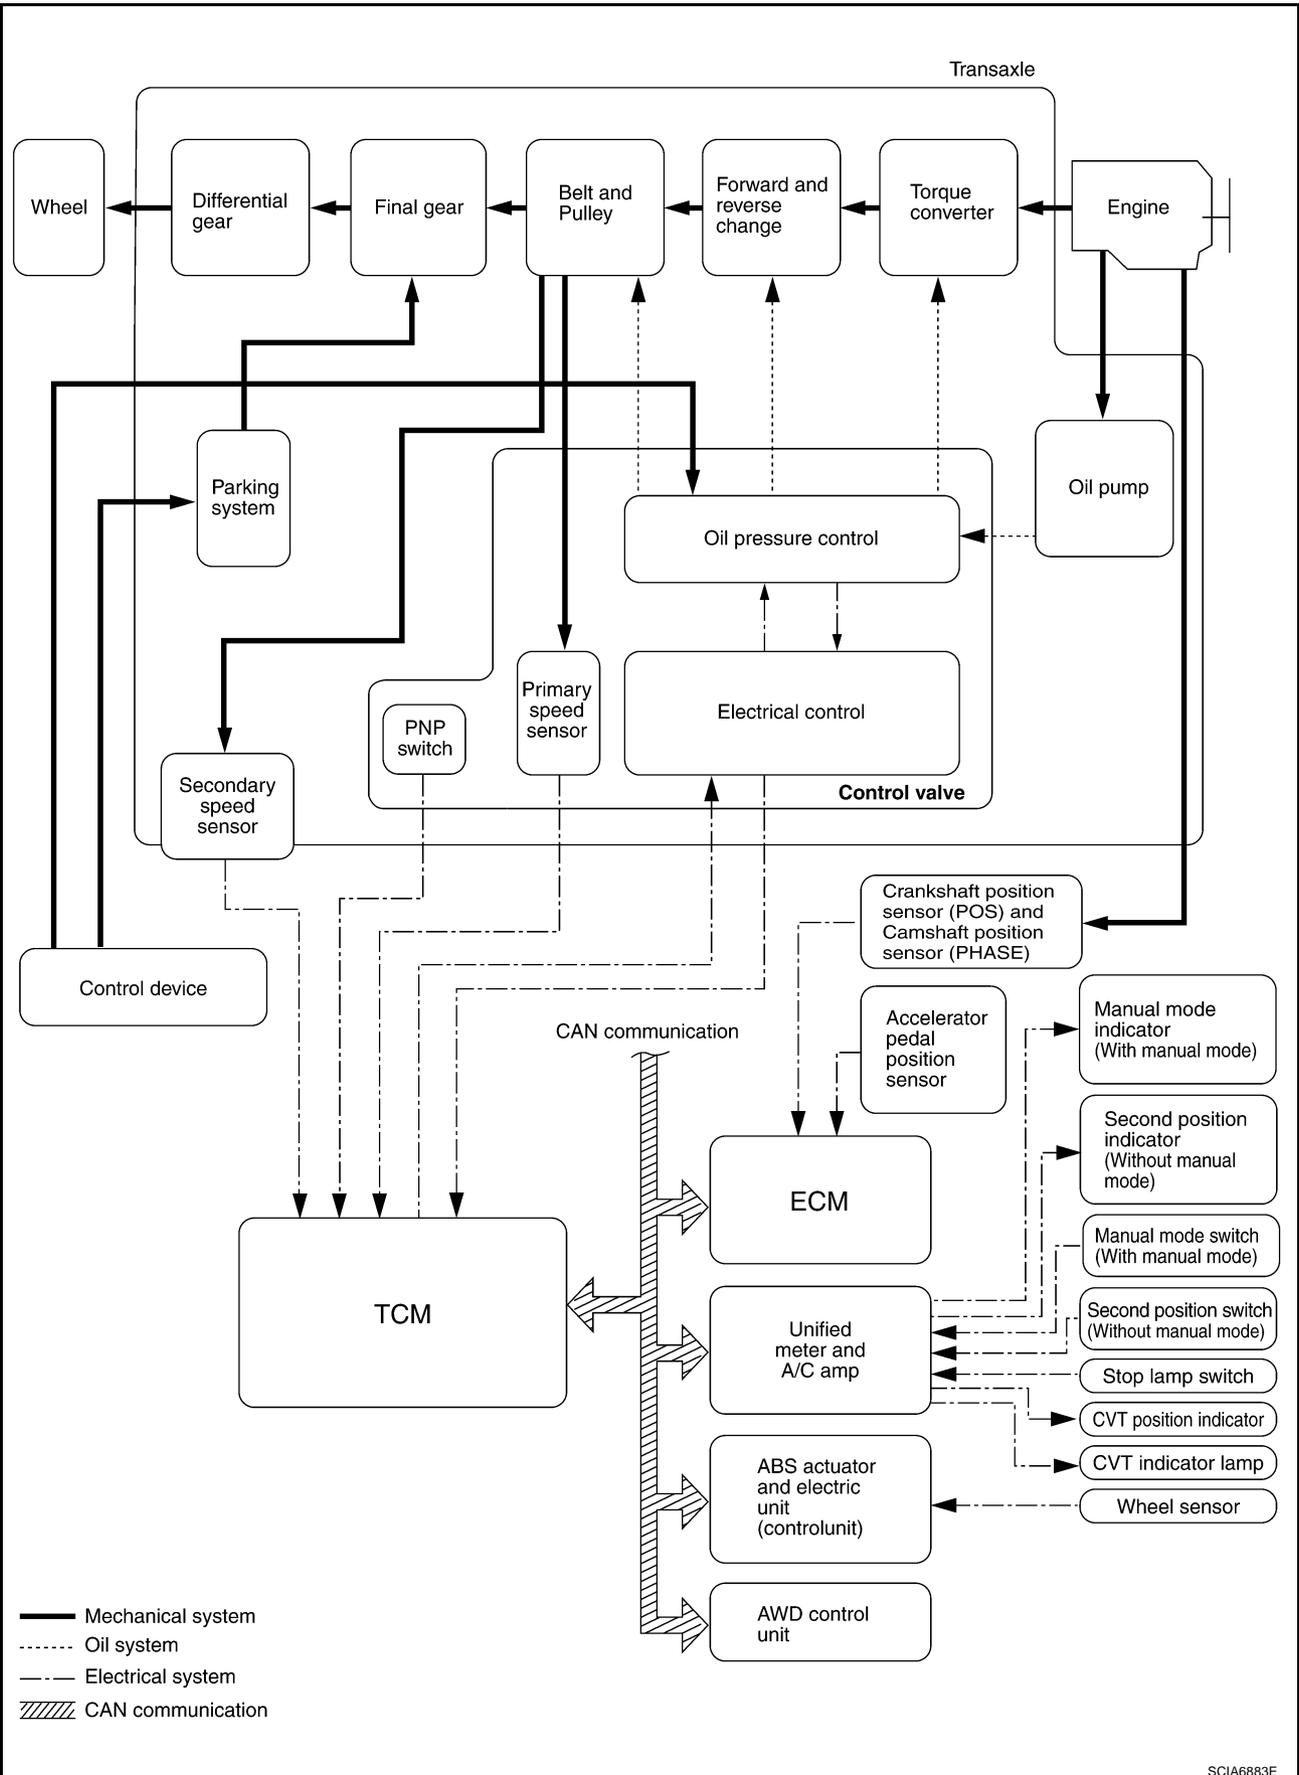

# CVT SYSTEM

## Hydraulic Control System

ACS002IN

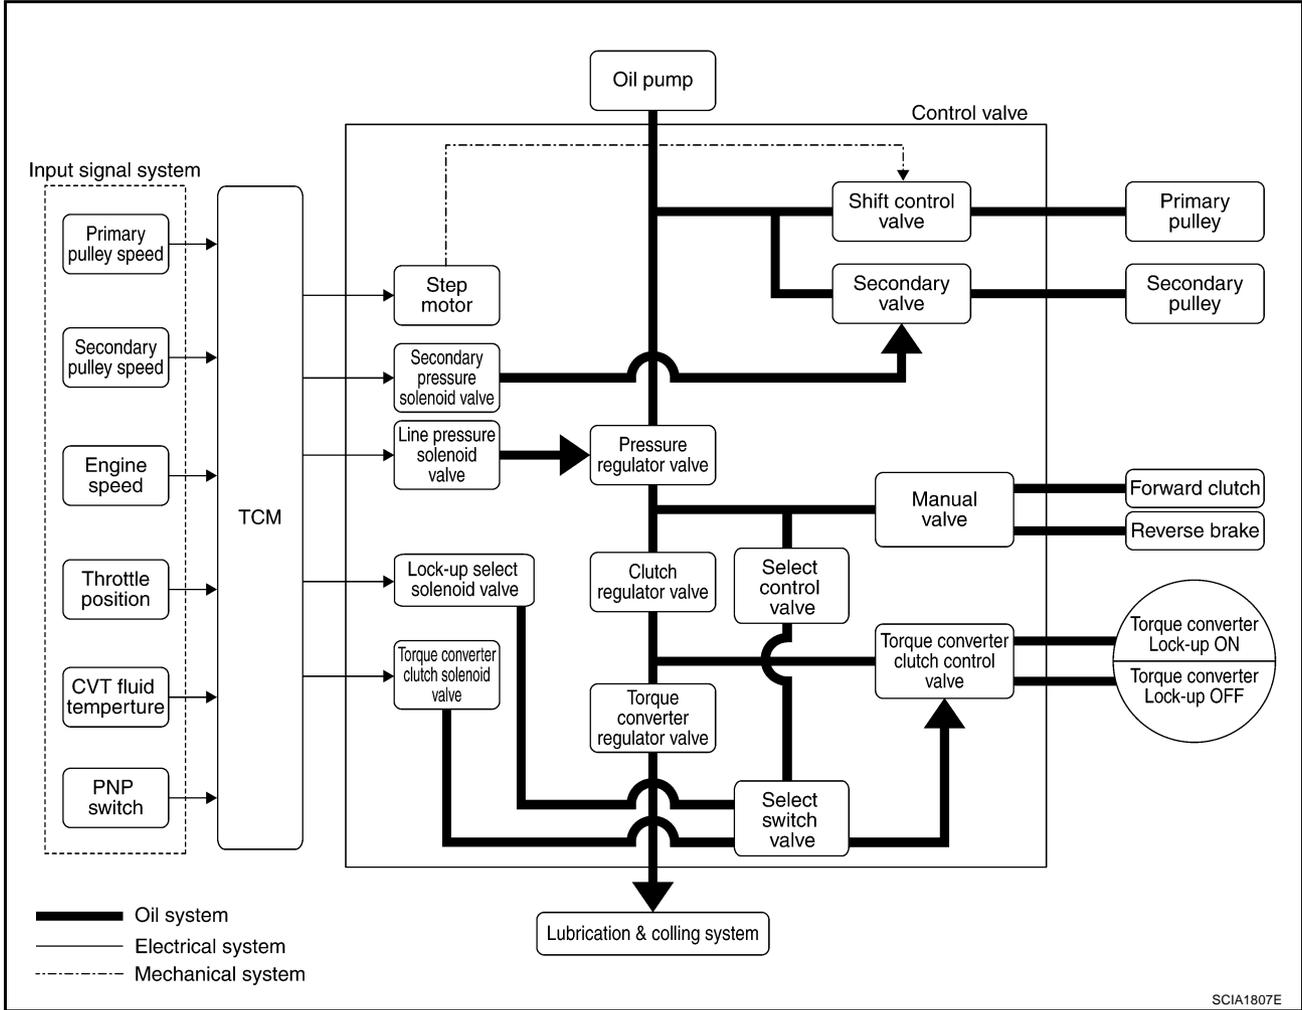

# CVT SYSTEM

ACS0020H

## TCM Function

The function of the TCM is to:

- Receive input signals sent from various switches and sensors.
- Determine required line pressure, shifting point, and lock-up operation.
- Send required output signals to the step motor and the respective solenoids.


## CONTROL SYSTEM OUTLINE

The CVT senses vehicle operating conditions through various sensors. It always controls the optimum shift position and reduces shifting and lock-up shocks.

SENSORS (or SIGNAL)		TCM		ACTUATORS
PNP switch Accelerator pedal position signal Closed throttle position signal Engine speed signal CVT fluid temperature sensor Vehicle speed signal Manual mode signal Second position signal Stop lamp switch signal Primary speed sensor Secondary speed sensor Primary pressure sensor Secondary pressure sensor	⇒	Shift control Line pressure control Primary pressure control Secondary pressure control Lock-up control Engine brake control Vehicle speed control Fail-safe control Self-diagnosis CONSULT-II communication line Duet-EA control CAN system On board diagnosis	⇒	Step motor Torque converter clutch solenoid valve Lock-up select solenoid valve Line pressure solenoid valve Secondary pressure solenoid valve Manual mode indicator Second position indicator* CVT position indicator CVT indicator lamp

\*: Without manual mode.

## CONTROL SYSTEM DIAGRAM

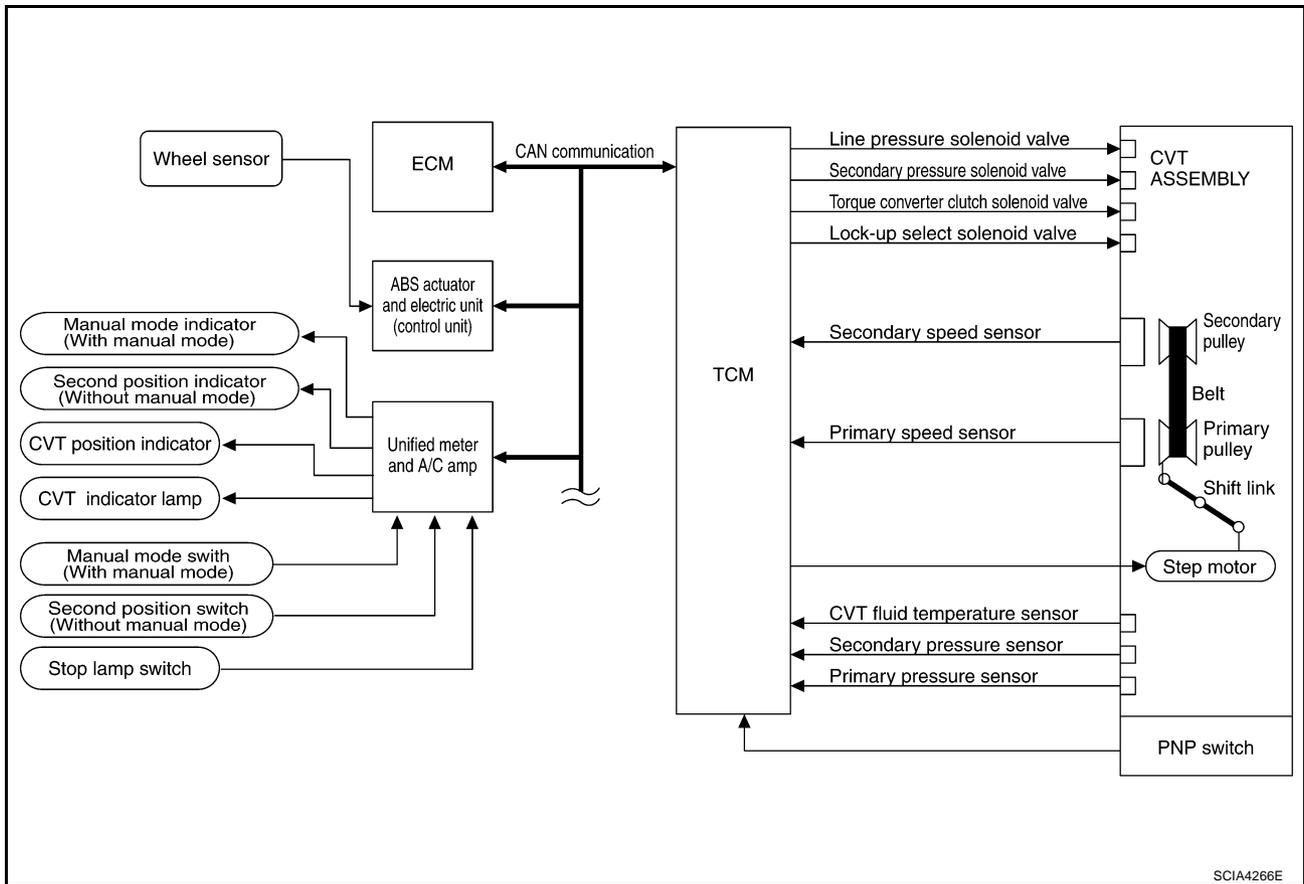

SCIA4266E

# CVT SYSTEM

## CAN Communication SYSTEM DESCRIPTION

ACS003L3

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only. For details, refer to [LAN-8, "CAN Communication Unit"](#).

## Input/Output Signal of TCM

ACS0020J

Control item		Fluid pressure control	Select control	Shift control	Lock-up control	CAN communication control	Fail-safe function (*2)
Input	PNP switch	X	X	X	X	X	X
	Accelerator pedal position signal (*1)	X	X	X	X	X	X
	Closed throttle position signal(*1)	X		X	X	X	
	Engine speed signal(*1)	X	X		X	X	X
	CVT fluid temperature sensor	X	X	X	X		X
	Manual mode signal(*1)	X		X	X	X	X
	Second position signal(*1)	X		X		X	
	Stop lamp switch signal(*1)	X		X	X	X	
	Primary speed sensor	X		X	X	X	X
	Secondary speed sensor	X	X	X	X	X	X
	Primary pressure sensor	X		X			
	Secondary pressure sensor	X		X			X
	TCM power supply voltage signal	X	X	X	X	X	X
Output	Step motor			X			X
	TCC solenoid valve		X		X		X
	Lock-up select solenoid valve		X		X		X
	Line pressure solenoid valve	X	X	X			X
	Secondary pressure solenoid valve	X		X			X

\*1: Input by CAN communications.


\*2: If these input and output signals are different, the TCM triggers the fail-safe function.

# CVT SYSTEM

## Line Pressure and Secondary Pressure Control

ACS0020K

- When an input torque signal equivalent to the engine drive force is sent from the ECM to the TCM, the TCM controls the line pressure solenoid valve and secondary pressure solenoid valve.
- This line pressure solenoid controls the pressure regulator valve as the signal pressure and adjusts the pressure of the operating oil discharged from the oil pump to the line pressure most appropriate to the driving state. Secondary pressure is made by line pressure decreasing.

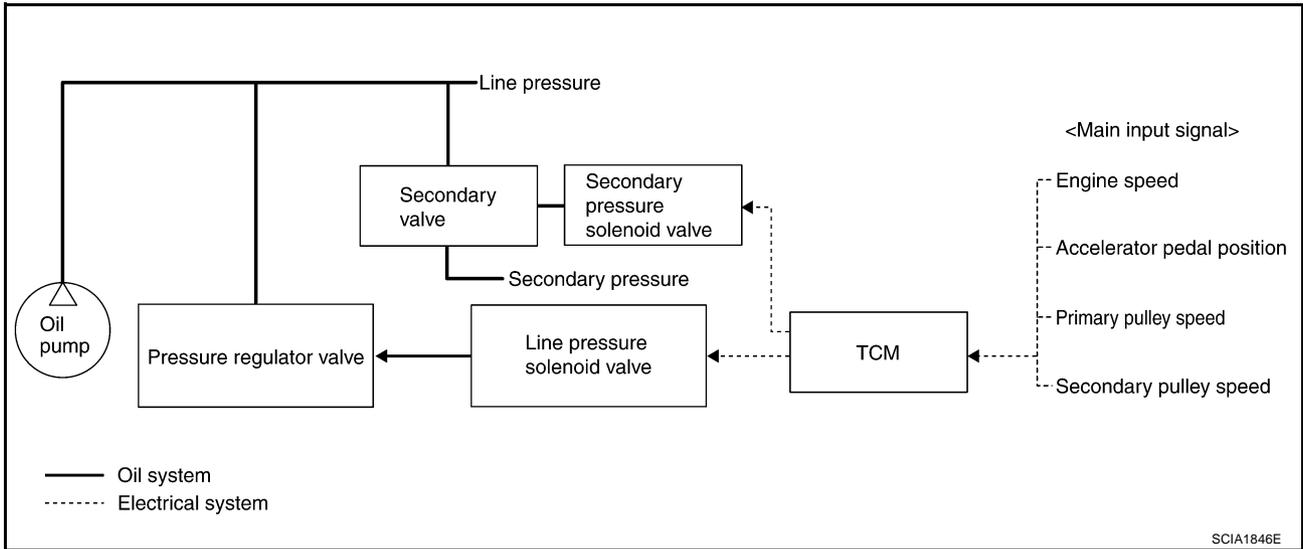

## NORMAL CONTROL

Optimize the line pressure and secondary pressure, depending on driving conditions, on the basis of the throttle position, the engine speed, the primary pulley (input) revolution speed, the secondary pulley (output) revolution speed, the brake signal, the PNP switch signal, the lock-up signal, the voltage, the target gear ratio, the fluid temperature, and the fluid pressure.


## FEEDBACK CONTROL

When controlling the normal fluid pressure or the selected fluid pressure, the secondary pressure can be set more accurately by using the fluid pressure sensor to detect the secondary pressure and controlling the feedback.

## Shift Control

ACS0020L

In order to select the gear ratio which can obtain the driving force in accordance with driver's intention and the vehicle condition, monitor the driving conditions, such as the vehicle speed and the throttle position, select the appropriate gear ratio, and determine how to change the gear before reaching it in the TCM. Then send the command to the step motor, and control the flow-in/flow-out of line pressure from the primary pulley to determine the position of the moving-pulley and control the gear ratio.

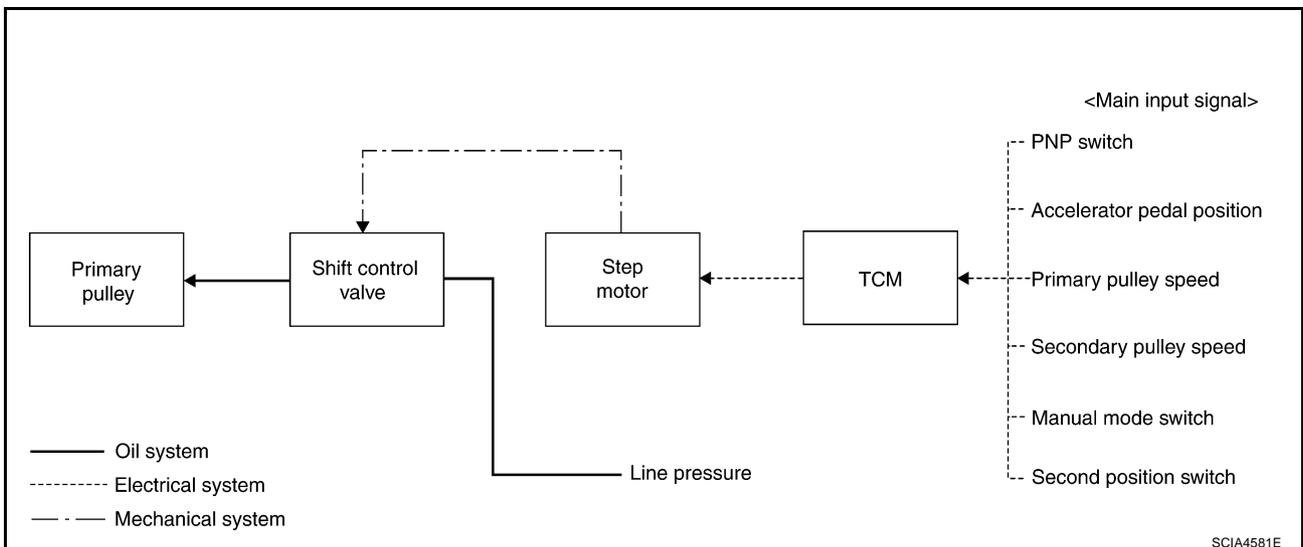


# CVT SYSTEM

## NOTE:

The gear ratio is set for every position separately.

## “D” POSITION

Shifting over all the ranges of gear ratios from the lowest to the highest.

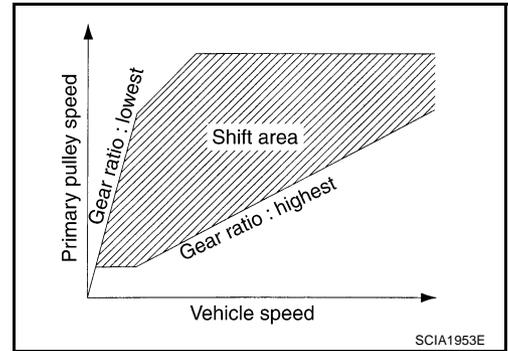


## “S” POSITION

Use this position for the improved engine braking.


## “L” POSITION

By limiting the gear range to the lowest position, the strong driving force and the engine brake can be secured.

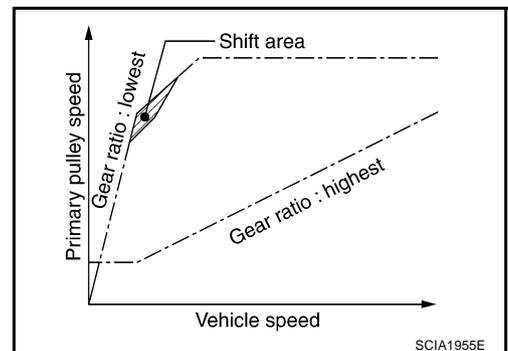

## “M” POSITION

When the selector lever is put in the manual shift gate side, the fixed changing gear line is set. Move the selector lever to + side or - side and switch the manual mode switch, it changes the speed gradually, and changing the speed like the M/T models becomes possible on the set changing gear line.

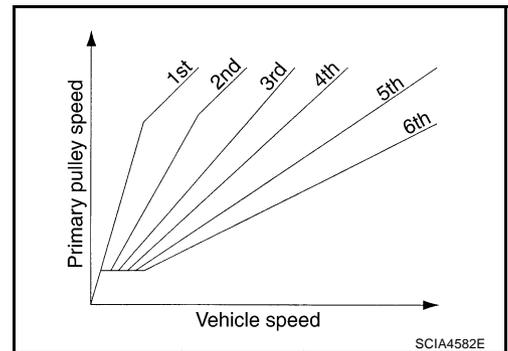

## DOWNHILL ENGINE BRAKE CONTROL (AUTO ENGINE BRAKE CONTROL)

When downhill is detected with the accelerator pedal released, the engine brake will be strengthened up by downshifting so as not to accelerate the vehicle more than necessary.

## ACCELATION CONTROL


According to vehicle speed and a change of accelerator pedal angle, driver's request for acceleration and driving scene are judged. This function assists improvement in acceleration feeling by making the engine speed proportionate to the vehicle speed. And a shift map which can gain a larger driving force is available for compatibility of fuel mileage with drivability.

# CVT SYSTEM

ACS002S9


## Lock-up and Select Control

- The torque converter clutch piston in the torque converter is engaged to eliminate torque converter slip to increase power transmission efficiency.
- The torque converter clutch control valve operation is controlled by the torque converter clutch solenoid valve, which is controlled by a signal from TCM. The torque converter clutch control valve engages or releases the torque converter clutch piston.
- When shifting between “N” (“P”) ↔ “D” (“R”), torque converter clutch solenoid controls engagement power of forward clutch and reverse brake.
- The lock-up applied gear range was expanded by locking up the torque converter at a lower vehicle speed than conventional CVT models.

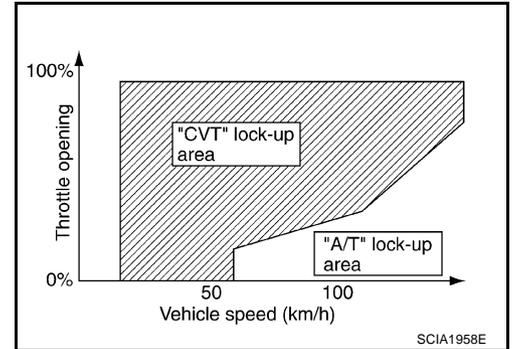

## TORQUE CONVERTER CLUTCH AND SELECT CONTROL VALVE CONTROL

### Lock-up and Select Control System Diagram

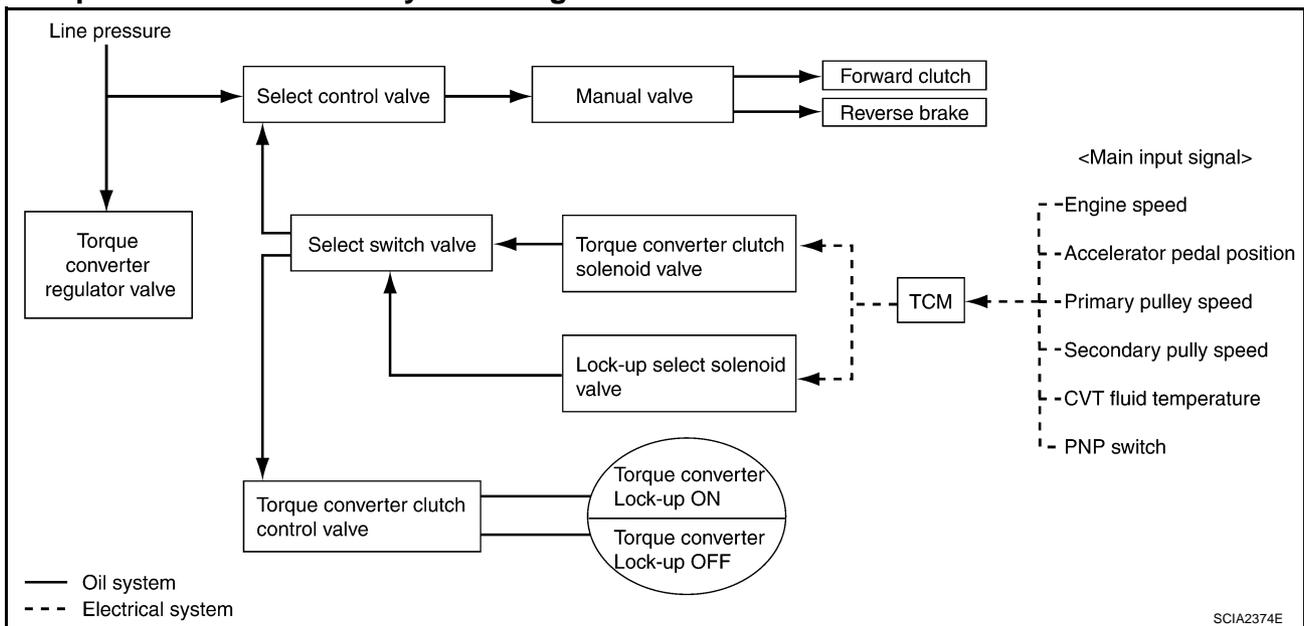

### Lock-up Released

- In the lock-up released state, the torque converter clutch control valve is set into the unlocked state by the torque converter clutch solenoid and the lock-up apply pressure is drained. In this way, the torque converter clutch piston is not coupled.

### Lock-up Applied

- In the lock-up applied state, the torque converter clutch control valve is set into the locked state by the torque converter clutch solenoid and lock-up apply pressure is generated. In this way, the torque converter clutch piston is pressed and coupled.

### Select Control

- When shifting between “N” (“P”) ↔ “D” (“R”), optimize the operating pressure on the basis of the throttle position, the engine speed, and the secondary pulley (output) revolution speed to lessen the shift shock.

# CVT SYSTEM

## Control Valve FUNCTION OF CONTROL VALVE

ACS002S8

Name	Function
Torque converter regulator valve	Optimize the supply pressure for the torque converter depending on driving conditions.
Pressure regulator valve	Optimize the discharge pressure from the oil pump depending on driving conditions.
TCC control valve	<ul style="list-style-type: none"><li>● Activate or deactivate the lock-up.</li><li>● Lock-up smoothly by opening lock-up operation excessively.</li></ul>
TCC solenoid valve	Controls the TCC control valve or select control valve.
Shift control valve	Controls flow-in/out of line pressure from the primary pulley depending on the stroke difference between the stepping motor and the primary pulley.
Secondary valve	Controls the line pressure from the secondary pulley depending on operating conditions.
Clutch regulator valve	Adjust the clutch operating pressure depending on operating conditions.
Secondary pressure solenoid valve	Controls the secondary valve.
Line pressure solenoid valve	Controls the line pressure control valve.
Step motor	Controls the pulley ratio.
Manual valve	Transmit the clutch operating pressure to each circuit in accordance with the selected position.
Select control valve	Engage forward clutch, reverse brake smoothly depending on select operation.
Select switch valve	Switch torque converter clutch solenoid valve control pressure use to torque converter clutch control valve or select control valve.
Lock-up select solenoid valve	Controls the select switch valve.

## ON BOARD DIAGNOSTIC (OBD) SYSTEM

PDF:00028

### Introduction

ACS001SS

The CVT system has two self-diagnostic systems.

The first is the emission-related on board diagnostic system (OBD-II) performed by the TCM in combination with the ECM. The malfunction is indicated by the MIL (malfunction indicator lamp) and is stored as a DTC in the ECM memory, and the TCM memory.

The second is the TCM original self-diagnosis performed by the TCM. The malfunction is stored in the TCM memory. The detected items are overlapped with OBD-II self-diagnostic items. For detail, refer to [CVT-62](#), "Display Items List".

### OBD-II Function for CVT System

ACS001ST

The ECM provides emission-related on board diagnostic (OBD-II) functions for the CVT system. One function is to receive a signal from the TCM used with OBD-related parts of the CVT system. The signal is sent to the ECM when a malfunction occurs in the corresponding OBD-related part. The other function is to indicate a diagnostic result by means of the MIL (malfunction indicator lamp) on the instrument panel. Sensors, switches and solenoid valves are used as sensing elements.

The MIL automatically illuminates in One or Two Trip Detection Logic when a malfunction is sensed in relation to CVT system parts.

### One or Two Trip Detection Logic of OBD-II ONE TRIP DETECTION LOGIC

ACS001SU

If a malfunction is sensed during the first test drive, the MIL will illuminate and the malfunction will be stored in the ECM memory as a DTC. The TCM is not provided with such a memory function.

### TWO TRIP DETECTION LOGIC

When a malfunction is sensed during the first test drive, it is stored in the ECM memory as a 1st trip DTC (diagnostic trouble code) or 1st trip freeze frame data. At this point, the MIL will not illuminate. — 1st trip

If the same malfunction as that experienced during the first test drive is sensed during the second test drive, the MIL will illuminate. — 2nd trip

The "trip" in the "One or Two Trip Detection Logic" means a driving mode in which self-diagnosis is performed during vehicle operation.

### OBD-II Diagnostic Trouble Code (DTC) HOW TO READ DTC AND 1ST TRIP DTC

ACS001SV

DTC and 1st trip DTC can be read by the following methods.

( with **CONSULT-II** or ( **GST**) CONSULT-II or GST (Generic Scan Tool) Examples: P0705, P0720 etc. These DTC are prescribed by SAE J2012.

(CONSULT-II also displays the malfunctioning component or system.)

- **1st trip DTC No. is the same as DTC No.**
- **Output of the diagnostic trouble code indicates that the indicated circuit has a malfunction. However, in case of the Mode II and GST, they do not indicate whether the malfunction is still occurring or occurred in the past and returned to normal.**  
**CONSULT-II can identify them as shown below, therefore, CONSULT-II (if available) is recommended.**

A sample of CONSULT-II display for DTC and 1st trip DTC is shown on the next page. DTC or 1st trip DTC of a malfunction is displayed in SELF-DIAGNOSTIC RESULTS mode for "ENGINE" with CONSULT-II. Time data indicates how many times the vehicle was driven after the last detection of a DTC.

SELECT SYSTEM
ENGINE
ABS
AIR BAG
ALL MODE AWD/4WD
IPDM E/R
BCM

SCIA4823E

# ON BOARD DIAGNOSTIC (OBD) SYSTEM

If the DTC is being detected currently, the time data will be "0".

SELF-DIAG RESULTS	
DTC RESULTS	TIME
PNP SW/CIRC [P0705]	0

SAT015K

If a 1st trip DTC is stored in the ECM, the time data will be "1t".

SELF-DIAG RESULTS	
DTC RESULTS	TIME
PNP SW/CIRC [P0705]	1 t

SAT016K

## Freeze Frame Data and 1st Trip Freeze Frame Data

The ECM has a memory function, which stores the driving condition such as fuel system status, calculated load value, engine coolant temperature, short term fuel trim, long term fuel trim, engine speed and vehicle speed at the moment the ECM detects a malfunction.

Data which are stored in the ECM memory, along with the 1st trip DTC, are called 1st trip freeze frame data, and the data, stored together with the DTC data, are called freeze frame data and displayed on CONSULT-II or GST. The 1st trip freeze frame data can only be displayed on the CONSULT-II screen, not on the GST. For details, refer to [EC-105, "CONSULT-II Function"](#).

Only one set of freeze frame data (either 1st trip freeze frame data or freeze frame data) can be stored in the ECM. 1st trip freeze frame data is stored in the ECM memory along with the 1st trip DTC. There is no priority for 1st trip freeze frame data, and it is updated each time a different 1st trip DTC is detected. However, once freeze frame data (2nd trip detection/MIL on) is stored in the ECM memory, 1st trip freeze frame data is no longer stored. Remember, only one set of freeze frame data can be stored in the ECM. The ECM has the following priorities to update the data.

Priority	Items
1	Freeze frame data Misfire — DTC: P0300 - P0306 Fuel Injection System Function — DTC: P0171, P0172, P0174, P0175
2	Except the above items (Includes CVT related items)
3	1st trip freeze frame data

Both 1st trip freeze frame data and freeze frame data (along with the DTC) are cleared when the ECM memory is erased.

## HOW TO ERASE DTC

The diagnostic trouble code can be erased by CONSULT-II, GST or ECM DIAGNOSTIC TEST MODE as described following.

- **If the battery cable is disconnected, the diagnostic trouble code will be lost within 24 hours.**
- **When you erase the DTC, using CONSULT-II or GST is easier and quicker than switching the mode selector on the ECM.**

The following emission-related diagnostic information is cleared from the ECM memory when erasing DTC related to OBD-II. For details, refer to [EC-48, "Emission-Related Diagnostic Information"](#).

- **Diagnostic trouble codes (DTC)**
- **1st trip diagnostic trouble codes (1st trip DTC)**
- **Freeze frame data**

# ON BOARD DIAGNOSTIC (OBD) SYSTEM

- 1st trip freeze frame data
- System readiness test (SRT) codes
- Test values

## HOW TO ERASE DTC (WITH CONSULT-II)

- If a DTC is displayed for both ECM and TCM, it is necessary to be erased for both ECM and TCM.
1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 10 seconds and then turn it "ON" (engine stopped) again.
  2. Turn CONSULT-II "ON" and touch "TRANSMISSION".
  3. Touch "SELF-DIAG RESULTS".
  4. Touch "ERASE". (The DTC in the TCM will be erased.) Then touch "BACK" twice.
  5. Touch "ENGINE".
  6. Touch "SELF-DIAG RESULTS".
  7. Touch "ERASE". (The DTC in the ECM will be erased.)

### How to erase DTC (With CONSULT-II)

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 10 seconds and then turn it "ON" (engine stopped) again.

SELECT SYSTEM
IPDM E/R
BCM
AUTO DRIVE POS
AIR PRESSURE MONITOR
TRANSMISSION
METER A/C AMP


2. Turn CONSULT -II "ON", and touch "TRANSMISSION".

SELECT DIAG MODE
WORK SUPPORT
SELF-DIAG RESULTS
DATA MONITOR
CAN DIAG SUPPORT MNTR
CALIB DATA
FUNCTION TEST

3. Touch "SELF-DIAG RESULTS".

SELF-DIAG RESULTS
DTC RESULTS
T/C SOLENOID/CIRC [P0740]

4. Touch "ERASE". (The DTC in the TCM will be erased.)

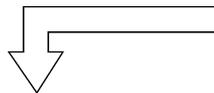

Touch "BACK".

Touch "BACK".

SELECT SYSTEM
ENGINE
ABS
AIR BAG
ALL MODE AWD/4WD
IPDM E/R
BCM

5. Touch "ENGINE".

SELECT DIAG MODE
WORK SUPPORT
SELF-DIAG RESULTS
DATA MONITOR
DATA MONITOR (SPEC)
CAN DIAG SUPPORT MNTR
ACTIVE TEST

6. Touch "SELF-DIAG RESULTS".

SELF-DIAG RESULTS	
DTC RESULTS	TIME
TCC SOLENOID/CIRC [P0740]	0

7. Touch "ERASE". (The DTC in the ECM will be erased.)

SCIA5442E

## HOW TO ERASE DTC (WITH GST)

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 10 seconds and then turn it "ON" (engine stopped) again.
2. Select Mode 4 with Generic Scan Tool (GST). For details, refer to [EC-118. "Generic Scan Tool \(GST\) Function"](#).

# ON BOARD DIAGNOSTIC (OBD) SYSTEM


## Malfunction Indicator Lamp (MIL)

ACS001SW

### DESCRIPTION

The MIL is located on the instrument panel.

1. The MIL will light up when the ignition switch is turned "ON" without the engine running. This is a bulb check.
  - If the MIL does not light up, refer to [DI-43. "WARNING LAMPS"](#) , or see [EC-649. "MIL AND DATA LINK CONNECTOR"](#) .
2. When the engine is started, the MIL should go off. If the MIL remains on, the on board diagnostic system has detected an engine system malfunction.

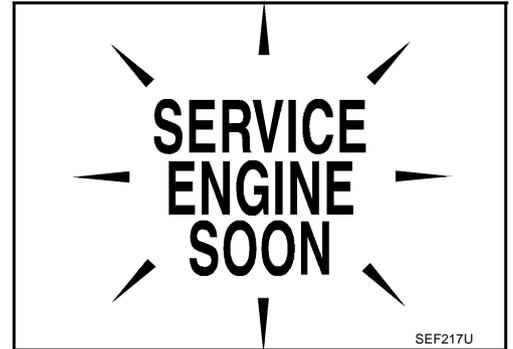

# TROUBLE DIAGNOSIS

## TROUBLE DIAGNOSIS

PFP:00004

### DTC Inspection Priority Chart

ACS001SX

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

#### NOTE:

If DTC U1000 is displayed with other DTCs, first perform the trouble diagnosis for DTC U1000. Refer to [CVT-71](#).

Priority	Detected items (DTC)
1	U1000 CAN communication line
2	Except above

### Fail-safe

ACS001SY

The TCM has an electrical fail-safe mode. This mode makes it possible to operate even if there is an error in a main electronic control input/output signal circuit.

#### FAIL-SAFE FUNCTION

If any malfunction occurs in a sensor or solenoid, this function controls the CVT to make driving possible.

#### Output Speed Sensor (Secondary Speed Sensor)

- The shift pattern is changed in accordance with throttle position when an unexpected signal is sent from the output speed sensor (secondary speed sensor) to the TCM. The manual mode position and second position is inhibited, and the transaxle is put in "D".

#### Input Speed Sensor (Primary Speed Sensor)

- The shift pattern is changed in accordance with throttle position and secondary speed (vehicle speed) when an unexpected signal is sent from the input speed sensor (primary speed sensor) to the TCM. The manual mode position and second position is inhibited and the transaxle is put in "D".

#### PNP Switch

- If an unexpected signal is sent from the PNP switch to the TCM, the transaxle is put in "D".

#### Manual Mode Switch

- If an unexpected signal is sent from the manual mode switch to the TCM, the transaxle is put in "D".

#### CVT Fluid Temperature Sensor

- If an unexpected signal is sent from the CVT fluid temperature sensor to the TCM, the gear ratio in use before receiving the unexpected signal is maintained or the gear ratio is controlled to keep engine speed under 5000 rpm.

#### Transmission Fluid Pressure Sensor A (Secondary Pressure Sensor)

- If an unexpected signal is sent from the transmission fluid pressure sensor A (secondary pressure sensor) to the TCM, the secondary pressure feedback control is stopped and the offset value obtained before the non-standard condition occurs is used to control line pressure.
- If transmission fluid pressure sensor A (secondary pressure sensor) error signal is input to TCM, secondary pressure feedback control stops, but line pressure is controlled normally.

#### Pressure Control Solenoid A (Line Pressure Solenoid)

- If an unexpected signal is sent from the solenoid to the TCM, the pressure control solenoid A (line pressure solenoid) is turned "OFF" to achieve the maximum fluid pressure.

#### Pressure Control Solenoid B (Secondary Pressure Solenoid)

- If an unexpected signal is sent from the solenoid to the TCM, the pressure control solenoid B (secondary pressure solenoid) is turned "OFF" to achieve the maximum fluid pressure.

#### Torque Converter Clutch Solenoid

- If an unexpected signal is sent from the solenoid to the TCM, the torque converter clutch solenoid is turned "OFF" to cancel the lock-up.

# TROUBLE DIAGNOSIS

## Step Motor

- If an unexpected signal is sent from the step motor to the TCM, the step motor coil phases “A” through “D” are all turned “OFF” to hold the gear ratio used right before the non-standard condition occurred.

## CVT Lock-up Select Solenoid

- If an unexpected signal is sent from the solenoid to the TCM, the CVT lock-up select solenoid is turned “OFF” to cancel the lock-up.

## TCM Power Supply (Memory Back-up)

- Transaxle assembly is protected by limiting the engine torque when the memory back-up power supply (for controlling) from the battery is not supplied to TCM. Normal status is restored when turning the ignition switch OFF to ON after the normal power supply.

## How to Perform Trouble Diagnosis for Quick and Accurate Repair


ACS001SZ

### INTRODUCTION

The TCM receives a signal from the vehicle speed sensor, PNP switch and provides shift control or lock-up control via CVT solenoid valves.


The TCM also communicates with the ECM by means of a signal sent from sensing elements used with the OBD-related parts of the CVT system for malfunction-diagnostic purposes. The TCM is capable of diagnosing malfunctioning parts while the ECM can store malfunctions in its memory.

Input and output signals must always be correct and stable in the operation of the CVT system. The CVT system must be in good operating condition and be free of valve seizure, solenoid valve malfunction, etc.

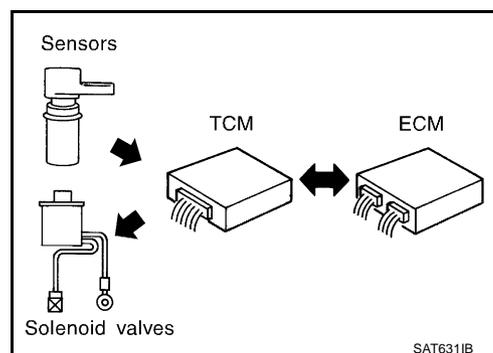

It is much more difficult to diagnose an error that occurs intermittently rather than continuously. Most intermittent errors are caused by poor electric connections or improper wiring. In this case, careful checking of suspected circuits may help prevent the replacement of good parts.


A visual check only may not find the cause of the errors. A road test with CONSULT-II (or GST) or a circuit tester connected should be performed. Follow the [CVT-33. "WORK FLOW"](#) .

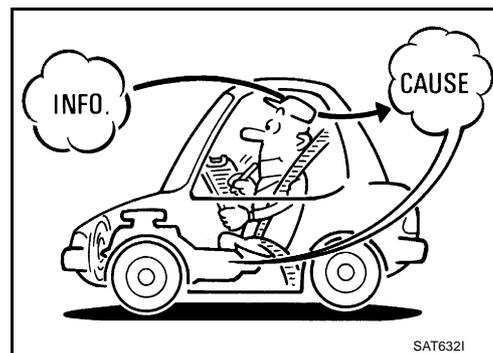

Before undertaking actual checks, take a few minutes to talk with a customer who approaches with a driveability complaint. The customer can supply good information about such errors, especially intermittent ones. Find out what symptoms are present and under what conditions they occur. A “Diagnostic Worksheet” as shown on the example (Refer to [CVT-34](#) ) should be used.

Start your diagnosis by looking for “conventional” errors first. This will help troubleshoot driveability errors on an electronically controlled engine vehicle.

Also check related Service bulletins.

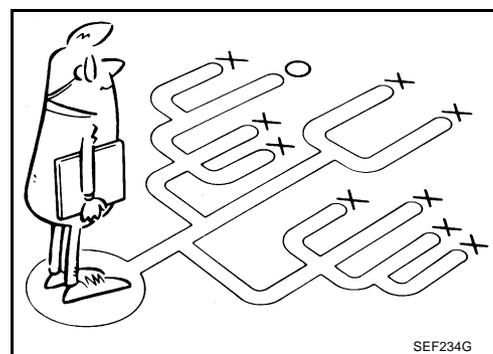


# TROUBLE DIAGNOSIS

## WORK FLOW

A good understanding of the malfunction conditions can make troubleshooting faster and more accurate. In general, each customer feels differently about a malfunction. It is important to fully understand the symptoms or conditions for a customer complaint.

Make good use of the two sheets provided, "Information From Customer" (Refer to [CVT-34](#)) and "Diagnostic Worksheet" (Refer to [CVT-34](#)), to perform the best troubleshooting possible.

## Work Flow Chart

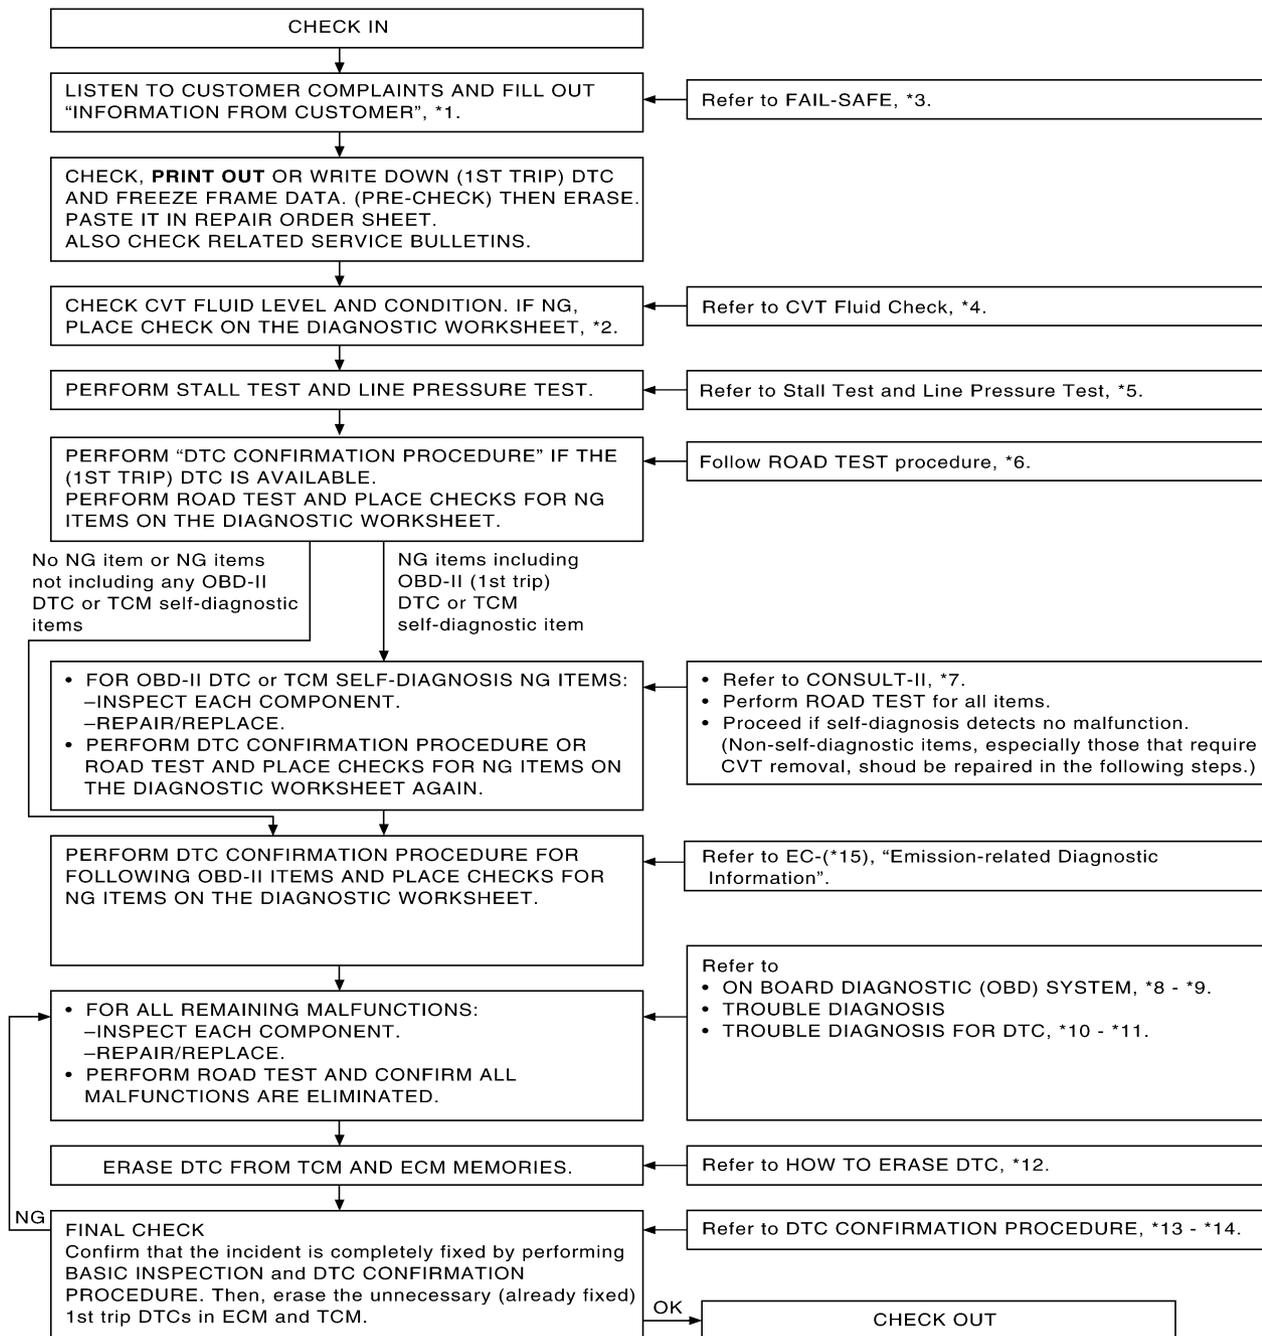

\*1. [CVT-34](#)

\*4. [CVT-40](#)

\*7. [CVT-59](#)

\*10. [CVT-71](#)

\*13. [CVT-71](#)

\*2. [CVT-34](#)

\*5. [CVT-40](#), [CVT-42](#)

\*8. [CVT-27](#)

\*11. [CVT-176](#)

\*14. [CVT-176](#)

\*3. [CVT-31](#)

\*6. [CVT-44](#)

\*9. [CVT-70](#)

\*12. [CVT-28](#)

\*15. [EC-48](#)

SCIA4834E



# TROUBLE DIAGNOSIS

	<input type="checkbox"/> Perform road test.	<a href="#">CVT-44</a>	
	Check before engine is started	<a href="#">CVT-47</a>	A
	<input type="checkbox"/> <a href="#">CVT-186, "CVT Indicator Lamp Does Not Come On"</a> <input type="checkbox"/> Perform self-diagnostics. Enter checks for detected items. <a href="#">CVT-62</a>		B
4	<div style="display: flex;"> <div style="width: 10%; text-align: center;">4-1.</div> <div style="width: 80%;"> <input type="checkbox"/> <a href="#">CVT-71, "DTC U1000 CAN COMMUNICATION LINE"</a> .  <input type="checkbox"/> <a href="#">CVT-74, "DTC P0615 START SIGNAL CIRCUIT"</a> .  <input type="checkbox"/> <a href="#">CVT-78, "DTC P0703 STOP LAMP SWITCH CIRCUIT"</a> .  <input type="checkbox"/> <a href="#">CVT-80, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"</a> .  <input type="checkbox"/> <a href="#">CVT-88, "DTC P0710 CVT FLUID TEMPERATURE SENSOR CIRCUIT"</a> .  <input type="checkbox"/> <a href="#">CVT-93, "DTC P0715 INPUT SPEED SENSOR CIRCUIT (PRI SPEED SENSOR)"</a> .  <input type="checkbox"/> <a href="#">CVT-98, "DTC P0720 VEHICLE SPEED SENSOR CVT (SECONDARY SPEED SENSOR)"</a> .  <input type="checkbox"/> <a href="#">CVT-104, "DTC P0725 ENGINE SPEED SIGNAL"</a> .  <input type="checkbox"/> <a href="#">CVT-106, "DTC P0730 BELT DAMAGE"</a> .  <input type="checkbox"/> <a href="#">CVT-108, "DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE"</a> .  <input type="checkbox"/> <a href="#">CVT-113, "DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)"</a> .  <input type="checkbox"/> <a href="#">CVT-116, "DTC P0745 LINE PRESSURE SOLENOID VALVE"</a> .  <input type="checkbox"/> <a href="#">CVT-121, "DTC P0746 PRESSURE CONTROL SOLENOID A PERFORMANCE (LINE PRESSURE SOLENOID VALVE)"</a> .  <input type="checkbox"/> <a href="#">CVT-124, "DTC P0776 PRESSURE CONTROL SOLENOID B PERFORMANCE (SEC PRESSURE SOLENOID VALVE)"</a> .  <input type="checkbox"/> <a href="#">CVT-127, "DTC P0778 PRESSURE CONTROL SOLENOID B ELECTRICAL (SEC PRESSURE SOLENOID VALVE)"</a> .  <input type="checkbox"/> <a href="#">CVT-132, "DTC P0826 MANUAL MODE SWITCH CIRCUIT"</a> .  <input type="checkbox"/> <a href="#">CVT-137, "DTC P0840 TRANSMISSION FLUID PRESSURE SENSOR A CIRCUIT (SEC PRESSURE SENSOR)"</a> .  <input type="checkbox"/> <a href="#">CVT-142, "DTC P0841 PRESSURE SENSOR FUNCTION"</a> .  <input type="checkbox"/> <a href="#">CVT-145, "DTC P0845 TRANSMISSION FLUID PRESSURE SENSOR B CIRCUIT (PRI PRESSURE SENSOR)"</a> .  <input type="checkbox"/> <a href="#">CVT-150, "DTC P0868 SECONDARY PRESSURE DOWN"</a> .  <input type="checkbox"/> <a href="#">CVT-153, "DTC P1701 TRANSMISSION CONTROL MODULE (POWER SUPPLY)"</a> .    <input type="checkbox"/> <a href="#">CVT-158, "DTC P1705 THROTTLE POSITION SENSOR"</a> .  <input type="checkbox"/> <a href="#">CVT-160, "DTC P1722 ESTM VEHICLE SPEED SIGNAL"</a> .  <input type="checkbox"/> <a href="#">CVT-162, "DTC P1723 CVT SPEED SENSOR FUNCTION"</a> .  <input type="checkbox"/> <a href="#">CVT-164, "DTC P1726 ELECTRIC THROTTLE CONTROL SYSTEM"</a> .  <input type="checkbox"/> <a href="#">CVT-166, "DTC P1740 LOCK-UP SELECT SOLENOID VALVE CIRCUIT"</a> .  <input type="checkbox"/> <a href="#">CVT-172, "DTC P1777 STEP MOTOR - CIRCUIT"</a> .  <input type="checkbox"/> <a href="#">CVT-176, "DTC P1778 STEP MOTOR - FUNCTION"</a> . </div> </div>		C D E F G H I J K
	Check at idle	<a href="#">CVT-47</a>	
4	<div style="display: flex;"> <div style="width: 10%; text-align: center;">4-2.</div> <div style="width: 80%;"> <input type="checkbox"/> <a href="#">CVT-188, "Engine Cannot Be Started in "P" or "N" Position"</a> .  <input type="checkbox"/> <a href="#">CVT-189, "In "P" Position, Vehicle Moves Forward or Backward When Pushed"</a> .  <input type="checkbox"/> <a href="#">CVT-190, "In "N" Position, Vehicle Moves"</a> .  <input type="checkbox"/> <a href="#">CVT-191, "Large Shock "N" → "R" Position"</a> .  <input type="checkbox"/> <a href="#">CVT-193, "Vehicle Does Not Creep Backward in "R" Position"</a> .  <input type="checkbox"/> <a href="#">CVT-195, "Vehicle Does Not Creep Forward in "D", "S" or "L" Position"</a> . </div> </div>		L M

CVT

# TROUBLE DIAGNOSIS






4	4-3.	<p>Cruise test</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> <a href="#">CVT-197, "CVT Does Not Shift"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-199, "Cannot Be Changed to Manual Mode"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-200, "CVT Does Not Shift in Manual Mode"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-202, "Cannot Be Changed to Second Position"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-203, "Cannot Be Changed to "L" Position"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-205, "Vehicle Does Not Decelerate by Engine Brake"</a> .</li> <li><input type="checkbox"/> perform self-diagnostics. Enter checks for detected items. <a href="#">CVT-62</a></li> </ul> <ul style="list-style-type: none"> <li><input type="checkbox"/> <a href="#">CVT-71, "DTC U1000 CAN COMMUNICATION LINE"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-74, "DTC P0615 START SIGNAL CIRCUIT"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-78, "DTC P0703 STOP LAMP SWITCH CIRCUIT"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-80, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-88, "DTC P0710 CVT FLUID TEMPERATURE SENSOR CIRCUIT"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-93, "DTC P0715 INPUT SPEED SENSOR CIRCUIT (PRI SPEED SENSOR)"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-98, "DTC P0720 VEHICLE SPEED SENSOR CVT (SECONDARY SPEED SENSOR)"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-104, "DTC P0725 ENGINE SPEED SIGNAL"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-106, "DTC P0730 BELT DAMAGE"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-108, "DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-113, "DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-116, "DTC P0745 LINE PRESSURE SOLENOID VALVE"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-121, "DTC P0746 PRESSURE CONTROL SOLENOID A PERFORMANCE (LINE PRESSURE SOLENOID VALVE)"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-124, "DTC P0776 PRESSURE CONTROL SOLENOID B PERFORMANCE (SEC PRESSURE SOLENOID VALVE)"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-127, "DTC P0778 PRESSURE CONTROL SOLENOID B ELECTRICAL (SEC PRESSURE SOLENOID VALVE)"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-132, "DTC P0826 MANUAL MODE SWITCH CIRCUIT"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-137, "DTC P0840 TRANSMISSION FLUID PRESSURE SENSOR A CIRCUIT (SEC PRESSURE SENSOR)"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-142, "DTC P0841 PRESSURE SENSOR FUNCTION"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-145, "DTC P0845 TRANSMISSION FLUID PRESSURE SENSOR B CIRCUIT (PRI PRESSURE SENSOR)"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-150, "DTC P0868 SECONDARY PRESSURE DOWN"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-153, "DTC P1701 TRANSMISSION CONTROL MODULE (POWER SUPPLY)"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-158, "DTC P1705 THROTTLE POSITION SENSOR"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-160, "DTC P1722 ESTM VEHICLE SPEED SIGNAL"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-162, "DTC P1723 CVT SPEED SENSOR FUNCTION"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-164, "DTC P1726 ELECTRIC THROTTLE CONTROL SYSTEM"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-166, "DTC P1740 LOCK-UP SELECT SOLENOID VALVE CIRCUIT"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-172, "DTC P1777 STEP MOTOR - CIRCUIT"</a> .</li> <li><input type="checkbox"/> <a href="#">CVT-176, "DTC P1778 STEP MOTOR - FUNCTION"</a> .</li> </ul>	<a href="#">CVT-51</a>
5	<input type="checkbox"/> Inspect each system for items found to be NG in the self-diagnostics and repair or replace the malfunctioning parts.		
6	<input type="checkbox"/> Perform all road tests and enter the checks again for the required items.		<a href="#">CVT-44</a>
7	<input type="checkbox"/> For any remaining NG items, perform the "diagnostics procedure" and repair or replace the malfunctioning parts.		
8	<input type="checkbox"/> Erase the results of the self-diagnostics from the TCM.		<a href="#">CVT-29</a> , <a href="#">CVT-29</a>

# TROUBLE DIAGNOSIS


## CVT Electrical Parts Location (With Manual Mode)

ACS00170

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

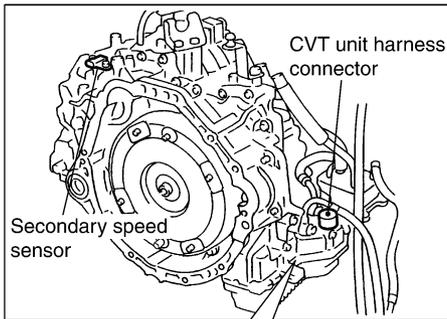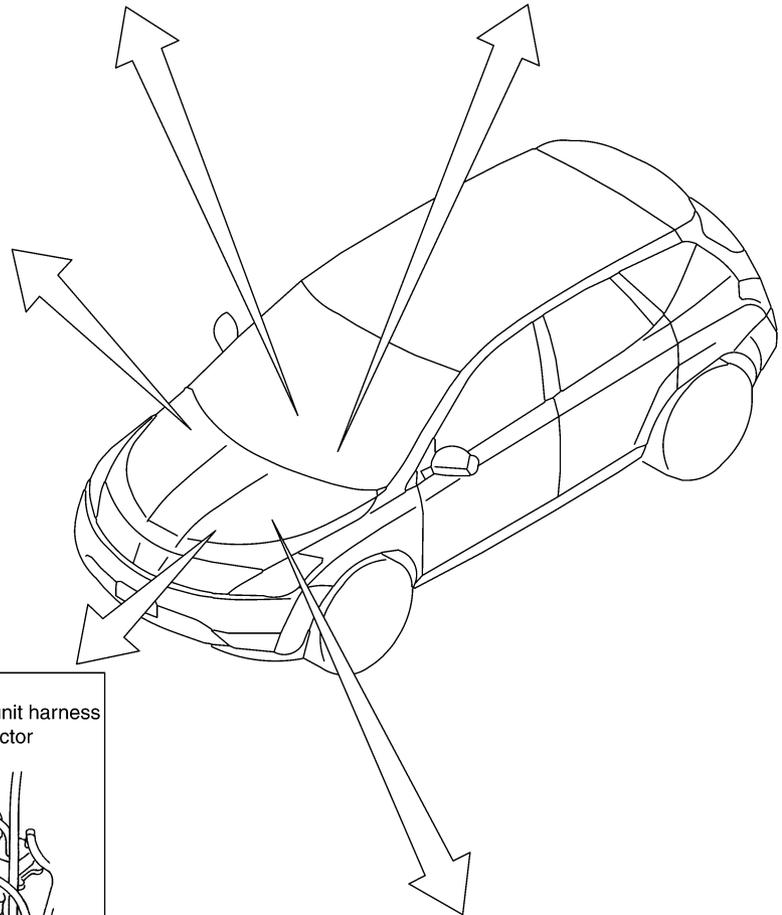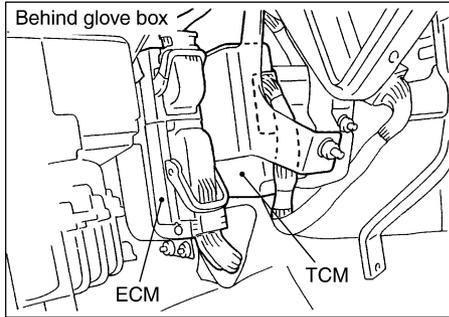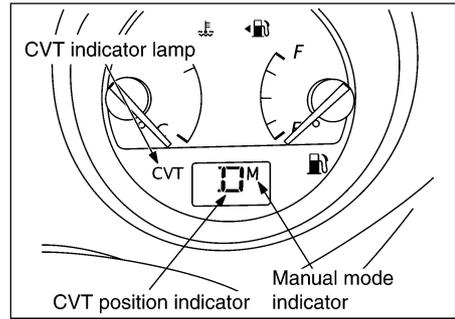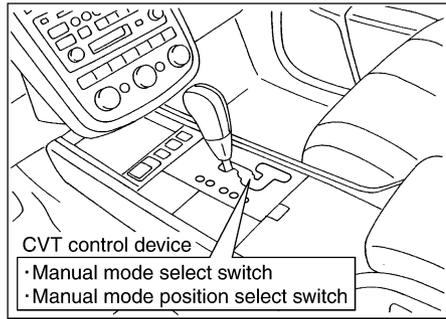

- Control valve assembly
- PNP switch
  - Primary speed sensor
  - Step motor
  - Secondary pressure solenoid valve
  - Line pressure solenoid valve
  - Torque converter clutch solenoid valve
  - Shift control valve
  - Secondary valve
  - Manual valve
  - Torque converter clutch control valve
  - Lock-up select solenoid valve
  - CVT fluid temperature sensor
  - Secondary pressure sensor
  - Primary pressure sensor

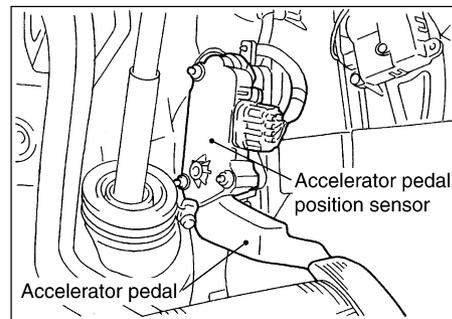


SCIA4583E

# TROUBLE DIAGNOSIS

## CVT Electrical Parts Location (Without Manual Mode)

ACS004Z7

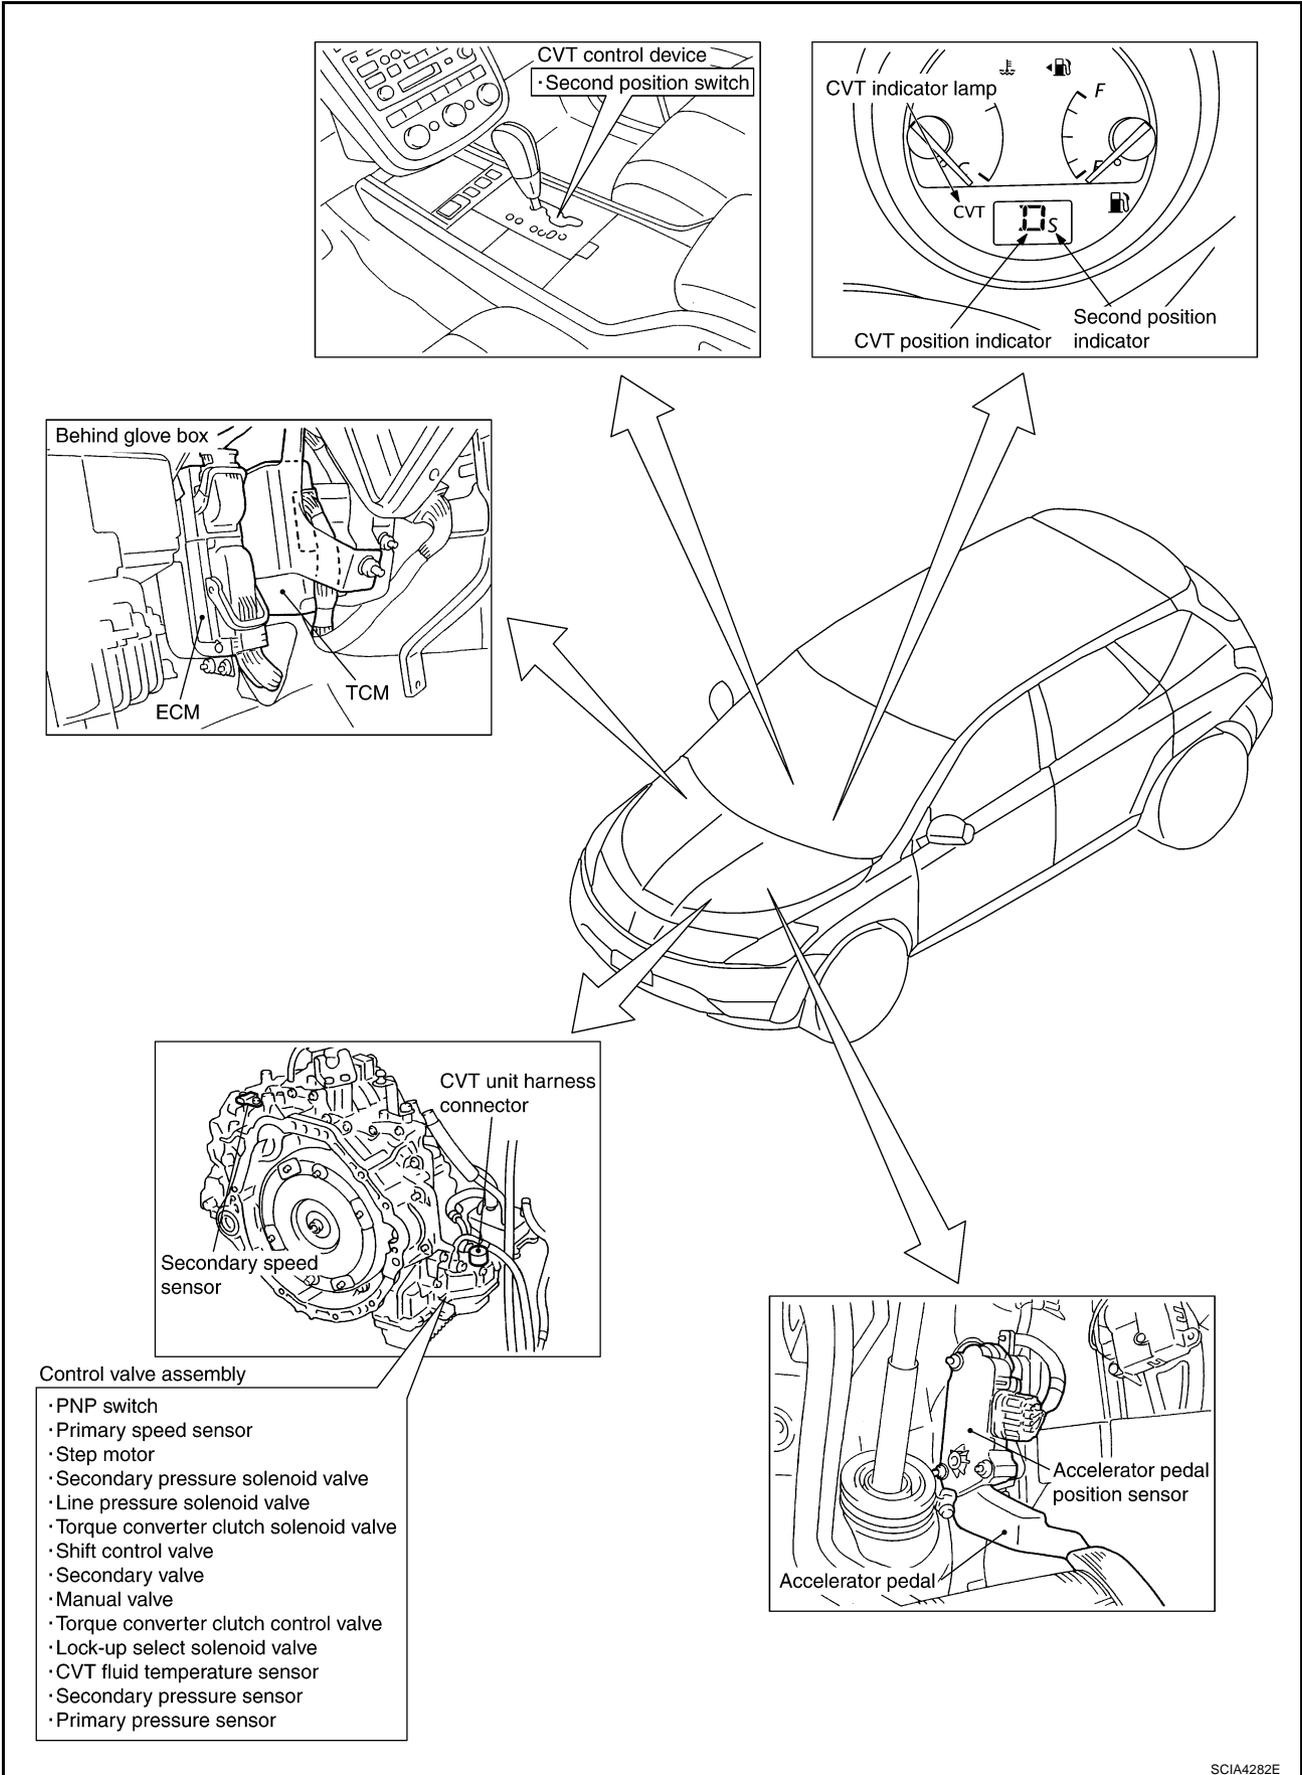


# TROUBLE DIAGNOSIS

## Circuit Diagram

ACS001T1

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

CVT

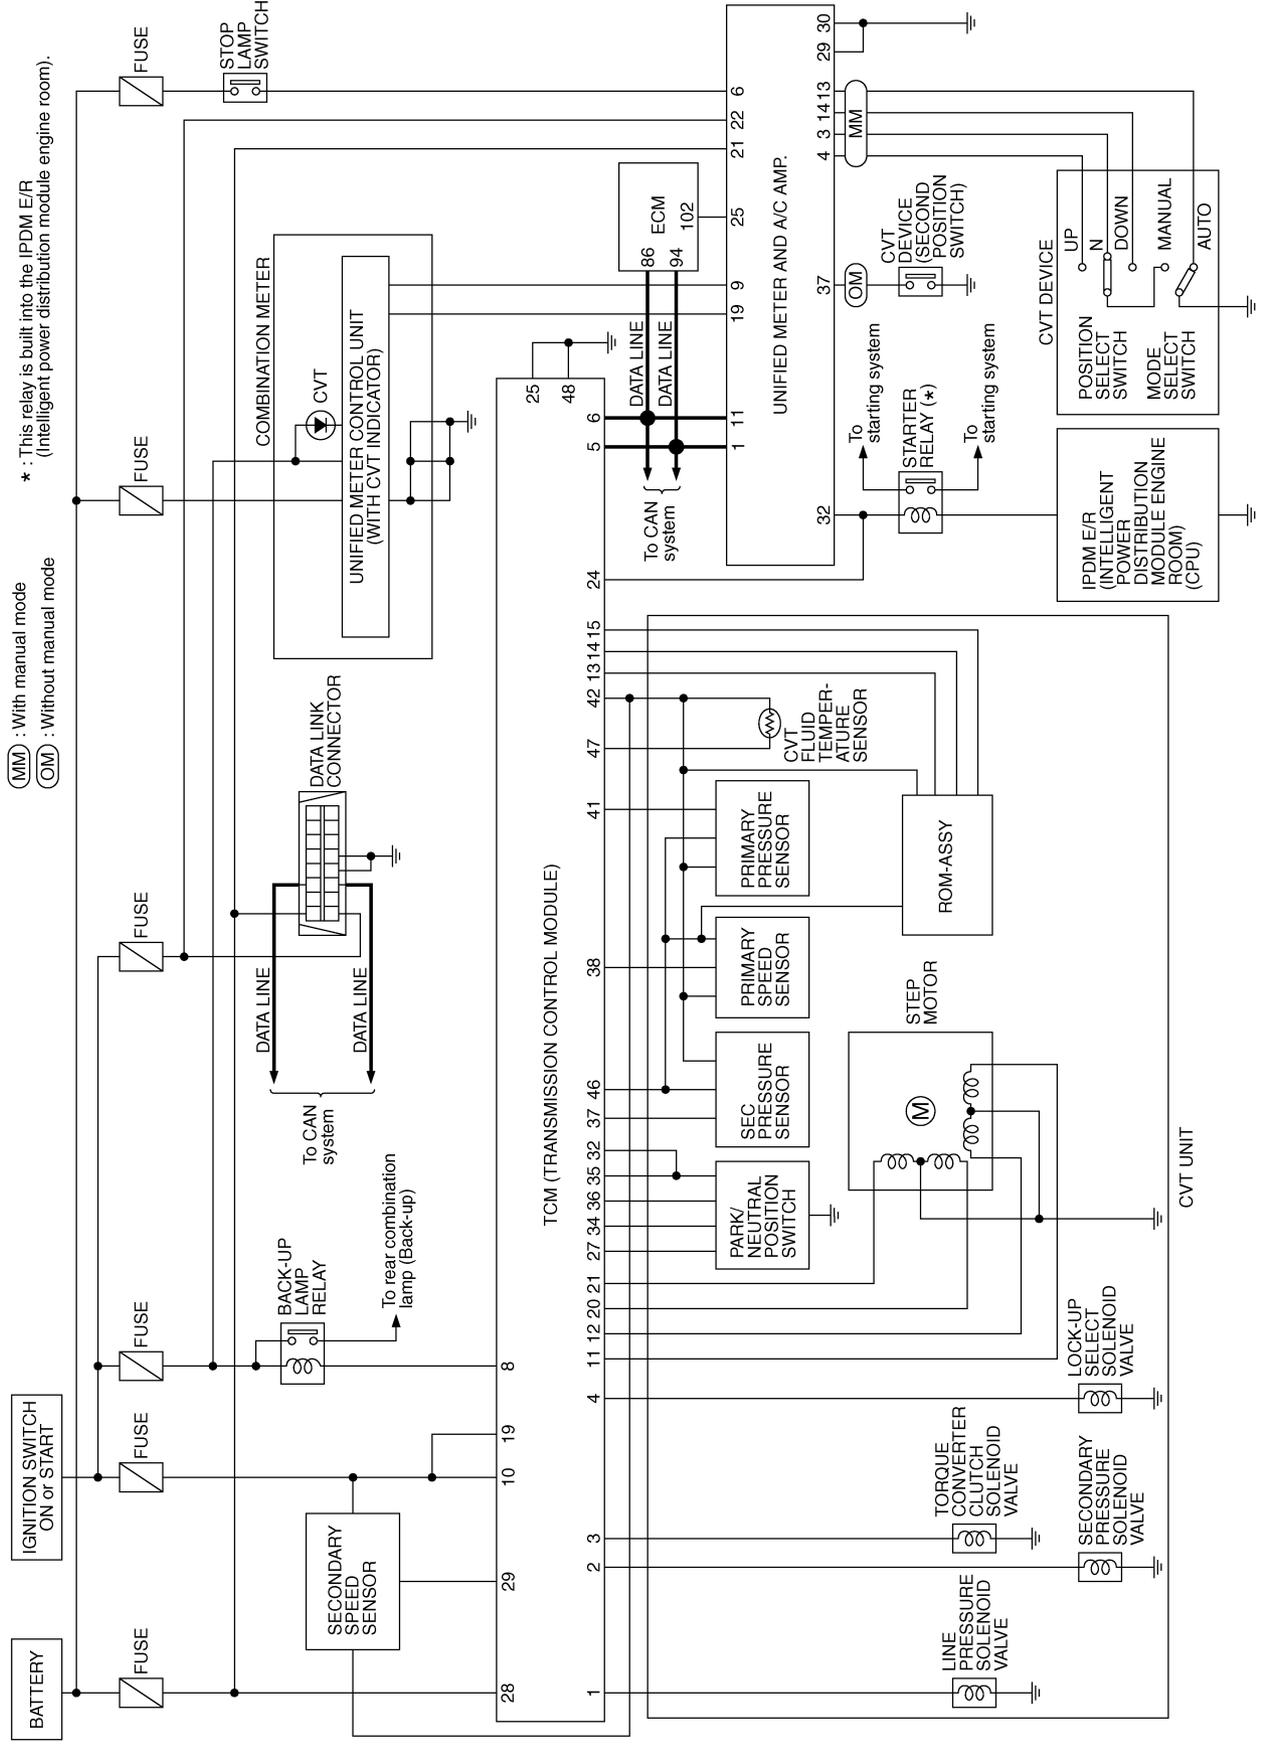

\* : This relay is built into the IPDM E/R (Intelligent power distribution module engine room).

(MM) : With manual mode  
(OM) : Without manual mode

TCWB0001E

# TROUBLE DIAGNOSIS

ACS00172

## Inspections Before Trouble Diagnosis

### CVT FLUID CHECK


#### Fluid Leakage and Fluid Level Check

- Inspect for fluid leakage and check the fluid level. Refer to [CVT-14, "Checking CVT Fluid"](#).

#### Fluid Condition Check

Inspect the fluid condition.


Fluid status	Conceivable cause	Required operation
Varnished (viscous varnish state)	Clutch, brake scorched	Replace the CVT fluid and check the CVT main unit and the vehicle for malfunctions (wire harnesses, cooler pipes, etc.)
Milky white or cloudy	Water in the fluid	Replace the CVT fluid and check for places where water is getting in.
Large amount of metal powder mixed in	Unusual wear of sliding parts within CVT	Replace the CVT fluid and check for improper operation of the CVT.

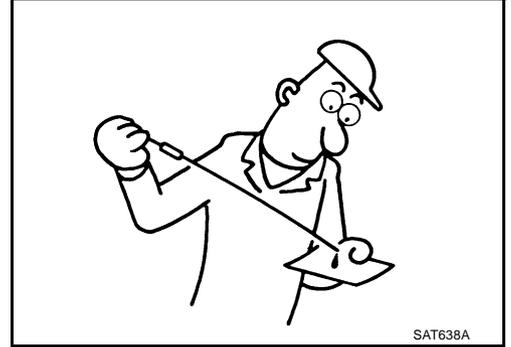


## STALL TEST

### Stall Test Procedure


1. Inspect the amount of engine oil. Replenish the engine oil if necessary.
2. Drive for about 10 minutes to warm up the vehicle so that the CVT fluid temperature is 50 - 80°C (122 - 176°F). Inspect the amount of CVT fluid. Replenish if necessary.

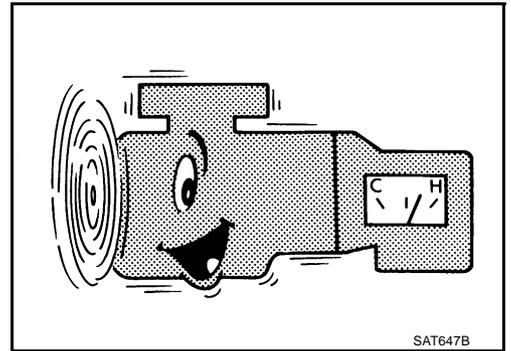

3. Securely engage the parking brake so that the tires do not turn.
4. Install a tachometer where it can be seen by driver during test.
  - It is good practice to mark the point of specified engine rpm on indicator.

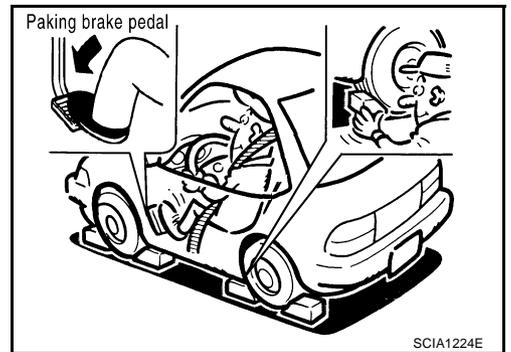

5. Engine start, apply foot brake, and place selector lever in "D" position.

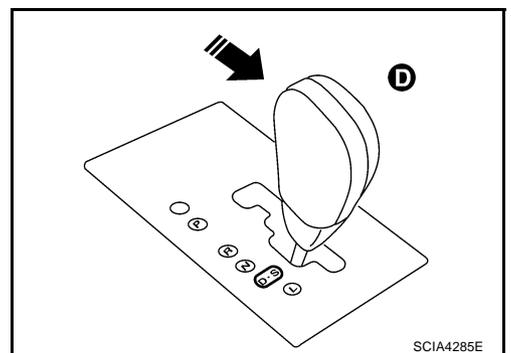


# TROUBLE DIAGNOSIS

6. While holding down the foot brake, gradually press down the accelerator pedal.
7. Quickly read off the stall speed, and then quickly remove your foot from the accelerator pedal.


**CAUTION:**

**Do not hold down the accelerator pedal for more than 5 seconds during this test.**

**Stall speed: 2,700 - 3,250 rpm**

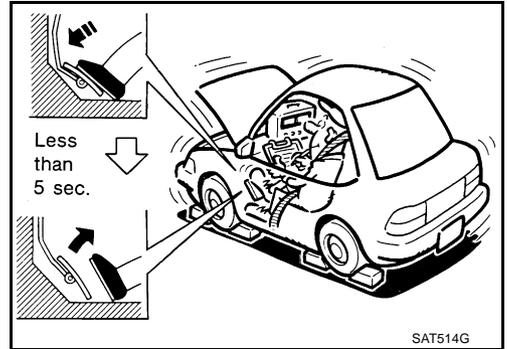

8. Move the selector lever to the "N" position.
  9. Cool down the CVT fluid.
- CAUTION:**  
**Run the engine at idle for at least one minute.**
10. Repeat steps 5 through 9 with selector lever in "R" position.

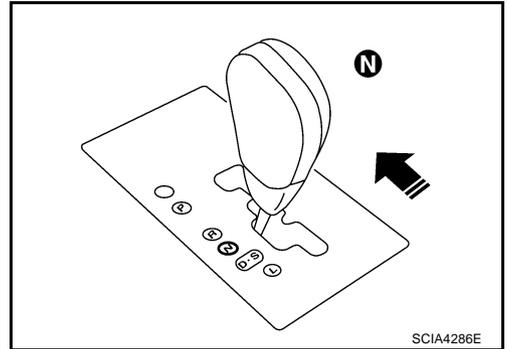

## Judgement Stall Test

	Selector lever position		Expected problem location
	"D"	"R"	
Stall rotation	H	O	● Forward clutch
	O	H	● Reverse brake
	L	L	● Engine and torque converter one-way clutch
	H	H	● Line pressure low ● Primary pulley ● Secondary pulley ● Steel belt

O: Stall speed within standard value position

H: Stall speed higher than standard value


L: Stall speed lower than standard value

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# TROUBLE DIAGNOSIS

## LINE PRESSURE TEST

### Line Pressure Test Port

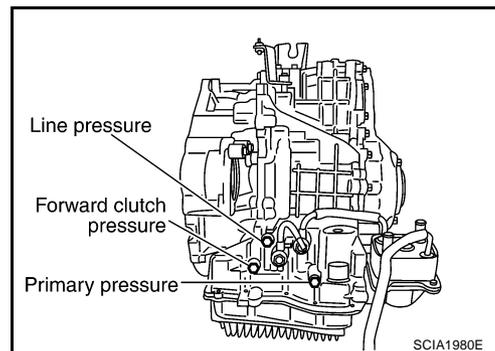

### Line Pressure Test Procedure

1. Inspect the amount of engine oil and replenish if necessary.
2. Drive the car for about 10 minutes to warm it up so that the CVT fluid reaches in the range of 50 - 80°C (122 - 176°F), then inspect the amount of CVT fluid and replenish if necessary.

**NOTE:**


**The CVT fluid temperature rises in the range of 50 - 80°C (122 - 176°F) during 10 minutes of driving.**

3. After warming up CVT, remove the oil pressure detection plug and install the oil pressure gauge [special service tool: ST2505S001 (J-34301-C)].

**CAUTION:**

**When using the oil pressure gauge, be sure to use the O-ring attached to the oil pressure detection plug.**

4. Securely engage the parking brake so that the tires do not turn.

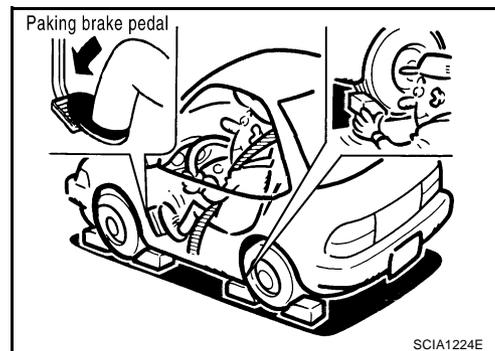


5. Start the engine, and then measure the line pressure at both idle and the stall speed.

**CAUTION:**

- Keep the brake pedal pressed all the way down during measurement.
- When measuring the line pressure at the stall speed, refer to [CVT-40, "STALL TEST"](#).

6. After the measurements are complete, install the oil pressure detection plug and tighten to the specified torque below.

 : 7.5 N-m (0.77 kg-m, 66 in-lb)

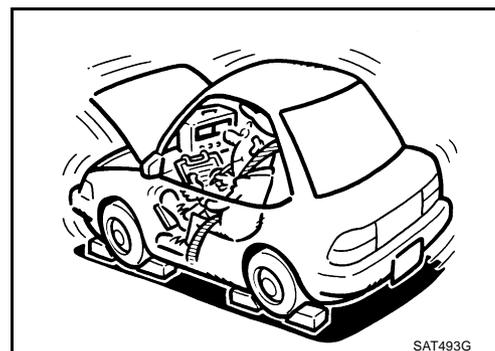

**CAUTION:**

**Do not reuse the O-ring.**

# TROUBLE DIAGNOSIS

## Line Pressure

Engine	Engine speed	Line pressure kPa (kg/cm <sup>2</sup> , psi)
		"R", "D", "L"*1 positions
VQ35DE	At idle speed	750 (7.65, 108.8)
	At stall speed	5,300 - 5,700 (54.06 - 58.14, 768.5 - 826.5)*2

\*1 : Without manual mode

\*2 : Reference values

## Judgement of Line Pressure Test

Judgement		Possible cause
Idle speed	Low for all positions ("P", "R", "N", "D", "L"*1)	Possible causes include malfunctions in the pressure supply system and low oil pump output. For example <ul style="list-style-type: none"> <li>● Oil pump wear</li> <li>● Pressure regulator valve or plug sticking or spring fatigue</li> <li>● Oil strainer ⇒ oil pump ⇒ pressure regulator valve passage oil leak</li> <li>● Engine idle speed too low</li> </ul>
	Only low for a specific position	Possible causes include an oil pressure leak in a passage or device related to the position after the pressure is distributed by the manual valve.
	High	Possible causes include a sensor malfunction or malfunction in the line pressure adjustment function. For example <ul style="list-style-type: none"> <li>● Accelerator pedal position signal malfunction</li> <li>● CVT fluid temperature sensor malfunction</li> <li>● Pressure control solenoid A (line pressure solenoid) malfunction (sticking in "OFF" state, filter clog, cut line)</li> <li>● Pressure regulator valve or plug sticking</li> </ul>
Stall speed	Oil pressure does not rise higher than the oil pressure for idle.	Possible causes include a sensor malfunction or malfunction in the pressure adjustment function. For example <ul style="list-style-type: none"> <li>● Accelerator pedal position signal malfunction</li> <li>● TCM breakdown</li> <li>● Pressure control solenoid A (line pressure solenoid) malfunction (shorting, sticking in "ON" state)</li> <li>● Pressure regulator valve or plug sticking</li> </ul>
	The pressure rises, but does not enter the standard position.	Possible causes include malfunctions in the pressure supply system and malfunction in the pressure adjustment function. For example <ul style="list-style-type: none"> <li>● Accelerator pedal position signal malfunction</li> <li>● Pressure control solenoid A (line pressure solenoid) malfunction (sticking, filter clog)</li> <li>● Pressure regulator valve or plug sticking</li> </ul>
	Only low for a specific position	Possible causes include an oil pressure leak in a passage or device related to the position after the pressure is distributed by the manual valve.

\*1 : Without manual mode.

# TROUBLE DIAGNOSIS

ACS004MG

## Road Test DESCRIPTION

- The purpose of the test is to determine overall performance of CVT and analyze causes of problems.
- The road test consists of the following three parts:
  1. "Check Before Engine Is Started" [CVT-47](#) .
  2. "Check at Idle" [CVT-47](#) .
  3. "Cruise Test" [CVT-51](#) .

### ROAD TEST PROCEDURE

1. Check before engine is started.



2. Check at idle.



3. Cruise test.

SAT786A

- Before road test, familiarize yourself with all test procedures and items to check.
- perform tests on all items until specified symptom is found. Troubleshoot items which check out No Good after road test. Refer to [CVT-27, "ON BOARD DIAGNOSTIC \(OBD\) SYSTEM"](#) .




SAT496G

## CONSULT-II SETTING PROCEDURE

### CAUTION:


If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.

- Using CONSULT-II, perform a cruise test and record the result.
- Print the result and ensure that shifts and lock-ups take place as per Shift Schedule.

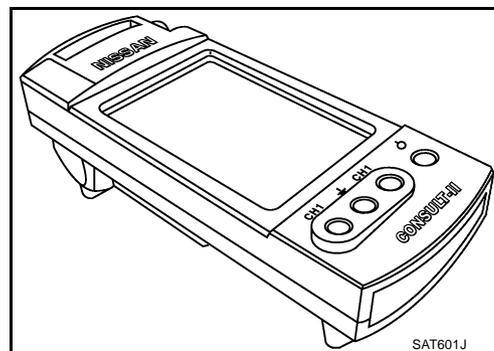

SAT601J


1. Turn ignition switch OFF.
2. Connect CONSULT-II and CONSULT-II CONVERTER to data link connector, which is located in lower instrument panel on driver side.

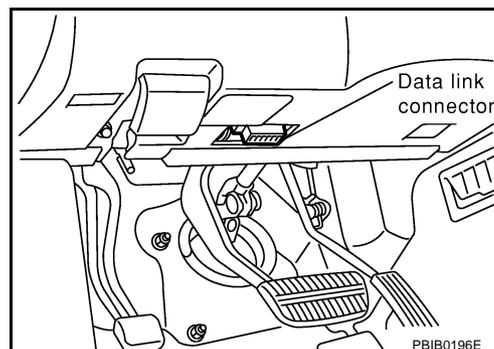


PBIB0196E

# TROUBLE DIAGNOSIS


3. Turn ignition switch ON.
4. Touch "START (NISSAN BASED VHCL)".

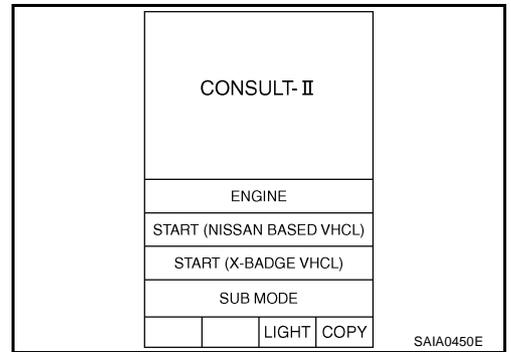


5. Touch "TRANSMISSION".  
If "TRANSMISSION" is not indicated, go to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

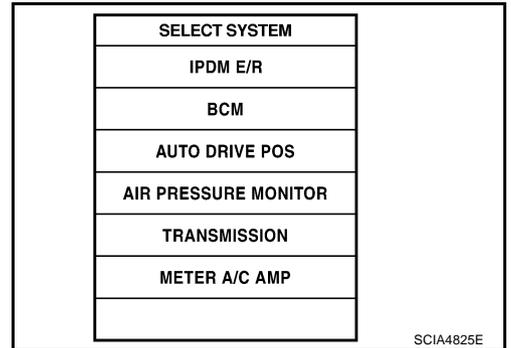


6. Touch "DATA MONITOR".

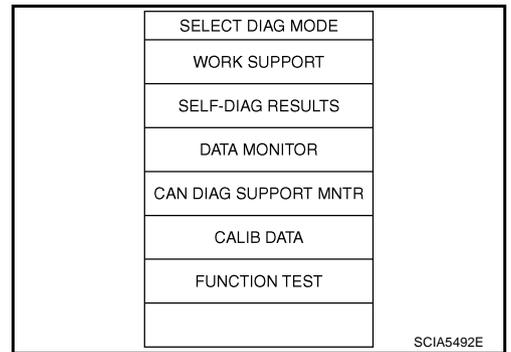

7. Touch "MAIN SIGNALS" to set recording condition.
8. See "Numerical Display", "Barchart Display" or "Line Graph Display".
9. Touch "START".

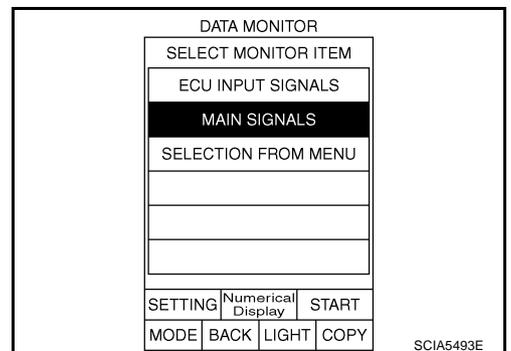


10. When performing cruise test. Refer to [CVT-51, "Cruise Test"](#).
11. After finishing cruise test part, touch "RECORD".

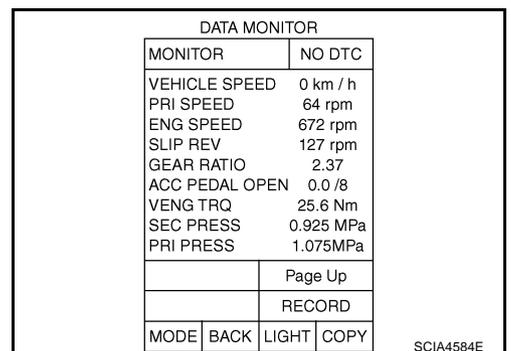


A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# TROUBLE DIAGNOSIS


12. Touch "STORE".

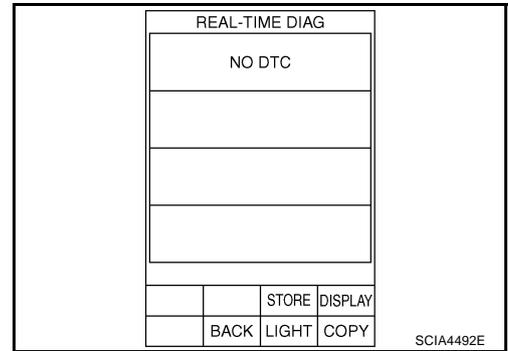

13. Touch "BACK".

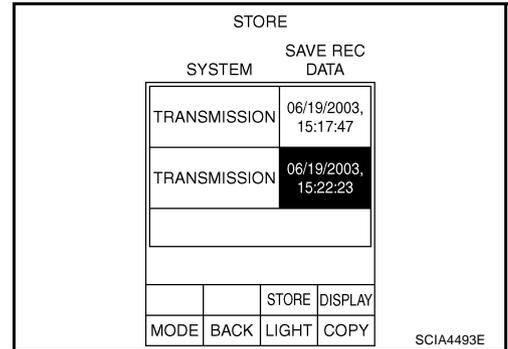


14. Touch "DISPLAY".

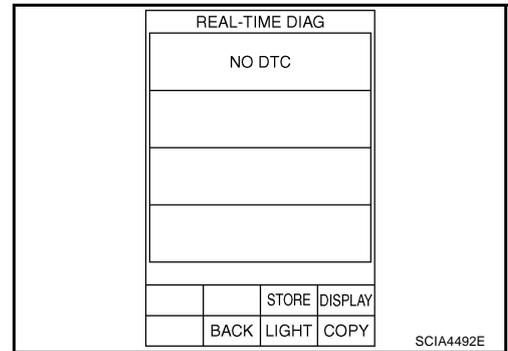

15. Touch "PRINT".

16. Check the monitor data printed out.

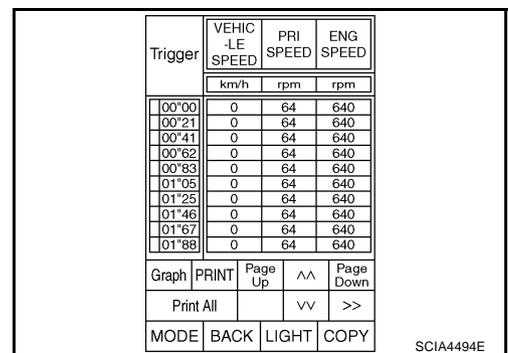

# TROUBLE DIAGNOSIS

## Check Before Engine Is Started

ACS007WZ


### 1. CHECK CVT INDICATOR LAMP

1. Park vehicle on flat surface.
2. Move selector lever to "P" position.
3. Turn ignition switch OFF. Wait at least 5 seconds.
4. Turn ignition switch ON. (Do not start engine.)

Does CVT indicator lamp come on for about 2 seconds?

- YES >> 1. Turn ignition switch OFF.  
2. Perform self-diagnosis and note NG items.  
Refer to [CVT-62, "SELF-DIAGNOSTIC RESULT MODE"](#) .  
3. Go to [CVT-47, "Check at Idle"](#) .

NO >> Stop "Road Test". Go to [CVT-186, "CVT Indicator Lamp Does Not Come On"](#) .

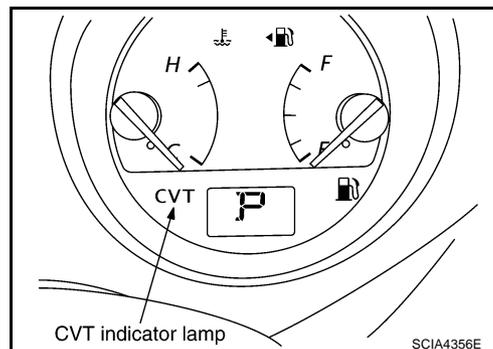

## Check at Idle


ACS007X0

### 1. CHECK STARTING THE ENGINE

1. Park vehicle on flat surface.
2. Move selector lever to "P" or "N" position.
3. Turn ignition switch OFF.
4. Turn ignition switch to START position.

Is engine started?


- YES >> GO TO 2.  
NO >> Stop "Road Test". Mark the box on the "DIAGNOSTIC WORKSHEET" [CVT-34](#) . Go to [CVT-188, "Engine Cannot Be Started in "P" or "N" Position"](#) .

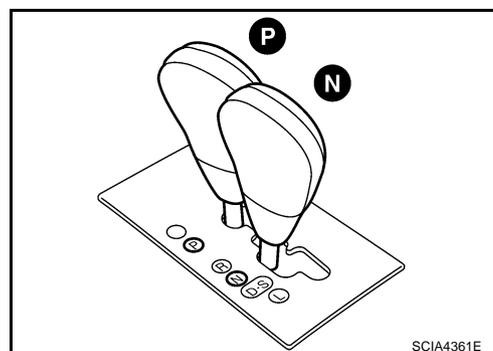

### 2. CHECK STARTING THE ENGINE

#### With manual mode

1. Turn ignition switch ON.
2. Move selector lever to "D", or "R" position.
3. Turn ignition switch to START position.

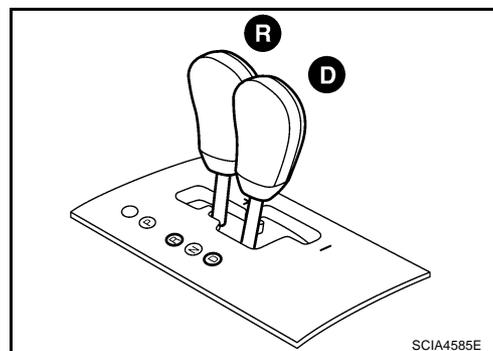


#### Without manual mode

1. Turn ignition switch ON.
2. Move selector lever to "D", "S", "L" or "R" position.
3. Turn ignition switch to START position.

Is engine started?

- YES >> Stop "Road Test". Mark the box on the "DIAGNOSTIC WORKSHEET" [CVT-34](#) . Go to [CVT-188, "Engine Cannot Be Started in "P" or "N" Position"](#) .  
NO >> GO TO 3.

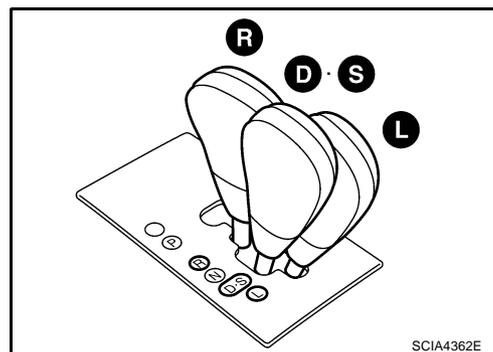


A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# TROUBLE DIAGNOSIS

## 3. CHECK "P" POSITION FUNCTION

1. Move selector lever to "P" position.
2. Turn ignition switch OFF.
3. Release parking brake.

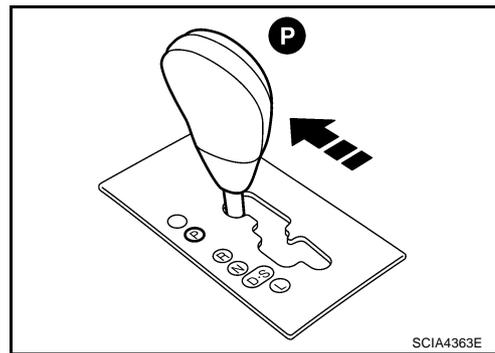

4. Push vehicle forward or backward.
5. Apply parking brake.

Does vehicle move when it is pushed forward or backward?

YES >> Mark the box "In "P" Position, Vehicle Moves Forward Or Backward When Pushed" on the "DIAGNOSTIC WORKSHEET" [CVT-34](#) . Continue "Road Test".

NO >> GO TO 4.




## 4. CHECK "N" POSITION FUNCTION

1. Start engine.
2. Move selector lever to "N" position.
3. Release parking brake.

Does vehicle move forward or backward?

YES >> Mark the box "In "N" Position, Vehicle Moves" on the "DIAGNOSTIC WORKSHEET" [CVT-34](#) . Continue "Road Test".


NO >> GO TO 5.

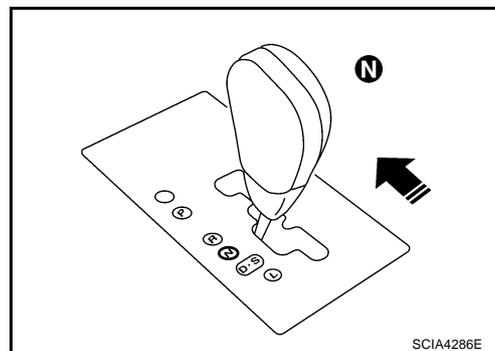

# TROUBLE DIAGNOSIS

## 5. CHECK SHIFT SHOCK

1. Apply foot brake.

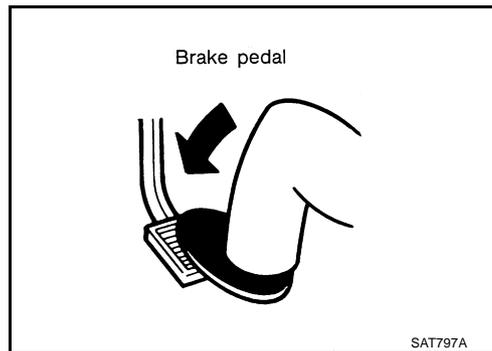


2. Move selector lever to "R" position.

Is there large shock when changing from "N" to "R" position?

YES >> Mark the box "Large shock "N" →"R" Position" on the "DIAGNOSTIC WORKSHEET" [CVT-34](#) . Continue "Road Test".

NO >> GO TO 6.

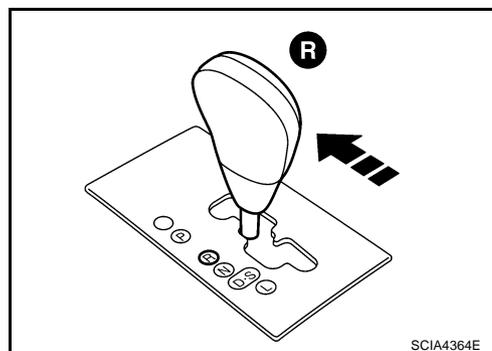


## 6. CHECK "R" POSITION FUNCTION

Release foot brake for several seconds.

Does vehicle creep backward when foot brake is released?

YES >> GO TO 7.

NO >> Mark the box "Vehicle Does Not Creep Backward in "R" Position" on the "DIAGNOSTIC WORKSHEET" [CVT-34](#) . Continue "Road Test".

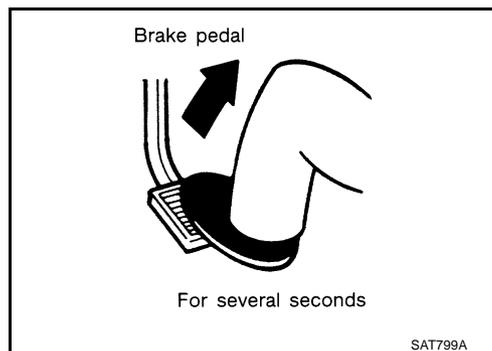


A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# TROUBLE DIAGNOSIS

## 7. CHECK "D", "S", "L" POSITION FUNCTION

### With manual mode

Move selector lever to "D" positions and check if vehicle creeps forward.

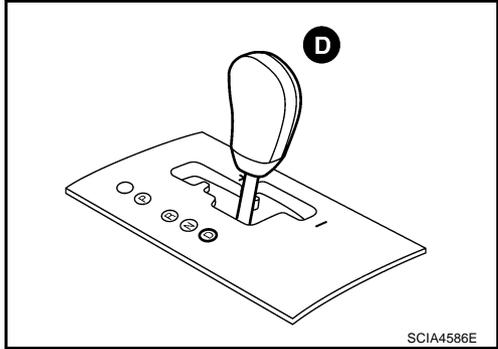


### Without manual mode

Move selector lever to "D", "S" and "L" positions and check if vehicle creeps forward.

Does vehicle creep forward in all four positions?

YES >> Go to [CVT-51, "Cruise Test"](#) .

NO >> Mark the box "Vehicle Does Not Creep Forward in "D", "S" or "L" Position" on the "DIAGNOSTIC WORK-SHEET" [CVT-34](#) . Continue "Road Test".

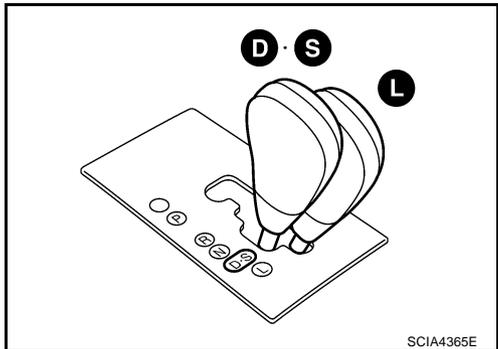

# TROUBLE DIAGNOSIS

## Cruise Test


ACS007X1

### 1. CHECK VEHICLE SPEED WHEN SHIFTING GEARS — PART 1


1. Drive vehicle for approximately 10 minutes to warm engine oil and CVT fluid up to operating temperature.

**CVT fluid operating temperature: 50 - 80°C (122 - 176°F)**

2. Park vehicle on flat surface.
3. Move selector lever to "P" position.
4. Start engine.

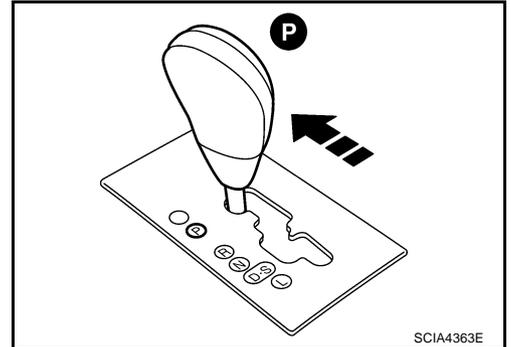

5. Move selector lever to "D" position.

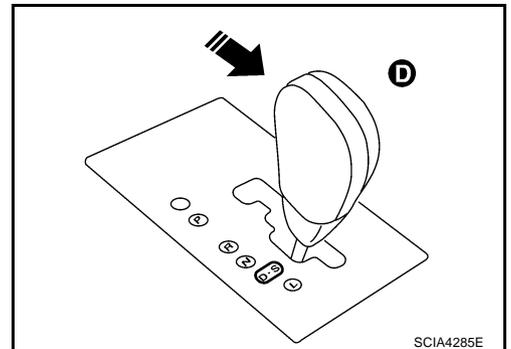


6. Accelerate vehicle by constantly depressing accelerator pedal half-way.

Ⓜ **Read vehicle speed and engine speed. Refer to [CVT-55, "Vehicle Speed When Shifting Gears"](#).**

#### OK or NG

OK >> GO TO 2.

NG >> Mark the box of "CVT Does Not Shift" on the "DIAGNOSTIC WORKSHEET" [CVT-34](#) . Continue "Road Test".

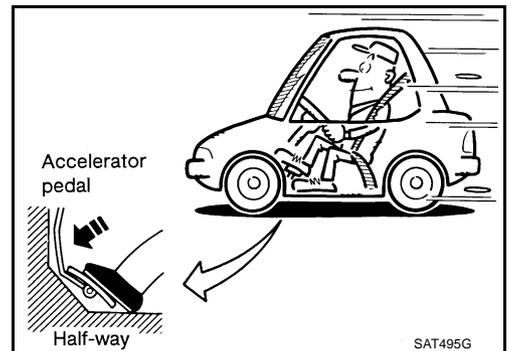


A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# TROUBLE DIAGNOSIS

## 2. CHECK VEHICLE SPEED WHEN SHIFTING GEARS — PART 2

1. Park vehicle on flat surface.
2. Move selector lever to “D” position.

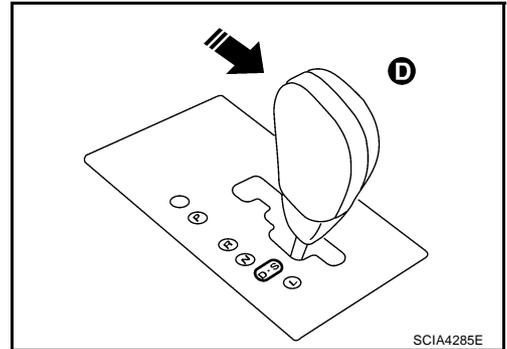


3. Accelerate vehicle by constantly depressing accelerator pedal fully depressed.

Ⓟ Read vehicle speed and engine speed. Refer to [CVT-55, "Vehicle Speed When Shifting Gears"](#).

OK or NG

- OK >> GO TO 3. (With manual mode)
- OK >> GO TO 7. (Without manual mode)
- NG >> Mark the box of “CVT Does Not Shift” on the “DIAGNOSTIC WORKSHEET” [CVT-34](#). Continue “Road Test”.

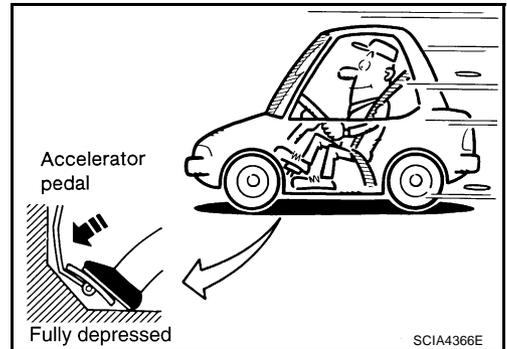


## 3. CHECK MANUAL MODE FUNCTION

Move to manual mode from “D” position.

Does it switch to manual mode?

- YES >> GO TO 4.
- NO >> Mark the box of “Cannot be Changed to Manual Mode” on the “DIAGNOSTIC WORKSHEET” [CVT-34](#). Continue “Road Test”.

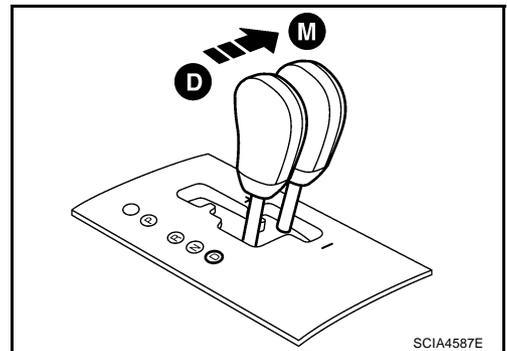


## 4. CHECK SHIFT-UP FUNCTION

During manual mode driving, is upshift from M1 → M2 → M3 → M4 → M5 → M6 performed?

Ⓟ Read the gear position. Refer to [CVT-64, "DATA MONITOR MODE"](#).

Is upshifting correctly performed?

- YES >> GO TO 5.
- NO >> Mark the box of “CVT Does Not Shift In Manual Mode” on the “DIAGNOSTIC WORKSHEET” [CVT-34](#). Continue “Road Test”.

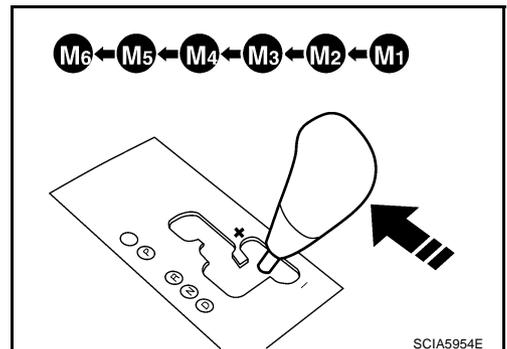

# TROUBLE DIAGNOSIS

## 5. CHECK SHIFT-DOWN FUNCTION


During manual mode driving, is downshift from M6 → M5 → M4 → M3 → M2 → M1 performed?

④ Read the gear position. Refer to [CVT-64, "DATA MONITOR MODE"](#).

Is downshifting correctly performed?

YES >> GO TO 6.

NO >> Mark the box of "CVT Does Not Shift In Manual Mode" on the "DIAGNOSTIC WORKSHEET" [CVT-34](#). Continue "Road Test".

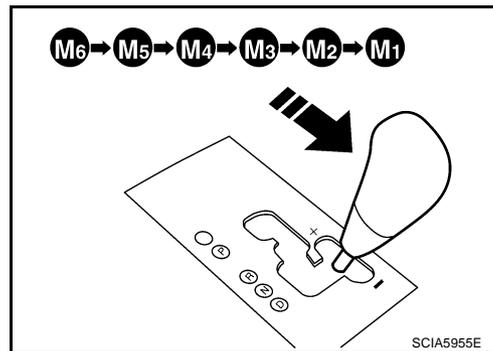

## 6. CHECK ENGINE BRAKE FUNCTION


Check engine brake.

Does engine braking effectively reduce speed in M1 position?

YES >> 1. Stop the vehicle.


2. Carry out the self-diagnostics. Refer to [CVT-62, "SELF-DIAGNOSTIC RESULT MODE"](#).

NO >> Mark the box of "Vehicle Does Not Decelerate By Engine Brake" on the "DIAGNOSTIC WORKSHEET" [CVT-34](#). then continue trouble diagnosis.

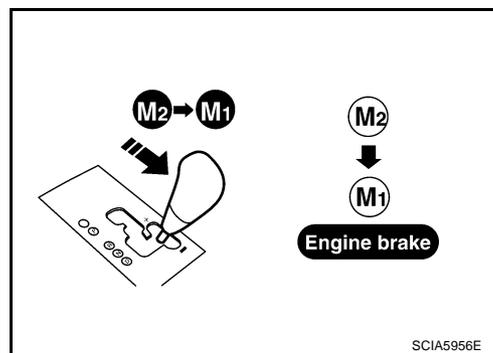

## 7. CHECK "S" POSITION FUNCTION — PART 1

1. Park vehicle on flat surface.
2. Move selector lever to "S" position.

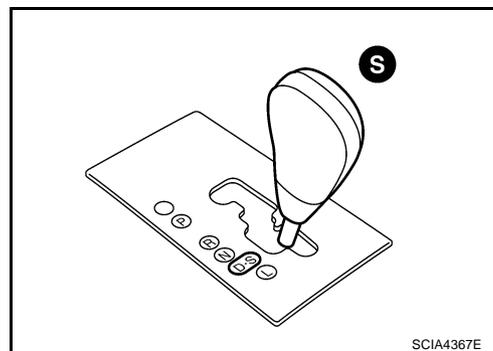


3. Accelerate vehicle by constantly depressing accelerator pedal half-way.

④ Read vehicle speed and engine speed. Refer to [CVT-55, "Vehicle Speed When Shifting Gears"](#).

OK or NG

OK >> GO TO 8.


NG >> Mark the box of "Cannot Be Changed to Second Position" on the "DIAGNOSTIC WORKSHEET" [CVT-34](#). Continue "Road Test".

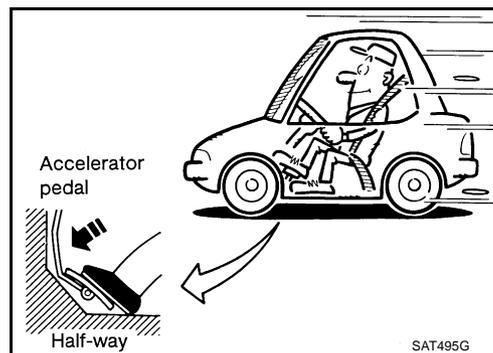

# TROUBLE DIAGNOSIS

## 8. CHECK "S" POSITION FUNCTION — PART 2

1. Park vehicle on flat surface.
2. Move selector lever to "S" position.

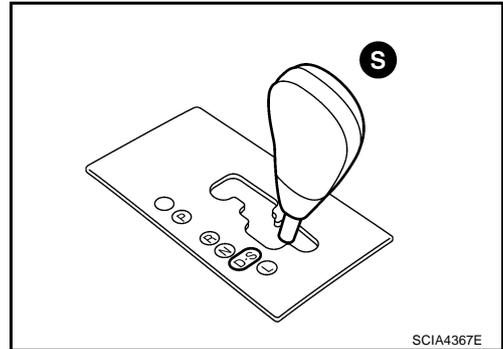


3. Accelerate vehicle by constantly depressing accelerator pedal fully depressed.

 Read vehicle speed and engine speed. Refer to [CVT-55](#), "[Vehicle Speed When Shifting Gears](#)".

### OK or NG


OK >> GO TO 9.

NG >> Mark the box of "Cannot Be Changed to Second Position" on the "DIAGNOSTIC WORKSHEET" [CVT-34](#). Continue "Road Test".

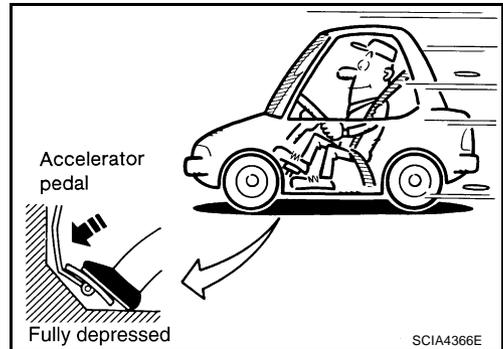

## 9. CHECK "L" POSITION FUNCTION — PART 1

1. Park vehicle on flat surface.
2. Move selector lever to "L" position.

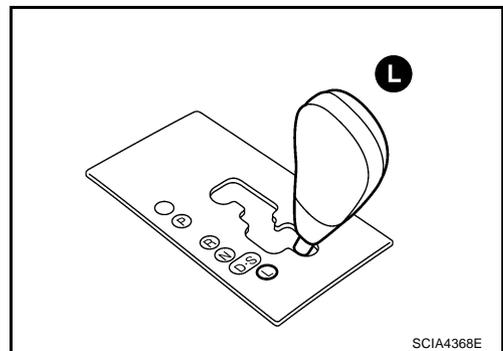


3. Accelerate vehicle by constantly depressing accelerator pedal half-way.

 Read vehicle speed and engine speed. Refer to [CVT-55](#), "[Vehicle Speed When Shifting Gears](#)".

### OK or NG

OK >> GO TO 10.


NG >> Mark the box of "Cannot Be Changed to "L" Position" on the "DIAGNOSTIC WORKSHEET" [CVT-34](#). Continue "Road Test".

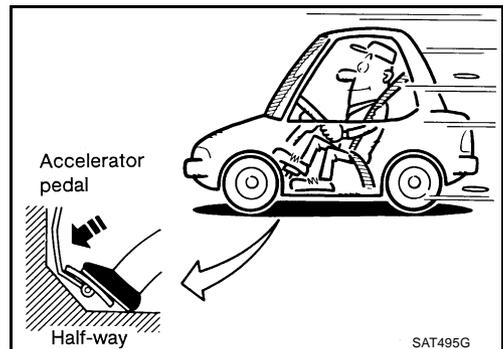

# TROUBLE DIAGNOSIS

## 10. CHECK "L" POSITION FUNCTION — PART 2

1. Park vehicle on flat surface.
2. Move selector lever to "L" position.

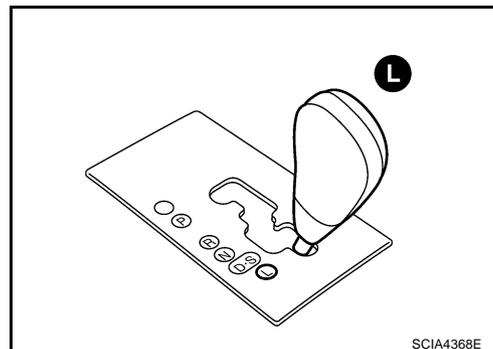


3. Accelerate vehicle by constantly depressing accelerator pedal fully depressed.
  - Ⓜ Read vehicle speed and engine speed. Refer to [CVT-55, "Vehicle Speed When Shifting Gears"](#).

OK or NG

OK >> GO TO 11.

NG >> Mark the box of "Cannot Be Changed to "L" Position" on the "DIAGNOSTIC WORKSHEET" [CVT-34](#). Continue "Road Test".

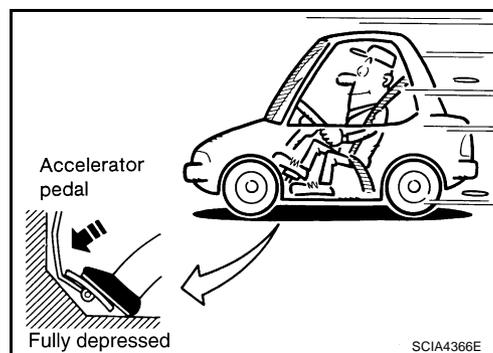

## 11. CHECK ENGINE BRAKE FUNCTION


Check engine brake.

Does engine braking effectively reduce speed in "L" position?

YES >> 1. Stop the vehicle.

2. Perform self-diagnosis. Refer to [CVT-62, "SELF-DIAGNOSTIC RESULT MODE"](#).

NO >> Mark the box of "Vehicle Does Not Decelerate By Engine Brake" on the "DIAGNOSTIC WORKSHEET" [CVT-34](#). then continue trouble diagnosis.

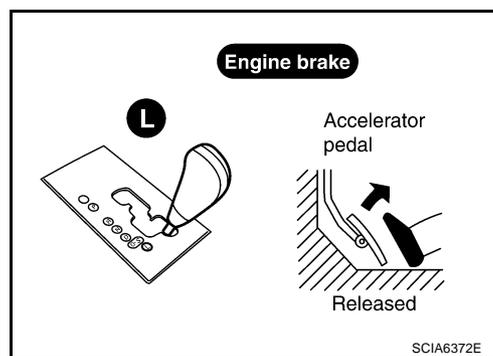

## Vehicle Speed When Shifting Gears

Numerical value data are reference values.

Engine type	Throttle position	Shift pattern	Engine speed (rpm)	
			At 40 km/h (25 MPH)	At 60 km/h (37 MPH)
VQ35DE	8/8	"D" position Second position* "L" position*	2,800 - 4,300	3,900 - 5,300
		"D" position	1,200 - 2,000	1,300 - 2,100
	2/8	Second position*	2,200 - 3,000	2,800 - 3,600
"L" position*		2,800 - 3,600	3,800 - 4,600	

\*: Without manual mode


**CAUTION:**

Lock-up clutch is engaged when vehicle speed is approximately 18 km/h (11 MPH) to 90 km/h (56 MPH).

# TROUBLE DIAGNOSIS

## TCM Input/Output Signal Reference Values TCM TERMINAL CONNECTOR LAYOUT

ACS007X3

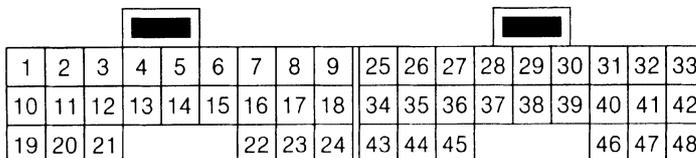

SCIA0495E

### TCM INSPECTION TABLE

Data are reference values and are measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)
1	R/Y	Pressure control solenoid valve A (line pressure solenoid valve)	 Release your foot from the accelerator pedal.	5.0 - 7.0V
			Press the accelerator pedal all the way down.	1.0 - 3.0V
2	W/B	Pressure control solenoid valve B (secondary pressure solenoid valve)	 Release your foot from the accelerator pedal.	5.0 - 7.0V
			Press the accelerator pedal all the way down.	3.0 - 4.0V
3	L/W	TCC solenoid valve	 Lock-up applied to lock-up cancelled	6.0 - 0V
4	L/Y	Lock-up select solenoid valve	 "P" and "N" positions.	Battery voltage
			Wait at least for 5 seconds with the selector lever in "R", "D", "S"* and "L"* positions. *: Without manual mode.	0V
5	L	CAN H	—	—
6	Y	CAN L	—	—
8	SB	Back-up lamp relay	 Selector lever in "R" position.	0V
			Selector lever in other positions.	Battery voltage
10	Y/L	Power supply	 —	Battery voltage
			 —	0V
11	G/R	Step motor A	Within 2 seconds after key switch "ON", the time measurement by using the pulse width measurement function (Hi level) of CONSULT-II.*1	30.0 msec
12	O/B	Step motor B	<b>CAUTION:</b> Connect the diagnosis data link cable to the vehicle diagnosis connector. *1: A circuit tester cannot be used to test this item.	10.0 msec
13	G/W	ROM assembly	—	—
14	L/R	ROM assembly	—	—
15	BR/R	ROM assembly	—	—

# TROUBLE DIAGNOSIS

Terminal	Wire color	Item	Condition		Data (Approx.)
19	Y/L	Power supply		—	Battery voltage
				—	0V
20	R	Step motor C	Within 2 seconds after key switch "ON", the time measurement by using the pulse width measurement function (Hi level) of CONSULT-II.*1		30.0 msec
21	R/G	Step motor D	<b>CAUTION:</b> <b>Connect the diagnosis data link cable to the vehicle diagnosis connector.</b> *1: A circuit tester cannot be used to test this item.		10.0 msec
24	G/O	Starter relay		Selector lever in "N", "P" positions.	Battery voltage
				Selector lever in other positions.	0V
				—	0V
25	B	Ground	Always		0V
27	BR/W	PNP switch 1		Selector lever in "R", "N", "D", "S"* positions. *: Without manual mode.	0V
				Selector lever in "P", "L"* positions. *: Without manual mode.	Battery voltage
28	Y/R	Power supply (Memory back-up)	Always		Battery voltage
29	G	Output speed sensor (secondary speed sensor)		When driving ["D" position, 20 km/h (12 MPH)].	300 Hz
32	GR	PNP switch 3 (monitor)		Selector lever in "D", "S"*, "L"* positions. *: Without manual mode.	0V
				Selector lever in "P", "R", "N" positions.	8.0V - Battery voltage
34	P/B	PNP switch 2		Selector lever in "N", "D", "S"*, "L"* positions. *: Without manual mode.	0V
				Selector lever in "P", "R" positions.	10.0V - Battery voltage
35	P/L	PNP switch 3		Selector lever in "D", "S"*, "L"* positions. *: Without manual mode.	0V
				Selector lever in "P", "R", "N" positions.	8.0V - Battery voltage
36	G	PNP switch 4		Selector lever in "R", "D", "S"* positions. *: Without manual mode.	0V
				Selector lever in "P", "N", "L"* positions. *: Without manual mode.	10.0V - Battery voltage
37	V/W	Transmission fluid pressure sensor A (secondary pressure sensor)	 and 	"N" position idle	0.8V

A  
 B  
 CVT  
 D  
 E  
 F  
 G  
 H  
 I  
 J  
 K  
 L  
 M

# TROUBLE DIAGNOSIS

Terminal	Wire color	Item	Condition		Data (Approx.)
38	LG	Input speed sensor (primary speed sensor)		When driving ["D" position, 20 km/h (12 MPH)].	600 Hz
41	V/O	Transmission fluid pressure sensor B (primary pressure sensor)	 and 	"N" position idle	0.7 - 3.5V
42	W/R	Sensor ground	Always		0V
46	L/O	Sensor power		—	4.5 - 5.5V
				—	0V
47	V	CVT fluid temperature sensor		When CVT fluid temperature is 20°C (68°F)	2.0V
				When CVT fluid temperature is 80°C (176°F)	1.0V
48	B	Ground	Always		0V

# TROUBLE DIAGNOSIS

## CONSULT-II

ACS007X4

CONSULT-II can display each diagnostic item using the diagnostic test modes shown below.

### FUNCTION

Diagnostic test mode	Function	Reference page
Work support	This mode enables a technician to adjust some devices faster and more accurately by following the indications on CONSULT-II.	<a href="#">CVT-68</a>
Self-diagnostic results	Self-diagnostic results can be read and erased quickly.	<a href="#">CVT-62</a>
Data monitor	Input/Output data in the ECM can be read.	<a href="#">CVT-64</a>
CAN diagnostic support monitor	The results of transmit/receive diagnosis of CAN communication can be read.	—
CALIB data	Characteristic information for TCM and CVT assembly can be read. Do not use, but displayed.	—
Function test	Conducted by CONSULT-II instead of a technician to determine whether each system is "OK" or "NG".	—
ECU part number	ECU part number can be read.	—

### CONSULT-II REFERENCE VALUE

Item name	Condition	Display value (Approx.)
VSP SENSOR (km/h)	During driving	Approximately matches the speedometer reading.
ESTM VSP SIG (km/h)		
PRI SPEED SEN (rpm)	During driving (lock-up ON)	Approximately matches the engine speed.
ENG SPEED SIG (rpm)	Engine running	Closely matches the tachometer reading.
SEC HYDR SEN (V)	"N" position idle	0.8 - 1.0V
PRI HYDR SEN (V)	"N" position idle	0.7 - 3.5V
ATF TEMP SEN (V)	When CVT fluid temperature is 20°C (68°F)	1.8 - 2.0V
	When CVT fluid temperature is 80°C (176°F).	0.6 - 1.0V
VIGN SEN (V)	Ignition switch: ON	Battery voltage
VEHICLE SPEED (km/h)	During driving	Approximately matches the speedometer reading.
PRI SPEED (rpm)	During driving (lock-up ON)	Approximately matches the engine speed.
SEC SPEED (rpm)	During driving	45 X Approximately matches the speedometer reading.
ENG SPEED (rpm)	Engine running	Closely matches the tachometer reading.
GEAR RATIO	During driving	2.37 - 0.43
ACC PEDAL OPEN	Released accelerator pedal - Fully depressed accelerator pedal	0.0/8 - 8.0/8
SEC PRESS (MPa)	"N" position idle	0.5 - 0.9MPa
PRI PRESS (MPa)	"N" position idle	0.3 - 0.9MPa
STM STEP (step)	During driving	-20 step - 190 step
ISOLT1 (A)	Lock-up "OFF"	0.0A
	Lock-up "ON"	0.7A
ISOLT2 (A)	Line pressure low - Line pressure high	0.8 - 0.0A
ISOLT3 (A)	Secondary pressure low - Secondary pressure high	0.8 - 0.0A
SOLMON1 (A)	Lock-up "OFF"	0.0A
	Lock-up "ON"	0.6 - 0.7A
SOLMON2 (A)	"N" position idle	0.8A
	When stalled	0.3 - 0.6A

# TROUBLE DIAGNOSIS

Item name	Condition	Display value (Approx.)
SOLMON3 (A)	"N" position idle	0.6 - 0.7A
	When stalled	0.4 - 0.6A
INH SW3M (ON-OFF display)	Selector lever in "D", "S"* , "L"* positions *: Without manual mode.	ON
	Selector lever in "P", "R", "N" positions	OFF
INH SW4 (ON-OFF display)	Selector lever in "R", "D", "S"* positions *: Without manual mode.	ON
	Selector lever in "P", "N", "L"* positions *: Without manual mode.	OFF
INH SW3 (ON-OFF display)	Selector lever in "D", "S"* , "L"* positions *: Without manual mode.	ON
	Selector lever in "P", "R", "N" positions	OFF
INH SW2 (ON-OFF display)	Selector lever in "N", "D", "S"* , "L"* positions *: Without manual mode.	ON
	Selector lever in "P", "R" positions	OFF
INH SW1 (ON-OFF display)	Selector lever in "R", "N", "D", "S"* positions *: Without manual mode.	ON
	Selector lever in "P", "L"* positions *: Without manual mode.	OFF
BRAKESW (ON-OFF display)	Depressed brake pedal	ON
	Released brake pedal	OFF
FULL SW (ON-OFF display)	Fully depressed accelerator pedal	ON
	Released accelerator pedal	OFF
IDLE SW (ON-OFF display)	Released accelerator pedal	ON
	Fully depressed accelerator pedal	OFF
SPORT MODE SW (ON-OFF display)	Selector lever in "S"* , "L"* position *: Without manual mode.	ON
	Selector lever in other position	OFF
DOWNLVR (ON-OFF display)	Select lever: - side	ON
	Other than the above	OFF
UPLVR (ON-OFF display)	Select lever: + side	ON
	Other than the above	OFF
NON MMODE (ON-OFF display)	Manual shift gate position (neutral, +side, -side)	OFF
	Other than the above	ON
MMODE (ON-OFF display)	Manual shift gate position (neutral)	ON
	Other than the above	OFF
INDDRNG (ON-OFF display)	Selector lever in "D" position	ON
	Selector lever in other position	OFF
INDLRNG (ON-OFF display)	Selector lever in "L"* position *: Without manual mode.	ON
	Selector lever in other position	OFF
INDNRNG (ON-OFF display)	Selector lever in "N" position	ON
	Selector lever in other position	OFF
INDRRNG (ON-OFF display)	Selector lever in "R" position	ON
	Selector lever in other position	OFF
INDPRNG (ON-OFF display)	Selector lever in "P" position	ON
	Selector lever in other position	OFF

# TROUBLE DIAGNOSIS

Item name	Condition	Display value (Approx.)
SMCOIL D (ON-OFF display)	During driving	Changes ON ↔ OFF.
SMCOIL C (ON-OFF display)		
SMCOIL B (ON-OFF display)		
SMCOIL A (ON-OFF display)		
LUSEL SOL OUT (ON-OFF display)	"P", "N" positions	ON
	Wait at least for 5 seconds with the selector lever in "R", "D" "S"*, "L"* positions *: Without manual mode.	OFF
STRTR RLY OUT (ON-OFF display)	Selector lever in "P", "N" positions	ON
	Selector lever in other positions	OFF
STRTR RLY MON (ON-OFF display)	Selector lever in "P", "N" positions	ON
	Selector lever in other positions	OFF
VDC ON (ON-OFF display)	VDC operate	ON
	Other conditions	OFF
TCS ON (ON-OFF display)	TCS operate	ON
	Other conditions	OFF
ABS ON (ON-OFF display)	ABS operate	ON
	Other conditions	OFF
RANGE	Selector lever in "N" or "P" position.	N-P
	Selector lever in "R" position.	R
	Selector lever in "D" position.	D
	Selector lever in "S"* position. *: Without manual mode.	S
	Selector lever in "L"* position. *: Without manual mode.	L
M GEAR POS	During driving	1, 2, 3, 4, 5, 6


## CONSULT-II SETTING PROCEDURE

### CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which perform CAN communication.

- For details, refer to the separate "CONSULT-II Operations Manual".


- Turn ignition switch OFF.
- Connect CONSULT-II and CONSULT-II CONVERTER to data link connector, which is located in instrument lower panel on driver side.

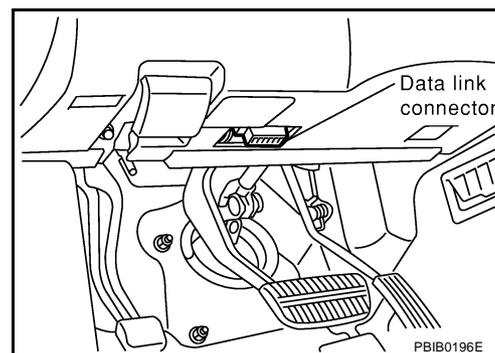


- Turn ignition switch ON. (Do not start engine.)

# TROUBLE DIAGNOSIS

4. Touch "START (NISSAN BASED VHCL)".

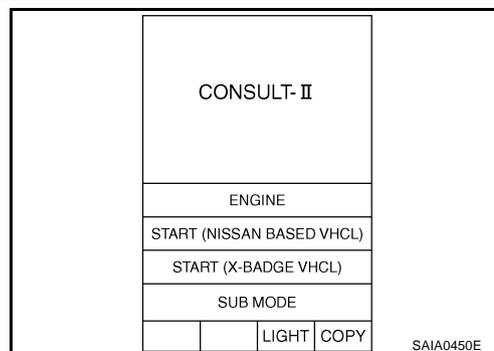

5. Touch "TRANSMISSION".  
 If "TRANSMISSION" is not indicated, go to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#) .
6. Perform each diagnostic test mode according to each service procedure.

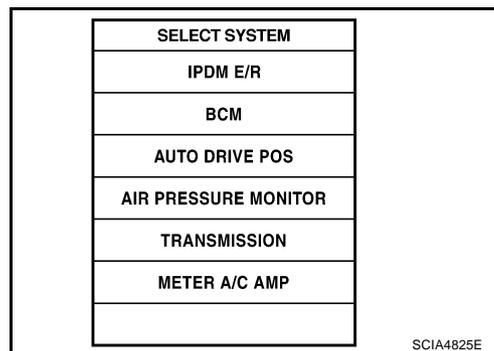


## SELF-DIAGNOSTIC RESULT MODE

After performing self-diagnosis, place check marks for results on the [CVT-34, "DIAGNOSTIC WORKSHEET"](#) . Reference pages are provided following the items.

### Operation Procedure

- Perform "CONSULT-II SETTING PROCEDURE". Refer to [CVT-61, "CONSULT-II SETTING PROCEDURE"](#) .
- Touch "SELF-DIAG RESULTS".  
 Display shows malfunction experienced since the last erasing operation.

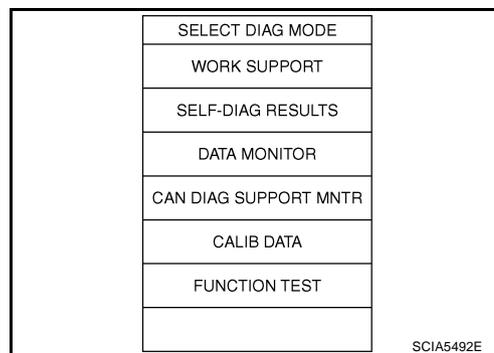

## Display Items List

X: Applicable    —: Not applicable

Items (CONSULT-II screen terms)	Malfunction is detected when...	TCM self-diagnosis	OBD-II (DTC)
		"TRANSMISSION" with CONSULT-II	MIL indicator lamp*1, "ENGINE" with CONSULT-II or GST
CAN COMM CIRCUIT	● When a malfunction is detected in CAN communications	U1000	U1000
STARTER RELAY/ CIRC	● If this signal is ON other than in P or N position, this is judged to be a malfunction. (And if it is OFF in P or N position, this is judged to be a malfunction too.)	P0615	—
BRAKE SW/CIRC	● When the brake switch does not switch to ON or OFF	P0703	—

# TROUBLE DIAGNOSIS

Items (CONSULT-II screen terms)	Malfunction is detected when...	TCM self-diagnosis	OBD-II (DTC)	A B CVT D E F G H I J K L M
		"TRANSMISSION" with CONSULT-II	MIL indicator lamp*1, "ENGINE" with CONSULT-II or GST	
PNP SW/CIRC	<ul style="list-style-type: none"> <li>● PNP switch 1-4 signals input with impossible pattern</li> <li>● PNP switch 3 monitor terminal open or short circuit</li> </ul>	P0705	P0705	
ATF TEMP SEN/CIRC	<ul style="list-style-type: none"> <li>● During running, the CVT fluid temperature sensor signal voltage is excessively high or low</li> </ul>	P0710	P0710	
INPUT SPD SEN/CIRC	<ul style="list-style-type: none"> <li>● Input speed sensor (primary speed sensor) signal is not input due to an open circuit.</li> <li>● An unexpected signal is input when vehicle is being driven.</li> </ul>	P0715	P0715	
VEH SPD SEN/CIR AT	<ul style="list-style-type: none"> <li>● Signal from vehicle speed sensor CVT [Output speed sensor (Secondary speed sensor)] not input due to open or short circuit</li> <li>● Unexpected signal input during running</li> </ul>	P0720	P0720	
ENGINE SPEED SIG	<ul style="list-style-type: none"> <li>● TCM does not receive the CAN communication signal from the ECM.</li> </ul>	P0725	—	
BELT DAMG	<ul style="list-style-type: none"> <li>● Unexpected gear ratio detected</li> </ul>	P0730	—	
TCC SOLENOID/CIRC	<ul style="list-style-type: none"> <li>● Normal voltage not applied to solenoid due to open or short circuit</li> </ul>	P0740	P0740	
A/T TCC S/V FNCTN	<ul style="list-style-type: none"> <li>● CVT cannot perform lock-up even if electrical circuit is good.</li> <li>● TCM detects as irregular by comparing difference value with slip rotation.</li> </ul>	P0744	P0744	
L/PRESS SOL/CIRC	<ul style="list-style-type: none"> <li>● Normal voltage not applied to solenoid due to open or short circuit</li> <li>● TCM detects as irregular by comparing target value with monitor value.</li> </ul>	P0745	P0745	
PRS CNT SOL/A FCTN	<ul style="list-style-type: none"> <li>● Unexpected gear ratio was detected in the LOW side due to excessively low line pressure.</li> </ul>	P0746	P0746	
PRS CNT SOL/B FCTN	<ul style="list-style-type: none"> <li>● Secondary pressure is too high or too low compared with the commanded value while driving.</li> </ul>	P0776	P0776	
PRS CNT SOL/B CIRC	<ul style="list-style-type: none"> <li>● Normal voltage not applied to solenoid due to cut line, short, or the like</li> <li>● TCM detects as irregular by comparing target value with monitor value.</li> </ul>	P0778	P0778	
MANUAL MODE SWITCH	<ul style="list-style-type: none"> <li>● When an impossible pattern of switch signals is detected, a malfunction is detected.</li> </ul>	P0826	—	
TR PRS SENS/A CIRC	<ul style="list-style-type: none"> <li>● Signal voltage of the transmission fluid pressure sensor A (secondary pressure sensor) is too high or too low while driving.</li> </ul>	P0840	P0840	
PRESS SEN/FNCTN	<ul style="list-style-type: none"> <li>● Correlation between the values of the transmission fluid pressure sensor A (secondary pressure sensor) and the transmission fluid pressure sensor B (primary pressure sensor) is out of specification.</li> </ul>	P0841	—	
TR PRS SENS/B CIRC	<ul style="list-style-type: none"> <li>● Signal voltage of the transmission fluid pressure sensor B (primary pressure sensor) is too high or too low while driving.</li> </ul>	P0845	P0845	
SEC/PRESS DOWN	<ul style="list-style-type: none"> <li>● Secondary fluid pressure is too low compared with the commanded value while driving.</li> </ul>	P0868	—	
TCM-POWER SUPPLY	<ul style="list-style-type: none"> <li>● When the power supply to the TCM is cut "OFF", for example because the battery is removed, and the self-diagnostics memory function stops</li> <li>● This is not a malfunction message (Whenever shutting "OFF" a power supply to the TCM, this message appears on the screen.)</li> </ul>	P1701	—	
TP SEN/CIRC A/T	<ul style="list-style-type: none"> <li>● TCM does not receive the proper accelerator pedal position signals (input by CAN communication) from ECM.</li> </ul>	P1705	—	

# TROUBLE DIAGNOSIS

Items (CONSULT-II screen terms)	Malfunction is detected when...	TCM self-diagnosis	OBD-II (DTC)
		"TRANSMISSION" with CONSULT-II	MIL indicator lamp*1, "ENGINE" with CONSULT-II or GST
ESTM VEH SPD SIG	<ul style="list-style-type: none"> <li>CAN communication with the ABS actuator and the electric unit (control unit) is malfunctioning.</li> <li>There is a great difference between the vehicle speed signal from the ABS actuator and the electric unit (control unit), and the vehicle speed sensor signal.</li> </ul>	P1722	—
CVT SPD SEN/ FNCTN	<ul style="list-style-type: none"> <li>A rotation sensor error is detected because the gear does not change in accordance with the position of the stepping motor.</li> </ul> <p><b>CAUTION:</b> One of the secondary rotation, the primary rotation, or the engine speed is displayed at the same time.</p>	P1723	—
ELEC TH CONTROL	<ul style="list-style-type: none"> <li>The electronically controlled throttle for ECM is malfunctioning.</li> </ul>	P1726	—
LU-SLCT SOL/CIRC	<ul style="list-style-type: none"> <li>Normal voltage not applied to solenoid due to cut line, short, or the like</li> <li>TCM detects as irregular by comparing target value with monitor value.</li> </ul>	P1740	P1740
L/PRESS CONTROL	<ul style="list-style-type: none"> <li>TCM detects the unexpected line pressure.</li> </ul>	P1745	—
STEP MOTR CIRC	<ul style="list-style-type: none"> <li>Each coil of the step motor is not energized properly due to an open or a short.</li> </ul>	P1777	P1777
STEP MOTR/FNC	<ul style="list-style-type: none"> <li>There is a great difference between the number of steps for the stepping motor and for the actual gear ratio.</li> </ul>	P1778	P1778
NO DTC IS DETECTED: FURTHER TESTING MAY BE REQUIRED	<ul style="list-style-type: none"> <li>No NG item has been detected.</li> </ul>	X	X

\*1: Refer to [CVT-30, "Malfunction Indicator Lamp \(MIL\)"](#) .

## DATA MONITOR MODE

### Operation Procedure

- Perform "CONSULT-II SETTING PROCEDURE". Refer to [CVT-61, "CONSULT-II SETTING PROCEDURE"](#) .
- Touch "DATA MONITOR".

**NOTE:**

**When malfunction is detected, CONSULT-II performs "REAL-TIME DIAGNOSIS". Also, any malfunction detected while in this mode will be displayed at real time.**

SELECT DIAG MODE
WORK SUPPORT
SELF-DIAG RESULTS
DATA MONITOR
CAN DIAG SUPPORT MNTR
CALIB DATA
FUNCTION TEST

SCIA5492E

# TROUBLE DIAGNOSIS

## Display Items List

X: Standard, —: Not applicable

Monitored item (Unit)	Monitor item selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
VSP SENSOR (km/h)	X	—	X	Output speed sensor (secondary speed sensor).
ESTM VSP SIG (km/h)	X	—	X	
PRI SPEED SEN (rpm)	X	—	X	
ENG SPEED SIG (rpm)	X	—	X	
SEC HYDR SEN (V)	X	—	X	
PRI HYDR SEN (V)	X	—	X	
ATF TEMP SEN (V)	X	—	X	CVT fluid temperature sensor
VIGN SEN (V)	X	—	X	
VEHICLE SPEED (km/h)	—	X	X	Vehicle speed recognized by the TCM.
PRI SPEED (rpm)	—	X	X	Primary pulley speed.
SEC SPEED (rpm)	—	—	X	Secondary pulley speed.
ENG SPEED (rpm)	—	X	X	
SLIP REV (rpm)	—	X	X	Difference between engine speed and primary pulley speed
GEAR RATIO	—	X	X	
G SPEED (G)	—	—	X	
ACC PEDAL OPEN (0.0/8)	X	X	X	Degree of opening for accelerator recognized by the TCM For fail-safe operation, the specific value used for control is displayed.
ENG TRQ ACT (N·m)	—	—	X	
VENG TRQ (N·m)	—	X	X	
PRI TRQ (N·m)	—	—	X	
TRQ RTO	—	—	X	
SEC PRESS (MPa)	—	X	X	
PRI PRESS (MPa)	—	X	X	
ATF TEMP	—	X	X	
DSR REV (rpm)	—	—	X	
DGEAR RATIO	—	—	X	
DSTM STEP (step)	—	—	X	
STM STEP (step)	—	X	X	
LU PRS (MPa)	—	—	X	
LINE PRS (MPa)	—	—	X	
SEC PRS (MPa)	—	—	X	
ISOLT1 (A)	—	X	X	Torque converter clutch solenoid valve output current
ISOLT2 (A)	—	X	X	Pressure control solenoid valve A (line pressure solenoid valve) output current
ISOLT3 (A)	—	X	X	Pressure control solenoid valve B (secondary pressure solenoid valve) output current
SOLMON1 (A)	X	X	X	Torque converter clutch solenoid valve monitor current

# TROUBLE DIAGNOSIS


Monitored item (Unit)	Monitor item selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
SOLMON2 (A)	X	X	X	Pressure control solenoid valve A (line pressure solenoid valve) monitor current
SOLMON3 (A)	X	X	X	Pressure control solenoid valve B (secondary pressure solenoid valve) monitor current
INH SW3M (ON-OFF display)	X	—	X	PNP switch 3 ON-OFF status monitor
INH SW4 (ON-OFF display)	X	—	X	PNP switch 4 ON-OFF status
INH SW3 (ON-OFF display)	X	—	X	PNP switch 3 ON-OFF status
INH SW2 (ON-OFF display)	X	—	X	PNP switch 2 ON-OFF status
INH SW1 (ON-OFF display)	X	—	X	PNP switch 1 ON-OFF status
BRAKESW (ON-OFF display)	X	X	X	Stop lamp switch
FULL SW (ON-OFF display)	X	X	X	Signal input with CAN communications
IDLE SW (ON-OFF display)	X	X	X	
SECOND POS SW (ON-OFF display)	X	X	X	
STRDWSW (ON-OFF display)	X	—	X	Not mounted but displayed.
STRUPSW (ON-OFF display)	X	—	X	
DOWNLVR (ON-OFF display)	X	—	X	
UPLVR (ON-OFF display)	X	—	X	
NONMMODE (ON-OFF display)	X	—	X	
MMODE (ON-OFF display)	X	—	X	
INDLRNG (ON-OFF display)	—	—	X	"L" position indicator output
INDDRNG (ON-OFF display)	—	—	X	"D" position indicator output
INDNRNG (ON-OFF display)	—	—	X	"N" position indicator output
INDRRNG (ON-OFF display)	—	—	X	"R" position indicator output
INDPRNG (ON-OFF display)	—	—	X	"P" position indicator output
CVTLAMP (ON-OFF display)	—	—	X	
SECOND POS IND (ON-OFF display)	—	—	X	
MMODE IND (ON-OFF display)	—	—	X	
SMCOIL D (ON-OFF display)	—	—	X	Step motor coil "D" energizing status
SMCOIL C (ON-OFF display)	—	—	X	Step motor coil "C" energizing status
SMCOIL B (ON-OFF display)	—	—	X	Step motor coil "B" energizing status
SMCOIL A (ON-OFF display)	—	—	X	Step motor coil "A" energizing status
LUSEL SOL OUT (ON-OFF display)	—	—	X	
REV LAMP (ON-OFF display)	—	X	X	
STRTR RLY OUT (ON-OFF display)	—	—	X	PNP relay
LU SEL SOL MON (ON-OFF display)	—	—	X	
STRTR RLY MON (ON-OFF display)	—	—	X	PNP relay
VDC ON (ON-OFF display)	X	—	X	
TCS ON (ON-OFF display)	X	—	X	
ABS ON (ON-OFF display)	X	—	X	
ACC ON (ON-OFF display)	X	—	X	Not mounted but displayed.
RANGE	—	X	X	Indicates position is recognized by TCM. Indicates a specific value required for control when fail-safe function is activated.

# TROUBLE DIAGNOSIS


Monitored item (Unit)	Monitor item selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
M GEAR POS	—	X	X	
Voltage (V)	—	—	X	Displays the value measured by the voltage probe.
Frequency (Hz)	—	—	X	The value measured by the pulse probe is displayed.
DUTY-HI (high) (%)	—	—	X	
DUTY-LOW (low) (%)	—	—	X	
PLS WIDTH-HI (ms)	—	—	X	
PLS WIDTH-LOW (ms)	—	—	X	

## HOW TO ERASE SELF-DIAGNOSTIC RESULTS

1. Perform "CONSULT-II SETTING PROCEDURE". Refer to [CVT-61, "CONSULT-II SETTING PROCEDURE"](#).
2. Touch "SELF-DIAG RESULTS".

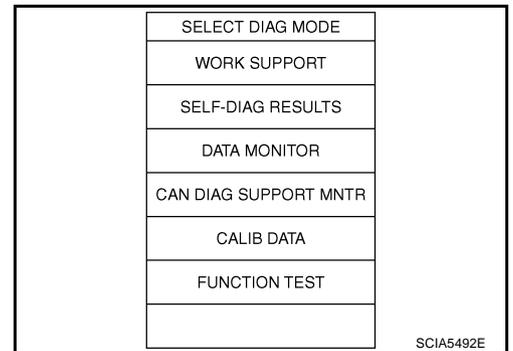

3. Touch "ERASE". (The self-diagnostic results will be erased.)

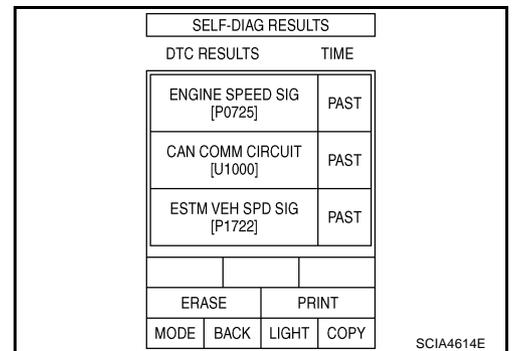

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M





# TROUBLE DIAGNOSIS

---

## **Diagnostic Procedure Without CONSULT-II** **OBD-II SELF-DIAGNOSTIC PROCEDURE (WITH GST)**

ACS007X5

Refer to [EC-118, "Generic Scan Tool \(GST\) Function"](#) .

# DTC U1000 CAN COMMUNICATION LINE

## DTC U1000 CAN COMMUNICATION LINE

PFP:23710

### Description

ACS001TF

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

### On Board Diagnosis Logic

ACS001TG

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "CAN COMM CIRCUIT" with CONSULT-II or U1000 without CONSULT-II is detected when TCM cannot communicate to other control units.

### Possible Cause

ACS001TH

Harness or connectors  
(CAN communication line is open or shorted.)

### DTC Confirmation Procedure

ACS001TI

#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

#### Ⓟ WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine and wait for at least 6 seconds.
4. If DTC is detected, go to [CVT-73, "Diagnostic Procedure"](#).

SELECT SYSTEM
IPDM E/R
BCM
AUTO DRIVE POS
AIR PRESSURE MONITOR
TRANSMISSION
METER A/C AMP

SCIA4825E

#### Ⓢ WITH GST

Follow the procedure "WITH CONSULT-II".



# DTC U1000 CAN COMMUNICATION LINE

## Wiring Diagram — CVT — CAN

ACS001TJ

### CVT-CAN-01

-  : DETECTABLE LINE FOR DTC
-  : NON-DETECTABLE LINE FOR DTC
-  : DATA LINE

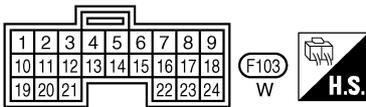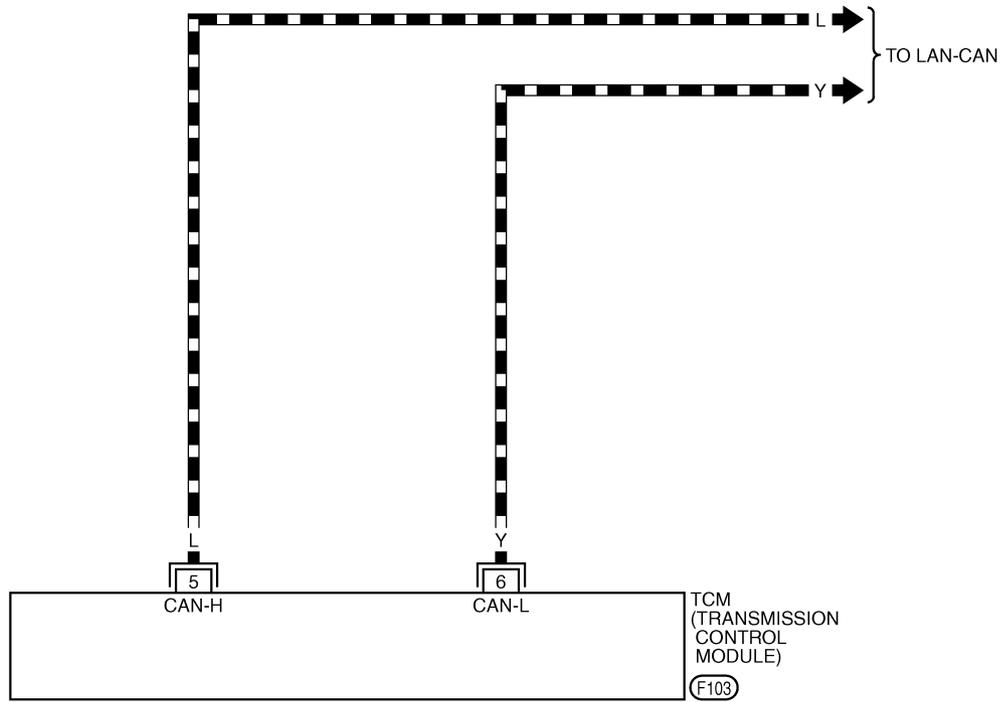

TCWA0147E

# DTC U1000 CAN COMMUNICATION LINE

TCM terminal and data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)
5	L	CAN H	-	-
6	Y	CAN L	-	-

## Diagnostic Procedure

ACS001TK

### 1. CHECK CAN COMMUNICATION CIRCUIT

CVT


#### ④ With CONSULT-II

1. Turn ignition switch "ON" and start engine.
2. Select "SELF-DIAG RESULTS" mode for "TRANSMISSION" with CONSULT-II.

Is any malfunction of the "CAN COMM CIRCUIT" indicated?

YES >> Print out CONSULT-II screen, GO TO LAN section.  
Refer to [LAN-6, "Precautions When Using CONSULT-II"](#)

NO >> **INSPECTION END**

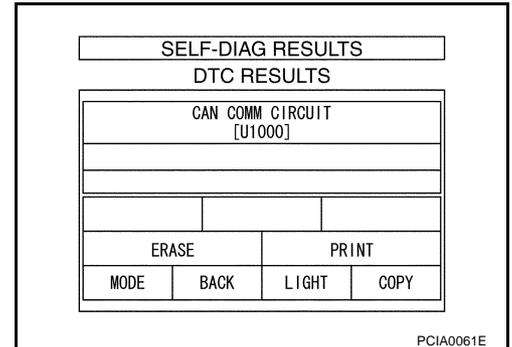

D

E

F

G

H

I

J

K

L

M

# DTC P0615 START SIGNAL CIRCUIT

## DTC P0615 START SIGNAL CIRCUIT

PFP:25230

### Description

ACS001TL

- TCM controls park/neutral (PNP) relay (starter relay) in IPDM E/R.
- TCM switches PNP relay "ON" at "P" or "N" position and allows to crank engine.
- Then it prohibits cranking other than at "P" or "N" position.

### CONSULT-II Reference Value

ACS004Q6

Remarks: Specification data are reference values.

Item name	Condition	Display value
STRTR RLY OUT	Selector lever in "P", "N" positions	ON
	Selector lever in other positions	OFF
STRTR RLY MON	Selector lever in "P", "N" positions	ON
	Selector lever in other positions	OFF

### On Board Diagnosis Logic

ACS001TM

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "STARTER RELAY/CIRC" with CONSULT-II is detected when starter relay switched "ON" other than at "P" or "N" position. (Or when switched "OFF" at "P" or "N" position).

### Possible Cause

ACS001TN

- Harness or connectors  
(Starter relay and TCM circuit is open or shorted.)
- Starter relay

### DTC Confirmation Procedure

ACS001TO


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine.
4. Drive vehicle for at least 2 consecutive seconds.
5. If DTC is detected, go to [CVT-76, "Diagnostic Procedure"](#).

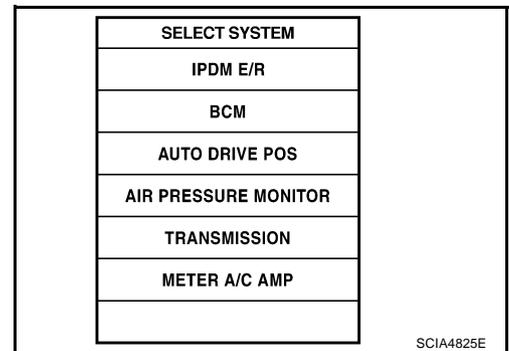




# DTC P0615 START SIGNAL CIRCUIT

## Wiring Diagram — CVT — STSIG




ACS001TP

### CVT-STSIG-01

**—** : DETECTABLE LINE FOR DTC  
**—** : NON-DETECTABLE LINE FOR DTC

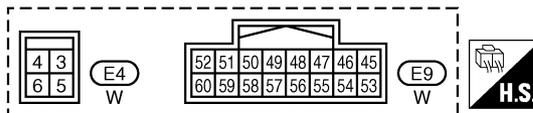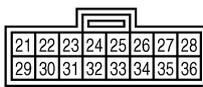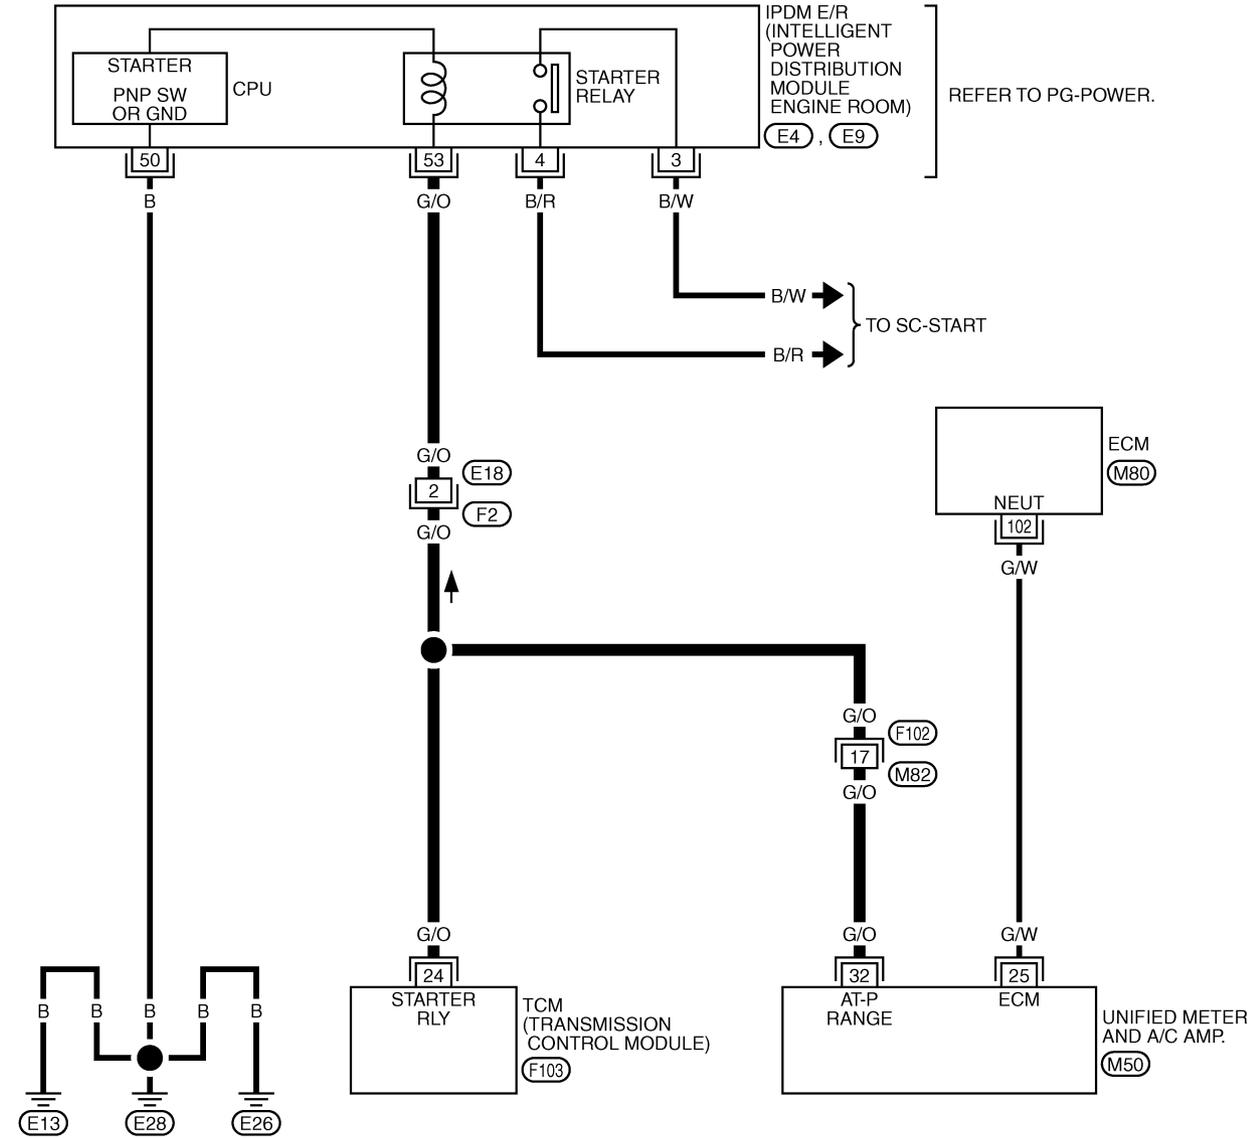

REFER TO THE FOLLOWING.  
 (M80) -ELECTRICAL UNITS

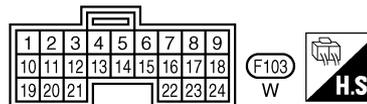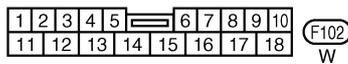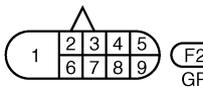

TCWA0245E

# DTC P0615 START SIGNAL CIRCUIT

TCM terminal and data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)
24	G/O	PNP relay (Starter relay)	 Selector lever in "N", "P" positions.	Battery voltage
			Selector lever in other positions.	0V


## Diagnostic Procedure

ACS0017Q

### 1. CHECK STARTER RELAY

#### Ⓟ With CONSULT-II

- Turn ignition switch ON. (Do not start engine.)
- Select "SELECTION FROM MENU" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II and check monitor "STRTR RLY OUT", "STRTR RLY MON"(PNP relay) ON/OFF.

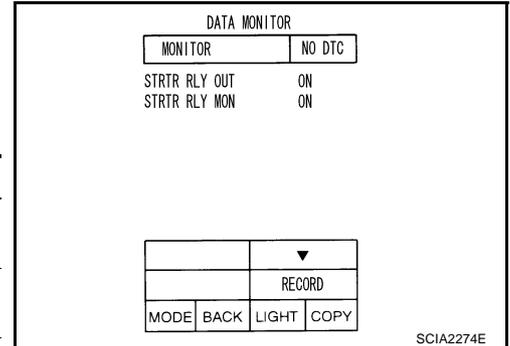


SCIA2274E

Item name	Condition	Display value
STRTR RLY OUT	Selector lever in "P", "N" positions	ON
	Selector lever in other positions	OFF
STRTR RLY MON	Selector lever in "P", "N" positions	ON
	Selector lever in other positions	OFF

#### ⊗ Without CONSULT-II

- Turn ignition switch ON. (Do not start engine.)
- Check voltage between the TCM connector terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)
24	G/O	PNP relay (Starter relay)	 Selector lever in "N", "P" positions.	Battery voltage
			Selector lever in other positions.	0V

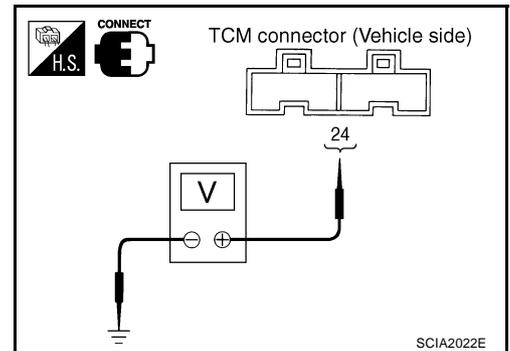

SCIA2022E

#### OK or NG

- OK >> GO TO 3.  
 NG >> GO TO 2.

### 2. DETECT MALFUNCTIONING ITEM

Check the following:

- PNP relay (starter relay). Refer to [PG-67, "STANDARDIZED RELAY"](#) .
- Open or short-circuits in the harness between TCM and the PNP relay. Refer to [CVT-75, "Wiring Diagram — CVT — STSIG"](#) .
- Ground circuit for the PNP relay (starter relay). Refer to [SC-10, "Wiring Diagram — START —"](#) .

#### OK or NG

- OK >> GO TO 3.  
 NG >> Repair or replace damaged parts.

# DTC P0615 START SIGNAL CIRCUIT

---

## 3. CHECK DTC

---

Perform "DTC Confirmation Procedure". Refer to [CVT-74, "DTC Confirmation Procedure"](#) .

OK or NG

OK >> **INSPECTION END**  
NG >> GO TO 4.

---

## 4. CHECK TCM

---

1. Check TCM input/output signal. Refer to [CVT-56, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**  
NG >> Repair or replace damaged parts.

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# DTC P0703 STOP LAMP SWITCH CIRCUIT

## DTC P0703 STOP LAMP SWITCH CIRCUIT

PFP:25320

### Description

ACS002SJ

“ON”, “OFF” status of the stop lamp switch is sent via the CAN communication from the unified meter and the A/C amp to TCM using the signal.

### CONSULT-II Reference Value

ACS004Y3

Remarks: Specification data are reference values.

Item name	Condition	Display value
BRAKESW	Depressed brake pedal	ON
	Released brake pedal	OFF

### On Board Diagnosis Logic

ACS002SK

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code “BRAKE SW/CIRC” with CONSULT-II is detected when the stop lamp switch does not switch to “ON” and “OFF”.
  - The stop lamp switch does not switch to “ON”, “OFF”.

### Possible Cause

ACS002SL

- Harness or connectors  
(Stop lamp switch and unified meter and A/C amp circuit is open or shorted.)  
(CAN communication line is open or shorted.)
- Stop lamp switch

### DTC Confirmation Procedure

ACS002SM


#### NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch “ERASE” on “SELF-DIAG RESULTS” and then perform the following procedure to confirm the malfunction is eliminated.

#### ④ WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select “DATA MONITOR” mode for “TRANSMISSION” with CONSULT-II.
3. Start engine.
4. Start vehicle for at least 3 consecutive seconds.
5. If DTC is detected, go to [CVT-79, "Diagnostic Procedure"](#).

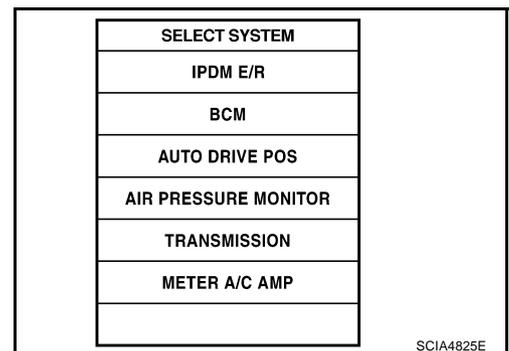

# DTC P0703 STOP LAMP SWITCH CIRCUIT

ACS002IT

## Diagnostic Procedure

### 1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Refer to [CVT-62, "SELF-DIAGNOSTIC RESULT MODE"](#).

Is any malfunction of the "CAN COMM CIRCUIT" indicated?

- YES >> Check CAN communication line. Refer to [CVT-71, "DTC U1000 CAN COMMUNICATION LINE"](#).  
 NO >> GO TO 2.

### 2. CHECK STOP LAMP SWITCH CIRCUIT

With CONSULT-II

- Turn ignition switch ON. (Do not start engine.)
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Read out ON/OFF switching action of the "BRAKE SW".

Item name	Condition	Display value
BRAKESW	Depressed brake pedal	ON
	Released brake pedal	OFF

DATA MONITOR	
MONITOR	NO DTC
INH SW 4	OFF
INH SW 3	OFF
INH SW 2	OFF
INH SW 1	OFF
BRAKE SW	OFF
▽	
RECORD	
MODE	BACK
LIGHT	COPY

SCIA2275E

OK or NG

- OK >> **INSPECTION END**  
 NG >> GO TO 3.

### 3. CHECK STOP LAMP SWITCH

Check continuity between stop lamp switch harness connector E116 terminals 1 and 2. Refer to [CVT-182, "Wiring Diagram — CVT — NONDTC"](#).

Stop lamp switch harness connector

Condition	Continuity
When brake pedal is depressed	Yes
When brake pedal is released	No

SCIA3700E

Check stop lamp switch after adjusting brake pedal — refer to [BR-6, "BRAKE PEDAL"](#).

OK or NG

- OK >> Check the following. If NG, Repair or Replace Damaged Parts.
- Harness for short or open between battery and stop lamp switch.
  - Harness for short or open between stop lamp switch and unified meter and A/C amp.
- NG >> Repair or replace the stop lamp switch.

# DTC P0705 PARK/NEUTRAL POSITION SWITCH

## DTC P0705 PARK/NEUTRAL POSITION SWITCH

PFP:32006

### Description

ACS001TR

- The park/neutral position (PNP) switch includes 4 transmission position switches.
- TCM judges the selector lever position by the PNP switch signal.

Shift position	PNP switch 1	PNP switch 2	PNP switch 3	PNP switch 4	PNP switch 3 (monitor)
P	OFF	OFF	OFF	OFF	OFF
R	ON	OFF	OFF	ON	OFF
N	ON	ON	OFF	OFF	OFF
D · S*	ON	ON	ON	ON	ON
L*	OFF	ON	ON	OFF	ON

\*: Without manual mode

### CONSULT-II Reference Value

ACS004Y4

Remarks: Specification data are reference values.

Item name	Condition	Display value
INH SW3M	Selector lever in "D", "S"*, "L"* positions	ON
	Selector lever in "P", "R", "N" positions	OFF
INH SW4	Selector lever in "R", "D", "S"* positions	ON
	Selector lever in "P", "N", "L"* positions	OFF
INH SW3	Selector lever in "D", "S"*, "L"* positions	ON
	Selector lever in "P", "R", "N" positions	OFF
INH SW2	Selector lever in "N", "D", "S"*, "L"* positions	ON
	Selector lever in "P", "R" positions	OFF
INH SW1	Selector lever in "R", "N", "D", "S"* positions	ON
	Selector lever in "P", "L"* positions	OFF

\*: Without manual mode

### On Board Diagnosis Logic

ACS001TS

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "PNP SW/CIRC" with CONSULT-II or P0705 without CONSULT-II is detected under the following conditions.
  - When TCM does not receive the correct voltage signal from the PNP switches 1, 2, 3 and 4 based on the gear position.
  - When the signal from monitor terminal of PNP switch 3 is different from PNP switch 3.

### Possible Cause

ACS001TT

- Harness or connectors  
[Park/neutral position (PNP) switches 1, 2, 3, 4 and TCM circuit is open or shorted.]
- Park/neutral position (PNP) switches 1, 2, 3, 4
- Park/neutral position (PNP) switch 3 monitor terminal is open or shorted

### DTC Confirmation Procedure

ACS001TU

#### CAUTION:

**Always drive vehicle at a safe speed.**

#### NOTE:

**If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.**

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

# DTC P0705 PARK/NEUTRAL POSITION SWITCH

## WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 2 consecutive seconds.  
**VHCL SPEED SE: More than 10 km/h (6 MPH)**  
**ENG SPEED SIG: More than 450 rpm**  
**ACC PEDAL OPEN: More than 1/8**
5. If DTC is detected, go to [CVT-84, "Diagnostic Procedure"](#) .

SELECT SYSTEM
ENGINE
ABS
AIR BAG
ALL MODE AWD/4WD
IPDM E/R
BCM

SCIA4823E

## WITH GST

Follow the procedure "WITH CONSULT-II".

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M




# DTC P0705 PARK/NEUTRAL POSITION SWITCH

## Wiring Diagram — CVT — PNP/SW

ACS001TV

### CVT-PNP/SW-01

: DETECTABLE LINE FOR DTC  
 : NON-DETECTABLE LINE FOR DTC

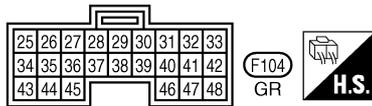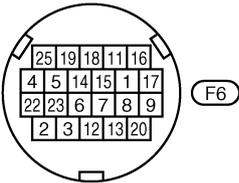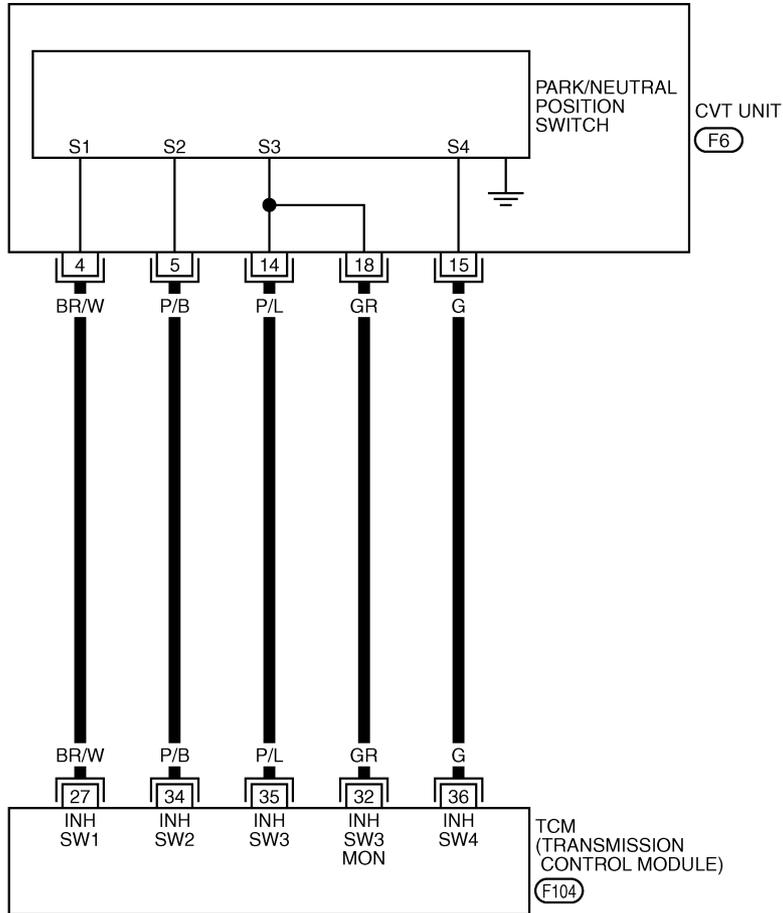

TCWA0246E

## DTC P0705 PARK/NEUTRAL POSITION SWITCH

TCM terminals and data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)
27	BR/W	PNP switch 1	Selector lever in "P", "L"* positions.	Battery voltage
			Selector lever in other positions.	0V
34	P/B	PNP switch 2	Selector lever in "P", "R" positions.	10.0V - Battery voltage
			Selector lever in other positions.	0V
35	P/L	PNP switch 3	Selector lever in "P", "R", "N" positions.	8.0V - Battery voltage
			Selector lever in other positions.	0V
36	G	PNP switch 4	Selector lever in "P", "N", "L"* positions.	10.0V - Battery voltage
			Selector lever in other positions.	0V
32	GR	PNP switch 3 (monitor)	Selector lever in "P", "R", "N" positions.	8.0V - Battery voltage
			Selector lever in other positions.	0V



\*: Without manual mode

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# DTC P0705 PARK/NEUTRAL POSITION SWITCH

ACS001TW

## Diagnostic Procedure

### 1. CHECK PNP SW CIRCUIT


#### With CONSULT-II

- Turn ignition switch ON. (Do not start engine.)
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Selector lever to "P", "R", "N", "D", "S"\* and "L"\* position to check the value of "INH SW1", "INH SW2", "INH SW3", "INH SW4" and "INH SW3M".

\*: Without manual mode

Shift position	"INH SW1"	"INH SW2"	"INH SW3"	"INH SW4"	"INH SW3M"
P	OFF	OFF	OFF	OFF	OFF
R	ON	OFF	OFF	ON	OFF
N	ON	ON	OFF	OFF	OFF
D · S*	ON	ON	ON	ON	ON
L*	OFF	ON	ON	OFF	ON

\*: Without manual mode

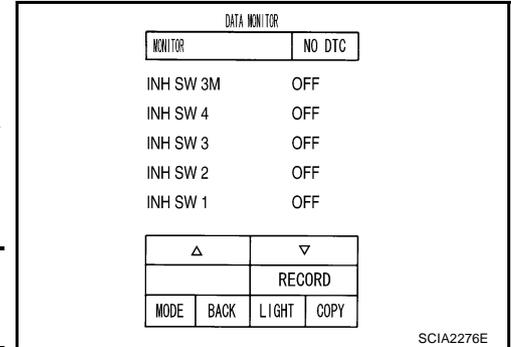


#### Without CONSULT-II

- Turn ignition switch ON. (Do not start engine.)
- Change selector lever to "P", "R", "N", "D", "S"\* or "L"\* position to check voltage between the TCM connector terminals and ground.

\*: Without manual mode

Shift position	Connector		F104		
	Terminal (Wire color)				
	27 (BR/W) - Ground	34 (P/B) - Ground	35 (P/L) - Ground	36 (G) - Ground	32 (GR) - Ground
P	Battery voltage	10.0V - Battery voltage	8.0V - Battery voltage	10.0V - Battery voltage	8.0V - Battery voltage
R	0V	10.0V - Battery voltage	8.0V - Battery voltage	0V	8.0V - Battery voltage
N	0V	0V	8.0V - Battery voltage	10.0V - Battery voltage	8.0V - Battery voltage
D · S*	0V	0V	0V	0V	0V
L*	Battery voltage	0V	0V	10.0V - Battery voltage	0V

\*: Without manual mode

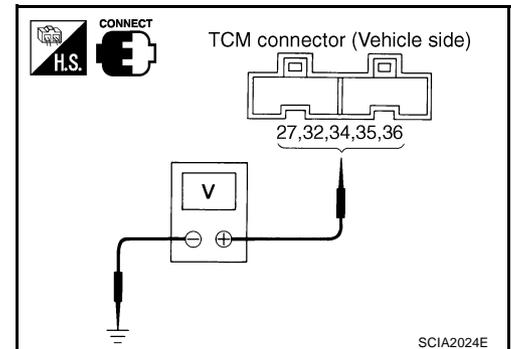

#### OK or NG

- OK >> GO TO 5.  
 NG >> GO TO 2.

# DTC P0705 PARK/NEUTRAL POSITION SWITCH

## 2. CHECK HARNESS BETWEEN TCM AND PNP SWITCH

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM connector terminals and ground.


Connector	Terminal (Wire color)	Condition	Continuity
F104	27 (BR/W) - ground	Select lever in "P", "L"* positions.	No
		Select lever in other positions.	Yes
	34 (P/B) - ground	Select lever in "P", "R" positions.	No
		Select lever in other positions.	Yes
	35 (P/L) - ground	Select lever in "P", "R", "N" positions.	No
		Select lever in other positions.	Yes
	36 (G) - ground	Select lever in "P", "N", "L"* positions.	No
		Select lever in other positions.	Yes
	32 (GR) - ground	Select lever in "P", "R", "N" positions.	No
		Select lever in other positions.	Yes

\*: Without manual mode

4. If OK, check harness for short-circuit to ground or power supply.

OK or NG

- OK >> GO TO 5.  
 NG >> GO TO 3.

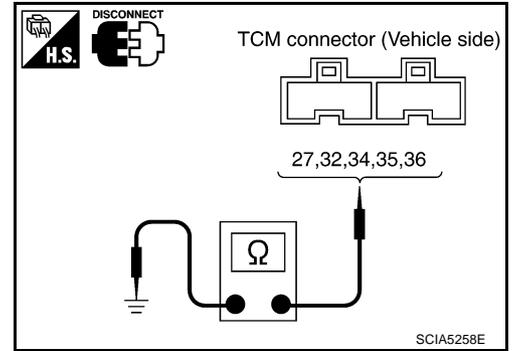


A  
 B  
 CVT  
 D  
 E  
 F  
 G  
 H  
 I  
 J  
 K  
 L  
 M

# DTC P0705 PARK/NEUTRAL POSITION SWITCH

## 3. CHECK HARNESS BETWEEN TCM AND PNP SWITCH

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit harness connector.
3. Check continuity between TCM connector terminal and CVT unit harness connector terminal.

Item	Connector	Terminal (Wire color)	Continuity
TCM	F104	27 (BR/W)	Yes
CVT unit harness connector	F6	4 (BR/W)	
TCM	F104	34 (P/B)	Yes
CVT unit harness connector	F6	5 (P/B)	
TCM	F104	35 (P/L)	Yes
CVT unit harness connector	F6	14 (P/L)	
TCM	F104	32 (GR)	Yes
CVT unit harness connector	F6	18 (GR)	
TCM	F104	36 (G)	Yes
CVT unit harness connector	F6	15 (G)	

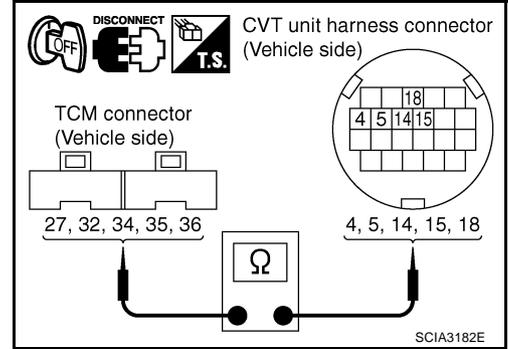

4. If OK, check harness for short to ground and short power.
5. Reinstall any part removed.

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace damaged parts.

## 4. DETECT MALFUNCTIONING ITEM

Check the following items.

- PNP switch. Refer to [CVT-87, "Component Inspection"](#).

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

## 5. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [CVT-80, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 6.

## 6. CHECK TCM

1. Check TCM input/output signal. Refer to [CVT-56, "TCM Input/Output Signal Reference Values"](#).
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> 1. Repair or replace damaged parts.
- 2. Replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#).

# DTC P0705 PARK/NEUTRAL POSITION SWITCH

ACS001TX


## Component Inspection PNP SWITCH

1. Change selector lever to various positions to check the continuity between terminals on the PNP switch and ground.

PNP SW	Shift position	Connector	Terminal	Continuity
SW 1	"R", "N", "D", "S"*	F6	4 - Ground	Yes
	other positions.			No
SW 2	"N", "D", "S"*, "L"*		5 - Ground	Yes
	other positions.			No
SW 3	"D", "S"*, "L"*		14 - Ground	Yes
	other positions.			No
SW 4	"R", "D", "S"*		15 - Ground	Yes
	other positions.			No
SW 3 Monitor	"D", "S"*, "L"*		18 - Ground	Yes
	other positions.			No

\*: Without manual mode

2. If NG, check continuity with control cable disconnected. (Refer to step 1 above.)
3. If OK, with the control cable disconnected, adjust the control linkage. Refer to [CVT-209, "Adjustment of CVT Position"](#) .
4. If NG, even when the control cable is disconnected, replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#) .

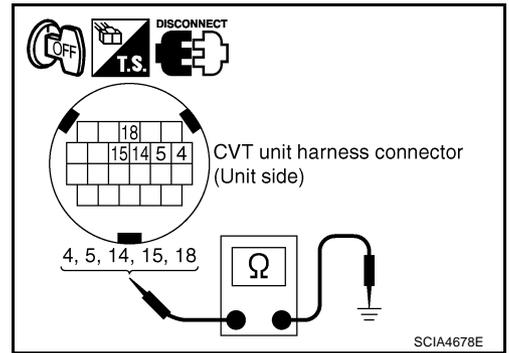

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# DTC P0710 CVT FLUID TEMPERATURE SENSOR CIRCUIT

## DTC P0710 CVT FLUID TEMPERATURE SENSOR CIRCUIT

PFP:31020

### Description

ACS002SN

The CVT fluid temperature sensor detects the CVT fluid temperature and sends a signal to the TCM.

### CONSULT-II Reference Value

ACS002SO

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
ATF TEMP SEN	Cold [20°C (68°F)]	1.8 - 2.0V
	Hot [80°C (176°F)]	0.6 - 1.0V

### On Board Diagnosis Logic

ACS002SP

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "ATF TEMP SEN/CIRC" with CONSULT-II or P0710 without CONSULT-II is detected when TCM receives an excessively low or high voltage from the sensor.

### Possible Cause

ACS002SQ

- Harness or connectors  
(Sensor circuit is open or shorted.)
- CVT fluid temperature sensors

### DTC Confirmation Procedure

ACS002SR

#### CAUTION:

Always drive vehicle at a safe speed.


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
3. Start engine and maintain the following conditions for at least 10 minutes (Total). (It is not necessary to maintain continuously.)  
**VHCL SPEED SE: 10 km/h (6 MPH) or more**  
**ENG SPEED: 450 rpm more than**  
**ACC PEDAL OPEN: More than 1/8**  
**Selector lever: "D" position**
4. If DTC is detected, go to [CVT-90, "Diagnostic Procedure"](#).

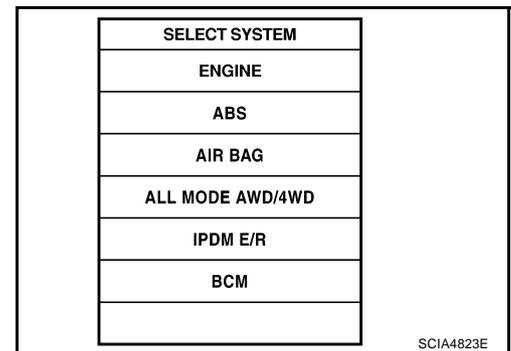

#### WITH GST

Follow the procedure "WITH CONSULT-II".




# DTC P0710 CVT FLUID TEMPERATURE SENSOR CIRCUIT

## Wiring Diagram — CVT — FTS

ACS0020Q

CVT-FTS-01

: DETECTABLE LINE FOR DTC  
 : NON-DETECTABLE LINE FOR DTC

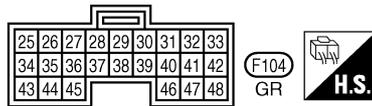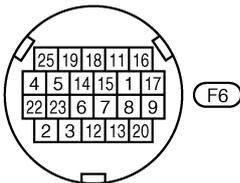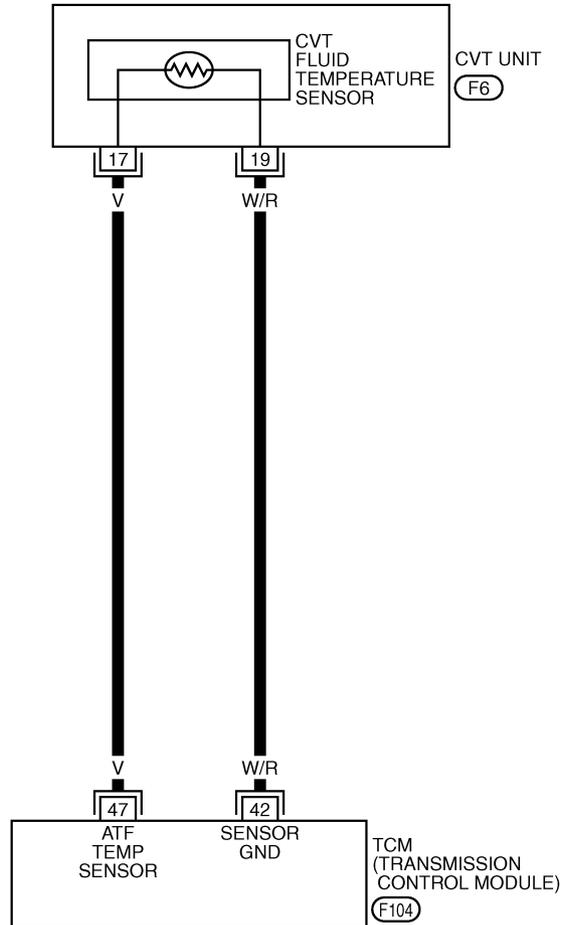

TCWA0247E

# DTC P0710 CVT FLUID TEMPERATURE SENSOR CIRCUIT

TCM terminals and data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)
42	W/R	Sensor ground	Always	0V
47	V	CVT fluid temperature sensor	When CVT fluid temperature is 20°C (68°F).	2.0V
			When CVT fluid temperature is 80°C (176°F).	1.0V

## Diagnostic Procedure


ACS002SS

### 1. CHECK CVT FLUID TEMPERATURE SENSOR SIGNAL

#### With CONSULT-II

- Start engine.
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Read out the value of "ATF TEMP SEN".

Item name	Condition	Display value (Approx.)
ATF TEMP SEN	Cold [20°C (68°F)]	1.8 - 2.0V
	Hot [80°C (176°F)]	0.6 - 1.0V

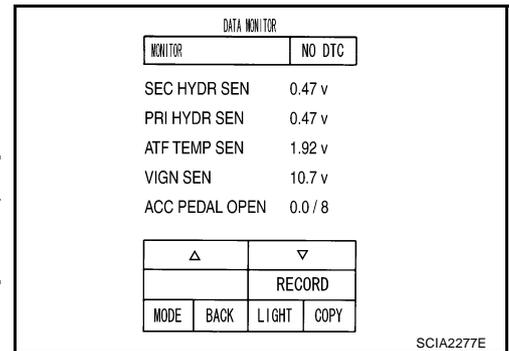

#### Without CONSULT-II


- Start engine.
- Check voltage between TCM connector terminals.

Name	Connector	Terminal (Wire color)	Temperature °C (°F)	Voltage (Approx.)
CVT fluid temperature sensor	F104	47 (V) - 42 (W/R)	20 (68)	2.0V
			80 (176)	1.0V

- Turn ignition switch OFF.
- Disconnect TCM connector.
- Check if there is continuity between connector terminal and ground.

#### OK or NG

- OK >> GO TO 5.  
NG >> GO TO 2.

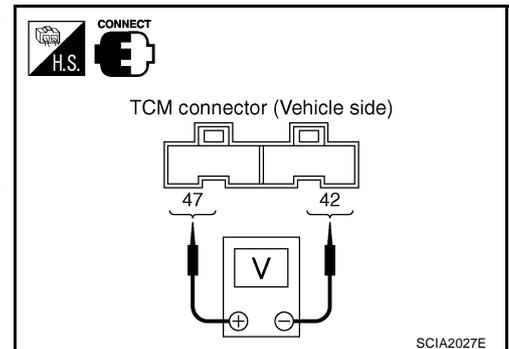


### 2. CHECK CVT FLUID TEMPERATURE SENSOR CIRCUIT

- Turn ignition switch OFF.
- Disconnect the TCM connector.
- Check resistance between TCM connector terminals.

Name	Connector	Terminal (Wire color)	Temperature °C (°F)	Resistance (Approx.)
CVT fluid temperature sensor	F104	47 (V) - 42 (W/R)	20 (68)	6.5 kΩ
			80 (176)	0.9 kΩ

#### OK or NG

- OK >> GO TO 5.  
NG >> GO TO 3.

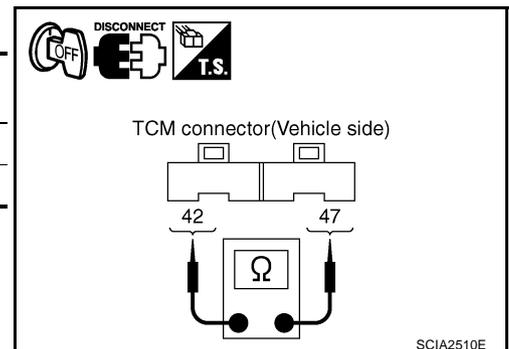


# DTC P0710 CVT FLUID TEMPERATURE SENSOR CIRCUIT

## 3. CHECK CVT FLUID TEMPERATURE SENSOR

1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector.
3. Check resistance between CVT unit harness connector terminals.

Name	Connector	Terminal	Temperature °C (°F)	Resistance (Approx.)
CVT fluid temperature sensor	F6	17 - 19	20 (68)	6.5 kΩ
			80 (176)	0.9 kΩ

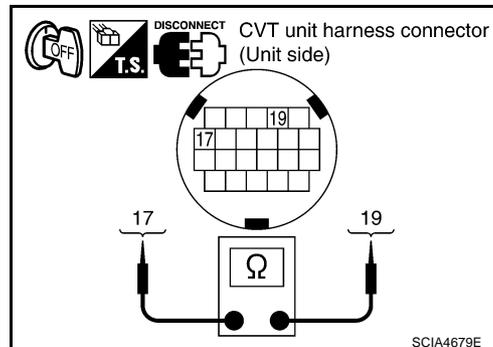

4. Reinstall any part removed.


### OK or NG

- OK >> GO TO 4.
- NG >> Replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#).

## 4. CHECK HARNESS BETWEEN TCM AND CVT FLUID TEMPERATURE SENSOR

1. Turn ignition switch OFF.
2. Disconnect the TCM connector and CVT unit harness connector.
3. Check continuity between TCM connector terminal and CVT unit harness connector terminal.

Item	Connector	Terminal (Wire color)	Continuity
TCM	F104	42 (W/R)	Yes
CVT unit harness connector	F6	19 (W/R)	
TCM	F104	47 (V)	Yes
CVT unit harness connector	F6	17 (V)	

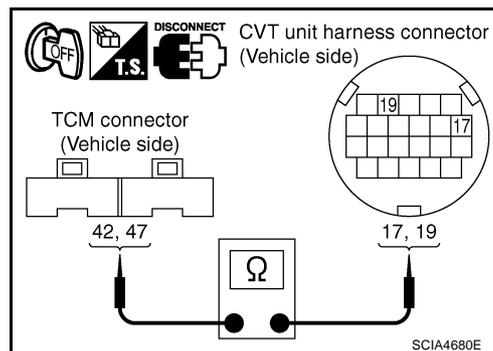

4. If OK, check harness for short to ground and short power.

5. Reinstall any part removed.

### OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

## 5. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [CVT-88, "DTC Confirmation Procedure"](#).

### OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 6.

## 6. CHECK TCM

1. Check TCM input/output signal. Refer to [CVT-56, "TCM Input/Output Signal Reference Values"](#).
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

### OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

# DTC P0710 CVT FLUID TEMPERATURE SENSOR CIRCUIT


ACS003KY

## Component Inspection CVT FLUID TEMPERATURE SENSOR

1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector.
3. Check resistance between CVT unit harness connector terminals.

Name	Connector	Terminal	Temperature °C (°F)	Resistance (Approx.)
CVT fluid temperature sensor	F6	17 - 19	20 (68)	6.5 kΩ
			80 (176)	0.9 kΩ

4. If NG, replace the transaxle assembly. Refer to [CVT-224](#), "[Removal and Installation](#)".

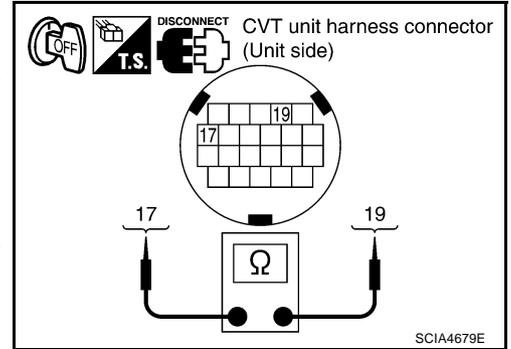

# DTC P0715 INPUT SPEED SENSOR CIRCUIT (PRI SPEED SENSOR)

## DTC P0715 INPUT SPEED SENSOR CIRCUIT (PRI SPEED SENSOR)

PFP:31935

### Description

ACS002ST

The input speed sensor (primary speed sensor) detects the primary pulley revolution speed and sends a signal to the TCM.

### CONSULT-II Reference Value

ACS002SU

Remarks: Specification data are reference values.

Item name	Condition	Display value
ENG SPEED SIG	Engine running	Closely matches the tachometer reading.
PRI SPEED SEN	During driving (lock-up ON)	Approximately matches the engine speed.

### On Board Diagnosis Logic

ACS002SV

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "INPUT SPD SEN/CIRC" with CONSULT-II or P0715 without CONSULT-II is detected when TCM does not receive the proper signal from the sensor.

### Possible Cause

ACS002SW

- Harness or connectors  
(Sensor circuit is open or shorted.)
- Input speed sensor (Primary speed sensor)

### DTC Confirmation Procedure

ACS002SX

#### CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 5 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
2. Start engine and maintain the following conditions for at least 5 consecutive seconds.  
**VHCL SPEED SE: 10 km/h (6 MPH) or more**  
**ACC PEDAL OPEN: More than 1/8**  
**Selector lever: D position**  
**ENG SPEED: 450 rpm or more**  
**Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.**
3. If DTC is detected, go to [CVT-95. "Diagnostic Procedure"](#).

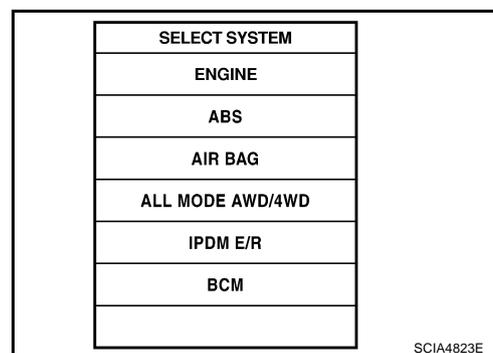

#### WITH GST

Follow the procedure "WITH CONSULT-II".



# DTC P0715 INPUT SPEED SENSOR CIRCUIT (PRI SPEED SENSOR)

## Wiring Diagram — CVT — PRSCVT

ACS0020X

### CVT-PRSCVT-01

: DETECTABLE LINE FOR DTC  
 : NON-DETECTABLE LINE FOR DTC

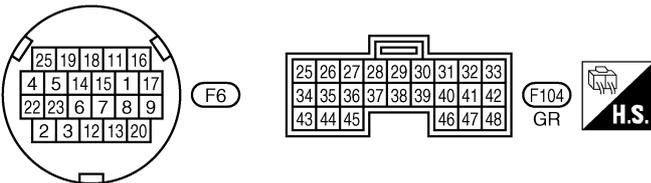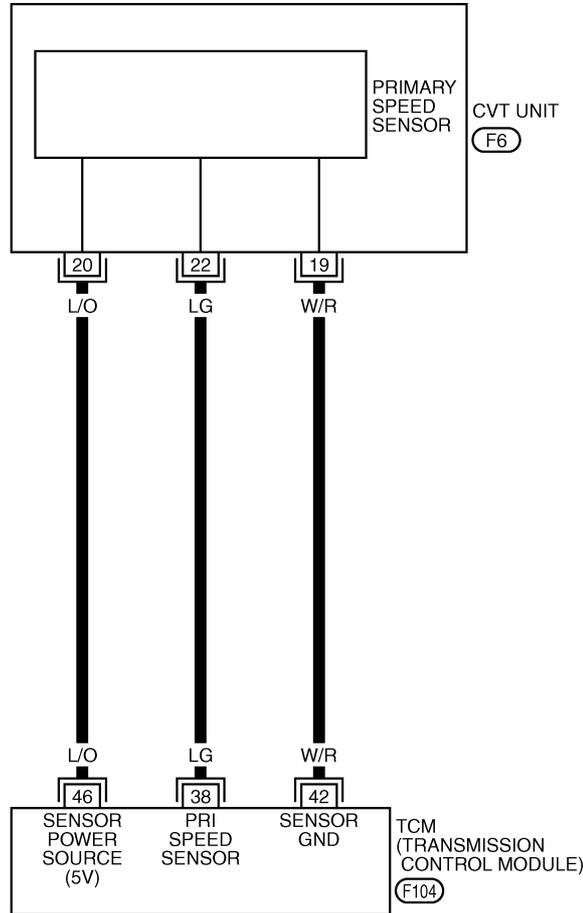

TCWA0254E

# DTC P0715 INPUT SPEED SENSOR CIRCUIT (PRI SPEED SENSOR)

TCM terminals and data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)
38	LG	Input speed sensor (Primary speed sensor)	 When driving ["D" position, 20 km/h (12 MPH)].	600 Hz
42	W/R	Sensor ground	Always	0V
46	L/O	Sensor power	 —	4.5 - 5.5V
			 —	0V

## Diagnostic Procedure

ACS0020Y

### 1. CHECK INPUT SIGNALS

#### With CONSULT-II

- Start engine.
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Start vehicle and read out the value of "PRI SPEED SEN".

Item name	Condition	Display value
PRI SPEED SEN	During driving (lock-up ON)	Approximately matches the engine speed.

#### OK or NG

- OK >> GO TO 6.  
NG >> GO TO 2.

DATA MONITOR	
MONITOR	NO DTC
PRI SPEED SEN	32 rpm
ENG SPEED SIG	0 rpm
SEC HYDR SEN	0.47 V
PRI HYDR SEN	0.47 V
ATF TEMP SEN	1.92 V
▼	
RECORD	
MODE	BACK
LIGHT	COPY

SCIA2278E

### 2. CHECK INPUT SPEED SENSOR (PRIMARY SPEED SENSOR)

- Start engine.
- Check voltage between TCM connector terminals.

Item	Connector	Terminal (Wire color)	Data (Approx.)
TCM	F104	46 (L/O) - 42 (W/R)	4.5 - 5.5V


- Check the pulse with CONSULT-II or oscilloscope. When vehicle cruises.

Name	Condition
Input speed sensor (Primary speed sensor)	When running at 20 km/h (12 MPH) in "D" position with the closed throttle position signal "OFF", use the CONSULT-II pulse frequency measuring function. <b>CAUTION:</b> Connect the data link connector to the vehicle-side diagnosis connector.

Item	Connector	Terminal (Wire color)	Name	Data (Approx.)
TCM	F104	38 (LG)	Input speed sensor (Primary speed sensor)	600 Hz

#### OK or NG

- OK >> GO TO 6.  
NG - 1 >> Battery voltage is not supplied: GO TO 3.  
NG - 2 >> Battery voltage is supplied, but there is a malfunction in the frequency: GO TO 4.

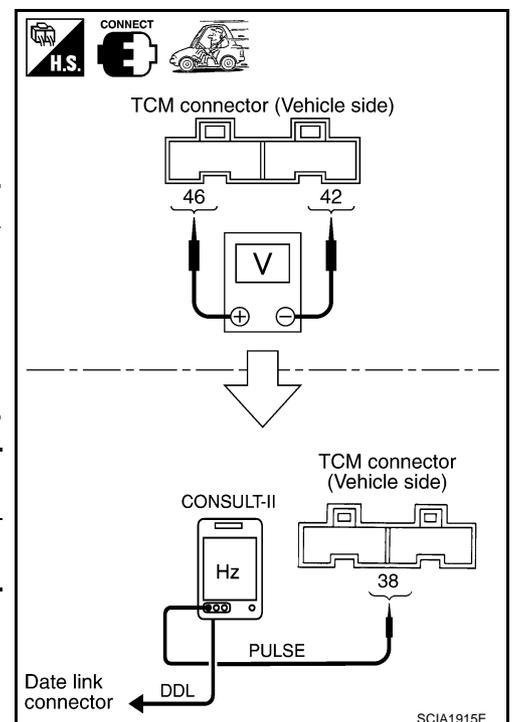


## DTC P0715 INPUT SPEED SENSOR CIRCUIT (PRI SPEED SENSOR)

### 3. CHECK HARNESS BETWEEN TCM AND CVT UNIT HARNESS CONNECTOR (SENSOR POWER AND SENSOR GROUND)

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit harness connector.
3. Check continuity between TCM connector terminal and CVT unit harness connector terminal.

Item	Connector	Terminal (Wire color)	Continuity
TCM	F104	42 (W/R)	Yes
CVT unit harness connector	F6	19 (W/R)	
TCM	F104	46 (L/O)	Yes
CVT unit harness connector	F6	20 (L/O)	

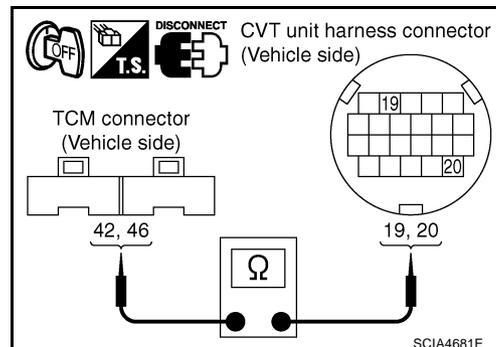

4. If OK, check harness for short to ground and short power.
5. Reinstall any part removed.

#### OK or NG


OK >> GO TO 6.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

### 4. CHECK HARNESS BETWEEN TCM AND CVT UNIT HARNESS CONNECTOR [INPUT SPEED SENSOR (PRIMARY SPEED SENSOR)]

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit harness connector.
3. Check continuity between TCM connector terminal and CVT unit harness connector terminal.

Item	Connector	Terminal (Wire color)	Continuity
TCM	F104	38 (LG)	Yes
CVT unit harness connector	F6	22 (LG)	

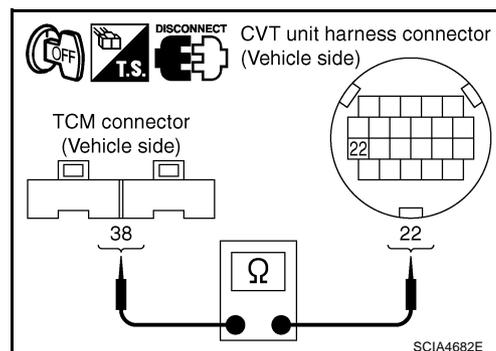

4. If OK, check harness for short to ground and short power.
5. Reinstall any part removed.

#### OK or NG

OK >> GO TO 5.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

### 5. CHECK THE TCM SHORT

Replace same type TCM, perform self-diagnosis. Erase self diagnostic results and then drive the vehicle [10 km/h (6 MPH) or more], perform self-diagnosis. Refer to [CVT-93, "DTC Confirmation Procedure"](#).

Is the "P0715 INPUT SPD SEN/CIRC" detected again?

YES >> Replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#).

NO >> Replace TCM. Refer to [CVT-8, "Precautions for TCM and CVT Assembly Replacement"](#).

### 6. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [CVT-93, "DTC Confirmation Procedure"](#).

#### OK or NG

OK >> **INSPECTION END**

NG >> GO TO 7.

# DTC P0715 INPUT SPEED SENSOR CIRCUIT (PRI SPEED SENSOR)

## 7. CHECK TCM

1. Check TCM input/output signal. Refer to [CVT-56, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.

A

B

CVT

D

E

F

G

H

I

J

K

L

M

# DTC P0720 VEHICLE SPEED SENSOR CVT (SECONDARY SPEED SENSOR)

## DTC P0720 VEHICLE SPEED SENSOR CVT (SECONDARY SPEED SENSOR)

PFP:31935

### Description

ACS002SY

The vehicle speed sensor CVT [output speed sensor (secondary speed sensor)] detects the revolution of the CVT output shaft and emits a pulse signal. The pulse signal is sent to the TCM, which converts it into vehicle speed.

### CONSULT-II Reference Value

ACS002SZ

Remarks: Specification data are reference values.

Item name	Condition	Display value
VSP SENSOR	During driving	Approximately matches the speedometer reading.

### On Board Diagnosis Logic

ACS002T0

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "VEH SPD SEN/CIR AT" with CONSULT-II or P0720 without CONSULT-II is detected TCM does not receive the proper signal from the sensor.

### Possible Cause

ACS002T1

- Harness or connectors  
(Sensor circuit is open or shorted.)
- Output speed sensor (Secondary speed sensor)

### DTC Confirmation Procedure

ACS002T2

#### CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.

#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 5 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II


1. Turn ignition switch ON and select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
2. Start engine and maintain the following conditions for at least 12 consecutive seconds.

**ACC PEDAL OPEN: More than 1/8**

**Selector lever: D position**

**Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.**

3. If DTC is detected, go to [CVT-100, "Diagnostic Procedure"](#).

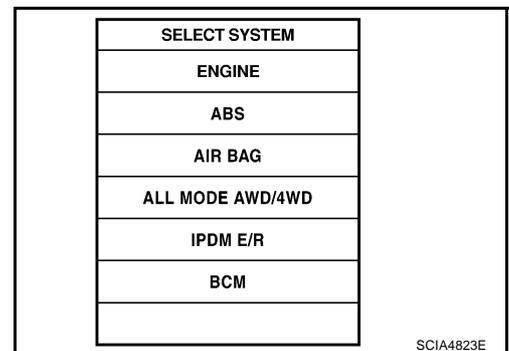

#### WITH GST

Follow the procedure "WITH CONSULT-II".



# DTC P0720 VEHICLE SPEED SENSOR CVT (SECONDARY SPEED SENSOR)

## Wiring Diagram — CVT — SESCVT


ACS0021Q

### CVT-SESCVT-01


: DETECTABLE LINE FOR DTC  
 : NON-DETECTABLE LINE FOR DTC

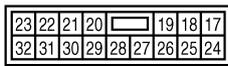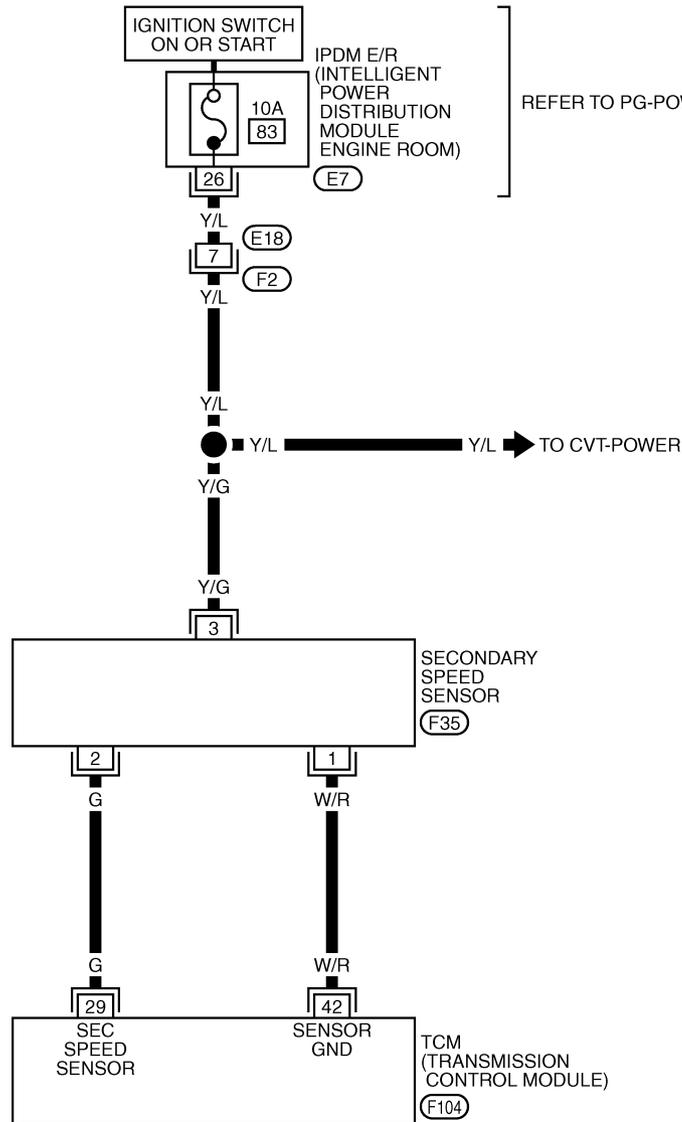


E7  
GR

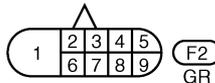

F2  
GR

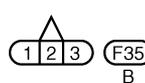

F35  
B

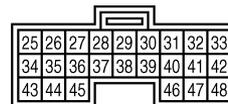

F104  
GR



TCWA0248E

# DTC P0720 VEHICLE SPEED SENSOR CVT (SECONDARY SPEED SENSOR)

TCM terminals and data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)
29	G	Output speed sensor (Secondary speed sensor)	When driving ["D" position, 20 km/h (12 MPH)].	300 Hz
42	W/R	Sensor ground	Always	0V

## Diagnostic Procedure

ACS00273

### 1. CHECK INPUT SIGNAL

#### With CONSULT-II

- Start engine.
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Start vehicle and read out the value of "VSP SENSOR".

Item name	Condition	Display value
VSP SENSOR	During driving	Approximately matches the speedometer reading.

#### OK or NG

- OK >> GO TO 8.  
NG >> GO TO 2.

DATA MONITOR	
MONITOR	NO DTC
VSP SENSOR	1 km / h
ESTM VSP SIG	0 km / h
PRI SPEED SEN	32 rpm
ENG SPEED SIG	0 rpm
SEC HYDR SEN	0.47 V
▽	
RECORD	
MODE	BACK
LIGHT	COPY

SCIA2279E

### 2. CHECK SECONDARY SPEED SENSOR

#### With CONSULT-II

- Start engine.
- Check power supply to output speed sensor (secondary speed sensor) by voltage between TCM connector terminals 10 (Y/L), 19 (Y/L) and 42 (W/R). Refer to [CVT-39, "Circuit Diagram"](#).

Item	Connector	Terminal (Wire color)	Data (Approx.)
TCM	F103, F104	10 (Y/L) - 42 (W/R)	Battery voltage
		19 (Y/L) - 42 (W/R)	


- If OK, check the pulse when vehicle cruises.

Name	Condition
Output speed sensor (Secondary speed sensor)	When running at 20 km/h (12 MPH) in "D" position, use the CONSULT-II pulse frequency measuring function. <b>CAUTION:</b> Connect the data link connector to the vehicle-side diagnosis connector.

Item	Connector	Terminal (Wire color)	Name	Data (Approx.)
TCM	F104	29 (G)	Output speed sensor (Secondary speed sensor)	300 Hz

#### OK or NG

- OK >> GO TO 8.  
NG >> GO TO 3.

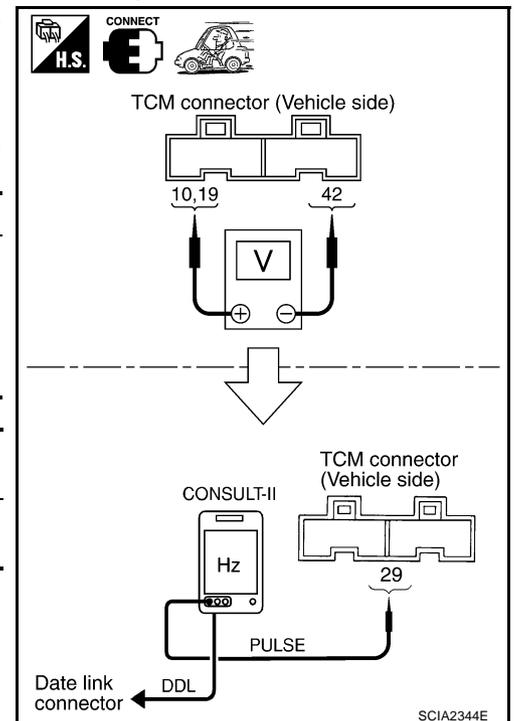


# DTC P0720 VEHICLE SPEED SENSOR CVT (SECONDARY SPEED SENSOR)

## 3. CHECK POWER AND SENSOR GROUND


1. Turn ignition switch OFF.
2. Disconnect the output speed sensor (secondary speed sensor) harness connector.
3. Turn ignition switch ON.
4. Check voltage between output speed sensor (secondary speed sensor) harness connector terminals.

Item	Connector	Terminal (Wire color)	Data (Approx.)
Output speed sensor (Secondary speed sensor)	F35	1 (W/R) - 3 (Y/G)	Battery voltage

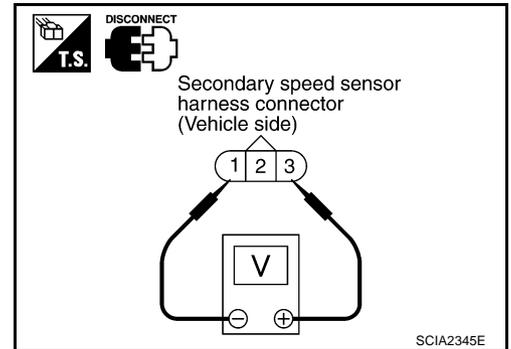

5. Check voltage between output speed sensor (secondary speed sensor) harness connector terminal and ground.

Item	Connector	Terminal (Wire color)	Data (Approx.)
Output speed sensor (Secondary speed sensor)	F35	3 (Y/G) - ground	Battery voltage

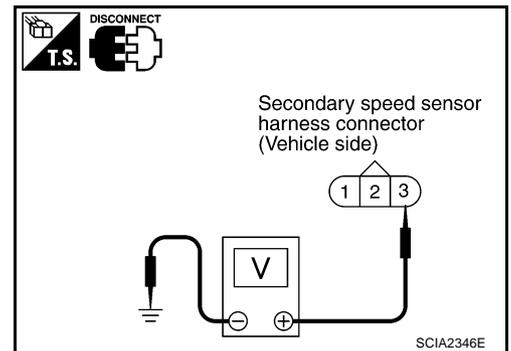

6. If OK, check harness for short to ground and short to power.
7. Reinstall any part removed.

### OK or NG

OK >> GO TO 4.

NG - 1 >> Battery voltage is not supplied between terminals 1 and 3, terminals 1 and ground.: GO TO 6.

NG - 2 >> Battery voltage is not supplied between terminals 1 and 3 only.: GO TO 7.

## 4. CHECK HARNESS BETWEEN TCM AND OUTPUT SPEED SENSOR (SECONDARY SPEED SENSOR)

1. Turn ignition switch OFF.
2. Disconnect TCM connector and output speed sensor (secondary speed sensor) harness connector.
3. Check continuity between TCM connector terminal and output speed sensor (secondary speed sensor) harness connector terminal.


Item	Connector	Terminal (Wire color)	Continuity
TCM	F104	29 (G)	Yes
Output speed sensor (Secondary speed sensor)	F35	2 (G)	

4. If OK, check harness for short to ground and short to power.
5. Reinstall any part removed.

### OK or NG

OK >> GO TO 5.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

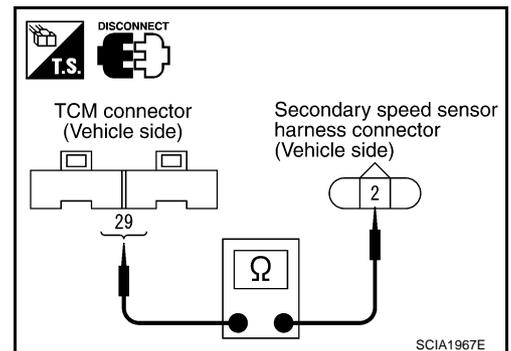

# DTC P0720 VEHICLE SPEED SENSOR CVT (SECONDARY SPEED SENSOR)

## 5. CHECK THE TCM SHORT

Replace same type TCM, perform self-diagnosis. Erase self diagnostic results and then drive the vehicle [more than 40 km/h (25 MPH)], perform self-diagnosis. Refer to [CVT-98, "DTC Confirmation Procedure"](#).

Is "VEH SPD SEN/CIR AT" detected again?


YES >> Replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#).

NO >> Replace TCM. Refer to [CVT-8, "Precautions for TCM and CVT Assembly Replacement"](#).

## 6. CHECK HARNESS BETWEEN TCM AND OUTPUT SPEED SENSOR (SECONDARY SPEED SENSOR) (POWER)

1. Turn ignition switch OFF.
2. Disconnect TCM connector and output speed sensor (secondary speed sensor) harness connector.
3. Check continuity between TCM connector terminal and output speed sensor (secondary speed sensor) harness connector terminal. Refer to [CVT-39, "Circuit Diagram"](#).

Item	Connector	Terminal (Wire color)	Continuity
TCM	F103	10 (Y/L)	Yes
Output speed sensor (Secondary speed sensor)	F35	3 (Y/G)	
TCM	F103	19 (Y/L)	Yes
Output speed sensor (Secondary speed sensor)	F35	3 (Y/G)	

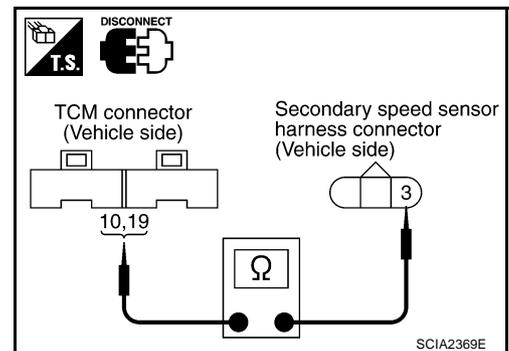

4. If OK, check harness for short to ground and short power.

5. Reinstall any part removed.

OK or NG


OK >> 10A fuse (No. 83, located in the IPDM E/R) or ignition switch are malfunctioning.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

## 7. CHECK HARNESS BETWEEN TCM AND OUTPUT SPEED SENSOR (SECONDARY SPEED SENSOR) (SENSOR GROUND)

1. Turn ignition switch OFF.
2. Disconnect TCM connector and output speed sensor (secondary speed sensor) harness connector.
3. Check continuity between TCM connector terminal and output speed sensor (secondary speed sensor) harness connector terminal. Refer to [CVT-39, "Circuit Diagram"](#).

Item	Connector	Terminal (Wire color)	Continuity
TCM	F104	42 (W/R)	Yes
Output speed sensor (Secondary speed sensor)	F35	1 (W/R)	

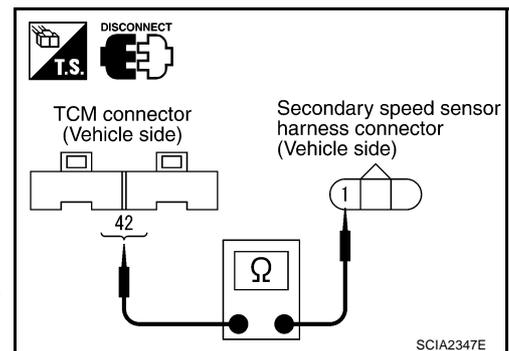

4. If OK, check harness for short to ground and short power.

5. Reinstall any part removed.

OK or NG

OK >> GO TO 8.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

# DTC P0720 VEHICLE SPEED SENSOR CVT (SECONDARY SPEED SENSOR)

---

## 8. CHECK DTC

---

Perform "DTC Confirmation Procedure". Refer to [CVT-98, "DTC Confirmation Procedure"](#) .

OK or NG

OK >> **INSPECTION END**  
NG >> GO TO 9.

---

## 9. CHECK TCM

---

1. Check TCM input/output signal. Refer to [CVT-56, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**  
NG >> Repair or replace damaged parts.

A

B

CVT

D

E

F

G

H

I

J

K

L

M

# DTC P0725 ENGINE SPEED SIGNAL

## DTC P0725 ENGINE SPEED SIGNAL

PFP:24825

### Description

ACS001U4

The engine speed signal is sent from the ECM to the TCM.

### CONSULT-II Reference Value

ACS004Y6

Remarks: Specification data are reference values.

Item name	Condition	Display value
ENG SPEED SIG	Engine running	Closely matches the tachometer reading.
ACC PEDAL OPEN	Released accelerator pedal - Fully depressed accelerator pedal	0.0/8 - 8.0/8

### On Board Diagnosis Logic

ACS001U5

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "ENGINE SPEED SIG" with CONSULT-II is detected when TCM does not receive the engine speed signal (input by CAN communication) from ECM.

### Possible Cause

ACS001U6

Harness or connectors  
(The ECM to the TCM circuit is open or shorted.)

### DTC Confirmation Procedure

ACS001U7

#### CAUTION:

Always drive vehicle at a safe speed.


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Start engine and maintain the following conditions for at least 10 consecutive seconds.  
**PRI SPEED SEN: More than 1000 rpm**
3. If DTC is detected, go to [CVT-104, "Diagnostic Procedure"](#).

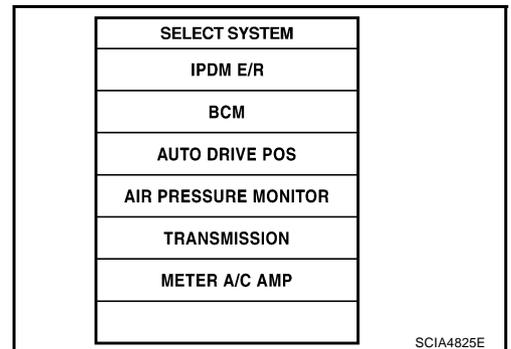

### Diagnostic Procedure

ACS001U8

#### 1. CHECK DTC WITH ECM


##### With CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "SELF-DIAG RESULTS" mode for "ENGINE" with CONSULT-II. Refer to [EC-109, "SELF-DIAG RESULTS MODE"](#).

##### OK or NG

OK >> GO TO 2.

NG >> Check the DTC detected item. Refer to [EC-109, "SELF-DIAG RESULTS MODE"](#).

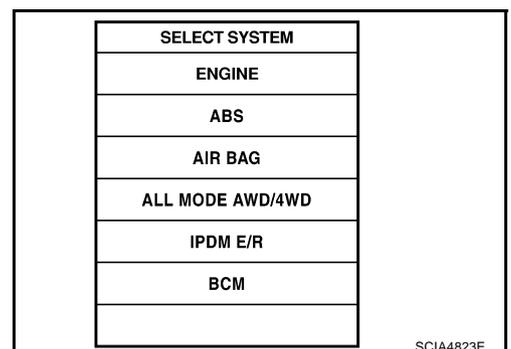

# DTC P0725 ENGINE SPEED SIGNAL

## 2. CHECK DTC WITH TCM

### With CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "SELF-DIAG RESULTS" mode for "TRANSMISSION" with CONSULT-II. Refer to [CVT-62, "SELF-DIAGNOSTIC RESULT MODE"](#).

SELECT SYSTEM
IPDM E/R
BCM
AUTO DRIVE POS
AIR PRESSURE MONITOR
TRANSMISSION
METER A/C AMP

SCIA4825E

### OK or NG

- OK >> GO TO 3.  
 NG >> Check the DTC detected item. Refer to [CVT-62, "SELF-DIAGNOSTIC RESULT MODE"](#).
- If DTC of CAN communication line is detected, go to [CVT-71, "DTC U1000 CAN COMMUNICATION LINE"](#)

## 3. CHECK INPUT SIGNALS

### With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. While monitoring "ENG SPEED SIG", check for engine speed change corresponding to "ACC PEDAL OPEN".

Item name	Condition	Display value
ENG SPEED SIG	Engine running	Closely matches the tachometer reading.
ACC PEDAL OPEN	Released accelerator pedal - Fully depressed accelerator pedal	0.0/8 - 8.0/8

DATA MONITOR	
MONITOR	NO DTC
VSP SENSOR	1 km/h
ESTM VSP SIG	0 km/h
PRI SPEED SEN	32 rpm
ENG SPEED SIG	768 rpm
SEC HYDR SEN	1.06 V
PRI HYDR SEN	1.57 V
ATF TEMP SEN	1.79 V
VIGN SEN	13.5 V
ACC PEDAL OPEN	0.0/8
Page DOWN	
RECORD	
MODE	BACK LIGHT COPY

SCIA4504E

### OK or NG

- OK >> GO TO 4.  
 NG >> Check ignition signal circuit.
- Refer to [EC-595, "IGNITION SIGNAL"](#).

## 4. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [CVT-104, "DTC Confirmation Procedure"](#).

### OK or NG

- OK >> **INSPECTION END**  
 NG >> GO TO 5.

## 5. CHECK TCM

1. Check TCM input/output signal. Refer to [CVT-56, "TCM Input/Output Signal Reference Values"](#).
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

### OK or NG

- OK >> **INSPECTION END**  
 NG >> Repair or replace damaged parts.

# DTC P0730 BELT DAMAGE

## DTC P0730 BELT DAMAGE

PFP:31935

### Description

ACS002IU

TCM selects the gear ratio using the engine load (throttle position), the primary pulley revolution speed, and the secondary pulley revolution speed as input signal. Then it change the operating pressure of the primary pulley and the secondary pulley and change the groove width of the pulley.

### CONSULT-II Reference Value

ACS002T4

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
GEAR RATIO	During driving	2.37 - 0.43

### On Board Diagnosis Logic

ACS002IV

- This is not an OBD-II self-diagnostic item.
- TCM calculates the actual gear ratio with input speed sensor (primary speed sensor) and output speed sensor (secondary speed sensor).
- Diagnostic trouble code "BELT DAMG" with CONSULT-II is detected, when TCM receives the unexpected gear ratio detected.

### Possible Cause

ACS002IW

Transaxle assembly

### DTC Confirmation Procedure

ACS002T5

#### CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 5 seconds before performing the next test.


After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Make sure that output voltage of CVT fluid temperature sensor is within the range below.  
**FLUID TEMP SEN: 1.0 - 2.0V**  
**If out of range, drive the vehicle to decrease the voltage (warm up the fluid) or stop engine to increase the voltage (cool down the fluid)**

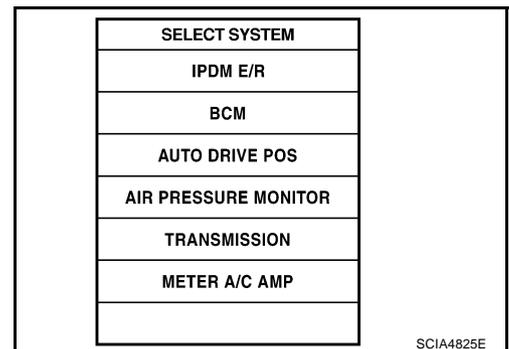

3. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
4. Start engine and maintain the following conditions for at least 30 consecutive seconds.  
**TEST START FROM 0 km/h (0 MPH)**  
**CONSTANT ACCELERATION: Keep 30 sec or more**  
**VEHICLE SPEED: 10 km/h (6 MPH) or more**  
**ACC PEDAL OPEN: More than 1/8**  
**Selector lever: D position**  
**ENG SPEED: 450 rpm or more**
5. If DTC is detected, go to [CVT-107, "Diagnostic Procedure"](#).

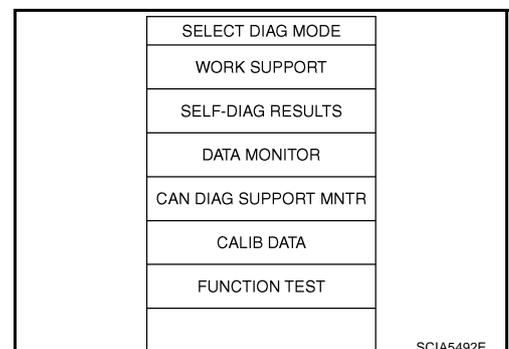

# DTC P0730 BELT DAMAGE

## Diagnostic Procedure

ACS0021Y

### 1. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [CVT-106, "DTC Confirmation Procedure"](#).

Are any DTC displayed?

YES - 1>> DTC except for "BELT DAMG" is displayed: Go to Check the DTC detected item. Refer to [CVT-62, "SELF-DIAGNOSTIC RESULT MODE"](#).

YES - 2>> DTC for "BELT DAMG" is displayed: Replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#).

NO >> **INSPECTION END**

A

B

CVT

D

E

F

G

H

I

J

K

L

M

# DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

## DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

PFP:31940

### Description

ACS00210

- The torque converter clutch solenoid valve is activated by the TCM in response to signals sent from the vehicle speed and throttle position sensors. Lock-up piston operation will then be controlled.
- Lock-up operation, however, is prohibited when CVT fluid temperature is too low.
- When the accelerator pedal is depressed (less than 2/8) in lock-up condition, the engine speed should not change abruptly. If there is a big jump in engine speed, there is no lock-up.

### CONSULT-II Reference Value

ACS00211

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
ISOLT1	Lock-up "OFF"	0.0A
	Lock-up "ON"	0.7A

### On Board Diagnosis Logic

ACS00212

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "TCC SOLENOID/CIRC" with CONSULT-II or P0740 without CONSULT-II is detected under the following conditions.
  - When TCM detects an improper voltage drop when it tries to operate the solenoid valve.

### Possible Cause

ACS00213

- Torque converter clutch solenoid valve
- Harness or connectors  
(Solenoid circuit is open or shorted.)

### DTC Confirmation Procedure

ACS00214

#### CAUTION:

Always drive vehicle at a safe speed.


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II and wait at least 10 consecutive seconds.
3. If DTC is detected, go to [CVT-110, "Diagnostic Procedure"](#).

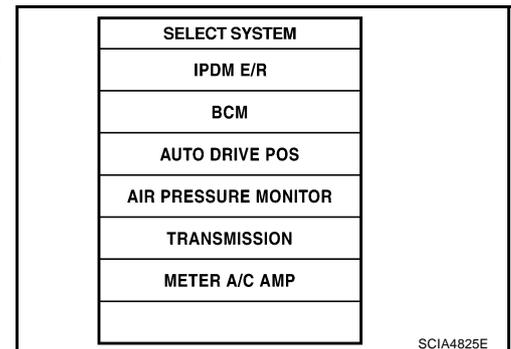

#### WITH GST

Follow the procedure "WITH CONSULT-II".




# DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

## Wiring Diagram — CVT — TCV

ACS002T6

CVT-TCV-01

 : DETECTABLE LINE FOR DTC  
 : NON-DETECTABLE LINE FOR DTC

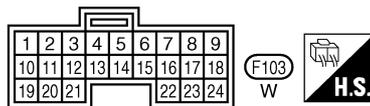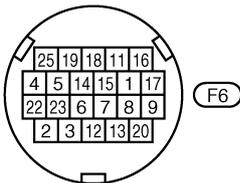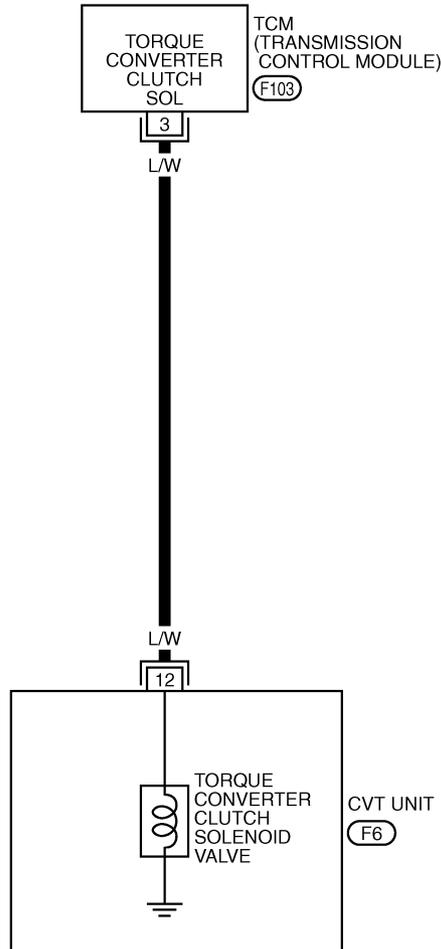

TCWA0251E

# DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

TCM terminal and data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)	
3	L/W	Torque converter clutch solenoid valve	When vehicle cruises in "D" position.	When CVT performs lock-up.	6.0V
				When CVT does not perform lock-up.	1.0V

## Diagnostic Procedure

ACS00215

### 1. CHECK INPUT SIGNAL

#### With CONSULT-II

- Start engine.
- Select "MAIN SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Start vehicle and read out the value of "ISOLT1".

DATA MONITOR	
MONITOR	NO DTC
ATF TEMP	59
STM STEP	4step
ISOL T1	0.000A
ISOL T2	0.800A
ISOL T3	0.800A
▽	
RECORD	
MODE	BACK LIGHT COPY


SCIA2349E

Item name	Condition	Display value (Approx.)
ISOLT1	Lock-up "OFF"	0.0A
	Lock-up "ON"	0.7A

#### Without CONSULT-II

- Start engine.
- Check voltage between TCM connector terminal and ground.

Name	Connector	Terminal (Wire color)	Condition	Voltage (Approx.)
Torque converter clutch solenoid valve	F103	3 (L/W) - ground	When vehicle cruises in "D" position	Lock-up "OFF" 6.0V
			Lock-up "ON" 1.0V	

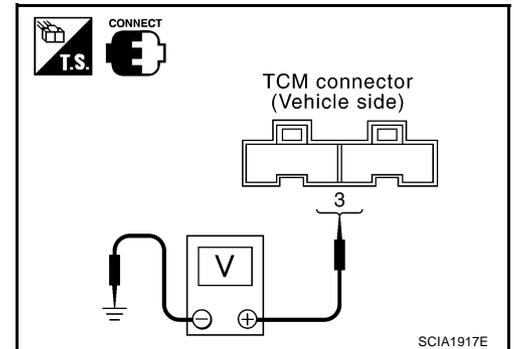

#### OK or NG

- OK >> GO TO 5.  
 NG >> GO TO 2.

### 2. CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE CIRCUIT


- Turn ignition switch OFF.
- Disconnect TCM connector.
- Check resistance between TCM connector terminal and ground.

Solenoid valve	Connector	Terminal (Wire color)	Resistance (Approx.)
Torque converter clutch solenoid valve	F103	3 (L/W) - Ground	3 - 9 Ω

- Disconnect TCM connector.
- Check if there is continuity between the connector terminal and ground.

#### OK or NG

- OK >> GO TO 5.  
 NG >> GO TO 3.

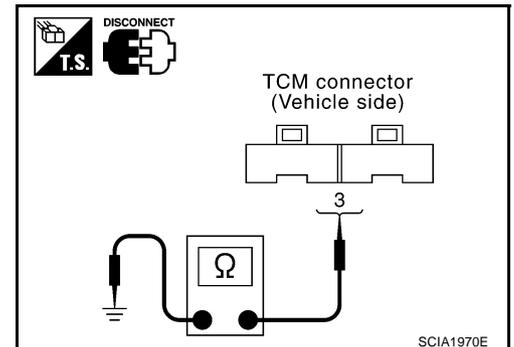

# DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

## 3. CHECK HARNESS BETWEEN TCM AND TORQUE CONVERTER CLUTCH SOLENOID VALVE

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit harness connector.
3. Check continuity between TCM connector terminal and CVT unit harness connector terminal.


Item	Connector	Terminal (Wire color)	Continuity
TCM	F103	3 (L/W)	Yes
CVT unit harness connector	F6	12 (L/W)	

4. If OK, check harness for short to ground and short power.
5. If OK, check continuity between body ground and CVT assembly.
6. Reinstall any part removed.

OK or NG

OK >> GO TO 4.

NG >> Repair or replace damaged parts.

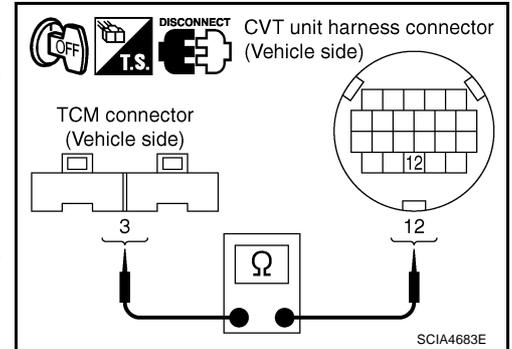

## 4. CHECK VALVE RESISTANCE


1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector.
3. Check resistance between CVT unit harness connector terminal and ground.

Solenoid Valve	Connector	Terminal	Resistance (Approx.)
Torque converter clutch solenoid valve	F6	12 - Ground	3 - 9 $\Omega$

OK or NG

OK >> GO TO 5.

NG >> Repair or replace damaged parts.

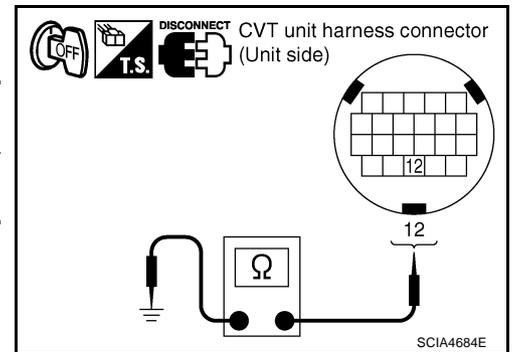

## 5. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [CVT-108, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 6.

## 6. CHECK TCM

1. Check TCM input/output signal. Refer to [CVT-56, "TCM Input/Output Signal Reference Values"](#).
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.

# DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

ACS003KZ


## Component Inspection

### TORQUE CONVERTER CLUTCH SOLENOID VALVE

1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector.
3. Check resistance between CVT unit harness connector terminal and ground.

Solenoid Valve	Connector	Terminal	Resistance (Approx.)
Torque converter clutch solenoid valve	F6	12 - Ground	3 - 9 $\Omega$

4. If NG, replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#).

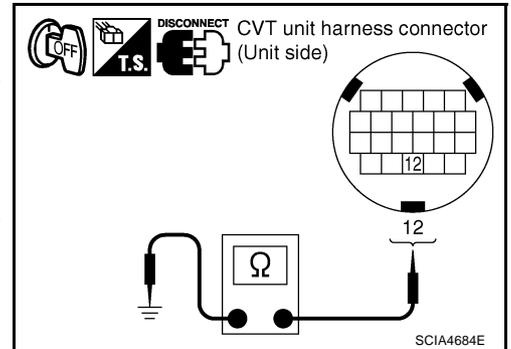

# DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

## DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

PDF:31940

### Description

ACS001UG

This malfunction is detected when the torque converter clutch does not lock-up as instructed by the TCM. This is not only caused by electrical malfunction (circuits open or shorted), but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

### CONSULT-II Reference Value

ACS002T7

Remarks: Specification data are reference values.

Item name	Condition	Display value
ENG SPEED SIG	Engine running	Closely matches the tachometer reading.
PRI SPEED SEN	During driving (lock-up ON)	Approximately matches the engine speed.

### On Board Diagnosis Logic

ACS001UH

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "A/T TCC S/V FNCTN" with CONSULT-II or P0744 without CONSULT-II is detected under the following conditions.
  - When CVT cannot perform lock-up even if electrical circuit is good.
  - When TCM compares difference value with slip revolution and detects an irregularity.

### Possible Cause

ACS001UI

- Torque converter clutch solenoid valve
- Hydraulic control circuit

### DTC Confirmation Procedure

ACS001UJ

#### CAUTION:

Always drive vehicle at a safe speed.

#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

#### Ⓟ WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine and maintain the following condition for at least 30 seconds.  
**ACC PEDAL OPEN: More than 1.0/8**  
**Selector lever: "D" position**  
**[Vehicle speed: Constant speed of more than 40 km/h (25 MPH)]**
4. If DTC is detected go to [CVT-114, "Diagnostic Procedure"](#).

SELECT SYSTEM
IPDM E/R
BCM
AUTO DRIVE POS
AIR PRESSURE MONITOR
TRANSMISSION
METER A/C AMP

SCIA4825E

#### Ⓢ WITH GST

Follow the procedure "WITH CONSULT-II".

# DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

ACSO01UL

## Diagnostic Procedure

### 1. CHECK INPUT SIGNALS

#### With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start vehicle.
4. Check if there is a great difference between "ENG SPEED SIG" and "PRI SPEED SEN". (Lock-up ON.)

Item name	Condition	Display value
ENG SPEED SIG	Engine running	Closely matches the tachometer reading.
PRI SPEED SEN	During driving (lock-up ON)	Approximately matches the engine speed.

DATA MONITOR	
MONITOR	NO. DTC
VSP SENSOR	1 km / h
ESTM VSP SIG	0 km / h
PRI SPEED SEN	32 rpm
ENG SPEED SIG	0 rpm
SEC HYDR SEN	0.47 V

▼	
RECORD	
MODE	BACK
LIGHT	COPY

SCIA2279E

#### OK or NG

- OK >> GO TO 5.  
NG >> GO TO 2.

### 2. CHECK LINE PRESSURE

Perform line pressure test. Refer to [CVT-42, "LINE PRESSURE TEST"](#).

#### OK or NG

- OK >> GO TO 3.  
NG >> Repair or replace damaged parts. Refer to [CVT-43, "Judgement of Line Pressure Test"](#).



### 3. DETECT MALFUNCTIONING ITEM

Check the following:

- Torque converter clutch solenoid valve. Refer to [CVT-112, "Component Inspection"](#).
- Lock-up select solenoid valve. Refer to [CVT-170, "Component Inspection"](#).

#### OK or NG

- OK >> GO TO 4.  
NG >> Repair or replace damaged parts.

### 4. CHECK SECONDARY SPEED SENSOR SYSTEM AND PRIMARY SPEED SENSOR SYSTEM

Check output speed sensor (secondary speed sensor) system and input speed sensor (primary speed sensor) system. Refer to [CVT-98, "DTC P0720 VEHICLE SPEED SENSOR CVT \(SECONDARY SPEED SENSOR\)"](#), [CVT-93, "DTC P0715 INPUT SPEED SENSOR CIRCUIT \(PRI SPEED SENSOR\)"](#).

#### OK or NG

- OK >> GO TO 5.  
NG >> Repair or replace damaged parts.

## DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

---

### 5. CHECK DTC

---

Perform "DTC Confirmation Procedure". Refer to [CVT-113, "DTC Confirmation Procedure"](#) .

OK or NG

OK >> **INSPECTION END**  
NG >> GO TO 6.

---

### 6. CHECK TCM

---

1. Check TCM input/output signal. Refer to [CVT-56, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**  
NG >> 1. Repair or replace damaged parts.  
2. Replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#) .

A

B

CVT

D

E

F

G

H

I

J

K

L

M

# DTC P0745 LINE PRESSURE SOLENOID VALVE

## DTC P0745 LINE PRESSURE SOLENOID VALVE

PDF:31940

### Description

ACS001UM

The pressure control solenoid valve A (line pressure solenoid valve) regulates the oil pump discharge pressure to suit the driving condition in response to a signal sent from the TCM.

### CONSULT-II Reference Value

ACS002T8

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
ISOLT2	Release your foot from the accelerator pedal.	0.8A
	Press the accelerator pedal all the way down.	0.0A

### On Board Diagnosis Logic

ACS001UN

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "L/PRESS SOL/CIRC" with CONSULT-II or P0745 without CONSULT-II is detected under the following conditions.
  - When TCM detects an improper voltage drop when it tries to operate the solenoid valve.
  - When TCM compares target value with monitor value and detects an irregularity.

### Possible Cause

ACS001UO

- Harness or connectors  
(Solenoid circuit is open or shorted.)
- Pressure control solenoid valve A (Line pressure solenoid valve)

### DTC Confirmation Procedure

ACS001UP


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### ④ WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
2. Start engine and wait at least 5 seconds.
3. If DTC is detected, go to [CVT-118, "Diagnostic Procedure"](#).

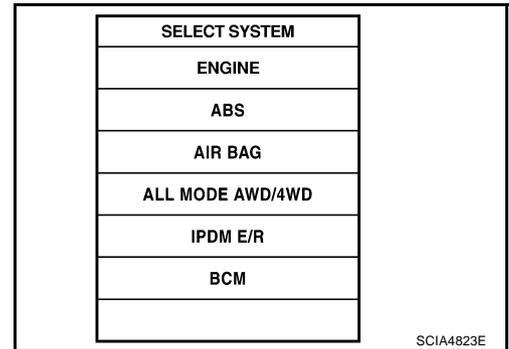

#### ④ WITH GST

Follow the procedure "WITH CONSULT-II".



# DTC P0745 LINE PRESSURE SOLENOID VALVE

## Wiring Diagram — CVT — LPSV

ACS001UQ

### CVT-LPSV-01

**—** : DETECTABLE LINE FOR DTC  
**—** : NON-DETECTABLE LINE FOR DTC

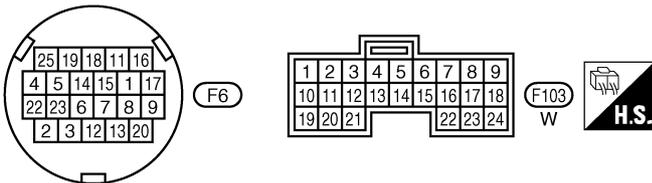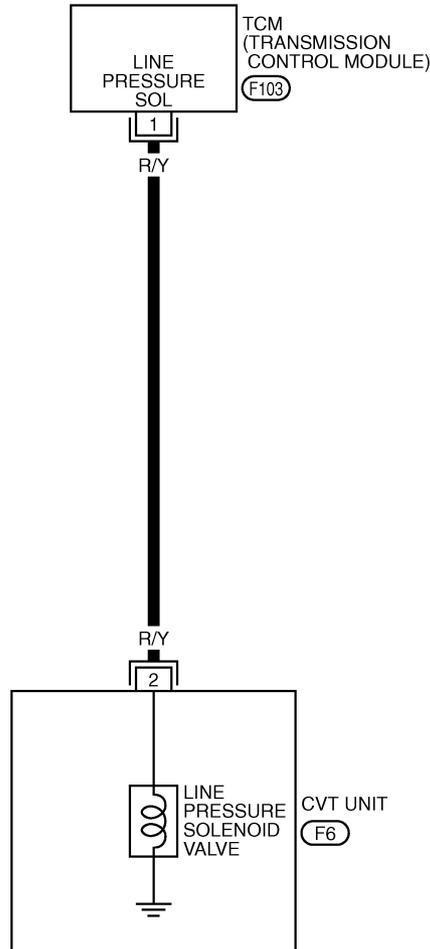

TCWA0249E

# DTC P0745 LINE PRESSURE SOLENOID VALVE

TCM terminal and data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)	
1	R/Y	Pressure control solenoid valve A (line pressure solenoid valve)	 and 	Release your foot from the accelerator pedal.	5.0 - 7.0V
				Press the accelerator pedal all the way down.	1.0 - 3.0V

## Diagnostic Procedure

ACS001UR

### 1. CHECK INPUT SIGNAL

#### With CONSULT-II

- Start engine.
- Select "MAIN SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Read out the value of "ISOLT2".

Item name	Condition	Display value (Approx.)
ISOLT2	Release your foot from the accelerator pedal.	0.8A
	Press the accelerator pedal all the way down.	0.0A

DATA MONITOR	
MONITOR	NO DTC
ATF TEMP	59
STM STEP	4step
ISOL T1	0.000A
ISOL T2	0.800A
ISOL T3	0.800A
▼	
RECORD	
MODE	BACK LIGHT COPY

SCIA2349E

#### Without CONSULT-II


- Start engine.
- Check voltage between TCM connector terminal and ground.

Name	Connector	Terminal (Wire color)	Condition	Voltage (Approx.)
Pressure control solenoid valve A (Line pressure solenoid valve)	F103	1 (R/Y) - ground	Release your foot from the accelerator pedal.	5.0 - 7.0V
			Press the accelerator pedal all the way down.	1.0 - 3.0V

- Turn ignition switch OFF.
- Disconnect TCM connector.
- Check if there is continuity between connector terminal and ground.

#### OK or NG

- OK >> GO TO 5.  
NG >> GO TO 2.

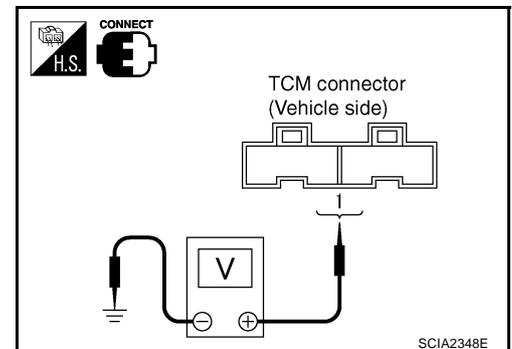

# DTC P0745 LINE PRESSURE SOLENOID VALVE


## 2. CHECK PRESSURE CONTROL SOLENOID VALVE A (LINE PRESSURE SOLENOID VALVE) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check resistance between TCM connector terminal and ground.

Solenoid valve	Connector	Terminal (Wire color)	Resistance (Approx.)
Pressure control solenoid valve A (Line pressure solenoid valve)	F103	1 (R/Y) - ground	3 - 9 Ω

### OK or NG

- OK >> GO TO 5.  
 NG >> GO TO 3.

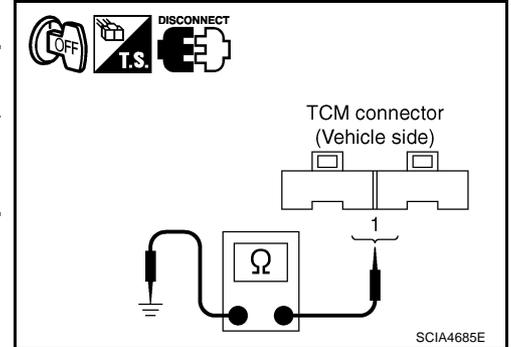


## 3. CHECK VALVE RESISTANCE

1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector.
3. Check resistance between CVT unit harness connector terminal and ground.

Solenoid valve	Connector	Terminal	Resistance (Approx.)
Pressure control solenoid valve A (Line pressure solenoid valve)	F6	2 - Ground	3 - 9 Ω

### OK or NG

- OK >> GO TO 4.  
 NG >> Replace the transaxle assembly. Refer to [CVT-224](#), "Removal and Installation".

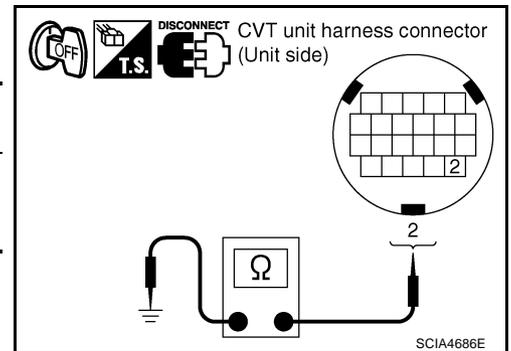

## 4. CHECK HARNESS BETWEEN TCM AND PRESSURE CONTROL SOLENOID VALVE A (LINE PRESSURE SOLENOID VALVE)


1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector and TCM connector.
3. Check continuity between TCM connector terminal and CVT unit harness connector terminal.

Item	Connector	Terminal (Wire color)	Continuity
TCM	F103	1 (R/Y)	Yes
CVT unit harness connector	F6	2 (R/Y)	

4. If OK, check harness for short to ground and short to power.
5. If OK, check continuity between ground and CVT assembly.
6. Reinstall any part removed.

### OK or NG

- OK >> GO TO 5.  
 NG >> Repair open circuit or short to ground or short to power in harness or connectors.

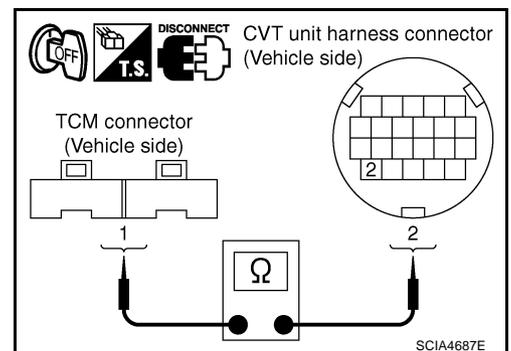

# DTC P0745 LINE PRESSURE SOLENOID VALVE

## 5. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [CVT-116, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 6.

## 6. CHECK TCM

1. Check TCM input/output signal. Refer to [CVT-56, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> 1. Repair or replace damaged parts.  
2. Replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#) .

## Component Inspection


### PRESSURE CONTROL SOLENOID VALVE A (LINE PRESSURE SOLENOID VALVE)

ACS002T9

1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector.
3. Check resistance between CVT unit harness connector terminal and ground.

Solenoid valve	Connector	Terminal	Resistance (Approx.)
Pressure control solenoid valve A (Line pressure solenoid valve)	F6	2 - Ground	3 - 9 Ω

4. If NG, replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#) .

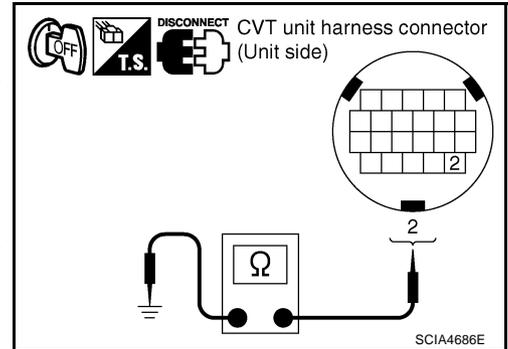

# DTC P0746 PRESSURE CONTROL SOLENOID A PERFORMANCE (LINE PRESSURE SOLENOID VALVE)

## DTC P0746 PRESSURE CONTROL SOLENOID A PERFORMANCE (LINE PRESSURE SOLENOID VALVE)

PFP:31941

### Description

ACS002JZ

The pressure control solenoid valve A (line pressure solenoid valve) regulates the oil pump discharge pressure to suit the driving condition in response to a signal sent from the TCM.

### CONSULT-II Reference Value

ACS004Y7

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
PRI PRESS	"N" position idle	0.3 - 0.9MPa

### On Board Diagnosis Logic

ACS002J0

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "PRS CNT SOL/A FCTN" with CONSULT-II or P0746 without CONSULT-II is detected under the following conditions.
  - Unexpected gear ratio was detected in the LOW side due to excessively low line pressure.

### Possible Cause

ACS002J1

- Line pressure control system
- Output speed sensor (Secondary speed sensor)
- Input speed sensor (Primary speed sensor)

### DTC Confirmation Procedure

ACS002TA

#### CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.

#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 5 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Start engine and maintain the following conditions for at least 10 consecutive seconds. Test start from 0km/h (0 MPH).

**ATF TEMP SEN: 1 - 2V**


**ACC PEDAL OPEN: More than 1.0/8**

**Selector lever: D position**

**VHCL SPEED: 10 km/h (6 MPH) More than**

**Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.**

3. If DTC is detected, go to [CVT-122, "Diagnostic Procedure"](#).

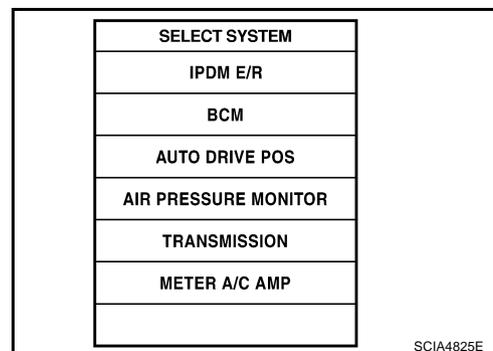

SCIA4825E

#### WITH GST

Follow the procedure "WITH CONSULT-II".

# DTC P0746 PRESSURE CONTROL SOLENOID A PERFORMANCE (LINE PRESSURE SOLENOID VALVE)

ACS002J3


## Diagnostic Procedure

### 1. CHECK INPUT SIGNAL

#### With CONSULT-II

1. Start engine.
2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start vehicle and read out the value of "PRI PRESS".

Item name	Condition	Display value (Approx.)
PRI PRESS	"N" position idle	0.3 - 0.9MPa

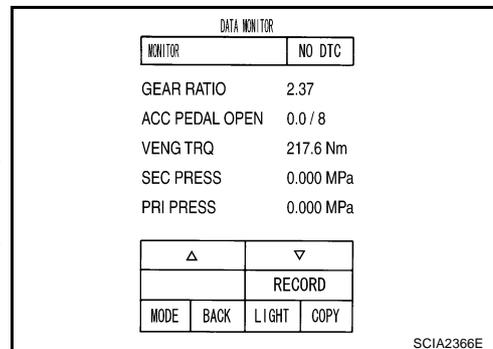


#### Without CONSULT-II

1. Start engine.
2. Check voltage between TCM connector terminal and ground.

Name	Connector	Terminal (Wire color)	Condition	Voltage (Approx.)
Transmission fluid pressure sensor B (Primary pressure sensor)	F104	41 (V/O) - Ground	"N" position idle	0.7 - 1.2V

#### OK or NG

- OK >> GO TO 5.  
 NG >> GO TO 2.

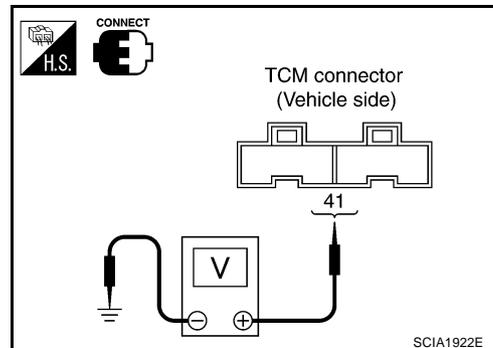


### 2. CHECK LINE PRESSURE

Perform line pressure test. Refer to [CVT-42, "LINE PRESSURE TEST"](#).

#### OK or NG

- OK >> GO TO 3.  
 NG >> Repair or replace damaged parts. Refer to [CVT-43, "Judgement of Line Pressure Test"](#).

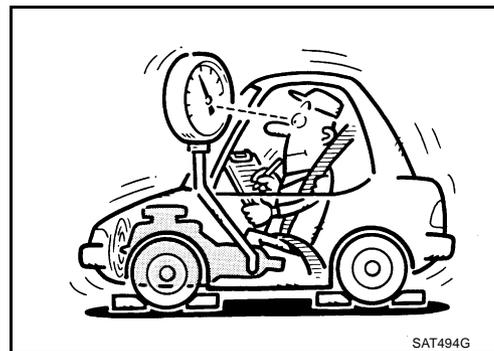

### 3. DETECT MALFUNCTIONING ITEM

Check the following:

- Pressure control solenoid valve A (line pressure solenoid valve). Refer to [CVT-120, "Component Inspection"](#).

#### OK or NG

- OK >> GO TO 4.  
 NG >> Repair or replace damaged parts.

# DTC P0746 PRESSURE CONTROL SOLENOID A PERFORMANCE (LINE PRESSURE SOLENOID VALVE)

---

## 4. CHECK OUTPUT SPEED SENSOR (SECONDARY SPEED SENSOR) SYSTEM AND INPUT SPEED SENSOR (PRIMARY SPEED SENSOR) SYSTEM

---

Check output speed sensor (secondary speed sensor) system and input speed sensor (primary speed sensor) system. Refer to [CVT-98, "DTC P0720 VEHICLE SPEED SENSOR CVT \(SECONDARY SPEED SENSOR\)"](#), [CVT-93, "DTC P0715 INPUT SPEED SENSOR CIRCUIT \(PRI SPEED SENSOR\)"](#).

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

---

## 5. DETECT MALFUNCTIONING ITEM

---

Check the following:

- Power supply and ground circuit for TCM. Refer to [CVT-154, "Wiring Diagram — CVT — POWER"](#).
- The TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> GO TO 6.
- NG >> Repair or replace damaged parts.

---

## 6. CHECK DTC

---

Perform "DTC Confirmation Procedure". Refer to [CVT-121, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
- NG >> Replace the transaxle assembly or TCM. Refer to [CVT-224, "Removal and Installation"](#).

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# DTC P0776 PRESSURE CONTROL SOLENOID B PERFORMANCE (SEC PRESSURE SOLENOID VALVE)

## DTC P0776 PRESSURE CONTROL SOLENOID B PERFORMANCE (SEC PRESSURE SOLENOID VALVE)

PFP:31941

### Description

ACS002J4

The pressure control solenoid valve B (secondary pressure solenoid valve) regulates the secondary pressure to suit the driving condition in response to a signal sent from the TCM.

### CONSULT-II Reference Value

ACS002TB

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
SEC PRESS	"N" position idle	0.5 - 0.9MPa

### On Board Diagnosis Logic

ACS002TC

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "PRS CNT SOL/B FCTN" with CONSULT-II or P0776 without CONSULT-II is detected when secondary pressure is too high or too low compared with the commanded value while driving.

### Possible Cause

ACS002J6

- Harness or connectors (Solenoid circuit is open or shorted.)
- Pressure control solenoid valve B (Secondary pressure solenoid valve system)
- Transmission fluid pressure sensor A (Secondary pressure sensor)
- Line pressure control system

### DTC Confirmation Procedure

ACS002TD

#### CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.

#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 5 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.

2. Start engine and maintain the following conditions for at least 30 consecutive seconds.

**ATF TEMP SEN: 1 - 2V**

**ACC PEDAL OPEN: More than 1.0/8**

**Selector lever: D position**


**VHCL SPEED: 10 km/h (6 MPH) More than**

**Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.**

3. If DTC is detected, go to [CVT-125, "Diagnostic Procedure"](#).

#### WITH GST

Follow the procedure "WITH CONSULT-II".

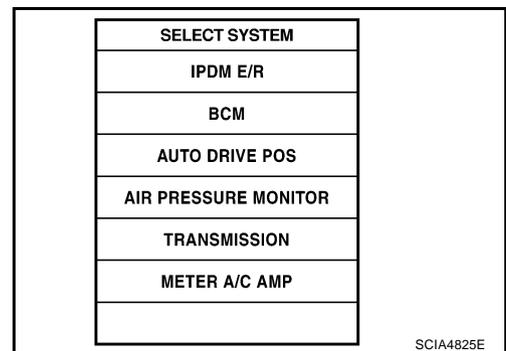

# DTC P0776 PRESSURE CONTROL SOLENOID B PERFORMANCE (SEC PRESSURE SOLENOID VALVE)

ACS002TE

## Diagnostic Procedure

### 1. CHECK INPUT SIGNAL

#### With CONSULT-II

1. Start engine.
2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start vehicle and read out the value of "SEC PRESS".

Item name	Condition	Display value (Approx.)
SEC PRESS	"N" position idle	0.5 - 0.9MPa

#### OK or NG

- OK >> GO TO 5.  
NG >> GO TO 2.

DATA MONITOR	
MONITOR	NO DTC
GEAR RATIO	2.37
ACC PEDAL OPEN	0.0 / 8
VENG TRQ	217.6 Nm
SEC PRESS	0.000 MPa
PRI PRESS	0.000 MPa

Δ	▽		
RECORD			
MODE	BACK	LIGHT	COPY

SCIA2366E

### 2. CHECK LINE PRESSURE

Perform line pressure test. Refer to [CVT-42, "LINE PRESSURE TEST"](#).

#### OK or NG

- OK >> GO TO 3.  
NG >> Repair or replace damaged parts. Refer to [CVT-43, "Judgement of Line Pressure Test"](#).



### 3. DETECT MALFUNCTIONING ITEM

Check the following:

- Pressure control solenoid valve B (Secondary pressure solenoid valve). Refer to [CVT-131, "Component Inspection"](#).
- Pressure control solenoid valve A (Line pressure solenoid valve). Refer to [CVT-120, "Component Inspection"](#).

#### OK or NG

- OK >> GO TO 4.  
NG >> Repair or replace damaged parts.

### 4. CHECK SECONDARY PRESSURE SENSOR SYSTEM

Check transmission fluid pressure sensor A (secondary pressure sensor) system. Refer to [CVT-137, "DTC P0840 TRANSMISSION FLUID PRESSURE SENSOR A CIRCUIT \(SEC PRESSURE SENSOR\)"](#).

#### OK or NG

- OK >> GO TO 5.  
NG >> Repair or replace damaged parts.

### 5. DETECT MALFUNCTIONING ITEM

Check the following:

- Power supply and ground circuit for TCM. Refer to [CVT-154, "Wiring Diagram — CVT — POWER"](#).
- The TCM pin terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> GO TO 6.  
NG >> Repair or replace damaged parts.

# DTC P0776 PRESSURE CONTROL SOLENOID B PERFORMANCE (SEC PRESSURE SOLENOID VALVE)

---

## 6. CHECK DTC

---

Perform "DTC Confirmation Procedure". Refer to [CVT-124, "DTC Confirmation Procedure"](#) .

OK or NG

OK >> **INSPECTION END**

NG >> Replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#) .

# DTC P0778 PRESSURE CONTROL SOLENOID B ELECTRICAL (SEC PRESSURE SOLENOID VALVE)

## DTC P0778 PRESSURE CONTROL SOLENOID B ELECTRICAL (SEC PRESSURE SOLENOID VALVE)

PFP:31941

### Description

ACS002J9

The pressure control solenoid valve B (secondary pressure solenoid valve) regulates the oil pump discharge pressure to suit the driving condition in response to a signal sent from the TCM.

### CONSULT-II Reference Value

ACS002TF

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
ISOLT3	Secondary pressure low - Secondary pressure high	0.8 - 0.0A
SOLMON3	"N" position idle	0.6 - 0.7A
	When stalled	0.4 - 0.6A

### On Board Diagnosis Logic

ACS002JA

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "PRS CNT SOL/B CIRC" with CONSULT-II or P0778 without CONSULT-II is detected under the following conditions.
  - When TCM detects an improper voltage drop when it tries to operate the solenoid valve.
  - When TCM compares target value with monitor value and detects an irregularity.

### Possible Cause

ACS002JB

- Harness or connectors (Solenoid circuit is open or shorted.)
- Pressure control solenoid valve B (Secondary pressure solenoid valve)

### DTC Confirmation Procedure

ACS002JC


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch ON.
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine and wait at least 5 seconds.
4. If DTC is detected, go to [CVT-129, "Diagnostic Procedure"](#).

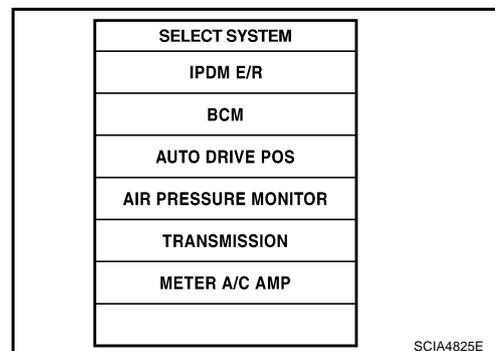

#### WITH GST

Follow the procedure "WITH CONSULT-II".



# DTC P0778 PRESSURE CONTROL SOLENOID B ELECTRICAL (SEC PRESSURE SOLENOID VALVE)

## Wiring Diagram — CVT — SECPSV

ACS002TG

### CVT-SECPSV-01

**—** : DETECTABLE LINE FOR DTC  
**—** : NON-DETECTABLE LINE FOR DTC

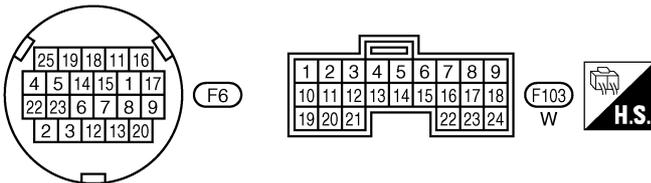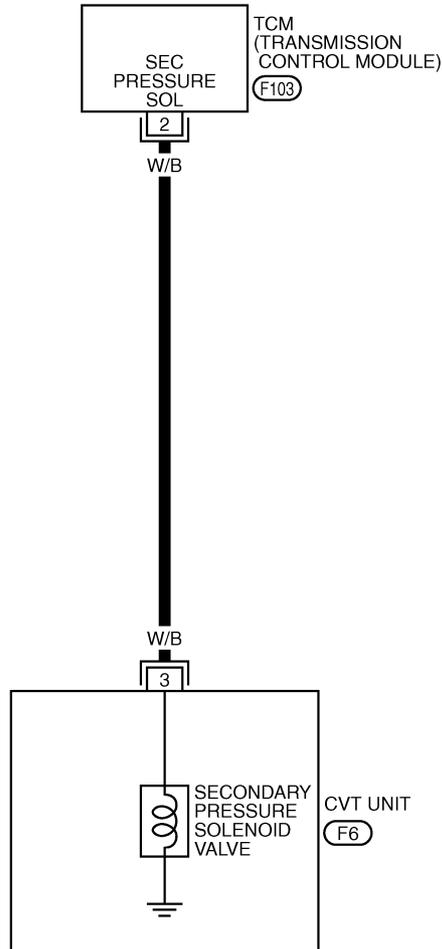

TCWA0250E

# DTC P0778 PRESSURE CONTROL SOLENOID B ELECTRICAL (SEC PRES- SURE SOLENOID VALVE)

TCM terminal and data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)	
2	W/B	Pressure control solenoid valve B (Secondary pressure solenoid valve)	 and 	Release your foot from the accelerator pedal.	5.0 - 7.0V
				Press the accelerator pedal all the way down.	3.0 - 4.0V

## Diagnostic Procedure


ACS002TH

### 1. CHECK INPUT SIGNAL

#### Ⓜ With CONSULT-II

- Start engine.
- Select "MAIN SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Read out the value of "ISOLT3".


Item name	Condition	Display value (Approx.)
ISOLT3	Secondary pressure low - Secondary pressure high	0.8 - 0.0A

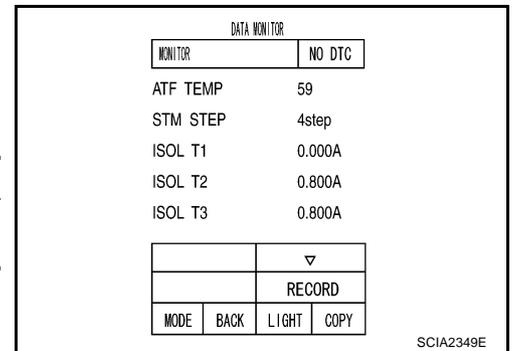

#### ⊗ Without CONSULT-II

- Start engine.
- Check voltage between TCM connector terminal and ground.

Name	Connector	Terminal (Wire color)	Condition	Voltage (Approx.)
Pressure control solenoid valve B (Secondary pressure solenoid valve)	F103	2 (W/B) - ground	Release your foot from accelerator pedal.	5.0 - 7.0V
			Press the accelerator pedal all the way down.	3.0 - 4.0V

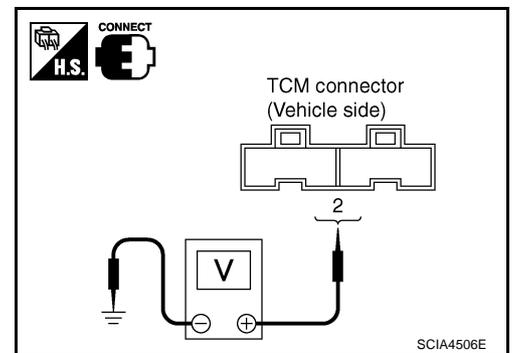

- Turn ignition switch OFF.
- Disconnect TCM connector.
- Check if there is continuity between connector terminal and ground.

#### OK or NG

- OK >> GO TO 5.  
NG >> GO TO 2.

# DTC P0778 PRESSURE CONTROL SOLENOID B ELECTRICAL (SEC PRESSURE SOLENOID VALVE)


## 2. CHECK PRESSURE CONTROL SOLENOID VALVE A (LINE PRESSURE SOLENOID VALVE) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check resistance between TCM connector terminal and ground.

Solenoid valve	Connector	Terminal (Wire color)	Resistance (Approx.)
Pressure control solenoid valve B (Secondary pressure solenoid valve)	F103	2 (W/B) - Ground	3 - 9 Ω

### OK or NG

- OK >> GO TO 5.  
 NG >> GO TO 3.

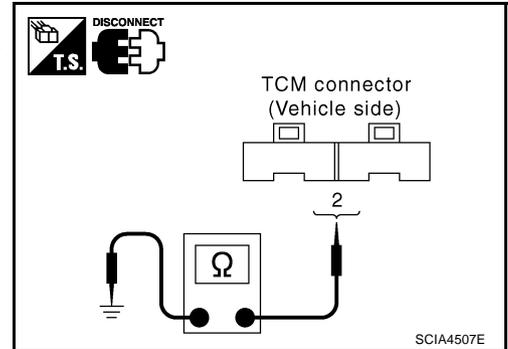


## 3. CHECK VALVE RESISTANCE

1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector.
3. Check resistance between CVT unit harness connector terminal and ground.

Solenoid valve	Connector	Terminal	Resistance (Approx.)
Pressure control solenoid valve B (Secondary pressure solenoid valve)	F6	3 - Ground	3 - 9 Ω

### OK or NG

- OK >> GO TO 4.  
 NG >> Repair or replace damaged parts.

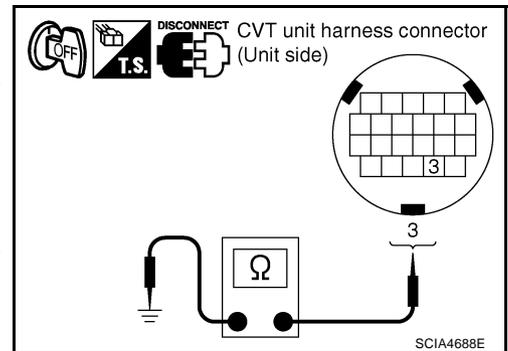

## 4. CHECK POWER SOURCE CIRCUIT

1. Turn ignition switch "OFF".
2. Disconnect TCM connector and CVT unit harness connector.
3. Check continuity between TCM connector terminal and CVT unit harness connector terminal.

Item	Connector	Terminal (Wire color)	Continuity
TCM connector	F103	2 (W/B)	Yes
CVT unit harness connector	F6	3 (W/B)	

4. If OK, check harness for short to ground and short to power.
5. Reinstall any part removed.

### OK or NG


- OK >> GO TO 5.  
 NG >> Repair or replace damaged parts.

## 5. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [CVT-127, "DTC Confirmation Procedure"](#).

### OK or NG

- OK >> **INSPECTION END**  
 NG >> GO TO 6.

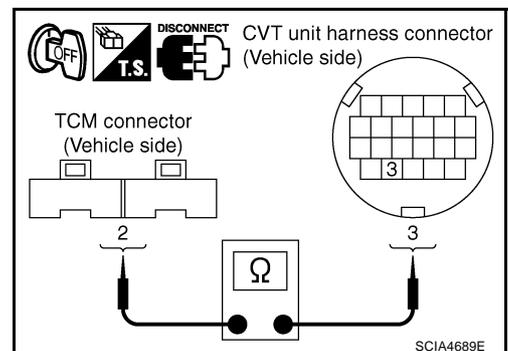

# DTC P0778 PRESSURE CONTROL SOLENOID B ELECTRICAL (SEC PRESSURE SOLENOID VALVE)

## 6. CHECK TCM

1. Check TCM input/output signal. Refer to [CVT-56, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**

NG >> 1. Repair or replace damaged parts.

2. Replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#) .

### Component Inspection


#### PRESSURE CONTROL SOLENOID VALVE B (SECONDARY PRESSURE SOLENOID VALVE)

ACS002TI

1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector.
3. Check resistance between CVT unit harness connector terminal and ground.

Solenoid Valve	Connector	Terminal	Resistance (Approx.)
Pressure control solenoid valve B (Secondary pressure solenoid valve)	F6	3 - Ground	3 - 9 Ω

4. If NG, replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#) .

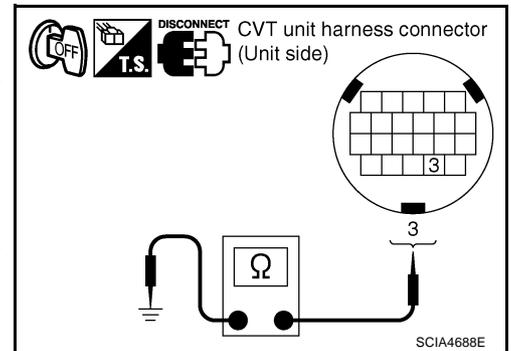

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# DTC P0826 MANUAL MODE SWITCH CIRCUIT

## DTC P0826 MANUAL MODE SWITCH CIRCUIT

PF3:34901

### Description

ACS004YY

Manual mode switch is installed in CVT control device. It sends manual mode switch, shift up and shift down switch signals to TCM.

TCM sends the switch signals to unified meter and A/C amp. By CAN communication line. Then manual mode switch position is indicated on the CVT position indicator. For inspection, refer to [CVT-136, "CVT Position Indicator"](#).

### CONSULT-II Reference Value

ACS004YZ

Item name	Condition	Display value
MMODE	Manual shift gate position (neutral)	ON
	Other than the above	OFF
NON MMODE	Manual shift gate position (neutral, +side, -side)	OFF
	Other than the above	ON
UPLVR	Select lever: + side	ON
	Other than the above	OFF
DOWNLVR	Select lever: - side	ON
	Other than the above	OFF

### On Board Diagnosis Logic

ACS004Z0

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "MANUAL MODE SWITCH" with CONSULT-II is detected when TCM monitors Manual mode, Non manual mode, Up or Down switch signal, and detects as irregular when impossible input pattern occurs 1 second or more.

### Possible Cause

ACS004Z1

- Harness or connectors  
(These switches circuit is open or shorted.)  
(TCM and unified meter and A/C amp circuit is open or shorted.)  
(CAN communication line is open or shorted.)
- Manual mode select switch (Built into CVT control device)
- Manual mode position select switch (Built into CVT control device)

### DTC Confirmation Procedure

ACS004Z2


#### NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine.
4. Move selector lever to "M" position.
5. Drive vehicle for at least 2 consecutive seconds.
6. If DTC is detected, go to [CVT-134, "Diagnostic Procedure"](#).

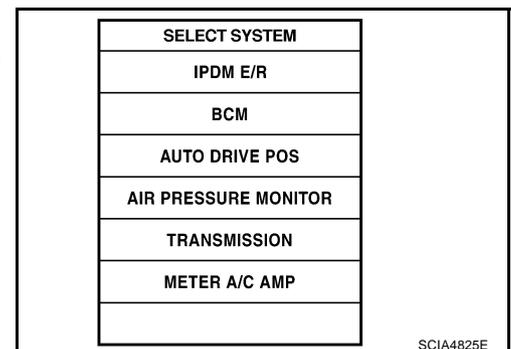


# DTC P0826 MANUAL MODE SWITCH CIRCUIT

ACS004Z3






## Wiring Diagram — CVT — MMSW

CVT-MMSW-01

REFER TO PG-POWER.

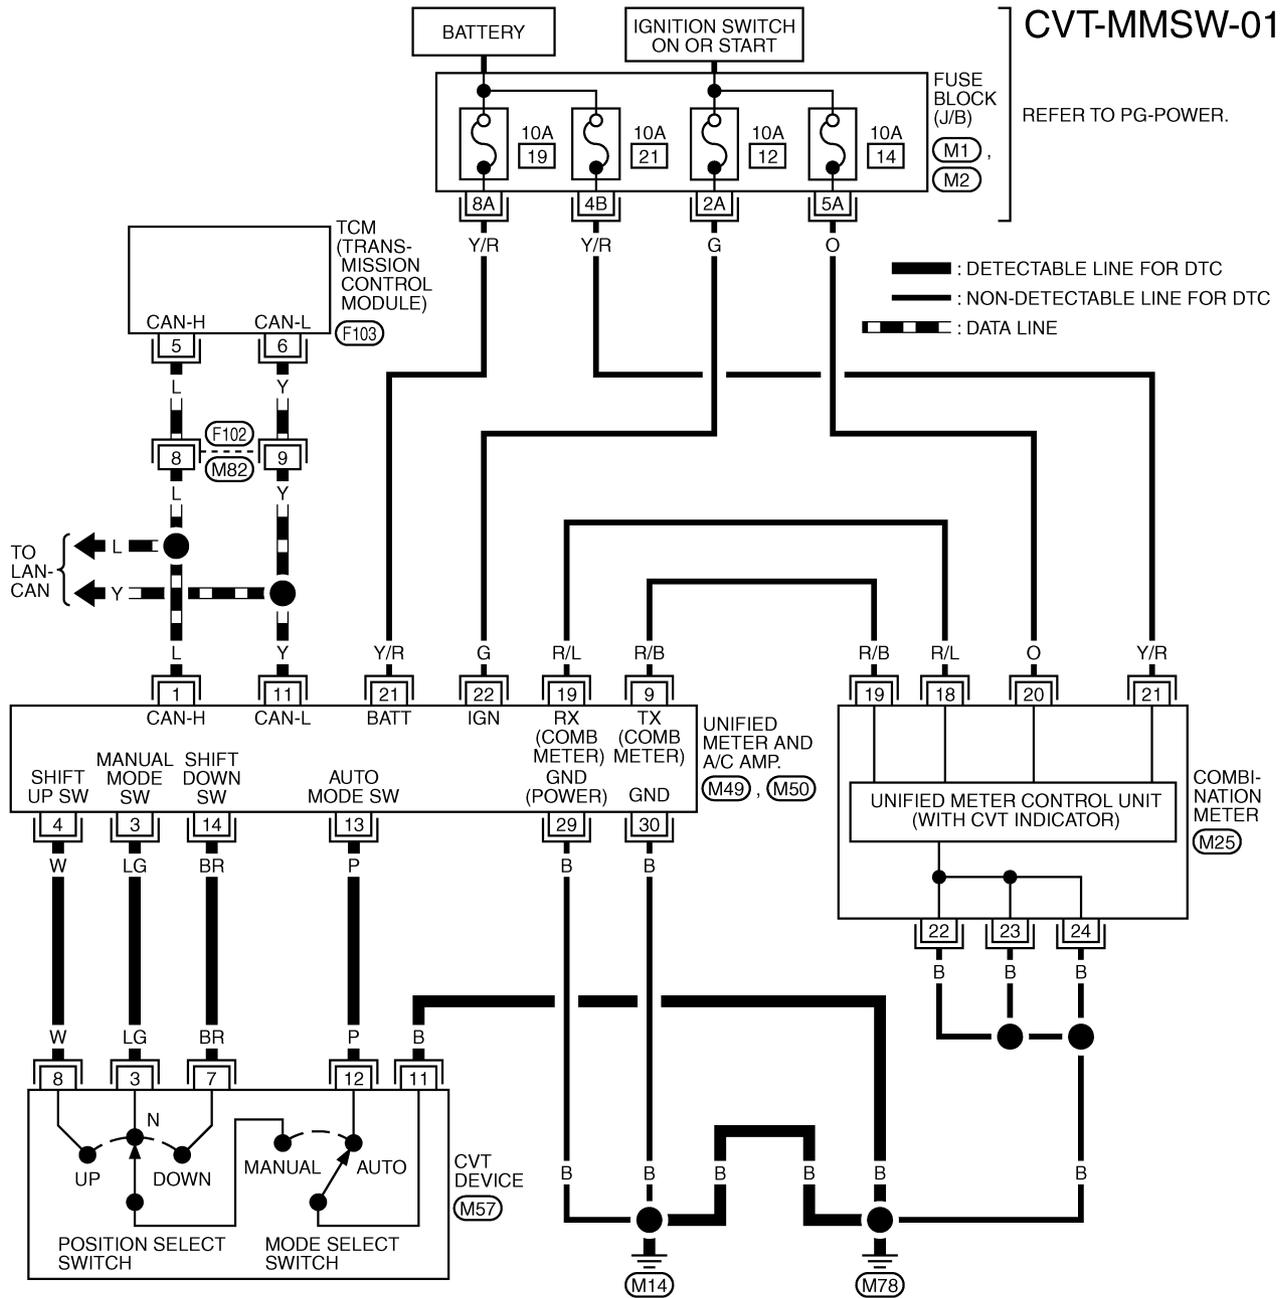

: DETECTABLE LINE FOR DTC  
 : NON-DETECTABLE LINE FOR DTC  
 : DATA LINE

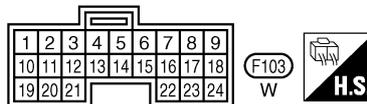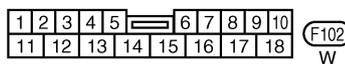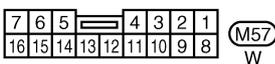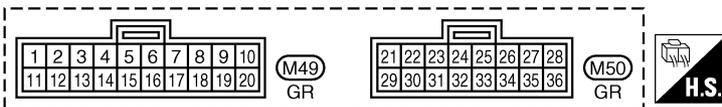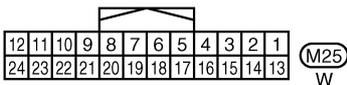

REFER TO THE FOLLOWING.

(M1), (M2) -FUSE BLOCK-JUNCTION BOX (J/B)

TCWB0002E

# DTC P0826 MANUAL MODE SWITCH CIRCUIT

TCM terminal and data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)
5	L	CAN H	-	-
6	Y	CAN L	-	-

## Diagnostic Procedure

ACS004Z4

### 1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Refer to [CVT-62, "SELF-DIAGNOSTIC RESULT MODE"](#).

Is any malfunction of the "CAN COMM CIRCUIT" indicated?

- YES >> Check CAN communication line. Refer to [CVT-71, "DTC U1000 CAN COMMUNICATION LINE"](#).  
 NO >> GO TO 2.

### 2. CHECK MANUAL MODE SWITCH CIRCUIT

#### With CONSULT-II

- Turn ignition switch ON. (Do not start engine.)
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Read out ON/OFF switching action of the "MMODE", "NON M-MODE", "UPLVR", "DOWNLVR".

DATA MONITOR			
MONITOR		NO DTC	
DOWNLVR		OFF	
UPLVR		OFF	
NON MMODE		ON	
MMODE		OFF	
△			
		RECORD	
MODE	BACK	LIGHT	COPY

SCIA4588E

Item name	Condition	Display value
MMODE	Manual shift gate position (neutral)	ON
	Other than the above	OFF
NON MMODE	Manual shift gate position (neutral, +side, -side)	OFF
	Other than the above	ON
UPLVR	Select lever: + side	ON
	Other than the above	OFF
DOWNLVR	Select lever: - side	ON
	Other than the above	OFF

#### Without CONSULT-II

Drive vehicle in the manual mode, and confirm that the actual gear position and the meter's indication of the position mutually coincide when the selector lever is shifted to the "+" (up) or "-" (down) side (1st ⇔ 6th gear).

OK or NG

- OK >> GO TO 7.  
 NG >> GO TO 3.

### 3. CHECK MANUAL MODE SWITCH

Check manual mode switch.

- Refer to [CVT-136, "Component Inspection"](#).

OK or NG

- OK >> GO TO 4.  
 NG >> Repair or replace damaged parts.

# DTC P0826 MANUAL MODE SWITCH CIRCUIT

## 4. CHECK SELF-DIAGNOSTIC RESULTS (UNIFIED METER AND A/C AMP)

Perform self-diagnosis. Refer to [DI-35, "CONSULT-II Function"](#) .

Is any malfunction detected by self-diagnostic?

- YES >> Check the malfunctioning system.
- NO >> GO TO 5.

## 5. CHECK SELF-DIAGNOSTIC RESULTS (COMBINATION METER)

Perform self-diagnosis. Refer to [DI-14, "Meter/Gauge Operation and Odo/Trip Meter"](#) .


Is any malfunction detected by self-diagnostic?

- YES >> Check the malfunctioning system.
- NO >> GO TO 6.

## 6. CHECK MANUAL MODE SWITCH CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect CVT device connector and unified meter and A/C amp connector.
3. Check continuity between CVT device harness connector terminal and unified meter and A/C amp harness connector terminal.

Item	Connector	Terminal (Wire color)	Continuity
CVT device harness connector	M57	3 (LG)	Yes
Unified meter and A/C amp harness connector	M49	3 (LG)	
CVT device harness connector	M57	7 (BR)	Yes
Unified meter and A/C amp harness connector	M49	14 (BR)	
CVT device harness connector	M57	8 (W)	Yes
Unified meter and A/C amp harness connector	M49	4 (W)	
CVT device harness connector	M57	12 (P)	Yes
Unified meter and A/C amp harness connector	M49	13 (P)	

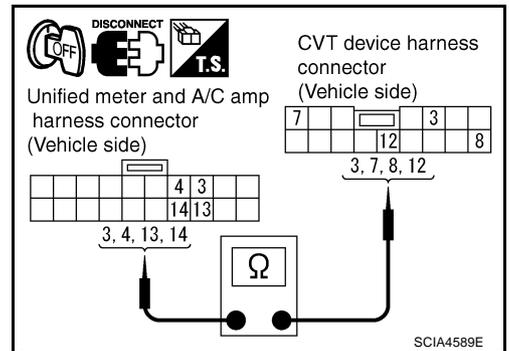

4. Check continuity between CVT device harness connector terminal and ground.

Item	Connector	Terminal (Wire color)	Continuity
CVT device harness connector	M57	11 (B)	Yes

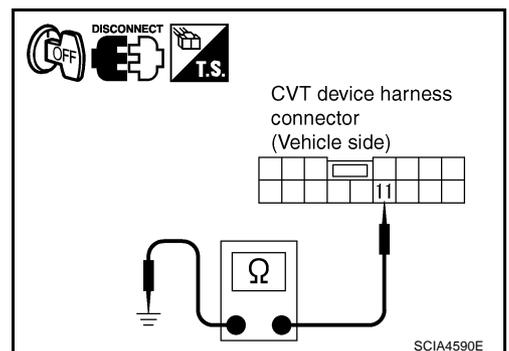

5. If OK, check harness for short to ground and short to power.
6. Reinstall any part removed.

OK or NG

- OK >> GO TO 7.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

## 7. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [CVT-132, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 8.

# DTC P0826 MANUAL MODE SWITCH CIRCUIT

## 8. CHECK TCM

1. Check TCM input/output signal. Refer to [CVT-56, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG


- OK >> **INSPECTION END**  
 NG >> Repair or replace damaged parts.

### Component Inspection MANUAL MODE SWITCH

ACS004Z5

Check continuity between CVT device harness connector terminals.

Item	Position	Connector	Terminal	Continuity
Manual mode select switch	Auto	M57	12 - 11	Yes
	Manual		3 - 11	
Manual mode position select switch	Up		8 - 11	
	Down		7 - 11	

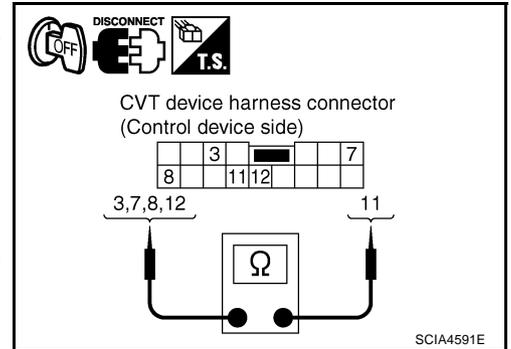

### CVT Position Indicator DIAGNOSTIC PROCEDURE

ACS004Z6

#### 1. CHECK INPUT SIGNALS

Ⓟ With CONSULT-II

1. Start engine.
2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II and read out the value of "M GEAR POS".
3. Drive vehicle in the manual mode, and confirm that the actual gear position and the meter's indication of the position mutually coincide when the select lever is shifted to the "+ (up)" or "- (down)" side (1st ↔ 6th gear).

OK or NG

- OK >> **INSPECTION END**  
 NG >> Check the following.

#### CVT Position Indicator Symptom Chart

Items	Presumed location of trouble
The actual gear position does not change, or shifting into the manual mode is not possible (no gear shifting in the manual mode possible). The CVT position indicator is not indicated.	Manual mode switch Refer to <a href="#">CVT-132, "DTC P0826 MANUAL MODE SWITCH CIRCUIT"</a> . CVT main system (Fail-safe function actuated) ● Refer to <a href="#">CVT-62, "SELF-DIAGNOSTIC RESULT MODE"</a> .
The actual gear position changes, but the CVT position indicator is not indicated.	Execute the self-diagnosis function. ● Refer to <a href="#">CVT-62, "SELF-DIAGNOSTIC RESULT MODE"</a> .
The actual gear position and the indication on the CVT position indicator do not coincide.	Execute the self-diagnosis function. ● Refer to <a href="#">CVT-62, "SELF-DIAGNOSTIC RESULT MODE"</a> .
Only a specific position or positions is/are not indicated on the CVT position indicator.	Check the meter control unit. Refer to <a href="#">DI-4, "COMBINATION METERS"</a> .

# DTC P0840 TRANSMISSION FLUID PRESSURE SENSOR A CIRCUIT (SEC PRESSURE SENSOR)

## DTC P0840 TRANSMISSION FLUID PRESSURE SENSOR A CIRCUIT (SEC PRESSURE SENSOR)

PFP:31936

### Description

ACS002JM

The transmission fluid pressure sensor A (secondary pressure sensor) detects secondary pressure of CVT and sends TCM the signal.

### CONSULT-II Reference Value

ACS002TJ

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
SEC HYDR SEN	"N" position idle	0.8 - 1.0V
SEC PRS		0.8 - 0.9MPa

### On Board Diagnosis Logic

ACS002TK

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "TR PRS SENS/A CIRC" with CONSULT-II or P0840 without CONSULT-II is detected when TCM detects an improper voltage drop when it tries to operate the sensor.

### Possible Cause

ACS002JO

- Transmission fluid pressure sensor A (Secondary pressure sensor)
- Harness or connectors  
(Switch circuit is open or shorted.)

### DTC Confirmation Procedure

ACS002JP

#### CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 5 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Make sure that output voltage of line temperature sensor is within the range below.  
**ATF TEMP SEN: 1 - 2V**  
**If out of range, drive the vehicle to decrease the voltage (warm up the fluid) or stop engine to increase the voltage (cool down the fluid)**
3. Start engine and wait for at least 5 consecutive seconds.
4. If DTC is detected, go to [CVT-139, "Diagnostic Procedure"](#).

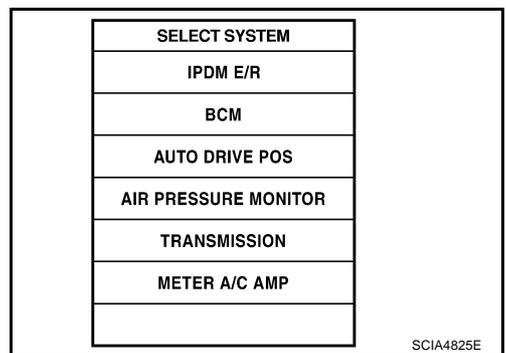

#### WITH GST

Follow the procedure "WITH CONSULT-II".



# DTC P0840 TRANSMISSION FLUID PRESSURE SENSOR A CIRCUIT (SEC PRESSURE SENSOR)

## Wiring Diagram — CVT — SECPS

ACS002TL

### CVT-SECPS-01

: DETECTABLE LINE FOR DTC  
 : NON-DETECTABLE LINE FOR DTC

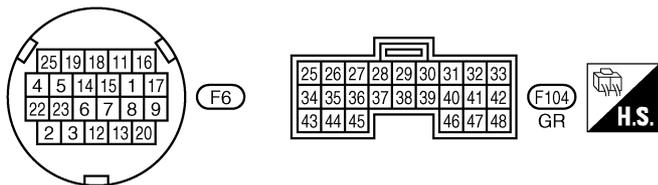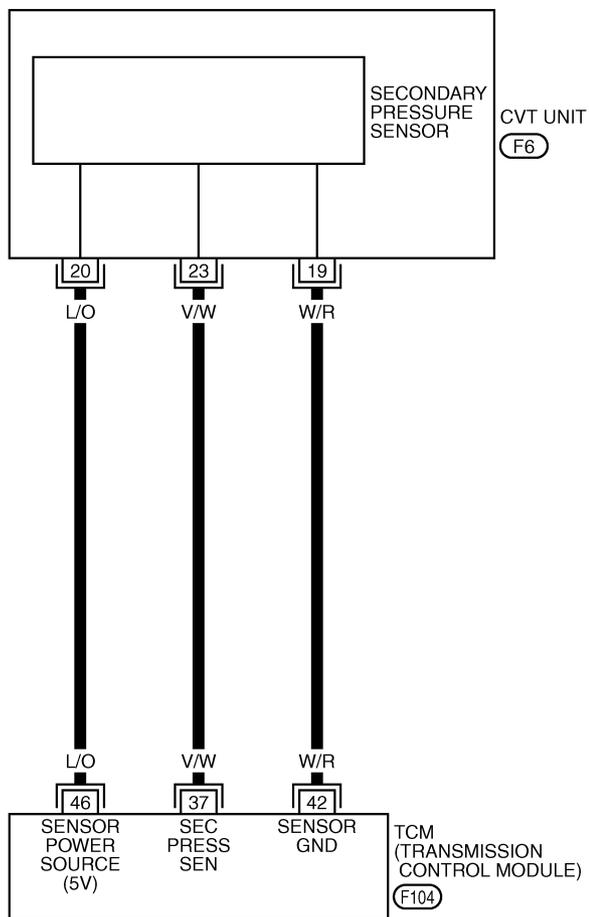

TCWA0253E

# DTC P0840 TRANSMISSION FLUID PRESSURE SENSOR A CIRCUIT (SEC PRESSURE SENSOR)

TCM terminal and data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)
37	V/W	Transmission fluid pressure sensor A (Secondary pressure sensor)	 and 	"N" position idle  0.8V
42	W/R	Sensor ground	Always	0V
46	L/O	Sensor power		— 4.5 - 5.5V
				— 0V

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

## Diagnostic Procedure


ACS002JQ

### 1. CHECK INPUT SIGNAL

#### Ⓜ With CONSULT-II

- Start engine.
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Start vehicle and read out the value of "SEC HYDR SEN".

Item name	Condition	Display value (Approx.)
SEC HYDR SEN	"N" position idle	0.8 - 1.0V

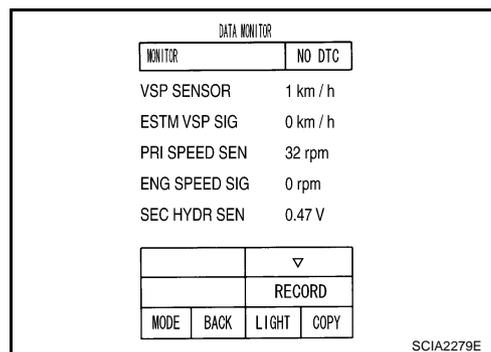


#### ⊗ Without CONSULT-II

- Start engine.
- Check voltage between TCM connector terminal and ground.

Name	Connector	Terminal (Wire color)	Condition	Voltage (Approx.)
Transmission fluid pressure sensor A (Secondary pressure sensor)	F104	37 (V/W) - Ground	"N" position idle	0.8V

#### OK or NG

- OK >> GO TO 5.  
 NG >> GO TO 2.

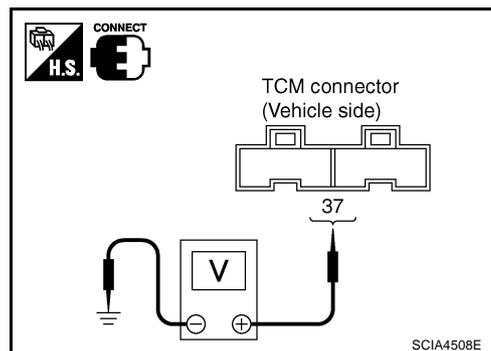

# DTC P0840 TRANSMISSION FLUID PRESSURE SENSOR A CIRCUIT (SEC PRESSURE SENSOR)


## 2. CHECK SENSOR POWER AND SENSOR GROUND

1. Turn ignition switch ON. (Do not start engine.)
2. Check voltage between TCM connector terminals.

Item	Connector	Terminal (Wire color)	Data (Approx.)
TCM connector	F104	46 (L/O) - 42 (W/R)	5V

OK or NG


- OK >> GO TO 4.  
 NG >> GO TO 3.

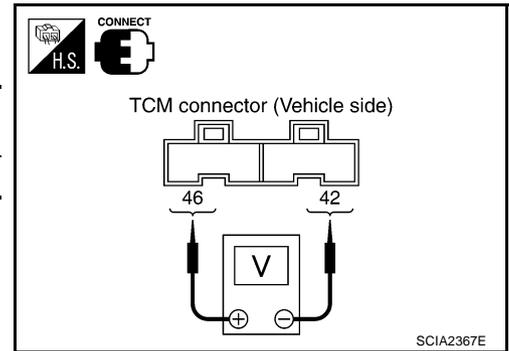

## 3. CHECK HARNESS BETWEEN TCM AND CVT UNIT HARNESS CONNECTOR (SENSOR POWER AND SENSOR GROUND)

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit harness connector.
3. Check continuity between TCM connector terminal and CVT unit harness connector terminal.

Item	Connector	Terminal (Wire color)	Continuity
TCM	F104	42 (W/R)	Yes
CVT unit harness connector	F6	19 (W/R)	
TCM	F104	46 (L/O)	Yes
CVT unit harness connector	F6	20 (L/O)	

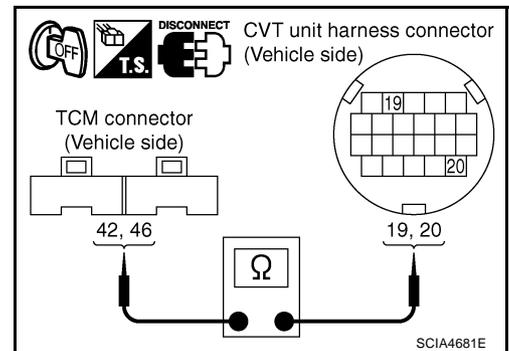

4. If OK, check harness for short to ground and short to power.
5. Reinstall any part removed.

OK or NG

- OK >> Replace TCM. Refer to [CVT-8, "Precautions for TCM and CVT Assembly Replacement"](#) .  
 NG >> Repair open circuit or short to ground or short to power in harness or connectors.

## 4. CHECK TRANSMISSION FLUID PRESSURE SENSOR A (SECONDARY PRESSURE SENSOR) CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit harness connector.
3. Check continuity between TCM connector terminal and CVT unit harness connector terminal.

Item	Connector	Terminal (Wire color)	Continuity
TCM	F104	37 (V/W)	Yes
CVT unit harness connector	F6	23 (V/W)	

4. If OK, check harness for short to ground and short to power.
5. Reinstall any part removed.

OK or NG

- OK >> GO TO 5.  
 NG >> Repair open circuit or short to ground or short to power in harness or connectors.

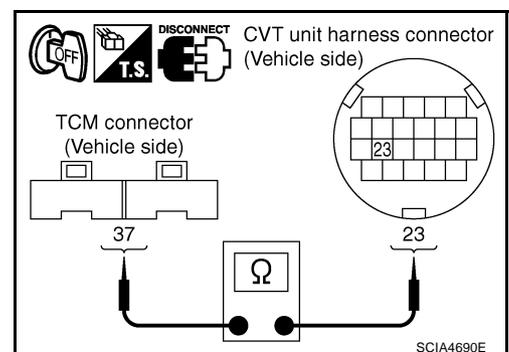

# DTC P0840 TRANSMISSION FLUID PRESSURE SENSOR A CIRCUIT (SEC PRESSURE SENSOR)

---

## 5. CHECK DTC

---

Perform "DTC Confirmation Procedure". Refer to [CVT-137, "DTC Confirmation Procedure"](#) .

OK or NG

OK >> **INSPECTION END**  
NG >> GO TO 6.

---

## 6. CHECK TCM

---

1. Check TCM input/output signal. Refer to [CVT-56, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> Replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#) .  
NG >> Repair or replace damaged parts.

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# DTC P0841 PRESSURE SENSOR FUNCTION

## DTC P0841 PRESSURE SENSOR FUNCTION

PFP:31936

### Description

ACS002TM

Using the engine load (throttle position), the primary pulley revolution speed, and the secondary pulley revolution speed as input signal, change the operating pressure of the primary pulley and the secondary pulley and change the groove width of the pulley to control the gear ratio.

### CONSULT-II Reference Value

ACS002TN

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
PRI HYDR SEN	"N" position idle	0.7 - 3.5V
SEC HYDR SEN		0.8 - 1.0V

### On Board Diagnosis Logic

ACS002JS

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "PRESS SEN/FNCTN" with CONSULT-II is detected when correlation between the values of the secondary pressure sensor and the primary pressure sensor is out of specification.

### Possible Cause

ACS002JT

- Transmission fluid pressure sensor A (Secondary pressure sensor)
- Transmission fluid pressure sensor B (Primary pressure sensor)
- Harness or connectors  
(Sensor circuit is open or shorted.)

### DTC Confirmation Procedure

ACS002TO

#### CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 5 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### ④ WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Start engine and maintain the following conditions for at least 12 consecutive seconds.  
**VHCL SPEED: 40 km/h (25 MPH) More than**  
**Selector lever: D position**
3. If DTC is detected, go to [CVT-143, "Diagnostic Procedure"](#).

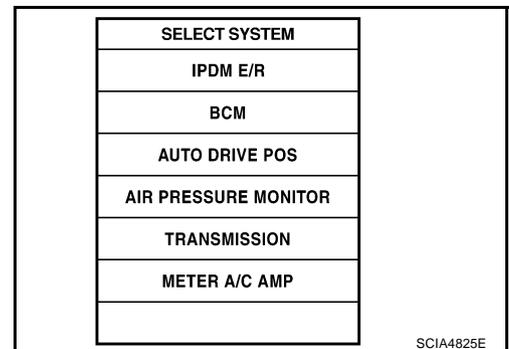

# DTC P0841 PRESSURE SENSOR FUNCTION

ACS002TP

## Diagnostic Procedure

### 1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Refer to [CVT-62, "SELF-DIAGNOSTIC RESULT MODE"](#).

Is any malfunction of the "CAN COMM CIRCUIT" indicated?

- YES >> Check CAN communication line. Refer to [CVT-71, "DTC U1000 CAN COMMUNICATION LINE"](#).
- NO >> GO TO 2.

### 2. CHECK INPUT SIGNALS

#### With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start vehicle and read out the value of "SEC HYDR SEN" and "PRI HYDR SEN".

Item name	Condition	Display value (Approx.)
PRI HYDR SEN	"N" position idle	0.7 - 3.5V
SEC HYDR SEN		0.8 - 1.0V

DATA MONITOR	
MONITOR	NO DTC
SEC HYDR SEN	0.47 v
PRI HYDR SEN	0.47 v
ATF TEMP SEN	1.92 v
VIGN SEN	10.7 v
ACC PEDAL OPEN	0.0 / 8


△	▽
RECORD	
MODE	BACK LIGHT COPY

SCIA2277E

#### Without CONSULT-II

1. Start engine.
2. Check voltage between TCM connector terminals and ground.

Name	Connector	Terminal (Wire color)	Condition	Voltage (Approx.)
Transmission fluid pressure sensor B (Primary pressure sensor)	F104	41 (V/O) - Ground	"N" position idle	0.7 - 3.5V
Transmission fluid pressure sensor A (Secondary pressure sensor)		37 (V/W) - Ground		0.8V

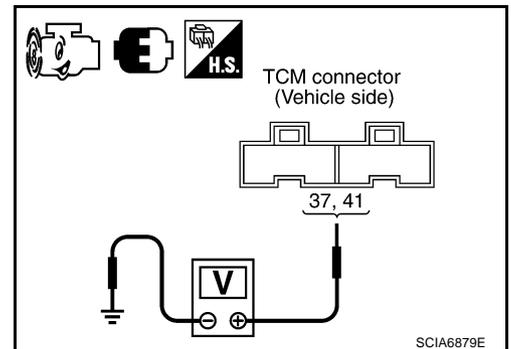

OK or NG


- OK >> GO TO 6.
- NG >> GO TO 3.

### 3. CHECK LINE PRESSURE

Perform line pressure test. Refer to [CVT-42, "LINE PRESSURE TEST"](#).

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace damaged parts. Refer to [CVT-43, "Judgement of Line Pressure Test"](#).

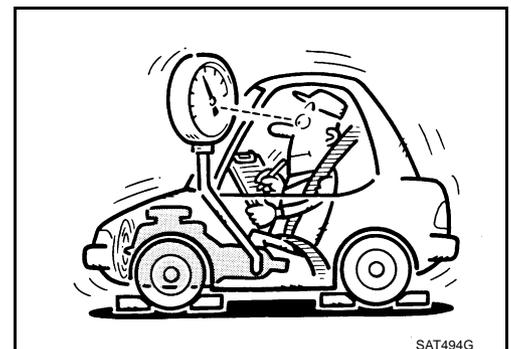

## DTC P0841 PRESSURE SENSOR FUNCTION

---

### 4. CHECK TRANSMISSION FLUID PRESSURE SENSOR A (SECONDARY PRESSURE SENSOR) SYSTEM AND TRANSMISSION FLUID PRESSURE SENSOR B (PRIMARY PRESSURE SENSOR) SYSTEM

---

Check secondary pressure sensor system and primary pressure sensor system. Refer to [CVT-137, "DTC P0840 TRANSMISSION FLUID PRESSURE SENSOR A CIRCUIT \(SEC PRESSURE SENSOR\)"](#), [CVT-145, "DTC P0845 TRANSMISSION FLUID PRESSURE SENSOR B CIRCUIT \(PRI PRESSURE SENSOR\)"](#).

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

### 5. DETECT MALFUNCTIONING ITEM

---

Check the following:

- Line pressure solenoid valve. Refer to [CVT-120, "Component Inspection"](#).
- Secondary pressure solenoid valve. Refer to [CVT-131, "Component Inspection"](#).
- Step motor. Refer to [CVT-175, "Component Inspection"](#).

OK or NG6

- OK >> GO TO 6.
- NG >> Repair or replace damaged parts.

### 6. CHECK DTC

---

Perform "DTC Confirmation Procedure". Refer to [CVT-142, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
- NG >> Replace TCM or transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#).

# DTC P0845 TRANSMISSION FLUID PRESSURE SENSOR B CIRCUIT (PRI PRESSURE SENSOR)

## DTC P0845 TRANSMISSION FLUID PRESSURE SENSOR B CIRCUIT (PRI PRESSURE SENSOR)

PFP:31936

### Description

ACS0027Q

The primary pressure sensor detects primary pressure of CVT and sends TCM the signal.

### CONSULT-II Reference Value

ACS0027R

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
PRI HYDR SEN	"N" position idle	0.7 - 3.5V

### On Board Diagnosis Logic

ACS0027S

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "TR PRS SENS/B CIRC" with CONSULT-II or P0845 without CONSULT-II is detected under the following conditions.
  - When TCM detects an improper voltage drop when it tries to operate the sensor.
  - When TCM compares target value with monitor value and detects an irregularity.

### Possible Cause

ACS0027T

- Transmission fluid pressure sensor B (Primary pressure sensor)
- Harness or connectors  
(Sensor circuit is open or shorted.)

### DTC Confirmation Procedure

ACS0027U

#### CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 5 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Make sure that output voltage of line temperature sensor is within the range below.  
**ATF TEMP SEN: 1 - 2V**  
**If out of range, drive the vehicle to decrease the voltage (warm up the fluid) or stop engine to increase the voltage (cool down the fluid)**
3. Start engine and wait for at least 5 consecutive seconds.
4. If DTC is detected, go to [CVT-147, "Diagnostic Procedure"](#).

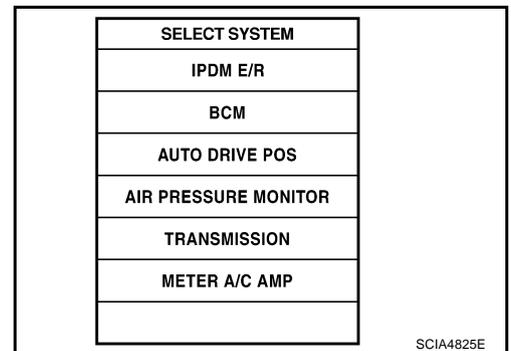

#### WITH GST

Follow the procedure "WITH CONSULT-II".



# DTC P0845 TRANSMISSION FLUID PRESSURE SENSOR B CIRCUIT (PRI PRESSURE SENSOR)

## Wiring Diagram — CVT — PRIPS

ACS002TV

### CVT-PRIPS-01

: DETECTABLE LINE FOR DTC  
 : NON-DETECTABLE LINE FOR DTC

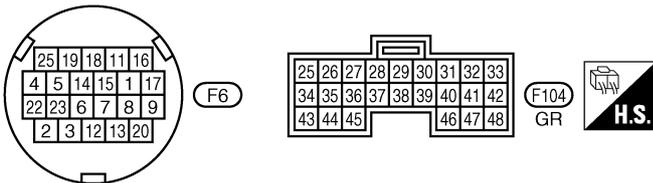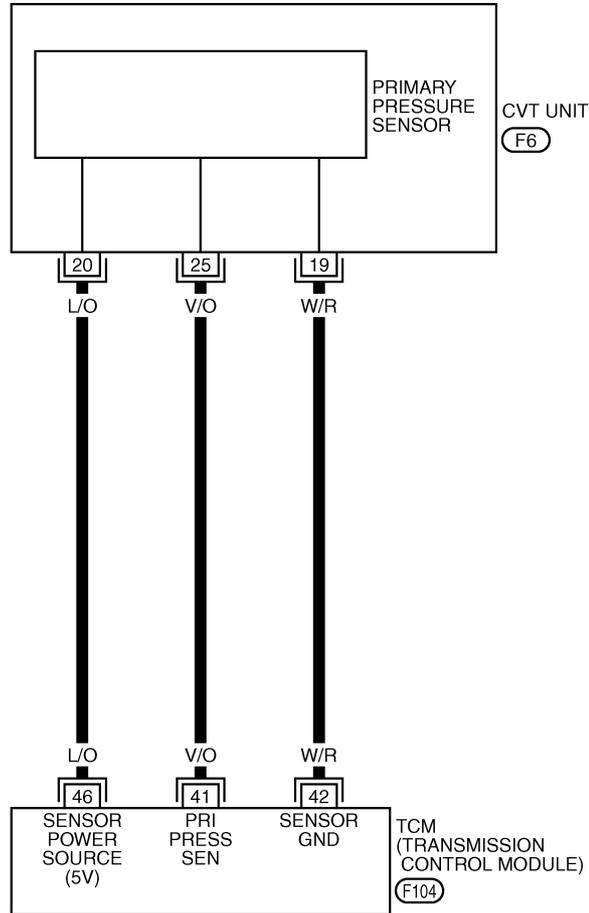

TCWA0255E

# DTC P0845 TRANSMISSION FLUID PRESSURE SENSOR B CIRCUIT (PRI PRESSURE SENSOR)

TCM terminal and data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)
41	V/O	Transmission fluid pressure sensor B (Primary pressure sensor)	 and 	"N" position idle  0.7 - 3.5V
42	W/R	Sensor ground	Always	0V
46	L/O	Sensor power		— 4.5 - 5.5V
				— 0V

## Diagnostic Procedure

ACS002TW

### 1. CHECK INPUT SIGNAL

#### ④ With CONSULT-II

- Start engine.
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Start vehicle and read out the value of "PRI HYDR SEN".

Item name	Condition	Display value (Approx.)
PRI HYDR SEN	"N" position idle	0.7 - 3.5V

DATA MONITOR

MONITOR	NO DTC
SEC HYDR SEN	0.47 v
PRI HYDR SEN	0.47 v
ATF TEMP SEN	1.92 v
VIGN SEN	10.7 v
ACC PEDAL OPEN	0.0 / 8


△		▽	
RECORD			
MODE	BACK	LIGHT	COPY

SCIA2277E

#### ⊗ Without CONSULT-II

- Start engine.
- Check voltage between TCM connector terminal and ground.

Name	Connector	Terminal (Wire color)	Condition	Voltage (Approx.)
Transmission fluid pressure sensor B (Primary pressure sensor)	F104	41 (V/O) - Ground	"N" position idle	0.7 - 3.5V

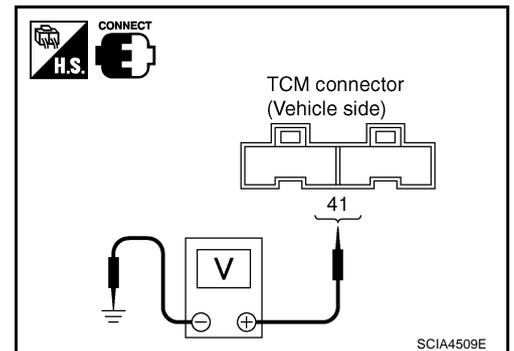

#### OK or NG

- OK >> GO TO 5.  
 NG >> GO TO 2.

# DTC P0845 TRANSMISSION FLUID PRESSURE SENSOR B CIRCUIT (PRI PRESSURE SENSOR)


## 2. CHECK SENSOR POWER AND SENSOR GROUND

1. Turn ignition switch ON. (Do not start engine.)
2. Check voltage between TCM connector terminals.

Item	Connector	Terminal (Wire color)	Data (Approx.)
TCM connector	F104	46 (L/O) - 42 (W/R)	5V

OK or NG

- OK >> GO TO 4.  
 NG >> GO TO 3.

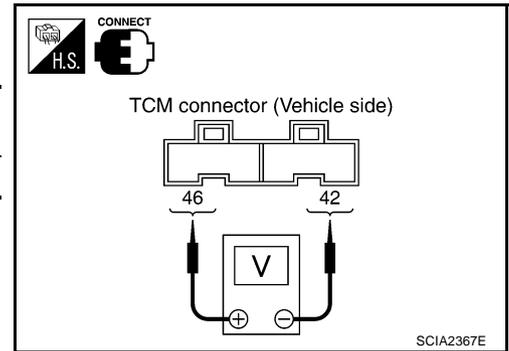

## 3. CHECK HARNESS BETWEEN TCM AND CVT UNIT HARNESS CONNECTOR (SENSOR POWER AND SENSOR GROUND)


1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit harness connector.
3. Check continuity between TCM connector terminal and CVT unit harness connector terminal.

Item	Connector	Terminal (Wire color)	Continuity
TCM	F104	42 (W/R)	Yes
CVT unit harness connector	F6	19 (W/R)	
TCM	F104	46 (L/O)	Yes
CVT unit harness connector	F6	20 (L/O)	

4. If OK, check harness for short to ground and short to power.
5. Reinstall any part removed.

OK or NG

- OK >> Replace TCM. Refer to [CVT-8, "Precautions for TCM and CVT Assembly Replacement"](#) .  
 NG >> Repair open circuit or short to ground or short to power in harness or connectors.

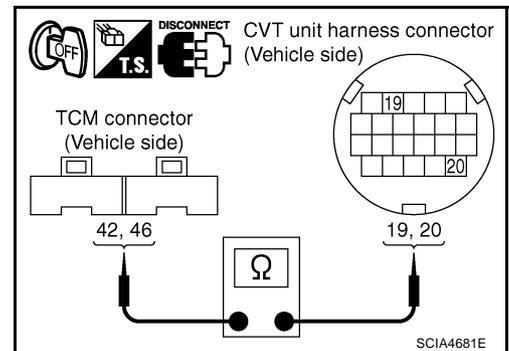

## 4. CHECK TRANSMISSION FLUID PRESSURE SENSOR B (PRIMARY PRESSURE SENSOR) CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM connector terminal and CVT unit harness connector terminal.

Item	Connector	Terminal (Wire color)	Continuity
TCM	F104	41 (V/O)	Yes
CVT unit harness connector	F6	25 (V/O)	

4. If OK, check harness for short to ground and short to power.
5. Reinstall any part removed.

OK or NG

- OK >> GO TO 5.  
 NG >> Repair open circuit or short to ground or short to power in harness or connectors.

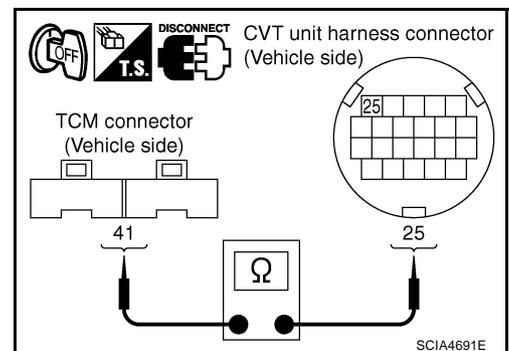

# DTC P0845 TRANSMISSION FLUID PRESSURE SENSOR B CIRCUIT (PRI PRESSURE SENSOR)

---

## 5. CHECK DTC

---

Perform "DTC Confirmation Procedure". Refer to [CVT-145, "DTC Confirmation Procedure"](#) .

OK or NG

OK >> **INSPECTION END**  
NG >> GO TO 6.

---

## 6. CHECK TCM

---

1. Check TCM input/output signal. Refer to [CVT-56, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> Replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#) .  
NG >> Repair or replace damaged parts.

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# DTC P0868 SECONDARY PRESSURE DOWN

## DTC P0868 SECONDARY PRESSURE DOWN

PFP:31941

### Description

ACS002TX

The pressure control solenoid valve B (secondary pressure solenoid valve) regulates the secondary pressure to suit the driving condition in response to a signal sent from the TCM.

### CONSULT-II Reference Value

ACS002TY

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
SEC PRESS	"N" position idle	0.5 - 0.9MPa

### On Board Diagnosis Logic

ACS002TZ

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "SEC/PRESS DOWN" with CONSULT-II is detected when secondary fluid pressure is too low compared with the commanded value while driving.

### Possible Cause

ACS002U0

- Harness or connectors (Solenoid circuit is open or shorted.)
- Pressure control solenoid valve B (Secondary pressure solenoid valve) system
- Transmission fluid pressure sensor A (Secondary pressure sensor)
- Line pressure control system

### DTC Confirmation Procedure

ACS002U1

#### CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.

#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 5 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### Ⓜ WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Make sure that output voltage of CVT fluid temperature sensor is within the range below.  
**FLUID TEMP SEN: 1.0 - 2.0V**  
**If out of range, drive the vehicle to decrease the voltage (warm up the fluid) or stop engine to increase the voltage (cool down the fluid)**
3. Start engine and maintain the following conditions for at least 10 consecutive seconds.  
**VEHICLE SPEED (accelerate slowly): 0 → 50 km/h (31 MPH)**  
**ACC PEDAL OPEN: 0.5/8 - 1.0/8**  
**Selector lever: D position**
4. If DTC is detected, go to [CVT-151, "Diagnostic Procedure"](#).

SELECT SYSTEM
IPDM E/R
BCM
AUTO DRIVE POS
AIR PRESSURE MONITOR
TRANSMISSION
METER A/C AMP

SCIA4825E

# DTC P0868 SECONDARY PRESSURE DOWN

ACS002UZ

## Diagnostic Procedure

### 1. CHECK INPUT SIGNAL

#### With CONSULT-II

1. Start engine.
2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start vehicle and read out the value of "SEC PRESS".

Item name	Condition	Display value (Approx.)
SEC PRESS	"N" position idle	0.5 - 0.9MPa

#### OK or NG

- OK >> GO TO 5.  
NG >> GO TO 2.

DATA MONITOR	
MONITOR	NO DTC
GEAR RATIO	2.37
ACC PEDAL OPEN	0.0 / 8
VENG TRQ	217.6 Nm
SEC PRESS	0.000 MPa
PRI PRESS	0.000 MPa

△	▽		
RECORD			
MODE	BACK	LIGHT	COPY


SCIA2366E

### 2. CHECK LINE PRESSURE

Perform line pressure test. Refer to [CVT-42, "LINE PRESSURE TEST"](#).

#### OK or NG

- OK >> GO TO 3.  
NG >> Repair or replace damaged parts. Refer to [CVT-43, "Judgement of Line Pressure Test"](#).

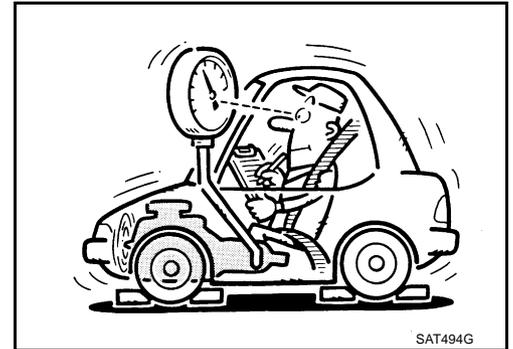

### 3. DETECT MALFUNCTIONING ITEM

Check the following:

- Pressure control solenoid valve B (Secondary pressure solenoid valve). Refer to [CVT-131, "Component Inspection"](#).
- Pressure control solenoid valve A (Line pressure solenoid valve). Refer to [CVT-120, "Component Inspection"](#).

#### OK or NG

- OK >> GO TO 4.  
NG >> Repair or replace damaged parts.

### 4. CHECK TRANSMISSION FLUID PRESSURE SENSOR A (SECONDARY PRESSURE SENSOR) SYSTEM

Check transmission fluid pressure sensor A (secondary pressure sensor) system. Refer to [CVT-137, "DTC P0840 TRANSMISSION FLUID PRESSURE SENSOR A CIRCUIT \(SEC PRESSURE SENSOR\)"](#).

#### OK or NG

- OK >> GO TO 5.  
NG >> Repair or replace damaged parts.

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

## DTC P0868 SECONDARY PRESSURE DOWN

---

### 5. DETECT MALFUNCTIONING ITEM

---

Check the following:

- Power supply and ground circuit for TCM. Refer to [CVT-154, "Wiring Diagram — CVT — POWER"](#) .
- The TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> GO TO 6.

NG >> Repair or replace damaged parts.

### 6. CHECK DTC

---

Perform "DTC Confirmation Procedure". Refer to [CVT-150, "DTC Confirmation Procedure"](#) .

OK or NG

OK >> **INSPECTION END**

NG >> Replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#) .

# DTC P1701 TRANSMISSION CONTROL MODULE (POWER SUPPLY)

## DTC P1701 TRANSMISSION CONTROL MODULE (POWER SUPPLY)

PFP:31036

### Description

ACS0064C

When the power supply to the TCM is cut "OFF", for example because the battery is removed, and the self-diagnostics memory function stops, malfunction is detected.

#### NOTE:

Since "TCM-POWER SUPPLY" will be indicated when replacing TCM, perform diagnosis after erasing "SELF-DIAG RESULTS"

### On Board Diagnosis Logic

ACS0064D

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "TCM-POWER SUPPLY" with CONSULT-II is detected when TCM does not receive the voltage signal from the battery power supply.
- This is not a malfunction message. (Whenever shutting "OFF" a power supply to the TCM, this message appears on the screen.)

### Possible Cause

ACS0064E

Harness or connectors  
(Battery or ignition switch and TCM circuit is open or shorted.)

### DTC Confirmation Procedure

ACS0064F

#### NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### Ⓟ WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Wait for at least 2 consecutive seconds.
4. If DTC is detected, go to [CVT-155, "Diagnostic Procedure"](#) .

SELECT SYSTEM
IPDM E/R
BCM
AUTO DRIVE POS
AIR PRESSURE MONITOR
TRANSMISSION
METER A/C AMP




SCIA4825E

# DTC P1701 TRANSMISSION CONTROL MODULE (POWER SUPPLY)




ACS0064J

## Wiring Diagram — CVT — POWER

### CVT-POWER-01

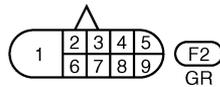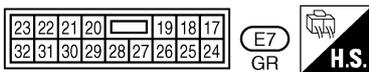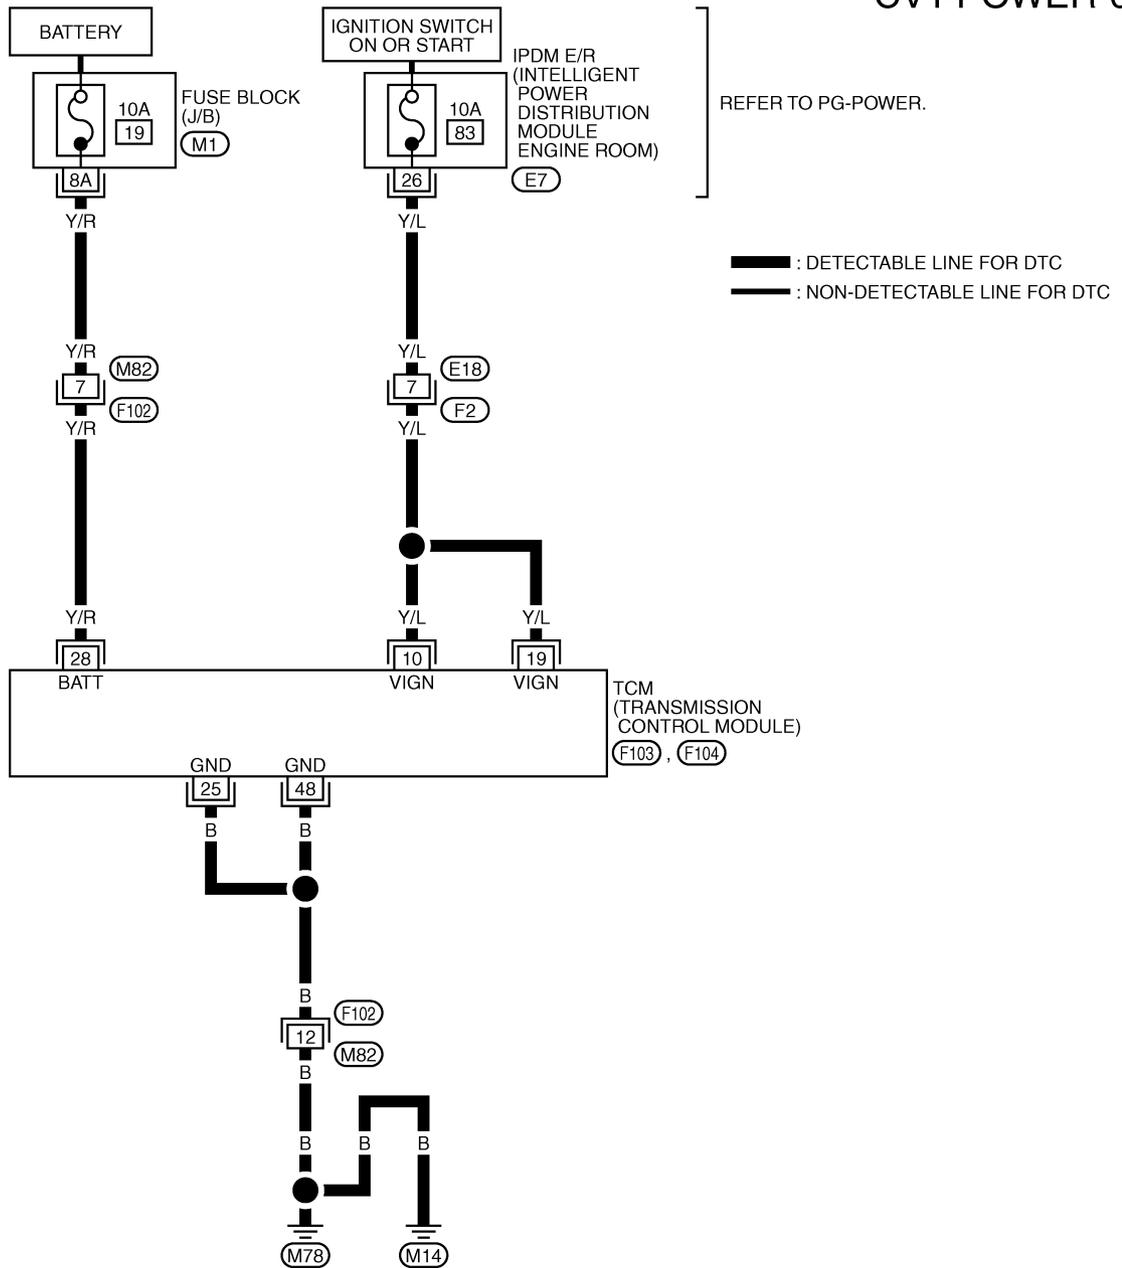

REFER TO THE FOLLOWING.  
 (M1) - FUSE BLOCK-JUNCTION BOX (J/B)

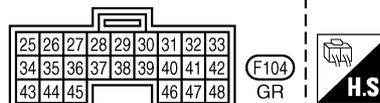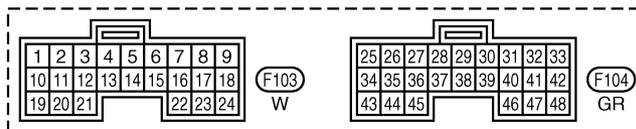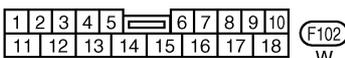

TCWA0259E

# DTC P1701 TRANSMISSION CONTROL MODULE (POWER SUPPLY)

TCM terminals and data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition		Data (Approx.)
10	Y/L	Power supply		-	Battery voltage
				-	0V
19	Y/L	Power supply		-	Battery voltage
				-	0V
25	B	Ground	Always		0V
28	Y/R	Power supply (memory back-up)	Always		Battery voltage
48	B	Ground	Always		0V


A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

## Diagnostic Procedure

ACS0064K

### 1. CHECK DTC

- Turn ignition switch ON. (Do not start engine.)
- Select "SELF-DIAG RESULTS" mode for "TRANSMISSION" with CONSULT-II.
- Erase self-diagnostic results. Refer to [CVT-29, "HOW TO ERASE DTC \(WITH CONSULT-II\)"](#).
- Turn ignition switch OFF, and wait for 5 seconds or more.
- Start engine.
- Confirm self-diagnostic results again. Refer to [CVT-62, "SELF-DIAGNOSTIC RESULT MODE"](#).

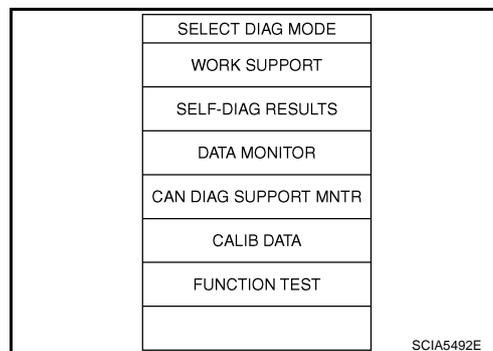

Is the "TCM-POWER SUPPLY" displayed?

YES >> GO TO 2.

NO >> **INSPECTION END**

### 2. CHECK TCM POWER SOURCE, STEP 1


- Turn ignition switch OFF.
- Check voltage between TCM connector terminal and ground.

Name	Connector	Terminal (Wire color)	Condition	Voltage (Approx.)
Power supply (memory back-up)	F104	28 (Y/R) - Ground	Always	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

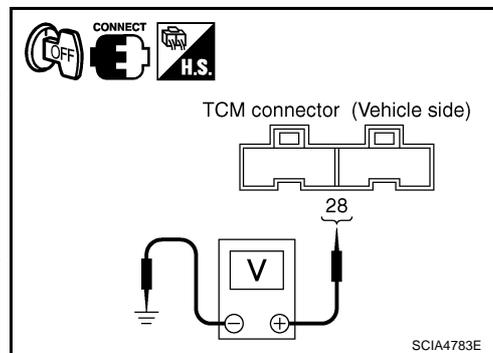


# DTC P1701 TRANSMISSION CONTROL MODULE (POWER SUPPLY)

## 3. CHECK TCM POWER SOURCE, STEP 2

1. Turn ignition switch ON. (Do not start engine.)
2. Check voltage between TCM connector terminals and ground.

Name	Connector	Terminal (Wire color)	Condition	Voltage (Approx.)
Power supply	F103	10 (Y/L) - Ground		Battery voltage
				0V
Power supply		19 (Y/L) - Ground		Battery voltage
				0V
Power supply (memory back-up)	F104	28 (Y/R) - Ground	Always	Battery voltage

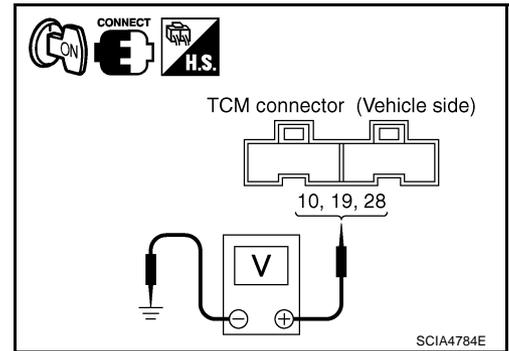

OK or NG

- OK >> GO TO 5.  
 NG >> GO TO 4.

## 4. DETECT MALFUNCTIONING ITEM

Check the following items:

- Harness for short or open between battery and TCM connector terminal 28
- Harness for short or open between ignition switch and TCM connector terminal 10, 19
- 10A fuse (No.83, located in the IPDM E/R)
- 10A fuse (No.19, located in the fuse block)
- Ignition switch. Refer to [PG-3. "POWER SUPPLY ROUTING CIRCUIT"](#) .

OK or NG

- OK >> GO TO 5.  
 NG >> Repair or replace damaged parts.


## 5. CHECK TCM GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM connector terminals and ground.

Name	Connector	Terminal (Wire color)	Continuity
Ground	F104	25 (B)	Yes
		48 (B)	

OK or NG

- OK >> GO TO 6.  
 NG >> Repair open circuit or short to ground or short to power in harness or connectors.

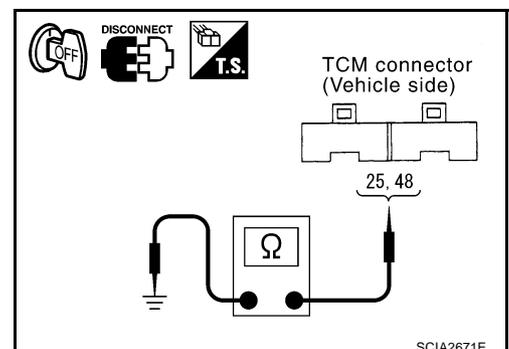

# DTC P1701 TRANSMISSION CONTROL MODULE (POWER SUPPLY)

---

## 6. CHECK DTC

---

Check again. Refer to [CVT-155, "Diagnostic Procedure"](#) .

OK or NG

OK >> **INSPECTION END**  
NG >> GO TO 7.

---

## 7. CHECK TCM

---

1. Check TCM input/output signal. Refer to [CVT-56, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**  
NG >> Repair or replace damaged parts.

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# DTC P1705 THROTTLE POSITION SENSOR

## DTC P1705 THROTTLE POSITION SENSOR

PFP:22620

### Description

ACS001VE

Electric throttle control actuator consists of throttle control motor, accelerator pedal position sensor, throttle position sensor etc. The actuator sends a signal to the ECM, and ECM sends signals to TCM with CAN communication.

### CONSULT-II Reference Value

ACS004Y8

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
ACC PEDAL OPEN	Released accelerator pedal - Fully depressed accelerator pedal	0.0/8 - 8.0/8

### On Board Diagnosis Logic

ACS001VF

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "TP SEN/CIRC A/T" with CONSULT-II is detected when TCM does not receive the proper accelerator pedal position signals (input by CAN communication) from ECM.

### Possible Cause

ACS001VG

- ECM
- Harness or connectors  
(CAN communication line is open or shorted.)

### DTC Confirmation Procedure

ACS001VH


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### ④ WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. In fully depressed and fully released conditions, wait for 5 seconds.
4. If DTC is detected, go to [CVT-159, "Diagnostic Procedure"](#).

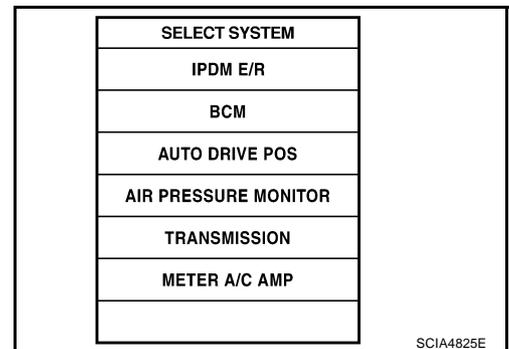

# DTC P1705 THROTTLE POSITION SENSOR

ACS001VI

## Diagnostic Procedure

### 1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Refer to [CVT-62, "SELF-DIAGNOSTIC RESULT MODE"](#).

Is any malfunction of the "CAN COMM CIRCUIT" indicated?

YES >> Check the CAN communication line. Refer to [CVT-71, "DTC U1000 CAN COMMUNICATION LINE"](#).

NO >> GO TO 2.

### 2. CHECK INPUT SIGNAL

#### With CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Read out the value of "ACC PEDAL OPEN".

Item name	Condition	Display value (Approx.)
ACC PEDAL OPEN	Release your foot from the accelerator pedal.	0.0/8
	↓ Press the accelerator pedal all the way down.	↓ 8/8

DATA MONITOR	
MONITOR	NO DTC
SEC HYDR SEN	0.47 v
PRI HYDR SEN	0.47 v
ATF TEMP SEN	1.92 v
VIGN SEN	10.7 v
ACC PEDAL OPEN	0.0 / 8

△	▽		
RECORD			
MODE	BACK	LIGHT	COPY

SCIA2277E

OK or NG

OK >> GO TO 4.

NG >> GO TO 3.

### 3. CHECK DTC WITH ECM

#### With CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "SELF-DIAG RESULTS" mode for "ENGINE" with CONSULT-II. Refer to [EC-109, "SELF-DIAG RESULTS MODE"](#).

OK or NG

OK >> GO TO 4.

NG >> Check the DTC Detected Item. Go to [EC-109, "SELF-DIAG RESULTS MODE"](#).

SELECT SYSTEM
ENGINE
ABS
AIR BAG
BCM
ALL MODE 4WD
TRANSMISSION

SCIA2272E

### 4. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [CVT-158, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.

# DTC P1722 ESTM VEHICLE SPEED SIGNAL

## DTC P1722 ESTM VEHICLE SPEED SIGNAL

PFP:47660

### Description

ACS002K6

The vehicle speed signal is transmitted from ABS actuator and electric unit (control unit) to TCM by CAN communication line.

### CONSULT-II Reference Value

ACS004Y9

Remarks: Specification data are reference values.

Item name	Condition	Display value
ESTM VSP SIG	During driving	Approximately matches the speedometer reading.
VEHICLE SPEED		

### On Board Diagnosis Logic

ACS002K7

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "ESTM VEH SPD SIG" with CONSULT-II is detected when TCM does not receive the proper vehicle speed signal (input by CAN communication) from ABS actuator and electric unit (control unit).

### Possible Cause

ACS002K8

- Harness or connectors  
(Sensor circuit is open or shorted.)
- ABS actuator and electric unit (control unit)

### DTC Confirmation Procedure

ACS002K9

#### CAUTION:

Always drive vehicle at a safe speed.


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

#### ④ WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine and maintain the following conditions for at least 5 consecutive seconds.  
**ACCELE POS: 1/8 or less**  
**VHCL SPEED SE: 30 km/h (17 MPH) or more**
4. If DTC is detected, go to [CVT-161, "Diagnostic Procedure"](#).

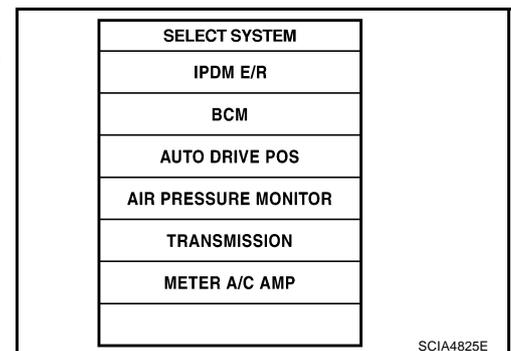

# DTC P1722 ESTM VEHICLE SPEED SIGNAL

ACS002KA

## Diagnostic Procedure

### 1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Refer to [CVT-62, "SELF-DIAGNOSTIC RESULT MODE"](#).

Is any malfunction of the "CAN COMM CIRCUIT" indicated?

- YES >> Check CAN communication line. Refer to [CVT-71, "DTC U1000 CAN COMMUNICATION LINE"](#).
- NO >> GO TO 2.

### 2. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Perform ABS actuator and electric unit (control unit) self-diagnosis. Refer to [BRC-21, "SELF-DIAGNOSIS"](#) (ABS models) or [BRC-71, "SELF-DIAGNOSIS"](#) (VDC/TCS/ABS models).

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace damaged parts.


### 3. CHECK INPUT SIGNAL

 With CONSULT-II

1. Start engine.
2. Select "SELECTION FROM MENU" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Drive vehicle and read out the value of "VEHICLE SPEED" and "ESTM VSP SIG".

Item name	Condition	Display value
ESTM VSP SIG	During driving	Approximately matches the speedometer reading.
VEHICLE SPEED		

4. Check if there is a great difference between the two values.

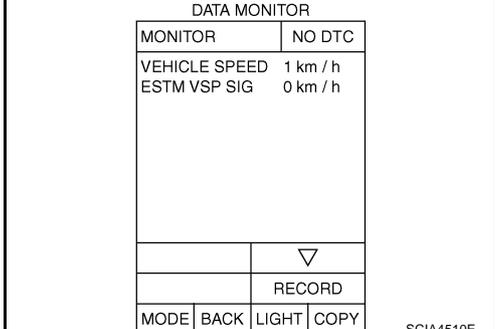

DATA MONITOR			
MONITOR		NO DTC	
VEHICLE SPEED	1 km / h		
ESTM VSP SIG	0 km / h		
		▽	
RECORD			
MODE	BACK	LIGHT	COPY

SCIA4510E

OK or NG

- OK >> GO TO 5.
- NG >> GO TO 4.

### 4. CHECK TCM

Check TCM input/output signal. Refer to [CVT-56, "TCM Input/Output Signal Reference Values"](#).

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

### 5. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [CVT-160, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 2.

# DTC P1723 CVT SPEED SENSOR FUNCTION

## DTC P1723 CVT SPEED SENSOR FUNCTION

PFP:31907

### Description

ACS002KB

The vehicle speed sensor CVT [output speed sensor (secondary speed sensor)] detects the revolution of the idler gear parking pawl lock gear and emits a pulse signal. The pulse signal is sent to the TCM, which converts it into vehicle speed.

The input speed sensor (primary speed sensor) detects the primary pulley revolution speed and sends a signal to the TCM.

### On Board Diagnosis Logic

ACS002U3

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "CVT SPD SEN/FNCTN" with CONSULT-II is detected when there is a great difference between the vehicle speed signal and the secondary speed sensor signal.

#### CAUTION:

One of the "secondary rotation", the "primary rotation or the "engine speed" is displayed at the same time.

### Possible Cause

ACS002KD

- Harness or connectors  
(Sensor circuit is open or shorted.)
- Output speed sensor (Secondary speed sensor)
- Input speed sensor (Primary speed sensor)
- Engine speed signal system

### DTC Confirmation Procedure

ACS002U4

#### CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.

#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 5 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Start engine and maintain the following conditions for at least 5 consecutive seconds.  
**VHCL SPEED SE: 10 km/h (6 MPH) or more**  
**THRTL POS SEN: More than 1.2V**  
**Selector lever: D position**  
**ENG SPEED: 450 rpm or more**  
**Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.**
3. If DTC is detected, go to [CVT-163, "Diagnostic Procedure"](#).

SELECT SYSTEM
IPDM E/R
BCM
AUTO DRIVE POS
AIR PRESSURE MONITOR
TRANSMISSION
METER A/C AMP

SCIA4825E

# DTC P1723 CVT SPEED SENSOR FUNCTION

ACS002KF

## Diagnostic Procedure

### 1. CHECK STEP MOTOR FUNCTION

Perform the self-diagnosis. Refer to [CVT-62, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is a malfunction in the step motor function indicated in the results?

YES >> Repair or replace damaged parts. (Check the step motor function. Refer to [CVT-176, "DTC P1778 STEP MOTOR - FUNCTION"](#) .)

NO >> GO TO 2.

### 2. CHECK OUTPUT SPEED SENSOR (SECONDARY SPEED SENSOR SYSTEM) AND INPUT SPEED SENSOR (PRIMARY SPEED SENSOR) SYSTEM

Check secondary speed sensor system and primary speed sensor system. Refer to [CVT-98, "DTC P0720 VEHICLE SPEED SENSOR CVT \(SECONDARY SPEED SENSOR\)"](#) , [CVT-93, "DTC P0715 INPUT SPEED SENSOR CIRCUIT \(PRI SPEED SENSOR\)"](#) .

OK or NG

OK >> GO TO 3.

NG >> Repair or replace damaged parts.

### 3. CHECK ENGINE SPEED SIGNAL SYSTEM

Check engine speed signal system. Refer to [CVT-104, "DTC P0725 ENGINE SPEED SIGNAL"](#) .

OK or NG

OK >> GO TO 4.

NG >> Repair or replace damaged parts. Refer to [EC-595, "IGNITION SIGNAL"](#) .

### 4. DETECT MALFUNCTIONING ITEM

Check the following:

- Power supply and ground circuit for TCM. Refer to [CVT-154, "Wiring Diagram — CVT — POWER"](#) .
- The TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> GO TO 5.

NG >> Repair or replace damaged parts.

### 5. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [CVT-162, "DTC Confirmation Procedure"](#) .

OK or NG

OK >> **INSPECTION END**

NG >> Replace TCM or transaxle assembly. Refer to [CVT-8, "Precautions for TCM and CVT Assembly Replacement"](#) , [CVT-224, "Removal and Installation"](#) .

# DTC P1726 ELECTRIC THROTTLE CONTROL SYSTEM

## DTC P1726 ELECTRIC THROTTLE CONTROL SYSTEM

PFP:23710

### Description

ACS002KG

Electric throttle control actuator consists of throttle control motor, accelerator pedal position sensor, throttle position sensor etc. The actuator sends a signal to the ECM, and ECM sends signals to TCM with CAN communication.

### On Board Diagnosis Logic

ACS002U5

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "ELEC TH CONTROL" with CONSULT-II is detected when the electronically controlled throttle for ECM is malfunctioning.

### Possible Cause

ACS002KI

Harness or connectors  
(Sensor circuit is open or shorted.)

### DTC Confirmation Procedure

ACS002KJ

#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

#### ④ WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine and let it idle for 5 second.
4. If DTC is detected, go to [CVT-165, "Diagnostic Procedure"](#).

SELECT SYSTEM
IPDM E/R
BCM
AUTO DRIVE POS
AIR PRESSURE MONITOR
TRANSMISSION
METER A/C AMP

SCIA4825E

# DTC P1726 ELECTRIC THROTTLE CONTROL SYSTEM

## Diagnostic Procedure

ACS002KK

### 1. CHECK DTC WITH ECM

#### ④ With CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "SELF-DIAG RESULTS" mode for "ENGINE" with CONSULT-II. Refer to [EC-109, "SELF-DIAG RESULTS MODE"](#).

OK or NG

OK >> GO TO 2.

NG >> Check the DTC Detected Item. Refer to [EC-109, "SELF-DIAG RESULTS MODE"](#).

- If CAN communication line is detected, go to [CVT-71, "DTC U1000 CAN COMMUNICATION LINE"](#).

SELECT SYSTEM
ENGINE
ABS
AIR BAG
ALL MODE AWD/4WD
IPDM E/R
BCM

SCIA4823E

### 2. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [CVT-164, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 3.

### 3. DETECT MALFUNCTIONING ITEM

Check the following:

- The TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> Replace TCM. Refer to [CVT-8, "Precautions for TCM and CVT Assembly Replacement"](#).

NG >> Repair or replace damaged parts.

A

B

CVT

D

E

F

G

H

I

J

K

L

M

# DTC P1740 LOCK-UP SELECT SOLENOID VALVE CIRCUIT

## DTC P1740 LOCK-UP SELECT SOLENOID VALVE CIRCUIT

PFP:31941

### Description

ACS002U6

- Lock-up select solenoid valve switches, which controls lock-up clutch pressure or forward clutch pressure (reverse brake pressure).
- When controlling lock-up clutch, turns OFF. When controlling forward clutch, turns ON.

### CONSULT-II Reference Value

ACS002KM

Item name	Condition	Display value
LUSEL SOL OUT	"P", "N" positions	ON
	Wait at least for 5 seconds with the selector lever in "R", "D" "S"*, "L"* positions *: Without manual mode.	OFF

### On Board Diagnosis Logic

ACS002KN

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "LU-SLCT SOL/CIRC" with CONSULT-II or P1740 without CONSULT-II is detected under the following conditions.
  - When TCM compares target value with monitor value and detects an irregularity.

### Possible Cause

ACS002KO

- Lock-up select solenoid valve
- Harness or connectors  
(Solenoid circuit is open or shorted.)

### DTC Confirmation Procedure

ACS002U7

#### CAUTION:

Always drive vehicle at a safe speed.

#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

#### ④ WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine and maintain the following conditions for at least 5 consecutive seconds.  
**SELECTOR LEVER: "D" position and "N" position  
(At each time, wait for 5 seconds.)**
4. If DTC is detected, go to [CVT-168, "Diagnostic Procedure"](#).

SELECT SYSTEM
IPDM E/R
BCM
AUTO DRIVE POS
AIR PRESSURE MONITOR
TRANSMISSION
METER A/C AMP

SCIA4825E

#### ④ WITH GST

Follow the procedure "WITH CONSULT-II".



# DTC P1740 LOCK-UP SELECT SOLENOID VALVE CIRCUIT

## Wiring Diagram — CVT — L/USSV

ACS002U8

CVT-L/USSV-01

 : DETECTABLE LINE FOR DTC  
 : NON-DETECTABLE LINE FOR DTC

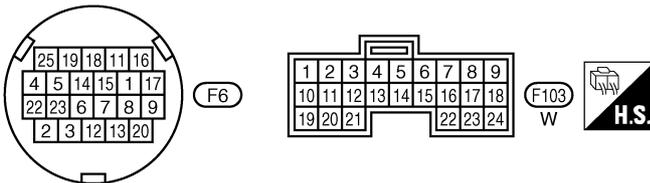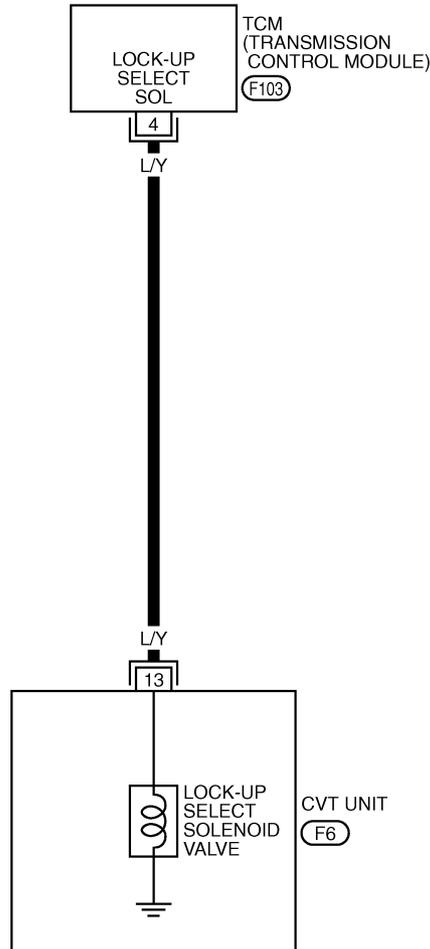

TCWA0252E

# DTC P1740 LOCK-UP SELECT SOLENOID VALVE CIRCUIT

TCM terminal and data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)	
4	L/Y	Lock-up select solenoid valve		"P" and "N" positions	Battery voltage
				Wait at least for 5 seconds with the selector lever in "R", "D", "S"* and "L"* positions	0V

\*: Without manual mode

## Diagnostic Procedure

ACS002U9


### 1. CHECK INPUT SIGNAL

#### With CONSULT-II

- Turn ignition switch ON.
- Select "SELECTION FROM MENU" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Read out the value of "LUSEL SOL OUT".

Item name	Condition	Display value
LUSEL SOL OUT	"P", "N" positions	ON
	Wait at least for 5 seconds with the selector lever in "R", "D", "S"*, "L"* positions	OFF

\*: Without manual mode

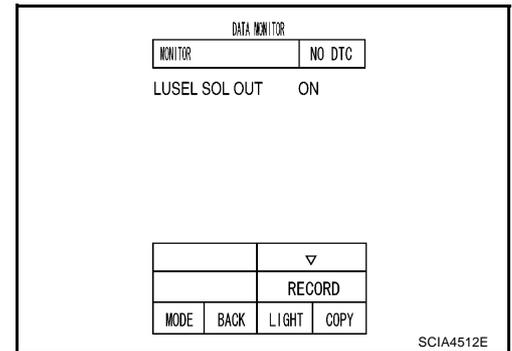


SCIA4512E

#### Without CONSULT-II

- Turn ignition switch ON.
- Check voltage between TCM connector terminal and ground.

Name	Connector	Terminal (Wire color)	Condition	Voltage (Approx.)
Lock-up select solenoid valve	F103	4 - Ground	"P" and "N" positions	Battery voltage
			Wait at least for 5 seconds with the selector lever in "R", "D", "S"* and "L"* positions	0V

\*: Without manual mode

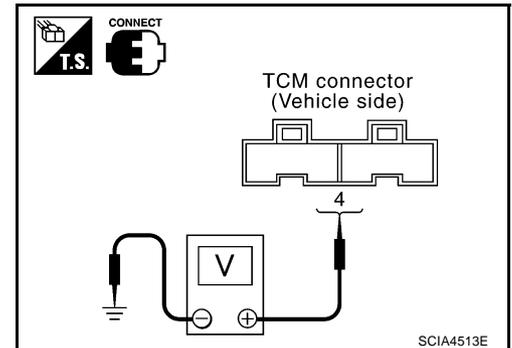

SCIA4513E

- Turn ignition switch OFF.
- Disconnect the TCM connector.
- Check if there is continuity between connector terminal and ground.

#### OK or NG

- OK >> GO TO 5.  
 NG >> GO TO 2.

# DTC P1740 LOCK-UP SELECT SOLENOID VALVE CIRCUIT


## 2. CHECK LOCK-UP SELECT SOLENOID VALVE CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check resistance between TCM connector terminal and ground.

Solenoid valve	Connector	Terminal (Wire color)	Resistance (Approx.)
Lock-up select solenoid valve	F103	4 (L/Y) - Ground	6 - 19 Ω

### OK or NG

- OK >> GO TO 5.  
 NG >> GO TO 3.

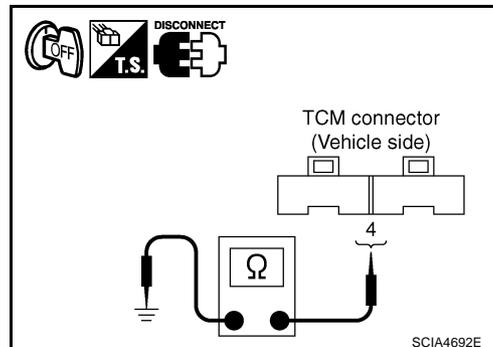


## 3. CHECK VALVE RESISTANCE

1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector.
3. Check resistance between CVT unit harness connector terminal and ground.

Solenoid valve	Connector	Terminal	Resistance (Approx.)
Lock-up select solenoid valve	F6	13 - Ground	6 - 19 Ω

### OK or NG

- OK >> GO TO 4.  
 NG >> Replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#).

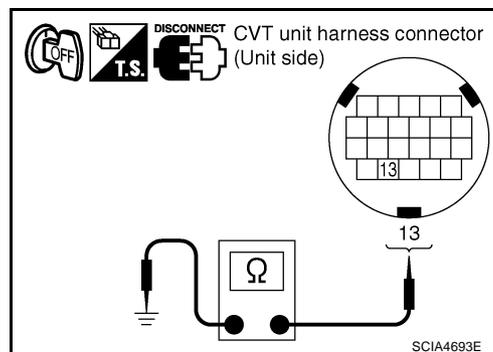

## 4. CHECK POWER SOURCE CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM connector terminal and CVT unit harness connector terminal.

Item	Connector	Terminal No. (Wire color)	Continuity
TCM	F103	4 (L/Y)	Yes
CVT unit harness connector	F6	13 (L/Y)	

4. If OK, check harness for short to ground and short to power.
5. Reinstall any part removed.

### OK or NG

- OK >> GO TO 5.  
 NG >> Repair open circuit or short to ground or short to power in harness or connectors.

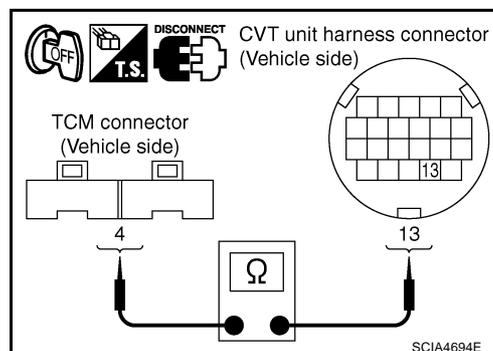

## 5. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [CVT-166, "DTC Confirmation Procedure"](#).

### OK or NG

- OK >> **INSPECTION END**  
 NG >> GO TO 6.

# DTC P1740 LOCK-UP SELECT SOLENOID VALVE CIRCUIT

## 6. CHECK TCM

1. Check TCM input/output signal. Refer to [CVT-56, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**

NG >> 1. Repair or replace damaged parts.

2. Replace TCM. Refer to [CVT-8, "Precautions for TCM and CVT Assembly Replacement"](#) .


### Component Inspection LOCK-UP SELECT SOLENOID VALVE

ACS002UA

1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector.
3. Check resistance between CVT unit harness connector terminal and ground.

Solenoid valve	Connector	Terminal	Resistance (Approx.)
Lock-up select solenoid valve	F6	13 - Ground	6 - 19 $\Omega$

4. If NG, replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#) .

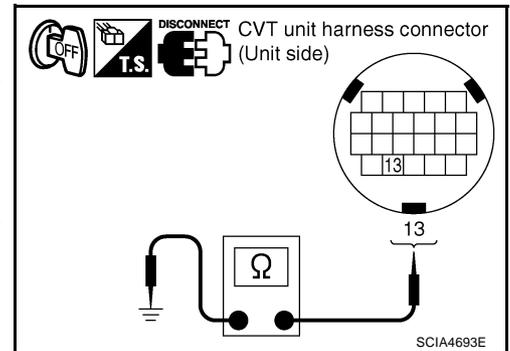

# DTC P1745 LINE PRESSURE CONTROL

## DTC P1745 LINE PRESSURE CONTROL

PFP:31036

### Description

ACS002KR

The pressure control solenoid valve A (line pressure solenoid valve) regulates the oil pump discharge pressure to suit the driving condition in response to a signal sent from the TCM.

### On Board Diagnosis Logic

ACS002UB

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "L/PRESS CONTROL" with CONSULT-II is detected when TCM detects the unexpected line pressure.

### Possible Cause

ACS002KT

TCM

### DTC Confirmation Procedure

ACS002UC

#### CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 5 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Make sure that output voltage of CVT fluid temperature sensor is within the range below.  
**FLUID TEMP SEN: 1.0 - 2.0V**  
**If out of range, drive the vehicle to decrease the voltage (warm up the fluid) or stop engine to increase the voltage (cool down the fluid)**
3. If DTC is detected, go to [CVT-171, "Diagnostic Procedure"](#).

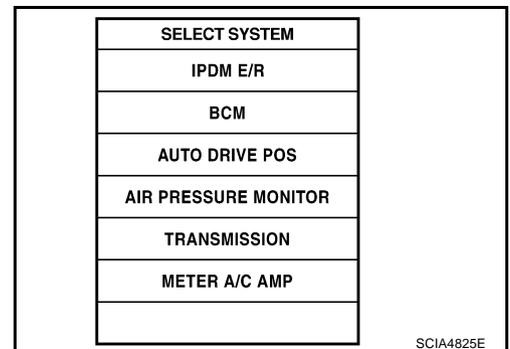

### Diagnostic Procedure

ACS002UD


#### 1. CHECK DTC

1. Turn ignition switch ON. (Do not start engine.)
2. Select "SELF-DIAG RESULTS" mode for "TRANSMISSION" with CONSULT-II.
3. Erase self-diagnostic results. Refer to [CVT-29, "HOW TO ERASE DTC \(WITH CONSULT-II\)"](#).
4. Turn ignition switch OFF, and wait for 5 seconds or more.
5. Start engine.
6. Confirm self-diagnostic results again. Refer to [CVT-62, "SELF-DIAGNOSTIC RESULT MODE"](#).

Is the line pressure control displayed?

YES >> Replace TCM. Refer to [CVT-8, "Precautions for TCM and CVT Assembly Replacement"](#).

NO >> **INSPECTION END**

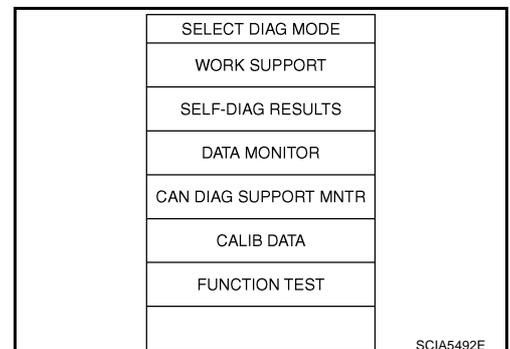

# DTC P1777 STEP MOTOR - CIRCUIT

## DTC P1777 STEP MOTOR - CIRCUIT

PFP:31020

### Description

ACS00216

- The step motor changes the step with turning 4 coils ON/OFF according to the signal from TCM. As a result, the flow of line pressure to primary pulley is changed and pulley ratio is controlled.

### CONSULT-II Reference Value

ACS0032M

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
STM STEP	During driving.	-20 step - 190 step
SMCOIL A		Changes ON↔OFF.
SMCOIL B		Changes ON↔OFF.
SMCOIL C		Changes ON↔OFF.
SMCOIL D		Changes ON↔OFF.

### On Board Diagnosis Logic

ACS0032N

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "STEP MOTR CIRC" with CONSULT-II or P1777 without CONSULT-II is detected under the following conditions.
  - When in operating step motor ON and OFF, there is no proper change in the voltage of the terminal TCM which corresponds to it.

### Possible Cause

ACS0032O

- Step motor
- Harness or connectors  
(Step motor circuit is open or shorted.)

### DTC Confirmation Procedure

ACS0032P

#### CAUTION:

Always drive vehicle at a safe speed.


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 5 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Drive vehicle for at least 5 consecutive seconds.
3. If DTC is detected, go to [CVT-174, "Diagnostic Procedure"](#) .

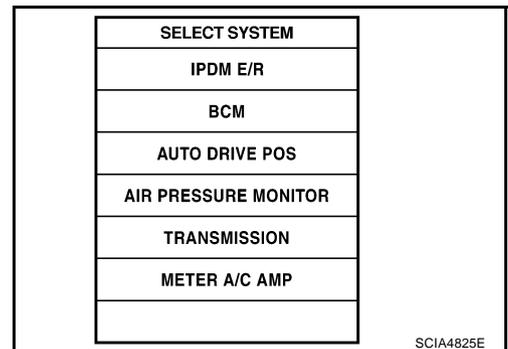

#### WITH GST

Follow the procedure "WITH CONSULT-II".




# DTC P1777 STEP MOTOR - CIRCUIT

## Wiring Diagram — CVT — STM

ACS00217

### CVT-STM-01

: DETECTABLE LINE FOR DTC  
 : NON-DETECTABLE LINE FOR DTC

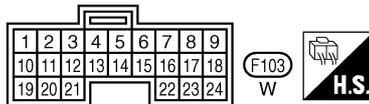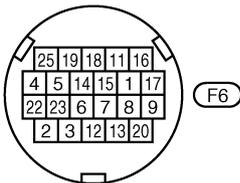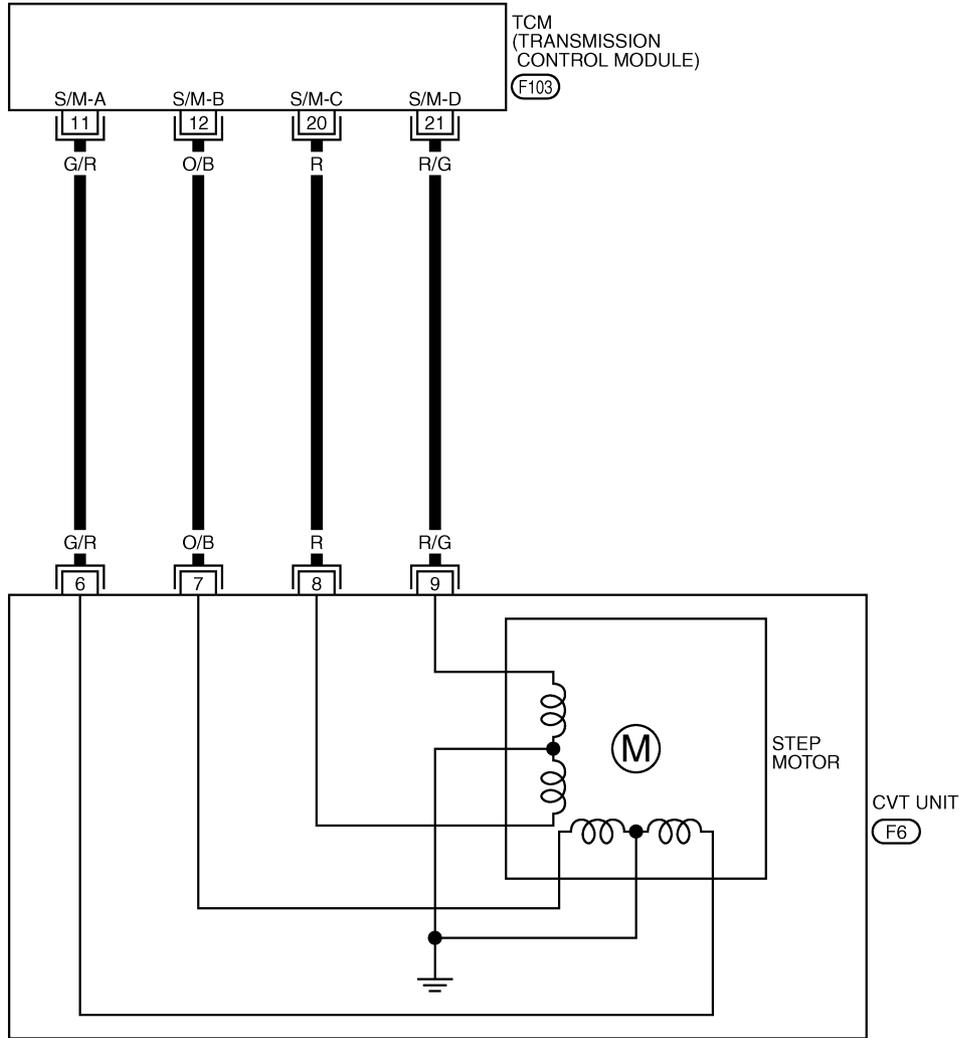

TCWA0256E

# DTC P1777 STEP MOTOR - CIRCUIT

TCM terminals and data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)
11	G/R	Step motor A	Within 2 seconds after key switch "ON", the time measurement by using the pulse width measurement function (Hi level) of CONSULT-II.*1 <b>CAUTION:</b> Connect the diagnosis data link cable to the vehicle diagnosis connector. *1: A circuit tester cannot be used to test this item.	30.0 msec
12	O/B	Step motor B		10.0 msec
20	R	Step motor C		30.0 msec
21	R/G	Step motor D		10.0 msec


## Diagnostic Procedure

ACS00218

### 1. CHECK INPUT SIGNAL

#### Ⓟ With CONSULT-II

- Start engine.
- Select "SELECTION FROM MENU" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Vehicle start and read out the value of "STM STEP", "SMCOIL A", "SMCOIL B", "SMCOIL C", and "SMCOIL D".

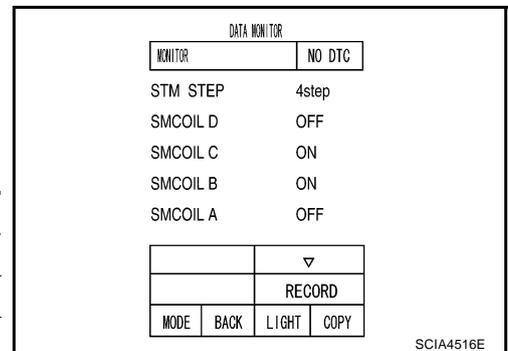


Item name	Condition	Display value (Approx.)
STM STEP	During driving.	-20 step - 190 step
SMCOIL A		Changes ON↔OFF.
SMCOIL B		Changes ON↔OFF.
SMCOIL C		Changes ON↔OFF.
SMCOIL D		Changes ON↔OFF.

#### OK or NG

- OK >> GO TO 4.  
 NG >> GO TO 2.

### 2. CHECK STEP MOTOR CIRCUIT

- Turn ignition switch OFF.
- Disconnect CVT unit connector and TCM connector.
- Check continuity between TCM connector terminals and CVT unit harness connector terminals.

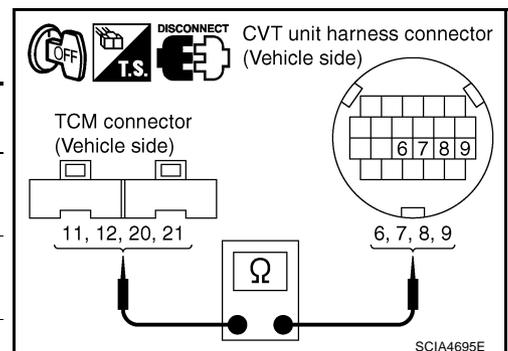

Item	Connector	Terminal (Wire color)	Continuity
TCM	F103	11 (G/R)	Yes
CVT unit harness connector	F6	6 (G/R)	
TCM	F103	12 (O/B)	Yes
CVT unit harness connector	F6	7 (O/B)	
TCM	F103	20 (R)	Yes
CVT unit harness connector	F6	8 (R)	
TCM	F103	21 (R/G)	Yes
CVT unit harness connector	F6	9 (R/G)	

- If OK, check harness for short to ground and short to power.
- If OK, check continuity between body ground and CVT assembly.
- Reinstall any part removed.

#### OK or NG

- OK >> GO TO 3.  
 NG >> Repair open circuit or short to ground or short to power in harness or connectors.

# DTC P1777 STEP MOTOR - CIRCUIT

## 3. CHECK STEP MOTOR

Check step motor Refer to [CVT-175, "Component Inspection"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace damaged parts.

## 4. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [CVT-172, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 5.

## 5. CHECK TCM

1. Check TCM input/output signal. Refer to [CVT-56, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG


- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

## Component Inspection STEP MOTOR

ACS00219

1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector.
3. Check resistance between CVT unit harness connector terminals and ground.

Control valve	Connector	Terminal	Resistance (Approx.)
Step motor	F6	6 - 7	30Ω
		8 - 9	
		6 - Ground	15Ω
		7 - Ground	
		8 - Ground	
		9 - Ground	

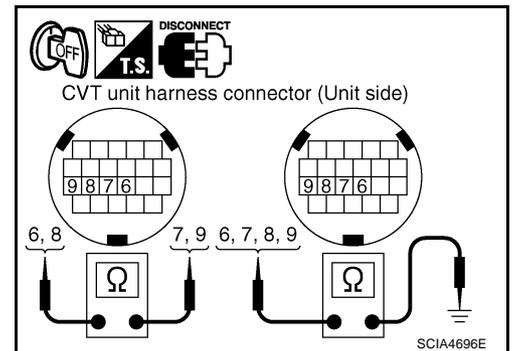

4. If NG, replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#) .

# DTC P1778 STEP MOTOR - FUNCTION

## DTC P1778 STEP MOTOR - FUNCTION

PFP:31947

### Description

ACS0021D

- The step motor's 4 aspects of ON/OFF change according to the signal from TCM. As a result, the flow of line pressure to primary pulley is changed and pulley ratio is controlled.
- This diagnosis item detects when electrical system is OK, but mechanical system is NG.
- This diagnosis item detects when the state of the changing the speed mechanism in unit does not operate normally.

### CONSULT-II Reference Value

ACS0032Q

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
STM STEP (step)	During driving	-20 step - 190 step
GEAR RATIO		2.37 - 0.43

### On Board Diagnosis Logic

ACS0032R

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "STEP MOTR/FNC" with CONSULT-II or P1778 without CONSULT-II is detected under the following conditions.
  - When not changing the pulley ratio according to the instruction of TCM.

### Possible Cause

ACS0032S

Step motor

### DTC Confirmation Procedure

ACS0032T

#### CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.
- Before starting "DTC Confirmation Procedure", confirm "Hi" or "Mid" or "Low" fixation by "PRI SPEED" and "VEHICLE SPEED" on "DATA MONITOR MODE".
- If hi-gear fixation, go to diagnostic procedure soon.

#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 5 seconds before performing the next test.


After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Make sure that output voltage of CVT fluid temperature sensor is within the range below.

**FLUID TEMP SEN: 1.0 - 2.0V**

**If out of range, drive the vehicle to decrease the voltage (warm up the fluid) or stop engine to increase the voltage (cool down the fluid)**

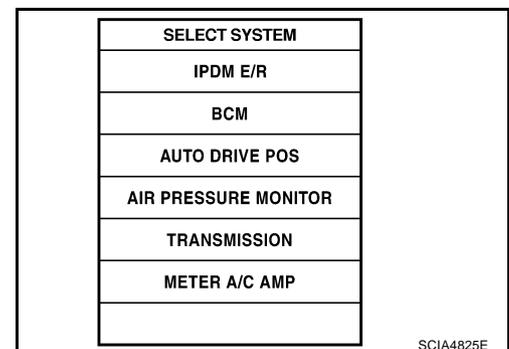

# DTC P1778 STEP MOTOR - FUNCTION

3. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
4. Start engine and maintain the following conditions for at least 30 consecutive seconds.  
**TEST START FROM 0 km/h (0 MPH)**  
**CONSTANT ACCELERATION: Keep 30 sec or more**  
**VEHICLE SPEED: 10 km/h (6 MPH) or more**  
**ACC PEDAL OPEN: More than 1/8**  
**Selector lever: D position**  
**ENG SPEED: 450 rpm or more**
5. If DTC is detected, go to [CVT-177, "Diagnostic Procedure"](#).

SELECT DIAG MODE
WORK SUPPORT
SELF-DIAG RESULTS
DATA MONITOR
CAN DIAG SUPPORT MNTR
CALIB DATA
FUNCTION TEST

SCIA5492E

## WITH GST

Follow the procedure "WITH CONSULT-II".

## Diagnostic Procedure

ACS0032U

### 1. CHECK STEP MOTOR

- It is monitoring whether "GEAR RATIO: 2.37 - 0.43" changes similarly to "STM STEP: -20 - 190" by "DATA MONITOR" mode. Refer to [CVT-64, "DATA MONITOR MODE"](#).
- If no CONSULT-II, inspect the engine speed (rise and descend), vehicle speed, throttle opening angle, and check shift change.

#### OK or NG

OK >> **INSPECTION END**

NG >> Replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#).

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# SECOND POSITION SWITCH

## SECOND POSITION SWITCH

PFP:34910

### Description

ACS0032V

Second position switch is built into CVT control device.

When selector lever is in "S" or "L" positions, second position switch turns ON and sends a signal to unified meter and A/C amp.

Then signal is transferred to TCM with CAN communications to improve engine brake performance.

### CONSULT-II Reference Value

ACS0033Z




Remarks: Specification data are reference values.

Item name	Condition	Display value
SPORT MODE SW	Selector lever in "S", "L" positions	ON
	Selector lever in other positions	OFF






# SECOND POSITION SWITCH

## Wiring Diagram — CVT — SPSW

ACS00333

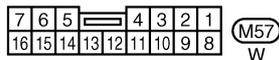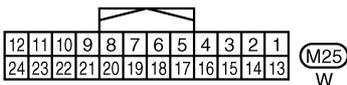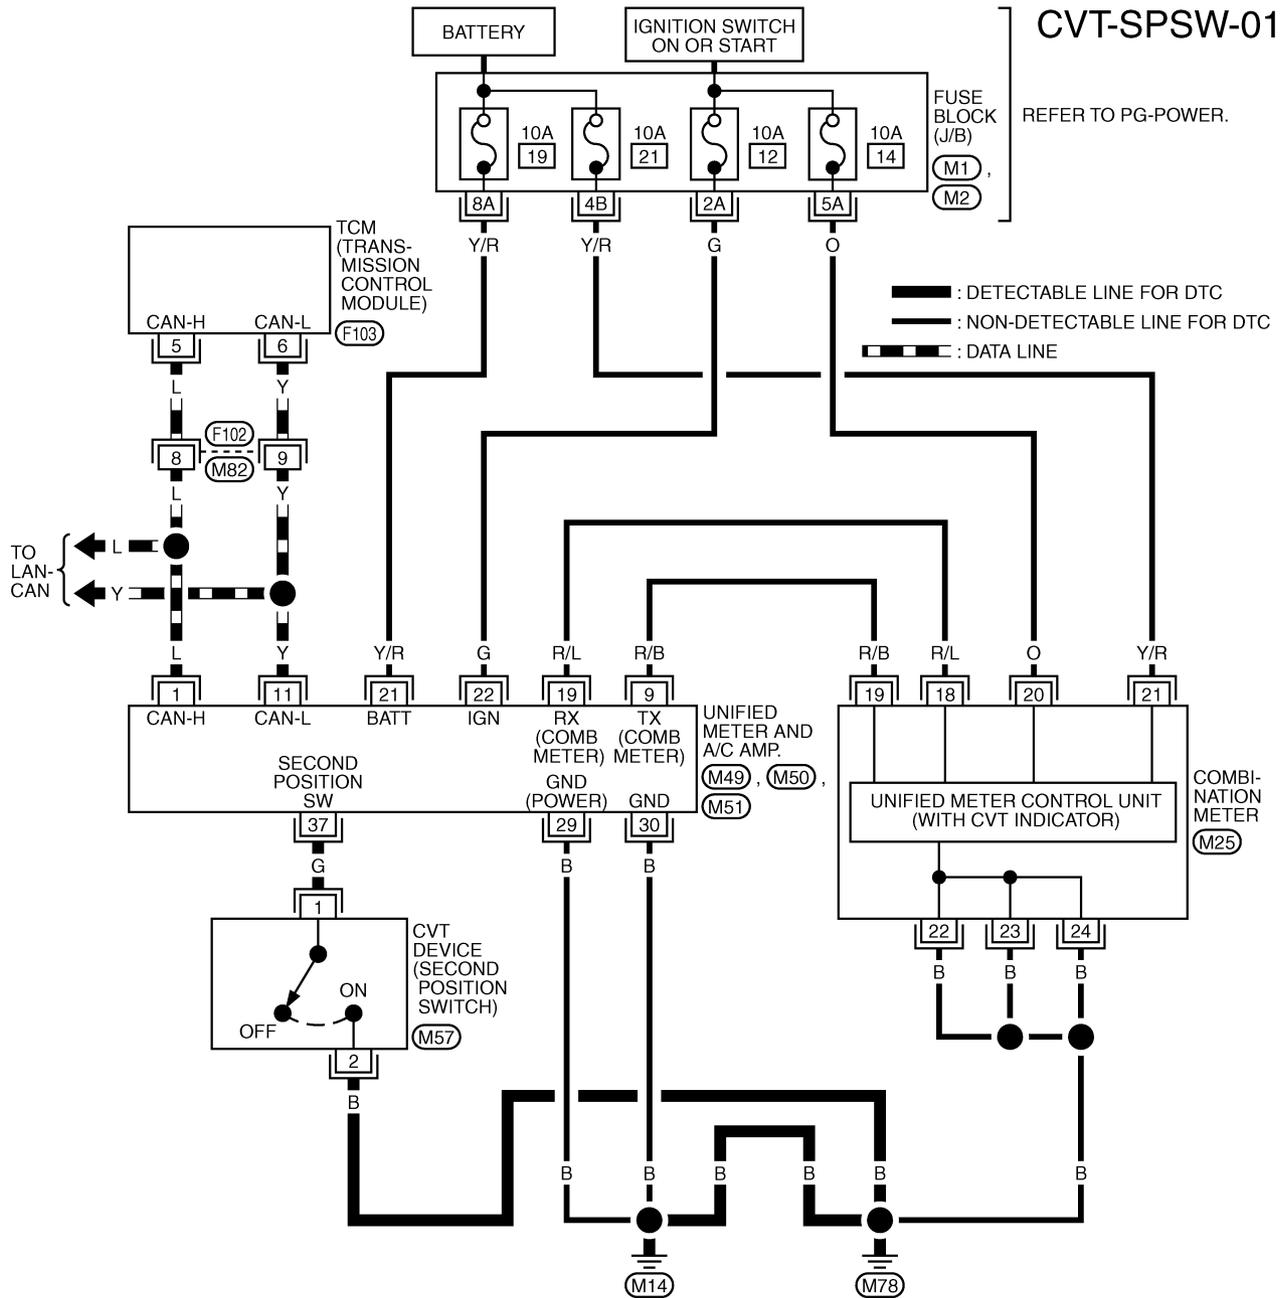

REFER TO THE FOLLOWING.  
 (M1), (M2) - FUSE BLOCK-JUNCTION BOX (J/B)

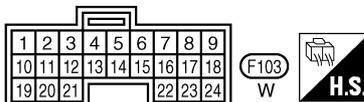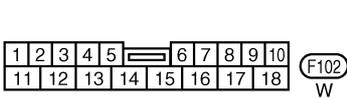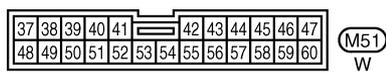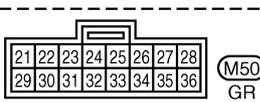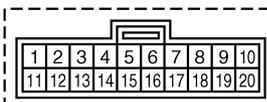

TCWA0162E

## SECOND POSITION SWITCH

TCM terminal and data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)
5	L	CAN H	-	-
6	Y	CAN L	-	-

### Diagnostic Procedure

ACS00330

#### 1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Refer to [CVT-62, "SELF-DIAGNOSTIC RESULT MODE"](#).

Is any malfunction of the "CAN COMM CIRCUIT" indicated in the results?

- YES >> Check CAN communication line. Refer to [CVT-71, "DTC U1000 CAN COMMUNICATION LINE"](#).  
 NO >> GO TO 2.

#### 2. CHECK SECOND POSITION SWITCH CIRCUIT

##### With CONSULT-II

- Turn ignition switch ON.
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Read out ON/OFF switching action of the "SPORT MODE SW".

Item name	Condition	Display value
SPORT MODE SW	Selector lever in "S", "L" positions	ON
	Selector lever in other positions	OFF

DATA MONITOR	
MONITOR	NO DTC
FULL SW	OFF
IDLE SW	ON
SPORT MODE SW	OFF
STR DWN SW	OFF
STR UP SW	OFF
▼	
RECORD	
MODE	BACK
LIGHT	COPY

SCIA4517E

OK or NG

- OK >> **INSPECTION END**  
 NG >> GO TO 3.

#### 3. CHECK SECOND POSITION SWITCH

Check second position switch.

- Refer to [CVT-181, "Component Inspection"](#).

OK or NG

- OK >> GO TO 4.  
 NG >> Repair or replace damaged parts.

#### 4. CHECK SELF-DIAGNOSTIC RESULTS (UNIFIED METER AND A/C AMP)

Perform self-diagnosis. Refer to [DI-35, "CONSULT-II Function"](#).

Is any malfunction detected by self-diagnostic?

- YES >> Check the malfunctioning system.  
 NO >> GO TO 5.

#### 5. CHECK SELF-DIAGNOSTIC RESULTS (COMBINATION METER)

Perform self-diagnosis. Refer to [DI-14, "Meter/Gauge Operation and Odo/Trip Meter"](#).

Is any malfunction detected by self-diagnostic?


- YES >> Check the malfunctioning system.  
 NO >> GO TO 6.

# SECOND POSITION SWITCH

## 6. CHECK SECOND POSITION SWITCH CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect CVT device connector and unified meter and A/C amp connector.
3. Check continuity between CVT device harness connector terminal and unified meter and A/C amp harness connector terminal.

Item	Connector	Terminal (Wire color)	Continuity
CVT device harness connector	M57	1 (G)	Yes
Unified meter and A/C amp harness connector	M51	37 (G)	

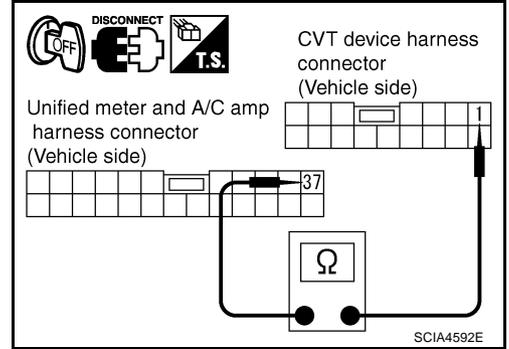

4. Check continuity between CVT device harness connector terminal and ground.

Item	Connector	Terminal (Wire color)	Continuity
CVT device harness connector	M57	2 (B)	Yes

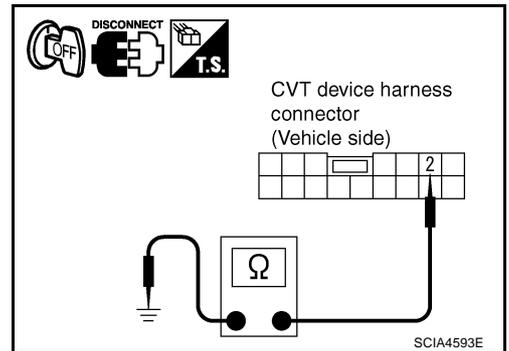

5. If OK, check harness for short to ground and short to power.
6. Reinstall any part removed.

OK or NG


OK >> **INSPECTION END**

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

## Component Inspection SECOND POSITION SWITCH

Check continuity between CVT device harness connector terminals.

Item	Condition	Connector	Terminal	Continuity
Second position switch	Selector lever in "S", "L" positions	M57	1 - 2	Yes
	Selector lever in other positions			No

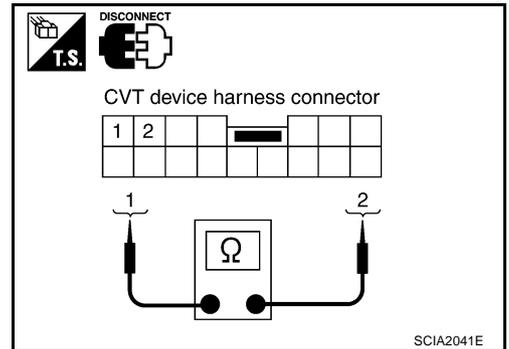

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# TROUBLE DIAGNOSIS FOR SYMPTOMS



PFP:00007

## TROUBLE DIAGNOSIS FOR SYMPTOMS

### Wiring Diagram — CVT — NONDTC

ACS001Z0

#### CVT-NONDTC-01

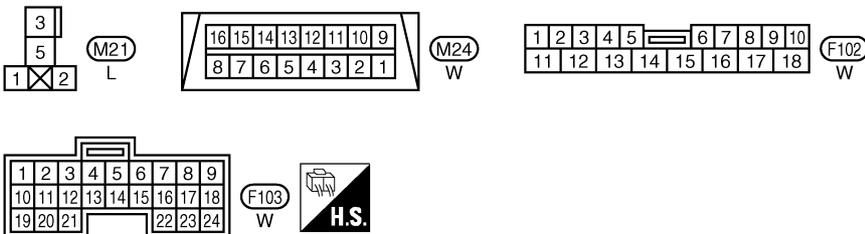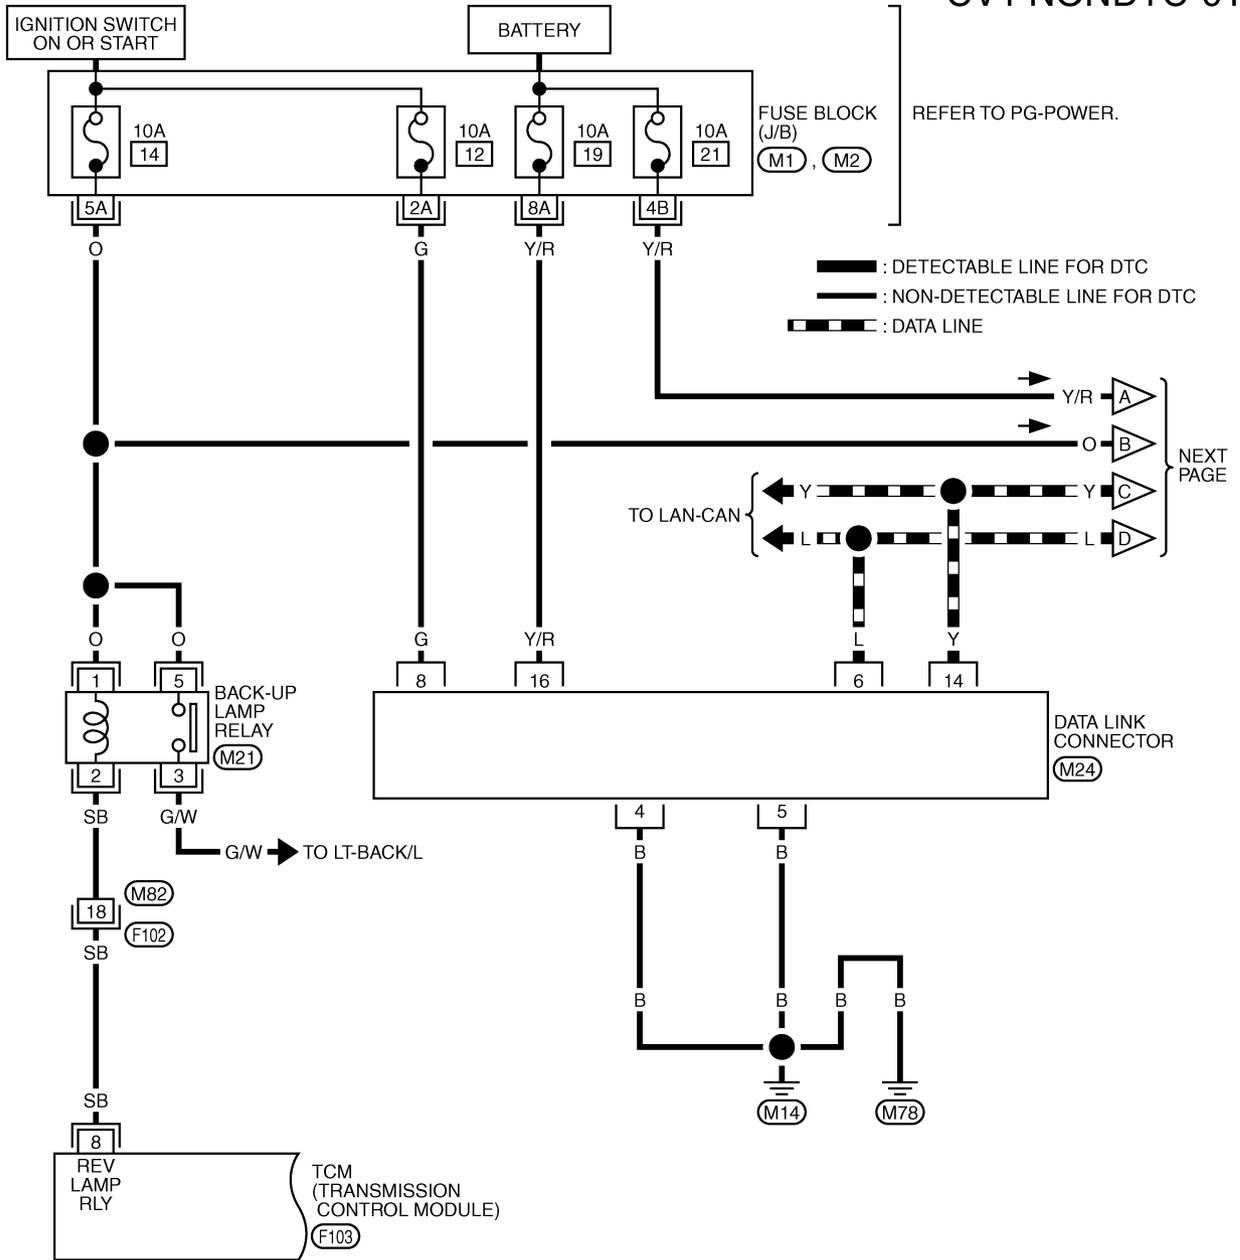



REFER TO THE FOLLOWING.  
 (M1), (M2) - FUSE BLOCK-JUNCTION BOX (J/B)

TCWA0257E

# TROUBLE DIAGNOSIS FOR SYMPTOMS

## CVT-NONDTC-02

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

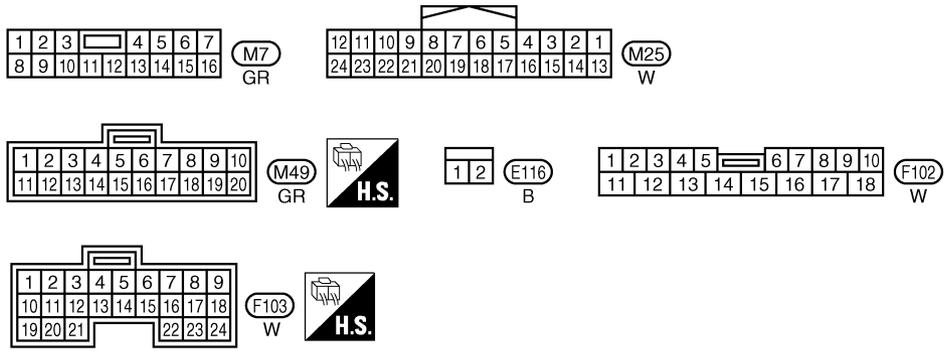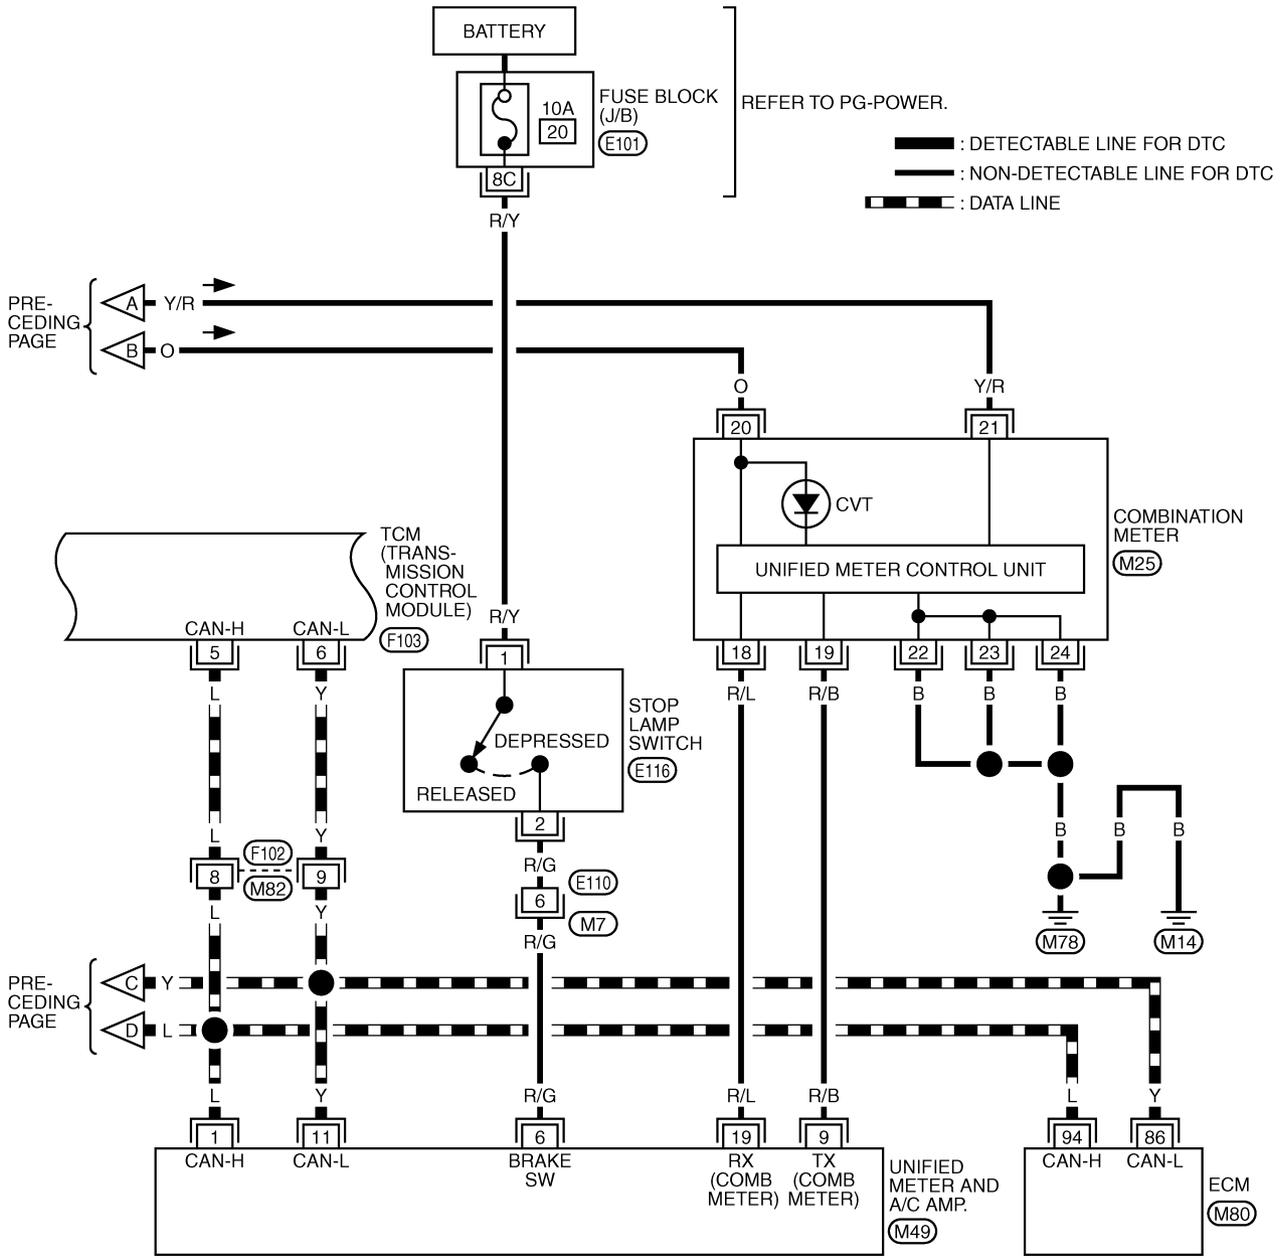



REFER TO THE FOLLOWING.  
 E101 - FUSE BLOCK-JUNCTION BOX (J/B)  
 M80 - ELECTRICAL UNITS

TCWA0164E

# TROUBLE DIAGNOSIS FOR SYMPTOMS

## CVT-NONDTC-03

: DETECTABLE LINE FOR DTC  
 : NON-DETECTABLE LINE FOR DTC

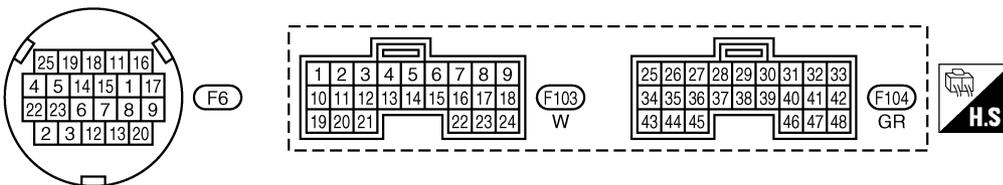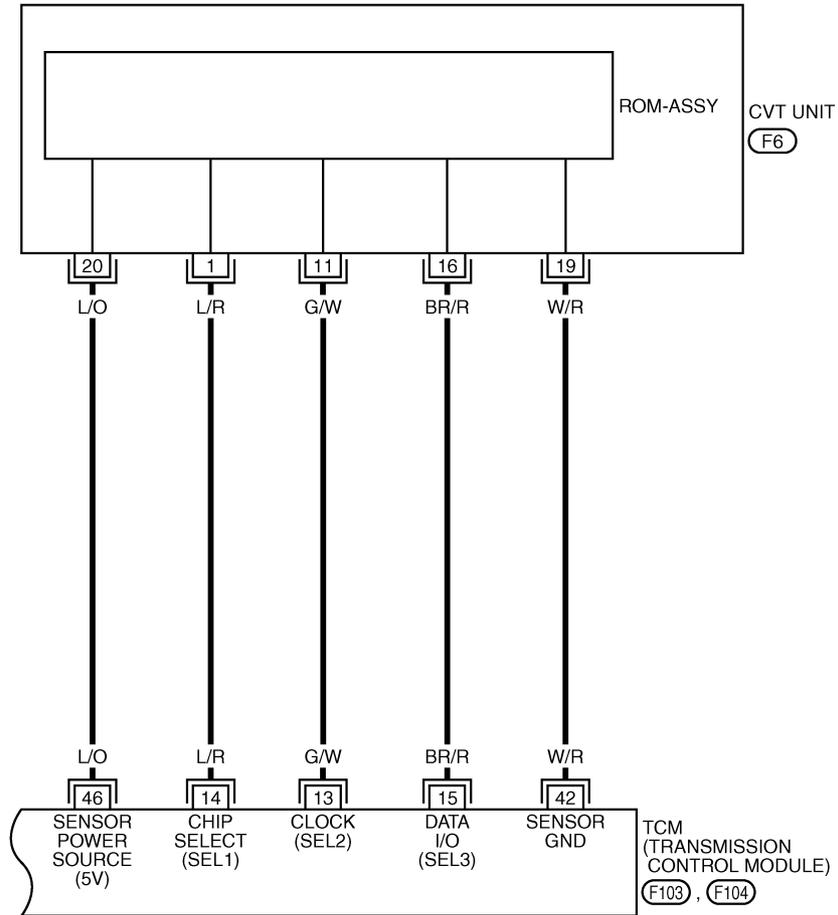

TCWA0258E

# TROUBLE DIAGNOSIS FOR SYMPTOMS

TCM terminals and data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)
5	L	CAN H	—	—
6	Y	CAN L	—	—
8	SB	BACK-UP LAMP relay	 Selector lever in "R" position.	0V
			 Selector lever in other positions.	Battery voltage
13	G/W	ROM assembly	—	—
14	L/R	ROM assembly	—	—
15	BR/R	ROM assembly	—	—
42	W/R	Sensor ground	Always	0V
46	L/O	Sensor power	 —	4.5 - 5.5V
			 —	0V

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# TROUBLE DIAGNOSIS FOR SYMPTOMS

ACS004MK

## CVT Indicator Lamp Does Not Come On

### SYMPTOM:

CVT indicator lamp does not come on for about 2 seconds when turning ignition switch to ON.

### DIAGNOSTIC PROCEDURE

#### 1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Refer to [CVT-62, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction of the "CAN COMM CIRCUIT" indicated in the results?

- YES >> Check CAN communication line. Refer to [CVT-71, "DTC U1000 CAN COMMUNICATION LINE"](#) .
- NO >> GO TO 2.


#### 2. CHECK TCM POWER SOURCE

1. Turn ignition switch ON.
2. Check voltage between TCM connector terminals and ground. Refer to [CVT-154, "Wiring Diagram — CVT — POWER"](#) .

Name	Connector	Terminal (Wire color)	Voltage (Approx.)
Power supply	F103	10 (Y/L)	Battery voltage
		19 (Y/L)	Battery voltage

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 3.

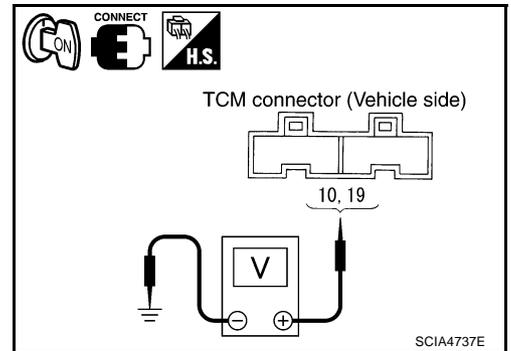

#### 3. DETECT MALFUNCTIONING ITEM

Check the following items:

- Harness for short or open between ignition switch and TCM connector terminal 10, 19. Refer to [CVT-154, "Wiring Diagram — CVT — POWER"](#) .
- 10A fuse (No83, located in the IPDM E/R). Refer to [CVT-154, "Wiring Diagram — CVT — POWER"](#) .
- Ignition switch. Refer to [PG-3, "POWER SUPPLY ROUTING CIRCUIT"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace damaged parts.


#### 4. CHECK TCM GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM connector terminals and ground. Refer to [CVT-154, "Wiring Diagram — CVT — POWER"](#) .

Name	Connector	Terminal (Wire color)	Continuity
Ground	F104	25 (B)	Yes
		48 (B)	

OK or NG

- OK >> GO TO 5.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

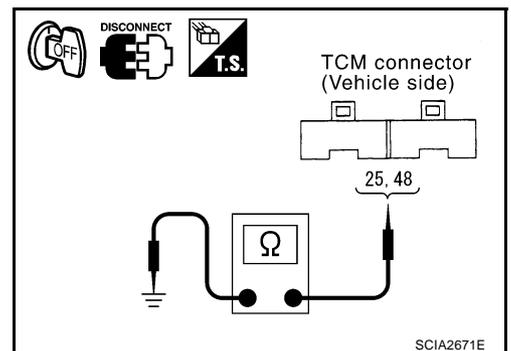

# TROUBLE DIAGNOSIS FOR SYMPTOMS

---

## 5. DETECT MALFUNCTIONING ITEM

---

Check the following items:

- Harness and fuse for short or open between ignition switch and CVT indicator lamp  
Refer to [PG-3, "POWER SUPPLY ROUTING CIRCUIT"](#) .

OK or NG

OK >> GO TO 6.

NG >> Repair or replace damaged parts.

## 6. CHECK SYMPTOM

---

Check again. Refer to [CVT-47, "Check Before Engine Is Started"](#) .

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 7.

## 7. CHECK COMBINATION METERS

---

Check combination meters.

- Refer to [DI-4, "COMBINATION METERS"](#) .

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# TROUBLE DIAGNOSIS FOR SYMPTOMS

ACS004ML

## Engine Cannot Be Started in "P" or "N" Position

### SYMPTOM:

- Engine cannot be started with selector lever in "P" or "N" position.
- Engine can be started with selector lever in "D", "M" or "R" position. (With manual mode)
- Engine can be started with selector lever in "D", "S", "L" or "R" position. (Without manual mode)

### DIAGNOSTIC PROCEDURE

#### 1. CHECK SELF-DIAGNOSIS RESULTS

Perform self-diagnosis. Refer to [CVT-62, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnosis results indicate PNP switch circuit or start signal circuit?


- YES >> Check PNP switch circuit or start signal circuit. Refer to [CVT-80, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) or [CVT-74, "DTC P0615 START SIGNAL CIRCUIT"](#) .
- NO >> GO TO 2.

#### 2. CHECK CONTROL CABLE

Check control cable. Refer to [CVT-209, "Checking of CVT Position"](#)

OK or NG

- OK >> GO TO 3.
- NG >> Adjust control cable. Refer to [CVT-209, "Adjustment of CVT Position"](#) .

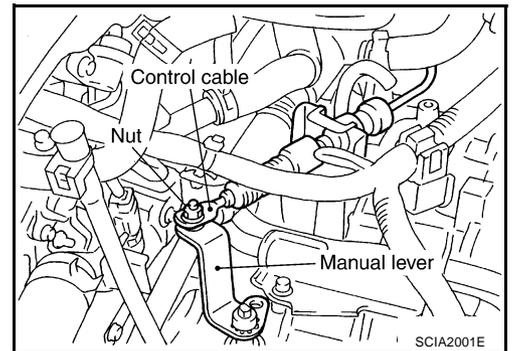

#### 3. CHECK STARTING SYSTEM

Check starting system. Refer to [SC-9, "STARTING SYSTEM"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

# TROUBLE DIAGNOSIS FOR SYMPTOMS

## In "P" Position, Vehicle Moves Forward or Backward When Pushed

ACS004MM

### SYMPTOM:

Vehicle moves when it is pushed forward or backward with selector lever in "P" position.

### DIAGNOSTIC PROCEDURE

#### 1. CHECK SELF-DIAGNOSIS RESULTS

Perform self-diagnosis. Refer to [CVT-62, "SELF-DIAGNOSTIC RESULT MODE"](#).

Do the self-diagnosis results indicate PNP switch circuit?


- YES >> Check PNP switch circuit. Refer to [CVT-80, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#).
- NO >> GO TO 2.

#### 2. CHECK CONTROL CABLE

Check control cable. Refer to [CVT-209, "Checking of CVT Position"](#)

OK or NG

- OK >> GO TO 3.
- NG >> Adjust control cable. Refer to [CVT-209, "Adjustment of CVT Position"](#).

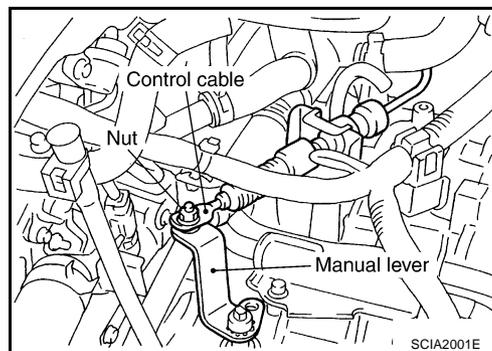

#### 3. SYMPTOM CHECK

Check again. Refer to [CVT-47, "Check at Idle"](#).

OK or NG

- OK >> **INSPECTION END**
- NG >> Replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#).

# TROUBLE DIAGNOSIS FOR SYMPTOMS

ACS004MN

## In "N" Position, Vehicle Moves

### SYMPTOM:

Vehicle moves forward or backward when selecting "N" position.

### DIAGNOSTIC PROCEDURE

#### 1. CHECK SELF-DIAGNOSIS RESULTS

Perform self-diagnosis. Refer to [CVT-62, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnosis results indicate PNP switch circuit?


- YES >> Check PNP switch circuit. Refer to [CVT-80, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) .
- NO >> GO TO 2.

#### 2. CHECK CONTROL CABLE

Check control cable. Refer to [CVT-209, "Checking of CVT Position"](#)

OK or NG

- OK >> GO TO 3.
- NG >> Adjust control cable. Refer to [CVT-209, "Adjustment of CVT Position"](#) .

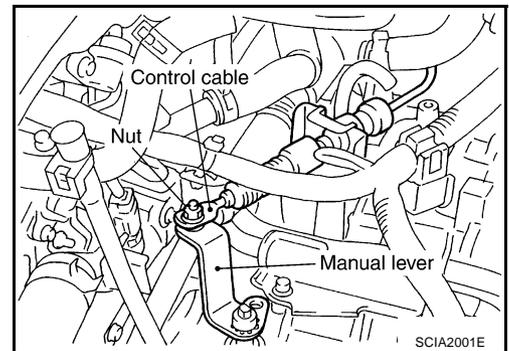

#### 3. CHECK CVT FLUID LEVEL

Check CVT fluid level. Refer to [CVT-14, "Checking CVT Fluid"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Refill CVT fluid.



#### 4. SYMPTOM CHECK

Check again. Refer to [CVT-47, "Check at Idle"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 5.

#### 5. CHECK TCM

1. Check TCM input/output signal. Refer to [CVT-56, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#) .
- NG >> Repair or replace damaged parts.

# TROUBLE DIAGNOSIS FOR SYMPTOMS

ACS004MO

A

## Large Shock "N" → "R" Position

### SYMPTOM:

There is large shock when changing from "N" to "R" position.

### DIAGNOSTIC PROCEDURE

#### 1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [CVT-62, "SELF-DIAGNOSTIC RESULT MODE"](#).

Is any malfunction detected by self-diagnostic?

- YES >> Check the malfunctioning system.
- NO >> GO TO 2.

#### 2. CHECK ENGINE IDLE SPEED

Check engine idle speed. Refer to [EC-31, "Idle Speed and Ignition Timing Check"](#).

OK or NG

- OK >> GO TO 3.
- NG >> Repair.

#### 3. CHECK CVT FLUID LEVEL

Check CVT fluid level. Refer to [CVT-14, "Checking CVT Fluid"](#).

OK or NG

- OK >> GO TO 4.
- NG >> Refill CVT fluid.



B

CVT

D

E

F

G

H

I


J

#### 4. CHECK LINE PRESSURE

Check line pressure at idle. Refer to [CVT-42, "LINE PRESSURE TEST"](#).

OK or NG

- OK >> GO TO 5.
- NG >> Check the malfunctioning item. Refer to [CVT-43, "Judgement of Line Pressure Test"](#).

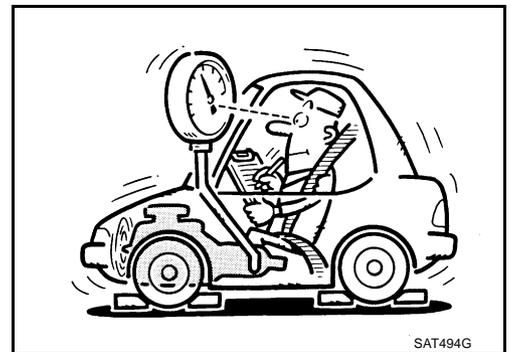

K

L

M

#### 5. SYMPTOM CHECK

Check again. Refer to [CVT-47, "Check at Idle"](#).

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 6.

## TROUBLE DIAGNOSIS FOR SYMPTOMS

---

### 6. CHECK TCM

---

1. Check TCM input/output signal. Refer to [CVT-56, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#) .
- NG >> Repair or replace damaged parts.

# TROUBLE DIAGNOSIS FOR SYMPTOMS

ACS004MP

## Vehicle Does Not Creep Backward in "R" Position SYMPTOM:

Vehicle does not creep backward when selecting "R" position.

### DIAGNOSTIC PROCEDURE

#### 1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [CVT-62, "SELF-DIAGNOSTIC RESULT MODE"](#).

Is any malfunction detected by self-diagnostic?


- YES >> Check the malfunctioning system.
- NO >> GO TO 2.

#### 2. CHECK CONTROL CABLE

Check control cable. Refer to [CVT-209, "Checking of CVT Position"](#)

OK or NG

- OK >> GO TO 3.
- NG >> Adjust control cable. Refer to [CVT-209, "Adjustment of CVT Position"](#).

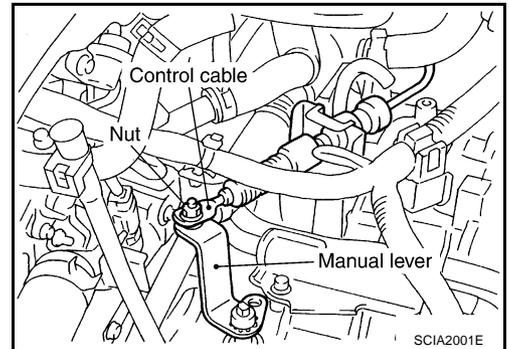

#### 3. CHECK CVT FLUID LEVEL

Check CVT fluid level. Refer to [CVT-14, "Checking CVT Fluid"](#).

OK or NG

- OK >> GO TO 4.
- NG >> Refill CVT fluid.




#### 4. CHECK LINE PRESSURE

Check line pressure at idle. Refer to [CVT-42, "LINE PRESSURE TEST"](#).

OK or NG

- OK >> GO TO 5.
- NG >> Check the malfunctioning item. Refer to [CVT-43, "Judgement of Line Pressure Test"](#).

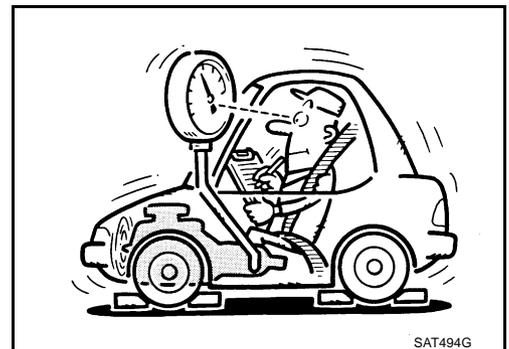

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

## TROUBLE DIAGNOSIS FOR SYMPTOMS

---

### 5. SYMPTOM CHECK

---

Check again. Refer to [CVT-47, "Check at Idle"](#) .

OK or NG

OK >> **INSPECTION END**  
NG >> GO TO 6.

### 6. CHECK TCM

---

1. Check TCM input/output signal. Refer to [CVT-56, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> Replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#) .  
NG >> Repair or replace damaged parts.

# TROUBLE DIAGNOSIS FOR SYMPTOMS

ACS004MQ

## Vehicle Does Not Creep Forward in "D", "S" or "L" Position

### SYMPTOM:

Vehicle does not creep forward when selecting "D", "S"\* or "L"\* position.

\*: Without manual mode

### DIAGNOSTIC PROCEDURE

#### 1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [CVT-62. "SELF-DIAGNOSTIC RESULT MODE"](#).

Is any malfunction detected by self-diagnostic?

YES >> Check the malfunctioning system.

NO >> GO TO 2.


#### 2. CHECK CONTROL CABLE

Check control cable. Refer to [CVT-209. "Checking of CVT Position"](#)

OK or NG

OK >> GO TO 3.

NG >> Adjust control cable. Refer to [CVT-209. "Adjustment of CVT Position"](#).

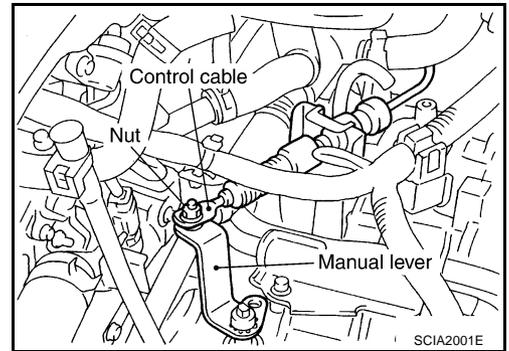


#### 3. CHECK CVT FLUID LEVEL

Check CVT fluid level. Refer to [CVT-14. "Checking CVT Fluid"](#).

OK or NG

OK >> GO TO 4.

NG >> Refill CVT fluid.

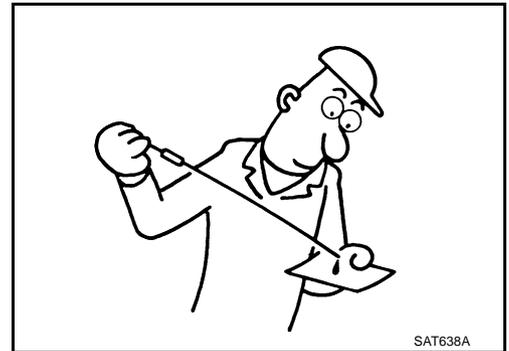


#### 4. CHECK LINE PRESSURE

Check line pressure at idle. Refer to [CVT-42. "LINE PRESSURE TEST"](#).

OK or NG

OK >> GO TO 5.

NG >> Check the malfunctioning item. Refer to [CVT-43. "Judgement of Line Pressure Test"](#).

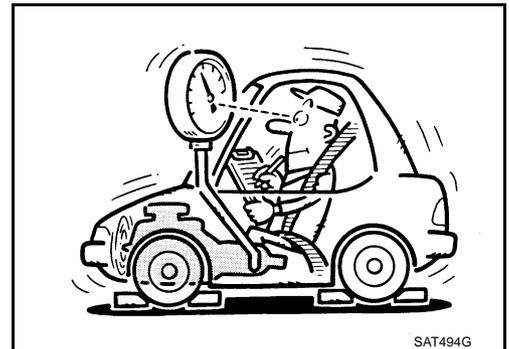

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

## TROUBLE DIAGNOSIS FOR SYMPTOMS

---

### 5. SYMPTOM CHECK

---

Check again. Refer to [CVT-47, "Check at Idle"](#) .

OK or NG

OK >> **INSPECTION END**  
NG >> GO TO 6.

### 6. CHECK TCM

---

1. Check TCM input/output signal. Refer to [CVT-56, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> Replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#) .  
NG >> Repair or replace damaged parts.

# TROUBLE DIAGNOSIS FOR SYMPTOMS

ACS004MR

## CVT Does Not Shift

### SYMPTOM:

CVT does not shift at the specified speed on "Cruise Test".

### DIAGNOSTIC PROCEDURE

#### 1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [CVT-62, "SELF-DIAGNOSTIC RESULT MODE"](#).

Is any malfunction detected by self-diagnostic?


- YES >> Check the malfunctioning system.
- NO >> GO TO 2.

#### 2. CHECK CONTROL CABLE

Check control cable. Refer to [CVT-209, "Checking of CVT Position"](#)

OK or NG

- OK >> GO TO 3.
- NG >> Adjust control cable. Refer to [CVT-209, "Adjustment of CVT Position"](#).

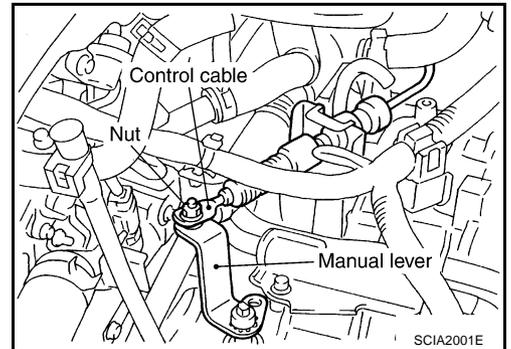

#### 3. CHECK CVT FLUID LEVEL

Check CVT fluid level. Refer to [CVT-14, "Checking CVT Fluid"](#).

OK or NG

- OK >> GO TO 4.
- NG >> Refill CVT fluid.




#### 4. CHECK LINE PRESSURE

Check line pressure at idle. Refer to [CVT-42, "LINE PRESSURE TEST"](#).

OK or NG

- OK >> GO TO 5.
- NG >> Check the malfunctioning item. Refer to [CVT-43, "Judgement of Line Pressure Test"](#).

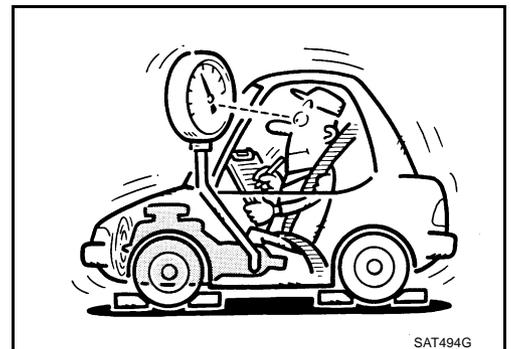

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

## TROUBLE DIAGNOSIS FOR SYMPTOMS

---

### 5. SYMPTOM CHECK

---

Check again. Refer to [CVT-51, "Cruise Test"](#) .

OK or NG

OK >> **INSPECTION END**  
NG >> GO TO 6.

### 6. CHECK TCM

---

1. Check TCM input/output signal. Refer to [CVT-56, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> Replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#) .  
NG >> Repair or replace damaged parts.

# TROUBLE DIAGNOSIS FOR SYMPTOMS

ACS004Z8

## Cannot Be Changed to Manual Mode

### SYMPTOM:

Does not change to manual mode when manual shift gate is used.

### DIAGNOSTIC PROCEDURE

#### 1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [CVT-62, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnostic?

- YES >> Check the malfunctioning system.
- NO >> GO TO 2.

#### 2. CHECK MANUAL MODE SWITCH

Check manual mode switch circuit. Refer to [CVT-132, "DTC P0826 MANUAL MODE SWITCH CIRCUIT"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace damaged parts.

#### 3. SYMPTOM CHECK

Check again. Refer to [CVT-51, "Cruise Test"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 4.

#### 4. CHECK TCM

1. Check TCM input/output signal. Refer to [CVT-56, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

A

B

CVT

D

E

F

G

H

I

J

K

L

M

# TROUBLE DIAGNOSIS FOR SYMPTOMS

ACS004Z9

## CVT Does Not Shift in Manual Mode

### SYMPTOM:

Speed does not change even if the selector lever is put in the manual shift gate position and the selector lever is operated on + side on - side.

### DIAGNOSTIC PROCEDURE

#### 1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [CVT-62, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnostic?

YES >> Check the malfunctioning system.

NO >> GO TO 2.

#### 2. CHECK MANUAL MODE SWITCH

Check manual mode switch circuit. Refer to [CVT-132, "DTC P0826 MANUAL MODE SWITCH CIRCUIT"](#) .

OK or NG

OK >> GO TO 3.

NG >> Repair or replace damaged parts.


#### 3. CHECK CONTROL CABLE

Check control cable. Refer to [CVT-209, "Checking of CVT Position"](#)

OK or NG

OK >> GO TO 4.

NG >> Adjust control cable. Refer to [CVT-209, "Adjustment of CVT Position"](#) .

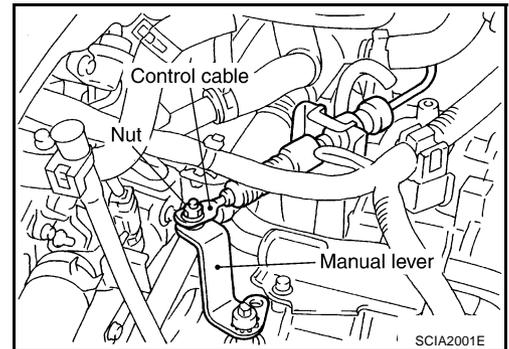

#### 4. CHECK CVT FLUID LEVEL

Check CVT fluid level. Refer to [CVT-14, "Checking CVT Fluid"](#) .

OK or NG

OK >> GO TO 5.

NG >> Refill CVT fluid.



# TROUBLE DIAGNOSIS FOR SYMPTOMS


## 5. CHECK LINE PRESSURE

Check line pressure at idle. Refer to [CVT-42, "LINE PRESSURE TEST"](#).

OK or NG

OK >> GO TO 6.

NG >> Check the malfunctioning item. Refer to [CVT-43, "Judgement of Line Pressure Test"](#).

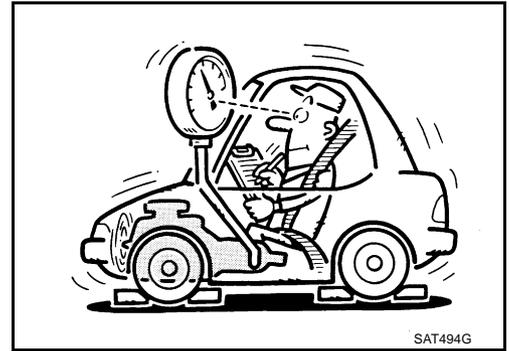

## 6. SYMPTOM CHECK

Check again. Refer to [CVT-51, "Cruise Test"](#).

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 7.

## 7. CHECK TCM

1. Check TCM input/output signal. Refer to [CVT-56, "TCM Input/Output Signal Reference Values"](#).

2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> Replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#).

NG >> Repair or replace damaged parts.

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# TROUBLE DIAGNOSIS FOR SYMPTOMS

ACS004MS

---

## Cannot Be Changed to Second Position

### SYMPTOM:

Does not change to second position when selecting "S" position.

### DIAGNOSTIC PROCEDURE

---

#### 1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [CVT-62, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnostic?

- YES >> Check the malfunctioning system.
- NO >> GO TO 2.

---

#### 2. CHECK SECOND POSITION SWITCH

Check second position switch circuit. Refer to [CVT-178, "SECOND POSITION SWITCH"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace damaged parts.

---

#### 3. SYMPTOM CHECK

Check again. Refer to [CVT-51, "Cruise Test"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 4.

---

#### 4. CHECK TCM

1. Check TCM input/output signal. Refer to [CVT-56, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

# TROUBLE DIAGNOSIS FOR SYMPTOMS

ACS004MT

## Cannot Be Changed to "L" Position

### SYMPTOM:

Does not change to "L" position when selecting "L" position.

### DIAGNOSTIC PROCEDURE

#### 1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [CVT-62, "SELF-DIAGNOSTIC RESULT MODE"](#).

Is any malfunction detected by self-diagnostic?


- YES >> Check the malfunctioning system.
- NO >> GO TO 2.

#### 2. CHECK CONTROL CABLE

Check control cable. Refer to [CVT-209, "Checking of CVT Position"](#)

OK or NG

- OK >> GO TO 3.
- NG >> Adjust control cable. Refer to [CVT-209, "Adjustment of CVT Position"](#).

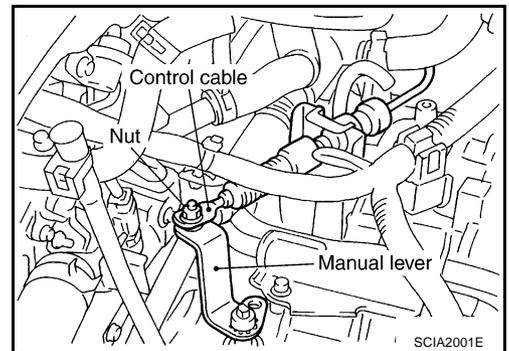

#### 3. CHECK CVT FLUID LEVEL

Check CVT fluid level. Refer to [CVT-14, "Checking CVT Fluid"](#).

OK or NG

- OK >> GO TO 4.
- NG >> Refill CVT fluid.




#### 4. CHECK LINE PRESSURE

Check line pressure at idle. Refer to [CVT-42, "LINE PRESSURE TEST"](#).

OK or NG

- OK >> GO TO 5.
- NG >> Check the malfunctioning item. Refer to [CVT-43, "Judgement of Line Pressure Test"](#).

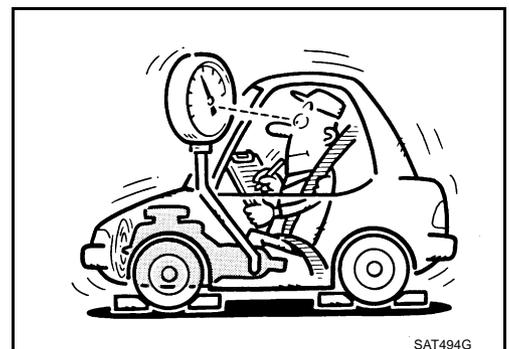

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

## TROUBLE DIAGNOSIS FOR SYMPTOMS

---

### 5. SYMPTOM CHECK

---

Check again. Refer to [CVT-51, "Cruise Test"](#) .

OK or NG

OK >> **INSPECTION END**  
NG >> GO TO 6.

### 6. CHECK TCM

---

1. Check TCM input/output signal. Refer to [CVT-56, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> Replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#) .  
NG >> Repair or replace damaged parts.

# TROUBLE DIAGNOSIS FOR SYMPTOMS

ACS004ZA

## Vehicle Does Not Decelerate by Engine Brake

### SYMPTOM:

No engine brake is applied when the gear is shifted from the M2 to M1 or "S" to "L" position.

### DIAGNOSTIC PROCEDURE

#### 1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [CVT-62, "SELF-DIAGNOSTIC RESULT MODE"](#).

Is any malfunction detected by self-diagnostic?


- YES >> Check the malfunctioning system.
- NO >> GO TO 2.

#### 2. CHECK CONTROL CABLE

Check control cable. Refer to [CVT-209, "Checking of CVT Position"](#)

OK or NG

- OK >> GO TO 3.
- NG >> Adjust control cable. Refer to [CVT-209, "Adjustment of CVT Position"](#).

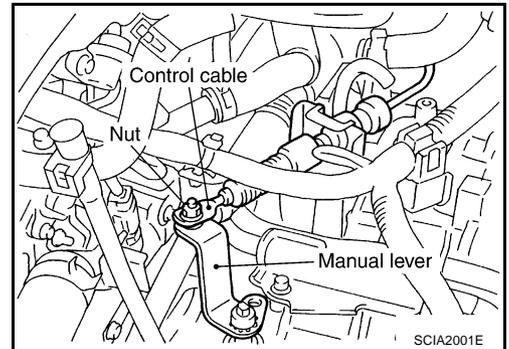

#### 3. CHECK CVT FLUID LEVEL

Check CVT fluid level. Refer to [CVT-14, "Checking CVT Fluid"](#).

OK or NG

- OK >> GO TO 4.
- NG >> Refill CVT fluid.



#### 4. CHECK LINE PRESSURE

Check line pressure at idle. Refer to [CVT-42, "LINE PRESSURE TEST"](#).

OK or NG

- OK >> GO TO 5.
- NG >> Check the malfunctioning item. Refer to [CVT-43, "Judgement of Line Pressure Test"](#).



A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

## TROUBLE DIAGNOSIS FOR SYMPTOMS

---

### 5. CHECK MANUAL MODE SWITCH (WITH MANUAL MODE)

---

Check manual mode switch circuit. Refer to [CVT-132, "DTC P0826 MANUAL MODE SWITCH CIRCUIT"](#) .

OK or NG

OK >> GO TO 6.

NG >> Repair or replace damaged parts.

### 6. SYMPTOM CHECK

---

Check again. Refer to [CVT-51, "Cruise Test"](#) .

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 7.

### 7. CHECK TCM

---

1. Check TCM input/output signal. Refer to [CVT-56, "TCM Input/Output Signal Reference Values"](#) .

2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> Replace the transaxle assembly. Refer to [CVT-224, "Removal and Installation"](#) .

NG >> Repair or replace damaged parts.

# SHIFT CONTROL SYSTEM


## SHIFT CONTROL SYSTEM

PFP:34901

### Removal and Installation COMPONENTS (WITH MANUAL MODE)

ACS001ZN


A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

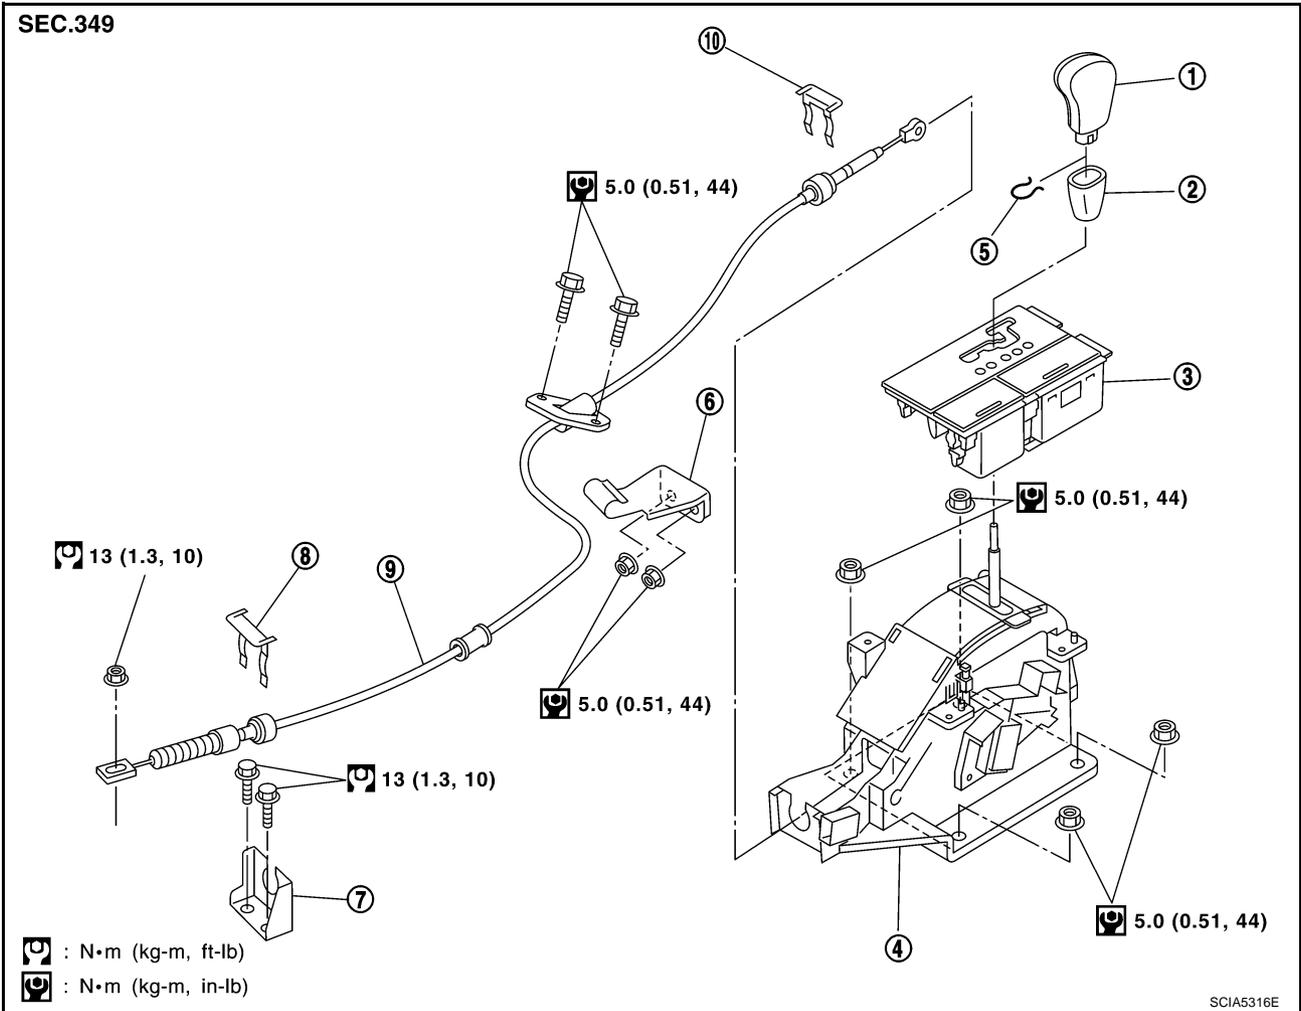

- |                            |               |                         |
|----------------------------|---------------|-------------------------|
| 1. Selector lever knob     | 2. Knob cover | 3. A/T console finisher |
| 4. Control device assembly | 5. Lock pin   | 6. Bracket              |
| 7. Bracket                 | 8. Lock plate | 9. Control cable        |
| 10. Lock plate             |               |                         |

# SHIFT CONTROL SYSTEM

## COMPONENTS (WITHOUT MANUAL MODE)

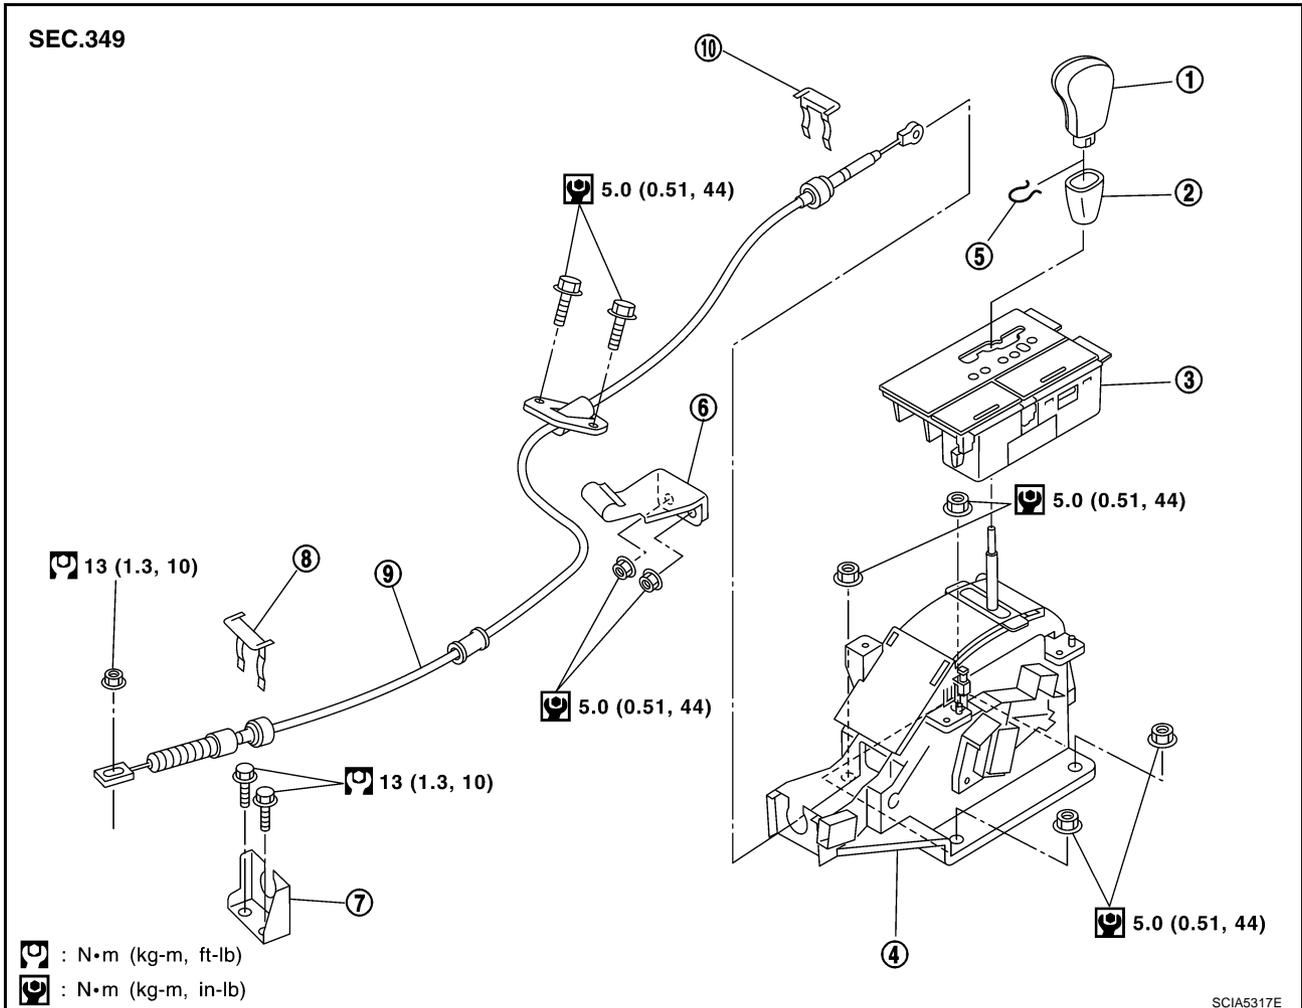


- |                            |               |                         |
|----------------------------|---------------|-------------------------|
| 1. Selector lever knob     | 2. Knob cover | 3. A/T console finisher |
| 4. Control device assembly | 5. Lock pin   | 6. Bracket              |
| 7. Bracket                 | 8. Lock plate | 9. Control cable        |
| 10. Lock plate             |               |                         |

# SHIFT CONTROL SYSTEM

## REMOVAL

1. Remove knob cover below selector lever downward.
2. Pull lock pin out of selector lever knob.
3. Remove selector lever knob.
4. Remove A/T console finisher.
  - Refer to [IP-18, "Removal and Installation"](#) .
5. Remove console box assembly.
  - Refer to [IP-18, "Removal and Installation"](#) .
6. Disconnect control cable of control device.
7. Disconnect control device harness connector.
8. Remove control device assembly.

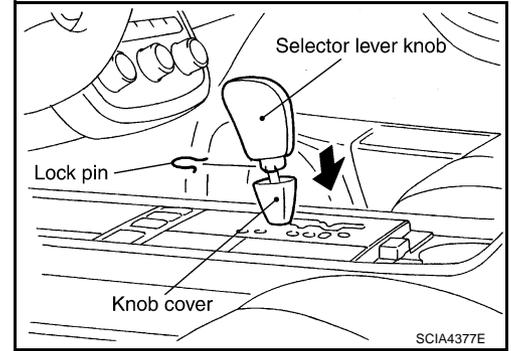

## INSTALLATION

Note the following, and install in the reverse order of removal.

- After installation is completed, adjust and check CVT position.

## Adjustment of CVT Position

1. Place selector lever in "P" position.
2. Loosen control cable nut and place manual lever in "P" position.

### CAUTION:

**Turn wheels more than 1/4 rotations and apply the park lock.**

3. After pushing the control cable with the specified force toward the rear, move your hands off the control cable.

**Specified force: 9.8 N (1.0 kg, 2.2 lb)**


4. Connect control cable on manual lever.

### CAUTION:

**No application of a force to the manual lever.**


5. Tighten control cable nut.

 : 13 N·m (1.3 kg-m, 10 ft-lb)

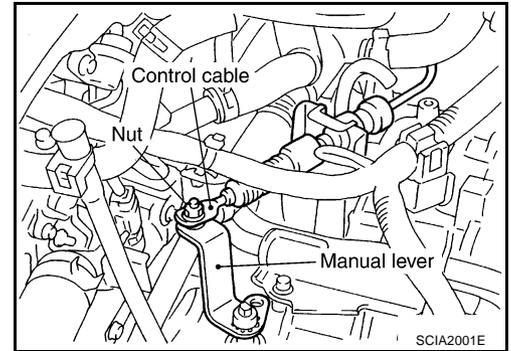


## Checking of CVT Position

1. Place selector lever in "P" position, and turn ignition switch ON (engine stop).
2. Make sure selector lever can be shifted to other than "P" position when brake pedal is depressed. Also make sure selector lever can be shifted from "P" position only when brake pedal is depressed.
3. Move the selector lever and check for excessive effort, sticking, noise or rattle.
4. Confirm the selector lever stops at each position with the feel of engagement when it is moved through all the positions. Check whether or not the actual position the selector lever is in matches the position shown by the shift position indicator and the transaxle body.

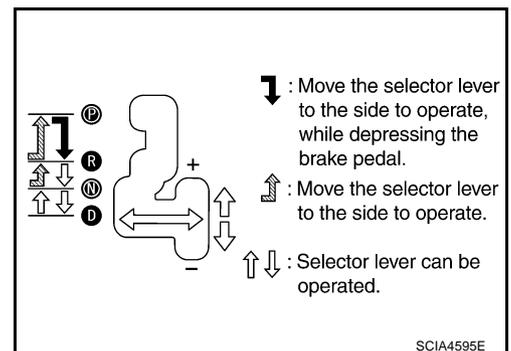

## SHIFT CONTROL SYSTEM

5. The method of operating the lever to individual positions correctly should be as shown in the figure.
6. Confirm the back-up lamps illuminate only when lever is placed in the "R" position. Confirm the back-up lamps do not illuminate when selector lever is in the "P" or "N" position with the lever pushed against the "R" position.
7. Confirm the engine can only be started with the selector lever in the "P" and "N" positions.
8. Make sure transaxle is locked completely in "P" position.
9. When selector lever is set to manual shift gate, make sure manual mode is displayed on combination meter.  
Shift selector lever to "+" and "-" sides, and make sure set shift position changes.

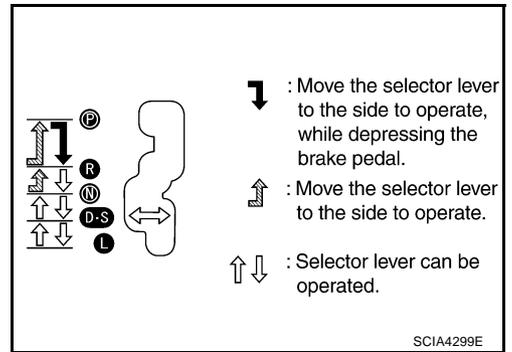

# CVT SHIFT LOCK SYSTEM

## CVT SHIFT LOCK SYSTEM

PFP:00000


### Description

ACS00334

- The electrical key interlock mechanism also operates as a shift lock:  
With the ignition switch turned to ON, the selector lever cannot be shifted from "P" (parking) to any other position unless the brake pedal is depressed.  
With the key removed, the selector lever cannot be shifted from "P" to any other position.  
The key cannot be removed unless the selector lever is placed in "P".
- The shift lock and key interlock mechanisms are controlled by the ON-OFF operation of the shift lock solenoid and by the operation of the rotator and slider located inside the key cylinder, respectively.

### Shift Lock System Electrical Parts Location

ACS00335

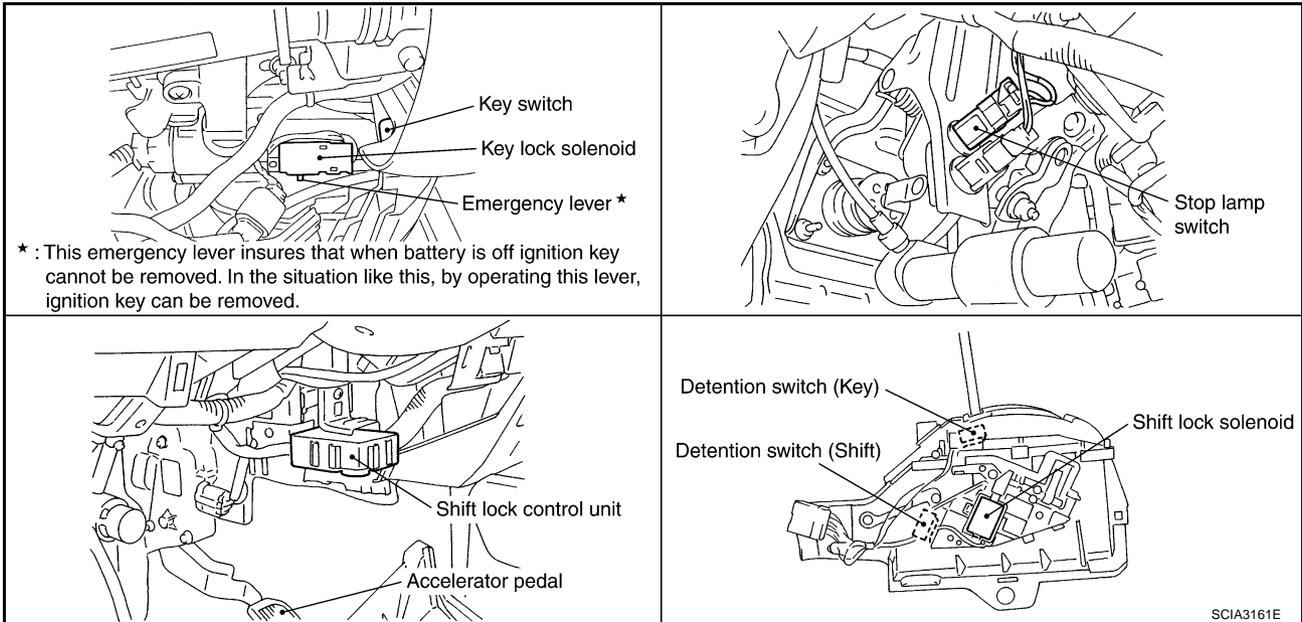


# CVT SHIFT LOCK SYSTEM





ACS00336

## Wiring Diagram — CVT — SHIFT

CVT-SHIFT-01

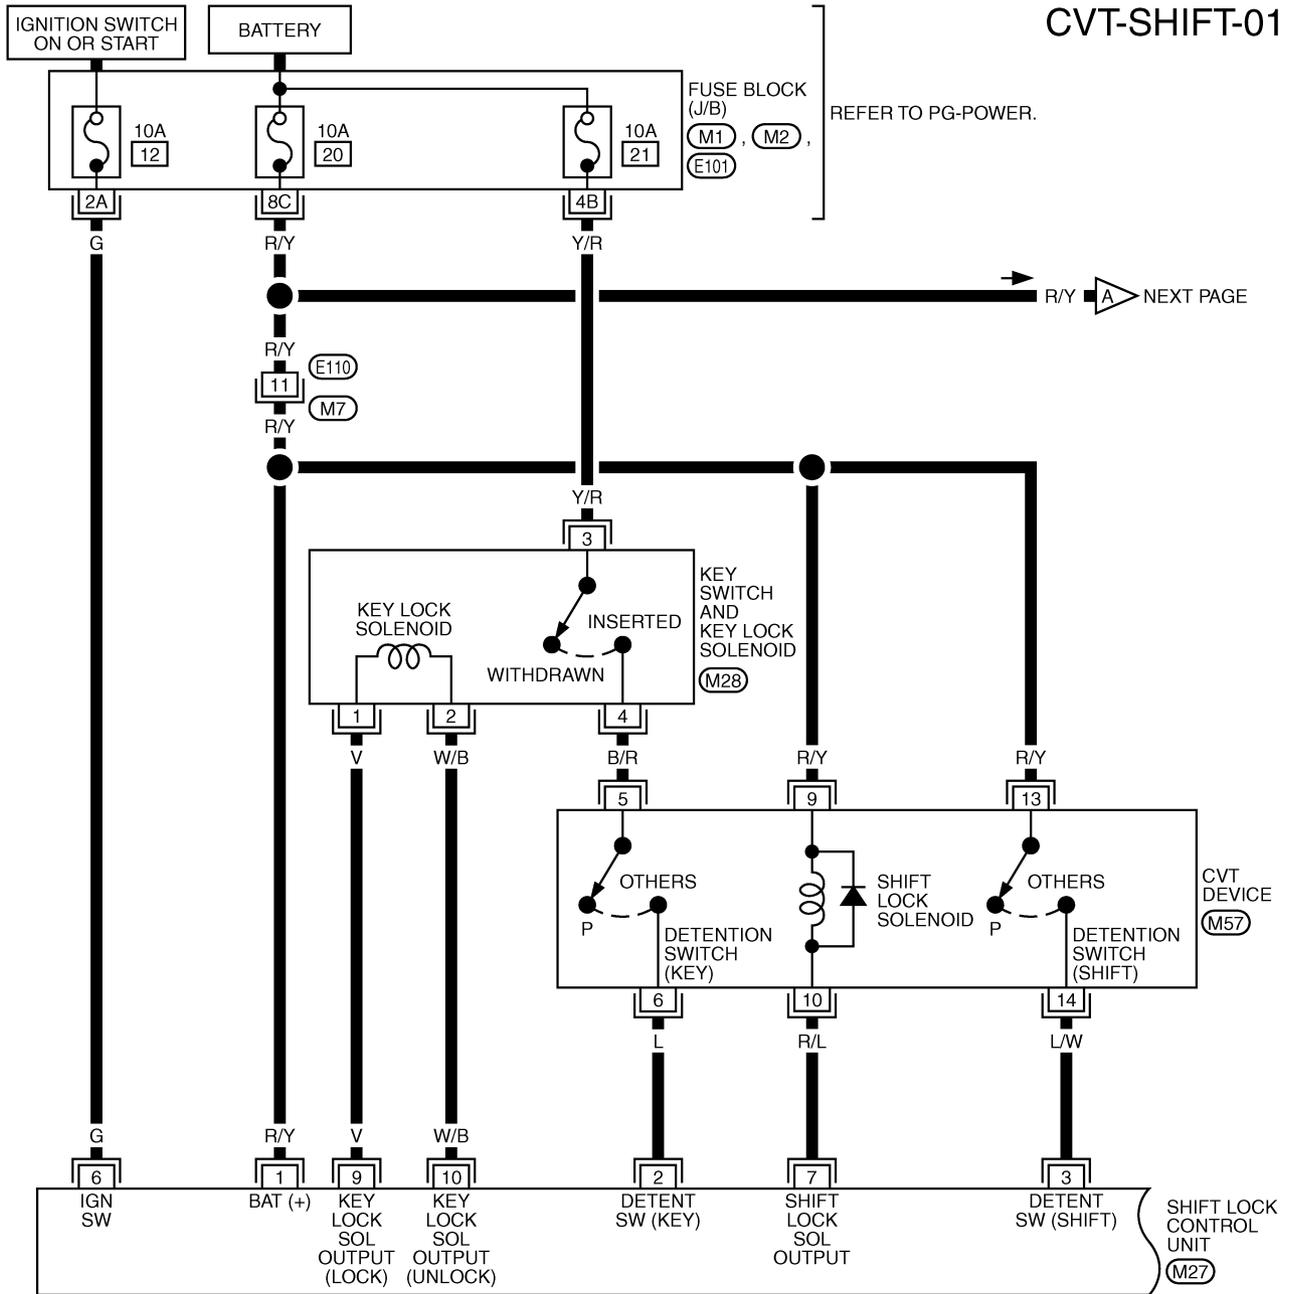

R/Y → NEXT PAGE

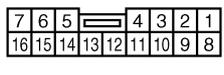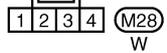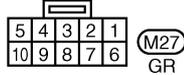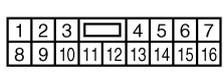


REFER TO THE FOLLOWING.  
 (M1), (M2), (E101) - FUSE BLOCK-JUNCTION BOX (J/B)

TCWA0165E

# CVT SHIFT LOCK SYSTEM

CVT-SHIFT-02

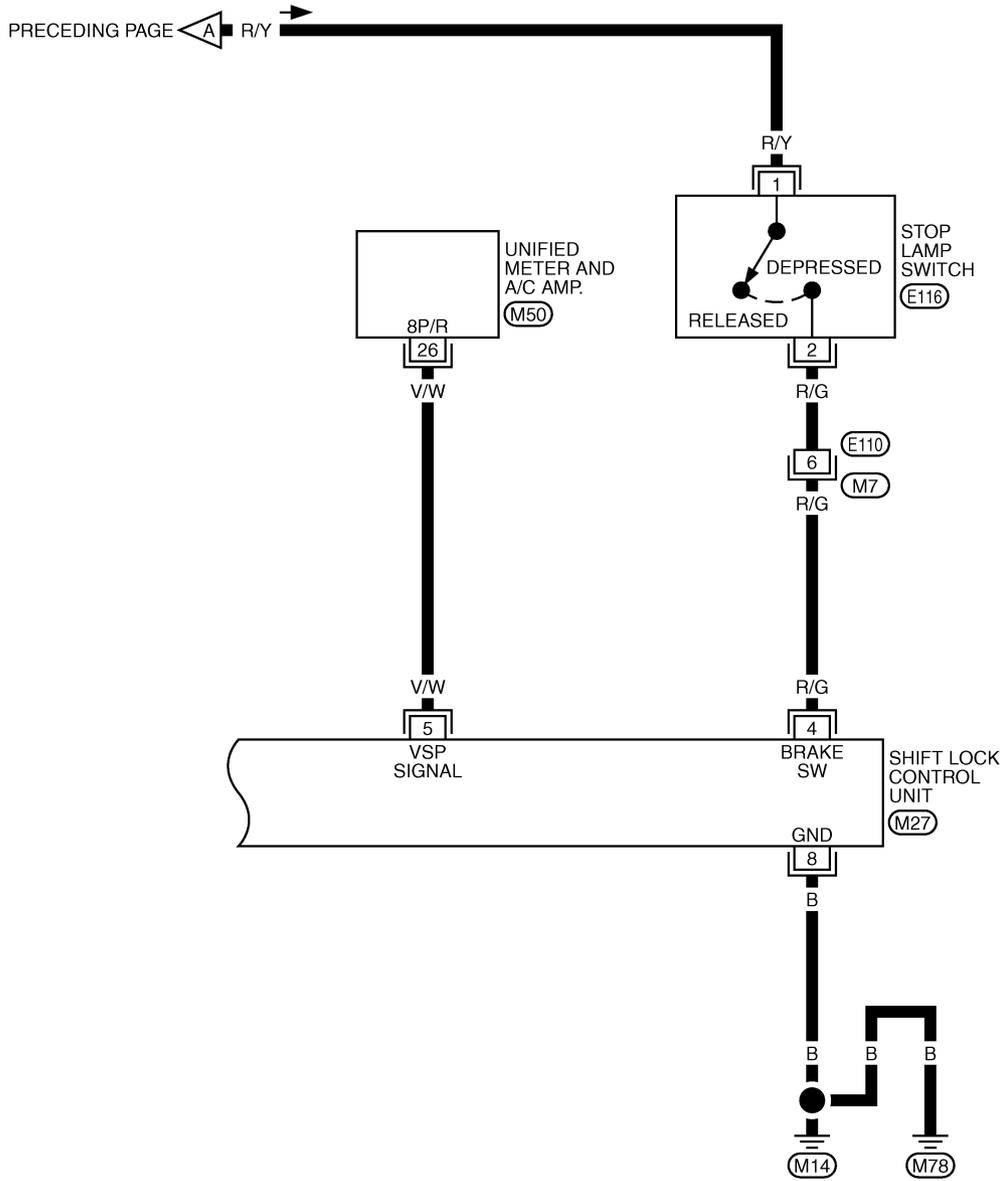


TCWA0166E

# CVT SHIFT LOCK SYSTEM

## Shift Lock Control Unit Reference Values SHIFT LOCK HARNESS CONNECTOR TERMINALS LAYOUT

ACS00337

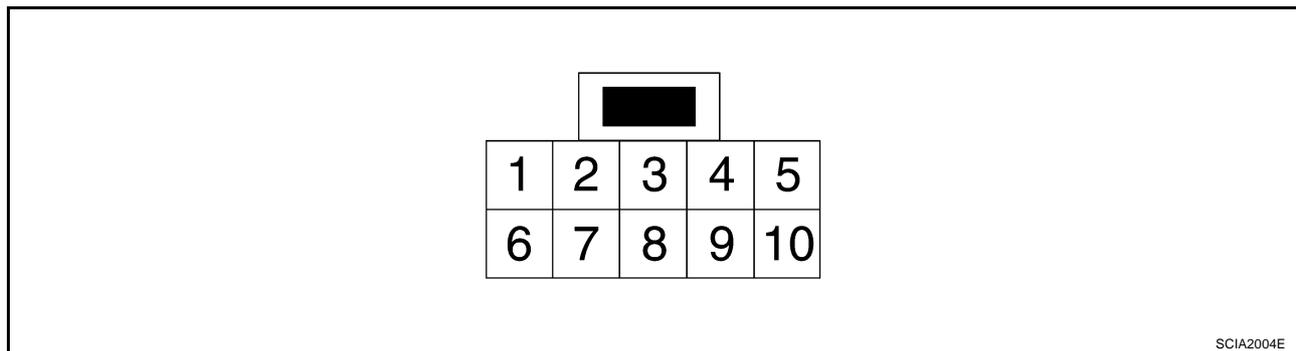

SCIA2004E

## SHIFT LOCK CONTROL UNIT INSPECTION TABLE

Data are reference values.

Terminal (Wire color)		Item	Condition	Judgement standard
1 (R/Y)	8 (B)	Power source	Always	Battery voltage
2 (L)	8 (B)	Detention switch (for key)	When selector lever is not in "P" position with key inserted.	Battery voltage
			When selector lever is in "P" position with key inserted.	Approx. 0V
3 (L/W)	8 (B)	Detention switch (for shift)	When selector lever is not "P" position.	Battery voltage
			When selector lever is "P" position.	Approx. 0V
4 (R/G)	8 (B)	Stop lamp switch	When brake pedal is depressed	Battery voltage
			When brake pedal is released	Approx. 0V
5 (V/W)	8 (B)	Vehicle speed signal (8pulse signal)	Speed meter is operated	<p>ELF1084D</p>
6 (G)	8 (B)	Ignition signal	Ignition switch: OFF	Approx. 0V
			Ignition switch: ON	Battery voltage
7 (R/L)	8 (B)	Shift lock solenoid	<ul style="list-style-type: none"> <li>When selector lever is in "P" position, brake pedal is depressed, and ignition switch is ON.</li> <li>When selector lever is not in "P" position, ignition switch is ON, and vehicle speed is 10km/h or less.</li> <li>For 3minutes after selector lever is not in "P" position, vehicle speed is 10km/h or less, and ignition switch is ON → OFF.</li> </ul>	Approx. 0V
			Except the above	Battery voltage
8 (B)	—	Ground	—	Approx. 0V
9 (V)	8 (B)	Key lock solenoid	When selector lever is not "P" position.	Battery voltage for approx. 0.1 sec. (Note)
			When selector lever is "P" position.	Approx. 0V
10 (W/B)	8 (B)	Key unlock solenoid	When selector lever is "P" position with ignition switch is OFF.	Battery voltage for approx. 0.1 sec. (Note)
			When selector lever is not "P" position with ignition switch is OFF.	Approx. 0V

# CVT SHIFT LOCK SYSTEM

## NOTE:

Make sure that the pointer swings only momentarily because the output time is so short. If the inspection is done with an oscilloscope, it should be observed that the power source voltage lasts for 3.5 to 10 ms.

## Component Inspection SHIFT LOCK SOLENOID


ACS00398

- Check operation by applying battery voltage to the CVT device harness connector.

### CAUTION:

Be sure to apply the voltage of the correct polarity to the respective terminals. Otherwise, the part may be damaged.

Connector	Terminal
M57	9 (Battery voltage) - 10 (Ground)

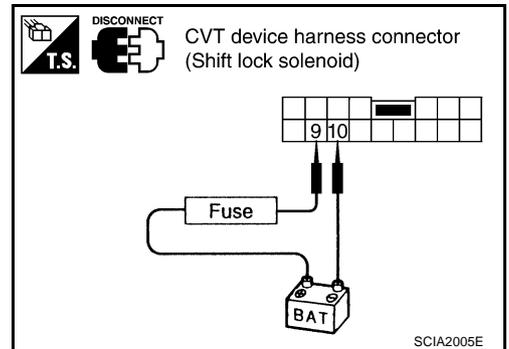


## DETENTION SWITCH

### For Key:

- Check continuity between terminals of the CVT device harness connector.

Condition	Connector	Terminal	Continuity
When selector lever is "P" position.	M57	5 - 6	No
When selector lever is not "P" position.			Yes

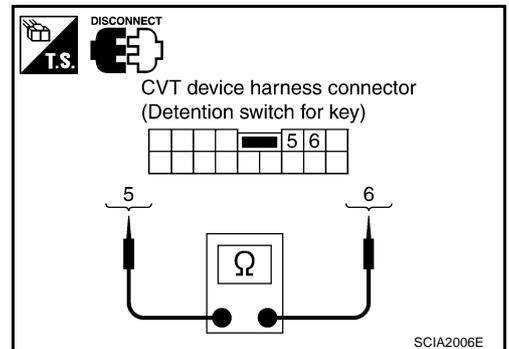


## DETENTION SWITCH

### For Shift:

- Check continuity between terminals of the CVT device harness connector.

Condition	Connector	Terminal	Continuity
When selector lever is "P" position.	M57	13 - 14	No
When selector lever is not "P" position.			Yes

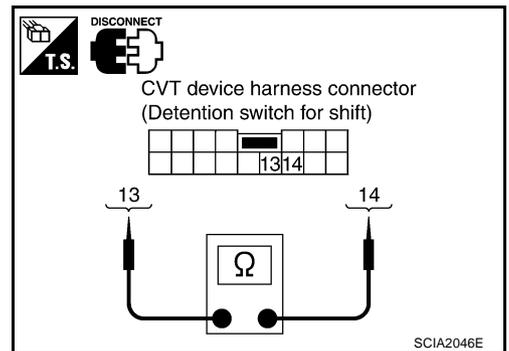

## KEY LOCK SOLENOID


### Key Lock

- Check operation by applying battery voltage to key switch and key lock solenoid harness connector.

### CAUTION:

Be careful not to cause burnout of the harness.

Connector	Terminal
M28	1 (Battery voltage) - 2 (Ground)

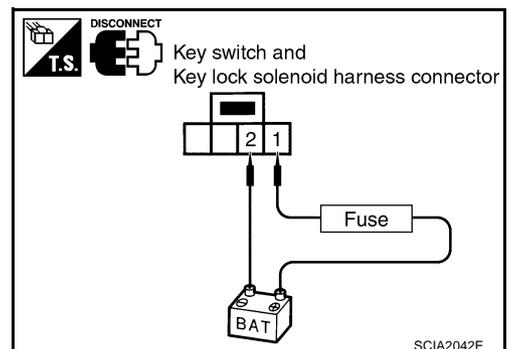

# CVT SHIFT LOCK SYSTEM


## Key Unlock

- Check operation by applying battery voltage to key switch and key lock solenoid harness connector.

### CAUTION:

Be careful not to cause burnout of the harness.


Connector	Terminal
M28	2 (Battery voltage) - 1 (Ground)

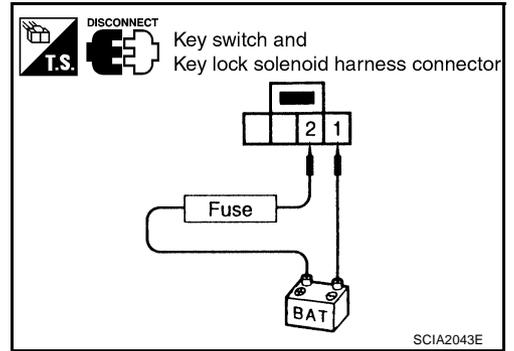

## KEY SWITCH

- Check continuity between terminals of the key switch and key lock solenoid harness connector.

Condition	Connector	Terminal	Continuity
Key inserted	M28	3 - 4	Yes
Key withdrawn			No

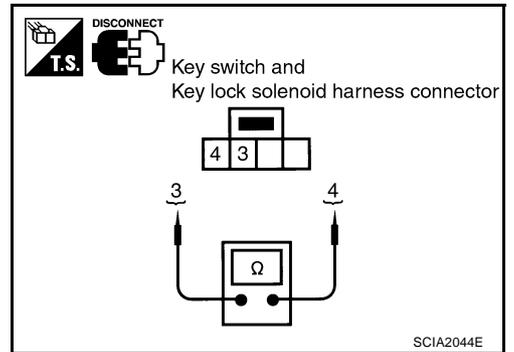


## STOP LAMP SWITCH

- Check continuity between terminals of the stop lamp switch harness connector.

Condition	Connector	Terminal	Continuity
When brake pedal is depressed	E116	1 - 2	Yes
When brake pedal is released			No

Check stop lamp switch after adjusting brake pedal. Refer to [BR-6](#), "Inspection and Adjustment" .

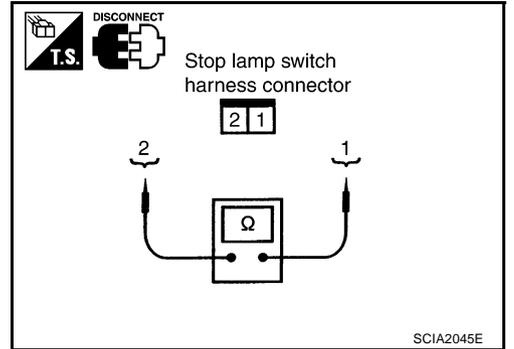

# AIR BREATHER HOSE


## AIR BREATHER HOSE

PFP:31098

### Removal and Installation

ACS001ZV

Refer to the figure below for air breather hose and air breather removal and installation procedure.

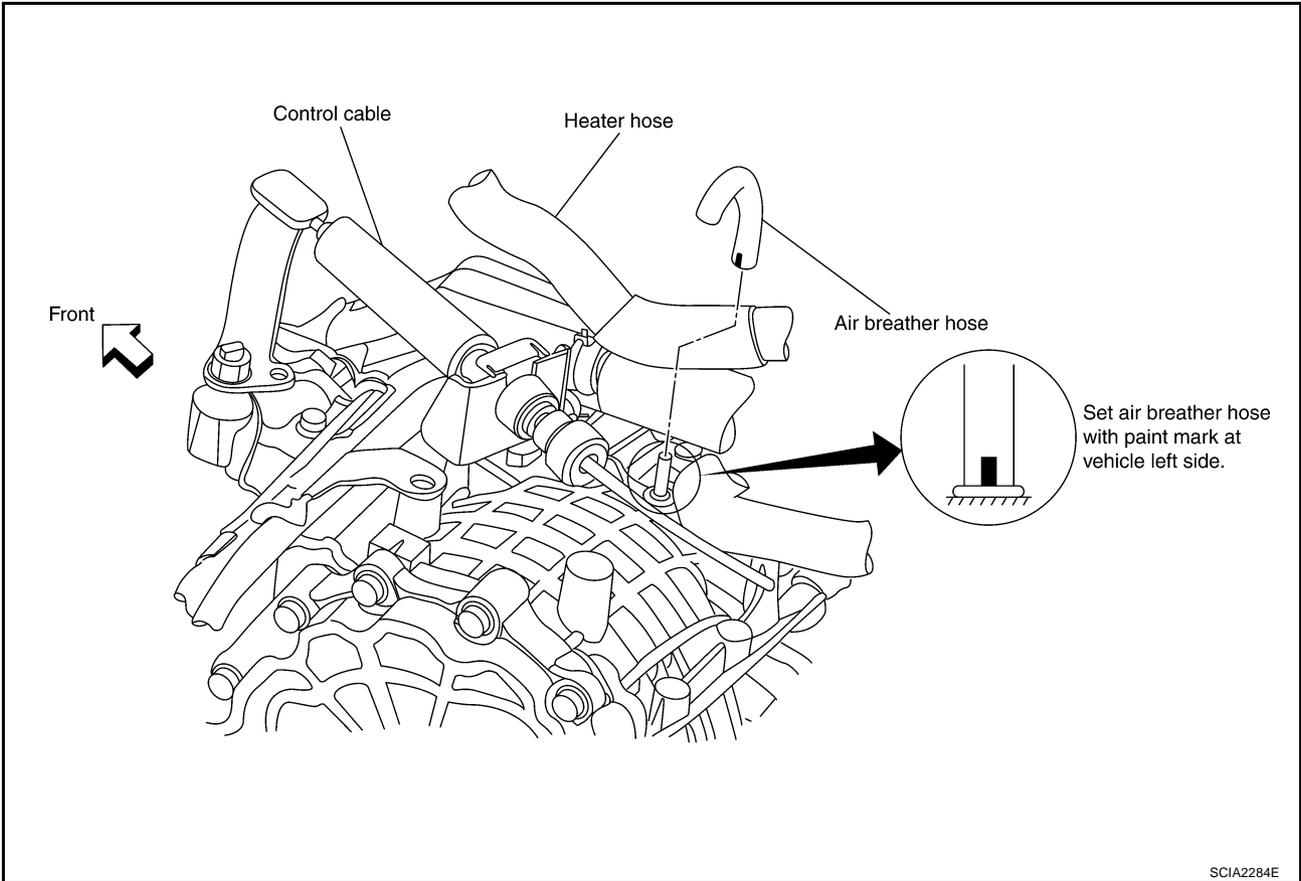

#### **CAUTION:**

- Securely insert the hose into the air breather until it touches the bottom.

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M


# DIFFERENTIAL SIDE OIL SEAL

PFP:33111

ACS003L0

## DIFFERENTIAL SIDE OIL SEAL

### Removal and Installation COMPONENTS

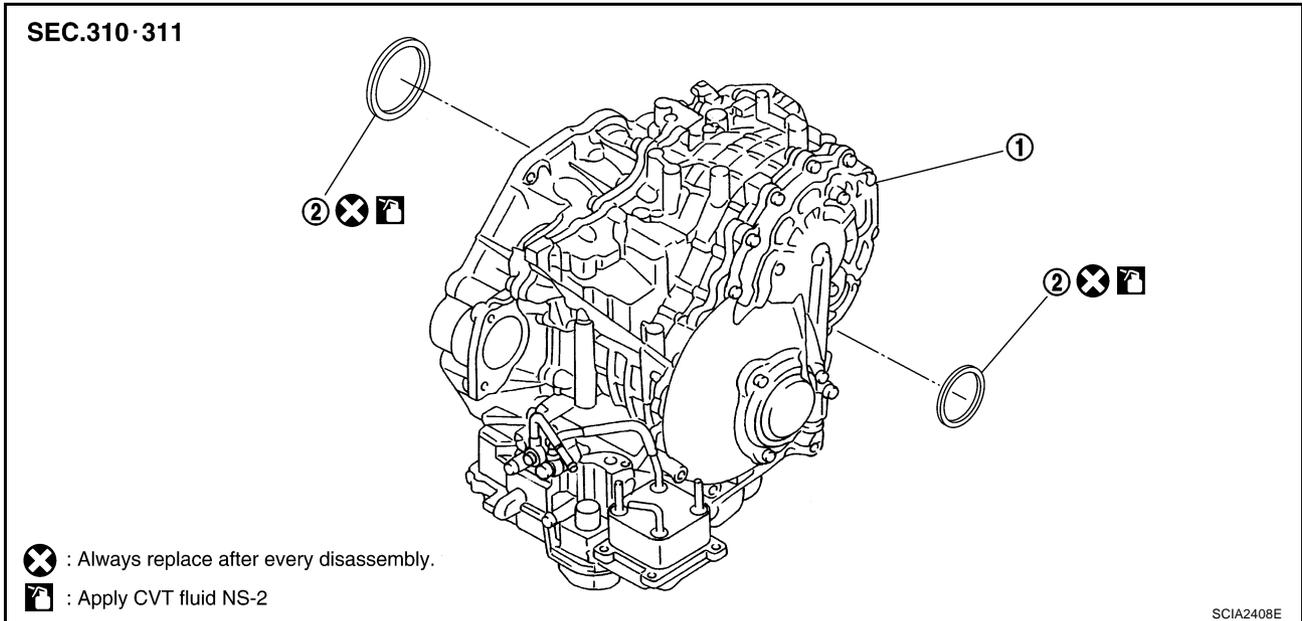

1. Transaxle assembly


2. Differential side oil seal

### REMOVAL

1. Remove drive shaft assembly. Refer to [FAX-7, "FRONT DRIVE SHAFT"](#).
2. Remove transfer assembly from transaxle assembly. (AWD models)  
Refer to [TF-51, "Removal and Installation"](#).
3. Remove differential side oil seal using a flat-bladed screwdriver.

#### **CAUTION:**

**Be careful not to scratch transaxle case.**

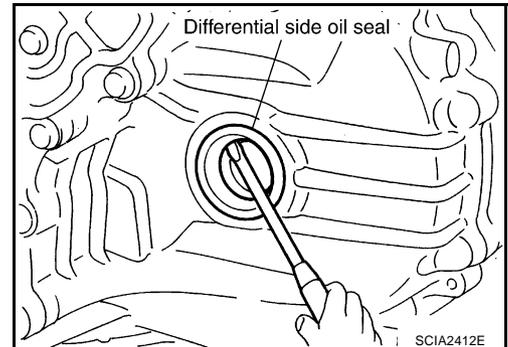

# DIFFERENTIAL SIDE OIL SEAL

## INSTALLATION


- As shown below, use a drift to drive the differential side oil seal into the case until it is flush. Refer to dimensions A.

Unit: mm (in)

Dimensions A	$0 \pm 0.5$ ( $0 \pm 0.020$ )
--------------	-------------------------------


### NOTE:

The differential side oil seal pulling direction is used as the reference.

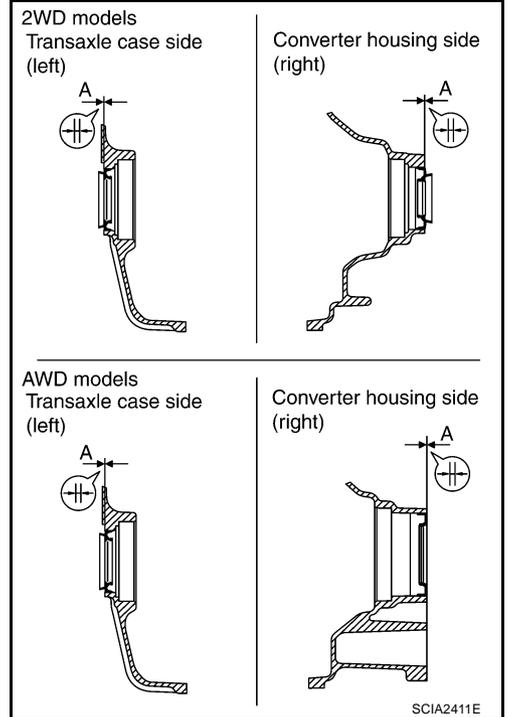

### Drift to be used:

Location	2WD models	AWD models
Transaxle case side (left) Tool number (Kent-Moore No.)	ST33400001 (J-26082)	ST33400001 (J-26082)
Converter housing side (right) Tool number (Kent-Moore No.)	ST33400001 (J-47005)	KV40100621 (J-25273)

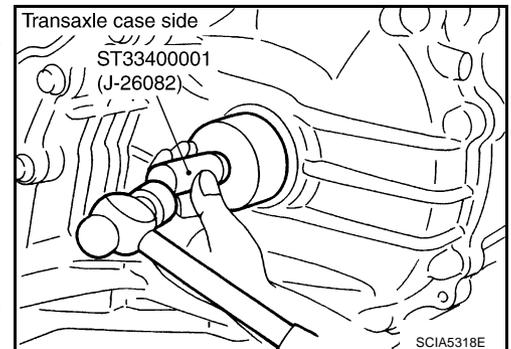

### CAUTION:

- When installing differential side oil seal, apply a coat of NISSAN CVT Fluid NS-2.
- Do not reuse differential side oil seal.

- Reinstall any part removed.

### CAUTION:

If lubricant leak has occurred, after finishing work, check fluid level. Refer to [CVT-14, "Checking CVT Fluid"](#).

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M


# CVT FLUID COOLER VALVE

PFP:21630

ACS004ME

## CVT FLUID COOLER VALVE

### Removal and Installation COMPONENTS

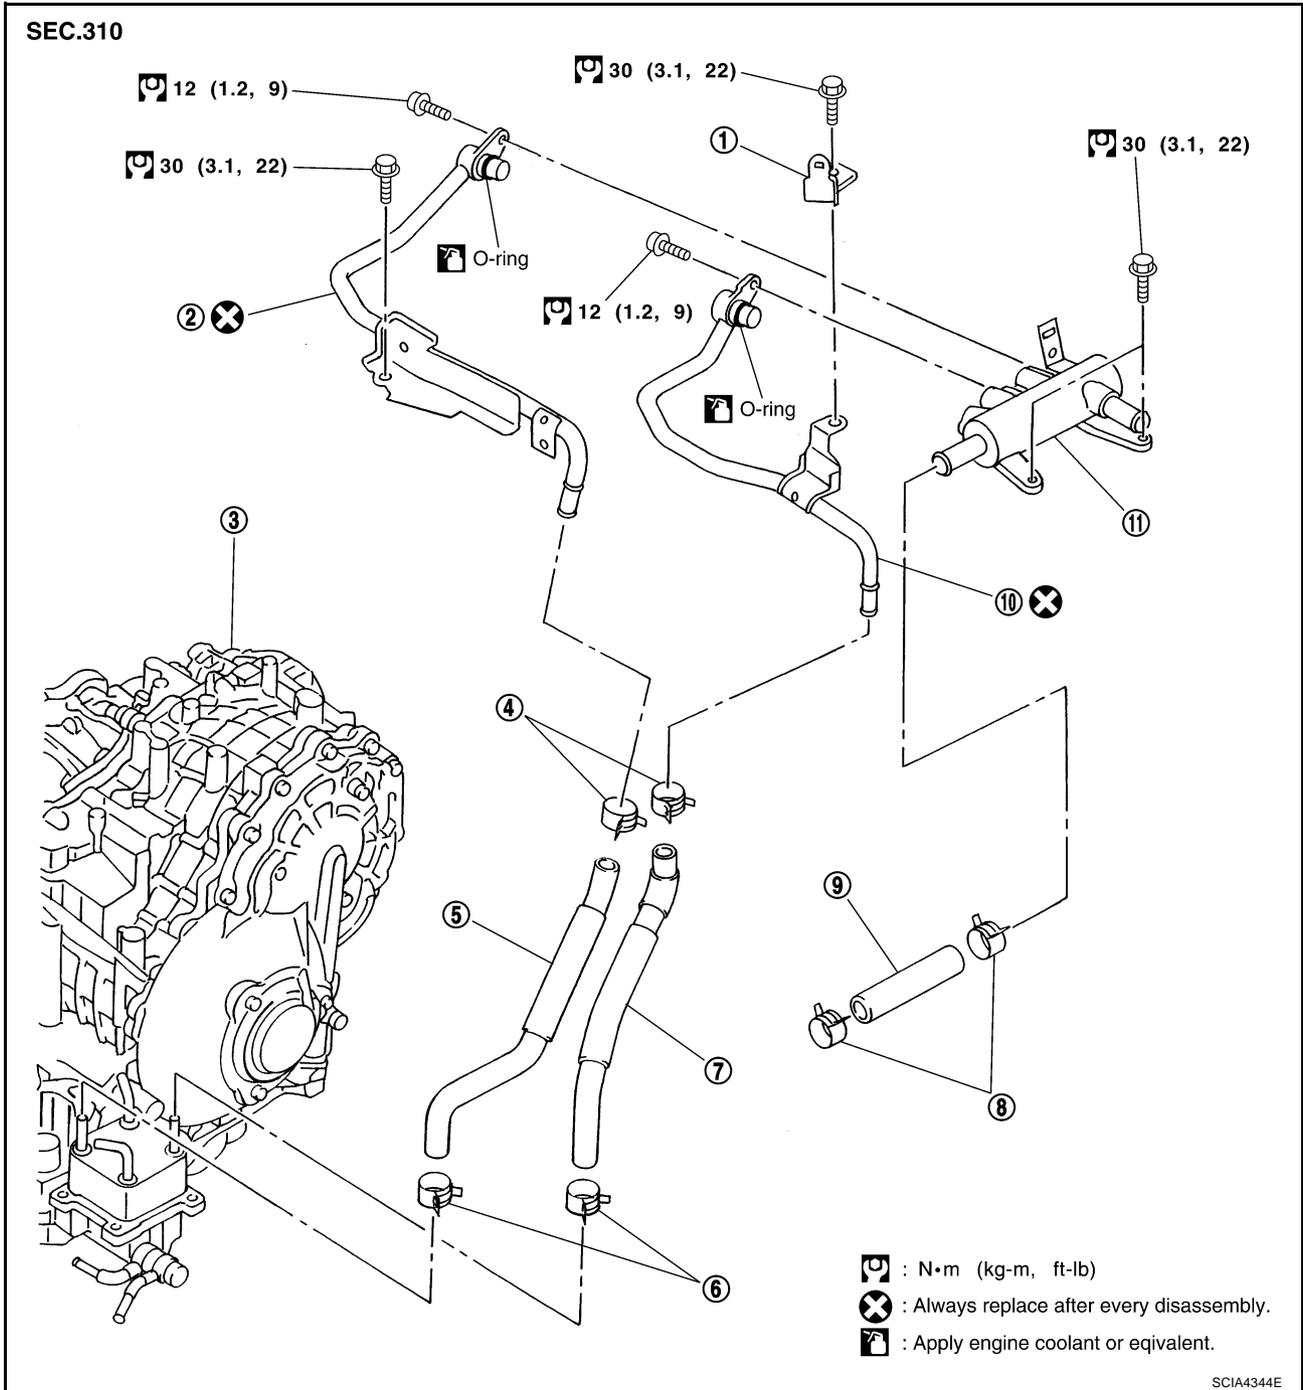

- |   |   |                       |
|---|---|-----------------------|
| 1. Harness bracket                        | 2. CVT fluid cooler inlet tube assembly | 3. Transaxle assembly |
| 4. Hose clamp                             | 5. Inlet water hose                     | 6. Hose clamp         |
| 7. Outlet water hose                      | 8. Hose clamp                           | 9. Heater hose        |
| 10. CVT fluid cooler outlet tube assembly | 11. CVT fluid cooler valve assembly     |                       |

# CVT FLUID COOLER VALVE

## REMOVAL

### WARNING:


Never remove the radiator cap when the engine is hot. Serious burns could occur from high pressure engine coolant escaping from the radiator.

1. Remove engine undercover.
2. Drain engine coolant. Refer to [CO-9, "Changing Engine Coolant"](#) .


### CAUTION:

Perform when the engine is cold.


3. Remove air duct (inlet). Refer to [EM-14, "Removal and Installation"](#) .
4. Remove battery. Refer to [SC-8, "Removal and Installation"](#) .
5. Remove air cleaner case (upper and lower), resonator, mass air flow sensor and air duct assembly. Refer to [EM-14, "Removal and Installation"](#) .
6. Remove fuse and fusible link block from battery bracket.

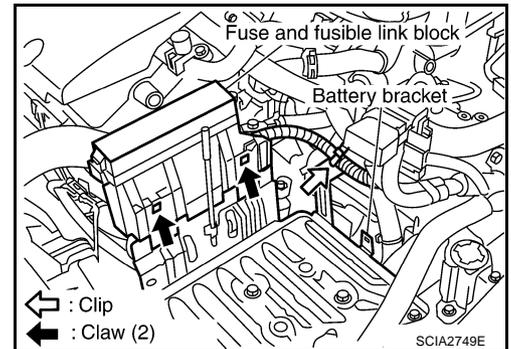

7. Remove battery bracket.

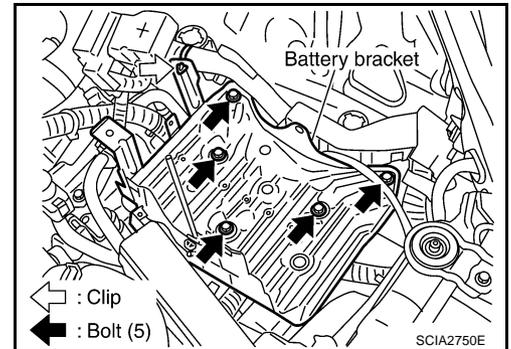

8. Remove battery bracket mounting.

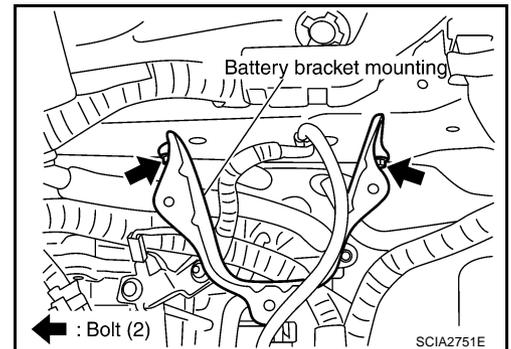

A

B

CVT

D

E

F

G

H

I

J


K

L


M

# CVT FLUID COOLER VALVE


9. Remove air cleaner bracket. Refer to [EM-14, "Removal and Installation"](#).
10. Remove control cable from transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#).

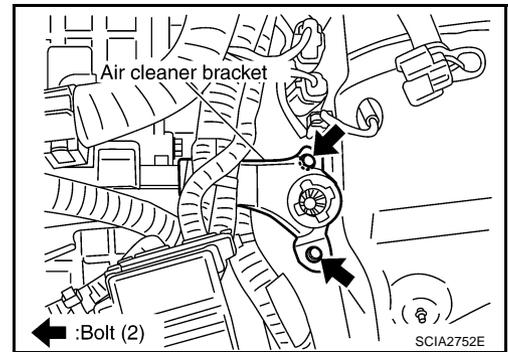


11. Remove water bypass hose from water bypass pipe. Refer to [CO-29, "Removal and Installation"](#).

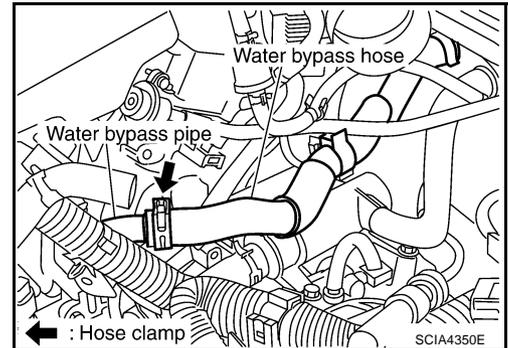


12. Remove harness bracket and control cable bracket from transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#) and [CVT-220, "COMPONENTS"](#).
13. Remove inlet water hose and outlet water hose. Refer to [CVT-220, "COMPONENTS"](#).
14. Remove heater hose from heater pipe. Refer to [CO-29, "Removal and Installation"](#).
15. Remove CVT fluid cooler valve assembly from transaxle assembly. Refer to [CVT-220, "COMPONENTS"](#).

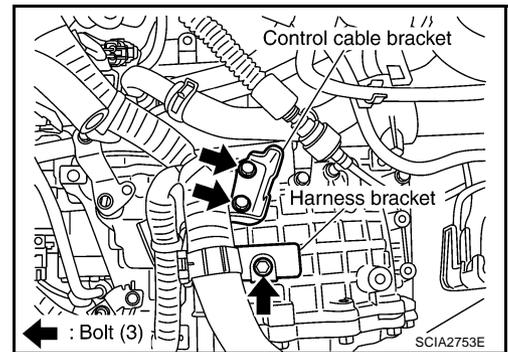

16. Remove heater hose from CVT fluid cooler valve assembly.

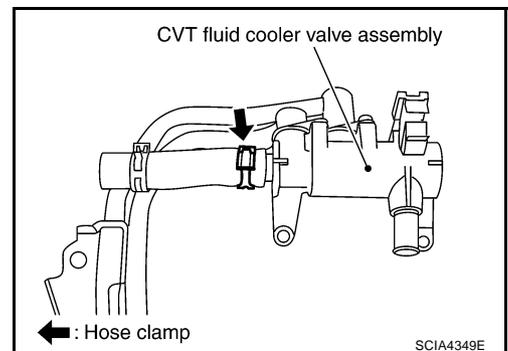

17. Remove CVT fluid cooler inlet tube assembly and CVT fluid cooler outlet tube assembly from CVT fluid cooler valve assembly.

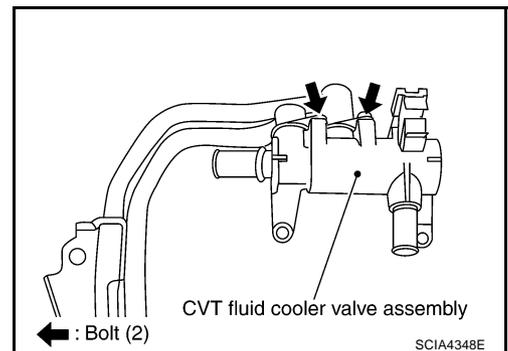

# CVT FLUID COOLER VALVE

## INSTALLATION

Note the following, and install in the reverse order of removal.

- After completing installation, check for engine coolant leakage, engine coolant level, and the positions of CVT. Refer to [CO-9, "Inspection"](#) and [CVT-209, "Checking of CVT Position"](#).

### CAUTION:

- Install hose clamp with tabs aligned with markings of CVT fluid cooler valve assembly and each hose.
- Do not reuse CVT fluid cooler inlet tube assembly and CVT fluid cooler outlet tube assembly.
- Apply LLC around O-ring when installing CVT fluid cooler inlet tube and CVT fluid cooler outlet tube assembly to CVT fluid cooler valve assembly.

## Component Inspection



1. Make sure that CVT fluid cooler valve is fully opened at room temperature.

### Standard

Dimension A from CVT fluid cooler valve port end to tip of valve shaft  
(At room temperature):

Approx 72.0 mm (2.835 in) or more

2. Put CVT fluid cooler valve into a water-filled container, and then heat it up to 82°C (180°F) or more for 10 minutes or more.

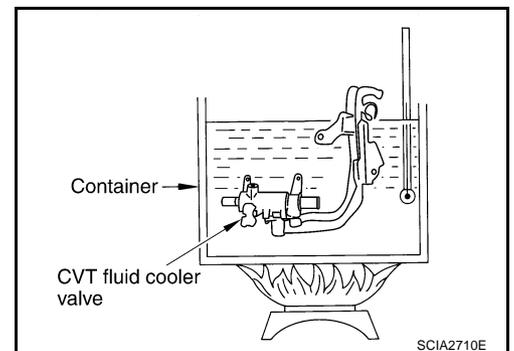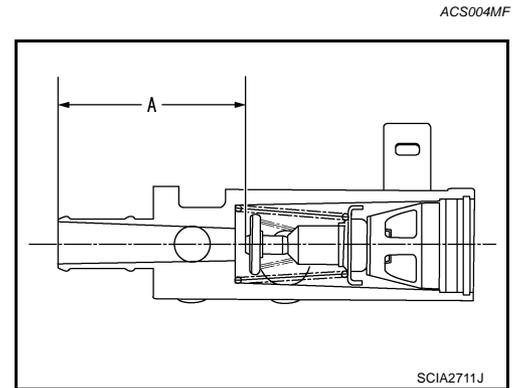


3. Make sure that CVT fluid cooler valve is fully closed.

### Standard

Dimension A from CVT fluid cooler valve port end to tip of valve shaft  
(When heating to 82°C (180°F) or more for 10 minutes or more):

Approx 66.5 mm (2.618 in) or less

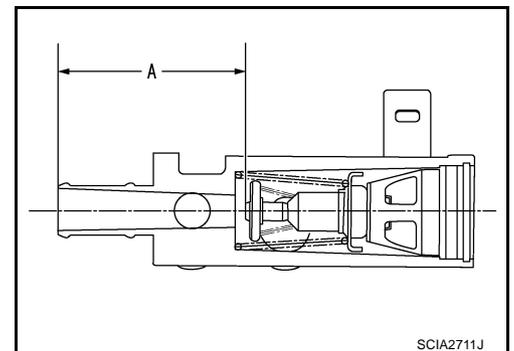

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M


# TRANSAXLE ASSEMBLY

PFP:32020

ACS002KZ

## TRANSAXLE ASSEMBLY

### Removal and Installation COMPONENTS (2WD MODELS)

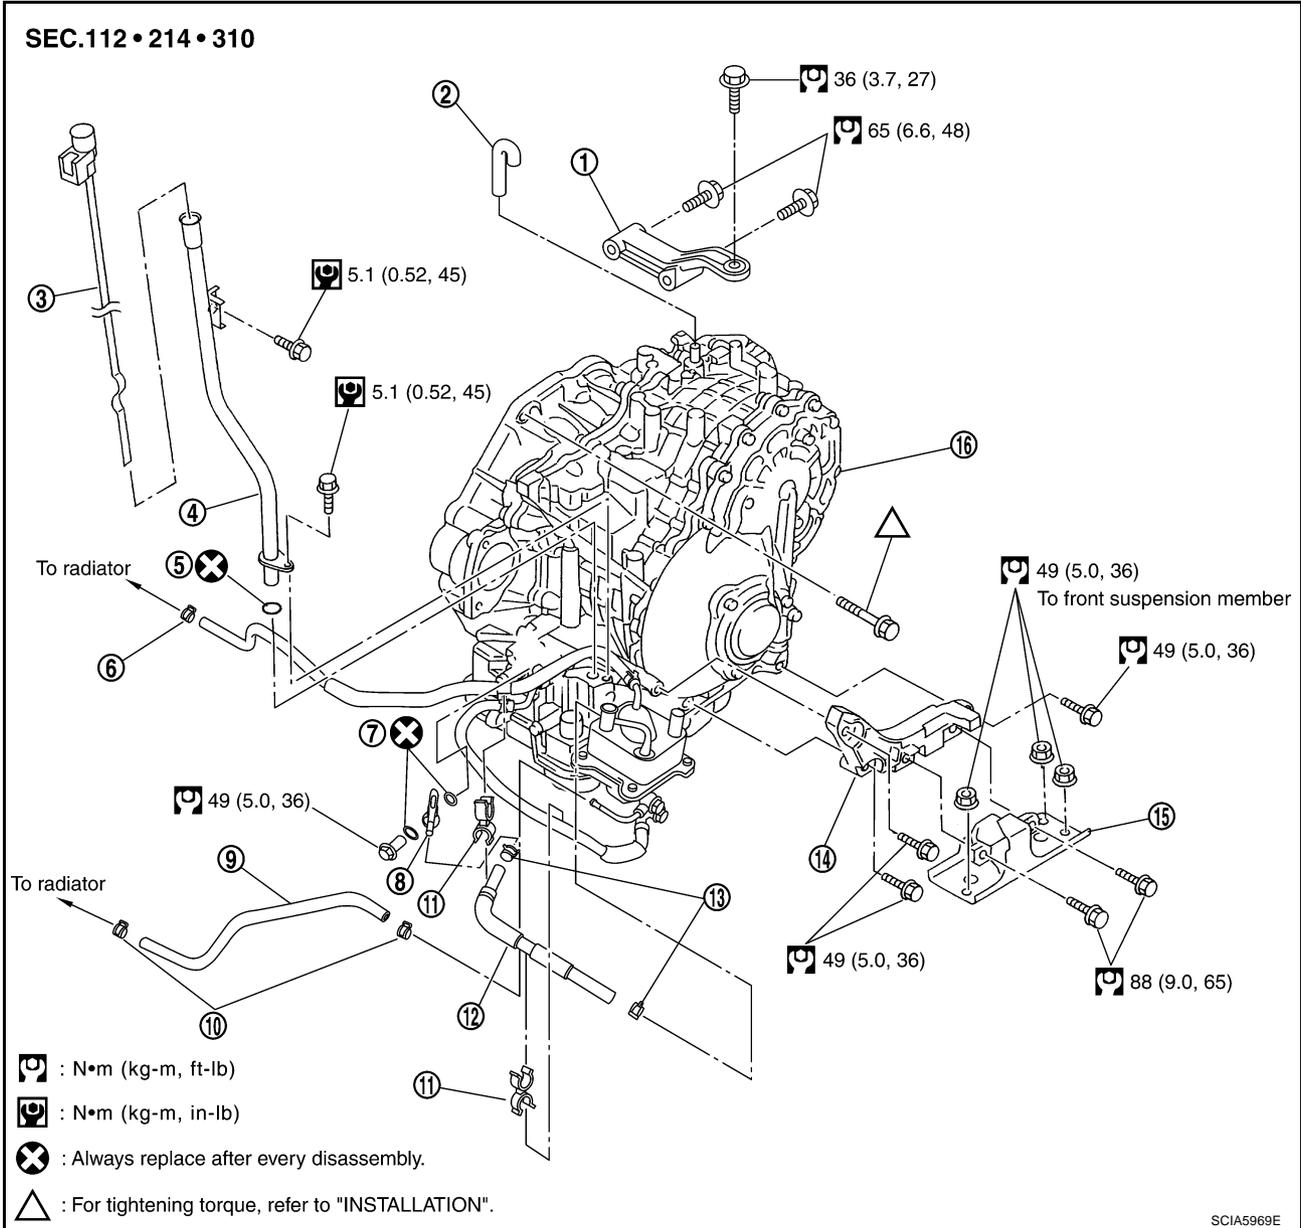


SCIA5969E

- |                            |                                |                                  |
|----------------------------|--------------------------------|----------------------------------|
| 1. Rear gusset             | 2. Air breather hose           | 3. CVT fluid level gauge         |
| 4. CVT fluid charging pipe | 5. O-ring                      | 6. Hose clamp                    |
| 7. Copper washer           | 8. Fluid cooler tube           | 9. CVT fluid cooler hose         |
| 10. Hose clamp             | 11. Clip                       | 12. CVT fluid cooler hose        |
| 13. Hose clamp             | 14. LH engine mounting bracket | 15. LH engine mounting insulator |
| 16. Transaxle assembly     |                                |                                  |

# TRANSAXLE ASSEMBLY

## COMPONENTS (AWD MODELS)

SEC.112 • 214 • 310 • 330

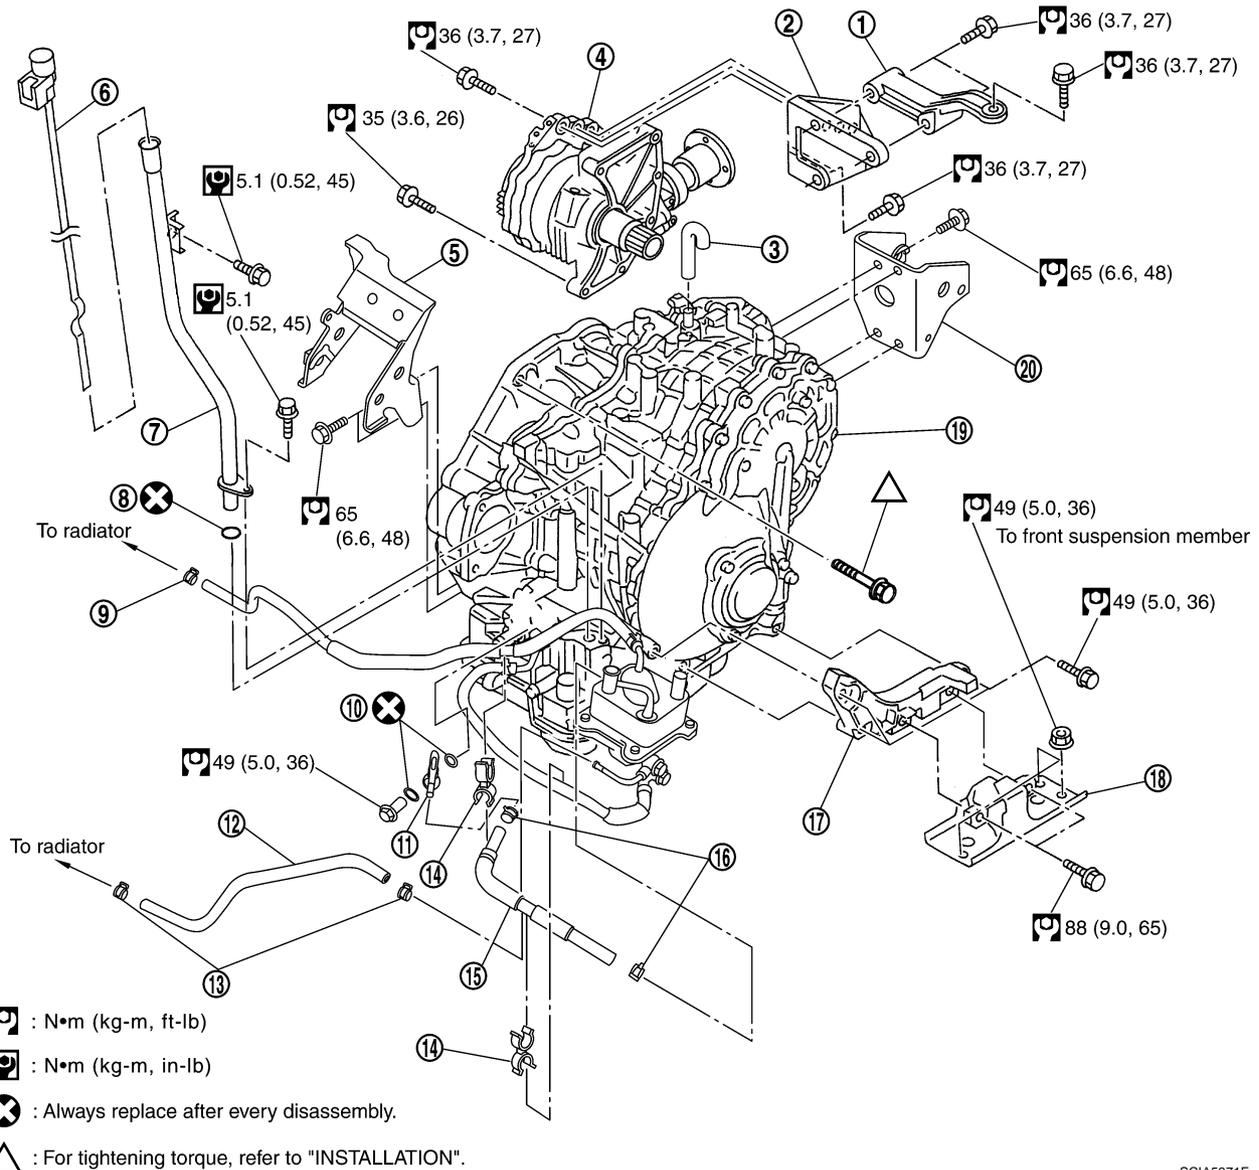

SCIA5971E

- |                            |                                  |                                  |
|----------------------------|----------------------------------|----------------------------------|
| 1. Rear gusset             | 2. Transfer gusset               | 3. Air breather hose             |
| 4. Transfer assembly       | 5. Front engine mounting bracket | 6. CVT fluid level gauge         |
| 7. CVT fluid charging pipe | 8. O-ring                        | 9. Hose clamp                    |
| 10. Copper washer          | 11. Fluid cooler tube            | 12. CVT fluid cooler hose        |
| 13. Hose clamp             | 14. Clip                         | 15. CVT fluid cooler hose        |
| 16. Hose clamp             | 17. LH engine mounting bracket   | 18. LH engine mounting insulator |
| 19. Transaxle assembly     | 20. Rear engine mounting bracket |                                  |

## REMOVAL

### CAUTION:


The transaxle assembly it self cannot be removed from the vehicle. Remove the transaxle assembly and engine assembly together from the vehicle.

1. Disconnect the negative battery terminal.
2. Remove engine under cover.


A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# TRANSAXLE ASSEMBLY

3. Remove air guide.
4. Remove exhaust front tube with power tool. Refer to [EX-3, "Removal and Installation"](#) .

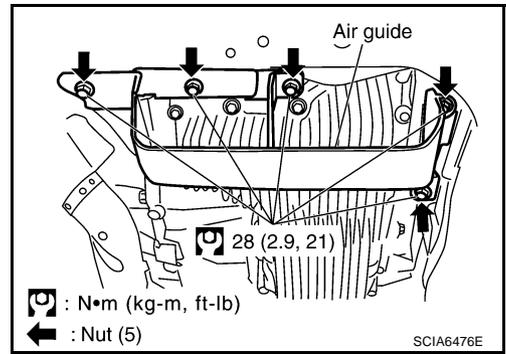


5. Remove rear plate cover. Refer to [EM-28, "Removal and Installation"](#) .

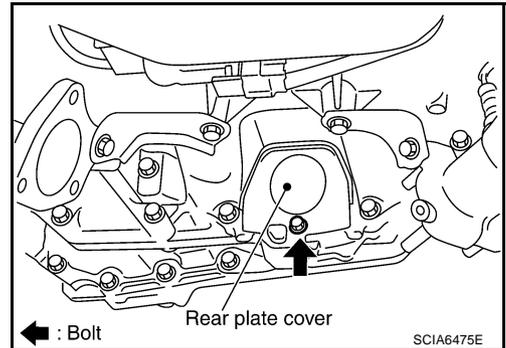


6. Turn crankshaft, and remove the four tightening nuts for drive plate and torque converter.

**CAUTION:**

The crankshaft should be rotated clockwise, viewed from the front of the engine.

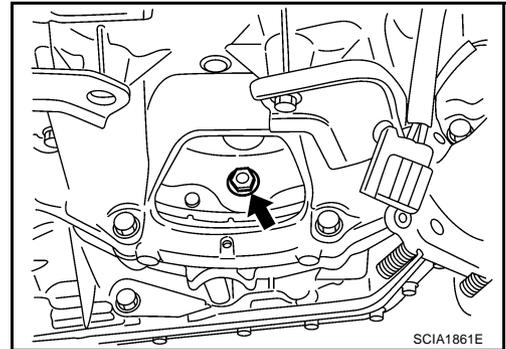

7. Remove the four bolts in the figure. (2WD models)

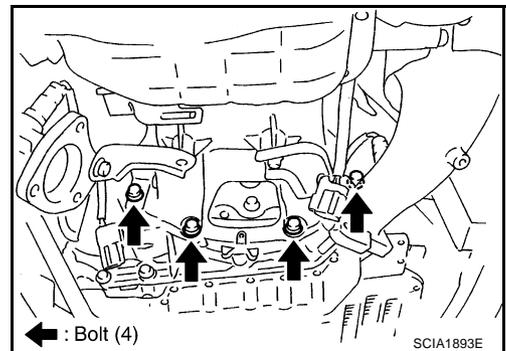


8. Remove the six bolts in the figure. (AWD models)
9. Remove transaxle assembly and engine assembly together from the vehicle. Refer to [EM-105, "Removal and Installation"](#) .
10. Remove drive shaft. Refer to [FAX-7, "Removal and Installation \(Left Side\)"](#) , [FAX-8, "Removal and Installation \(Right Side\)"](#) .

**CAUTION:**

Be sure to replace the new differential side oil seal every removal of drive shaft. Refer to [CVT-218, "Removal and Installation"](#) .

11. Remove transfer gusset. (AWD models)

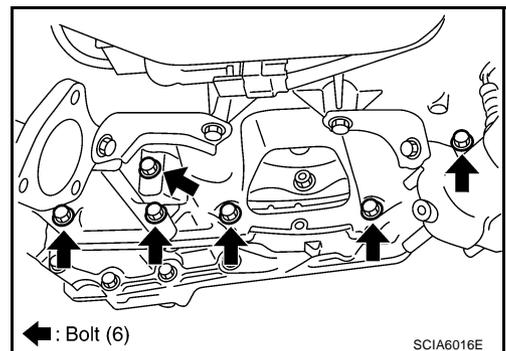


# TRANSAXLE ASSEMBLY

12. Remove transfer assembly. Refer to [TF-51, "Removal and Installation"](#) . (AWD models)

**CAUTION:**

Be sure to replace the new differential side oil seal (converter housing side only) every removal of transfer. Refer to [CVT-218, "Removal and Installation"](#) .

13. Remove CVT fluid charging pipe.  
14. Remove O-ring from CVT fluid charging pipe.  
15. Disconnect harness connector and wire harness.

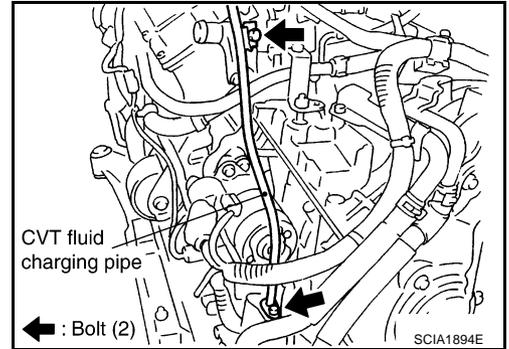


16. Remove crankshaft position sensor (POS), from engine assembly. Refer to [EM-28, "Removal and Installation"](#) .


**CAUTION:**

- Do not subject it to impact by dropping or hitting it.
- Do not disassemble.
- Do not allow metal filings, etc., to get on the sensor's front edge magnetic area.
- Do not place in an area affected by magnetism.

17. Remove starter motor. Refer to [SC-15, "Removal and Installation"](#) .

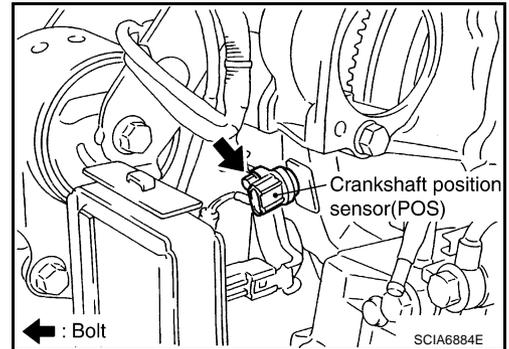


18. Remove CVT fluid cooler valve assembly. (With CVT fluid cooler tube assembly and heater hose). Refer to [CVT-220, "Removal and Installation"](#) .

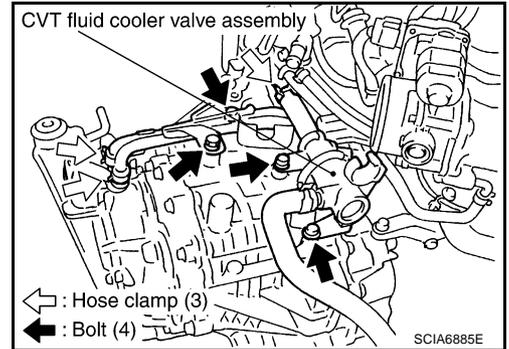


A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# TRANSAXLE ASSEMBLY

19. Install slinger to transaxle assembly.
20. Remove rear gusset.
21. Remove LH engine mounting bracket and LH engine mounting insulator.
22. Remove front suspension member from transaxle assembly and engine assembly. Refer to [EM-105, "Removal and Installation"](#) . (AWD models)
23. Remove transaxle assembly fixing bolts with power tool.

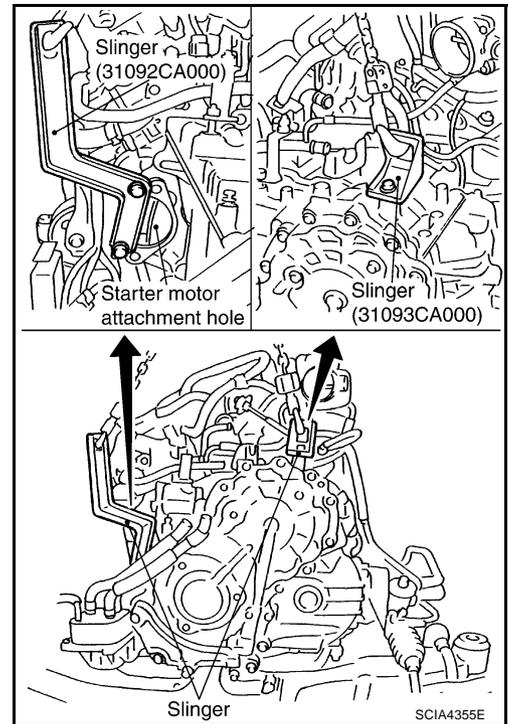

24. Remove transaxle assembly from engine assembly with a hoist.
  - **Secure torque converter to prevent it from dropping.**

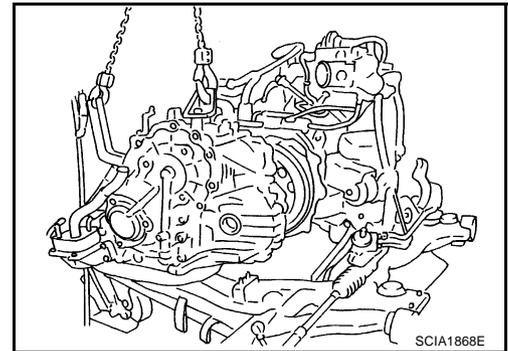


## INSPECTION

### Installation and Inspection of Torque Converter

- After inserting a torque converter to a transaxle, be sure to check dimension "A" to ensure it is within the reference value limit.

**Dimension "A": 14.0 mm (0.55 in) or more**

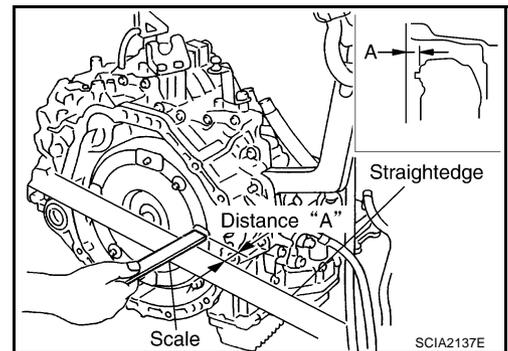


# TRANSAXLE ASSEMBLY


## INSTALLATION

Install the removed parts in the reverse order of the removal, while paying attention to the following work.


- Screw and set the locate into the stud bolts for the torque converter locate.

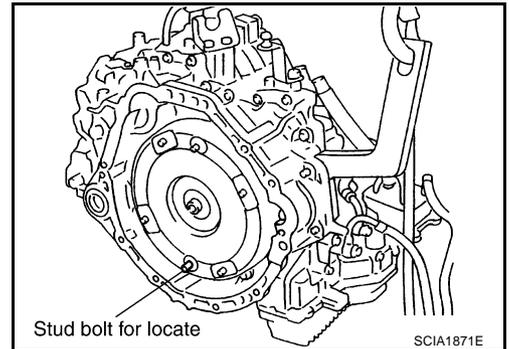


- Rotate the torque converter for the locate to go down.

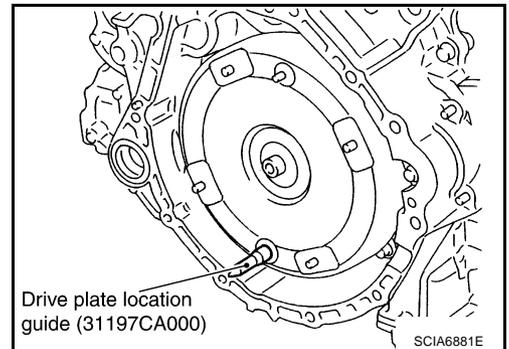

- Rotate the drive plate for the hole of the drive plate locate to go down.

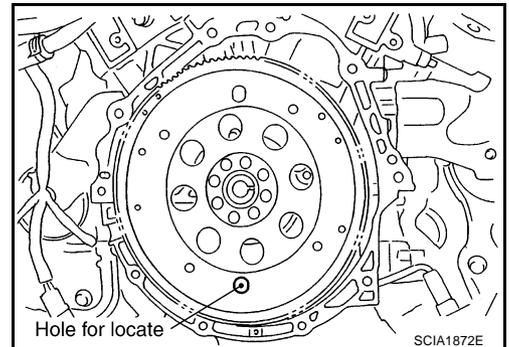


- Installing transaxle assembly from engine assembly with a hoist.

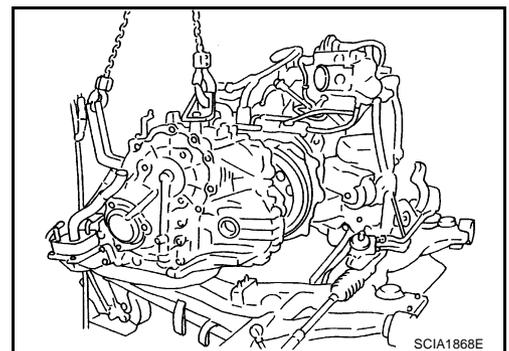

A  
B  
CVT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M


# TRANSAXLE ASSEMBLY

- When installing fluid cooler tube to transaxle assembly, transaxle assembly the part with the tube aligned with the rib.

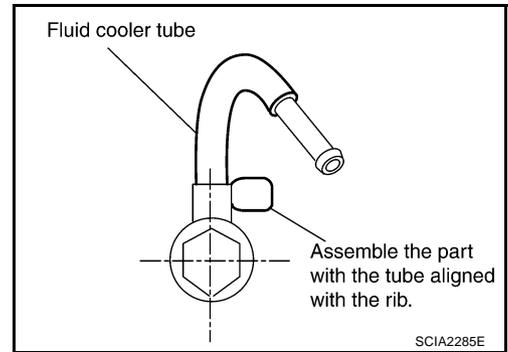

- When installing transaxle to the engine, attach the fixing bolts in accordance with the following standard.

Bolt No.	1	2	3	4
Number of bolts	1	2	2	4
Bolt length " $\varnothing$ "mm (in)	52 (2.05)	36 (1.42)	105 (4.13)	35 (1.38)
Tightening torque N-m (kg-m, ft-lb)	75 (7.7, 55)			47 (4.8, 35)

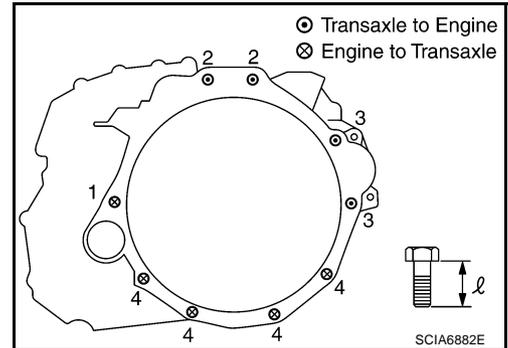


- Align the positions of tightening nuts for drive plate with those of the torque converter, and temporarily tighten the nuts. Then, tighten the nuts with the specified torque.

 : 51N-m (5.2kg-m, 38ft-lb)

### CAUTION:

- When turning crankshaft, turn it clockwise as viewed from the front of the engine.
- When tightening the tightening nuts for the torque converter after fixing the crankshaft pulley bolts, be sure to confirm the tightening torque of the crankshaft pulley mounting bolts. Refer to [EM-66, "INSTALLATION"](#).
- After converter is installed to drive plate, rotate crankshaft several turns and check to be sure that transaxle rotates freely without binding.
- Install POS sensor. Refer to [EM-28, "Removal and Installation"](#).
- After completing installation, check for fluid leakage, fluid level, and the positions of CVT. Refer to [CVT-14, "Checking CVT Fluid"](#), [CVT-209, "Adjustment of CVT Position"](#), [CVT-209, "Checking of CVT Position"](#).
- When replacing the CVT assembly, erase EEP ROM in TCM. Refer to [CVT-8, "Precautions for TCM and CVT Assembly Replacement"](#).

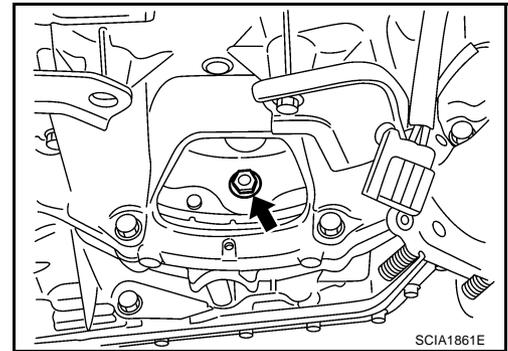

# SERVICE DATA AND SPECIFICATIONS (SDS)

## SERVICE DATA AND SPECIFICATIONS (SDS)

PFP:00030

### General Specifications

ACS001ZX

Applied model		VQ35DE engine			
		2WD		AWD	
CVT model		RE0F09A			
CVT assembly	Model code number	1XD07	1XD15	1XD08	1XD16
transmission gear ratio	D range	Variable			
	Reverse	1.766			
	Final drive	5.173			
Recommended fluid		NISSAN CVT fluid NS-2*1			
Fluid capacity		10.2 liter (10-6/8 US qt, 9 Imp qt)			

**CAUTION:**

- Use only Genuine Nissan CVT fluid NS-2. Do not mix with other fluid.
- Using CVT fluid other than Genuine NISSAN CVT fluid NS-2 will deteriorate in driveability and CVT durability, and may damage the CVT, which is not covered by the warranty.

\*1: Refer to [MA-11, "Fluids and Lubricants"](#) .

### Vehicle Speed When Shifting Gears

ACS004ZY

Numerical value data are reference values.

Engine type	Throttle position	Shift pattern	Engine speed (rpm)	
			At 40 km/h (25 MPH)	At 60 km/h (37 MPH)
VQ35DE	8/8	"D" position Second position* "L" position*	2,800 - 4,300	3,900 - 5,300
		2/8	"D" position	1,200 - 2,000
	Second position*		2,200 - 3,000	2,800 - 3,600
	"L" position*	2,800 - 3,600	3,800 - 4,600	

\*: Without manual mode

**CAUTION:**

Lock-up clutch is engaged when vehicle speed is approximately 18 km/h (11 MPH) to 90 km/h (56 MPH).

### Stall Speed

ACS00201

Stall speed	2,700 - 3,250 rpm
-------------	-------------------

### Line Pressure

ACS00A26

Engine	Engine speed	Line pressure kPa (kg/cm <sup>2</sup> , psi)
		"R", "D", "L"*1 positions
VQ35DE	At idle speed	750 (7.65, 108.8)
	At stall speed	5,300 - 5,700 (54.06 - 58.14, 768.5 - 826.5)*2

\*1 : Without manual mode

\*2 : Reference values

# SERVICE DATA AND SPECIFICATIONS (SDS)

## Solenoid Valves

ACS00339

Name	Resistance (Approx.) ( $\Omega$ )	Terminal
Pressure control solenoid valve B (Secondary pressure solenoid valve)	3 - 9	3
Pressure control solenoid valve A (Line pressure solenoid valve)		2
Torque converter clutch solenoid valve		12
Lock-up select solenoid valve	6 - 19	13

## CVT Fluid Temperature Sensor

ACS002SC

Name	Condition	CONSULT-II "DATA MONITOR" (Approx.) (V)	Resistance (Approx.) (k $\Omega$ )
CVT fluid temperature sensor	20°C (68°F)	2.0	6.5
	80°C (176°F)	1.0	0.9

## Primary Speed Sensor

ACS002SD

Name	Condition	Data (Approx.)
Primary speed sensor	When driving ["D" position, 20 km/h (12 MPH)].	600 (Hz)

## Secondary Speed Sensor

ACS002SE

Name	Condition	Data (Approx.)
Secondary speed sensor	When driving ["D" position, 20 km/h (12 MPH)].	300 (Hz)

## Removal and Installation

ACS002SG

Distance between end of converter housing and torque converter	14.0 mm (0.55 in) or more
--	---------------------------