

LT
SECTION
LIGHTING SYSTEM

A
B
C
D
E
F
G
H
I
J
LT
L
M

CONTENTS

| | |
|---|--|
| PRECAUTIONS 4 | |
| Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" 4 | |
| General precautions for service operations 5 | |
| Wiring Diagrams and Trouble Diagnosis 5 | |
| HEADLAMP (FOR USA) 6 | HEADLAMP (OUTER SIDE), FOR LOW BEAM.. 28 HEADLAMP (INNER SIDE), FOR HIGH BEAM.. 28 FRONT TURN SIGNAL/PARKING LAMP 28 Removal and Installation 29 Disassembly and Assembly 29 |
| Component Parts and Harness Connector Location... 6 | |
| System Description 6 | |
| OUTLINE 6 | |
| BATTERY SAVER CONTROL 7 | |
| AUTO LIGHT OPERATION 8 | |
| VEHICLE SECURITY SYSTEM (PANIC ALARM)... 8 | |
| CAN Communication System Description 8 | |
| Wiring Diagram — H/LAMP — 9 | |
| Terminals and Reference Values for BCM 11 | |
| Terminals and Reference Values for IPDM E/R 12 | |
| How to Proceed With Trouble Diagnosis 12 | |
| Preliminary Check 13 | |
| CHECK POWER SUPPLY AND GROUND CIRCUIT 13 | |
| CONSULT-II Function (BCM) 15 | |
| CONSULT-II OPERATION 15 | |
| WORK SUPPORT 16 | |
| DATA MONITOR 16 | |
| ACTIVE TEST 17 | |
| SELF-DIAGNOSTIC RESULTS 17 | |
| CONSULT-II Function (IPDM E/R) 18 | |
| CONSULT-II OPERATION 18 | |
| DATA MONITOR 19 | |
| ACTIVE TEST 19 | |
| Headlamp HI Does Not Illuminate (Both Sides) 20 | |
| Headlamp HI Does Not Illuminate (One Side) 22 | |
| High-Beam Indicator Lamp Does Not Illuminate ... 23 | |
| Headlamp LO Does Not Illuminate (Both Sides) ... 23 | |
| Headlamp LO Does Not Illuminate (One Side) 25 | |
| Headlamps Do Not Turn OFF 26 | |
| Aiming Adjustment 27 | |
| LOW BEAM AND HIGH BEAM 27 | |
| Bulb Replacement 28 | |
| | HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM - 30 Component Parts and Harness Connector Location.. 30 System Description 30 HEADLAMP OPERATION 31 BATTERY SAVER CONTROL 32 AUTO LIGHT OPERATION 32 DAYTIME LIGHT OPERATION 32 OPERATION 33 CAN Communication System Description 33 Schematic 34 Wiring Diagram — DTRL — 35 Trouble Diagnoses 38 DAYTIME LIGHT CONTROL UNIT INSPECTION TABLE 38 Aiming Adjustment 39 Bulb Replacement 39 Removal and Installation of Headlamp 39 Disassembly and Assembly of Headlamp 39 Removal and Installation of Daytime Light Control Unit 39 Removal and Installation of Daytime Light Relay ... 39 AUTO LIGHT SYSTEM 40 Component Parts and Harness Connector Location.. 40 System Description 40 OUTLINE 41 COMBINATION SWITCH READING FUNCTION.. 41 EXTERIOR LAMP BATTERY SAVER CONTROL.. 41 DELAY TIMER FUNCTION 41 CAN Communication System Description 41 Major Components and Functions 41 Schematic 42 Wiring Diagram — AUTO/L — 43 Terminals and Reference Values for BCM 46 Terminals and Reference Values for IPDM E/R 47 |

| | | | |
|--|-----------|---|------------|
| How to Proceed With Trouble Diagnosis | 48 | DATA MONITOR | 80 |
| Preliminary Check | 48 | ACTIVE TEST | 80 |
| SETTING CHANGE FUNCTIONS | 48 | Turn Signal Lamp Does Not Operate | 81 |
| CHECK BCM CONFIGURATION | 48 | Rear Turn Signal Lamp Does Not Operate | 82 |
| CHECK POWER SUPPLY AND GROUND CIR- CUIT | 48 | Hazard Warning Lamp Does Not Operate But Turn Signal Lamps Operate | 83 |
| CONSULT-II Function (BCM) | 50 | Turn Signal Indicator Lamp Does Not Operate | 84 |
| CONSULT-II OPERATION | 50 | Bulb Replacement (Front Turn Signal Lamp) | 85 |
| WORK SUPPORT | 51 | Bulb Replacement (Rear Turn Signal Lamp) | 85 |
| DATA MONITOR | 51 | Removal and Installation of Front Turn Signal Lamp.. | 85 |
| ACTIVE TEST | 52 | Removal and Installation of Rear Turn Signal Lamp.. | 85 |
| CONSULT-II Function (IPDM E/R) | 52 | CORNERING LAMP | 86 |
| CONSULT-II OPERATION | 53 | Component Parts and Harness Connector Location.. | 86 |
| DATA MONITOR | 53 | System Description | 86 |
| ACTIVE TEST | 54 | OUTLINE | 86 |
| Trouble Diagnosis Chart by Symptom | 55 | CORNERING LAMP OPERATION | 86 |
| Lighting Switch Inspection | 55 | COMBINATION SWITCH READING FUNCTION.. | 87 |
| Optical Sensor System Inspection | 56 | CAN Communication System Description | 87 |
| Removal and Installation of Optical Sensor | 57 | Schematic | 88 |
| FRONT FOG LAMP | 58 | Wiring Diagram — CORNER — | 89 |
| Component Parts and Harness Connector Location.. | 58 | Terminals and Reference Values for BCM | 92 |
| System Description | 58 | Terminals and Reference Values for IPDM E/R | 93 |
| OUTLINE | 58 | How to Proceed With Trouble Diagnosis | 93 |
| COMBINATION SWITCH READING FUNCTION.. | 59 | Preliminary Check | 93 |
| EXTERIOR LAMP BATTERY SAVER CONTROL.. | 59 | CHECK POWER SUPPLY AND GROUND CIR- CUIT | 93 |
| CAN Communication System Description | 59 | CONSULT-II Function (IPDM E/R) | 95 |
| Wiring Diagram — F/FOG — | 60 | CONSULT-II OPERATION | 95 |
| Terminals and Reference Values for BCM | 62 | DATA MONITOR | 95 |
| Terminals and Reference Values for IPDM E/R | 63 | ACTIVE TEST | 96 |
| How to Proceed With Trouble Diagnosis | 63 | Cornering Lamp Does Not Operate | 96 |
| Preliminary Check | 64 | Bulb Replacement | 98 |
| CHECK BCM CONFIGURATION | 64 | LIGHTING AND TURN SIGNAL SWITCH | 99 |
| CHECK POWER SUPPLY AND GROUND CIR- CUIT | 64 | Removal and Installation | 99 |
| CONSULT-II Functions | 65 | HAZARD SWITCH | 100 |
| Front Fog Lamps Do Not Illuminate (Both Sides) ... | 65 | Removal and Installation | 100 |
| Front Fog Lamp Does Not Illuminate (One Side) ... | 66 | COMBINATION SWITCH | 101 |
| Aiming Adjustment | 67 | Wiring Diagram — COMBSW — | 101 |
| Bulb Replacement | 68 | Combination Switch Reading Function | 102 |
| Removal and Installation | 68 | CONSULT-II Function (BCM) | 102 |
| TURN SIGNAL AND HAZARD WARNING LAMPS.. | 69 | CONSULT-II OPERATION | 102 |
| Component Parts and Harness Connector Location.. | 69 | DATA MONITOR | 103 |
| System Description | 69 | Combination Switch Inspection | 104 |
| OUTLINE | 69 | Removal and Installation | 106 |
| TURN SIGNAL OPERATION | 69 | Switch Circuit Inspection | 106 |
| HAZARD LAMP OPERATION | 70 | STOP LAMP | 107 |
| REMOTE KEYLESS ENTRY SYSTEM OPERA- TION | 71 | System Description | 107 |
| COMBINATION SWITCH READING FUNCTION.. | 71 | Wiring Diagram — STOP/L — | 108 |
| CAN Communication System Description | 71 | High-Mounted Stop Lamp | 109 |
| Schematic | 72 | BULB REPLACEMENT, REMOVAL AND INSTALLATION | 109 |
| Wiring Diagram — TURN — | 73 | Stop Lamp | 109 |
| Terminals and Reference Values for BCM | 76 | BULB REPLACEMENT | 109 |
| How to Proceed With Trouble Diagnosis | 77 | REMOVAL AND INSTALLATION | 109 |
| Preliminary Check | 78 | BACK-UP LAMP | 110 |
| CHECK POWER SUPPLY AND GROUND CIR- CUIT | 78 | Wiring Diagram — BACK/L — | 110 |
| CONSULT-II Function (BCM) | 79 | Bulb Replacement | 111 |
| CONSULT-II OPERATION | 79 | Removal and Installation | 111 |
| | | PARKING, LICENSE PLATE AND TAIL LAMPS ... | 112 |

| | | | | |
|---|------------|--|------------|----|
| Component Parts and Harness Connector Location | 112 | POWER SUPPLY AND GROUND | 131 | |
| System Description | 112 | SWITCH OPERATION | 132 | A |
| OPERATION BY LIGHTING SWITCH | 113 | ROOM LAMP TIMER OPERATION | 133 | |
| COMBINATION SWITCH READING FUNCTION | 113 | INTERIOR LAMP BATTERY SAVER CONTROL | 133 | |
| EXTERIOR LAMP BATTERY SAVER CONTROL | 113 | Schematic | 135 | B |
| CAN Communication System Description | 113 | Wiring Diagram — INT/L — | 137 | |
| Schematic | 114 | Terminals and Reference Values for BCM | 144 | |
| Wiring Diagram — TAIL/L — | 115 | How to Proceed With Trouble Diagnosis | 145 | C |
| Terminals and Reference Values for BCM | 118 | Preliminary Check | 145 | |
| Terminals and Reference Values for IPDM E/R | 119 | SWITCH INSPECTION | 145 | |
| How to Proceed With Trouble Diagnosis | 119 | INSPECTION FOR POWER SUPPLY AND | | |
| Preliminary Check | 119 | GROUND CIRCUIT | 145 | D |
| CHECK POWER SUPPLY AND GROUND CIR- | | CONSULT-II Function (BCM) | 146 | |
| CUIT | 119 | CONSULT-II OPERATION | 146 | |
| CONSULT-II Functions | 120 | WORK SUPPORT | 147 | E |
| Parking, License Plate and/or Tail Lamps Do Not | | DATA MONITOR | 147 | |
| Illuminate | 121 | ACTIVE TEST | 148 | |
| Parking, License Plate and Tail Lamps Do Not Turn | | Room/Map Lamp Control Does Not Operate | 149 | F |
| OFF (After Approx. 10 Minutes) | 124 | Personal Lamp Control Does Not Operate (Room/ | | |
| Front Parking Lamp | 125 | Map Lamps Operate) | 151 | |
| BULB REPLACEMENT | 125 | Ignition Keyhole Illumination Control Does Not | | |
| Tail Lamp | 125 | Operate | 152 | G |
| BULB REPLACEMENT | 125 | All Step/Foot/Puddle Lamps Do Not Operate | 153 | |
| REAR COMBINATION LAMP | 126 | All Interior Room Lamps Do Not Operate | 154 | |
| Bulb Replacement | 126 | ILLUMINATION | 155 | H |
| Removal and Installation | 126 | Component Parts and Harness Connector Location | 155 | |
| | 126 | System Description | 155 | |
| TRAILER TOW | 127 | ILLUMINATION OPERATION BY LIGHTING | | |
| Component Parts and Harness Connector Location | 127 | SWITCH | 156 | I |
| System Description | 127 | EXTERIOR LAMP BATTERY SAVER CONTROL | 157 | |
| TRAILER TAIL LAMP OPERATION | 127 | CAN Communication System Description | 157 | J |
| TRAILER STOP, TURN SIGNAL AND HAZARD | | Schematic | 158 | |
| LAMP OPERATION | 127 | Wiring Diagram — ILL — | 160 | |
| Wiring Diagram — T/TOW — | 128 | Removal and Installation | 169 | |
| Trouble Diagnoses | 129 | ILLUMINATION CONTROL SWITCH | 169 | LT |
| TRAILER TOW CONTROL UNIT INSPECTION | | BULB SPECIFICATIONS | 170 | |
| TABLE | 129 | Headlamp | 170 | |
| INTERIOR ROOM LAMP | 130 | Exterior Lamp | 170 | L |
| Component Parts and Harness Connector Location | 130 | Interior Lamp/Illumination | 170 | |
| System Description | 131 | | | M |

PRECAUTIONS

PRECAUTIONS

PF0:00011

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

EKS005KV

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS

General precautions for service operations

EKS005KW

- Never work with wet hands.
- Turn the lighting switch OFF before disconnecting and connecting the connector.
- When checking the headlamp on/off operation, check it on vehicle and with the power connected to the vehicle-side connector.
- Do not touch the headlamp bulb glass surface with bare hands or allow oil or grease to get on it. Do not touch the headlamp bulb just after the headlamp is turned off, because it is very hot.
- When the bulb has burned out, wrap it in a thick vinyl bag and discard. Do not break the bulb.
- Leaving the bulb removed from the headlamp housing for a long period of time can deteriorate the performance of the lens and reflector (dirt, clouding). Always prepare a new bulb and have it on hand when replacing the bulb.
- Do not use organic solvent (paint thinner or gasoline) to clean lamps and to remove old sealant.

Wiring Diagrams and Trouble Diagnosis

EKS005KX

When you read wiring diagrams, refer to the following:

- Refer to [GI-13, "How to Read Wiring Diagrams"](#) in GI section.
- Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) for power distribution in PG section.

When you perform trouble diagnosis, refer to the following:

- Refer to [GI-10, "HOW TO FOLLOW TEST GROUPS IN TROUBLE DIAGNOSES"](#) in GI section.
- Refer to [GI-25, "How to Perform Efficient Diagnosis for an Electrical Incident"](#) in GI section.

A

B

C

D

E

F

G

H

I

J

LT

L

M


HEADLAMP (FOR USA)

PF2:26010

HEADLAMP (FOR USA)

Component Parts and Harness Connector Location

EKS0065X

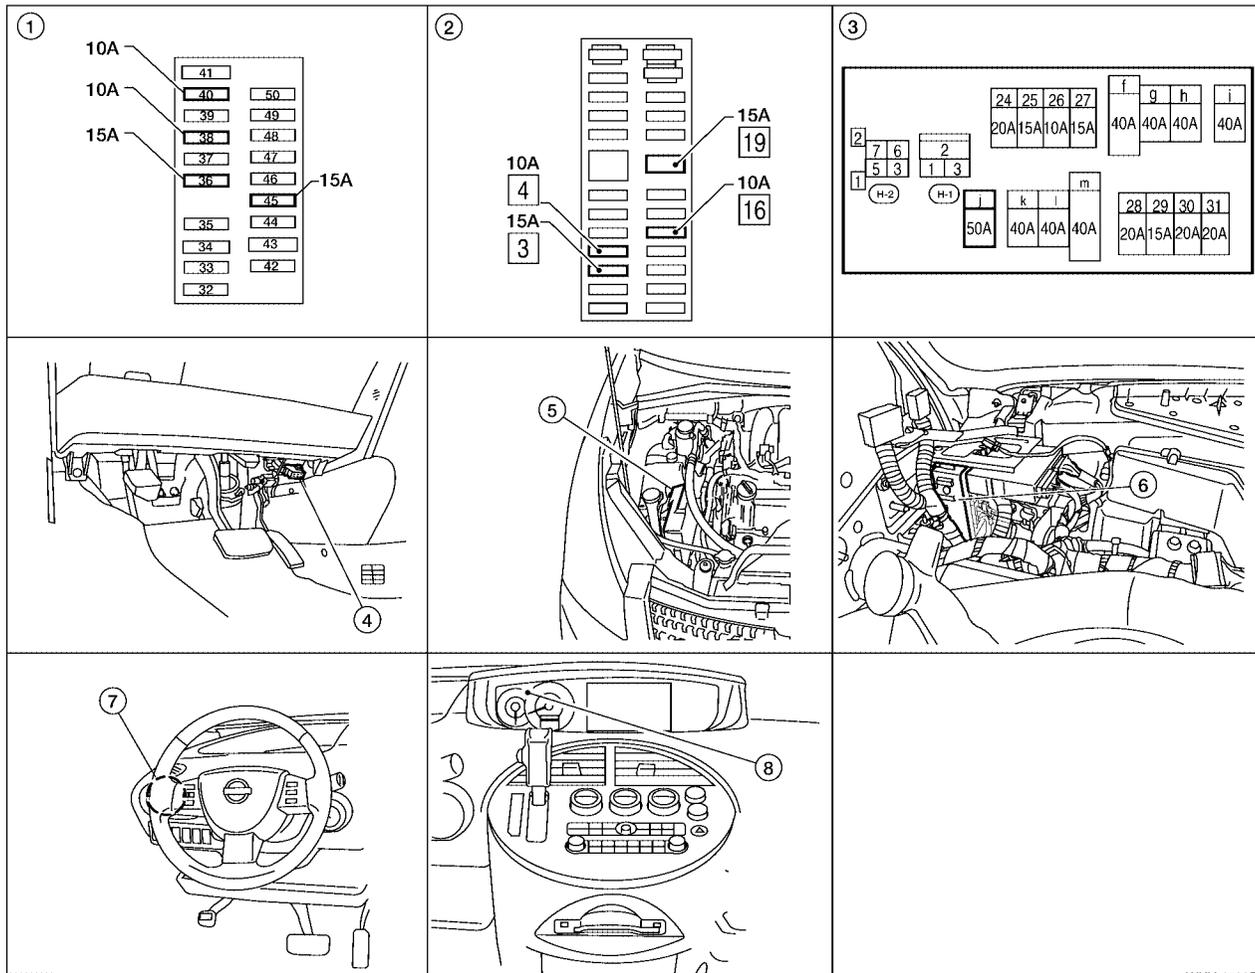

WKIA4798E

- | | | |
|--|----------------------------------|--|
| 1. IPDM E/R fuse layout | 2. Fuse block (J/B) | 3. Fuse and fusible link box |
| 4. Data link connector | 5. IPDM E/R | 6. BCM M18, M19 View with instrument panel removed |
| 7. Combination switch (lighting switch) M28 | 8. Combination meter M23, M24 | |

System Description

EKS0065Y

Control of the headlamp system operation is dependent upon the position of the combination switch (lighting switch). When the lighting switch is placed in the 2ND position, the BCM (body control module) receives input requesting the headlamps (and tail lamps) illuminate. This input is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the headlamp high and headlamp low relay coils. When energized, these relays direct power to the respective headlamps, which then illuminate.

OUTLINE

Power is supplied at all times

- to headlamp high relay, located in the IPDM E/R, and
- to headlamp low relay, located in the IPDM E/R, and
- through 50A fusible link (letter j , located in the fuse and fusible link box)
- to BCM terminal 55, and
- through 15A fuse [No. 3, located in the fuse block (J/B)]
- to BCM terminal 42.

HEADLAMP (FOR USA)

- through 15A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 31.

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [No. 16, located in the fuse block (J/B)]
- to BCM terminal 38.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 52, and
- to combination meter terminal 32
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 60
- through grounds E9, E15 and E24.

Low Beam Operation

With the lighting switch in 2ND position, the BCM receives input requesting the headlamps to illuminate. This input is communicated to the IPDM E/R across the CAN communication lines. The CPU of the IPDM E/R controls the headlamp low relay coil. When energized, this relay directs power

- through 15A fuse (No. 36, located in the IPDM E/R)
- through IPDM E/R terminal 20
- to headlamp RH terminal 1, and
- through 15A fuse (No. 45, located in the IPDM E/R)
- through IPDM E/R terminal 30
- to headlamp LH terminal 1.

Ground is supplied

- to headlamp LH and RH terminal 2
- through grounds E9, E15 and E24.

With power and ground supplied, low beam headlamps illuminate.

High Beam Operation/Flash-to-Pass Operation

With the lighting switch in 2ND position and placed in HIGH or PASS position, the BCM receives input requesting the headlamp high beams to illuminate. This input is communicated to the IPDM E/R and combination meter across the CAN communication lines. The CPU of the combination meter controls the ON/OFF status of the HIGH BEAM indicator. The CPU of the IPDM E/R controls the headlamp high relay coil. When energized, this relay directs power

- through 10A fuse (No. 40, located in the IPDM E/R)
- through IPDM E/R terminal 27
- to headlamp RH terminal 1, and
- through 10A fuse (No. 38, located in the IPDM E/R)
- through IPDM E/R terminal 28
- to headlamp LH terminal 1.

Ground is supplied

- to headlamp LH and RH terminal 2
- through grounds E9, E15 and E24.

With power and ground supplied, the high beam headlamps illuminate.

BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON) and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the headlamps remain illuminated for 5 minutes, unless the combination switch (lighting switch) position is changed. If the combination switch (lighting switch) position is changed, then the headlamps are turned off.

A

B

C

D

E

F

G

H

I

J

LT

L

M

HEADLAMP (FOR USA)

AUTO LIGHT OPERATION

Refer to [LT-40, "System Description"](#) for auto light operation.

VEHICLE SECURITY SYSTEM (PANIC ALARM)

The vehicle security system (panic alarm) will flash the high beams if the system is triggered. Refer to [BL-59, "Panic Alarm Operation"](#) .

CAN Communication System Description

EKS0065Z





Refer to [LAN-5, "CAN COMMUNICATION"](#) .

HEADLAMP (FOR USA)

EKS00660

Wiring Diagram — H/LAMP —



LT-H/LAMP-01

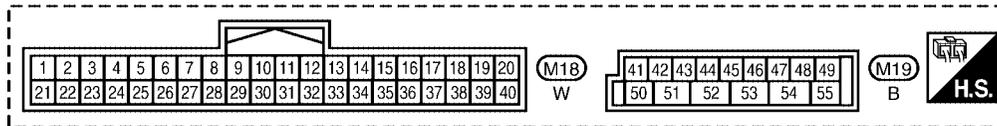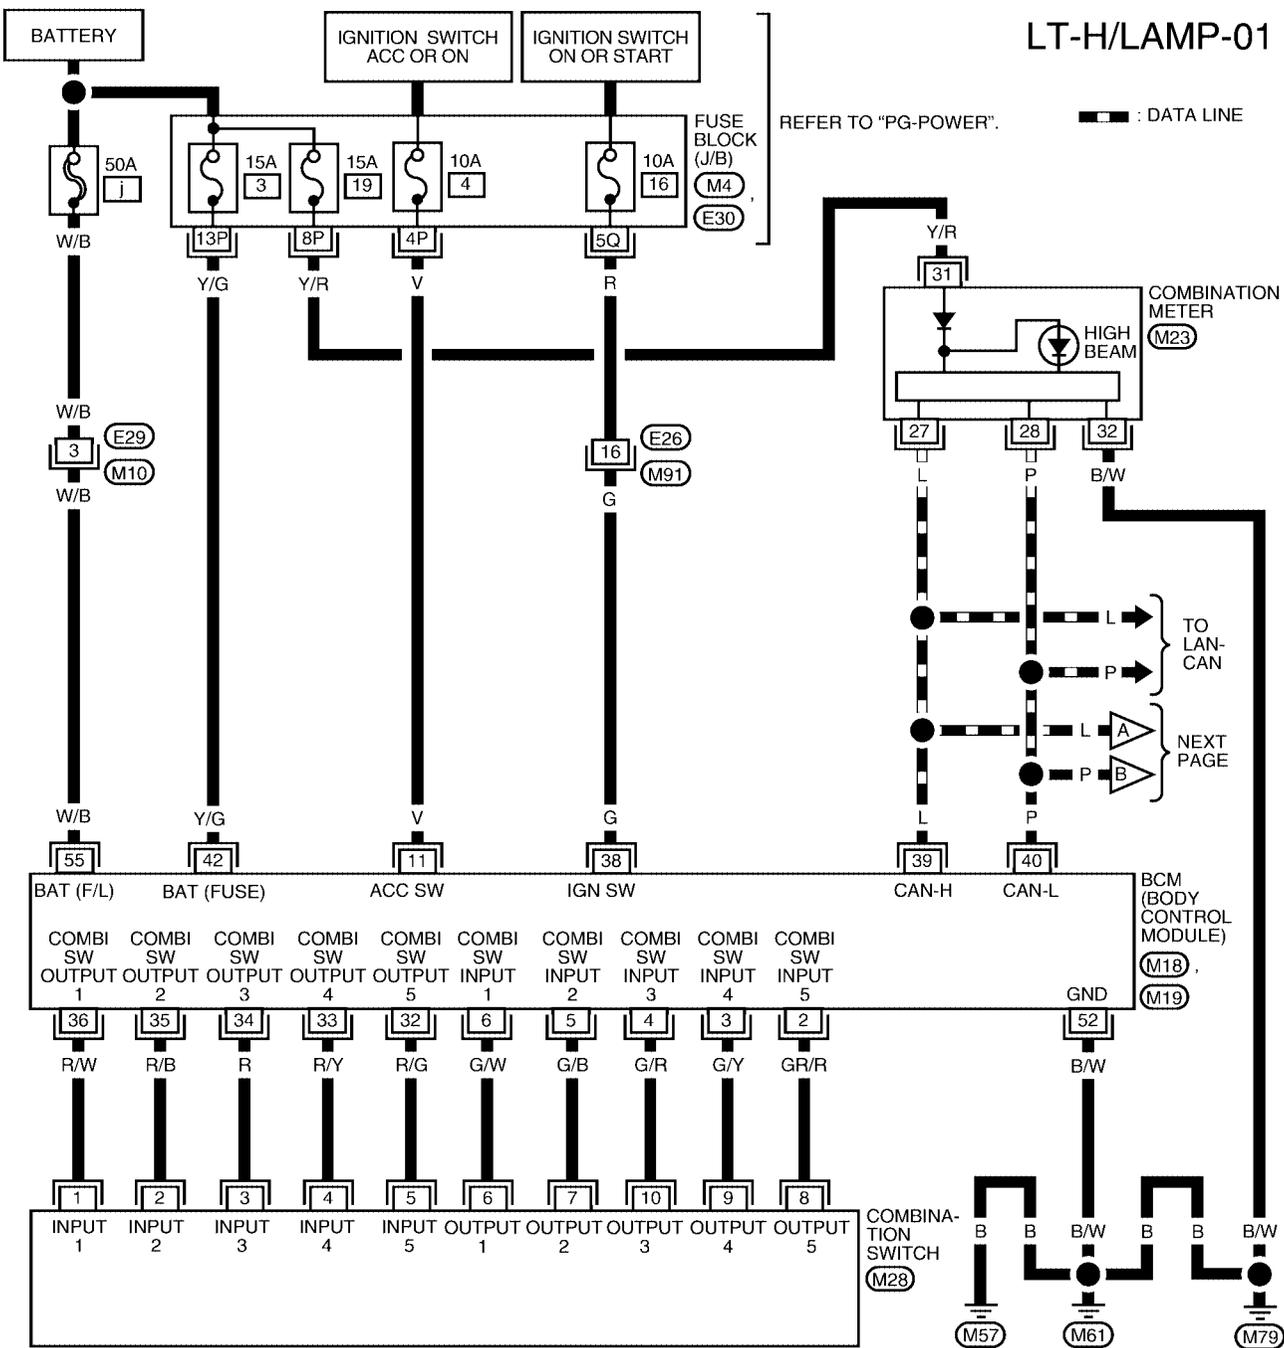

WKWA3928E

HEADLAMP (FOR USA)

LT-H/LAMP-02

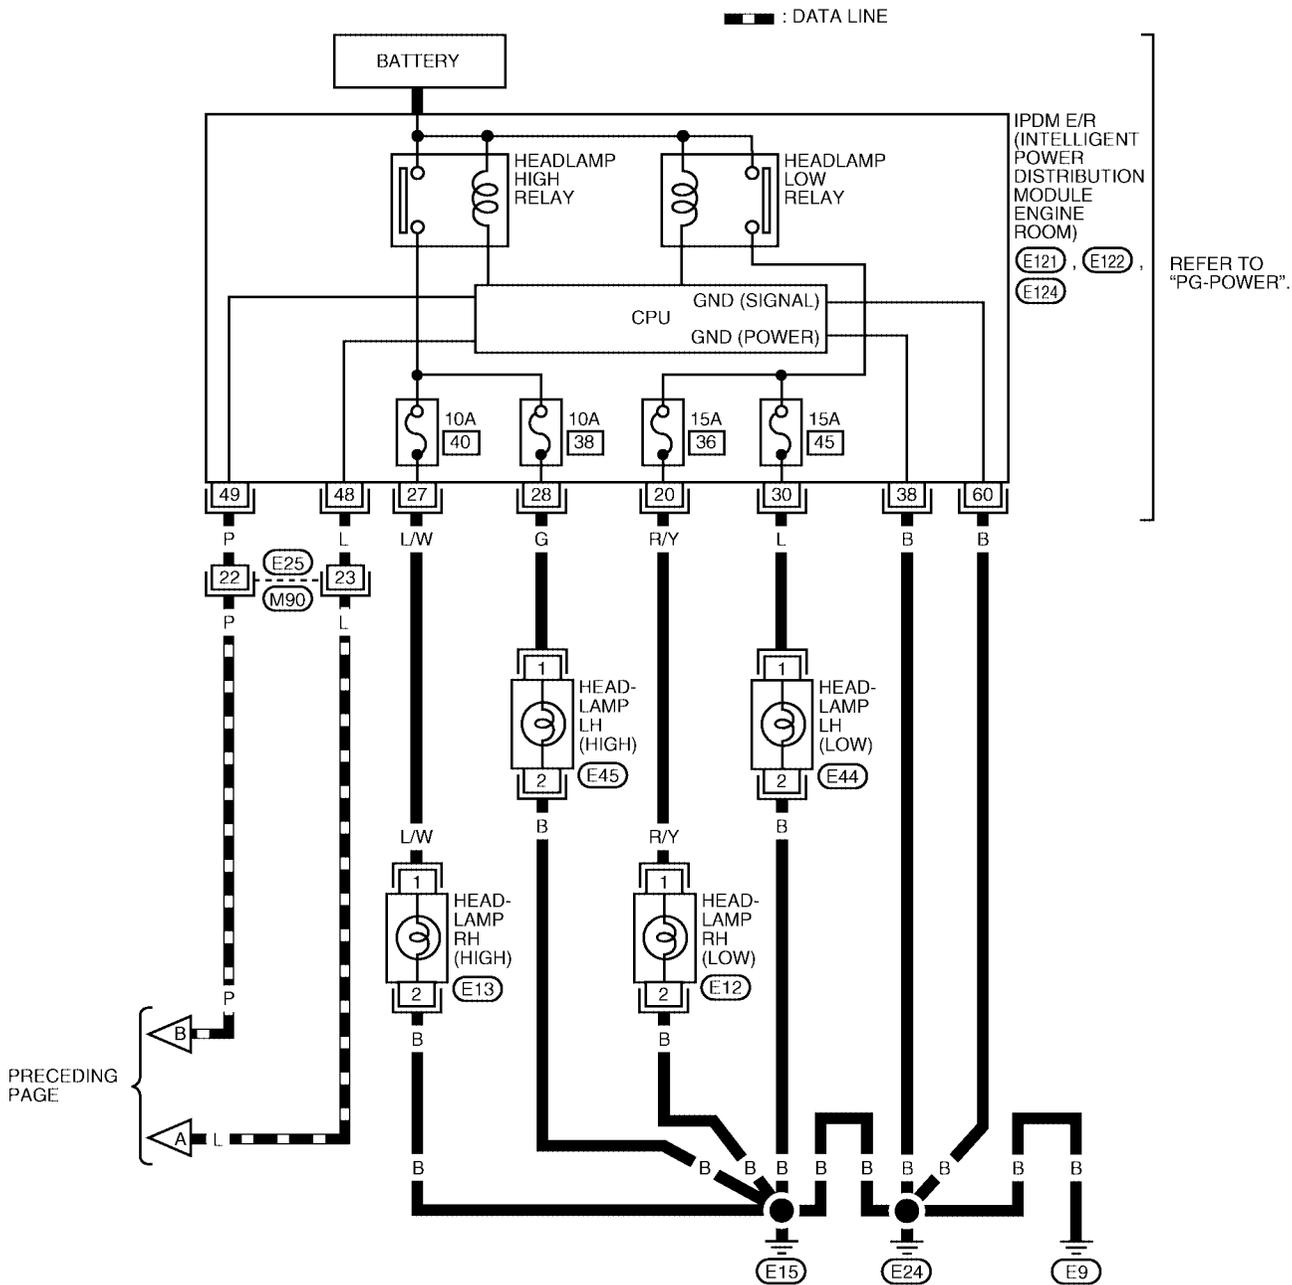

WKWA1914E

HEADLAMP (FOR USA)


Terminals and Reference Values for BCM

EKS00661

| Terminal No. | Wire color | Signal name | Measuring condition | | Reference value (Approx.) |
|--------------|------------|-----------------------------|---------------------|--|---|
| | | | Ignition switch | Operation or condition | |
| 2 | GR/R | Combination switch input 5 | ON | Lighting, turn, wiper OFF Wiper dial position 4 | <p style="text-align: right;">SKIA5291E</p> |
| 3 | G/Y | Combination switch input 4 | ON | Lighting, turn, wiper OFF Wiper dial position 4 | <p style="text-align: right;">SKIA5292E</p> |
| 4 | G/R | Combination switch input 3 | ON | Lighting, turn, wiper OFF Wiper dial position 4 | <p style="text-align: right;">SKIA5291E</p> |
| 5 | G/B | Combination switch input 2 | ON | Lighting, turn, wiper OFF Wiper dial position 4 | <p style="text-align: right;">SKIA5292E</p> |
| 6 | G/W | Combination switch input 1 | | | |
| 11 | V | Ignition switch (ACC) | ACC | — | Battery voltage |
| 32 | R/G | Combination switch output 5 | ON | Lighting, turn, wiper OFF Wiper dial position 4 | <p style="text-align: right;">SKIA5291E</p> |
| 33 | R/Y | Combination switch output 4 | ON | Lighting, turn, wiper OFF Wiper dial position 4 | <p style="text-align: right;">SKIA5292E</p> |
| 34 | R | Combination switch output 3 | ON | Lighting, turn, wiper OFF Wiper dial position 4 | <p style="text-align: right;">SKIA5291E</p> |

A
B
C
D
E
F
G
H
I
J
LT
L
M

HEADLAMP (FOR USA)
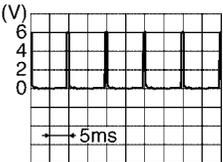
| Terminal No. | Wire color | Signal name | Measuring condition | | Reference value (Approx.) |
|--------------|------------|-------------------------------------|---------------------|--|--|
| | | | Ignition switch | Operation or condition | |
| 35 | R/B | Combination switch output 2 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  SKIA5292E |
| 36 | R/W | Combination switch output 1 | | | |
| 38 | G | Ignition switch (ON) | ON | — | Battery voltage |
| 39 | L | CAN-H | — | — | — |
| 40 | P | CAN-L | — | — | — |
| 42 | Y/G | Battery power supply | OFF | — | Battery voltage |
| 52 | B/W | Ground | ON | — | 0V |
| 55 | W/B | Battery power supply (fusible link) | OFF | — | Battery voltage |

Terminals and Reference Values for IPDM E/R

EKS00662

| Terminal No. | Wire color | Signal name | Measuring condition | | Reference value (Approx.) | |
|--------------|------------|--------------------|---------------------|---------------------------------------|---------------------------|-----------------|
| | | | Ignition switch | Operation or condition | | |
| 20 | R/Y | Headlamp low (RH) | ON | Lighting switch 2ND position | OFF | 0V |
| | | | | | ON | Battery voltage |
| 27 | L/W | Headlamp high (RH) | ON | Lighting switch HIGH or PASS position | OFF | 0V |
| | | | | | ON | Battery voltage |
| 28 | G | Headlamp high (LH) | ON | Lighting switch HIGH or PASS position | OFF | 0V |
| | | | | | ON | Battery voltage |
| 30 | L | Headlamp low (LH) | ON | Lighting switch 2ND position | OFF | 0V |
| | | | | | ON | Battery voltage |
| 38 | B | Ground | ON | — | 0V | |
| 48 | L | CAN-H | — | — | — | |
| 49 | P | CAN-L | — | — | — | |
| 60 | B | Ground | ON | — | 0V | |

How to Proceed With Trouble Diagnosis

EKS00663

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-6, "System Description"](#) .
3. Perform the Preliminary Check. Refer to [LT-13, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the headlamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

HEADLAMP (FOR USA)

EKS00664

Preliminary Check CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES OR FUSIBLE LINK

Check for blown fuses or fusible link.

| Unit | Power source | Fuse No. |
|-------------------|--------------------------------------|----------|
| BCM | Battery | j |
| | | 3 |
| | Ignition switch ON or START position | 16 |
| IPDM E/R | Battery | 4 |
| | | 36 |
| | | 38 |
| | | 40 |
| | | 45 |
| Combination Meter | | 19 |

Refer to [LT-9, "Wiring Diagram — H/LAMP —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

| Terminals | | (-) | Ignition switch position | | |
|-----------|-----------------------|--------|--------------------------|-----------------|-----------------|
| (+) | | | OFF | ACC | ON |
| Connector | Terminal (Wire color) | Ground | 0V | Battery voltage | Battery voltage |
| | M18 | | 11 (V) | 0V | 0V |
| | 38 (G) | | Battery voltage | Battery voltage | Battery voltage |
| M19 | 42 (Y/G) | | Battery voltage | Battery voltage | Battery voltage |
| | 55 (W/B) | | Battery voltage | Battery voltage | Battery voltage |

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse.

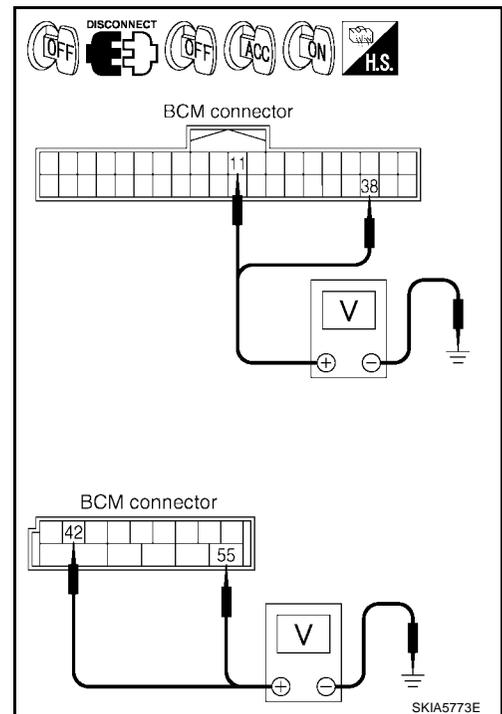

HEADLAMP (FOR USA)


3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

| Terminals | | | Continuity |
|-----------|--------------------------|--------|------------|
| Connector | Terminal (Wire color) | | |
| M19 | 52 (B/W) | Ground | Yes |

OK or NG

- OK >> Inspection End.
- NG >> Check ground circuit harness.

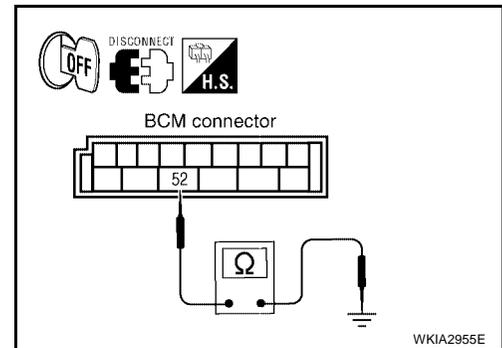

HEADLAMP (FOR USA)

EKS00665

CONSULT-II Function (BCM)

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


| BCM diagnostic test item | Diagnostic mode | Description |
|--------------------------|-----------------------|--|
| Inspection by part | WORK SUPPORT | Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed. |
| | DATA MONITOR | Displays BCM input/output data in real time. |
| | ACTIVE TEST | Operation of electrical loads can be checked by sending drive signal to them. |
| | SELF-DIAG RESULTS | Displays BCM self-diagnosis results. |
| | CAN DIAG SUPPORT MNTR | The result of transmit/receive diagnosis of CAN communication can be read. |
| | ECU PART NUMBER | BCM part number can be read. |
| | CONFIGURATION | Performs BCM configuration read/write functions. |

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

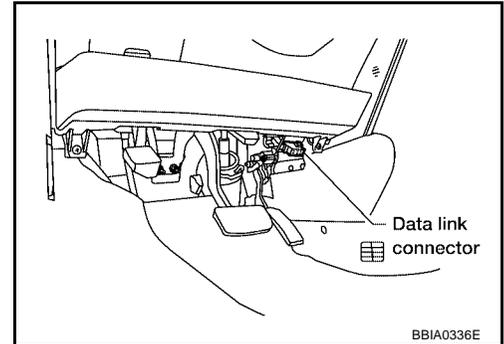

2. Touch "START (NISSAN BASED VHCL)".

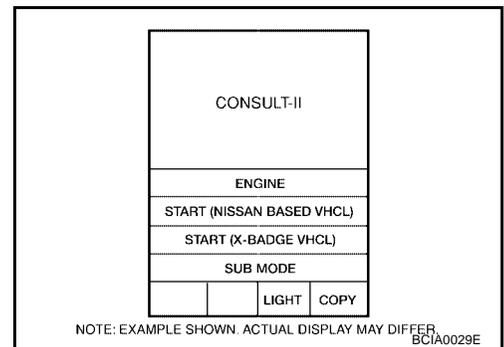


3. Touch "BCM" on "SELECT SYSTEM" screen. If "BCM" is not indicated, go to [GI-37, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

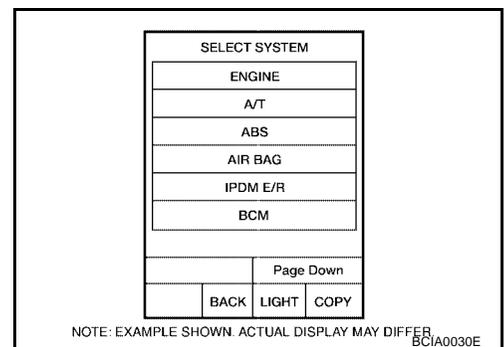

HEADLAMP (FOR USA)

4. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.

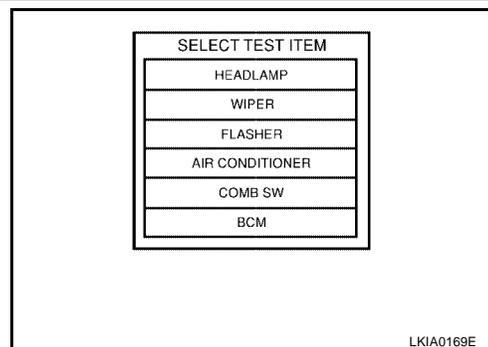

WORK SUPPORT

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch item on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "CHANGE SETT".
6. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
7. Touch "END".

Display Item List

| Item | Description | CONSULT-II | Factory setting |
|-------------------|--|------------|-----------------|
| BATTERY SAVER SET | Exterior lamp battery saver control mode can be changed in this mode. Selects exterior lamp battery saver control mode between ON/OFF. | ON | × |
| | | OFF | — |

DATA MONITOR

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

| | |
|---------------------|---|
| All signals | Monitors all the signals. |
| Selection from menu | Selects and monitors individual signal. |

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch individual items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

| Monitor item | Contents |
|-------------------------|--|
| IGN ON SW "ON/OFF" | Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal. |
| ACC ON SW "ON/OFF" | Displays "ACC (ON)/OFF, Ignition OFF (OFF)" status judged from ignition switch signal. |
| HI BEAM SW "ON/OFF" | Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal. |
| HEAD LAMP SW 1 "ON/OFF" | Displays status (headlamp switch 1: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal. |
| HEAD LAMP SW 2 "ON/OFF" | Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal. |

HEADLAMP (FOR USA)

| Monitor item | Contents |
|-------------------------|---|
| LIGHT SW 1ST "ON/OFF" | Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal. |
| AUTO LIGHT SW "ON/OFF" | Displays status of the lighting switch as judged from the lighting switch signal. (AUTO position: ON/Other than AUTO position: OFF) |
| PASSING SW "ON/OFF" | Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal. |
| FR FOG SW "ON/OFF" | Displays status (front fog lamp switch: ON/Others: OFF) of front fog lamp switch judged from lighting switch signal. |
| DOOR SW-DR "ON/OFF" | Displays status of the driver door as judged from the driver door switch signal. (Door is open: ON/Door is closed: OFF) |
| DOOR SW-AS "ON/OFF" | Displays status of the passenger door as judged from the passenger door switch signal. (Door is open: ON/Door is closed: OFF) |
| DOOR SW-RR "ON/OFF" | Displays status of the rear door as judged from the rear door switch (RH) signal. (Door is open: ON/Door is closed: OFF) |
| DOOR SW-RL "ON/OFF" | Displays status of the rear door as judged from the rear door switch (LH) signal. (Door is open: ON/Door is closed: OFF) |
| BACK DOOR SW "ON/OFF" | Displays status of the back door as judged from the back door switch signal. (Door is open: ON/Door is closed: OFF) |
| TURN SIGNAL R "ON/OFF" | Displays status (Turn right: ON/Others: OFF) as judged from lighting switch signal. |
| TURN SIGNAL L "ON/OFF" | Displays status (Turn left: ON/Others: OFF) as judged from lighting switch signal. |
| CARGO LAMP SW "ON/OFF" | Displays status of cargo lamp switch. |
| OPTICAL SENSOR [0 - 5V] | Displays "ambient light (close to 5V when dark/close to 0V when light)" judged from optical sensor signal. |

ACTIVE TEST

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested, and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

Display Item List

| Test item | Description |
|----------------|--|
| TAIL LAMP | Allows tail lamp relay to operate by switching ON-OFF. |
| HEAD LAMP | Allows headlamp relay (HI, LO) to operate by switching ON-OFF. |
| FR FOG LAMP | Allows fog lamp relay to operate by switching ON-OFF. |
| CARGO LAMP | Allows cargo lamp to operate by switching ON-OFF. |
| CORNERING LAMP | Allows cornering lamp relay (RH, LH) to operate by switching ON-OFF. |

SELF-DIAGNOSTIC RESULTS

Operation Procedure

1. Touch "BCM" on "SELECT TEST ITEM" screen.
2. Touch "SELF-DIAG RESULTS" on "SELECT DIAG MODE" screen.
3. Self-diagnostic results are displayed.

Display Item List

| Monitored item | CONSULT-II display | Description |
|--------------------------|---|---|
| CAN communication | CAN communication [U1000] | Malfunction is detected in CAN communication. |
| CAN communication system | CAN communication system 1 to 6 [U1000] | Malfunction is detected in CAN system. |

HEADLAMP (FOR USA)

CONSULT-II Function (IPDM E/R)

EKS00666

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


| IPDM E/R diagnostic Mode | Description |
|--------------------------|---|
| SELF-DIAG RESULTS | Displays IPDM E/R self-diagnosis results. |
| DATA MONITOR | Displays IPDM E/R input/output data in real time. |
| CAN DIAG SUPPORT MNTR | The result of transmit/receive diagnosis of CAN communication can be read. |
| ACTIVE TEST | Operation of electrical loads can be checked by sending drive signal to them. |

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn the ignition switch ON.

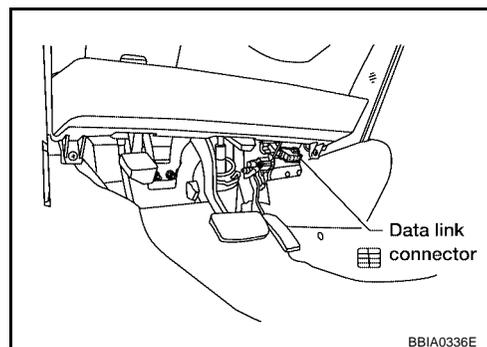

2. Touch "START (NISSAN BASED VHCL)".

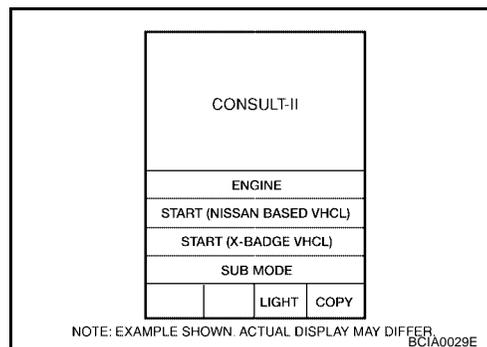


3. Touch "IPDM E/R" on "SELECT SYSTEM" screen. If "IPDM E/R" is not displayed, go to [GI-37, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

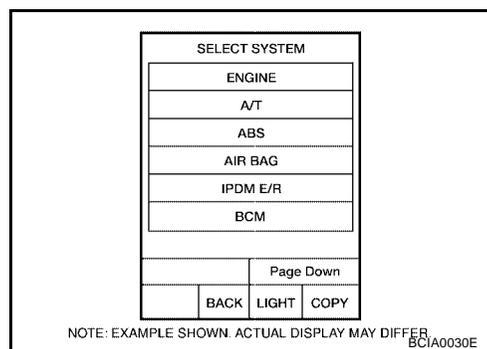

HEADLAMP (FOR USA)

- Select the desired part to be diagnosed on the "SELECT DIAG MODE" screen.

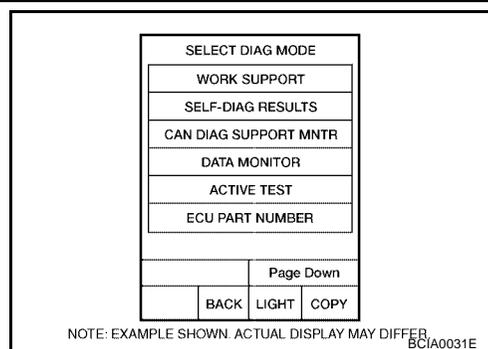

DATA MONITOR

Operation Procedure

- Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
- Touch "ALL SIGNALS", "MAIN SIGNALS" or "SELECT FROM MENU" on the "SELECT MONITOR ITEM" screen.

| | |
|------------------|---------------------------------|
| ALL SIGNALS | All items will be monitored. |
| MAIN SIGNALS | Monitor the predetermined item. |
| SELECT FROM MENU | Select any item for monitoring. |

- Touch "START".
- Touch the required monitoring item on "SELECT ITEM MENU". In "ALL SIGNALS", all items are monitored. In "MAIN SIGNALS", predetermined items are monitored.
- Touch "RECORD" while monitoring to record the status of the item being monitored. To stop recording, touch "STOP".

All Items, Main Items, Select Item Menu

| Item name | CONSULT-II screen display | Display or unit | Monitor item selection | | | Description |
|----------------------------|---------------------------|-----------------|------------------------|--------------|------------------|------------------------------|
| | | | ALL SIGNALS | MAIN SIGNALS | SELECT FROM MENU | |
| Position lights request | TAIL&CLR REQ | ON/OFF | × | × | × | Signal status input from BCM |
| Headlamp low beam request | HL LO REQ | ON/OFF | × | × | × | Signal status input from BCM |
| Headlamp high beam request | HL HI REQ | ON/OFF | × | × | × | Signal status input from BCM |
| Cornering lamp | CRNRNG LMP REQ | ON/OFF | × | – | × | Signal status input from BCM |
| Front fog lights request | FR FOG REQ | ON/OFF | × | × | × | Signal status input from BCM |

NOTE:

Perform monitoring of IPDM E/R data with the ignition switch ON. When the ignition switch is at ACC, the display may not be correct.

ACTIVE TEST


Operation Procedure

- Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
- Touch item to be tested and check operation.
- Touch "START".
- Touch "STOP" while testing to stop the operation.

HEADLAMP (FOR USA)

4. CHECK HEADLAMP INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect headlamp RH and LH connectors.
3. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
4. Select "LAMPS" on "SELECT TEST ITEM" screen.
5. Touch "HI" on "ACTIVE TEST" screen.
6. When headlamp high beam is operating, check voltage between headlamp RH and LH harness connectors and ground.

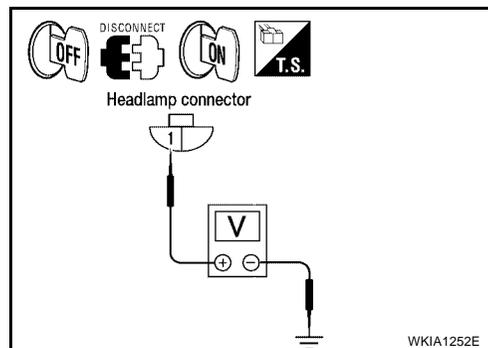

| Terminals | | | Voltage |
|-----------|-----------------------|---------|-----------------|
| (+) | | (-) | |
| Connector | Terminal (Wire color) | | |
| RH | E13 | 1 (L/W) | Ground |
| LH | E45 | 1 (G) | |
| | | | Battery voltage |

OK or NG

- OK >> GO TO 6.
 NG >> GO TO 5.


5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector E122 terminal 27 (L/W) and headlamp RH harness connector E13 terminal 1 (L/W).

27 (L/W) - 1 (L/W) : Continuity should exist.

4. Check continuity between IPDM E/R harness connector E122 terminal 28 (G) and headlamp LH harness connector E45 terminal 1 (G).

28 (G) - 1 (G) : Continuity should exist.

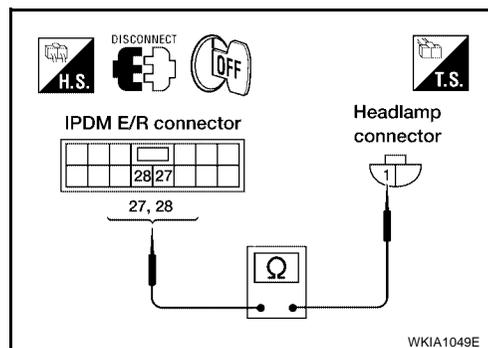

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#) .
 NG >> Repair harness or connector.

6. CHECK HEADLAMP GROUND

1. Check continuity between headlamp RH harness connector E13 terminal 2 (B) and ground.


2 (B) - Ground : Continuity should exist.

2. Check continuity between headlamp LH harness connector E45 terminal 2 (B) and ground.

2 (B) - Ground : Continuity should exist.

OK or NG

- OK >> Check headlamp connector for damage or poor connection. Repair as necessary.
 NG >> Repair harness or connector.

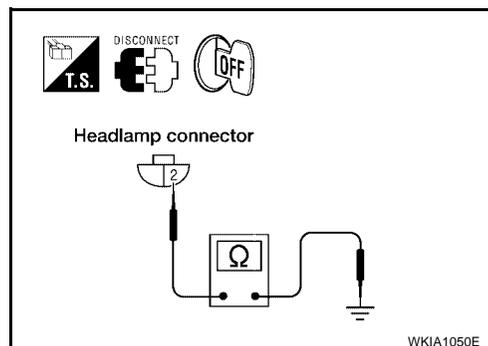

HEADLAMP (FOR USA)

EKS00677

Headlamp HI Does Not Illuminate (One Side)

1. BULB INSPECTION

Inspect inoperative headlamp bulb.

OK or NG

OK >> GO TO 2.

NG >> Replace headlamp bulb. Refer to [LT-28, "HEADLAMP \(INNER SIDE\), FOR HIGH BEAM"](#).

2. CHECK POWER TO HEADLAMP

1. Disconnect inoperative headlamp connector.
2. Turn the HI beam headlamps ON.
3. Check voltage between inoperative headlamp terminal and ground.

| Terminals | | | Voltage (Approx.) |
|-----------|-----------------------|---------|-------------------|
| (+) | | (-) | |
| Connector | Terminal (Wire color) | | |
| RH | E13 | 1 (L/W) | Ground |
| LH | E45 | 1 (G) | |
| | | | Battery voltage |

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

3. CHECK HEADLAMP GROUND


1. Turn the HI beam headlamps OFF.
2. Check continuity between inoperative headlamp connector and ground.

| Terminals | | | Continuity |
|-----------|-----------------------|-------|------------|
| Connector | Terminal (Wire color) | | |
| RH | E13 | 2 (B) | Ground |
| LH | E45 | 2 (B) | |
| | | | Yes |


OK or NG

OK >> Check headlamp connector for damage or poor connection. Repair as necessary.

NG >> Repair open circuit in harness between inoperative headlamp and ground.

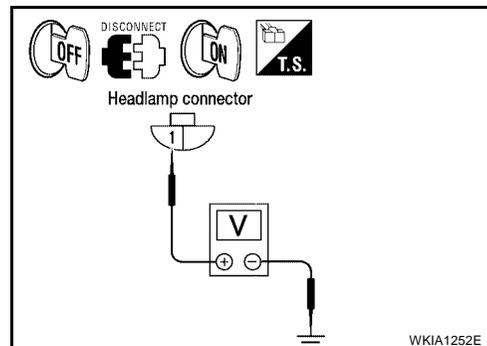

WKIA1252E

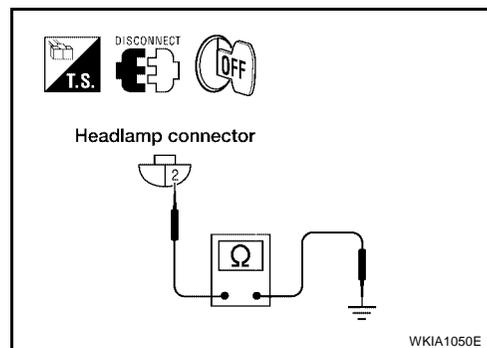

WKIA1050E

HEADLAMP (FOR USA)


3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "HL LO REQ" turns ON when lighting switch is in 2ND position.

When lighting switch is in 2ND position : HL LO REQ ON

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#) .
- NG >> Replace BCM. Refer to [BCS-19, "Removal and Installation of BCM"](#) .

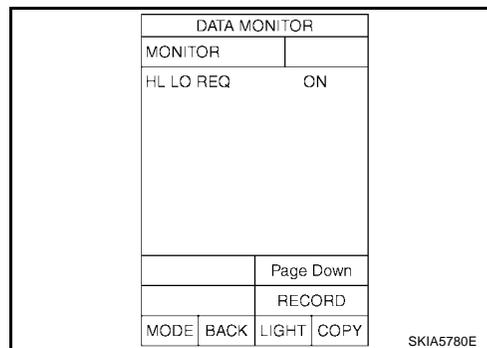


4. CHECK HEADLAMP INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect headlamp RH and LH connectors.
3. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
4. Select "LAMPS" on "SELECT TEST ITEM" screen.
5. Touch "LO" on "ACTIVE TEST" screen.
6. When headlamp low beam is operating, check voltage between headlamp RH and LH harness connectors and ground.

| Terminals | | | Voltage |
|-----------|-----------------------|---------|-----------------|
| (+) | | (-) | |
| Connector | Terminal (Wire color) | | |
| RH | E12 | 1 (R/Y) | Ground |
| LH | E44 | 1 (L) | |
| | | | Battery voltage |

OK or NG

- OK >> GO TO 6.
- NG >> GO TO 5.

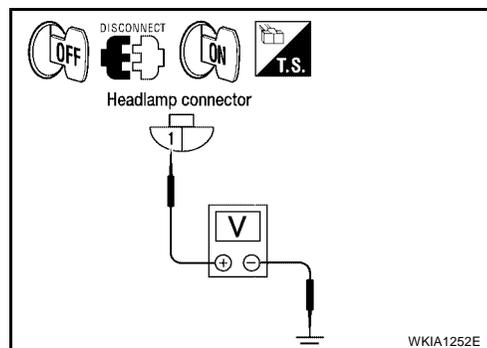

5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector E122 terminal 20 (R/Y) and headlamp RH harness connector E12 terminal 1 (R/Y).


20 (R/Y) - 1 (R/Y) : Continuity should exist.

4. Check continuity between IPDM E/R harness connector E122 terminal 30 (L) and headlamp LH harness connector E44 terminal 1 (L).

30 (L) - 1 (L) : Continuity should exist.

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#) .
- NG >> Repair harness or connector.

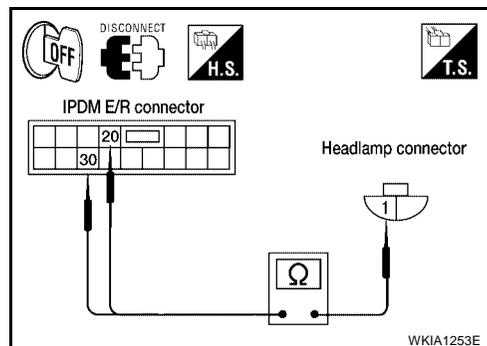

HEADLAMP (FOR USA)

6. CHECK HEADLAMP GROUND

1. Turn ignition switch OFF.
2. Check continuity between headlamp RH harness connector E12 terminal 2 (B) and ground.

2 (B) - Ground : Continuity should exist.


3. Check continuity between headlamp LH harness connector E44 terminal 2 (B) and ground.

2 (B) - Ground : Continuity should exist.

OK or NG

OK >> Check headlamp connector for damage or poor connection. Repair as necessary.

NG >> Repair harness or connector.

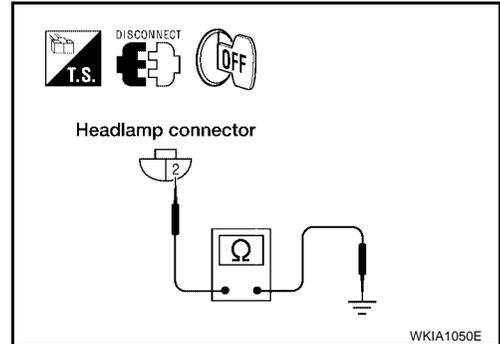

Headlamp LO Does Not Illuminate (One Side)

EKS0067A

1. BULB INSPECTION

Inspect inoperative headlamp bulb.

OK or NG

OK >> GO TO 2.

NG >> Replace headlamp bulb. Refer to [LT-28, "HEADLAMP \(OUTER SIDE\), FOR LOW BEAM"](#).

2. CHECK POWER TO HEADLAMP


1. Disconnect inoperative headlamp connector.
2. Turn the low beam headlamps ON.
3. Check voltage between inoperative headlamp connector terminal and ground.

| Terminals | | | Voltage (Approx.) |
|-----------|----------|---------|-------------------|
| (+) | | (-) | |
| Connector | Terminal | | |
| Right | E12 | 1 (R/Y) | Battery voltage |
| Left | E44 | 1 (L) | |

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

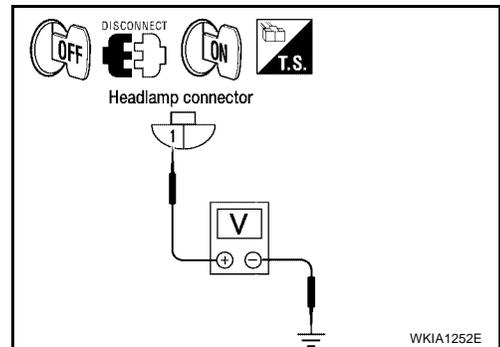

3. CHECK HEADLAMP GROUND


1. Turn the low beam headlamps OFF.
2. Check continuity between inoperative headlamp connector terminal and ground.

| Terminals | | | Continuity |
|-----------|-----------------------|-------|------------|
| Connector | Terminal (Wire color) | | |
| RH | E12 | 2 (B) | Yes |
| LH | E44 | 2 (B) | |

OK or NG

OK >> Check headlamp and IPDM E/R connector. Repair as necessary.


NG >> Repair open circuit in harness between inoperative headlamp and ground.

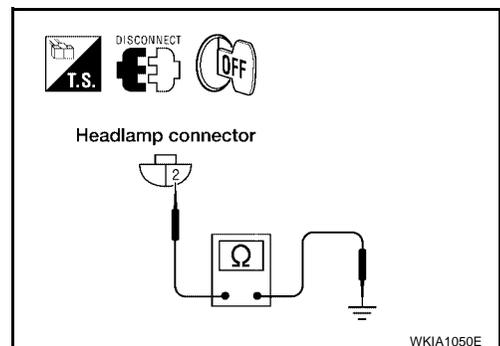

HEADLAMP (FOR USA)

Aiming Adjustment

EKS0066H

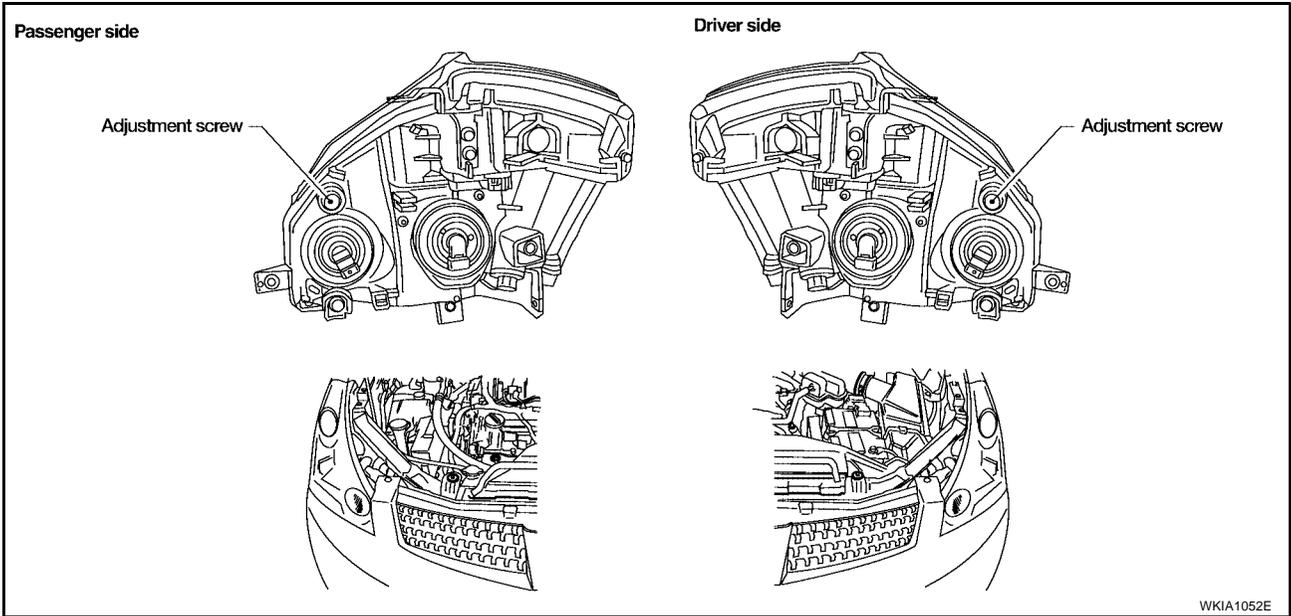

For details, refer to the regulations in your state.

Before performing aiming adjustment, check the following.

1. Ensure all tires are inflated to correct pressure.
2. Place vehicle and screen on level surface.
3. Ensure there is no load in vehicle other than the driver (or equivalent weight placed in driver's position). Coolant and engine oil filled to correct level and fuel tank full.
4. Confirm spare tire, jack and tools are properly stowed.

LOW BEAM AND HIGH BEAM

NOTE:

Aim each headlamp individually and ensure other headlamp beam pattern is blocked from screen.

1. Turn headlamp low beam on.
2. Use adjusting screw to perform aiming adjustment.


A
B
C
D
E
F
G

H
I
J

LT

L
M

HEADLAMP (FOR USA)

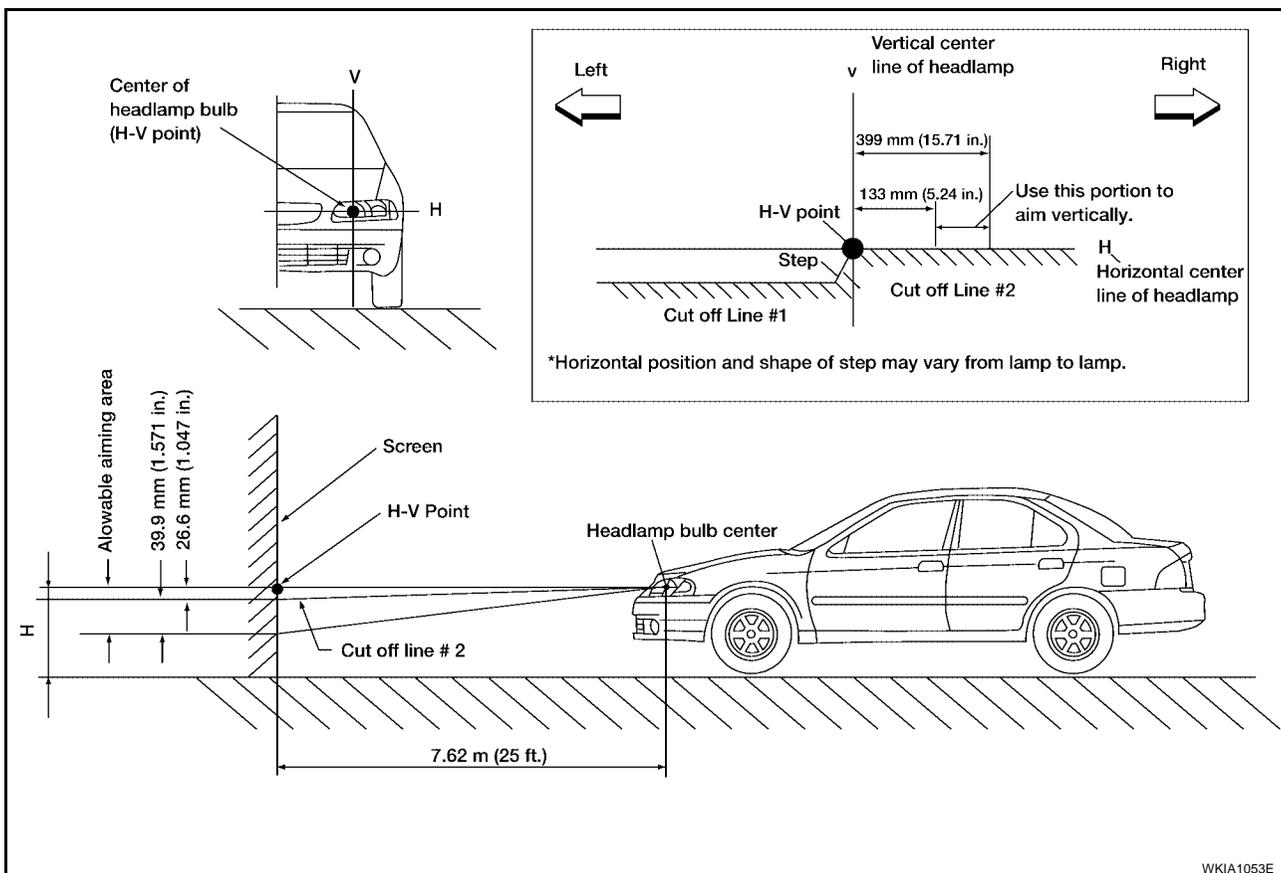

If the vehicle front body has been repaired and/or the headlamp assembly has been replaced, check aiming. Use the aiming chart shown in the figure.

- **Basic illuminating area for adjustment should be within the range shown on the aiming chart. Adjust headlamps accordingly.**

Bulb Replacement HEADLAMP (OUTER SIDE), FOR LOW BEAM

EKS0066I

1. Turn headlamp switch OFF.
 2. Disconnect the electrical connector.
 3. Turn the bulb counterclockwise to remove it.
- Installation is in the reverse order of removal.

HEADLAMP (INNER SIDE), FOR HIGH BEAM

1. Turn headlamp switch OFF.
 2. Disconnect the electrical connector.
 3. Turn the bulb counterclockwise to remove it.
- Installation is in the reverse order of removal.

FRONT TURN SIGNAL/PARKING LAMP

1. Turn the bulb socket counterclockwise to unlock it.
 2. Pull the bulb to remove it from the socket.
- Installation is in the reverse order of removal.

CAUTION:

After installing the bulb, be sure to install the bulb socket securely to ensure watertightness.

HEADLAMP (FOR USA)

EKS0066J

Removal and Installation

1. Remove the front fascia. Refer to [EI-14, "Removal and Installation"](#).
2. Remove the headlamp mounting bolts.
3. Pull the headlamp toward the front of the vehicle, disconnect connectors, and remove from vehicle.


Installation is in the reverse order of removal.

Headlamp-to-radiator support mounting bolts:

: 6.5 N-m (0.66 kg-m, 58 in-lb)


Headlamp-to-fender mounting bolt:

: 5.7 N-m (0.58 kg-m, 50 in-lb)

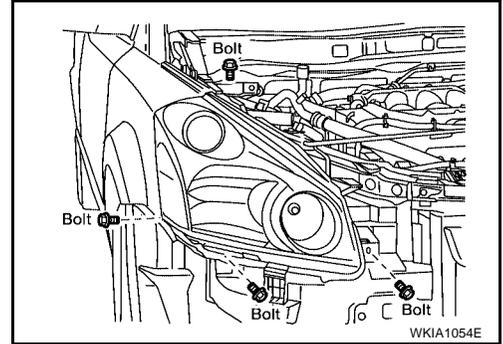

Disassembly and Assembly

EKS0066K

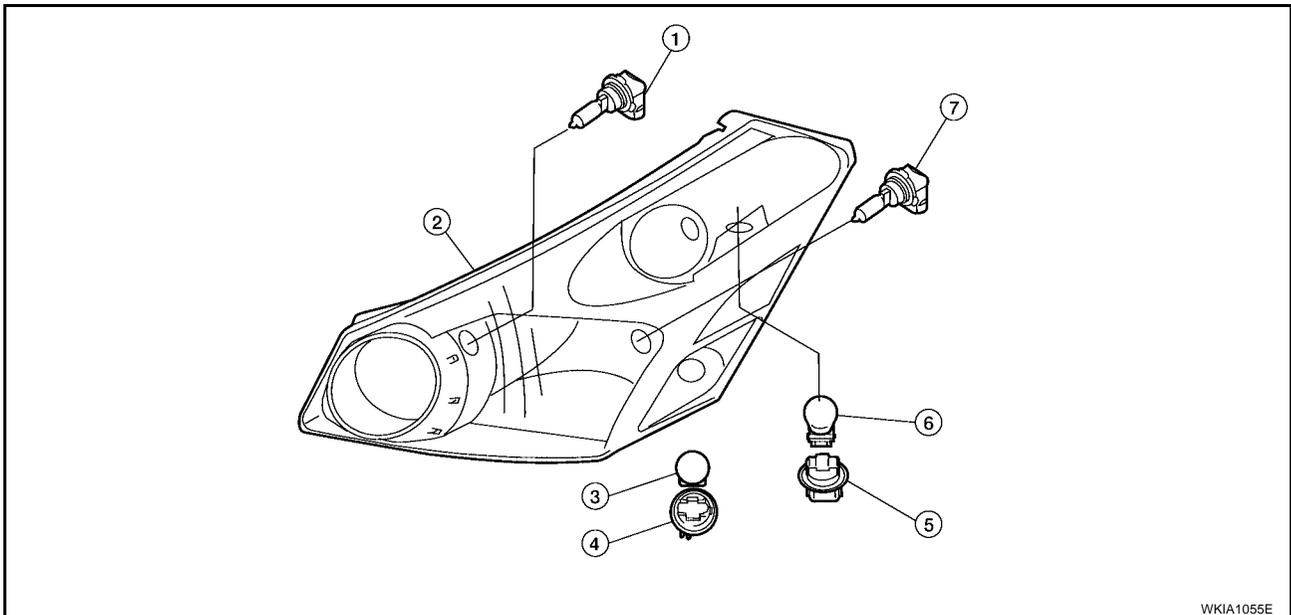

- | | | |
|-------------------------------|---|----------------------------------|
| 1. Headlamp bulb (High beam) | 2. Headlamp assembly | 3. Cornering lamp bulb |
| 4. Cornering lamp bulb socket | 5. Parking/turn signal lamp bulb socket | 6. Parking/turn signal lamp bulb |
| 7. Headlamp bulb (Low beam) | | |

A
B
C
D
E
F
G
H
I
J
LT
L
M

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

applied before the engine is started the daytime lights will not be illuminated. The daytime lights will illuminate once the parking brake is released. Thereafter, the daytime lights will continue to operate when the parking brake is applied.

Battery saver system is controlled by the BCM (body control module).

Power is supplied at all times

- to headlamp high relay, located in the IPDM E/R (intelligent power distribution module engine room), and
- to headlamp low relay, located in the IPDM E/R, and
- through 50A fusible link (letter j , located in the fuse and fusible link box)
- to BCM terminal 55, and
- through 15A fuse [No. 3, located in the fuse block (J/B)]
- to BCM terminal 42, and
- through 15A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 31, and
- through 15A fuse (No. 29, located in the fuse and fusible link box)
- to daytime light control unit terminals 2 and 3.

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [No. 12, located in the fuse block (J/B)]
- to daytime light control unit terminal 12, and
- through 10A fuse [No. 16, located in the fuse block (J/B)]
- to BCM terminal 38.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to BCM terminal 11.

With the ignition switch in the START position, power is supplied

- through 10A fuse [No. 9, located in the fuse block (J/B)]
- to daytime light control unit terminal 1.

Ground is supplied

- to daytime light control unit terminal 9
- through grounds E9, E15 and E24, and
- to BCM terminal 52, and
- to combination meter terminal 32
- through grounds M57, M61 and M79.

HEADLAMP OPERATION

Low Beam Operation

With the lighting switch in 2ND position, the BCM receives input requesting the headlamps to illuminate. This input is communicated to the IPDM E/R across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the headlamp low relay coil. When energized, this relay directs power

- through 15A fuse (No. 45, located in the IPDM E/R)
- through IPDM E/R terminal 30
- to headlamp LH (low) terminal 1, and
- through 15A fuse (No. 36, located in the IPDM E/R)
- through IPDM E/R terminal 20
- to headlamp RH (low) terminal 1.

Ground is supplied

- to headlamp LH (low) and RH (low) terminal 2
- through grounds E9, E15 and E24.

With power and ground supplied, low beam headlamps illuminate.

High Beam Operation/Flash-to-Pass Operation

With the lighting switch in 2ND position and placed in HIGH or PASS position, the BCM receives input requesting the headlamp high beams to illuminate. This input is communicated to the IPDM E/R across the CAN com-

A
B
C
D
E
F
G
H
I
J

LT

L

M

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

munication lines. The CPU of the combination meter controls the ON/OFF status of the HIGH BEAM indicator. The CPU of the IPDM E/R controls the headlamp high relay coil. When energized, this relay directs power

- through 10A fuse (No. 40, located in the IPDM E/R)
- through IPDM E/R terminal 27
- to daytime light relay terminal 1
- through daytime light relay terminal 2
- to grounds E9, E15 and E24.

When energized, the daytime light relay directs power

- through daytime light relay terminal 3
- to daytime light control unit terminal 8 and
- to headlamp RH (high) terminal 1.

Also when the headlamp high relay is energized, it directs power

- through 10A fuse (No. 38, located in the IPDM E/R)
- through IPDM E/R terminal 28
- to daytime light control unit terminal 5
- through daytime light control unit terminal 6
- to headlamp LH (high) terminal 1.

Ground is supplied

- to headlamp RH (high) terminal 2
- through grounds E9, E15 and E24, and
- to headlamp LH (high) terminal 2
- to daytime light control unit terminal 7
- through daytime light control unit terminal 9
- through grounds E9, E15 and E24.

With power and ground supplied, the high beam headlamps illuminate.

BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON), and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the headlamps remain illuminated for 5 minutes unless the combination switch (lighting switch) position is changed. If the combination switch (lighting switch) position is changed, then the headlamps are turned off.

AUTO LIGHT OPERATION

For auto light operation, refer to [LT-40, "System Description"](#) .

DAYTIME LIGHT OPERATION

With the engine running, the lighting switch in the OFF or 1ST position and parking brake released, power is supplied

- through daytime light control unit terminal 6
- to headlamp LH (high) terminal 1
- through headlamp LH (high) terminal 2
- to daytime light control unit terminal 7, and
- through daytime light control unit terminal 8
- to headlamp RH (high) terminal 1.

Ground is supplied

- to headlamp RH (high) terminal 2
- through grounds E9, E15 and E24.

Because the high beam headlamps are now wired in series, they operate at half illumination.

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

OPERATION

After starting the engine with the lighting switch in the "OFF" or 1ST position, the headlamp high beam automatically turns on. Lighting switch operations other than the above are the same as conventional light systems.

| Engine | | With engine stopped | | | | | | | | | With engine running | | | | | | | | |
|--|-----------|---------------------|----|---|-----|----|---|-----|----|---|---------------------|----|---|-----|----|---|-----|----|---|
| Lighting switch | | OFF | | | 1ST | | | 2ND | | | OFF | | | 1ST | | | 2ND | | |
| | | Hi | Lo | P | Hi | Lo | P | Hi | Lo | P | Hi | Lo | P | Hi | Lo | P | Hi | Lo | P |
| Headlamp | High beam | - | - | - | - | - | × | × | - | × | ●* | ●* | × | ●* | ●* | × | × | - | × |
| | Low beam | - | - | - | - | - | × | × | × | × | - | - | × | - | - | × | × | × | × |
| Tail lamp | | - | - | - | × | × | × | × | × | × | - | - | - | × | × | × | × | × | × |
| License and instrument illumination lamp | | - | - | - | × | × | × | × | × | × | - | - | - | × | × | × | × | × | × |

- Hi: "HIGH BEAM" position
- Lo: "LOW BEAM" position
- P: "FLASH TO PASS" position
- ×: Lamp "ON"
- -: Lamp "OFF"
- ●: Lamp dims. (Added functions)
- *: When starting the engine with the parking brake released, the daytime lights will operate.
When starting the engine with the parking brake applied, the daytime lights will not operate.

CAN Communication System Description

EKS0066N


Refer to [LAN-5, "CAN COMMUNICATION"](#).

A
B
C
D
E
F
G
H
I
J
LT
L
M

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

Schematic

EKS00660

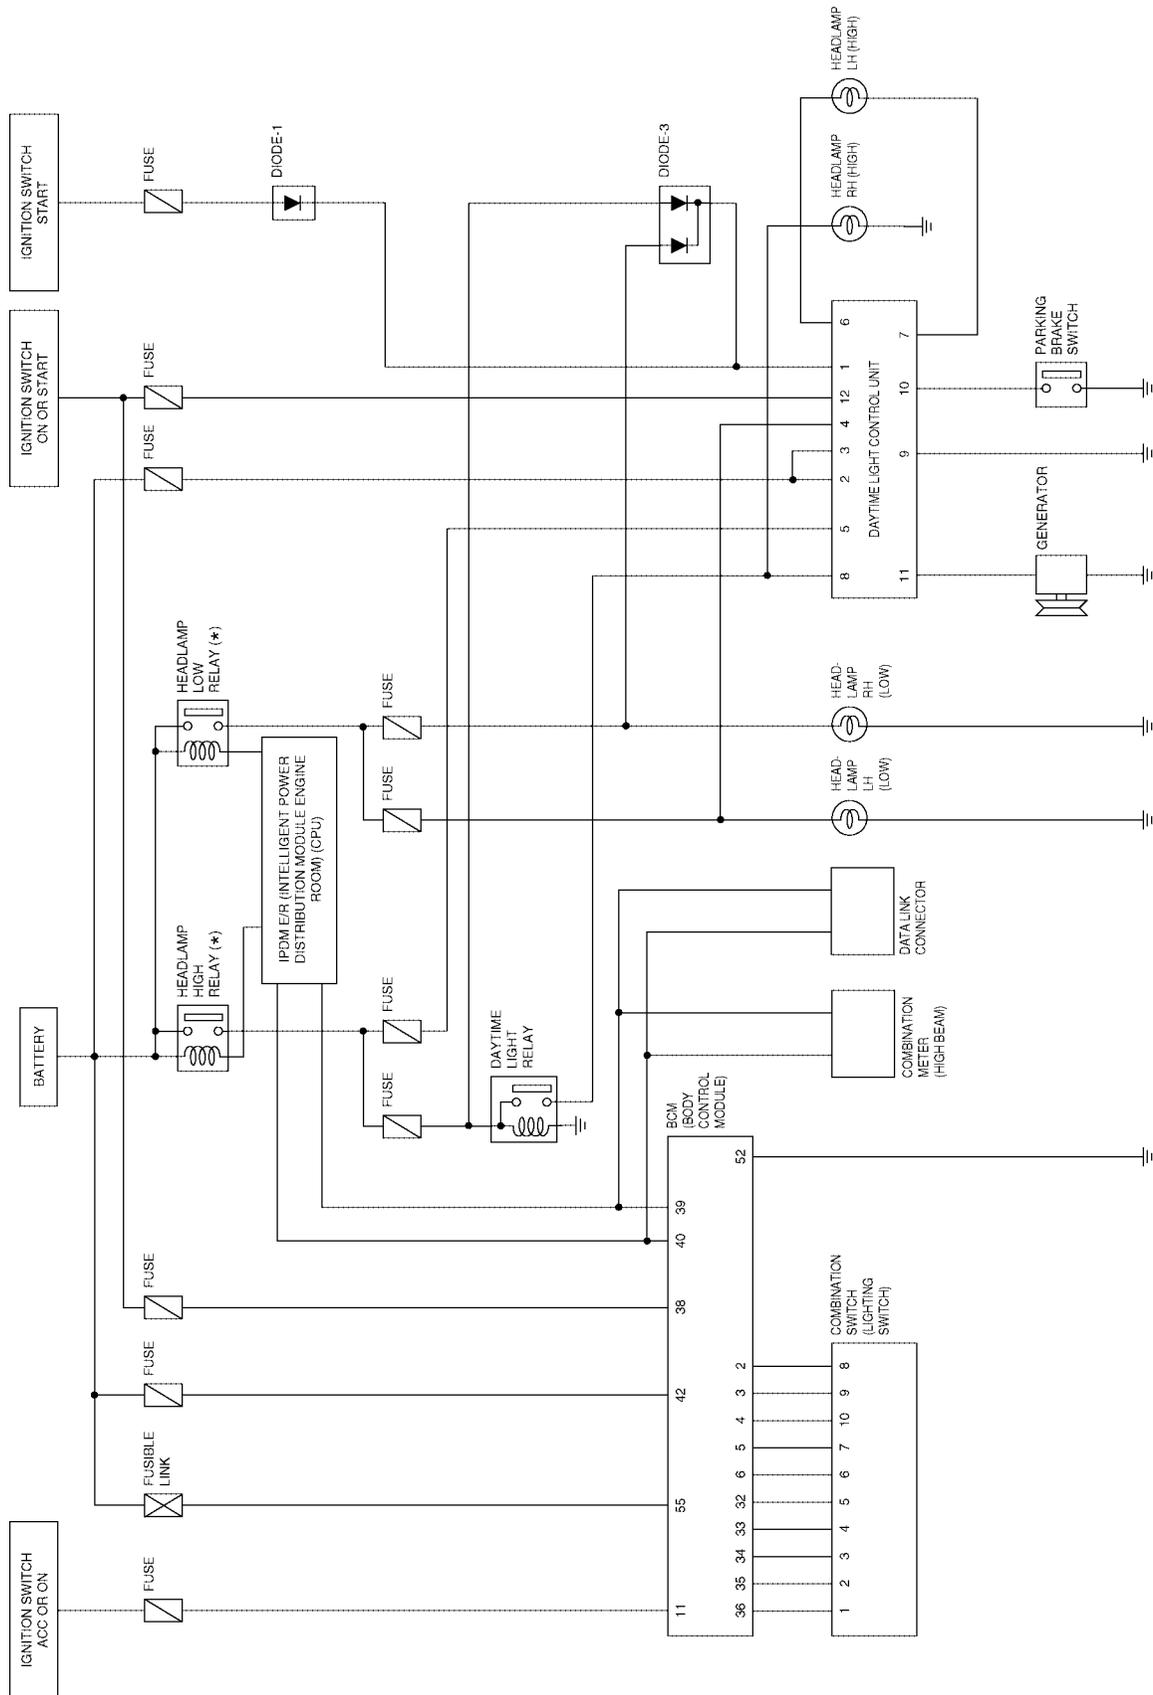

*: THIS RELAY IS BUILT INTO THE IPDME/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM).

WKWA1915E


HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

EKS0066P


Wiring Diagram — DTRL —

LT-DTRL-01

— : DATA LINE

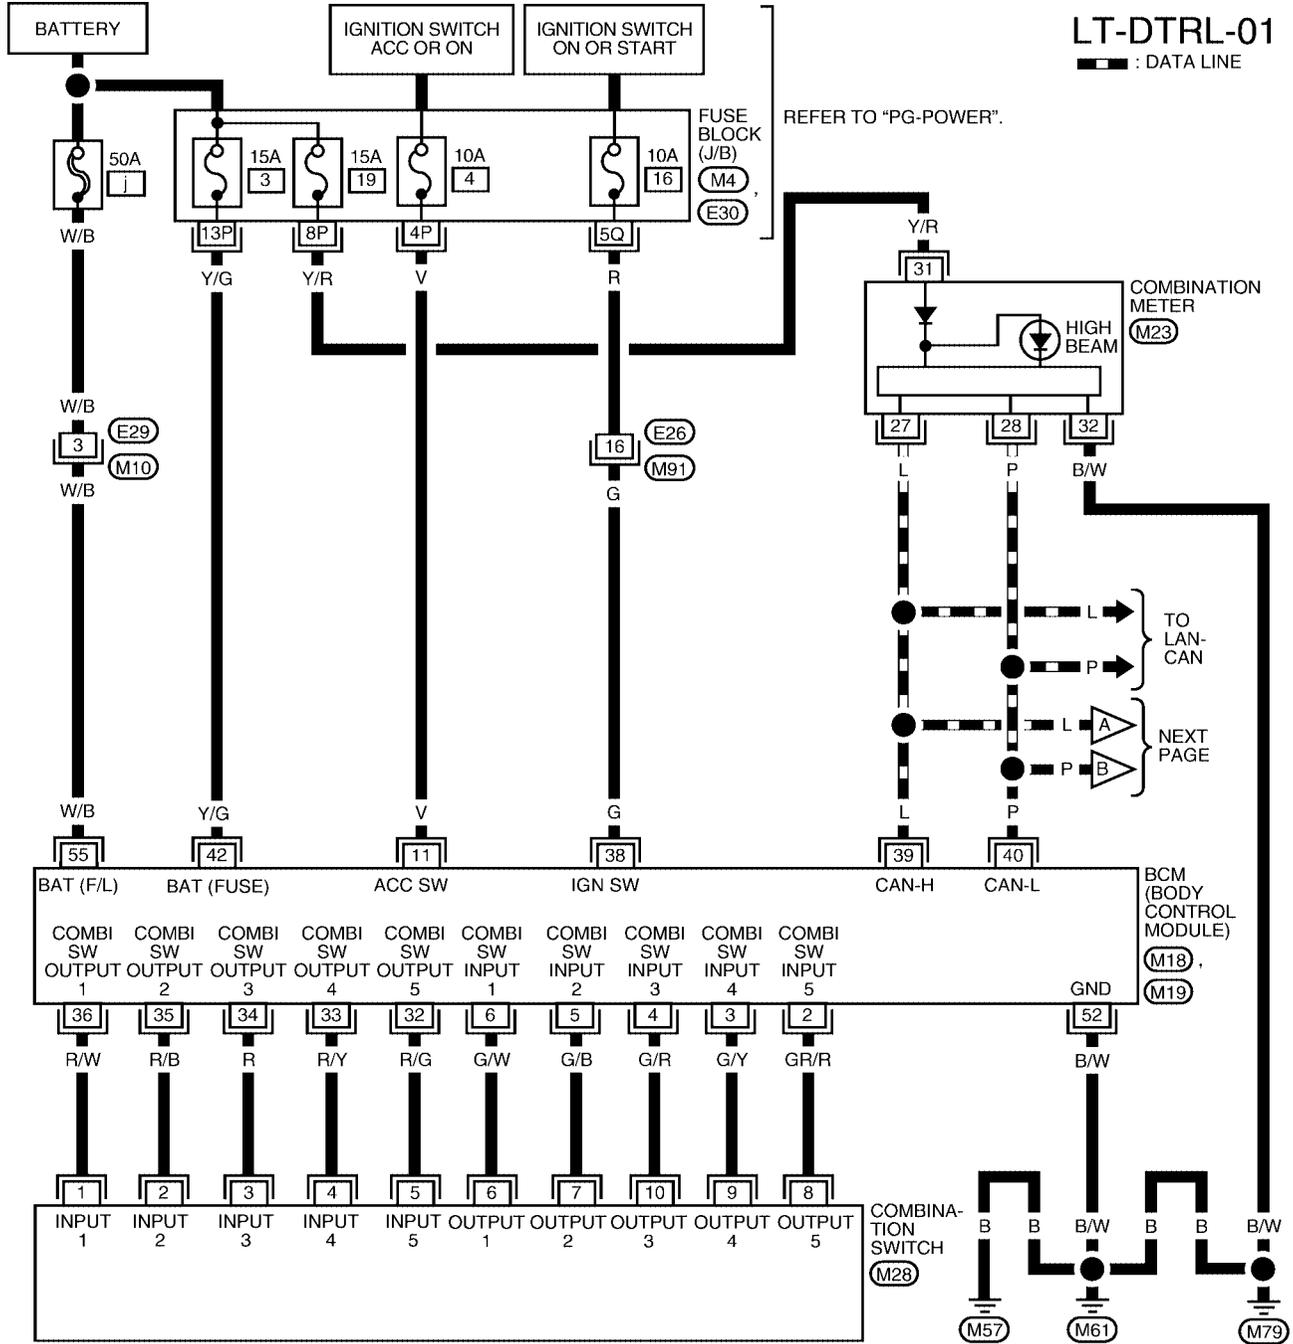



A
B
C
D
E
F
G
H
I
J
LT
L
M

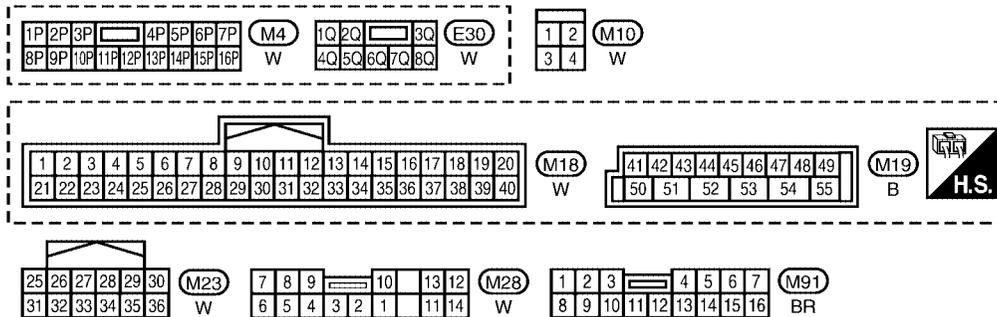

WKWA3929E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -



LT-DTRL-02

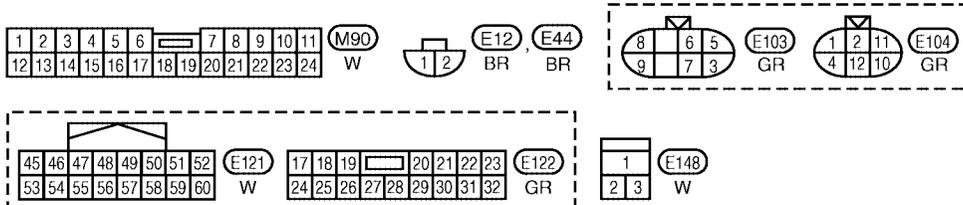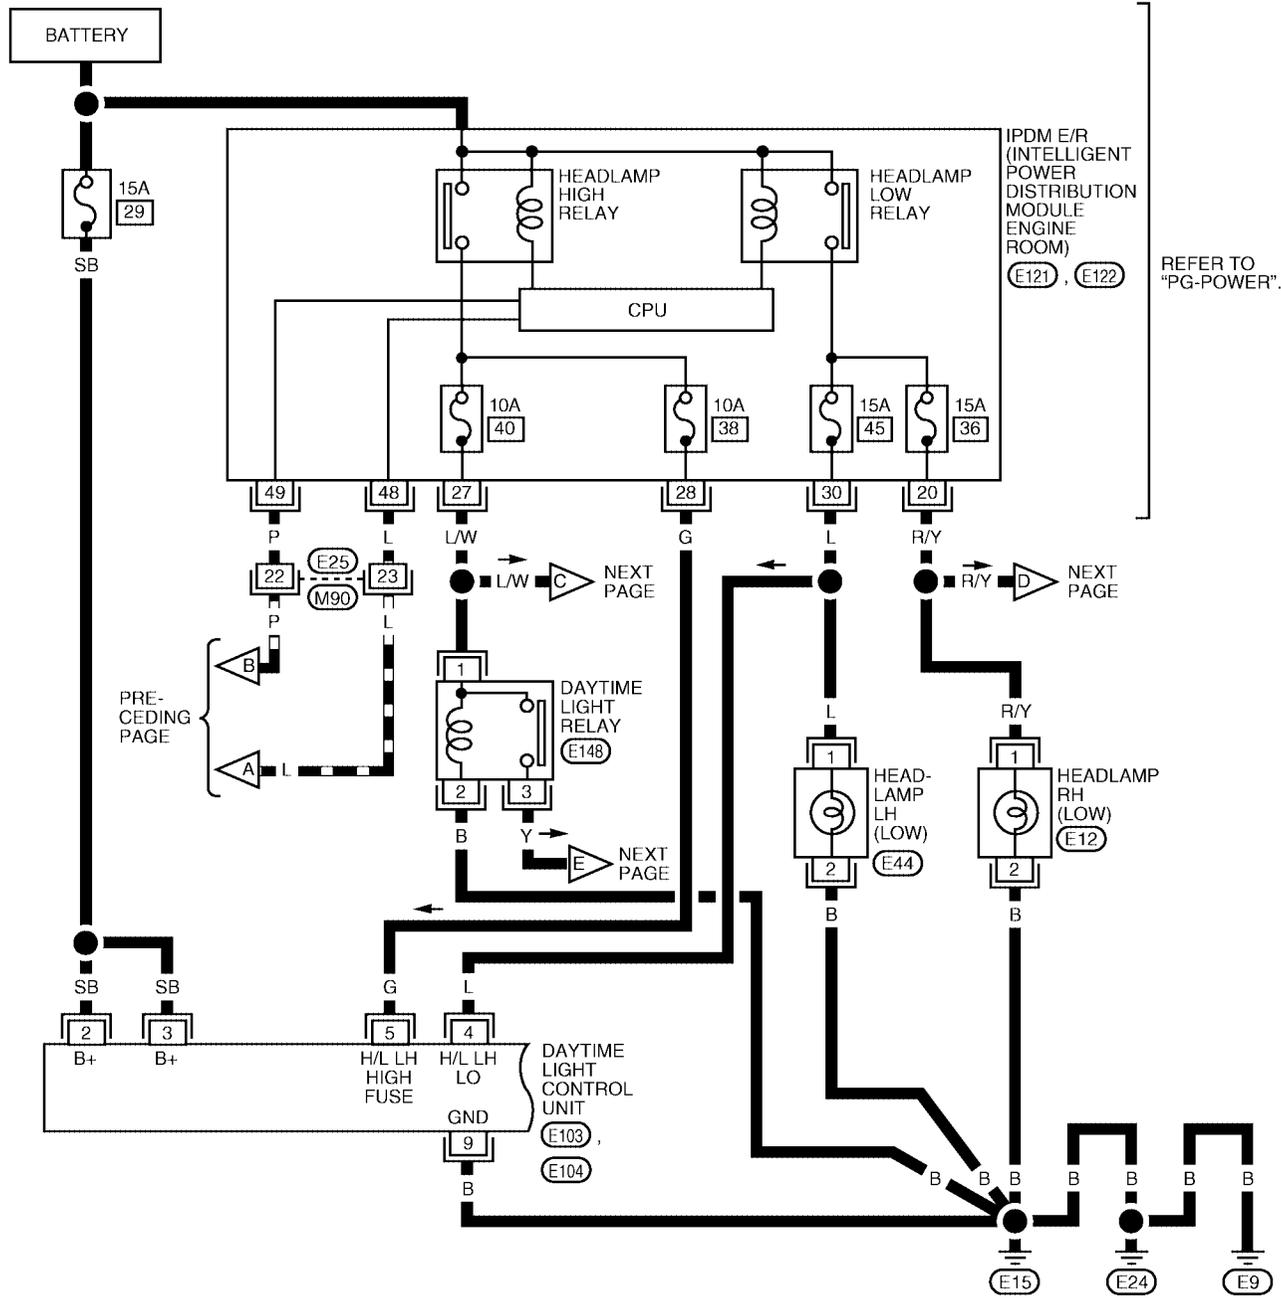

WKWA1917E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

LT-DTRL-03

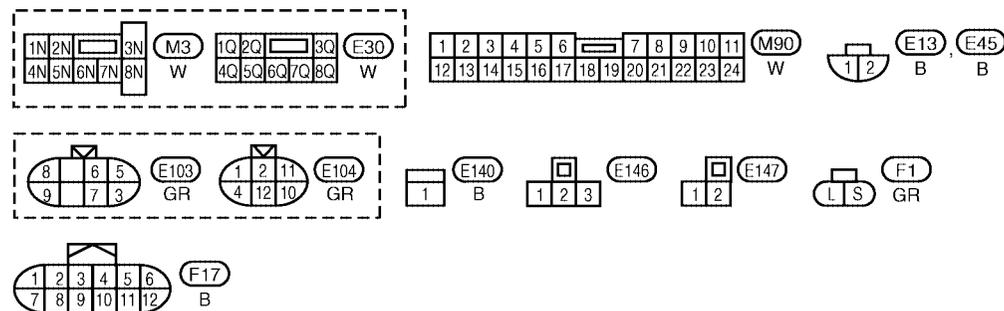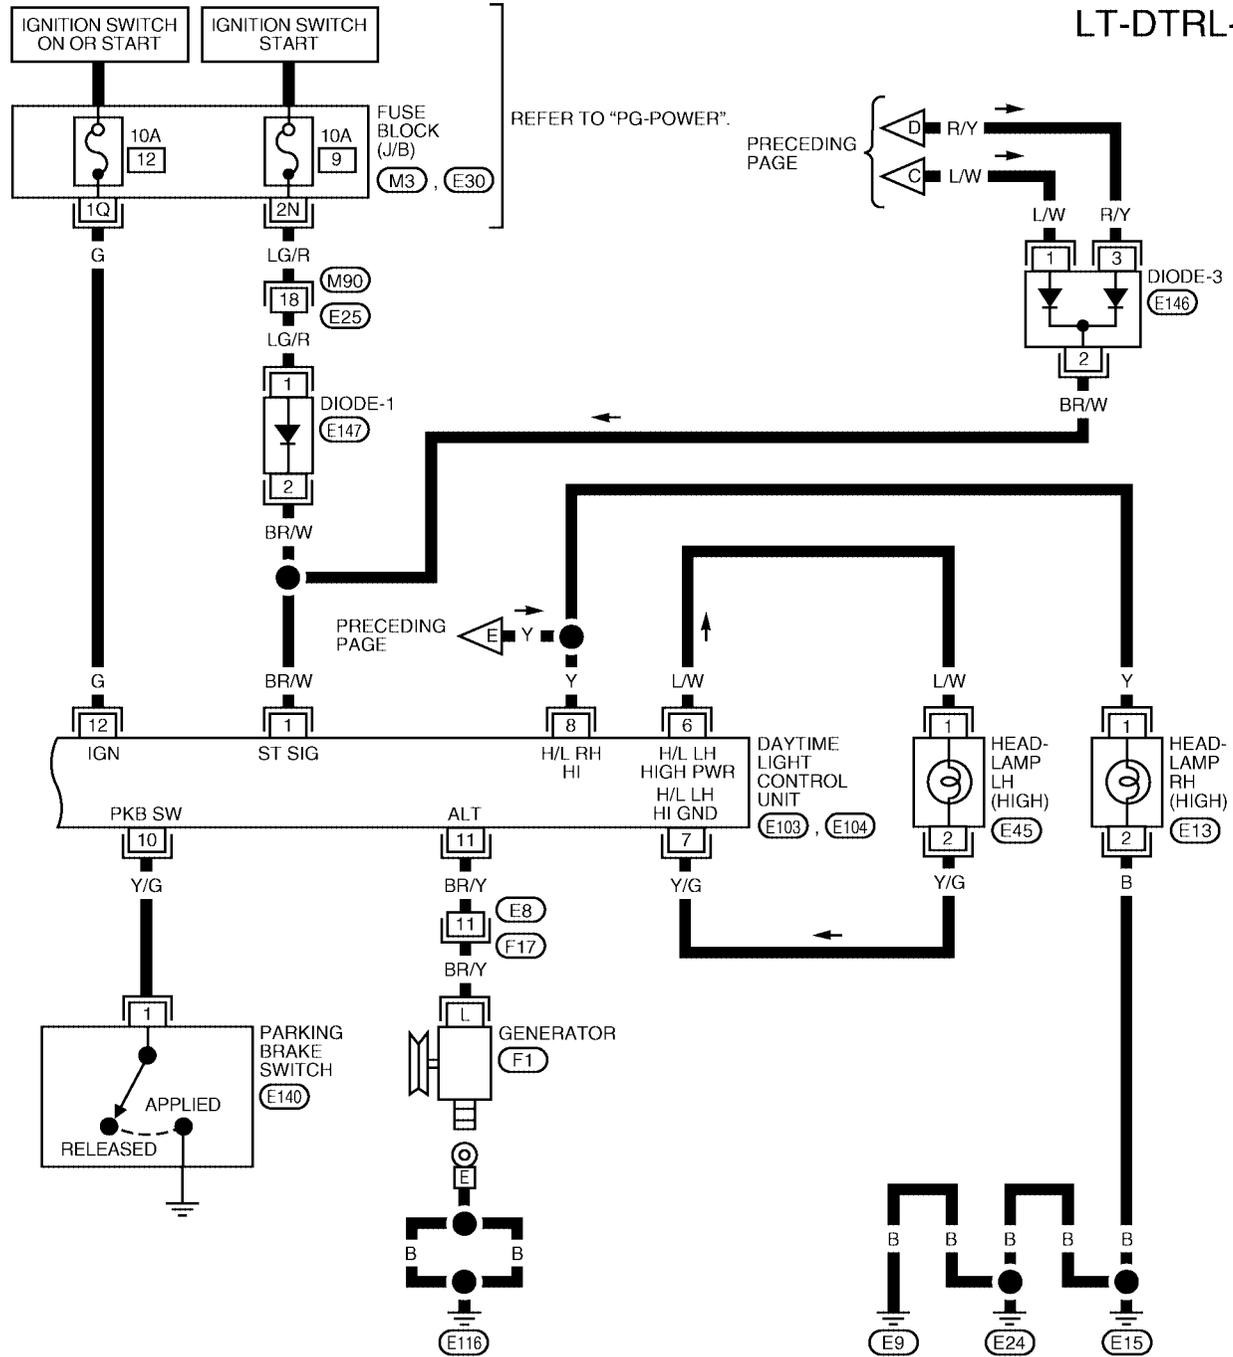

WKWA1918E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

EKS0069J

Trouble Diagnoses DAYTIME LIGHT CONTROL UNIT INSPECTION TABLE

| Terminal No. | Wire color | Item | Condition | Voltage (Approx.) |
|--------------|------------|--|---|-------------------|
| 1 | BR/W | Ignition switch start signal | Ignition switch in START position | Battery |
| | | | All other conditions | 0 |
| 2 | SB | Battery | Ignition switch in all positions | Battery |
| 3 | SB | Battery | Ignition switch in all positions | Battery |
| 4 | L | Lighting switch headlamp LH low beam output | Lighting switch in the headlamp ON (2ND) position and low beam (B) position | Battery |
| | | | All other conditions | 0 |
| 5 | G | Lighting switch headlamp LH high beam output | Lighting switch in the flash-to-pass (C) position or headlamp ON (2ND) position and high beam (A) position | Battery |
| | | | All other conditions | 0 |
| 6 | L/W | Headlamp LH high beam | Lighting switch in the flash-to-pass (C) position or headlamp ON (2ND) position and high beam (A) position | Battery |
| | | | With parking brake released, engine running and lighting switch in OFF or parking and tail lamp ON (1ST) positions CAUTION: Block wheels and ensure selector lever is in P or N position. | Battery |
| | | | All other conditions | 0 |
| 7 | Y/G | Headlamp LH (high) control | Lighting switch in the flash-to-pass (C) position or headlamp ON (2ND) position and high beam (A) position and high beam position | 0 |
| | | | With parking brake released, engine running and lighting switch in OFF or parking and tail lamp ON (1ST) positions CAUTION: Block wheels and ensure selector lever is in P or N position. | Battery |
| | | | All other conditions | 0 |
| 8 | Y | Lighting switch headlamp RH high beam output | Lighting switch in the flash-to-pass (C) position or headlamp ON (2ND) position and high beam (A) position | Battery |
| | | | With parking brake released, engine running and lighting switch in OFF or parking and tail lamp ON (1ST) positions CAUTION: Block wheels and ensure selector lever is in P or N position. | 6 |
| | | | All other conditions | 0 |
| 9 | B | Ground | — | — |
| 10 | Y/G | Parking brake switch | Parking brake released | Battery |
| | | | Parking brake set | 0 |
| 11 | BR/Y | Generator (L terminal) | When engine is running | Battery |
| | | | All other conditions | 0 |
| 12 | G | Ignition switch on signal | Ignition switch OFF, ACC positions | 0 |
| | | | Ignition switch ON, START positions | Battery |

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

Aiming Adjustment

EKS0066R

Refer to [LT-27, "Aiming Adjustment"](#) .

A

Bulb Replacement

EKS0066S

Refer to [LT-28, "Bulb Replacement"](#) .

B

Removal and Installation of Headlamp

EKS0066T

Refer to [LT-29, "Removal and Installation"](#) .

C

Disassembly and Assembly of Headlamp

EKS0066U

Refer to [LT-29, "Disassembly and Assembly"](#) .


D

Removal and Installation of Daytime Light Control Unit

EKS0069K

1. Remove the daytime light control unit mounting bolt.
2. Disconnect connectors and remove from vehicle.

Installation is in the reverse order of removal.

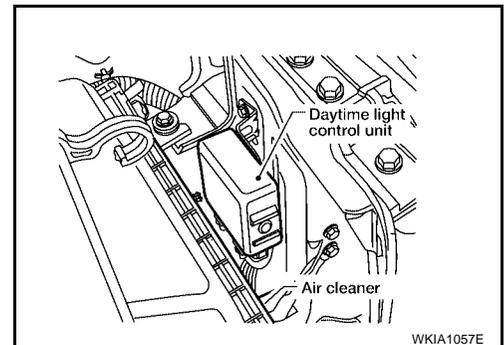

E

F

G

H

Removal and Installation of Daytime Light Relay


EKS0069M

NOTE:

The daytime light relay is taped to the main wiring harness near the lower dash side finisher RH.

1. Remove the glove box assembly. Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#) .
2. Carefully remove the tape holding the daytime light relay to the main harness.
3. Disconnect the connector.

Installation is in the reverse order of removal.

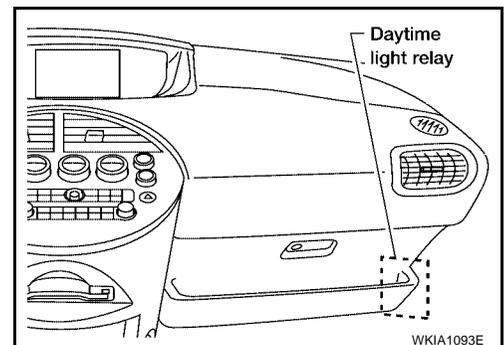

I

J

LT

L

M


AUTO LIGHT SYSTEM

AUTO LIGHT SYSTEM

PF2:28491

Component Parts and Harness Connector Location

EKS005M1

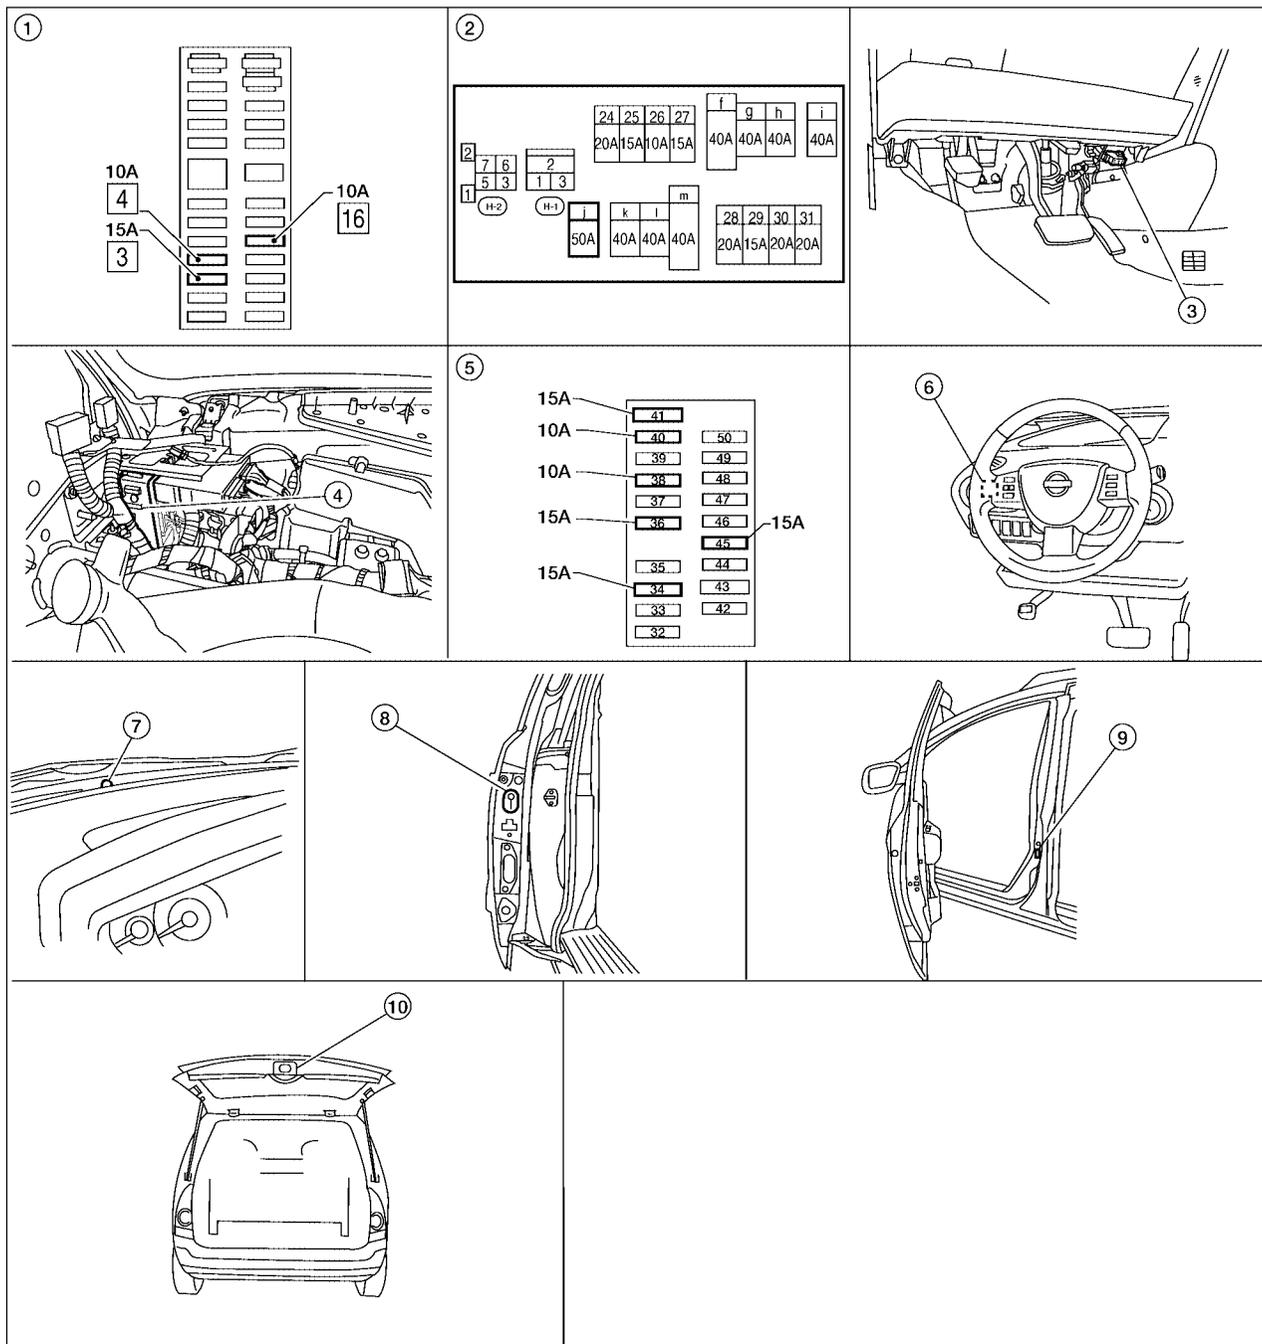

WKIA4800E

- | | | |
|---|--|--|
| 1. Fuse block (J/B) | 2. Fuse and fusible link box | 3. Data link connector |
| 4. BCM M18, M19, M20 View with instrument panel removed | 5. IPDM E/R fuse layout | 6. Combination switch (lighting switch) M28 |
| 7. Optical sensor M402 | 8. Sliding door switch LH, RH B46, B135 | 9. Front door switch LH, RH B8, B108 |
| 10. Back door latch (door ajar switch) D511 | | |

System Description

EKS005M2

Automatically turns on/off the parking lamps and the headlamps in accordance with ambient light. Timing for when the lamps turn on/off can be selected using four modes.

AUTO LIGHT SYSTEM

OUTLINE

The auto light control system uses an optical sensor that detects outside brightness.

When the lighting switch is in "AUTO" position, it automatically turns on/off the parking lamps and the headlamps in accordance with the ambient light. Sensitivity can be adjusted in four steps. For the details of the setting, refer to [LT-48, "SETTING CHANGE FUNCTIONS"](#).

Optical sensor ground is supplied

- to optical sensor terminal 3
- through BCM (body control module) terminal 18.

When ignition switch is turned to "ON" position and when outside brightness is darker than prescribed level, input is supplied

- to BCM terminal 43
- from optical sensor terminal 4.

The headlamps will then illuminate. For a description of headlamp operation, refer to [LT-6, "System Description"](#).

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#).

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the AUTO position, the ignition switch is turned from ON or ACC to OFF, and one of the front doors is opened, the battery saver control feature is activated.

Under this condition, the headlamps remain illuminated for 5 minutes, then the headlamp are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

DELAY TIMER FUNCTION

When the ignition switch is ON and auto light switch is ON, the BCM turns on/off the headlamps. In delay timer function, ignition is OFF, auto light sensor power source is OFF and the headlamps are not turned on/off by the BCM. On condition that:

- when the state of ignition switch ON or ACC is ON and output judgment by auto light function is headlamp ON changes to ignition switch and ACC are OFF and any door switch is ON, output judgment by BCM should be headlamp ON for 5 minutes by timer. After time out, output judgment by BCM should be headlamp OFF.
- when the state of any door switch is turned to ON from OFF while 45 second or 5 minute timer is counting, timer stops, and restarts counting for 5 minutes, then BCM judges output as headlamp ON. After time out, BCM judges output as headlamp OFF.
- when the state of front door switch (driver side), front door switch (passenger side), rear door switch LH, rear door switch RH or back door latch (door ajar switch) is ON turns to all door switches are OFF while 45 second or 5 minute timer is counting, timer stops, and restarts counting for 45 seconds, then BCM judges output as headlamp ON. After timer out, BCM judges output as headlamp OFF.
- when the state is ignition switch ON or ACC is ON or auto light switch OFF while timer is counting, timer stops counting and BCM turns on/off lamps according to headlamp function, front fog lamp function, auto light function and headlamp battery save function.

Delay timer control mode can be changed by the function setting of CONSULT-II.

CAN Communication System Description

EKS005M3

Refer to [LAN-5, "CAN COMMUNICATION"](#).

Major Components and Functions


EKS005M4

| Components | Functions |
|----------------|--|
| BCM | ● Turns on/off circuits of tail light and headlamp according to signals from light sensor, lighting switch (AUTO), driver door switch, passenger door switch, rear door switch, and ignition switch (ON, OFF). |
| Optical sensor | ● Converts ambient light (lux) to voltage and sends it to BCM. (Detects lightness of 50 to 1,300 lux) |

AUTO LIGHT SYSTEM

Schematic

EKS005M5

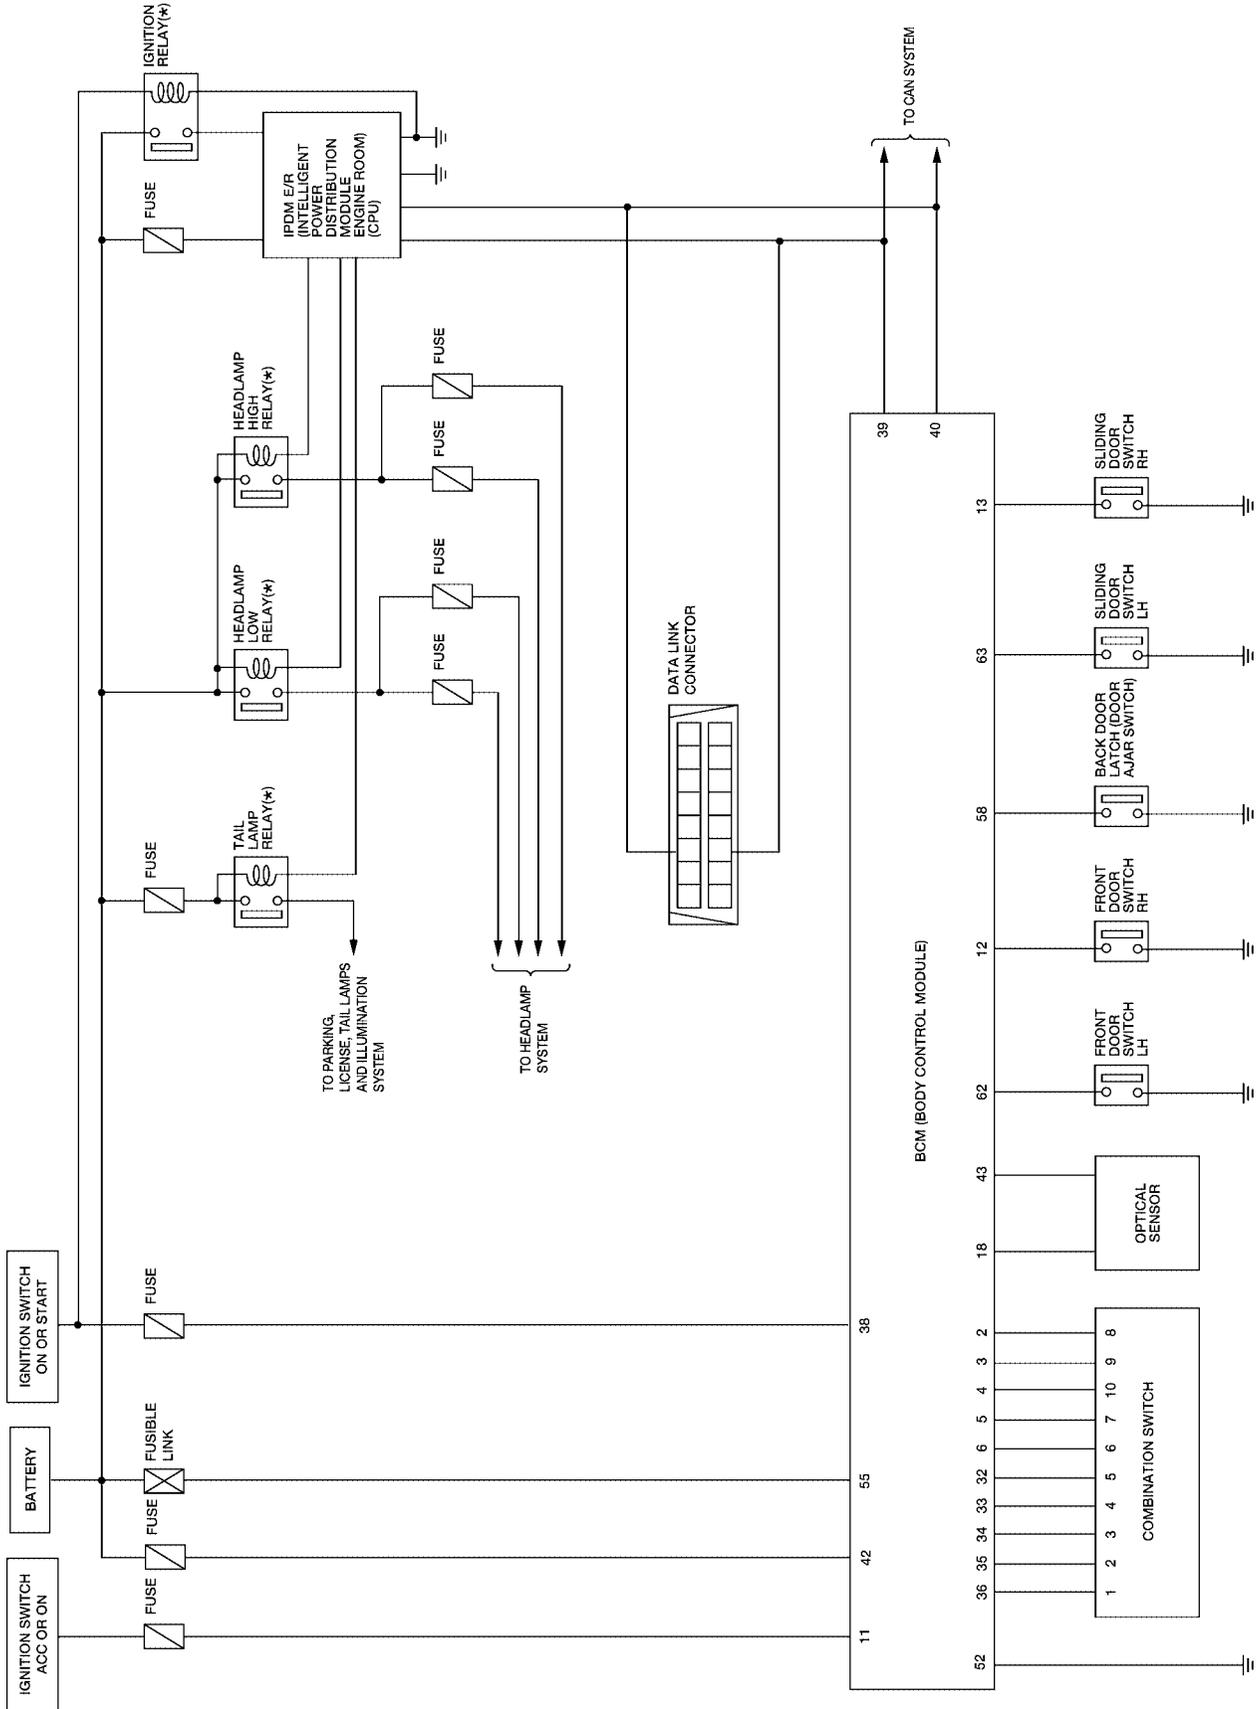

*: THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM).



WKWA3954E

AUTO LIGHT SYSTEM

Wiring Diagram — AUTO/L —

EKS005M6


LT-AUTO/L-01

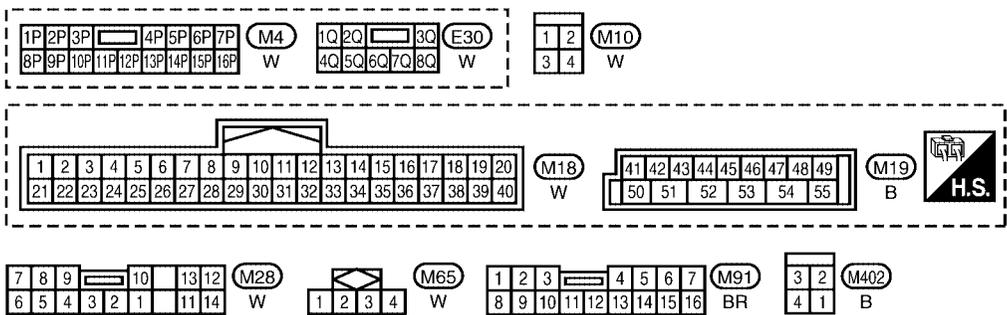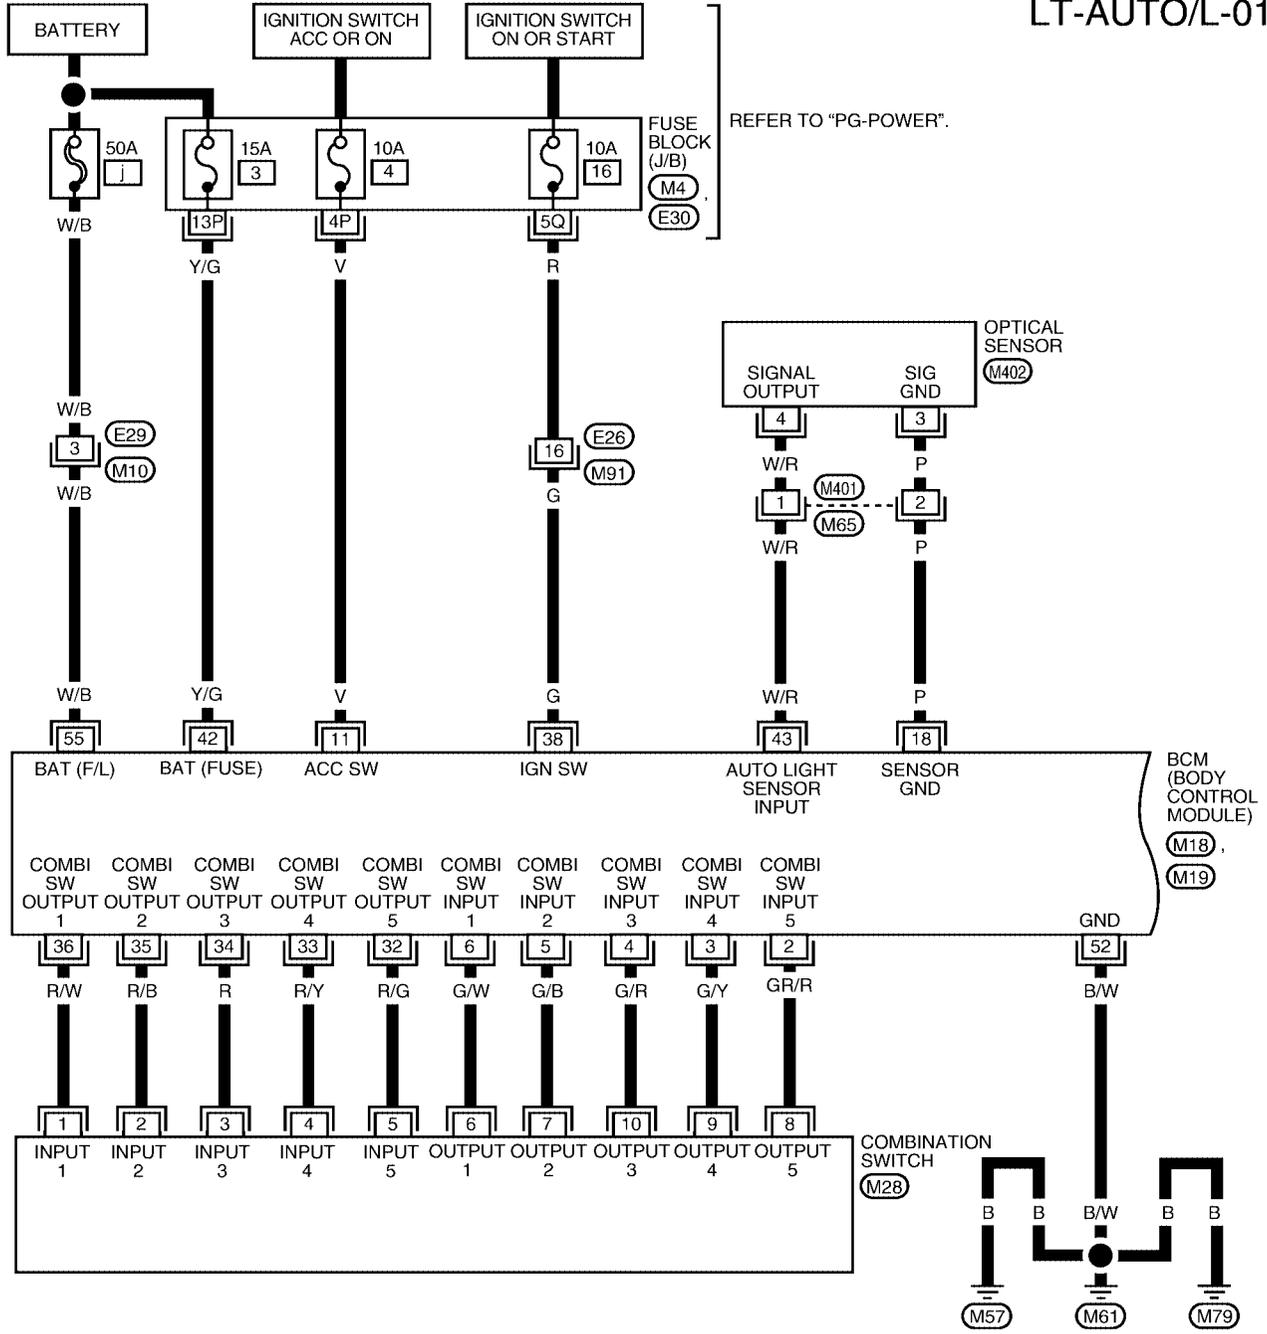



WKWA3930E

AUTO LIGHT SYSTEM

LT-AUTO/L-03

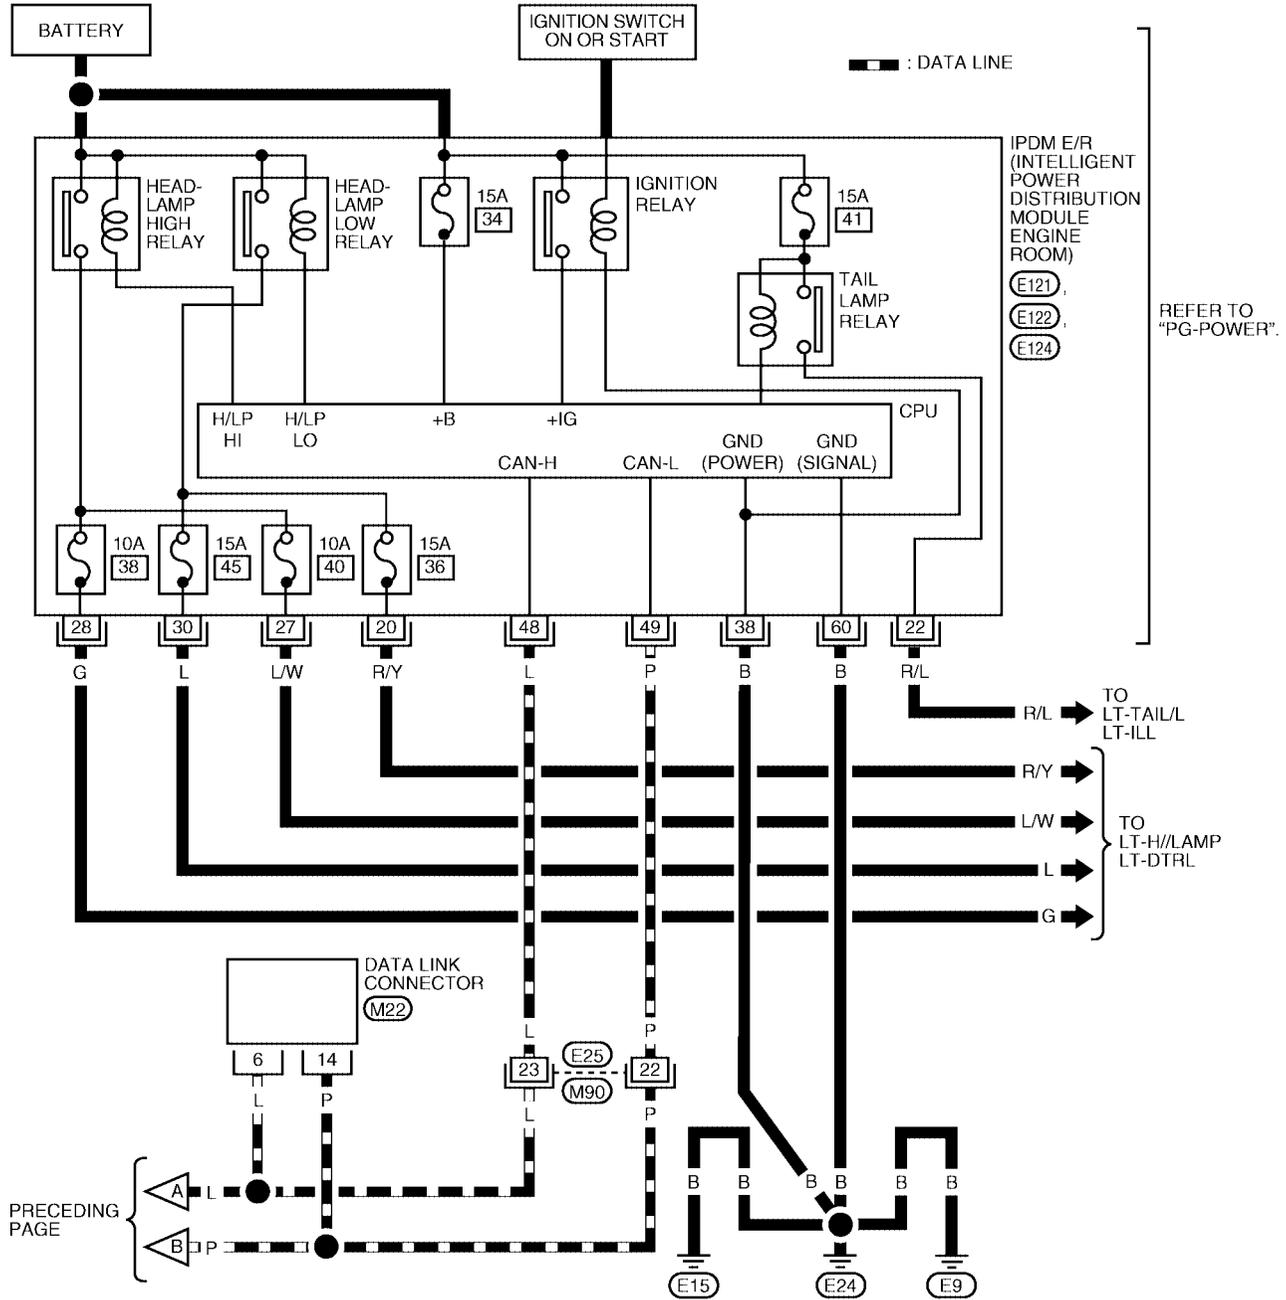

PRECEDING PAGE









WKWA1922E



AUTO LIGHT SYSTEM

Terminals and Reference Values for BCM

EKS005M7
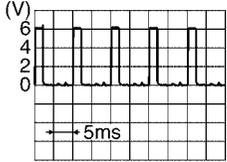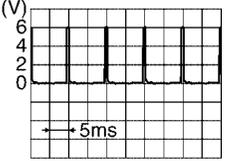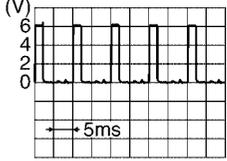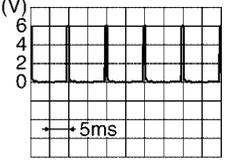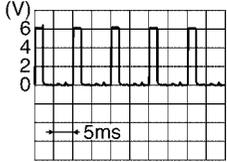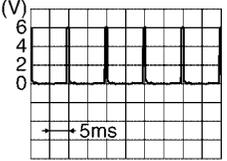
| Terminal No. | Wire color | Signal name | Measuring condition | | Reference value (Approx.) | |
|--------------|------------|-------------------------------|---------------------|--|---|-----------------|
| | | | Ignition switch | Operation or condition | | |
| 2 | GR/R | Combination switch input 5 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right;">SKIA5291E</p> | |
| 3 | G/Y | Combination switch input 4 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right;">SKIA5292E</p> | |
| 4 | G/R | Combination switch input 3 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right;">SKIA5291E</p> | |
| 5 | G/B | Combination switch input 2 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right;">SKIA5292E</p> | |
| 6 | G/W | Combination switch input 1 | | | | |
| 11 | V | Ignition switch (ACC) | ACC | — | Battery voltage | |
| 12 | GR/L | Front door switch RH signal | OFF | Front door switch RH | ON (open) | 0V |
| | | | | | OFF (closed) | Battery voltage |
| 13 | O/B | Sliding door switch RH signal | OFF | Sliding door switch RH | ON (open) | 0V |
| | | | | | OFF (closed) | Battery voltage |
| 18 | P | Sensor ground | ON | — | 0V | |
| 32 | R/G | Combination switch output 5 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right;">SKIA5291E</p> | |
| 33 | R/Y | Combination switch output 4 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right;">SKIA5292E</p> | |

AUTO LIGHT SYSTEM
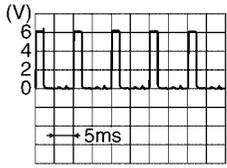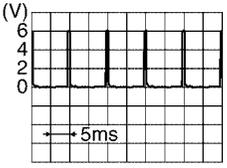
| Terminal No. | Wire color | Signal name | Measuring condition | | Reference value (Approx.) | |
|--------------|------------|--|---------------------|--|--|-----------------|
| | | | Ignition switch | Operation or condition | | |
| 34 | R | Combination switch output 3 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  SKIA5291E | |
| 35 | R/B | Combination switch output 2 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  SKIA5292E | |
| 36 | R/W | Combination switch output 1 | | | | |
| 38 | G | Ignition switch (ON) | ON | — | Battery voltage | |
| 39 | L | CAN-H | — | — | — | |
| 40 | P | CAN-L | — | — | — | |
| 42 | Y/G | Battery power supply | OFF | — | Battery voltage | |
| 43 | W/R | Optical sensor signal | ON | When optical sensor is illuminated | 3.1 V or more ^{Note} | |
| | | | | When optical sensor is not illuminated | 0.6 V or less | |
| 52 | B/W | Ground | ON | — | 0V | |
| 55 | W/B | Battery power supply | OFF | — | Battery voltage | |
| 58 | O | Back door latch (door ajar switch) signal ¹ Back door switch signal ² | OFF | Back door latch (door ajar switch) ¹ | ON (open) | 0V |
| | | | | Back door switch ² | OFF (closed) | Battery voltage |
| 62 | GR/R | Front door switch LH signal | OFF | Front door switch LH | ON (open) | 0V |
| | | | | | OFF (closed) | Battery voltage |
| 63 | W/G | Sliding door switch LH signal | OFF | Sliding door switch LH | ON (open) | 0V |
| | | | | | OFF (closed) | Battery voltage |

NOTE:

Optical sensor must be completely subjected to work lamp light. If the optical sensor is insufficiently illuminated, the measured value may not satisfy standard.

Terminals and Reference Values for IPDM E/R

EKS005M8

| Terminal No. | Wire color | Signal name | Measuring condition | | Reference value (Approx.) | |
|--------------|------------|---------------------------------|---------------------|---------------------------------------|---------------------------|-----------------|
| | | | Ignition switch | Operation or condition | | |
| 20 | R/Y | Headlamp low (RH) | ON | Lighting switch 2ND position | OFF | 0V |
| | | | | | ON | Battery voltage |
| 22 | R/L | Parking, license, and tail lamp | ON | Lighting switch 1ST position | OFF | 0V |
| | | | | | ON | Battery voltage |
| 27 | L/W | Headlamp high (RH) | ON | Lighting switch HIGH or PASS position | OFF | 0V |
| | | | | | ON | Battery voltage |

AUTO LIGHT SYSTEM

| Terminal No. | Wire color | Signal name | Measuring condition | | Reference value (Approx.) |
|--------------|------------|--------------------|---------------------|---------------------------------------|---------------------------|
| | | | Ignition switch | Operation or condition | |
| 28 | G | Headlamp high (LH) | ON | Lighting switch HIGH or PASS position | OFF 0V |
| | | | | | ON Battery voltage |
| 30 | L | Headlamp low (LH) | ON | Lighting switch 2ND position | OFF 0V |
| | | | | | ON Battery voltage |
| 38 | B | Ground | ON | — | 0V |
| 48 | L | CAN-H | — | — | — |
| 49 | P | CAN-L | — | — | — |
| 60 | B | Ground | ON | — | 0V |

How to Proceed With Trouble Diagnosis

EKS005M9

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-40, "System Description"](#).
3. Carry out the Preliminary Check. Refer to [LT-48, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction. Refer to [LT-55, "Trouble Diagnosis Chart by Symptom"](#).
5. Does the auto light system operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check SETTING CHANGE FUNCTIONS

EKS005MA

- Sensitivity of auto light system can be adjusted using CONSULT-II. Refer to [LT-51, "WORK SUPPORT"](#).

CHECK BCM CONFIGURATION

1. CHECK BCM CONFIGURATION

Confirm BCM configuration for "AUTO LIGHT" is set to "WITH". Refer to [BCS-14, "READ CONFIGURATION PROCEDURE"](#).

OK or NG

- OK >> Continue preliminary check. Refer to [LT-48, "CHECK POWER SUPPLY AND GROUND CIRCUIT"](#).
- NG >> Change BCM configuration for "AUTO LIGHT" to "WITH". Refer to [BCS-16, "WRITE CONFIGURATION PROCEDURE"](#).

CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES OR FUSIBLE LINK

Check for blown fuses or fusible link.

| Unit | Power source | Fuse No. |
|----------|--------------------------------------|----------|
| BCM | Battery | j |
| | | 3 |
| | Ignition switch ON or START position | 16 |
| | Ignition switch ACC or ON position | 4 |
| IPDM E/R | Battery | 34 |
| | | 36 |
| | | 38 |
| | | 40 |
| | | 41 |
| | | 45 |

AUTO LIGHT SYSTEM

Refer to [LT-43, "Wiring Diagram — AUTO/L —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

| Terminals | | (-) | Ignition switch position | | |
|-----------|--------------------------|--------|--------------------------|-----------------|-----------------|
| Connector | Terminal (Wire color) | | OFF | ACC | ON |
| M18 | 11 (V) | Ground | 0V | Battery voltage | Battery voltage |
| | 38 (G) | | 0V | 0V | Battery voltage |
| M19 | 42 (Y/G) | | Battery voltage | Battery voltage | Battery voltage |
| | 55 (W/B) | | Battery voltage | Battery voltage | Battery voltage |

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse.

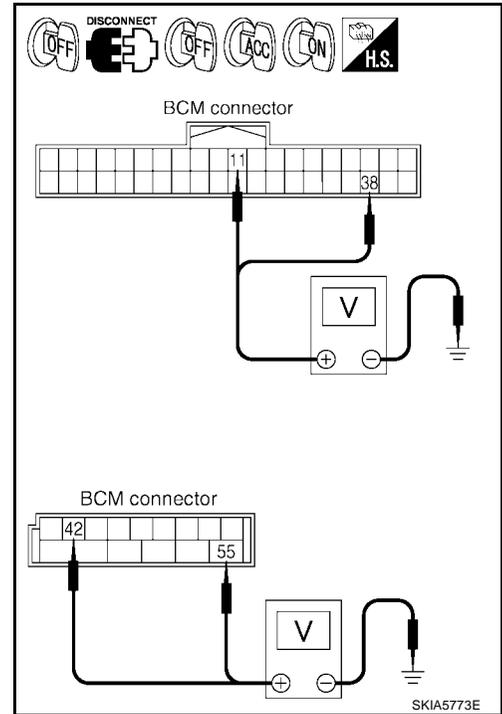

3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

| Terminals | | | Continuity |
|-----------|--------------------------|--------|------------|
| Connector | Terminal (Wire color) | | |
| M19 | 52 (B/W) | Ground | Yes |

OK or NG

OK >> Inspection End.

NG >> Check ground circuit harness.

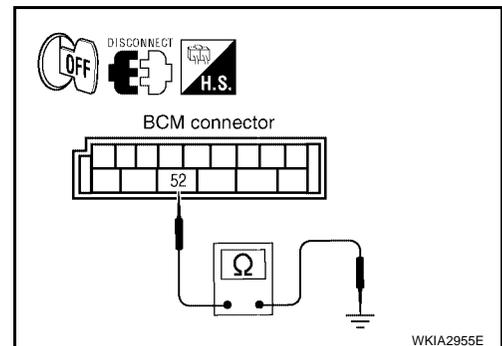

AUTO LIGHT SYSTEM

CONSULT-II Function (BCM)

EKS005MB

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


| BCM diagnostic test item | Diagnostic mode | Description |
|--------------------------|-----------------------|--|
| Inspection by part | WORK SUPPORT | Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed. |
| | DATA MONITOR | Displays BCM input/output data in real time. |
| | ACTIVE TEST | Operation of electrical loads can be checked by sending drive signal to them. |
| | SELF-DIAG RESULTS | Displays BCM self-diagnosis results. |
| | CAN DIAG SUPPORT MNTR | The result of transmit/receive diagnosis of CAN communication can be read. |
| | ECU PART NUMBER | BCM part number can be read. |
| | CONFIGURATION | Performs BCM configuration read/write functions. |

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

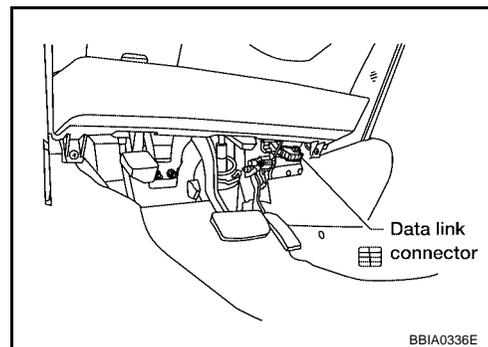

2. Touch "START (NISSAN BASED VHCL)".

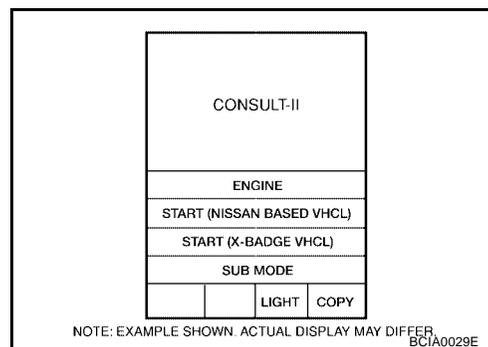


3. Touch "BCM" on "SELECT SYSTEM" screen.
If "BCM" is not indicated, go to [GI-37, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

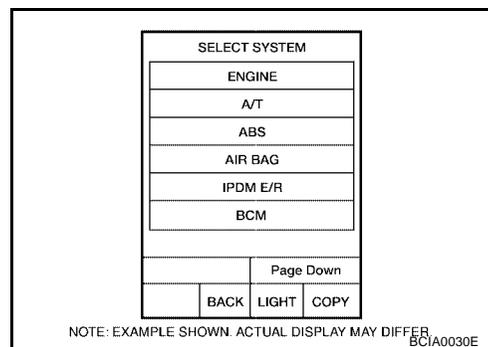

AUTO LIGHT SYSTEM

4. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.

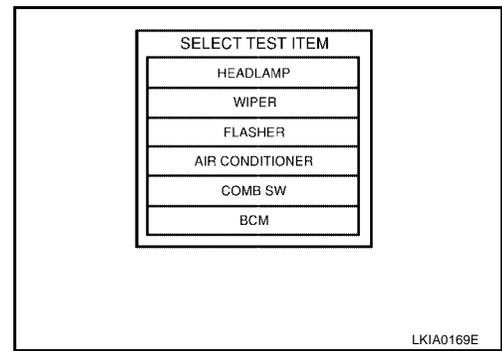

WORK SUPPORT

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch "CUSTOM A/LIGHT SETTING" or "ILL DELAY SET" on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "MODE 1-4" of setting to be changed (CUSTOM A/LIGHT SETTING). Touch "MODE1-8" of setting to be changed (ILL DELAY SET).
6. Touch "CHANGE SETT".
7. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
8. Touch "END".

Work Support Setting Item

- Sensitivity of auto light can be selected and set from four modes.

| Work item | Description |
|------------------------|---|
| CUSTOM A/LIGHT SETTING | Auto light sensitivity can be changed in this mode. Sensitivity can be adjusted in four modes. ● MODE 1 (Normal)/ MODE 2 (Sensitive)/MODE 3 (Desensitized)/MODE4 (Insensitive) |
| ILL DELAY SET | Auto light delay off timer period can be changed in this mode. Selects auto light delay off timer period among eight modes. ● MODE 1 (45 sec.)/MODE 2 (OFF)/MODE 3 (30 sec.)/MODE 4 (60 sec.)/MODE 5 (90 sec.)/MODE 6 (120 sec.)/MODE 7 (150 sec.)/MODE 8 (180 sec.) |

DATA MONITOR

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

| | |
|---------------------|---|
| All signals | Monitors all the signals. |
| Selection from menu | Selects and monitors individual signal. |

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch individual items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

| Monitor item | Contents |
|---------------------|--|
| IGN ON SW "ON/OFF" | Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal. |
| ACC ON SW "ON/OFF" | Displays "ACC (ON)/OFF, Ignition OFF (OFF)" status judged from ignition switch signal. |
| HI BEAM SW "ON/OFF" | Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal. |

AUTO LIGHT SYSTEM

| Monitor item | Contents |
|------------------------------|---|
| HEAD LAMP SW 1 "ON/OFF" | Displays status (headlamp switch 1: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal. |
| HEAD LAMP SW 2 "ON/OFF" | Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal. |
| LIGHT SW 1ST "ON/OFF" | Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal. |
| AUTO LIGHT SW "ON/OFF" | Displays status of the lighting switch as judged from the lighting switch signal. (AUTO position: ON/Other than AUTO position: OFF) |
| PASSING SW "ON/OFF" | Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal. |
| FR FOG SW "ON/OFF" | Displays status (front fog lamp switch: ON/Others: OFF) of front fog lamp switch judged from lighting switch signal. |
| DOOR SW-DR "ON/OFF" | Displays status of the driver door as judged from the driver door switch signal. (Door is open: ON/Door is closed: OFF) |
| DOOR SW-AS "ON/OFF" | Displays status of the passenger door as judged from the passenger door switch signal. (Door is open: ON/Door is closed: OFF) |
| DOOR SW-RR "ON/OFF" | Displays status of the sliding door as judged from the sliding door switch (RH) signal. (Door is open: ON/Door is closed: OFF) |
| DOOR SW-RL "ON/OFF" | Displays status of the sliding door as judged from the sliding door switch (LH) signal. (Door is open: ON/Door is closed: OFF) |
| BACK DOOR SW "ON/OFF" | Displays status of the back door as judged from the back door switch signal. (Door is open: ON/Door is closed: OFF) |
| TURN SIGNAL R "ON/OFF" | Displays status (Turn right: ON/Others: OFF) as judged from lighting switch signal. |
| TURN SIGNAL L "ON/OFF" | Displays status (Turn left: ON/Others: OFF) as judged from lighting switch signal. |
| CARGO LAMP SW "ON/OFF" | Displays status of cargo lamp. |
| OPTICAL SENSOR [0 - 5V] | Displays "ambient light (close to 5V when dark/close to 0V when light)" judged from optical sensor signal. |

ACTIVE TEST

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

Display Item List

| Test item | Description |
|----------------|--|
| TAIL LAMP | Allows tail lamp relay to operate by switching ON-OFF. |
| HEAD LAMP | Allows headlamp relay (HI, LO) to operate by switching ON-OFF. |
| FR FOG LAMP | Allows fog lamp relay to operate by switching ON-OFF. |
| CARGO LAMP | Allows cargo lamp to operate by switching ON-OFF. |
| CORNERING LAMP | Allows cornering lamp relay (RH, LH) to operate by switching ON-OFF. |

CONSULT-II Function (IPDM E/R)

EKS005MC

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.

| IPDM E/R diagnostic Mode | Description |
|--------------------------|---|
| SELF-DIAG RESULTS | Displays IPDM E/R self-diagnosis results. |
| DATA MONITOR | Displays IPDM E/R input/output data in real time. |
| CAN DIAG SUPPORT MNTR | The result of transmit/receive diagnosis of CAN communication can be read. |
| ACTIVE TEST | Operation of electrical loads can be checked by sending drive signal to them. |


AUTO LIGHT SYSTEM

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn the ignition switch ON.

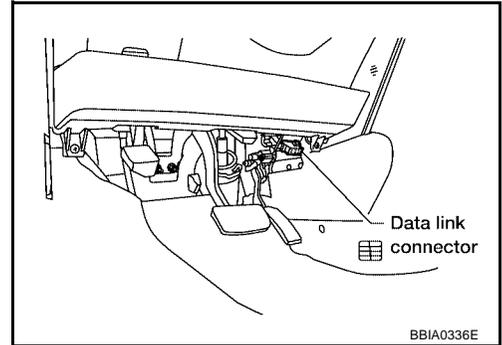


2. Touch "START (NISSAN BASED VHCL)".

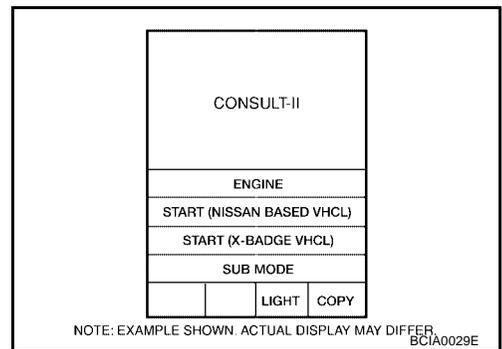

3. Touch "IPDM E/R" on "SELECT SYSTEM" screen.
If "IPDM E/R" is not displayed, go to [GI-37, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

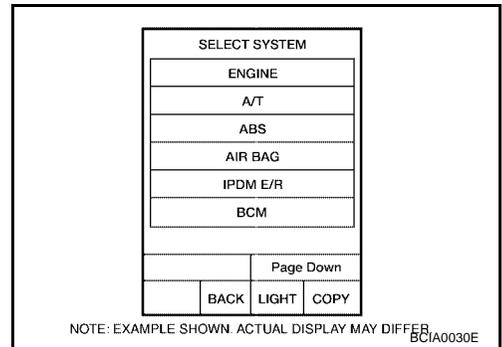

4. Select the desired part to be diagnosed on the "SELECT DIAG MODE" screen.

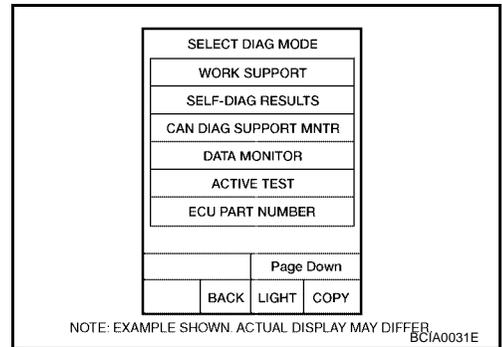

DATA MONITOR

Operation Procedure

1. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Touch "ALL SIGNALS", "MAIN SIGNALS" or "SELECT FROM MENU" on the "SELECT MONITOR ITEM" screen.

AUTO LIGHT SYSTEM

| | |
|------------------|---------------------------------|
| ALL SIGNALS | All items will be monitored. |
| MAIN SIGNALS | Monitor the predetermined item. |
| SELECT FROM MENU | Select any item for monitoring. |

3. Touch "START".
4. Touch the required monitoring item on "SELECT ITEM MENU". In "ALL SIGNALS", all items are monitored. In "MAIN SIGNALS", predetermined items are monitored.
5. Touch "RECORD" while monitoring to record the status of the item being monitored. To stop recording, touch "STOP".

All Items, Main Items, Select Item Menu

| Item name | CONSULT-II screen display | Display or unit | Monitor item selection | | | Description |
|----------------------------|---------------------------|-----------------|------------------------|--------------|------------------|------------------------------|
| | | | ALL SIGNALS | MAIN SIGNALS | SELECT FROM MENU | |
| Position lights request | TAIL&CLR REQ | ON/OFF | × | × | × | Signal status input from BCM |
| Headlamp low beam request | HL LO REQ | ON/OFF | × | × | × | Signal status input from BCM |
| Headlamp high beam request | HL HI REQ | ON/OFF | × | × | × | Signal status input from BCM |
| Front fog lights request | FR FOG REQ | ON/OFF | × | × | × | Signal status input from BCM |
| Cornering lamp | CRNRNG LMP REQ | ON/OFF | × | - | × | Signal status input from BCM |

NOTE:

Perform monitoring of IPDM E/R data with the ignition switch ON. When the ignition switch is at ACC, the display may not be correct.

ACTIVE TEST

Operation Procedure

1. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Touch item to be tested, and check operation.
3. Touch "START".
4. Touch "STOP" while testing to stop the operation.

| Test item | CONSULT-II screen display | Description |
|--------------------------------------|---------------------------|---|
| Tail lamp relay output | TAIL LAMP | Allows tail lamp relay to operate by switching operation ON-OFF at your option. |
| Headlamp relay (HI, LO) output | LAMPS | Allows headlamp relay (HI, LO) to operate by switching operation (OFF, HI, LO) at your option (Headlamp high beam repeats ON-OFF every 1 second). |
| Front fog lamp relay output | | Allows fog lamp relay to operate by switching operation ON-OFF at your option. |
| Cornering lamp relay (RH, LH) output | CORNERING LAMP | Allows cornering lamp relay (RH, LH) to operate by switching operation ON-OFF at your option. |

AUTO LIGHT SYSTEM

Trouble Diagnosis Chart by Symptom

EKS005MD

| Trouble phenomenon | Malfunction system and reference |
|--|---|
| <ul style="list-style-type: none"> ● Parking lamps and headlamps will not illuminate when outside of the vehicle becomes dark. (Lighting switch 1st position and 2nd position operate normally.) ● Parking lamps and headlamp will not go out when outside of the vehicle becomes light. (Lighting switch 1st position and 2nd position operate normally.) ● Headlamps go out when outside of the vehicle becomes light, but parking lamps stay on. | <ul style="list-style-type: none"> ● Refer to LT-51, "WORK SUPPORT" . ● Refer to LT-55, "Lighting Switch Inspection" . ● Refer to LT-56, "Optical Sensor System Inspection" . <p>If above systems are normal, replace BCM. Refer to BCS-19, "Removal and Installation of BCM" .</p> |
| <p>Parking lamps illuminate when outside of the vehicle becomes dark, but headlamps stay off. (Lighting switch 1st position and 2nd position operate normally.)</p> | <ul style="list-style-type: none"> ● Refer to LT-51, "WORK SUPPORT" . ● Refer to LT-56, "Optical Sensor System Inspection" . <p>If above systems are normal, replace BCM. Refer to BCS-19, "Removal and Installation of BCM" .</p> |
| <p>Auto light adjustment system will not operate. (Lighting switch AUTO, 1st position and 2nd position operate normally.)</p> | <ul style="list-style-type: none"> ● Refer to LT-56, "Optical Sensor System Inspection" . <p>If above systems is normal, replace BCM. Refer to BCS-19, "Removal and Installation of BCM" .</p> |
| <p>Auto light adjustment system will not operate.</p> | <ul style="list-style-type: none"> ● CAN communication line to BCM inspection. Refer to BCS-13, "CAN Communication Inspection Using CONSULT-II (Self-Diagnosis)" . |
| <p>Shut off delay feature will not operate.</p> | <ul style="list-style-type: none"> ● CAN communication line inspection between BCM and combination meter. Refer to BCS-13, "CAN Communication Inspection Using CONSULT-II (Self-Diagnosis)" . ● Refer to BL-41, "Door Switch Check (Without Automatic Back Door System)" . <p>If above systems is normal, replace BCM. Refer to BCS-19, "Removal and Installation of BCM" .</p> |

Lighting Switch Inspection

EKS005ME

1. CHECK LIGHTING SWITCH INPUT SIGNAL

④ With CONSULT-II
 Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "AUTO LIGHT SW" turns ON-OFF linked with operation of lighting switch.

When lighting switch is in AUTO position : AUTO LIGHT SW ON

⊗ Without CONSULT-II
 Refer to [LT-104, "Combination Switch Inspection"](#) .

OK or NG

- OK >> Inspection End.
- NG >> Check lighting switch. Refer to [LT-104, "Combination Switch Inspection"](#) .

| DATA MONITOR | |
|---------------|----|
| MONITOR | |
| AUTO LIGHT SW | ON |

SKIA4196E

LT
L
M

AUTO LIGHT SYSTEM

EKS005MF

Optical Sensor System Inspection

1. CHECK OPTICAL SENSOR INPUT SIGNAL

④ With CONSULT-II

Select "BCM" on CONSULT-II. With "OPTICAL SENSOR" data monitor, check difference in the voltage when the optical sensor is illuminated and not illuminated.

Illuminated

OPTICAL SENSOR : 3.1V or more

Not illuminated

OPTICAL SENSOR : 0.6V or less

CAUTION:

Optical sensor must be completely subjected to work lamp light. If the optical sensor is insufficiently illuminated, the measured value may not satisfy the standard.


⊗ Without CONSULT-II

GO TO 2.

OK or NG

OK >> Inspection End.

NG >> GO TO 2.

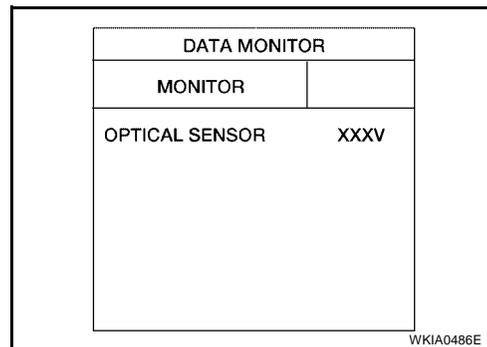


2. CHECK OPTICAL SENSOR SIGNAL GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and optical sensor connector.
3. Check continuity (open circuit) between BCM harness connector M18 terminal 18 (P) and optical sensor harness connector M402 terminal 3 (P).

18 (P) - 3 (P) : Continuity should exist.

4. Check continuity (short circuit) between BCM harness connector M18 terminal 18 (P) and ground.

18 (P) - Ground : Continuity should not exist.

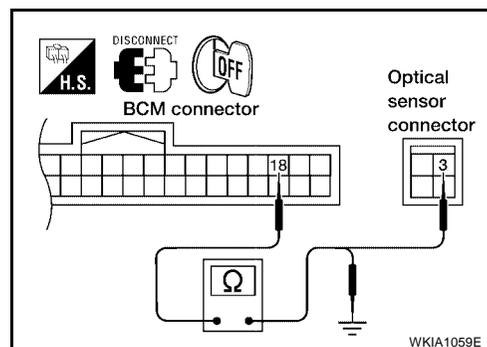

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.

3. CHECK OPTICAL SENSOR SIGNAL CIRCUIT

1. Check continuity (open circuit) between BCM harness connector M19 terminal 43 (W/R) and optical sensor harness connector M402 terminal 4 (W/R).

43 (W/R) - 4 (W/R) : Continuity should exist.


2. Check continuity (short circuit) between BCM harness connector M19 terminal 43 (W/R) and ground.

43 (W/R) - Ground : Continuity should not exist.

OK or NG

OK >> Replace optical sensor. Refer to [LT-57, "Removal and Installation of Optical Sensor"](#) . Recheck sensor output with CONSULT-II. If NG, replace BCM. Refer to [BCS-19, "Removal and Installation of BCM"](#) .

NG >> Repair harness or connector.

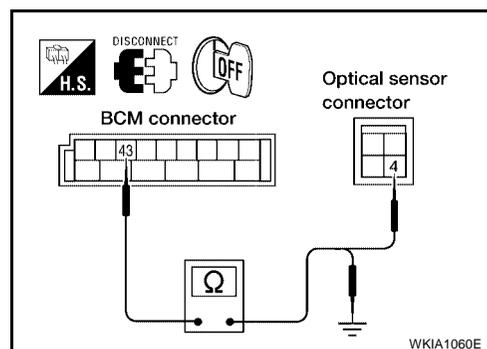


AUTO LIGHT SYSTEM

Removal and Installation of Optical Sensor

EKS005MG

1. Remove defrost grille. Refer to [IP-10, "Removal and Installation"](#).
2. Disconnect the connector.
3. Turn the optical sensor counterclockwise to remove it from defroster grille.

Installation is in the reverse order of removal.

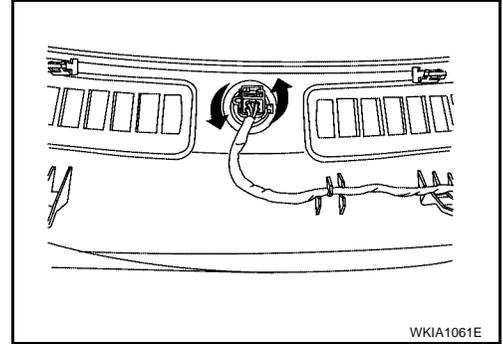

A

B

C

D

E

F

G

H

I

J

LT

L

M


FRONT FOG LAMP

PF26150

FRONT FOG LAMP

Component Parts and Harness Connector Location

EKS005MH

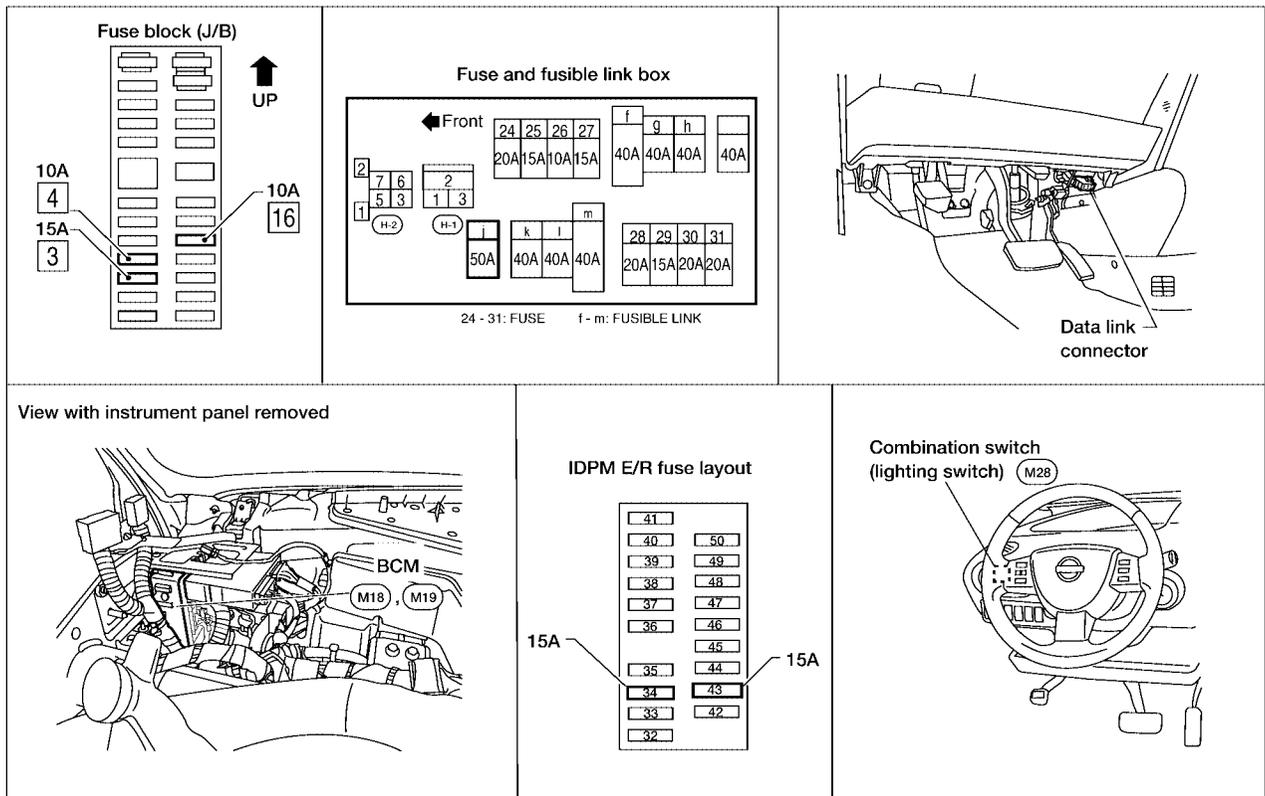

WKIA3448E

System Description

EKS005MI

Control of the fog lamps is dependent upon the position of the combination switch (lighting switch). The lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) for front fog lamp operation. When the lighting switch is placed in the fog lamp position, the BCM (body control module) receives input signal requesting the fog lamps to illuminate. When the headlamps are illuminated, this input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the front fog lamp relay coil. When activated, this relay directs power to the front fog lamps.

OUTLINE

Power is supplied at all times

- through 15A fuse (No. 43, located in the IPDM E/R)
- to front fog lamp relay, located in the IPDM E/R, and
- to ignition relay, located in the IPDM E/R, and
- through 15A fuse (No. 34, located in the IPDM E/R)
- to CPU in the IPDM E/R, and
- through 50A fusible link (letter j, located in the fuse and fusible link box)
- to BCM terminal 55, and
- through 15A fuse [No. 3, located in the fuse block (J/B)]
- to BCM terminal 42.

When the ignition switch is in ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 16, located in the fuse block (J/B)]
- to BCM terminal 38.

When the ignition switch is in ACC or ON position, power is supplied

FRONT FOG LAMP

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 52
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 60
- through grounds E9, E15 and E24.

FOG LAMP OPERATION

The fog lamp switch is built into the combination switch. The lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) and the fog lamp switch must be ON for fog lamp operation.

With the fog lamp switch in the ON position, the CPU of the IPDM E/R grounds the coil side of the fog lamp relay. The fog lamp relay then directs power

- through IPDM E/R terminal 37
- to front fog lamp LH terminal +, and
- through IPDM E/R terminal 36
- to front fog lamp RH terminal +.

Ground is supplied

- to front fog lamp LH and RH terminal –
- through grounds E9, E15 and E24.

With power and ground supplied, the front fog lamps illuminate.

COMBINATION SWITCH READING FUNCTION

Refer to [LT-102, "Combination Switch Reading Function"](#) .

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON), the fog lamp switch is ON and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the fog lamps (and headlamps) remain illuminated for 5 minutes, then the fog lamps (and headlamps) are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

CAN Communication System Description

Refer to [LAN-5, "CAN COMMUNICATION"](#) .

EKS005MJ



LT

FRONT FOG LAMP

Wiring Diagram — F/FOG —

EKS005MK



LT-F/FOG-01

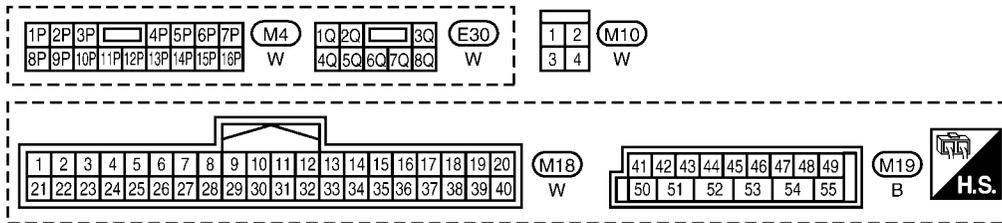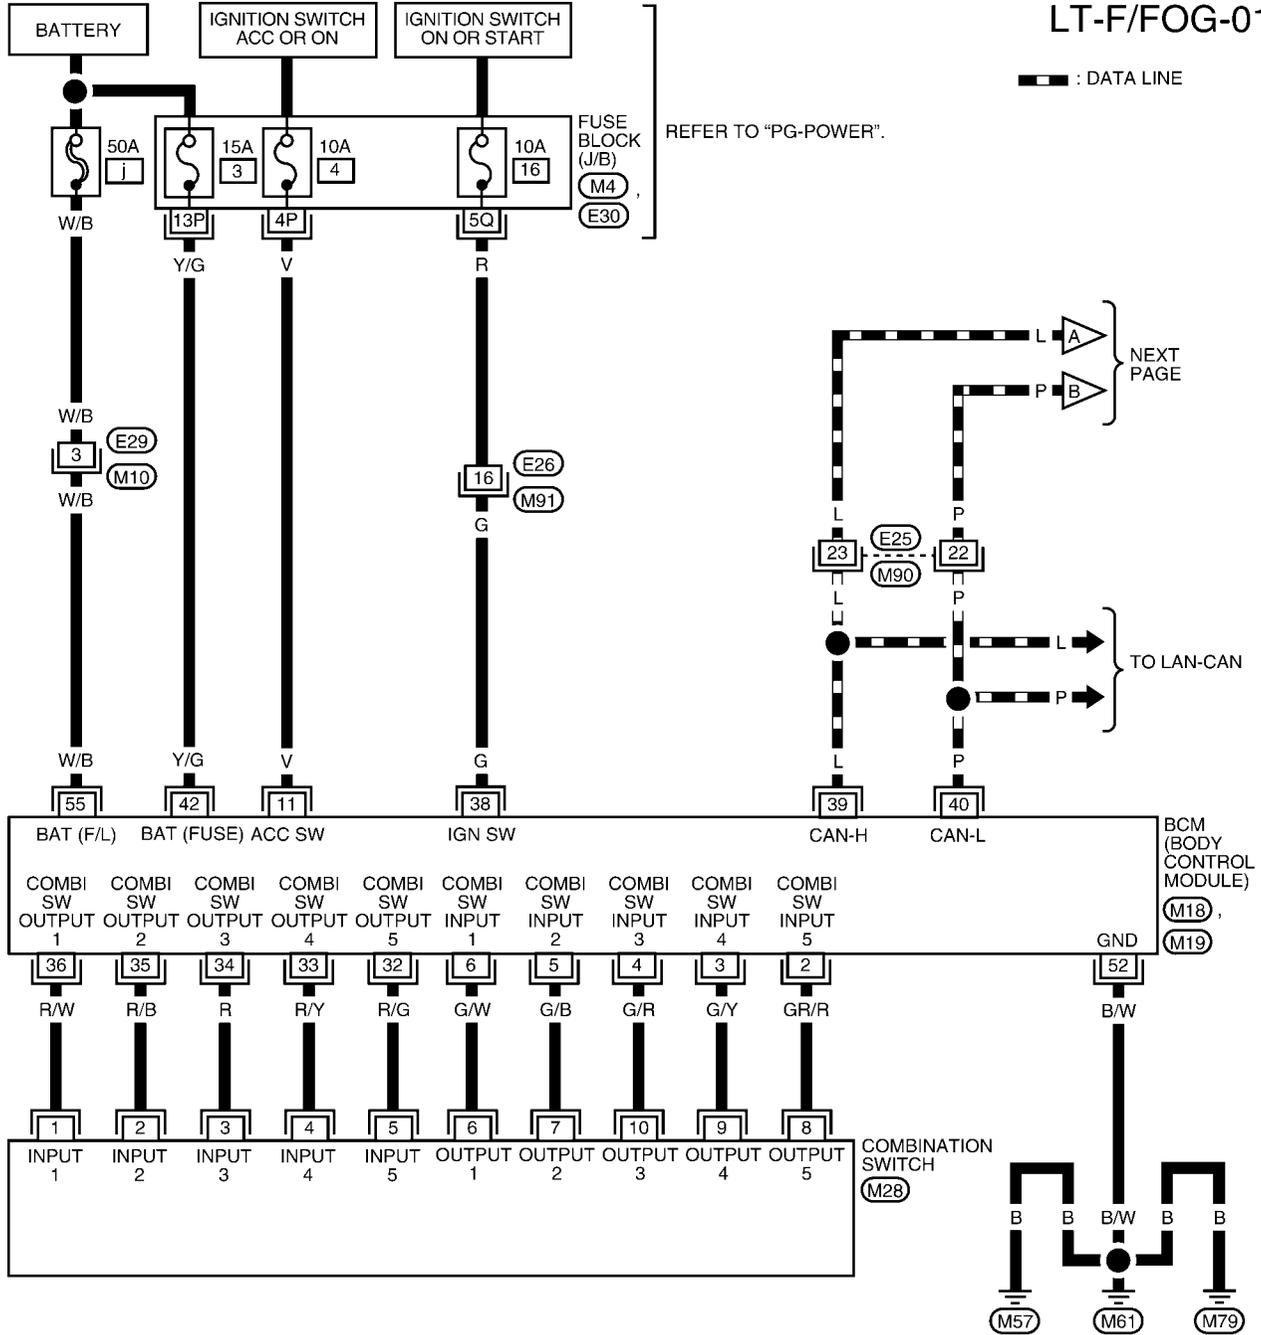

WKWA3909E

FRONT FOG LAMP

LT-F/FOG-02






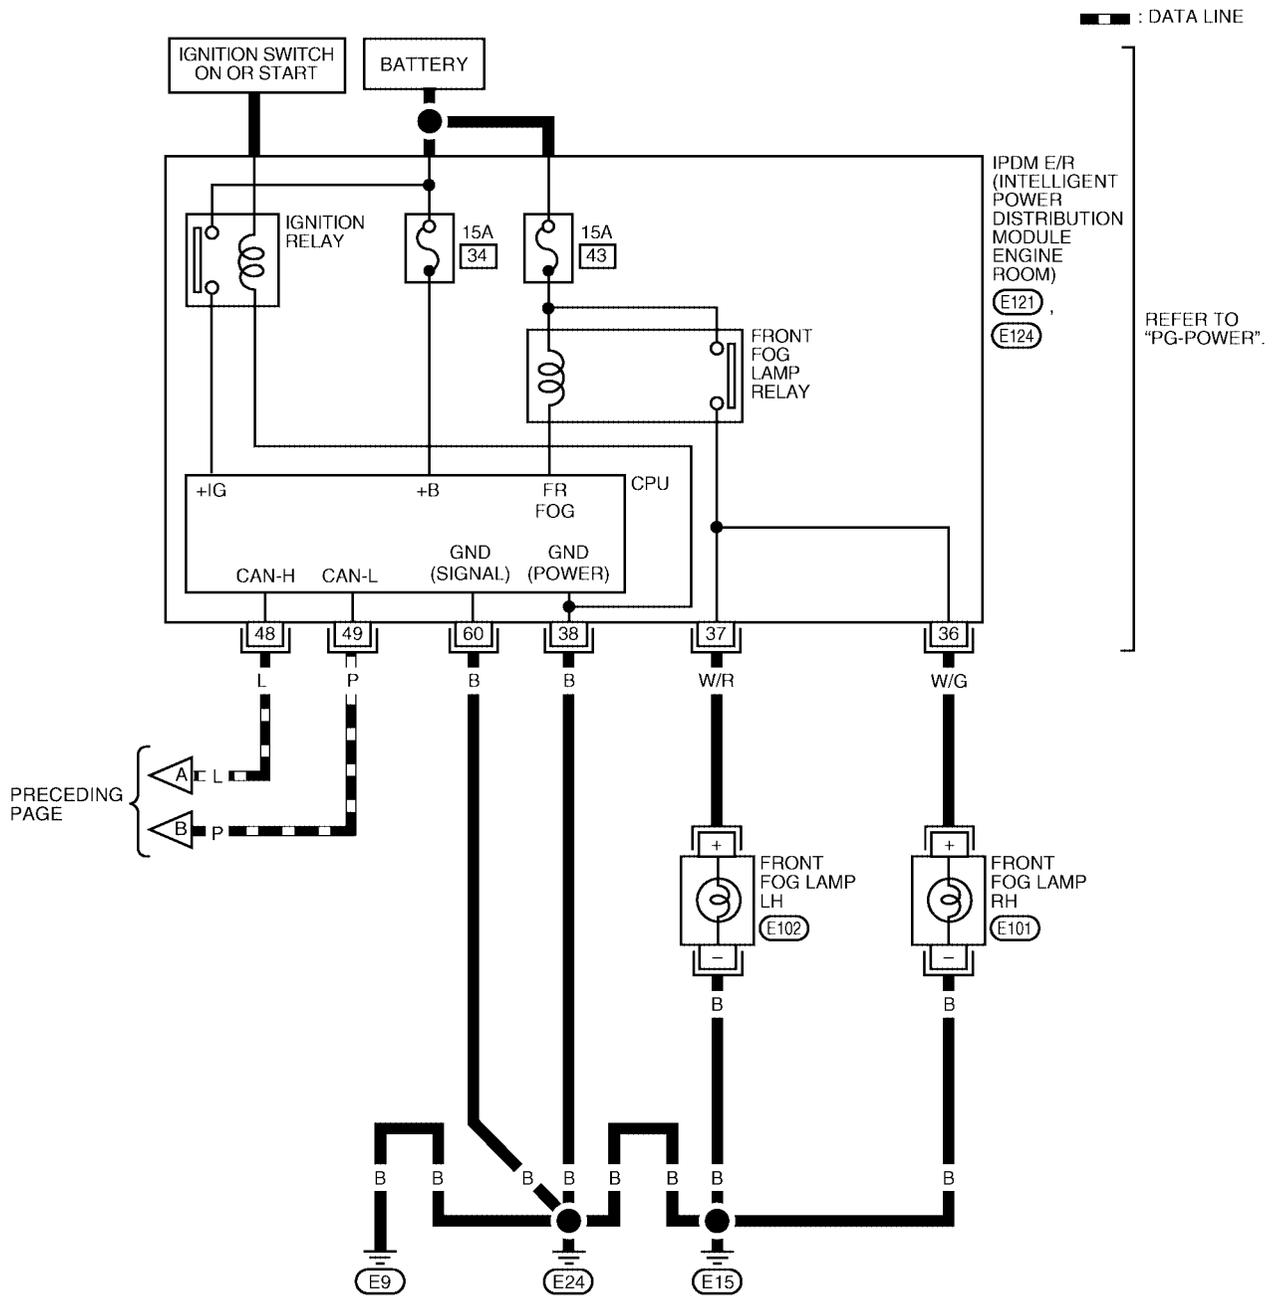


WKWA1924E

FRONT FOG LAMP

Terminals and Reference Values for BCM

EKS005ML
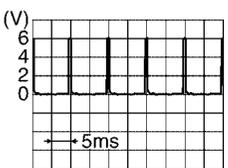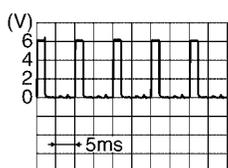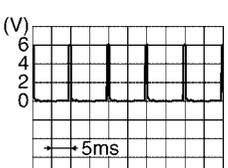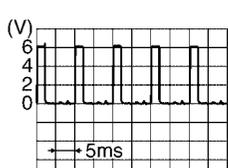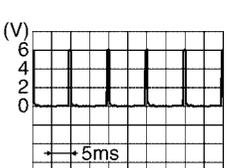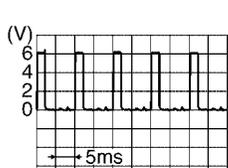
| Terminal No. | Wire color | Signal name | Measuring condition | | Reference value (Approx.) |
|--------------|------------|-----------------------------|---------------------|--|---|
| | | | Ignition switch | Operation or condition | |
| 2 | GR/R | Combination switch input 5 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right;">SKIA5291E</p> |
| 3 | G/Y | Combination switch input 4 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right;">SKIA5292E</p> |
| 4 | G/R | Combination switch input 3 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right;">SKIA5291E</p> |
| 5 | G/B | Combination switch input 2 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right;">SKIA5292E</p> |
| 6 | G/W | Combination switch input 1 | | | |
| 11 | V | Ignition switch (ACC) | ACC | — | Battery voltage |
| 32 | R/G | Combination switch output 5 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right;">SKIA5291E</p> |
| 33 | R/Y | Combination switch output 4 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right;">SKIA5292E</p> |
| 34 | R | Combination switch output 3 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right;">SKIA5291E</p> |

FRONT FOG LAMP

| Terminal No. | Wire color | Signal name | Measuring condition | | Reference value (Approx.) |
|--------------|------------|-------------------------------------|---------------------|--|---------------------------|
| | | | Ignition switch | Operation or condition | |
| 35 | R/B | Combination switch output 2 | ON | Lighting, turn, wiper OFF Wiper dial position 4 | |
| 36 | R/W | Combination switch output 1 | | | |
| 38 | G | Ignition switch (ON) | ON | — | Battery voltage |
| 39 | L | CAN-H | — | — | — |
| 40 | P | CAN-L | — | — | — |
| 42 | Y/G | Battery power supply | OFF | — | Battery voltage |
| 52 | B/W | Ground | ON | — | 0V |
| 55 | W/B | Battery power supply (fusible link) | OFF | — | Battery voltage |

Terminals and Reference Values for IPDM E/R

EKS005MM

| Terminal No. | Wire color | Signal name | Measuring condition | | Reference value (Approx.) |
|--------------|------------|---------------------|---------------------|--|---------------------------|
| | | | Ignition switch | Operation or condition | |
| 36 | W/G | Front fog lamp (RH) | ON | Lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) and the front fog lamp switch must be ON | OFF 0V |
| | | | | | ON Battery voltage |
| 37 | W/R | Front fog lamp (LH) | ON | Lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) and the front fog lamp switch must be ON | OFF 0V |
| | | | | | ON Battery voltage |
| 38 | B | Ground | ON | — | 0V |
| 48 | L | CAN-H | — | — | — |
| 49 | P | CAN-L | — | — | — |
| 60 | B | Ground | ON | — | 0V |

How to Proceed With Trouble Diagnosis

EKS005MN

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-58, "System Description"](#) .
3. Perform the Preliminary Check. Refer to [LT-64, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the front fog lamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

FRONT FOG LAMP

EKS005MO

Preliminary Check CHECK BCM CONFIGURATION

1. CHECK BCM CONFIGURATION

Confirm BCM configuration for "FR FOG LAMP" is set to "WITH". Refer to [BCS-14, "READ CONFIGURATION PROCEDURE"](#).

OK or NG

- OK >> Continue preliminary check. Refer to [LT-64, "CHECK POWER SUPPLY AND GROUND CIRCUIT"](#).
- NG >> Change BCM configuration for "FR FOG LAMP" to "WITH". Refer to [BCS-16, "WRITE CONFIGURATION PROCEDURE"](#).

CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES OR FUSIBLE LINK

Check for blown fuses or fusible link.

| Unit | Power source | Fuse No. |
|----------|--------------------------------------|----------|
| BCM | Battery | j |
| | | 3 |
| | Ignition switch ON or START position | 16 |
| IPDM E/R | Battery | 4 |
| | | 34 |
| | | 43 |

Refer to [LT-60, "Wiring Diagram — F/FOG —"](#).

OK or NG

- OK >> GO TO 2.
- NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).


2. CHECK POWER SUPPLY CIRCUIT

1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

| Terminals | | Ignition switch position | | | |
|-----------|-----------------------|--------------------------|-----------------|-----------------|-----------------|
| (+) | | (-) | OFF | ACC | ON |
| Connector | Terminal (Wire color) | | | | |
| M18 | 11 (V) | Ground | 0V | Battery voltage | Battery voltage |
| | 38 (G) | | 0V | 0V | Battery voltage |
| M19 | 42 (Y/G) | | Battery voltage | Battery voltage | Battery voltage |
| | 55 (W/B) | | Battery voltage | Battery voltage | Battery voltage |

OK or NG

- OK >> GO TO 3.
- NG >> Check harness for open between BCM and fuse.

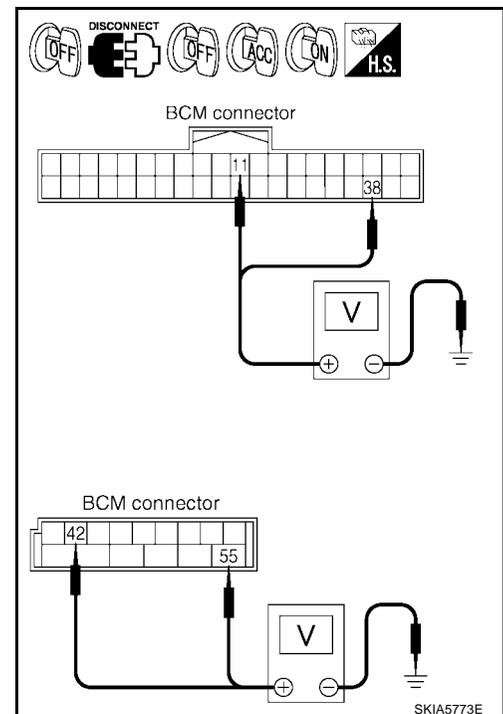

FRONT FOG LAMP


3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

| Terminals | | | Continuity |
|-----------|--------------------------|--------|------------|
| Connector | Terminal (Wire color) | | |
| M19 | 52 (B/W) | Ground | Yes |

OK or NG

- OK >> Inspection End.
- NG >> Check ground circuit harness.

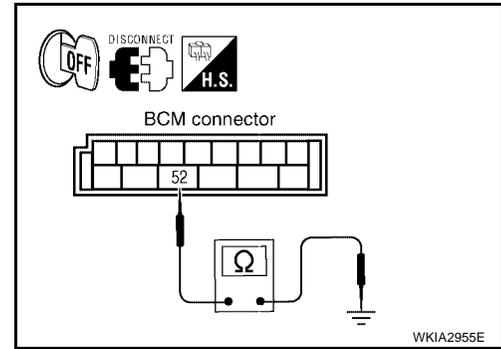

CONSULT-II Functions

Refer to [LT-15, "CONSULT-II Function \(BCM\)"](#) in HEADLAMP (FOR USA).
 Refer to [LT-18, "CONSULT-II Function \(IPDM E/R\)"](#) in HEADLAMP (FOR USA).

Front Fog Lamps Do Not Illuminate (Both Sides)


1. CHECK COMBINATION SWITCH INPUT SIGNAL

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "FR FOG SW" turns ON-OFF linked with operation of lighting switch.

When lighting switch is in FOG position : FR FOG SW ON

OK or NG

- OK >> GO TO 2.
- NG >> Check lighting switch. Refer to [LT-104, "Combination Switch Inspection"](#).

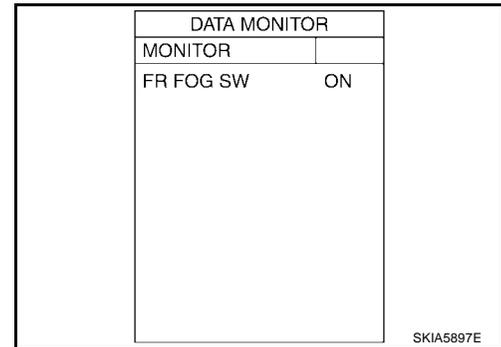


2. FOG LAMP ACTIVE TEST

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "FOG" on "ACTIVE TEST" screen.
4. Make sure fog lamps operate.

Fog lamps should operate.

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 4.

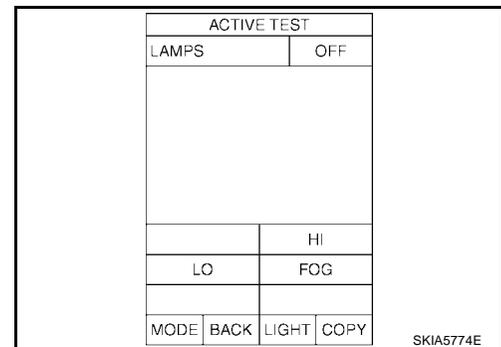

FRONT FOG LAMP


3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "FR FOG REQ" turns ON when lighting switch is in FOG position.

When lighting switch is in FOG position : FR FOG REQ ON

OK or NG


- OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#) .
- NG >> Replace BCM. Refer to [BCS-19, "Removal and Installation of BCM"](#) .

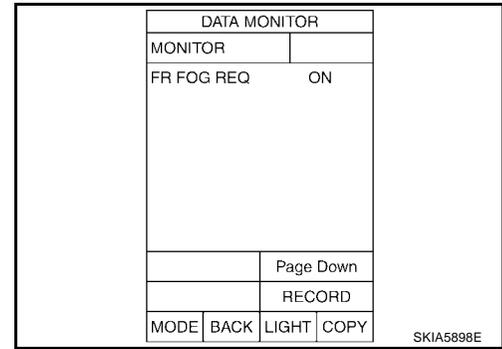

4. IPDM E/R INSPECTION

Start active test. Refer to [PG-22, "Auto Active Test"](#) . When front fog lamp relay is operating, check voltage between left/right front fog lamp connector terminals and body ground.

| Terminals | | | Voltage (Approx.) |
|--------------------|-----------------------|---------|-------------------|
| Front fog lamp (+) | | (-) | |
| Connector | Terminal (wire color) | | |
| Right | E101 | + (W/G) | Ground |
| Left | E102 | + (W/R) | |
| | | | Battery voltage |

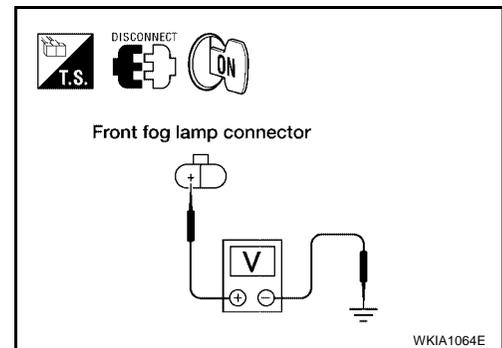

OK or NG

- OK >> Check front fog lamp bulbs and replace as necessary.
- NG >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#) .

Front Fog Lamp Does Not Illuminate (One Side)

EKS0066W

1. BULB INSPECTION

Inspect bulbs of lamps which do not illuminate.


OK or NG

- OK >> GO TO 2.
- NG >> Replace fog lamp bulb. Refer to [LT-68, "Bulb Replacement"](#) .

2. INSPECTION BETWEEN IPDM E/R AND FRONT FOG LAMPS

1. Disconnect IPDM E/R connector and inoperative front fog lamp connector.
2. Check continuity between harness connector terminals of IPDM E/R and harness connector terminal of front fog lamps.

| Terminals | | | | Continuity |
|-----------|-----------------------|----------------|-----------------------|------------|
| IPDM E/R | | Front fog lamp | | |
| Connector | Terminal (wire color) | Connector | Terminal (wire color) | |
| E124 | 36 (W/G) | Right | E101 | + (W/G) |
| | 37 (W/R) | Left | E102 | + (W/R) |
| | | | | Yes |

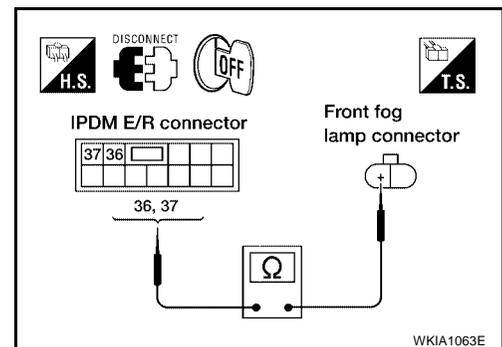

OK or NG

- OK >> Check ground circuit. If OK, replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#) . If NG, repair harness or connector.
- NG >> Check for short circuits and open circuits in harness between IPDM E/R and front fog lamps.

FRONT FOG LAMP


EKS0066X

Aiming Adjustment


The fog lamp is a semi-sealed beam type which uses a replaceable halogen bulb. Before performing aiming adjustment, make sure of the following.

- Keep all tires inflated to correct pressure.
- Place vehicle on level ground.
- See that vehicle is unloaded (except for full levels of coolant, engine oil and fuel, and spare tire, jack, and tools). Have the driver or equivalent weight placed in driver seat.


Adjust aiming in the vertical direction by turning the adjusting screw.

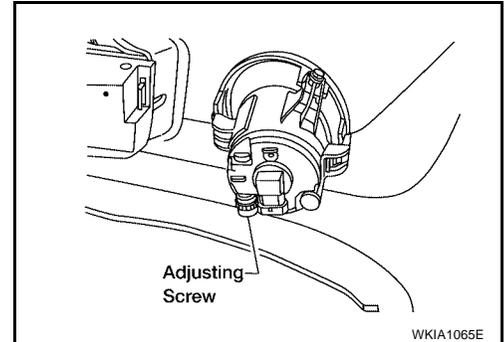

1. Set the distance between the screen and the center of the fog lamp lens as shown.
2. Turn front fog lamps ON.

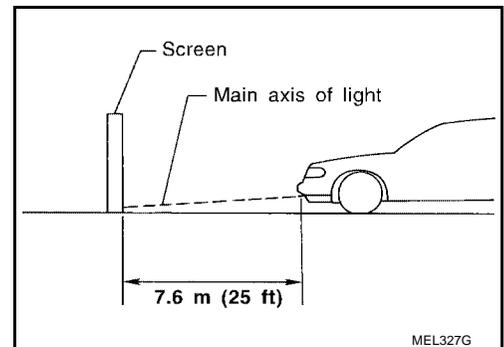

3. Adjust front fog lamps using adjusting screw so that the top edge of the high intensity zone is 100 mm (4 in) below the height of the fog lamp centers as shown.
- When performing adjustment, if necessary, cover the headlamps and opposite fog lamp.

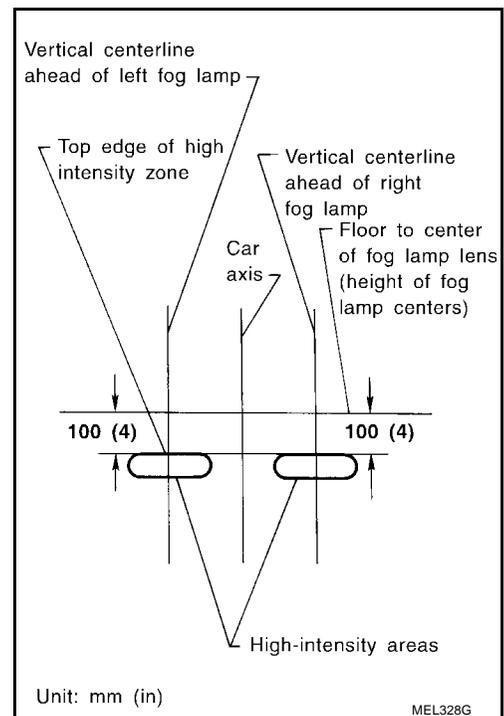

A
B
C
D
E
F
G
H
I
J
LT
L
M

FRONT FOG LAMP

Bulb Replacement


EKS005MT

1. Position the front fender protector aside.
2. Disconnect electrical connector.
3. Turn the bulb counterclockwise to remove it.

CAUTION:

- Do not touch the glass of bulb directly by hand. Keep grease and other oily substances away from it. Do not touch bulb by hand while it is lit or right after being turned off. Burning may result.
- Do not leave bulb out of fog lamp reflector for a long time because dust, moisture smoke, etc., may affect the performance of fog lamp. When replacing bulb, be sure to replace it with new one.

Installation is in the reverse order of removal.

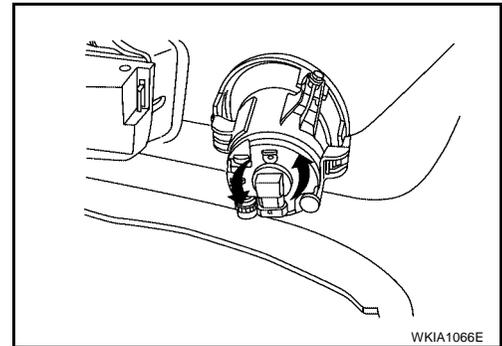

Removal and Installation

EKS0066Y


The fog lamp is a semi-sealed beam type which uses a replaceable halogen bulb.

CAUTION:

- Do not leave fog lamp assembly without bulb for a long period of time. Dust, moisture, smoke, etc. entering the fog lamp body may affect the performance. Remove the bulb from the headlamp assembly just before replacement bulb is installed.
- Grasp only the plastic base when handling the bulb. Never touch the glass envelope. Touching the glass could significantly affect the bulb life and/or fog lamp performance.

1. Position the fender protector aside.
2. Disconnect electrical connector.
3. Remove bolt and pull fog lamp out of front fascia.

Installation is in the reverse order of removal.

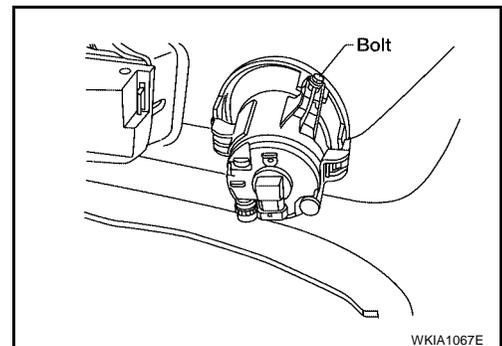


TURN SIGNAL AND HAZARD WARNING LAMPS

PFP:26120

EKS005MV

TURN SIGNAL AND HAZARD WARNING LAMPS

Component Parts and Harness Connector Location

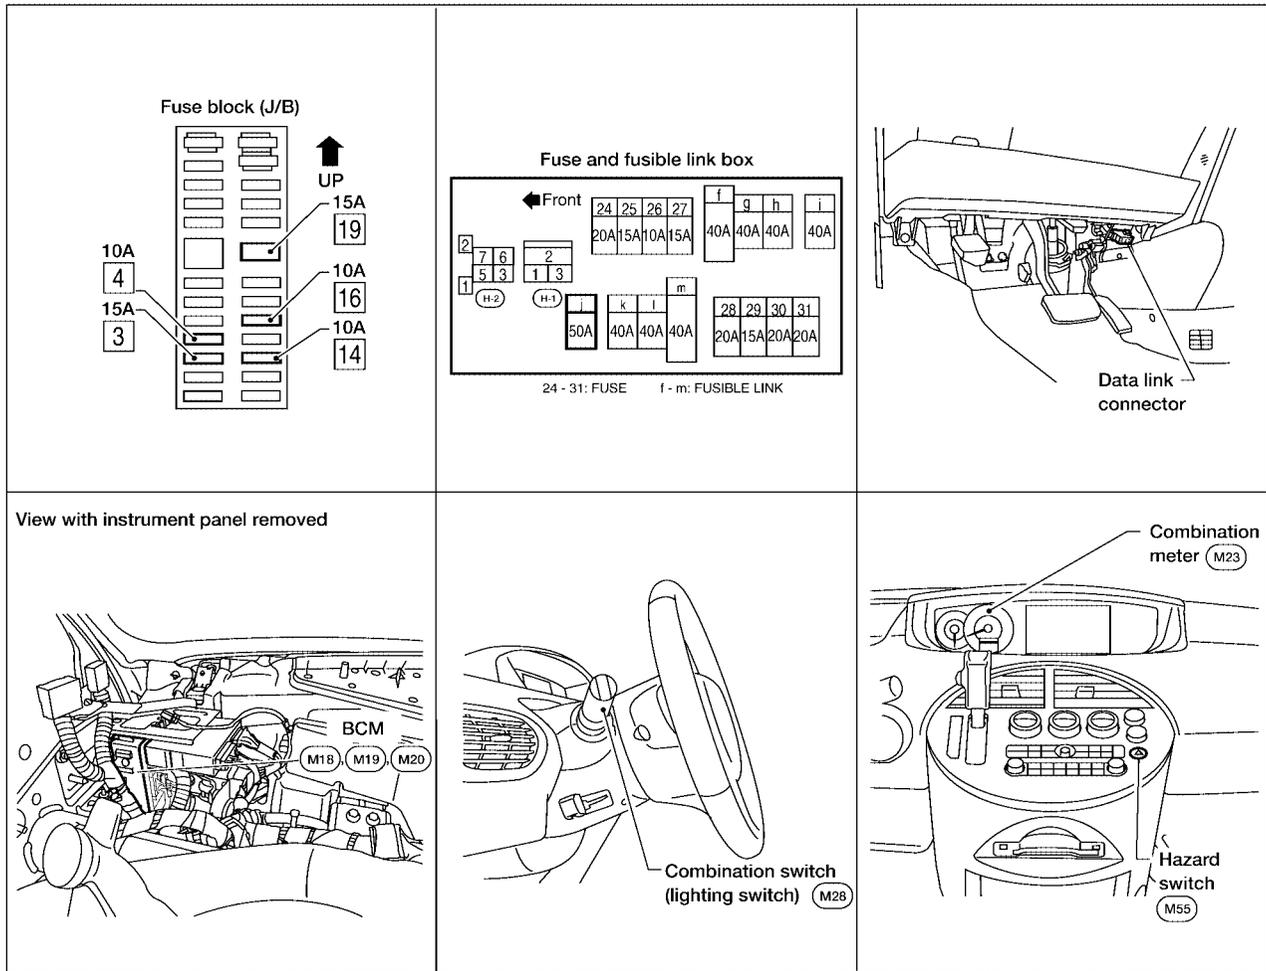

WKIA3143E

System Description OUTLINE

Power is supplied at all times

- through 50A fusible link (letter j , located in the fuse and fusible link box)
- to BCM (body control module) terminal 55, and
- through 15A fuse [No. 3, located in the fuse block (J/B)]
- to BCM terminal 42, and
- through 15A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 31.

TURN SIGNAL OPERATION

When the ignition switch is in the ON or START position, power is supplied

- through 10A fuse [No. 16, located in the fuse block (J/B)]
- to BCM terminal 38, and
- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to combination meter terminal 30.

Ground is supplied

- to BCM terminal 52 and
- to combination meter terminal 32
- through grounds M57, M61 and M79.

A
B
C
D
E
F
G
H
I
J

LT

L
M

TURN SIGNAL AND HAZARD WARNING LAMPS

LH Turn

When the turn signal switch is moved to the left position, BCM outputs turn signal from BCM terminal 45, interpreting it as turn signal is ON.

The BCM supplies power

- through terminal 45
- to front combination lamp LH terminal 2
- through front combination lamp LH terminal 1
- to grounds E9, E15 and E24, and
- to rear combination lamp LH terminal 3
- through rear combination lamp LH terminal 5
- to grounds B7 and B19.

BCM sends signal to combination meter through CAN communication lines and turns on turn signal indicator lamp within combination meter.

RH Turn

When the turn signal switch is moved to the right position, BCM outputs turn signal from BCM terminal 46, interpreting it as turn signal is ON.

The BCM supplies power

- through terminal 46
- to front combination lamp RH terminal 2
- through front combination lamp RH terminal 1
- to grounds E9, E15 and E24, and
- to rear combination lamp RH terminal 3
- through rear combination lamp terminal 5
- to grounds B117 and B132.

BCM sends signal to combination meter through CAN communication lines and turns on turn signal indicator lamp within combination meter.

HAZARD LAMP OPERATION

Power is supplied at all times

- through 50A fusible link (letter j , located in the fuse and fusible link box)
- to BCM terminal 55, and
- through 15A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 31.

Ground is supplied

- to BCM terminal 52 and
- to combination meter terminal 32
- through grounds M57, M61 and M79.

When the hazard switch is depressed, ground is supplied

- to BCM terminal 29
- through hazard switch terminal 2
- through hazard switch terminal 1
- through grounds M57, M61 and M79.

When the hazard switch is depressed, BCM outputs turn signal from BCM terminals 45 and 46, interpreting it as turn signal is ON.

The BCM supplies power

- through terminals 45 and 46
- to front combination lamp LH and RH terminal 2
- through front combination lamp LH and RH terminal 1
- to grounds E9, E15 and E24, and
- to rear combination lamp LH terminal 3
- through rear combination lamp LH terminal 5

TURN SIGNAL AND HAZARD WARNING LAMPS

- to grounds B7 and B19, and
- to rear combination lamp RH terminal 3
- through rear combination lamp terminal 5
- to grounds B117 and B132.

BCM sends signal to combination meter through CAN communication lines and turns on turn signal indicator lamps within combination meter.

REMOTE KEYLESS ENTRY SYSTEM OPERATION

Power is supplied at all times

- through 50A fusible link (letter j , located in the fuse and fusible link box)
- to BCM terminal 55, and
- through 15A fuse [No. 3, located in the fuse block (J/B)]
- to BCM terminal 42, and
- through 15A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 31.

Ground is supplied

- to BCM terminal 52 and
- to combination meter terminal 32
- through grounds M57, M61 and M79.

When the remote keyless entry system is triggered by input from the keyfob, BCM output turn signal from BCM terminals 45 and 46, interpreting it as turn signal is ON.

The BCM supplies power

- through terminals 45 and 46
- to front combination lamp LH and RH terminal 2
- through front combination lamp LH and RH terminal 1
- to grounds E9, E15 and E24, and
- to rear combination lamp LH terminal 3
- through rear combination lamp LH terminal 5
- to grounds B7 and B19, and
- to rear combination lamp RH terminal 3
- through rear combination lamp terminal 5
- to grounds B117 and B132.

BCM sends signal to combination meter through CAN communication lines and turns on turn signal indicator lamps within combination meter.

With power and input supplied, the BCM controls the flashing of the hazard warning lamps when keyfob is used to activate the remote keyless entry system.

COMBINATION SWITCH READING FUNCTION

Refer to [LT-102, "Combination Switch Reading Function"](#) .

CAN Communication System Description

Refer to [LAN-5, "CAN COMMUNICATION"](#) .


A
B
C
D
E
F
G
H
I
J
LT
L
M

EKS005MX

TURN SIGNAL AND HAZARD WARNING LAMPS

Schematic

EKS005MY

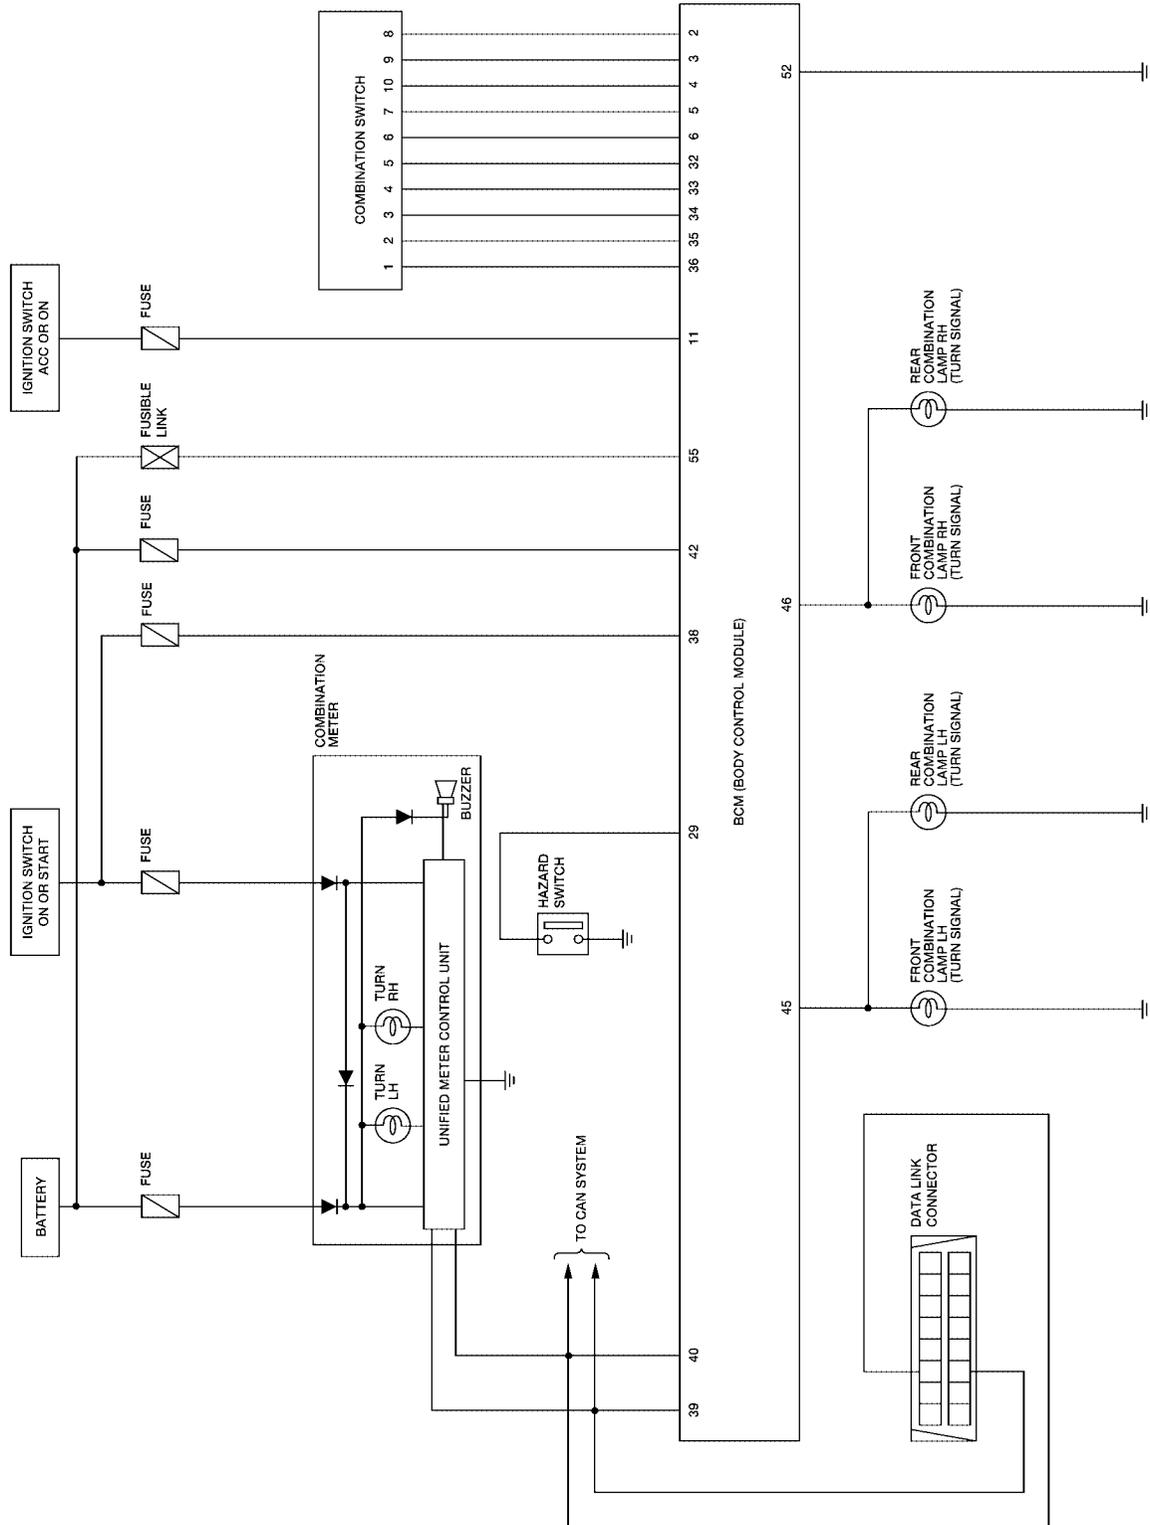





WKWA3910E

TURN SIGNAL AND HAZARD WARNING LAMPS

Wiring Diagram — TURN —

EKS005MZ


LT-TURN-01

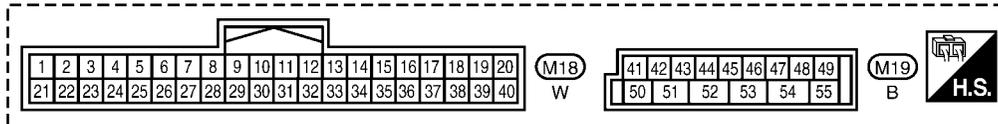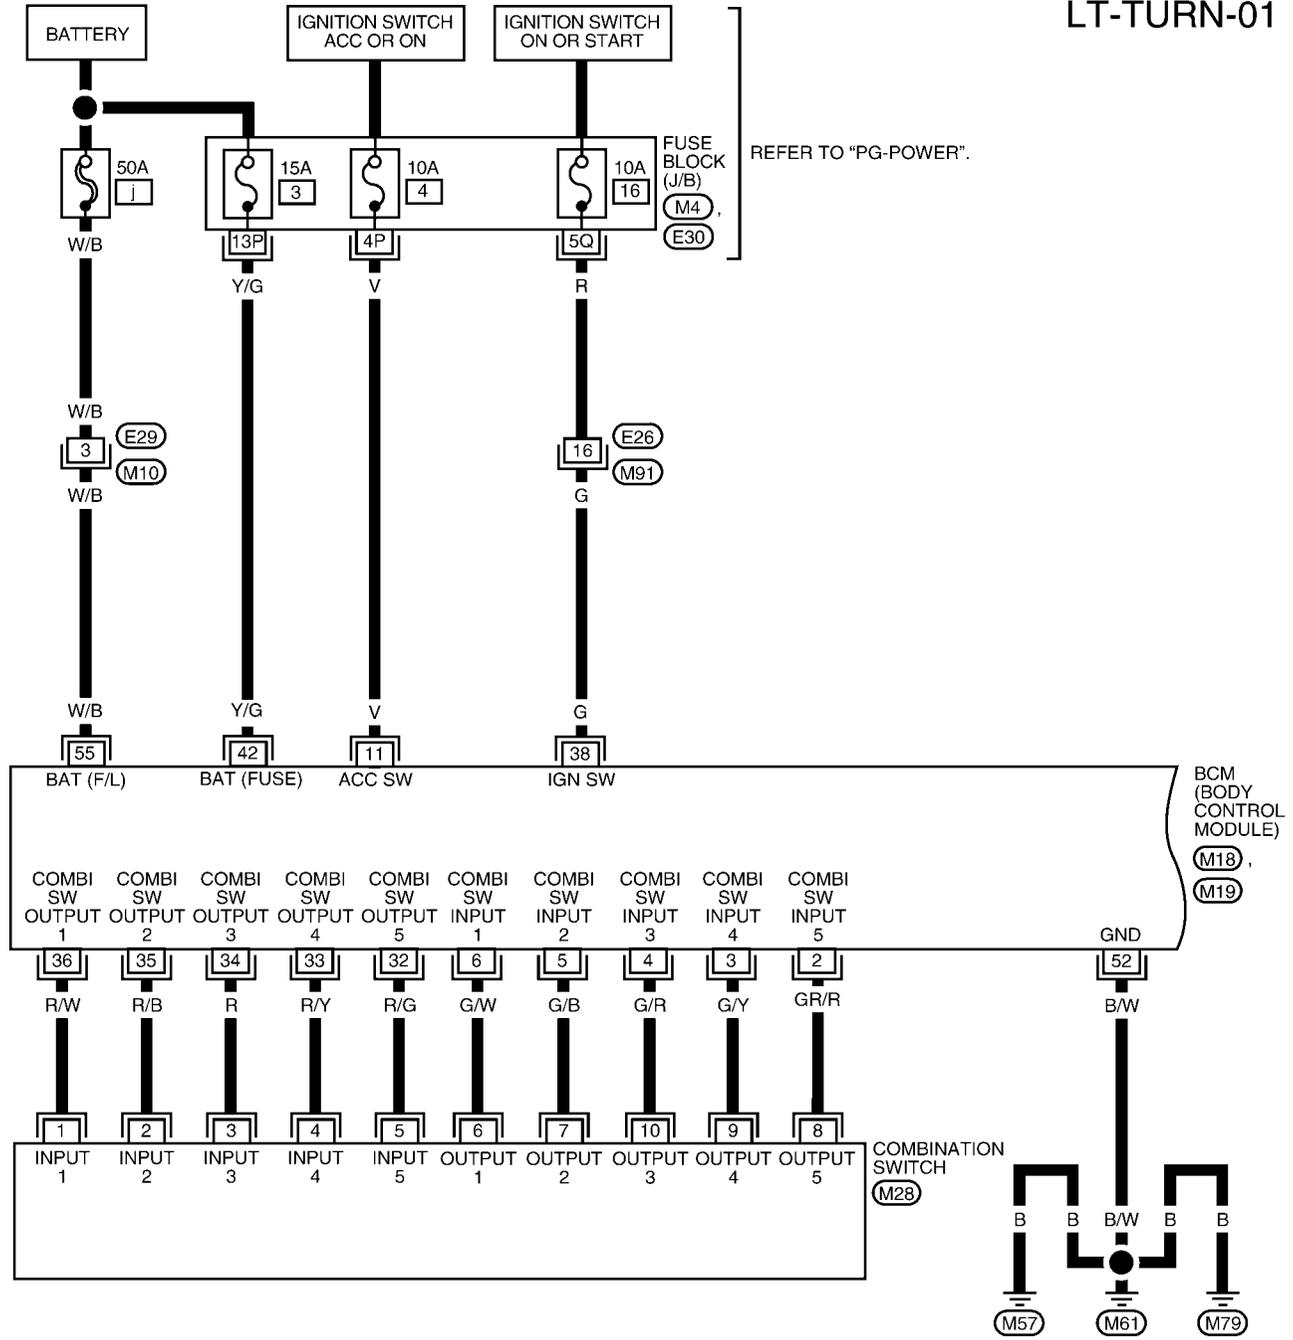



WKWA3911E

TURN SIGNAL AND HAZARD WARNING LAMPS

LT-TURN-02

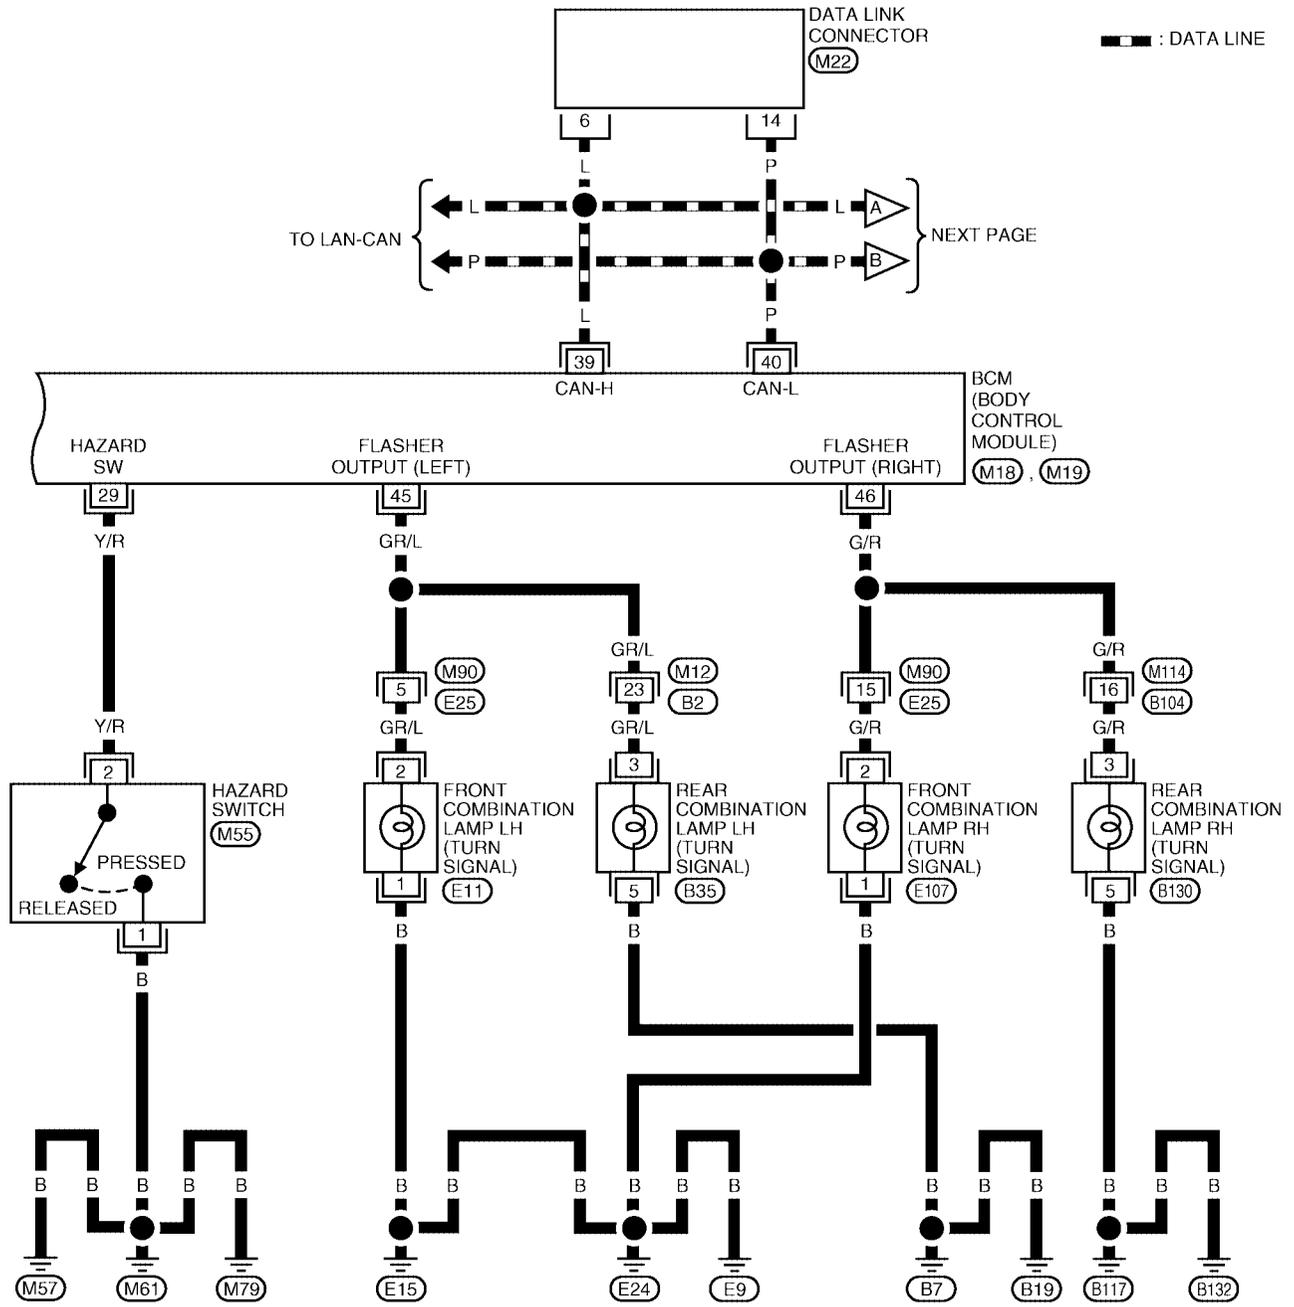

| | | | | | | | | | | | | | |
|----|----|----|----|----|----|----|----|----|----|----|----------------------|----|------------------|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | (M12), (M90), (M114) | | |
| 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | GR W W |


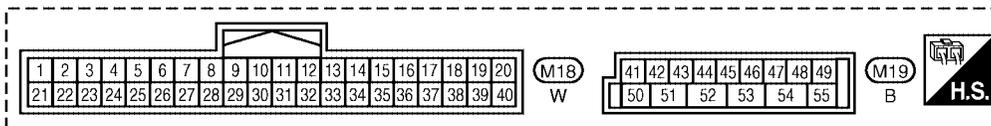


WKWA1927E

TURN SIGNAL AND HAZARD WARNING LAMPS

LT-TURN-03

— : DATA LINE



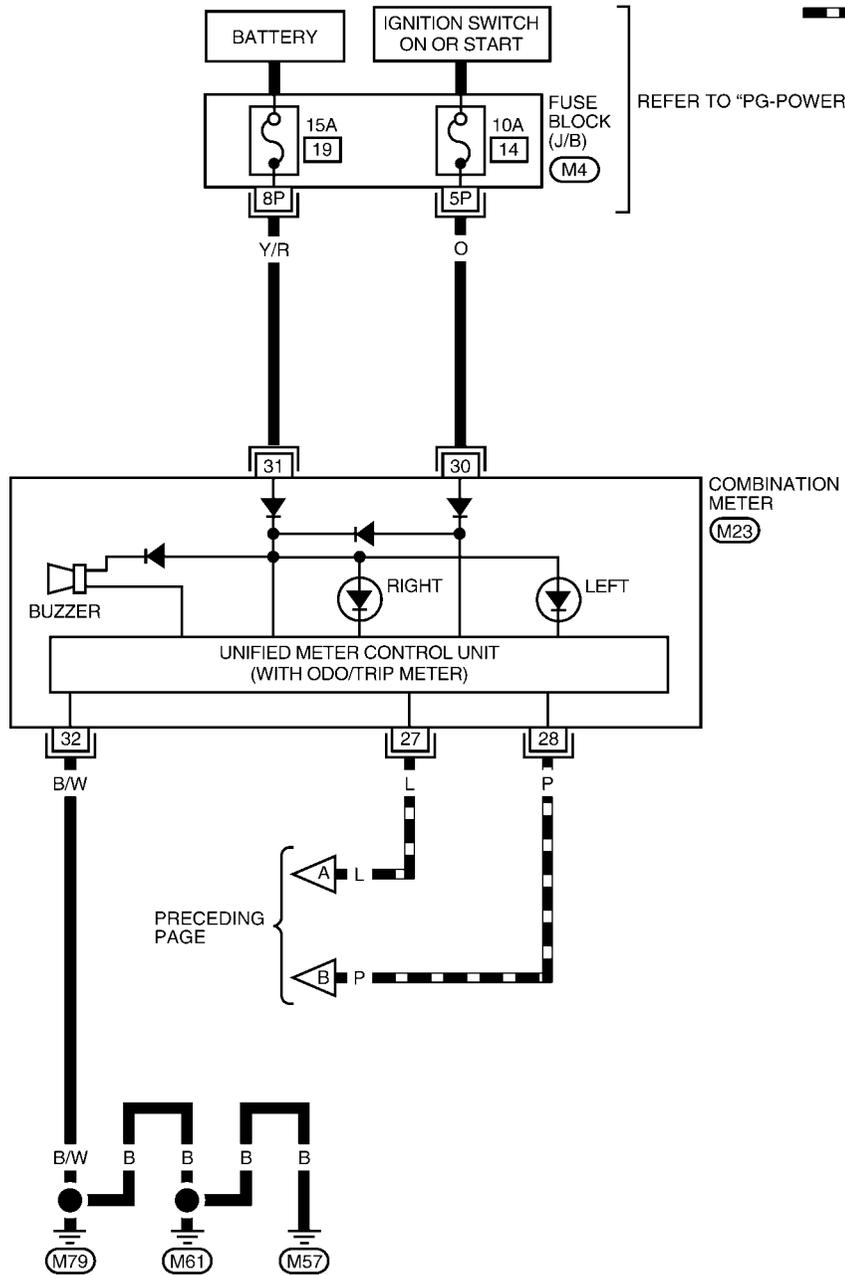


A
B
C
D
E
F
G
H
I
J
LT
L
M





TURN SIGNAL AND HAZARD WARNING LAMPS

Terminals and Reference Values for BCM

EKS005N0
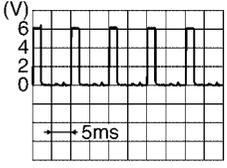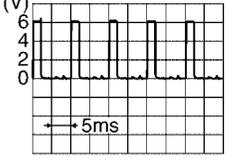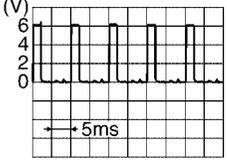
| Terminal No. | Wire color | Signal name | Measuring condition | | Reference value (Approx.) | |
|--------------|------------|-----------------------------|---------------------|--|---|----|
| | | | Ignition switch | Operation or condition | | |
| 2 | GR/R | Combination switch input 5 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5291E</p> | |
| 3 | G/Y | Combination switch input 4 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5292E</p> | |
| 4 | G/R | Combination switch input 3 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5291E</p> | |
| 5 | G/B | Combination switch input 2 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5292E</p> | |
| 6 | G/W | Combination switch input 1 | | | | |
| 11 | V | Ignition switch (ACC) | ACC | — | Battery voltage | |
| 29 | Y/R | Hazard switch signal | OFF | Hazard switch | ON | 0V |
| | | | | | OFF | 5V |
| 32 | R/G | Combination switch output 5 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5291E</p> | |
| 33 | R/Y | Combination switch output 4 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5292E</p> | |

TURN SIGNAL AND HAZARD WARNING LAMPS
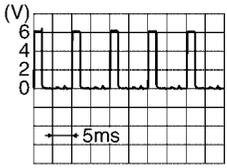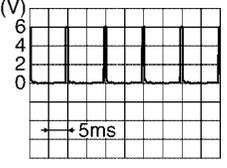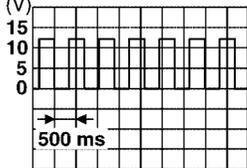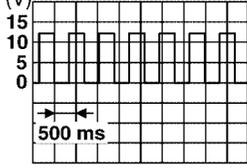
| Terminal No. | Wire color | Signal name | Measuring condition | | Reference value (Approx.) | |
|--------------|------------|-----------------------------|---------------------|--|--|--|
| | | | Ignition switch | Operation or condition | | |
| 34 | R | Combination switch output 3 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  SKIA5291E | |
| 35 | R/B | Combination switch output 2 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  SKIA5292E | |
| 36 | R/W | Combination switch output 1 | | | | |
| 38 | G | Ignition switch (ON) | ON | — | Battery voltage | |
| 39 | L | CAN-H | — | — | — | |
| 40 | P | CAN-L | — | — | — | |
| 42 | Y/G | Battery power supply | OFF | — | Battery voltage | |
| 45 | GR/L | Turn signal (left) | ON | Combination switch | Turn left ON |  SKIA3009J |
| 46 | G/R | Turn signal (right) | ON | Combination switch | Turn right ON |  SKIA3009J |
| 52 | B/W | Ground | ON | — | 0V | |
| 55 | W/B | Battery power supply | OFF | — | Battery voltage | |

How to Proceed With Trouble Diagnosis

EKS005N1

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-69, "System Description"](#) .
3. Perform preliminary check. Refer to [LT-78, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Do turn signal and hazard warning lamps operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

TURN SIGNAL AND HAZARD WARNING LAMPS

EKS005N2

Preliminary Check CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES OR FUSIBLE LINK

Check for blown fuses or fusible link.

| Unit | Power source | Fuse No. |
|------|--------------------------------------|----------|
| BCM | Battery | j |
| | | 3 |
| | Ignition switch ON or START position | 16 |
| | Ignition switch ACC or ON position | 4 |

Refer to [LT-73, "Wiring Diagram — TURN —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect BCM connector.
2. Check voltage between BCM harness connector and ground.

| Terminals | | Ignition switch position | | | |
|-----------|-----------------------|--------------------------|-----------------|-----------------|-----------------|
| Connector | (+) | (-) | OFF | ACC | ON |
| | Terminal (Wire color) | | OFF | ACC | ON |
| M18 | 11 (V) | Ground | 0V | Battery voltage | Battery voltage |
| | 38 (G) | | 0V | 0V | Battery voltage |
| M19 | 42 (Y/G) | | Battery voltage | Battery voltage | Battery voltage |
| | 55 (W/B) | | Battery voltage | Battery voltage | Battery voltage |

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse.

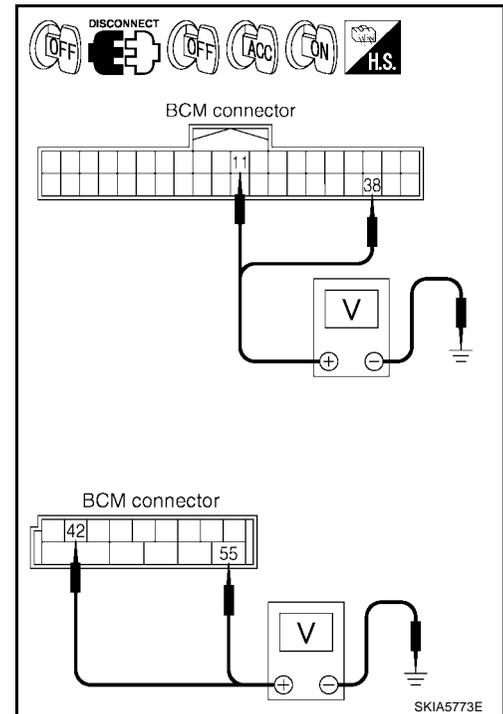

3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

| Terminals | | | Continuity |
|-----------|-----------------------|--------|------------|
| Connector | Terminal (Wire color) | | |
| M19 | 52 (B/W) | Ground | Yes |

OK or NG

OK >> Inspection End.

NG >> Check ground circuit harness.

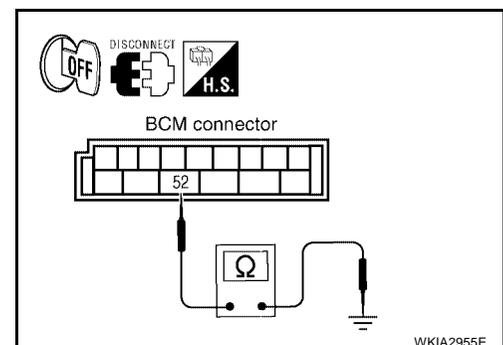

TURN SIGNAL AND HAZARD WARNING LAMPS

CONSULT-II Function (BCM)

EKS005N3

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


| BCM diagnostic test item | Diagnostic mode | Description |
|--------------------------|-----------------------|--|
| Inspection by part | WORK SUPPORT | Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed. |
| | DATA MONITOR | Displays BCM input/output data in real time. |
| | ACTIVE TEST | Operation of electrical loads can be checked by sending drive signal to them. |
| | SELF-DIAG RESULTS | Displays BCM self-diagnosis results. |
| | CAN DIAG SUPPORT MNTR | The result of transmit/receive diagnosis of CAN communication can be read. |
| | ECU PART NUMBER | BCM part number can be read. |
| | CONFIGURATION | Performs BCM configuration read/write functions. |

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

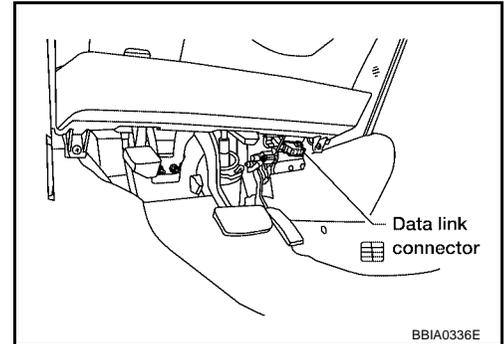

2. Touch "START (NISSAN BASED VHCL)".

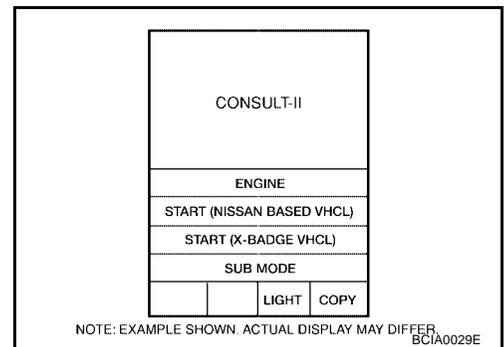


3. Touch "BCM" on "SELECT SYSTEM" screen. If "BCM" is not indicated, go to [GI-37, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

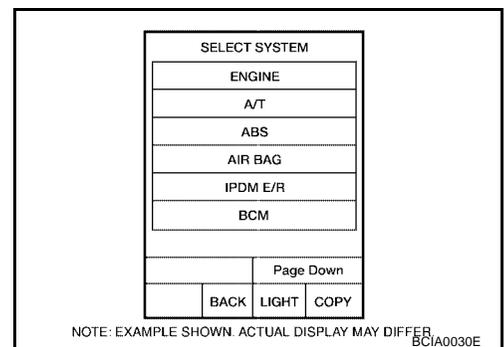

TURN SIGNAL AND HAZARD WARNING LAMPS

4. Touch "FLASHER" on "SELECT TEST ITEM" screen.

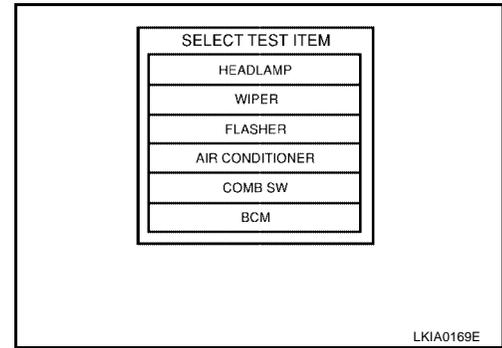

DATA MONITOR

Operation Procedure

1. Touch "FLASHER" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

| | |
|---------------------|---|
| All signals | Monitors all the signals. |
| Selection from menu | Selects and monitors the individual signal. |

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

| Monitor item | Contents |
|------------------------|--|
| IGN ON SW "ON/OFF" | Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal. |
| HAZARD SW "ON/OFF" | Displays "Hazard ON (ON)/Hazard OFF (OFF)" status, determined from hazard switch signal. |
| TURN SIGNAL R "ON/OFF" | Displays "Turn right (ON)/Other (OFF)" status, determined from lighting switch signal. |
| TURN SIGNAL L "ON/OFF" | Displays "Turn left (ON)/Other (OFF)" status, determined from lighting switch signal. |
| BRAKE SW "OFF" | Displays status of parking brake switch. |

ACTIVE TEST

Operation Procedure

1. Touch "FLASHER" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

Display Item List

| Test item | Description |
|--------------|---|
| FLASHER (RH) | Turn signal lamp (RH) can be operated by any ON-OFF operations. |
| FLASHER (LH) | Turn signal lamp (LH) can be operated by any ON-OFF operations. |

TURN SIGNAL AND HAZARD WARNING LAMPS

4. CHECK GROUND

1. Check continuity between front combination lamp LH harness connector E11 terminal 1 (B) and ground.


1 (B) - Ground : Continuity should exist.

2. Check continuity between front combination lamp RH harness connector E107 terminal 1 (B) and ground.

1 (B) - Ground : Continuity should exist.

OK or NG

- OK >> GO TO 5.
NG >> Repair harness or connector.

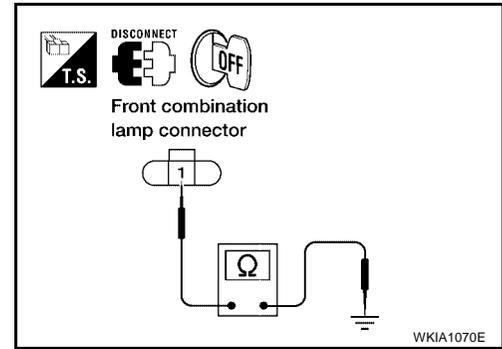

5. CHECK BULB

Check bulb standard of each turn signal lamp is correct. Refer to [LT-170, "Exterior Lamp"](#) .

OK or NG

- OK >> Replace BCM if turn signal lamps do not work after setting the connector again. Refer to [BCS-19, "Removal and Installation of BCM"](#) .
NG >> Replace turn signal lamp bulb. Refer to [LT-85, "Bulb Replacement \(Front Turn Signal Lamp\)"](#) .

Rear Turn Signal Lamp Does Not Operate

EKS005N5

1. CHECK TAIL LAMPS AND STOP LAMPS

Check bulb standard of each turn signal lamp is correct. Refer to [LT-170, "Exterior Lamp"](#) .

OK or NG

- OK >> GO TO 2.
NG >> Replace turn signal lamp bulb. Refer to [LT-85, "Bulb Replacement \(Rear Turn Signal Lamp\)"](#) .

2. CHECK TURN SIGNAL LAMPS CIRCUIT

1. Disconnect BCM connector and rear combination lamp connector.

2. Check continuity between BCM harness connector M19 terminal 46 (G/R) and rear combination lamp RH harness connector B130 terminal 3 (G/R).


46 (G/R) - 3 (G/R) : Continuity should exist.

3. Check continuity between BCM harness connector M19 terminal 45 (GR/L) and rear combination lamp LH harness connector B35 terminal 3 (GR/L).

45 (GR/L) - 3 (GR/L) : Continuity should exist.

OK or NG

- OK >> GO TO 3.
NG >> Repair harness or connector.

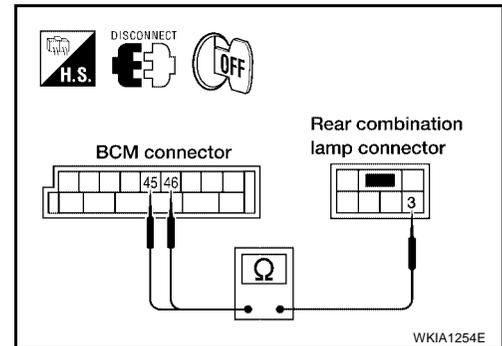

TURN SIGNAL AND HAZARD WARNING LAMPS


3. CHECK GROUND CIRCUIT

Check continuity between rear combination lamp harness connector B35 LH and B130 RH terminal 5 (B) and ground.

5 (B) - Ground : Continuity should exist.

OK or NG

- OK >> Check rear combination lamp connector for proper connection. Repair as necessary.
- NG >> Repair harness or connector.

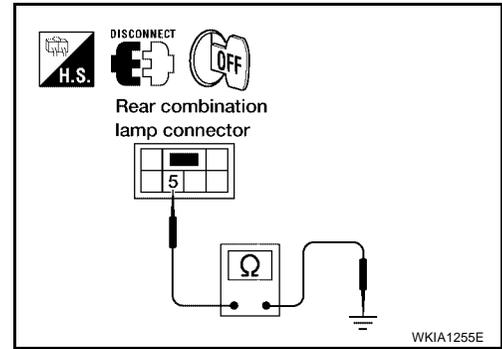

Hazard Warning Lamp Does Not Operate But Turn Signal Lamps Operate

EKS005N6

1. CHECK BULB

Make sure bulb standard of each turn signal lamp is correct. Refer to [LT-170, "Exterior Lamp"](#).

OK or NG


- OK >> GO TO 2.
- NG >> Replace turn signal lamp bulb. Refer to [LT-85, "Bulb Replacement \(Front Turn Signal Lamp\)"](#) for front turn signal bulb. Refer to [LT-85, "Bulb Replacement \(Rear Turn Signal Lamp\)"](#) for rear turn signal bulb.

2. CHECK HAZARD SWITCH INPUT SIGNAL

Ⓜ With CONSULT-II

Select "BCM" on CONSULT-II. With "FLASHER" data monitor, make sure "HAZARD SW" turns ON-OFF linked with operation of hazard switch.

When hazard switch is in ON position : HAZARD SW ON

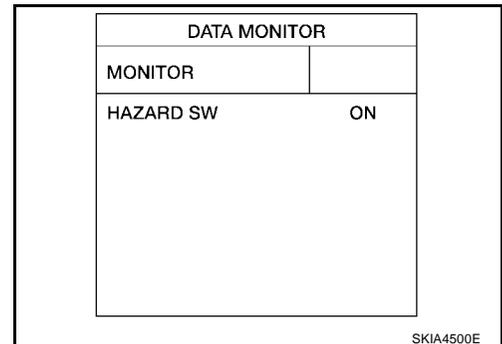


⊗ Without CONSULT-II

Check voltage between BCM harness connector M18 terminal 29 (Y/R) and ground.

| Terminals | | | Condition | Voltage (Approx.) |
|-----------|-----------------------|--------|----------------------|-------------------|
| (+) | | (-) | | |
| Connector | Terminal (Wire color) | | | |
| M18 | 29 (Y/R) | Ground | Hazard switch is ON | 0V |
| | | | Hazard switch is OFF | 5V |

OK or NG

- OK >> Replace BCM. Refer to [BCS-19, "Removal and Installation of BCM"](#).
- NG >> GO TO 3.

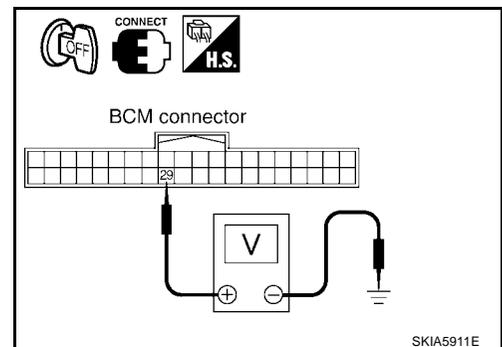

TURN SIGNAL AND HAZARD WARNING LAMPS


3. CHECK HAZARD SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and hazard switch connector.
3. Check continuity between BCM harness connector M18 terminal 29 (Y/R) and hazard switch harness connector M55 terminal 2 (Y/R).

29 (Y/R) - 2 (Y/R) : Continuity should exist.

OK or NG

- OK >> GO TO 4.
- NG >> Repair harness or connector.

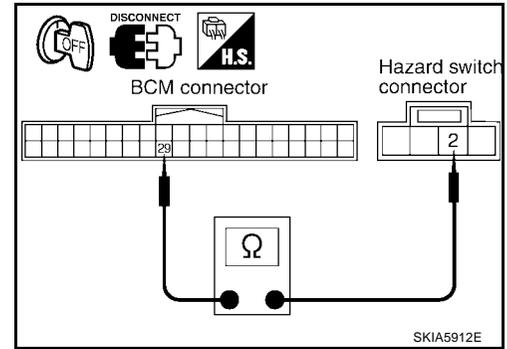


4. CHECK GROUND

Check continuity between hazard switch harness connector M55 terminal 1 (B) and ground.

1 (B) - Ground : Continuity should exist.

OK or NG

- OK >> GO TO 5.
- NG >> Repair harness or connector.

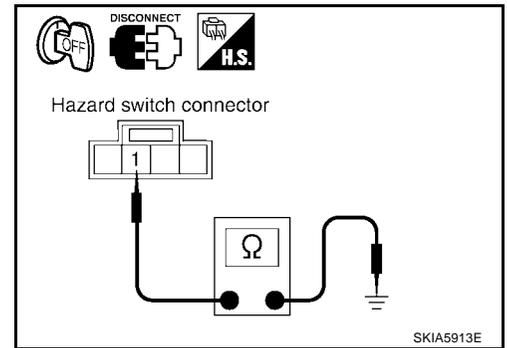


5. CHECK HAZARD SWITCH

1. Disconnect hazard switch connector.
2. Check continuity of hazard switch.

| Terminal | | Condition | Continuity |
|---------------|---|----------------------|------------|
| Hazard switch | | | |
| 1 | 2 | Hazard switch is ON | Yes |
| | | Hazard switch is OFF | No |

OK or NG

- OK >> Replace BCM if hazard warning lamps do not work after setting the connector again. Refer to [BCS-19, "Removal and Installation of BCM"](#).
- NG >> Replace hazard switch.

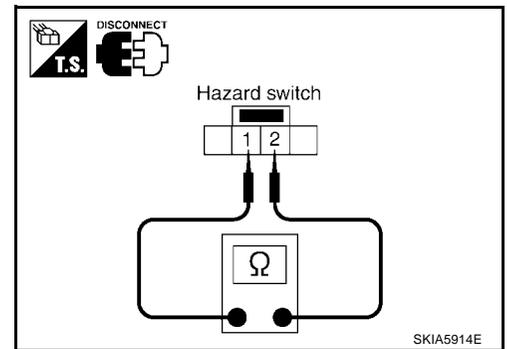

Turn Signal Indicator Lamp Does Not Operate

EKS005N7

1. CHECK CAN COMMUNICATION SYSTEM

Check CAN communication. Refer to [LAN-5, "CAN COMMUNICATION"](#).

OK or NG

- OK >> Replace combination meter. Refer to [IP-12, "Combination Meter"](#).
- NG >> Repair as necessary.

TURN SIGNAL AND HAZARD WARNING LAMPS

Bulb Replacement (Front Turn Signal Lamp)

EKS005N8

Refer to [LT-28, "FRONT TURN SIGNAL/PARKING LAMP"](#) .

A

Bulb Replacement (Rear Turn Signal Lamp)

EKS005N9

Refer to [LT-126, "Bulb Replacement"](#) in REAR COMBINATION LAMP.

B

Removal and Installation of Front Turn Signal Lamp

EKS005NA

Refer to [LT-29, "Removal and Installation"](#) .

C

Removal and Installation of Rear Turn Signal Lamp

EKS005NB

Refer to [LT-126, "Removal and Installation"](#) in REAR COMBINATION LAMP.

D

E

F

G

H

I

J

LT

L

M


CORNERING LAMP

CORNERING LAMP

PFP:26100

Component Parts and Harness Connector Location

EKS005NC

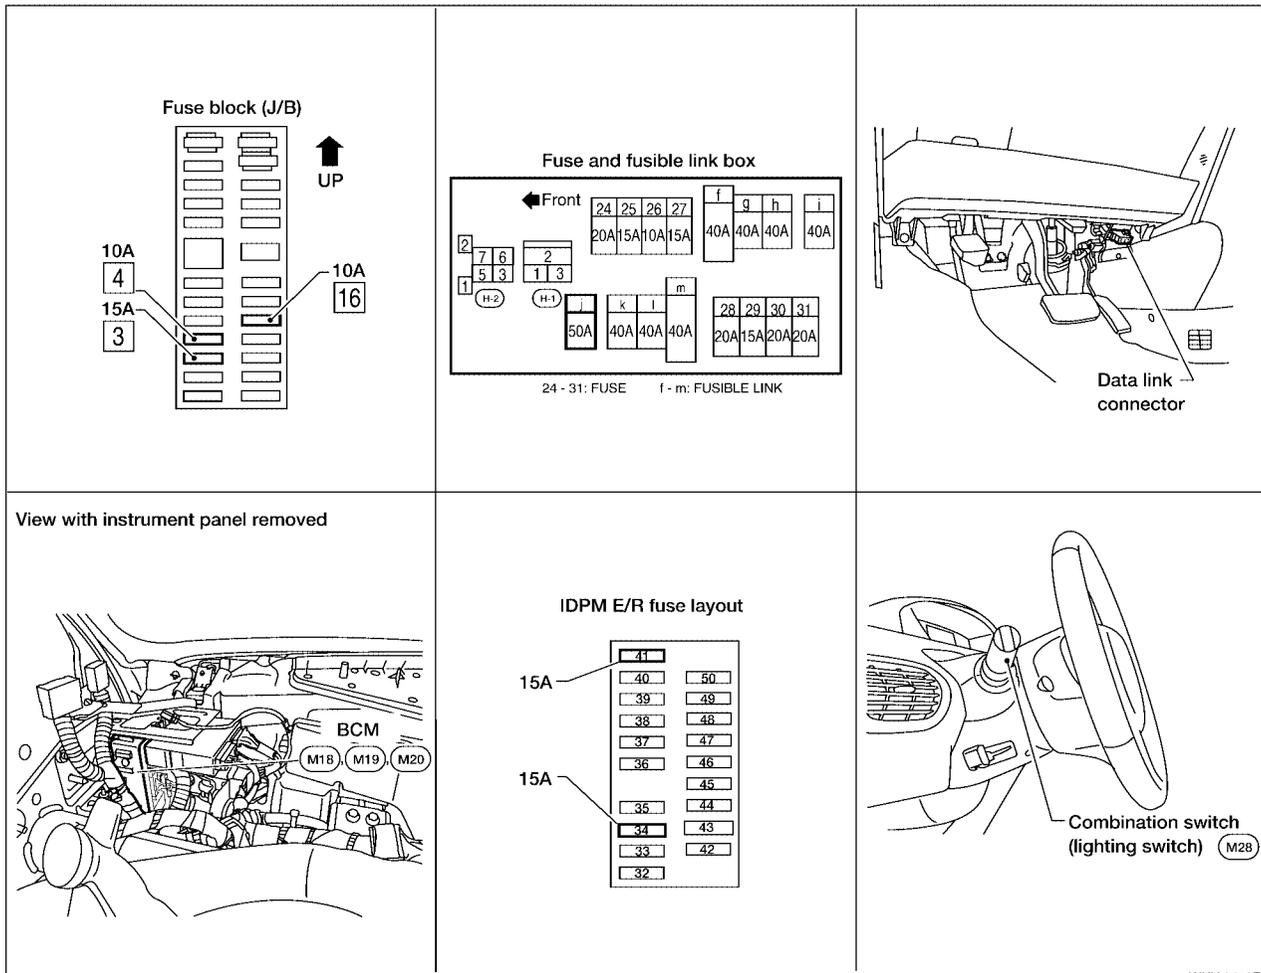

WKTA3450E

System Description OUTLINE

EKS005ND

Power is supplied at all times

- through 50A fusible link (letter j, located in the fuse and fusible link box)
- to BCM (body control module) terminal 55, and
- through 15A fuse [No. 3, located in the fuse block (J/B)]
- to BCM terminal 42, and
- through 15A fuse (No. 34, located in the IPDM E/R)
- to CPU (central processing unit) in the IPDM E/R, and
- to ignition relay, located in the IPDM E/R, and
- through 15A fuse (No. 41, located in the IPDM E/R)
- to cornering lamp relay LH and RH.

CORNERING LAMP OPERATION

When the ignition switch is in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 16, located in the fuse block (J/B)]
- to BCM terminal 38.

Ground is supplied

- to BCM terminal 52
- through grounds M57, M61 and M79, and

CORNERING LAMP

- to IPDM E/R terminals 38 and 60
- through grounds E9, E15 and E24.

LH Turn

When the lighting switch is in the 2nd position or in the AUTO position (headlamp ON) and turn signal switch is moved to the left position, BCM sends signal through CAN communication lines to IPDM E/R. IPDM E/R then operates cornering lamp relay LH. When this relay is energized, power is supplied

- through IPDM E/R terminal 34
- to cornering lamp LH terminal +.

Ground is supplied

- to cornering lamp terminal –
- through grounds E9, E15 and E24.

RH Turn

When the lighting switch is in the 2nd position or in the AUTO position (headlamp ON) and turn signal switch is moved to the right position, BCM sends signal through CAN communication lines to IPDM E/R. IPDM E/R then operates cornering lamp relay RH. When this relay is energized, power is supplied

- through IPDM E/R terminal 23
- to cornering lamp RH terminal +.

Ground is supplied

- to cornering lamp terminal –
- through grounds E9, E15 and E24.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

CAN Communication System Description

Refer to [LAN-5, "CAN COMMUNICATION"](#) .

A

B

C

D

E

F

G

H

EKS005NE

I

J

LT


L

M

CORNERING LAMP

Schematic

EKS005NF

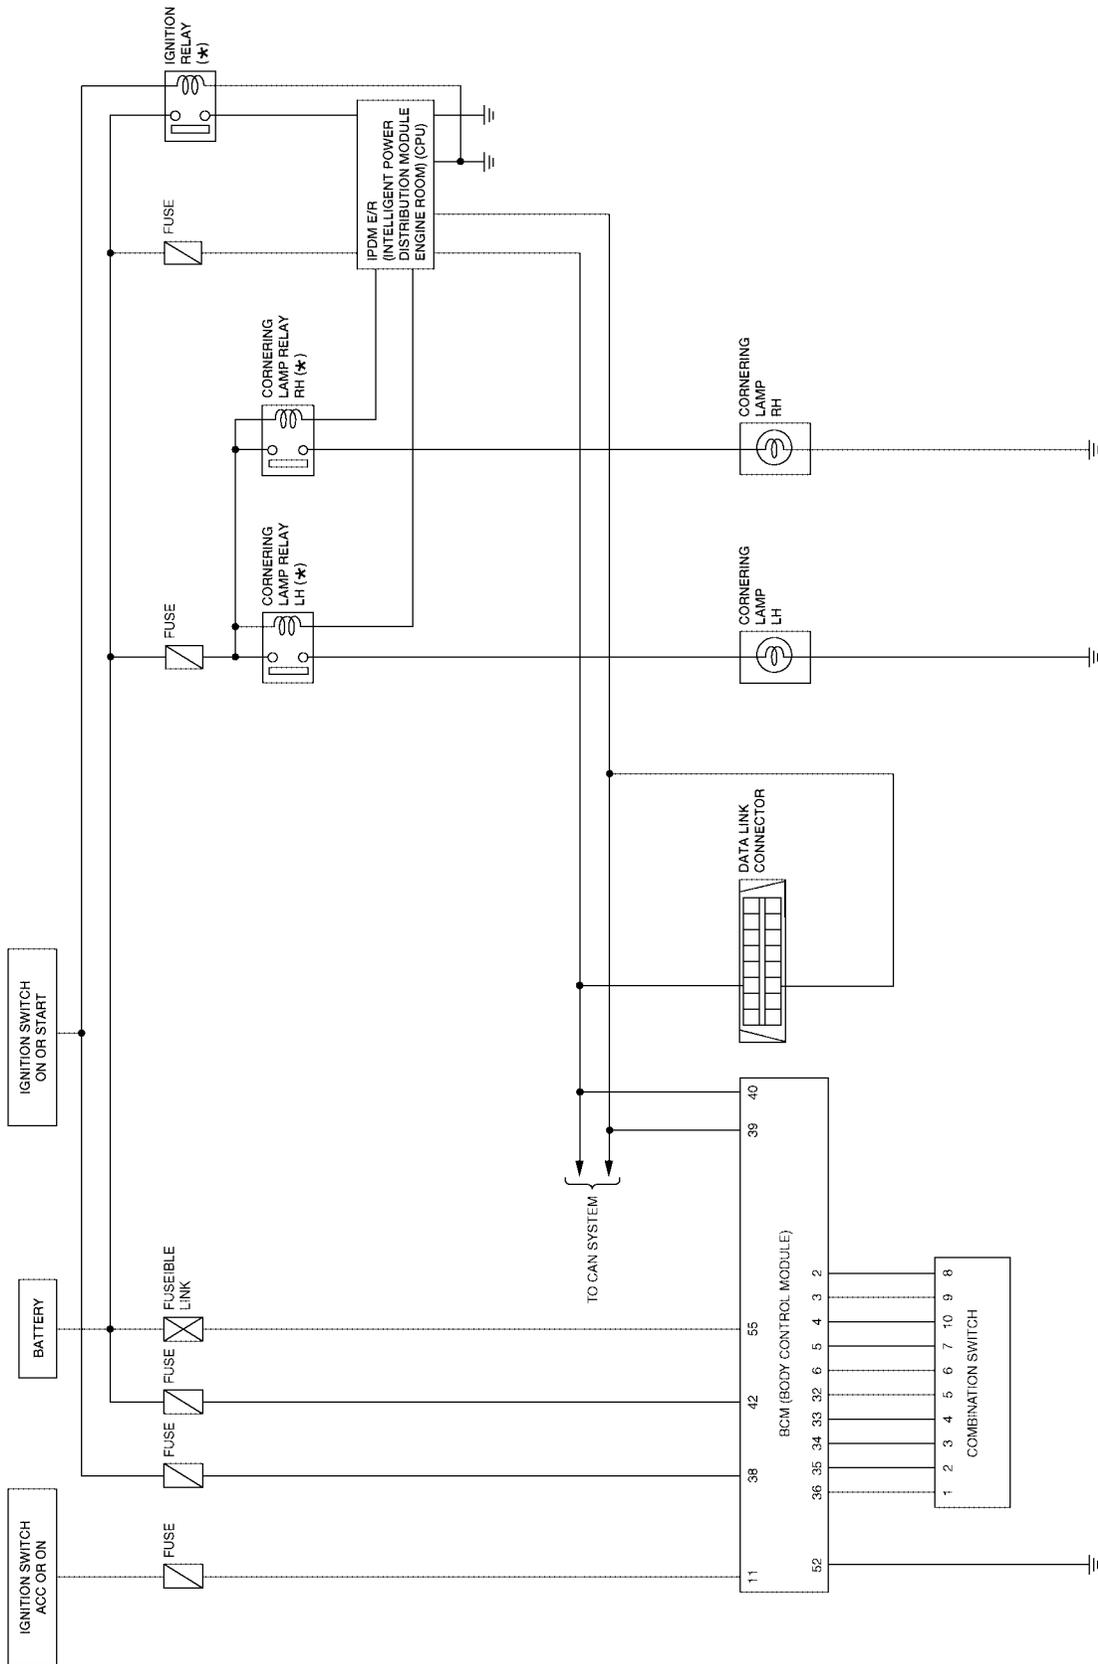

* : THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM).





WKWA1929E

CORNERING LAMP

Wiring Diagram — CORNER —

EKS005NG


LT-CORNER-01

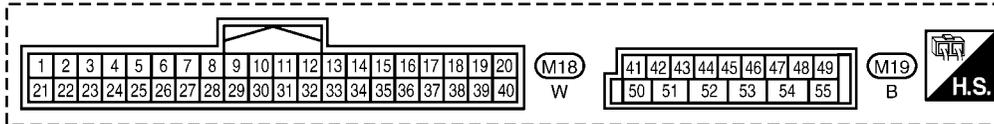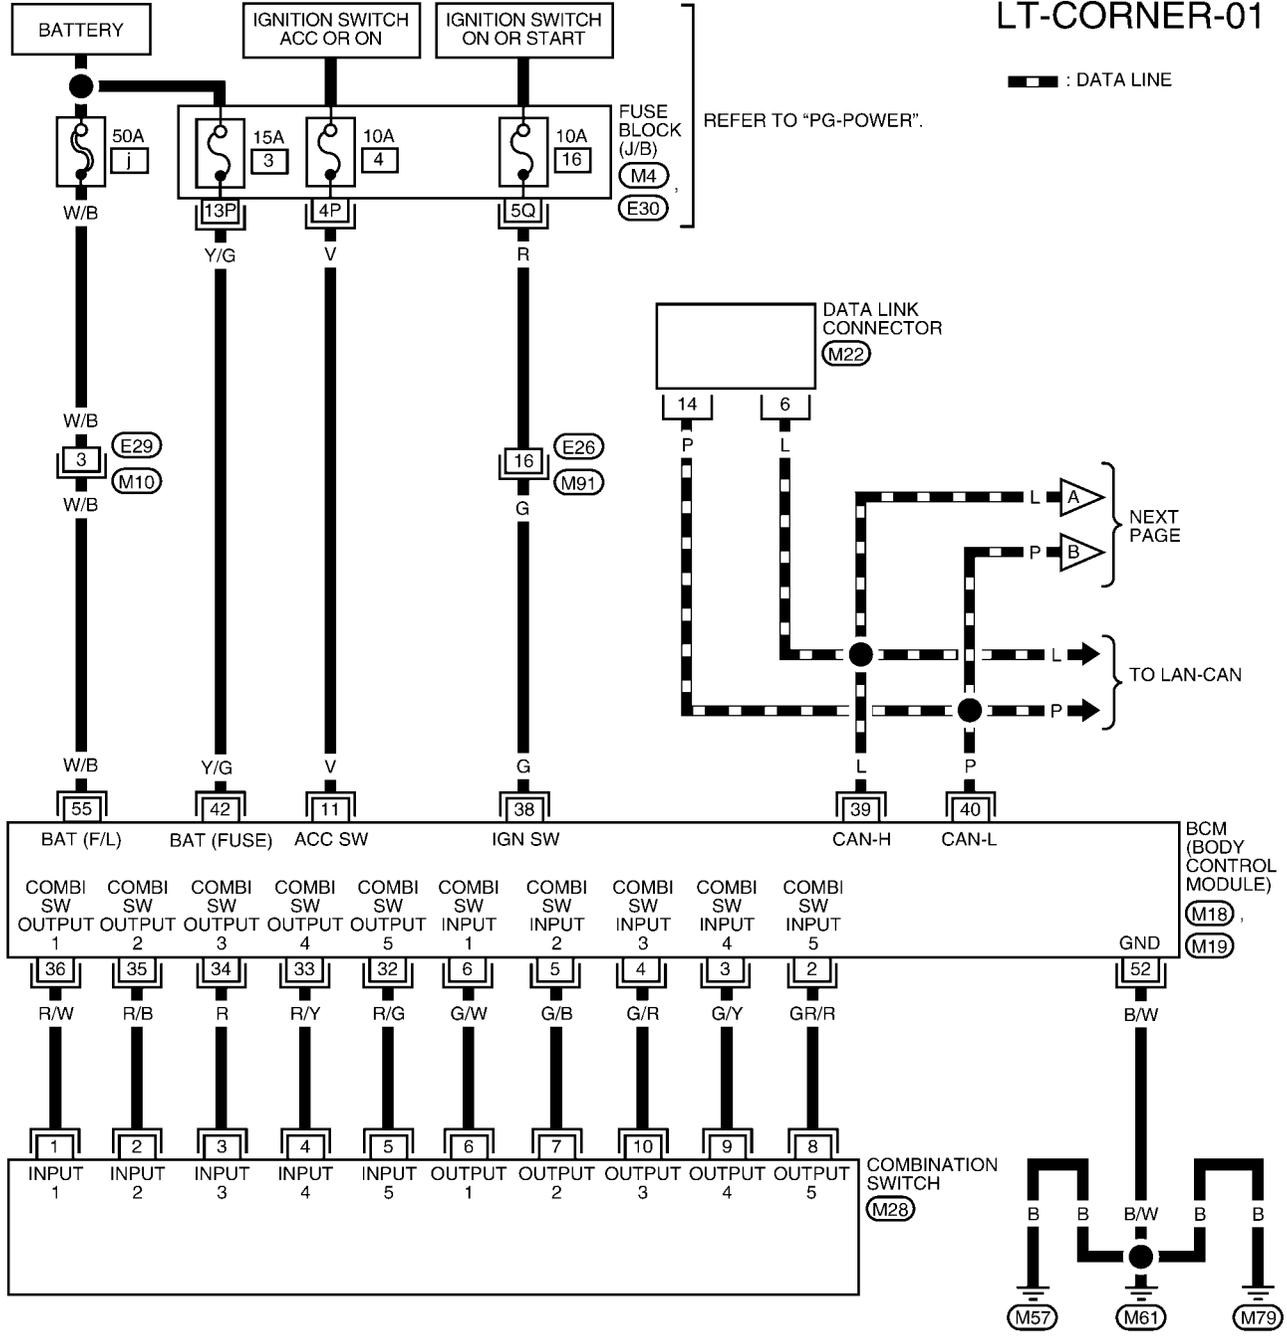

WKWA3913E

CORNERING LAMP

LT-CORNER-02

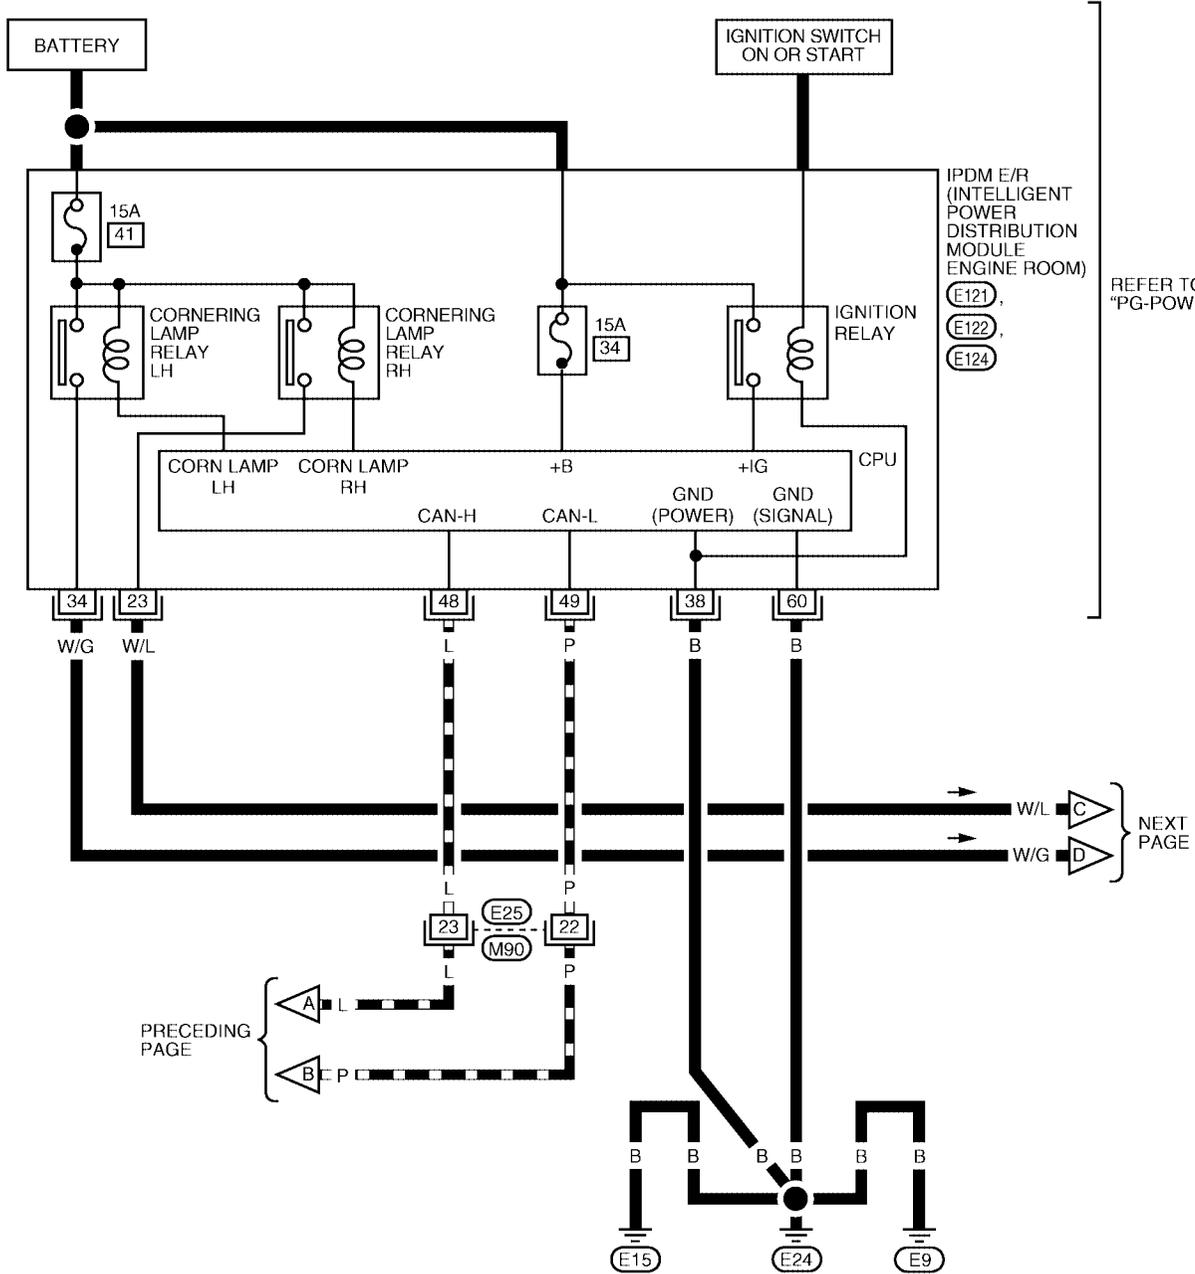



| | | | | | | | | | | | | | |
|----|----|----|----|----|----|----|----|----|----|----|-----|----|---|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | M90 | | |
| 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | W |

| | | | | | | | | | | | | | | | | | | | | | | | | | |
|----|----|----|----|----|----|----|----|------|----|----|----|----|----|----|----|------|----|----|----|----|----|------|----|----|---|
| 45 | 46 | 47 | 48 | 49 | 50 | 51 | 52 | E121 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | E122 | 33 | 34 | 35 | 36 | 37 | E124 | | | |
| 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 | W | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | GR | 38 | 39 | 40 | 41 | 42 | 43 | 44 | W |

WKWA1931E

CORNERING LAMP

LT-CORNER-03

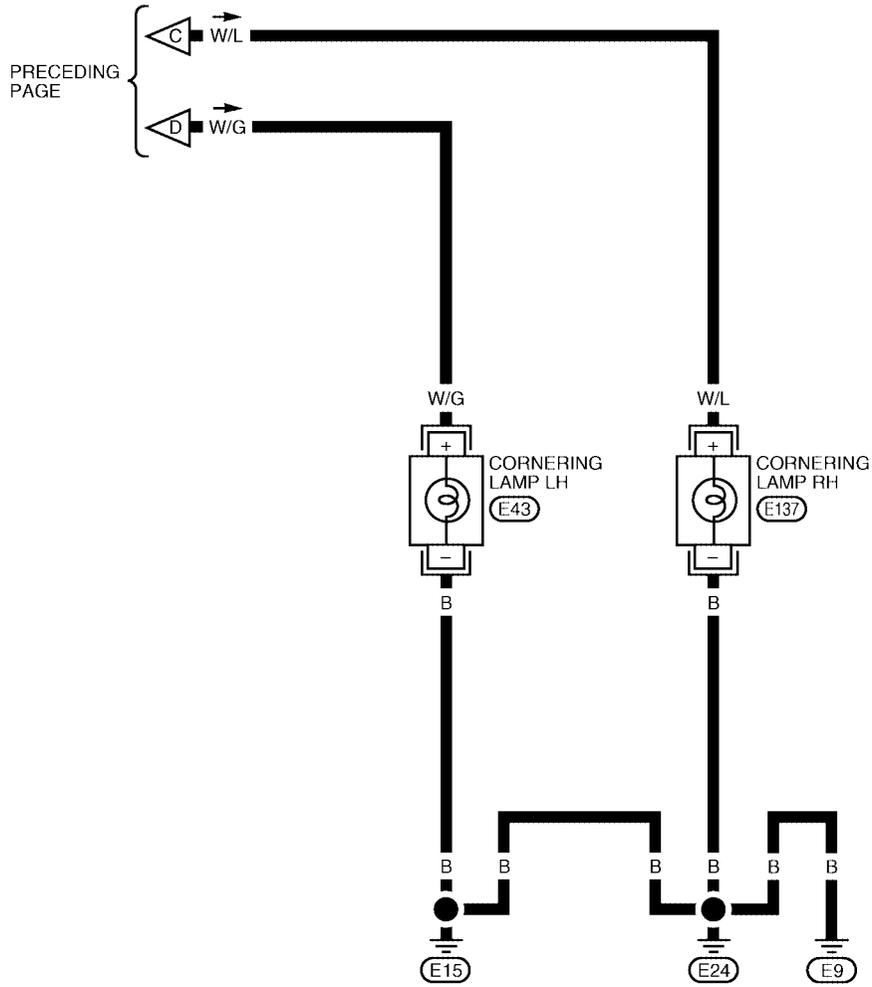






A
B
C
D
E
F
G
H
I
J
LT
L
M

WKWA1932E


CORNERING LAMP

Terminals and Reference Values for BCM

EKS005NH
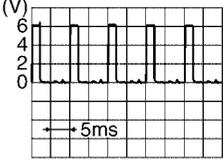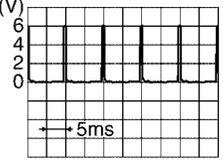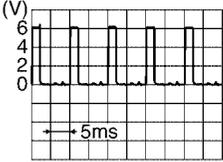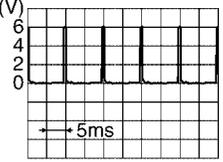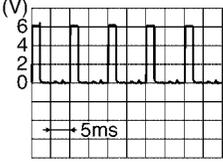
| Terminal No. | Wire color | Signal name | Measuring condition | | Reference value (Approx.) |
|--------------|------------|-----------------------------|---------------------|--|---|
| | | | Ignition switch | Operation or condition | |
| 2 | GR/R | Combination switch input 5 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5291E</p> |
| 3 | G/Y | Combination switch input 4 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5292E</p> |
| 4 | G/R | Combination switch input 3 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5291E</p> |
| 5 | G/B | Combination switch input 2 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5292E</p> |
| 6 | G/W | Combination switch input 1 | | | |
| 11 | V | Ignition switch (ACC) | ACC | — | Battery voltage |
| 32 | R/G | Combination switch output 5 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5291E</p> |
| 33 | R/Y | Combination switch output 4 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5292E</p> |
| 34 | R | Combination switch output 3 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5291E</p> |

CORNERING LAMP
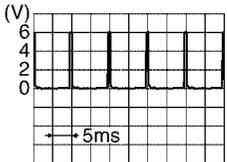
| Terminal No. | Wire color | Signal name | Measuring condition | | Reference value (Approx.) |
|--------------|------------|-------------------------------------|---------------------|--|---|
| | | | Ignition switch | Operation or condition | |
| 35 | R/B | Combination switch output 2 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  |
| 36 | R/W | Combination switch output 1 | | | |
| 38 | G | Ignition switch (ON) | ON | — | Battery voltage |
| 39 | L | CAN-H | — | — | — |
| 40 | P | CAN-L | — | — | — |
| 42 | Y/G | Battery power supply | OFF | — | Battery voltage |
| 52 | B/W | Ground | ON | — | 0V |
| 55 | W/B | Battery power supply (fusible link) | OFF | — | Battery voltage |

Terminals and Reference Values for IPDM E/R

EKS005NI

| Terminal No. | Wire color | Signal name | Measuring condition | | Reference value (Approx.) |
|--------------|------------|-------------------|---------------------|--------------------------------|---------------------------|
| | | | Ignition switch | Operation or condition | |
| 23 | W/L | Cornering lamp RH | ON | Lighting switch in RH position | OFF 0V |
| | | | | | ON Battery voltage |
| 34 | W/G | Cornering lamp LH | ON | Lighting switch in LH position | OFF 0V |
| | | | | | ON Battery voltage |
| 38 | B | Ground | ON | — | 0V |
| 48 | L | CAN-H | — | — | — |
| 49 | P | CAN-L | — | — | — |
| 60 | B | Ground | ON | — | 0V |

How to Proceed With Trouble Diagnosis

EKS005NJ

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-86, "System Description"](#) .
3. Perform preliminary check. Refer to [LT-93, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Do turn signal and hazard warning lamps operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

EKS005NK

CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES OR FUSIBLE LINK

Check for blown fuses or fusible link.

| Unit | Power source | Fuse No. |
|----------|--------------------------------------|----------|
| BCM | Battery | j |
| | | 3 |
| | Ignition switch ON or START position | 16 |
| | Ignition switch ACC or ON position | 4 |
| IPDM E/R | Battery | 41 |

CORNERING LAMP

Refer to [LT-89, "Wiring Diagram — CORNER —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

| Terminals | | (-) | Ignition switch position | | |
|-----------|-----------|--------|--------------------------|-----------------|-----------------|
| (+) | Connector | | Terminal (Wire color) | OFF | ACC |
| M18 | 11 (V) | Ground | 0V | Battery voltage | Battery voltage |
| | 38 (G) | | 0V | 0V | Battery voltage |
| M19 | 42 (Y/G) | | Battery voltage | Battery voltage | Battery voltage |
| | 55 (W/B) | | Battery voltage | Battery voltage | Battery voltage |

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse.

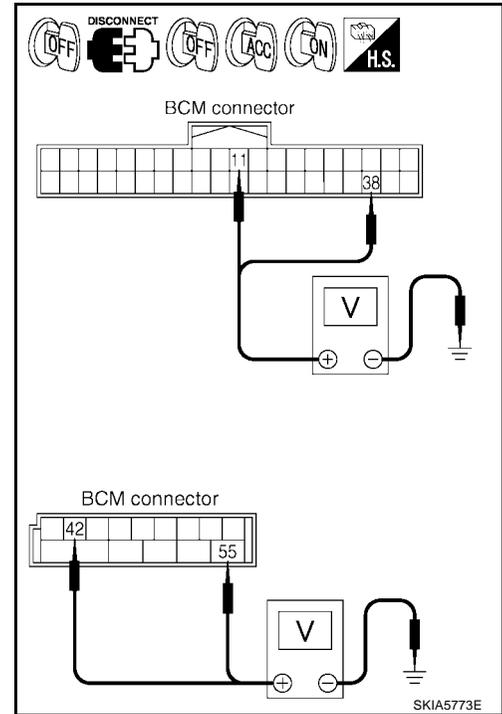

3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

| Terminals | | | Continuity |
|-----------|-----------------------|--------|------------|
| Connector | Terminal (Wire color) | | |
| M19 | 52 (B/W) | Ground | Yes |

OK or NG

OK >> Inspection End.

NG >> Check ground circuit harness.

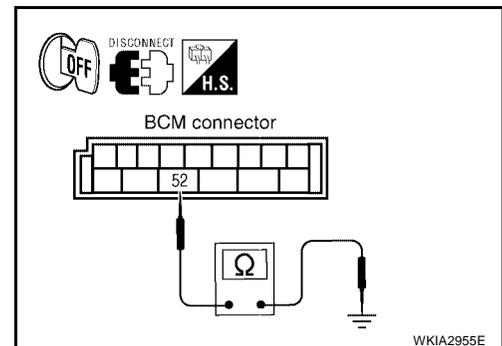

CORNERING LAMP

CONSULT-II Function (IPDM E/R)

EKS005NL

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


| IPDM E/R diagnostic Mode | Description |
|--------------------------|---|
| SELF-DIAG RESULTS | Displays IPDM E/R self-diagnosis results. |
| DATA MONITOR | Displays IPDM E/R input/output data in real time. |
| CAN DIAG SUPPORT MNTR | The result of transmit/receive diagnosis of CAN communication can be read. |
| ACTIVE TEST | Operation of electrical loads can be checked by sending drive signal to them. |

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

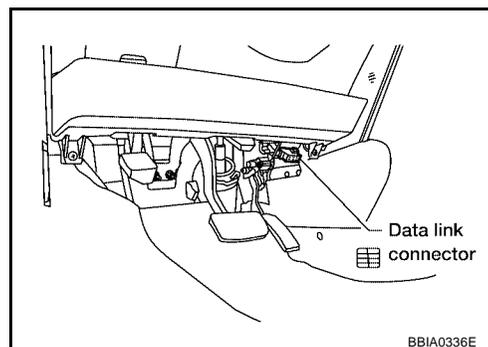

2. Touch "START (NISSAN BASED VHCL)".

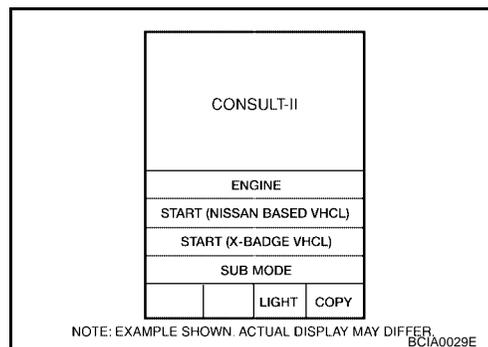

3. Touch "IPDM E/R" on "SELECT SYSTEM" screen. If "IPDM E/R" is not indicated, go to [GI-37, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

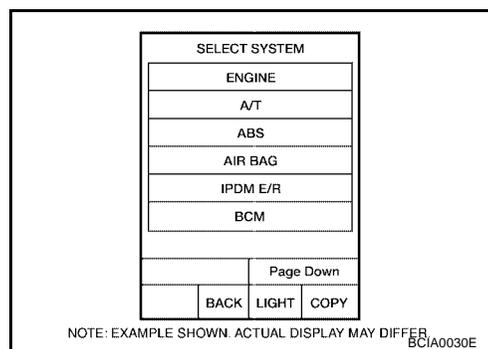

4. Touch appropriate item, "DATA MONITOR" or "ACTIVE TEST" on "SELECT DIAG MODE" screen.

DATA MONITOR

Operation Procedure

1. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Touch "ALL SIGNALS", "MAIN SIGNALS" or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

CORNERING LAMP

| | |
|---------------------|---|
| All signals | Monitors all the signals. |
| Selection from menu | Selects and monitors the individual signal. |

3. Touch "START".
4. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
5. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

All Items, Main Items, Select Item Menu

| Item name | CONSULT-II screen display | Display or unit | Monitor item selection | | | Description |
|----------------|---------------------------|-----------------|------------------------|--------------|------------------|------------------------------|
| | | | ALL SIGNALS | MAIN SIGNALS | SELECT FROM MENU | |
| Cornering lamp | CRNRNG LMP REQ | ON/OFF | × | - | × | Signal status input from BCM |

NOTE:

Perform monitoring of IPDM E/R data with the ignition switch ON. When the ignition switch is at ACC, the display may not be correct.

ACTIVE TEST

Operation Procedure

1. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Touch "CORNERING LAMP" on "SELECT TEST ITEM" screen.
3. Touch "RH" or "LH" item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

Display Item List

| Test item | Description |
|---------------------|---|
| CORNERING LAMP (RH) | Cornering lamp (RH) can be operated by any ON-OFF operations. |
| CORNERING LAMP (LH) | Cornering lamp (LH) can be operated by any ON-OFF operations. |

Cornering Lamp Does Not Operate

EKS005NM

1. ACTIVE TEST

Ⓟ With CONSULT-II


1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "CORNERING LAMP" during active test.
3. Select "RH", then "LH" on "ACTIVE TEST" screen.
4. Make sure cornering lamp LH and cornering lamp RH operate.

ⓧ Without CONSULT-II

GO TO 3.

OK or NG

- OK >> GO TO 2.
 NG >> GO TO 3.

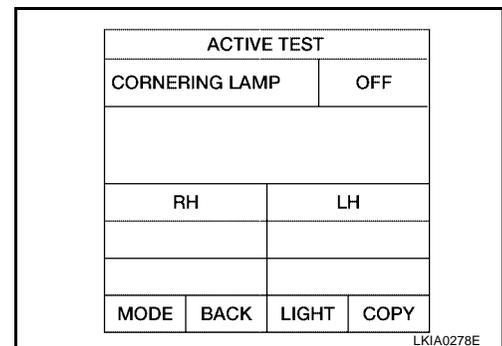

CORNERING LAMP

2. CHECK COMBINATION SWITCH INPUT SIGNAL


1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "CRNRNG LMP REQ" turns ON-OFF linked with operation of lighting switch.

NOTE:

Lighting switch must not be in OFF position.

**When lighting switch is in : CRNRNG LMP REQ R
TURN RH position**

**When lighting switch is in : CRNRNG LMP REQ L
TURN LH position**

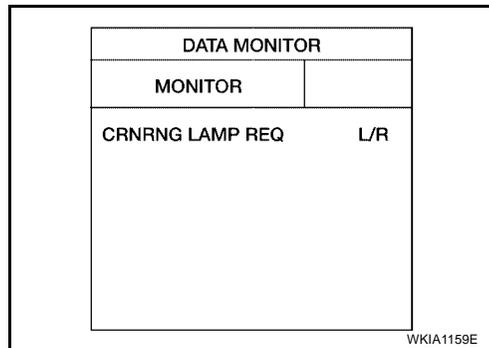

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#).
- NG >> Replace BCM. Refer to [BCS-19, "Removal and Installation of BCM"](#).

3. CHECK BULB


Check bulb standard of each cornering lamp is correct. Refer to [LT-170, "Exterior Lamp"](#).

OK or NG

- OK >> GO TO 4.
- NG >> Replace cornering lamp bulb. Refer to [LT-98, "Bulb Replacement"](#).

4. CHECK CORNERING LAMPS CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connectors and cornering lamp LH and RH connectors.
3. Check continuity between IPDM E/R harness connector E122 terminal 23 (W/L) and cornering lamp RH harness connector E137 terminal + (W/L).
+ (W/L) - 23 (W/L) : Continuity should exist.
4. Check continuity between IPDM E/R harness connector E124 terminal 34 (W/G) and front cornering lamp LH harness connector E43 terminal + (W/G).
+ (W/G) - 34 (W/G) : Continuity should exist.

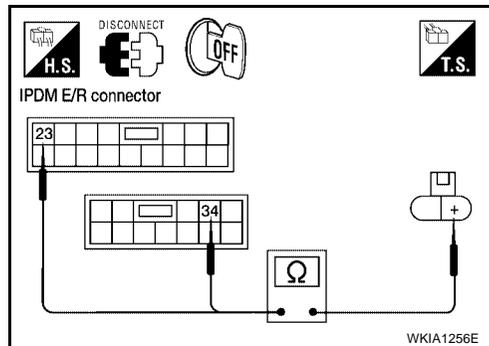

OK or NG


- OK >> GO TO 5.
- NG >> Repair harness or connector.

5. CHECK GROUND

1. Check continuity between cornering lamp LH harness connector E43 terminal - (B) and ground.
- (B) - Ground : Continuity should exist.
2. Check continuity between cornering lamp RH harness connector E137 terminal - (B) and ground.
- (B) - Ground : Continuity should exist.

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#).
- NG >> Repair harness or connector.

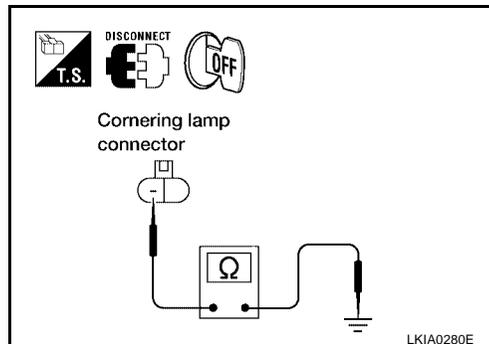

CORNERING LAMP

Bulb Replacement

EKS005NN

1. Turn the bulb socket counterclockwise to unlock it.
2. Pull the bulb to remove it from the socket.

Installation is in the reverse order of removal.

LIGHTING AND TURN SIGNAL SWITCH

LIGHTING AND TURN SIGNAL SWITCH


PFP:25540

Removal and Installation

EKS005NO

1. Remove steering column cover.
2. While pressing tabs, pull lighting and turn signal switch toward driver door and disconnect from the base.

Installation is in the reverse order of removal.

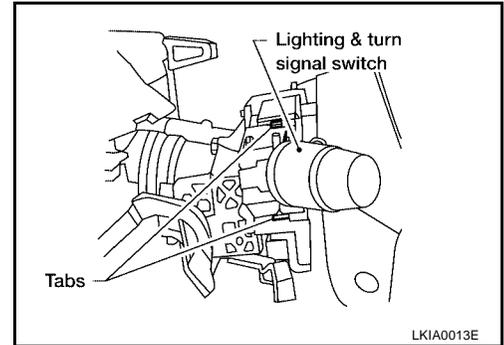

A
B
C
D
E
F
G
H
I
J
LT
L
M

HAZARD SWITCH


HAZARD SWITCH

PF2:25290

Removal and Installation

EKS005NP

1. Remove AV switch. Refer to [AV-66, "Removal and Installation for AV Switch"](#) .
2. While pressing the tabs, push out the hazard switch.
Installation is in the reverse order of removal.

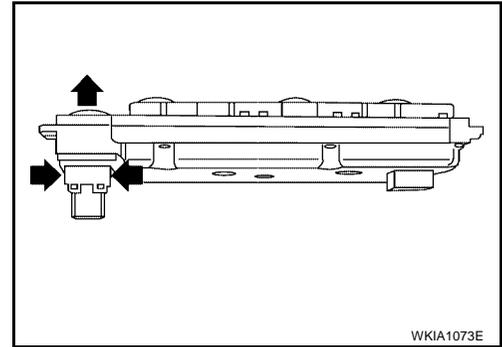

COMBINATION SWITCH

PF2:25567



EKS005NQ

COMBINATION SWITCH

Wiring Diagram — COMBSW —

LT-COMBSW-01

— : DATA LINE

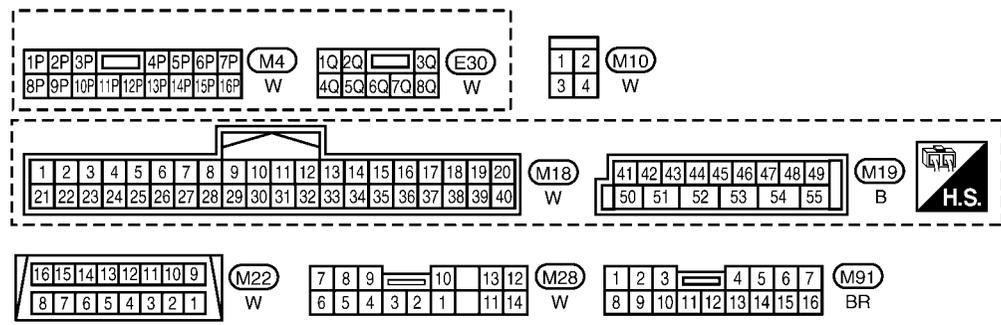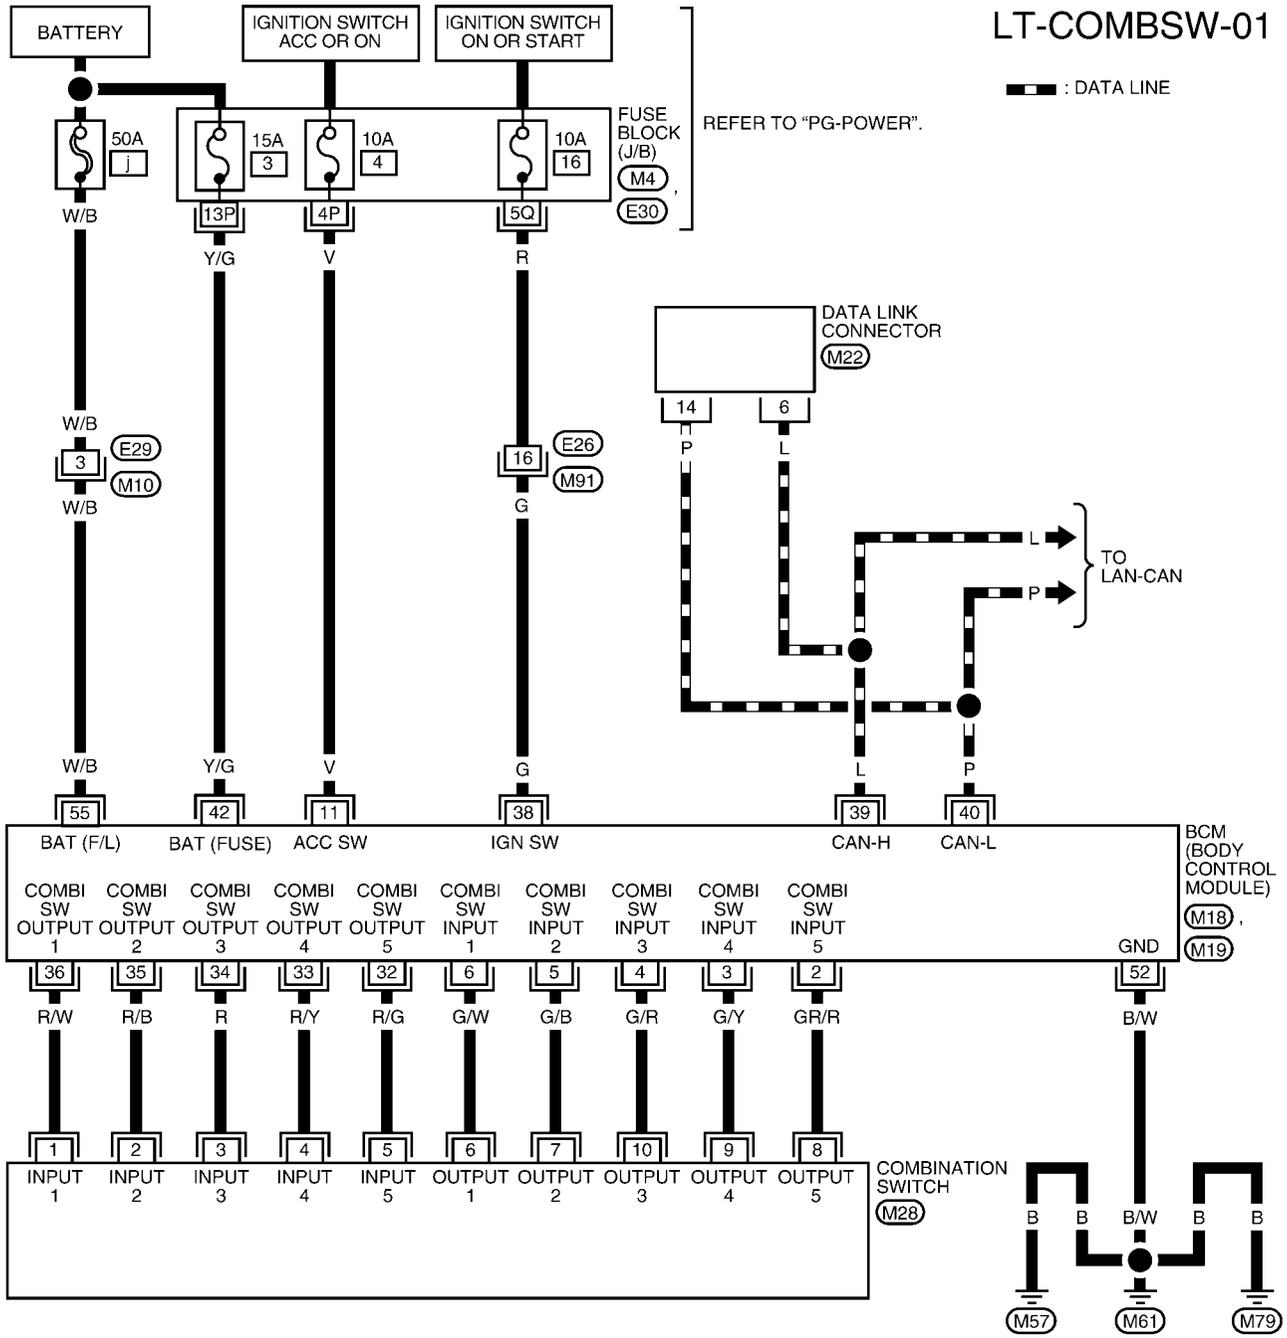

WKWA3914E

COMBINATION SWITCH

Combination Switch Reading Function

EKS005NR

For details, refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#).

CONSULT-II Function (BCM)

EKS005NS

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


| BCM diagnostic test item | Diagnostic mode | Description |
|--------------------------|-----------------------|--|
| Inspection by part | WORK SUPPORT | Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed. |
| | DATA MONITOR | Displays BCM input/output data in real time. |
| | ACTIVE TEST | Operation of electrical loads can be checked by sending drive signal to them. |
| | SELF-DIAG RESULTS | Displays BCM self-diagnosis results. |
| | CAN DIAG SUPPORT MNTR | The result of transmit/receive diagnosis of CAN communication can be read. |
| | ECU PART NUMBER | BCM part number can be read. |
| | CONFIGURATION | Performs BCM configuration read/write functions. |

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

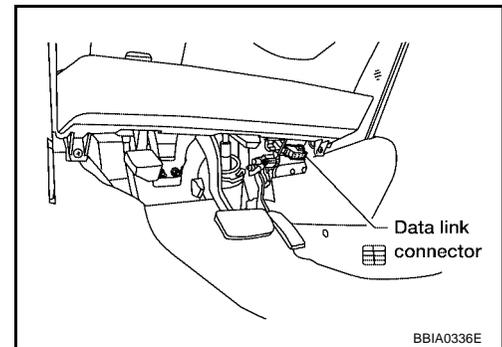

2. Touch "START (NISSAN BASED VHCL)".

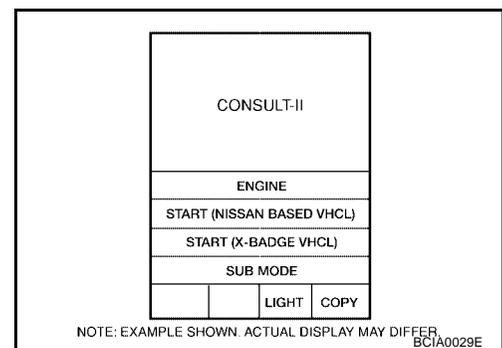


3. Touch "BCM" on "SELECT SYSTEM" screen.
If "BCM" is not indicated, go to [GI-37, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

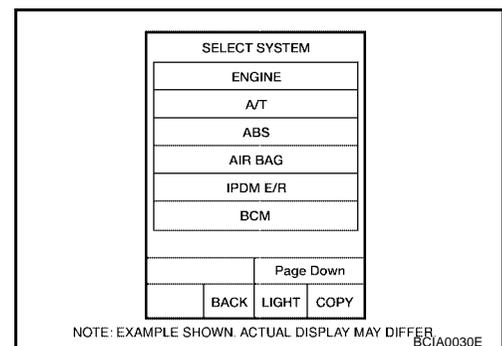

COMBINATION SWITCH

4. Touch "COMB SW".

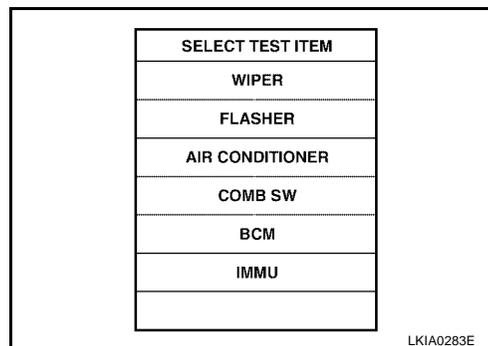

DATA MONITOR

Operation Procedure

1. Touch "COMB SW" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

| | |
|---------------------|---|
| ALL SIGNALS | Monitors all the signals. |
| SELECTION FROM MENU | Selects and monitors individual signal. |

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the signals will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

| Monitor item name "OPERATION OR UNIT" | Contents |
|--|---|
| TURN SIGNAL R "ON/OFF" | Displays "Turn Right (ON)/Other (OFF)" status, determined from lighting switch signal. |
| TURN SIGNAL L "ON/OFF" | Displays "Turn Left (ON)/Other (OFF)" status, determined from lighting switch signal. |
| HI BEAM SW "ON/OFF" | Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal. |
| HEAD LAMP SW 1 "ON/OFF" | Displays "Headlamp switch 1 (ON)/Other (OFF)" status, determined from lighting switch signal. |
| HEAD LAMP SW 2 "ON/OFF" | Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal. |
| LIGHT SW 1ST "ON/OFF" | Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal. |
| PASSING SW "ON/OFF" | Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal. |
| AUTO LIGHT SW "ON/OFF" | Displays "Auto light switch (ON)/Other (OFF)" status, determined from lighting switch signal. |
| FR FOG SW "ON/OFF" | Displays "Front fog lamp switch (ON)/Other (OFF)" status, determined from lighting switch signal. |
| FR WIPER HI "ON/OFF" | Displays "Front Wiper HI (ON)/Other (OFF)" status, determined from wiper switch signal. |
| FR WIPER LOW "ON/OFF" | Displays "Front Wiper LOW (ON)/Other (OFF)" status, determined from wiper switch signal. |
| FR WIPER INT "ON/OFF" | Displays "Front Wiper INT (ON)/Other (OFF)" status, determined from wiper switch signal. |
| FR WASHER SW "ON/OFF" | Displays "Front Washer Switch (ON)/Other (OFF)" status, determined from wiper switch signal. |
| INT VOLUME [1 - 7] | Displays intermittent operation knob setting (1 - 7), determined from wiper switch signal. |
| RR WIPER ON "ON/OFF" | Displays "Rear Wiper (ON)/(OFF)" status, determined from wiper switch signal. |
| RR WIPER INT "ON/OFF" | Displays "Rear Wiper INT (ON)/(OFF)" status, determined from wiper switch signal. |
| RR WASHER SW "ON/OFF" | Displays "Rear Washer (ON)/(OFF)" status, determined from wiper switch signal. |

COMBINATION SWITCH

EKS005NT

Combination Switch Inspection

1. SYSTEM CHECK

- Referring to table below, check to which system the malfunctioning switch belongs.

| System 1 | System 2 | System 3 | System 4 | System 5 |
|--------------|--------------|--------------|------------|------------|
| — | FR WASHER | FR WIPER LO | TURN LH | TURN RH |
| FR WIPER HI | — | FR WIPER INT | PASSING | HEAD LAMP1 |
| INT VOLUME 1 | RR WASHER | — | HEAD LAMP2 | HI BEAM |
| RR WIPER INT | INT VOLUME 3 | AUTO LIGHT | — | TAIL LAMP |
| INT VOLUME 2 | RR WIPER ON | — | FR FOG | — |

>> GO TO 2.

2. SYSTEM CHECK

 With CONSULT-II

CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.

- Connect CONSULT-II, and select "COMB SW" on "SELECT TEST ITEM" screen.
- Select "DATA MONITOR".
- Select "START" and confirm that other switches in malfunctioning system operate normally.

Example: When auto light switch is malfunctioning, confirm that "FRONT WIPER LOW" and "FRONT WIPER INT" in System 3, to which the auto light switch belongs, turn ON-OFF normally.

| DATA MONITOR | |
|---------------|-----------|
| MONITOR | |
| TURN SIGNAL R | OFF |
| TURN SIGNAL L | OFF |
| HIBEAM SW | OFF |
| HEAD LAMP SW1 | OFF |
| HEAD LAMP SW2 | OFF |
| LIGHT SW 1ST | OFF |
| PASSING SW | OFF |
| AUTO LIGHT SW | OFF |
| FR FOG SW | OFF |
| | Page Down |
| | RECORD |
| MODE | BACK |
| LIGHT | COPY |

SKIA7075E

 Without CONSULT-II

Operate combination switch and confirm that other switches in malfunctioning system operate normally.

Example: When auto light switch is malfunctioning, confirm that "FRONT WIPER LOW" and "FRONT WIPER INT" in System 3, to which the auto light switch belongs, operate normally.

Check results

Other switches in malfunctioning system operate normally.>>Replace lighting switch or wiper switch.


Other switches in malfunctioning system do not operate normally.>>GO TO 3.

COMBINATION SWITCH

3. HARNESS INSPECTION

1. Disconnect BCM and combination switch connectors.
2. Check for continuity between BCM harness connector of the suspect system and the corresponding combination switch connector terminals.

| Suspect system | Terminals | | | | Continuity | |
|----------------|-----------|-----------------------|--------------------|-----------------------|------------|-----|
| | BCM | | Combination switch | | | |
| | Connector | Terminal (Wire color) | Connector | Terminal (Wire color) | | |
| 1 | M18 | Input 1 | 6 (G/W) | M28 | 6 (G/W) | Yes |
| | | Output 1 | 36 (R/W) | | 1 (R/W) | |
| 2 | | Input 2 | 5 (G/B) | | 7 (G/B) | |
| | | Output 2 | 35 (R/B) | | 2 (R/B) | |
| 3 | | Input 3 | 4 (G/R) | | 10 (G/R) | |
| | | Output 3 | 34 (R) | | 3 (R) | |
| 4 | | Input 4 | 3 (G/Y) | | 9 (G/Y) | |
| | | Output 4 | 33 (R/Y) | | 4 (R/Y) | |
| 5 | | Input 5 | 2 (GR/R) | | 8 (GR/R) | |
| | | Output 5 | 32 (R/G) | | 5 (R/G) | |

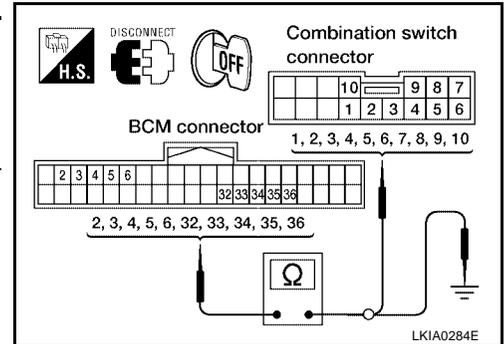

3. Check for continuity between each terminal of BCM harness connector in suspect malfunctioning system and ground.

| Suspect system | Terminals | | | | Continuity |
|----------------|-----------|-----------------------|----------|--------|------------|
| | BCM | | | | |
| | Connector | Terminal (Wire color) | | | |
| 1 | M18 | Input 1 | 6 (G/W) | Ground | No |
| | | Output 1 | 36 (R/W) | | |
| 2 | | Input 2 | 5 (G/B) | | |
| | | Output 2 | 35 (R/B) | | |
| 3 | | Input 3 | 4 (G/R) | | |
| | | Output 3 | 34 (R) | | |
| 4 | | Input 4 | 3 (G/Y) | | |
| | | Output 4 | 33 (R/Y) | | |
| 5 | | Input 5 | 2 (GR/R) | | |
| | | Output 5 | 32 (R/G) | | |

OK or NG

OK >> GO TO 4.

NG >> Check harness between BCM and combination switch for open or short circuit.

COMBINATION SWITCH

4. BCM OUTPUT TERMINAL INSPECTION


1. Turn lighting switch and wiper switch to OFF.
2. Set wiper dial to position 4.
3. Connect BCM and combination switch connectors, and check combination switch input (BCM output) terminal voltage waveform of suspect malfunctioning system.

| Suspect system | Terminals | |
|----------------|------------------------|-----------------------|
| | Combination switch (+) | |
| | Connector | Terminal (Wire color) |
| 1 | M28 | Input 1 1 (R/W) |
| 2 | | Input 2 2 (R/B) |
| 3 | | Input 3 3 (R) |
| 4 | | Input 4 4 (R/Y) |
| 5 | | Input 5 5 (R/G) |

OK or NG

OK >> Open circuit in combination switch, GO TO 5.

NG >> Replace BCM. Refer to [BCS-19, "Removal and Installation of BCM"](#).

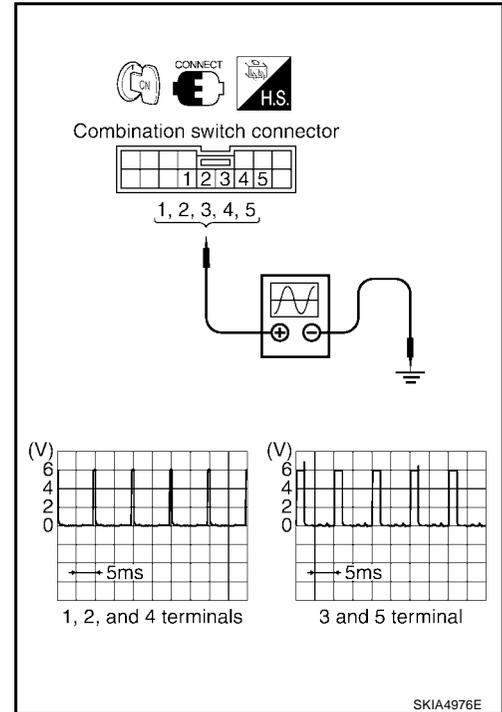

5. COMBINATION SWITCH INSPECTION

Referring to table below, perform combination switch inspection.

| Procedure | | | | | | | | | |
|--------------------------|------------------------|----|-----------------------|------------------------|----|----------------------|------------------------|----|------------------------|
| 1 | 2 | | 3 | 4 | | 5 | 6 | | 7 |
| Replace lighting switch. | Confirm check results. | OK | INSPECTION END | Confirm check results. | OK | INSPECTION END | Confirm check results. | OK | INSPECTION END |
| | | NG | Replace wiper switch. | | NG | Replace switch base. | | NG | Confirm symptom again. |

>> Inspection End.

Removal and Installation

Refer to [LT-99, "Removal and Installation"](#).

Switch Circuit Inspection

Refer to [LT-104, "Combination Switch Inspection"](#).

EKS005NU

EKS005NV

STOP LAMP

STOP LAMP

PFP:26550

System Description

EKS005NW

Power is supplied at all times

- through 10A fuse [No. 20, located in fuse block (J/B)]
- to stop lamp switch terminal 1.

When the brake pedal is pressed, the stop lamp switch is closed and power is supplied

- through stop lamp switch terminal 2
- to rear combination lamp LH and RH terminal 1
- to high-mounted stop lamp terminal +.

Ground is supplied

- to rear combination lamp LH terminal 5
- through grounds B7 and B19, and
- to rear combination lamp RH terminal 5
- through grounds B117 and B132, and
- to high-mounted stop lamp terminal –
- through grounds D403 and D404.

With power and ground supplied, the stop lamps illuminate.

A

B

C

D

E

F

G

H

I

J

LT

L



M

STOP LAMP

Wiring Diagram — STOP/L —

EKS005NX

LT-STOP/L-01

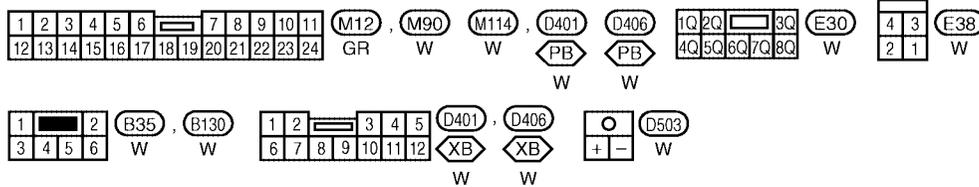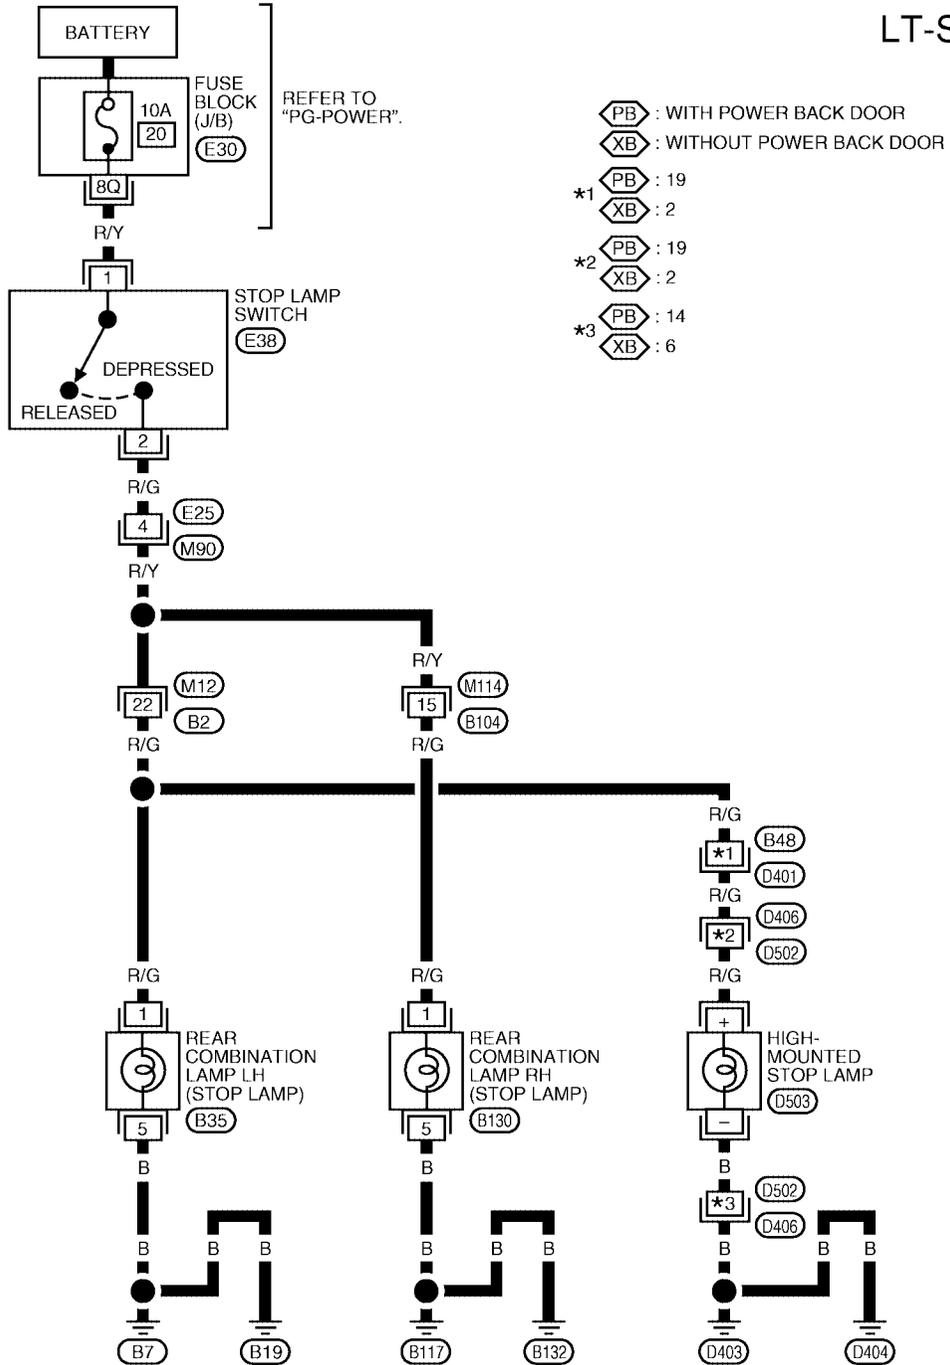

WKWA1934E

STOP LAMP


High-Mounted Stop Lamp

EKS005NY

BULB REPLACEMENT, REMOVAL AND INSTALLATION

1. Remove back door upper finisher. Refer to [EI-36, "BACK DOOR UPPER FINISHER"](#) .
2. Remove rear washer nozzle.
3. Disconnect connector.
4. Remove 2 nuts and remove high-mounted stop lamp.
5. Turn bulb socket counterclockwise to remove it from the high-mounted stop lamp housing.
6. Pull bulb from socket.

Installation is in the reverse order of removal.

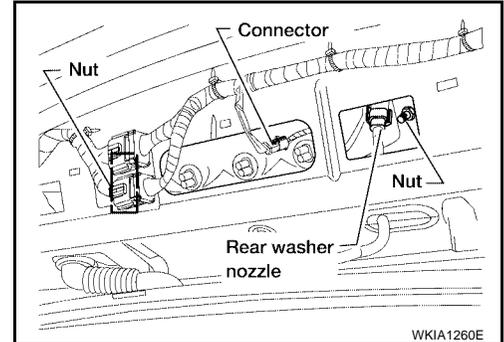

Stop Lamp

BULB REPLACEMENT

Refer to [LT-126, "Bulb Replacement"](#) in REAR COMBINATION LAMP.

REMOVAL AND INSTALLATION

Refer to [LT-126, "Removal and Installation"](#) in REAR COMBINATION LAMP.

EKS005NZ

A
B
C
D
E
F
G
H
I
J
LT
L
M

LT

BACK-UP LAMP


PF2:26550

EKS00500


BACK-UP LAMP

Wiring Diagram — BACK/L —

LT-BACK/L-01

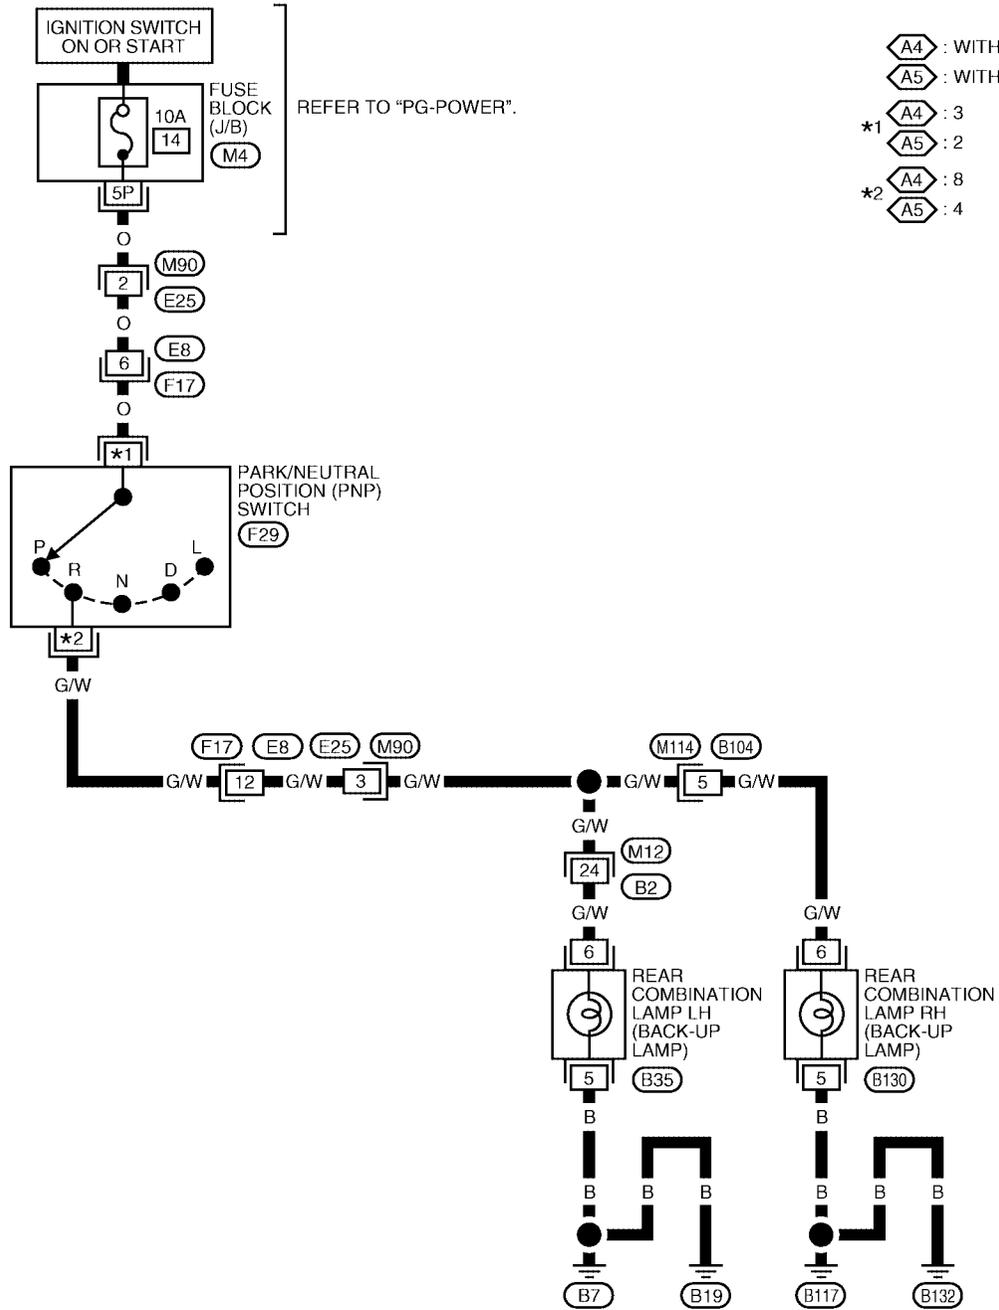

- A4 : WITH 4-SPEED A/T
- A5 : WITH 5-SPEED A/T
- *1 A4 : 3
- A5 : 2
- *2 A4 : 8
- A5 : 4

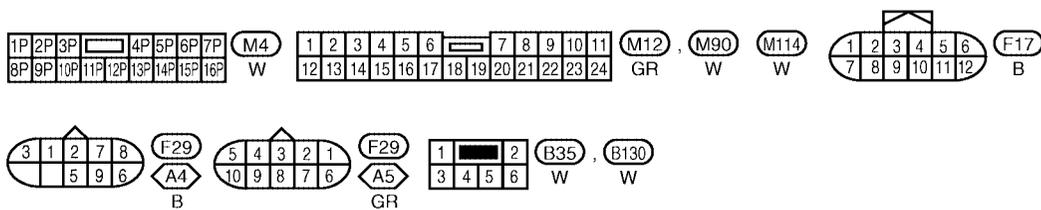

WKWA1935E

BACK-UP LAMP

Bulb Replacement

EKS00501

Refer to [LT-126, "Bulb Replacement"](#) in REAR COMBINATION LAMP.

A

Removal and Installation

EKS00502

Refer to [LT-126, "Removal and Installation"](#) in REAR COMBINATION LAMP.

B

C

D

E

F

G

H

I

J

LT

L

M


PARKING, LICENSE PLATE AND TAIL LAMPS

PARKING, LICENSE PLATE AND TAIL LAMPS

PF2:26550

Component Parts and Harness Connector Location

EKS00503

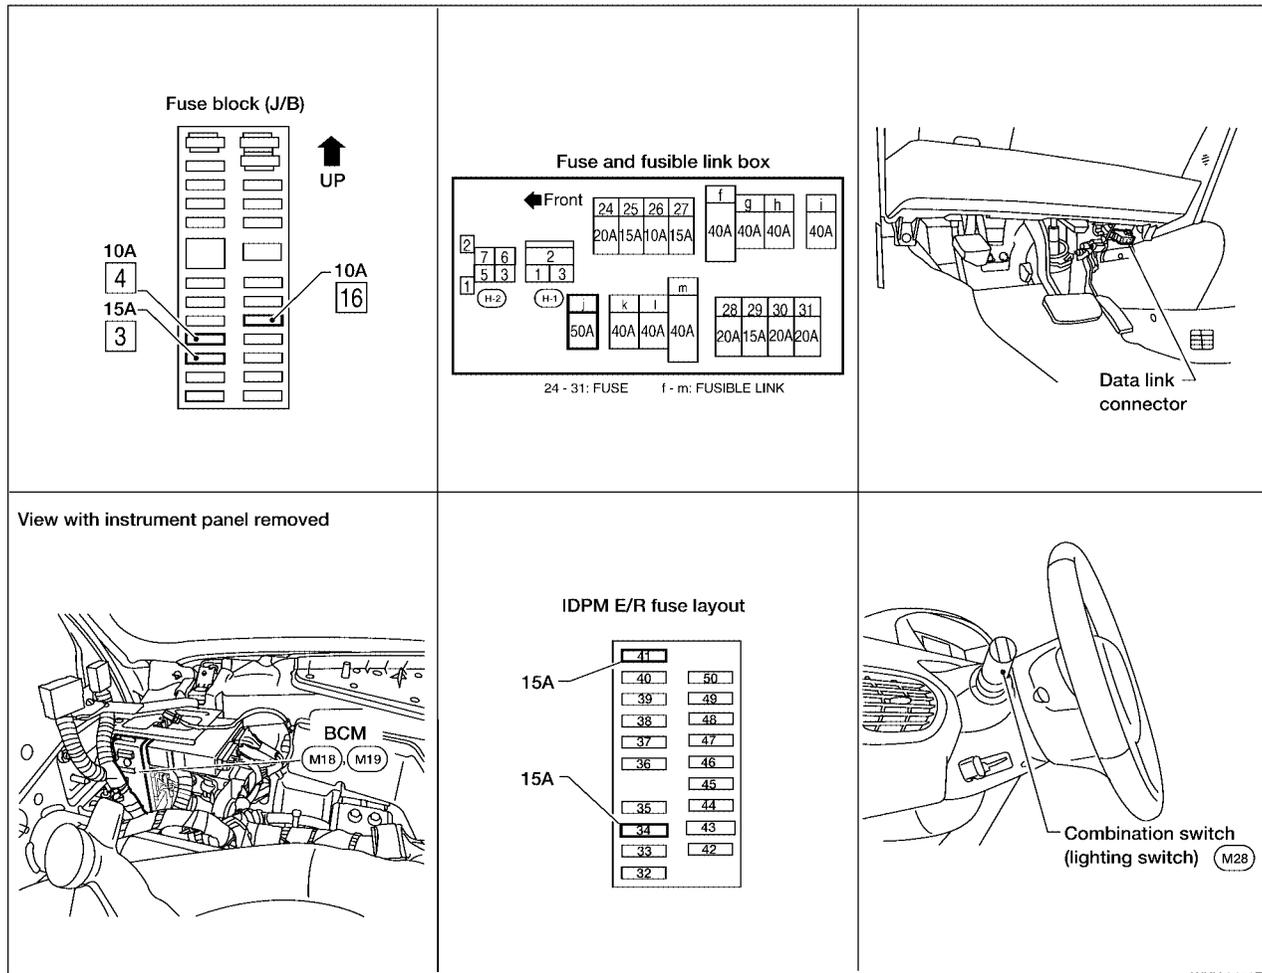

WK1A3451E

System Description

EKS00504

Control of the parking, license plate, and tail lamp operation is dependent upon the position of the lighting switch (combination switch). When the lighting switch is placed in the 1ST position, the BCM (body control module) receives input signal requesting the parking, license plate and tail lamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the tail lamp relay coil. This relay, when energized, directs power to the parking, license plate and tail lamps, which then illuminate. Power is supplied at all times

- through 15A fuse (No. 41, located in the IPDM E/R)
- to tail lamp relay, located in the IPDM E/R, and
- through 15A fuse (No. 34 located in the IPDM E/R)
- to CPU in the IPDM E/R, and
- to ignition relay, located in the IPDM E/R, and
- through 50A fusible link (letter j, located in the fuse and fusible link box)
- to BCM terminal 55, and
- through 15A fuse [No. 3, located in the fuse block (J/B)]
- to BCM terminal 42.

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [No. 16, located in the fuse block (J/B)]
- to BCM terminal 38, and
- to ignition relay, located in the IPDM E/R.

PARKING, LICENSE PLATE AND TAIL LAMPS

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 52
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 60
- through grounds E9, E15 and E24.

OPERATION BY LIGHTING SWITCH

With the lighting switch in the 1ST or 2ND position (or if the auto light system is activated), the BCM receives input signal requesting the parking, license plate and tail lamps to illuminate. This input signal is communicated to the IPDM E/R across the CAN communication lines. The CPU in the IPDM E/R controls the tail lamp relay coil, which when energized, directs power

- through IPDM E/R terminal 22
- to front combination lamp LH and RH terminal 3
- to license plate lamp LH and RH terminal +
- to rear combination lamp LH and RH terminal 2.

Ground is supplied

- to front combination lamp LH and RH terminal 1
- through grounds E9, E15 and E24, and
- to license plate lamp LH and RH terminal –
- through grounds D403 and D404, and
- to rear combination lamp LH terminal 5
- through grounds B7 and B19, and
- to rear combination lamp RH terminal 5
- through grounds B117 and B132.

With power and ground supplied, the parking, license plate and tail lamps illuminate.

COMBINATION SWITCH READING FUNCTION

Refer to [LT-102, "Combination Switch Reading Function"](#) .

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 1ST (or 2ND) position and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the parking, license and tail lamps remain illuminated for 5 minutes, then the parking, license plate and tail lamps are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

CAN Communication System Description

Refer to [LAN-5, "CAN COMMUNICATION"](#) .

EKS00505

A

B

C

D

E

F

G

H

I

J

LT


L

M

PARKING, LICENSE PLATE AND TAIL LAMPS

Schematic

EKS00506

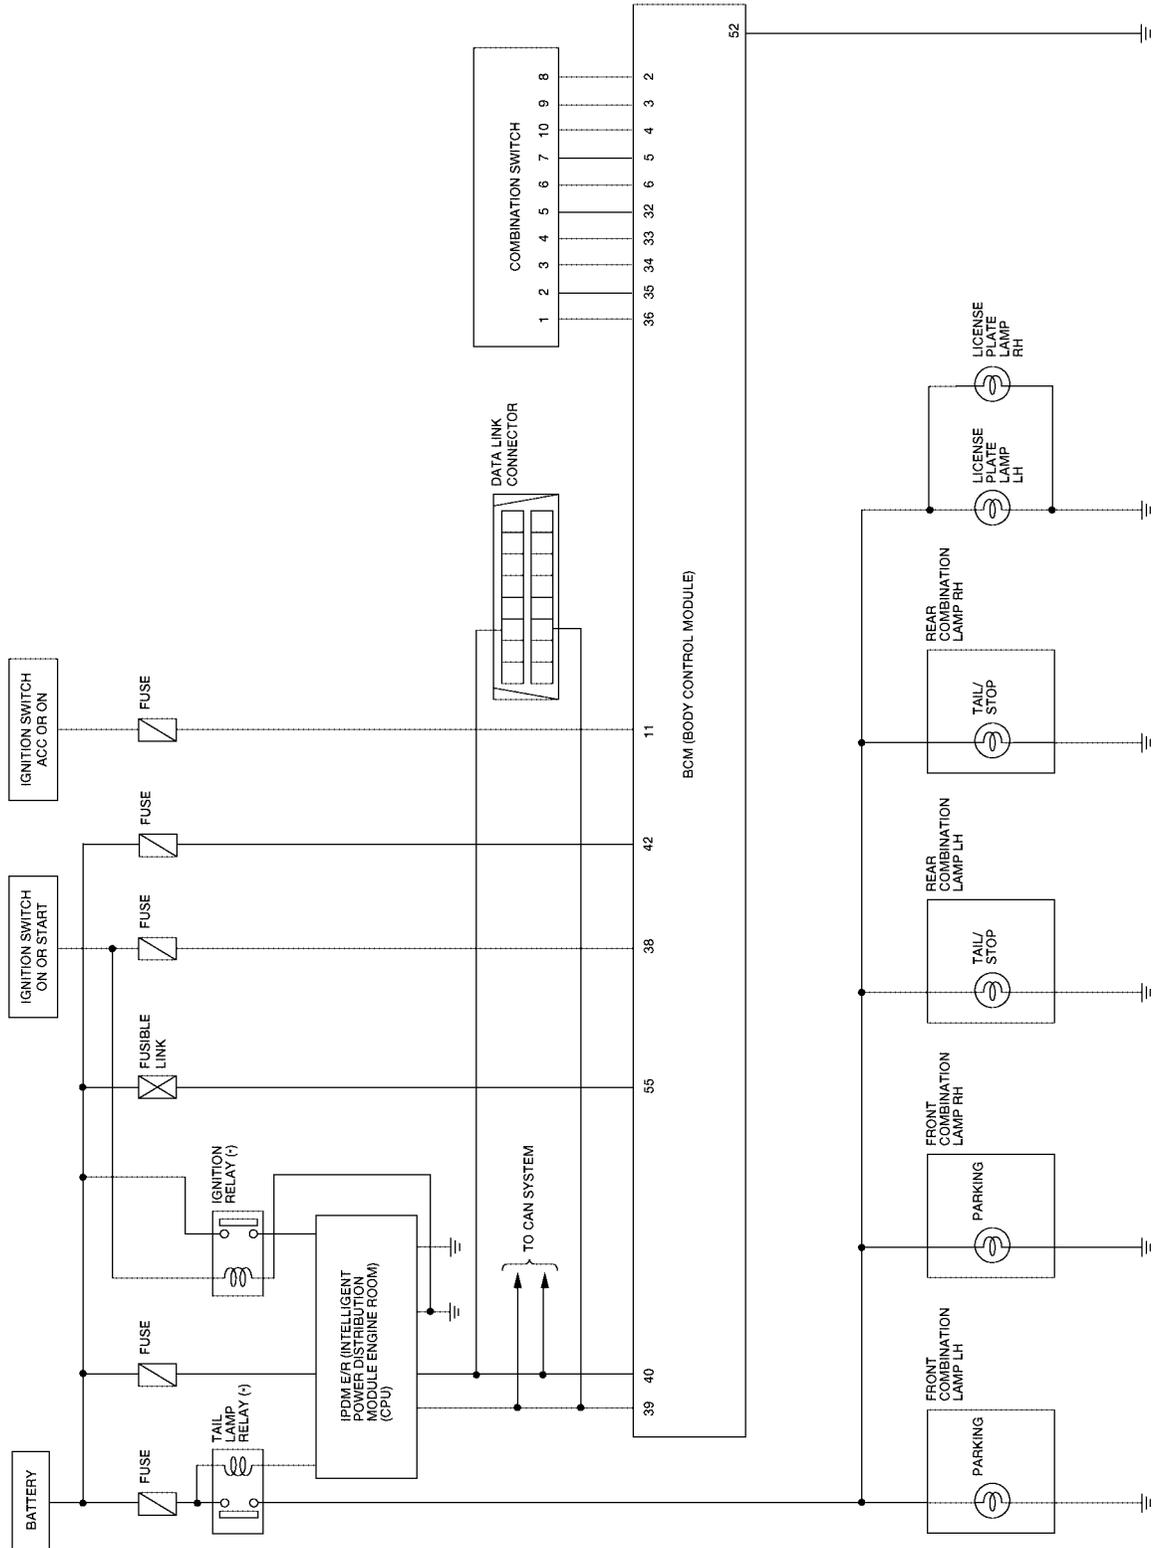

WKWA1936E



PARKING, LICENSE PLATE AND TAIL LAMPS

Wiring Diagram — TAIL/L —

EKS00507

LT-TAIL/L-01

— : DATA LINE



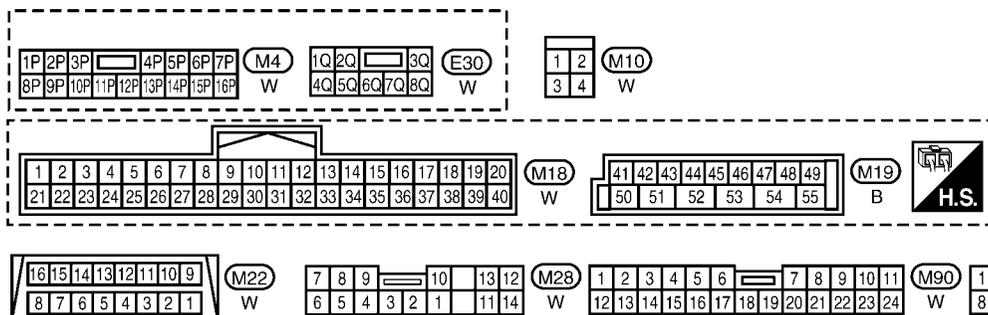
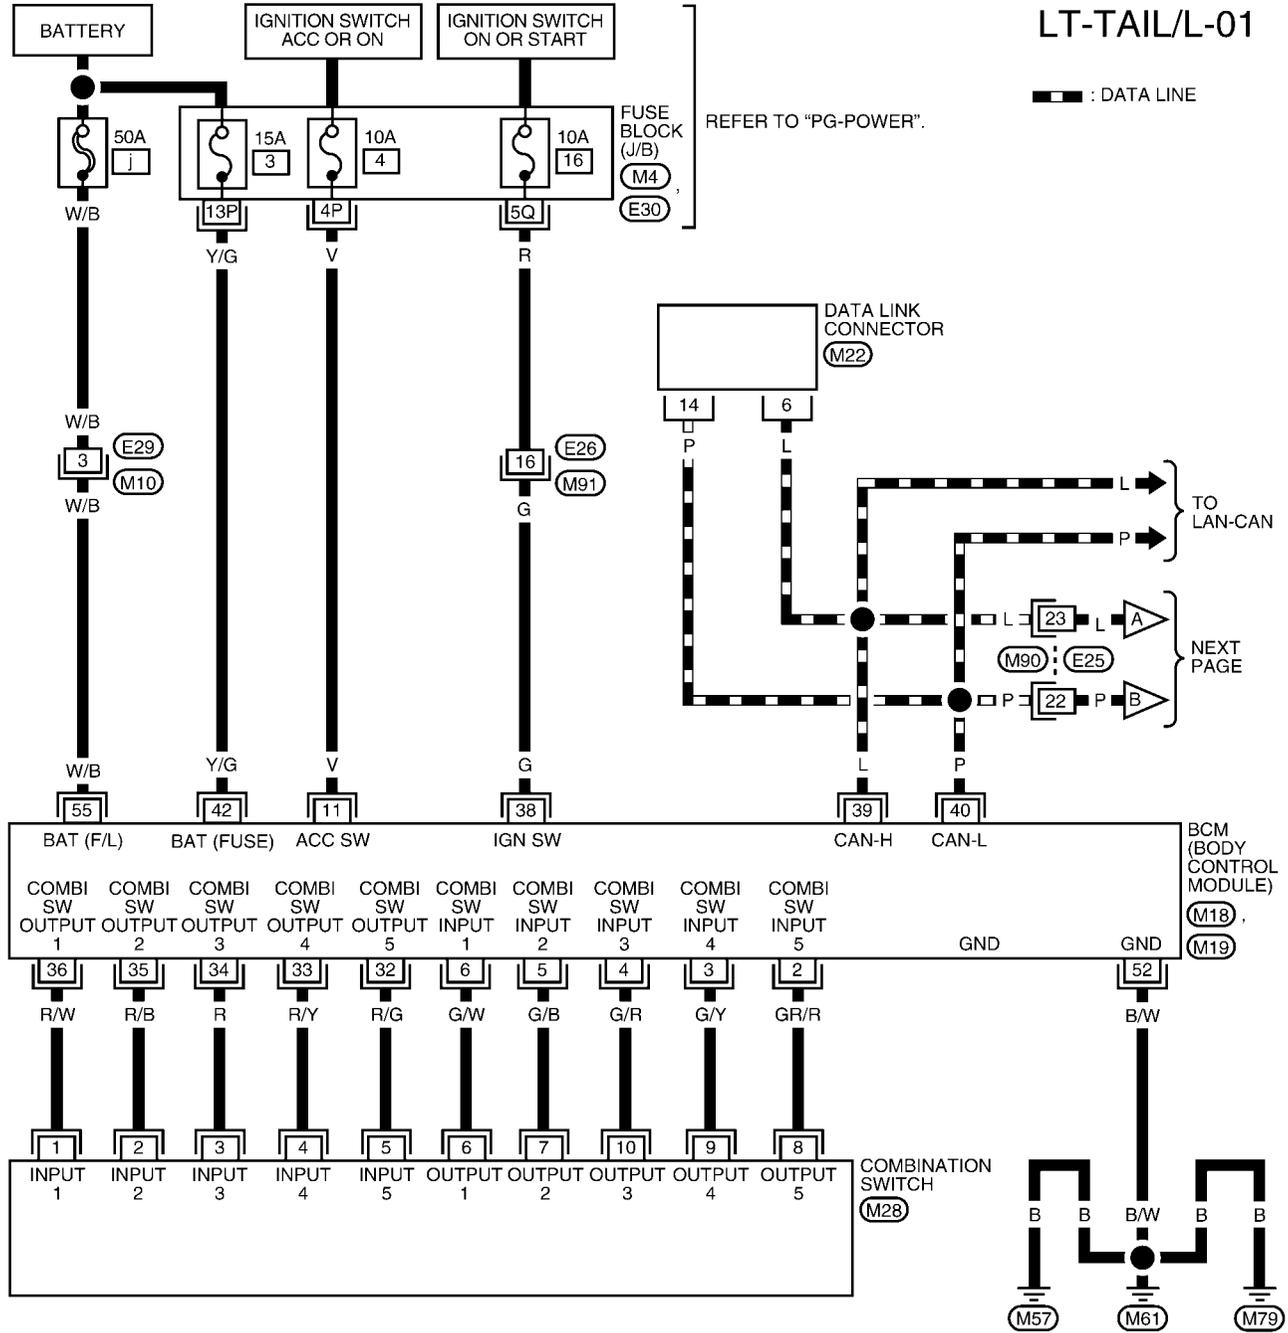


WKWA3915E

PARKING, LICENSE PLATE AND TAIL LAMPS

Terminals and Reference Values for BCM

EKS00508
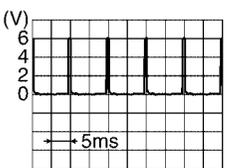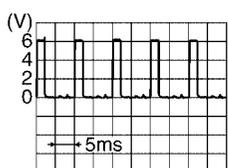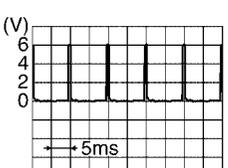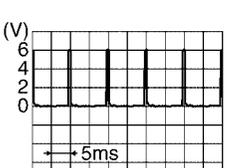
| Terminal No. | Wire color | Signal name | Measuring condition | | Reference value (Approx.) |
|--------------|------------|-----------------------------|---------------------|--|---|
| | | | Ignition switch | Operation or condition | |
| 2 | GR/R | Combination switch input 5 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5291E</p> |
| 3 | G/Y | Combination switch input 4 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5292E</p> |
| 4 | G/R | Combination switch input 3 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5291E</p> |
| 5 | G/B | Combination switch input 2 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5292E</p> |
| 6 | G/W | Combination switch input 1 | | | |
| 11 | V | Ignition switch (ACC) | ACC | — | Battery voltage |
| 32 | R/G | Combination switch output 5 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5291E</p> |
| 33 | R/Y | Combination switch output 4 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5292E</p> |
| 34 | R | Combination switch output 3 | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5291E</p> |

PARKING, LICENSE PLATE AND TAIL LAMPS

| Terminal No. | Wire color | Signal name | Measuring condition | | Reference value (Approx.) |
|--------------|------------|-------------------------------------|---------------------|--|---------------------------|
| | | | Ignition switch | Operation or condition | |
| 35 | R/B | Combination switch output 2 | ON | Lighting, turn, wiper OFF Wiper dial position 4 | |
| 36 | R/W | Combination switch output 1 | | | |
| 38 | G | Ignition switch (ON) | ON | — | Battery voltage |
| 39 | L | CAN-H | — | — | — |
| 40 | P | CAN-L | — | — | — |
| 42 | Y/G | Battery power supply | OFF | — | Battery voltage |
| 52 | B/W | Ground | ON | — | 0V |
| 55 | W/B | Battery power supply (fusible link) | OFF | — | Battery voltage |

Terminals and Reference Values for IPDM E/R

EKS00509

| Terminal No. | Wire color | Signal name | Measuring condition | | Reference value (Approx.) | |
|--------------|------------|---------------------------------|---------------------|------------------------------|---------------------------|-----------------|
| | | | Ignition switch | Operation or condition | | |
| 22 | R/L | Parking, license, and tail lamp | ON | Lighting switch 1ST position | OFF | 0V |
| | | | | | ON | Battery voltage |
| 38 | B | Ground | ON | — | 0V | |
| 48 | L | CAN-H | — | — | — | |
| 49 | P | CAN-L | — | — | — | |
| 60 | B | Ground | ON | — | 0V | |

How to Proceed With Trouble Diagnosis

EKS0050A

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-112, "System Description"](#).
3. Carry out the Preliminary Check. Refer to [LT-119, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction.
5. Do the parking, license and tail lamps operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

EKS0050B

CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES OR FUSIBLE LINK

Check for blown fuses or fusible link.

| Unit | Power source | Fuse No. |
|----------|--------------------------------------|----------|
| BCM | Battery | j |
| | | 3 |
| | Ignition switch ON or START position | 16 |
| | Ignition switch ACC or ON position | 4 |
| IPDM E/R | Battery | 34 |
| | | 41 |

PARKING, LICENSE PLATE AND TAIL LAMPS

Refer to [LT-115, "Wiring Diagram — TAIL/L —"](#).

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

| Terminals | | (-) | Ignition switch position | | |
|-----------|-----------|--------|--------------------------|-----------------|-----------------|
| (+) | Connector | | Terminal (Wire color) | OFF | ACC |
| M18 | 11 (V) | Ground | 0V | Battery voltage | Battery voltage |
| | 38 (G) | | 0V | 0V | Battery voltage |
| M19 | 42 (Y/G) | | Battery voltage | Battery voltage | Battery voltage |
| | 55 (W/B) | | Battery voltage | Battery voltage | Battery voltage |

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse.

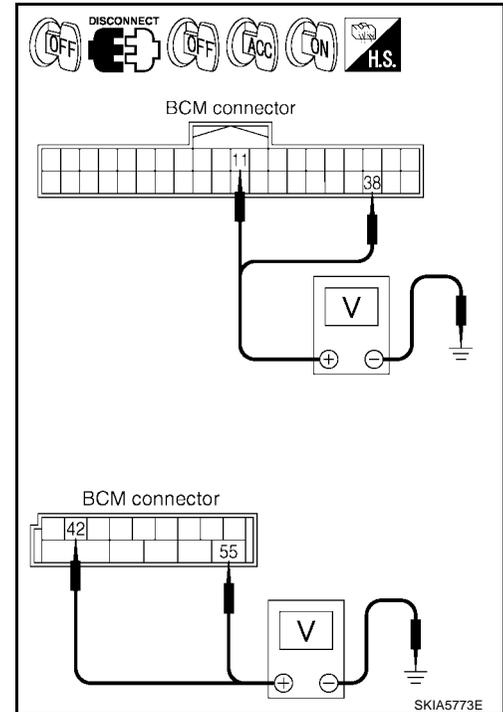

3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

| Terminals | | | Continuity |
|-----------|-----------------------|--------|------------|
| Connector | Terminal (Wire color) | | |
| M19 | 52 (B/W) | Ground | Yes |

OK or NG

OK >> Inspection End.

NG >> Check ground circuit harness.

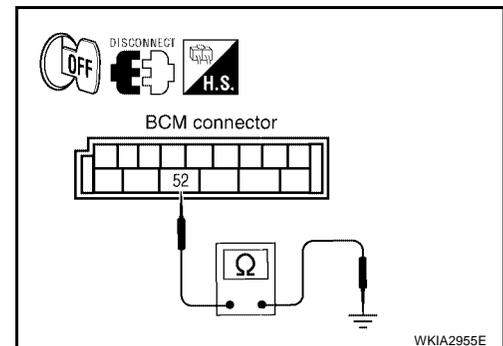

CONSULT-II Functions

EKS0050C

Refer to [LT-15, "CONSULT-II Function \(BCM\)"](#) and [LT-18, "CONSULT-II Function \(IPDM E/R\)"](#) in HEAD-LAMP (FOR USA).

PARKING, LICENSE PLATE AND TAIL LAMPS

4. CHECK INPUT SIGNAL


Ⓜ With CONSULT-II

1. Turn ignition switch OFF.
2. Disconnect front combination lamp, license plate lamp and rear combination lamp connectors.
3. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
4. Select "TAIL LAMP" on "SELECT TEST ITEM" screen.
5. Touch "ON" on "ACTIVE TEST" screen.
6. When tail lamp is operating, check voltage between front combination lamp, license plate lamp, rear combination lamp harness connector and ground.


ⓧ Without CONSULT-II

1. Turn ignition switch OFF.
2. Start auto active test. Refer to [PG-22, "Auto Active Test"](#).
3. When tail lamp is operating, check voltage between front combination lamp, license plate lamp, rear combination lamp harness connector and ground.


| Terminals | | | | Voltage |
|----------------------------|------|--------------------------|--------|-----------------|
| Front combination lamp (+) | | Terminal (Wire color) | (-) | |
| Connector | | | | |
| RH | E107 | 3 (R/L) | Ground | Battery voltage |
| LH | E11 | | | |

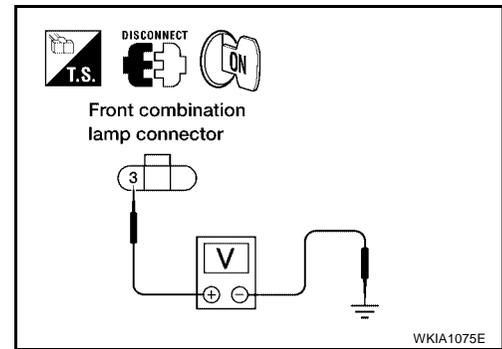

| Terminals | | | | Voltage |
|------------------------|------|--------------------------|--------|-----------------|
| License plate lamp (+) | | Terminal (Wire color) | (-) | |
| Connector | | | | |
| RH | D508 | + (R/L) | Ground | Battery voltage |
| LH | D509 | | | |

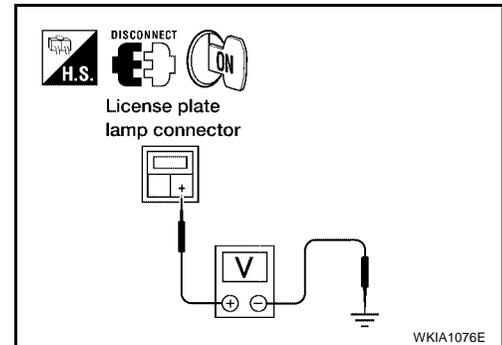

| Terminals | | | | Voltage |
|---------------------------|------|--------------------------|--------|-----------------|
| Rear combination lamp (+) | | Terminal (Wire color) | (-) | |
| Connector | | | | |
| RH | B130 | 2 (R/L) | Ground | Battery voltage |
| LH | B35 | | | |

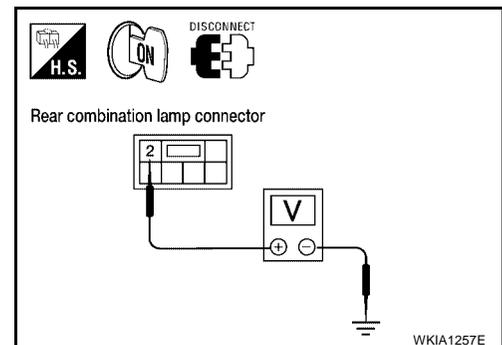

OK or NG


- OK >> GO TO 6.
 NG >> GO TO 5.

PARKING, LICENSE PLATE AND TAIL LAMPS

5. CHECK PARKING, LICENSE PLATE AND TAIL LAMP CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front combination lamp harness connector.

| Terminals | | | | | Continuity |
|-----------|-----------------------|------------------------|-----------------------|---------|------------|
| IPDM E/R | | Front combination lamp | | | |
| Connector | Terminal (Wire color) | Connector | Terminal (Wire color) | | |
| E122 | 22 (R/L) | RH | E107 | 3 (R/L) | Yes |
| | | LH | E11 | | |

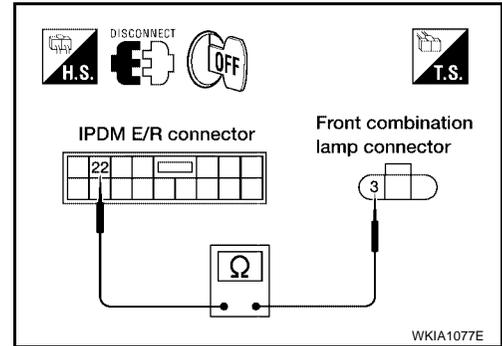


4. Check continuity between IPDM E/R harness connector and license plate lamp harness connector.

| Terminals | | | | | Continuity |
|-----------|-----------------------|--------------------|-----------------------|---------|------------|
| IPDM E/R | | License plate lamp | | | |
| Connector | Terminal (Wire color) | Connector | Terminal (Wire color) | | |
| E122 | 22 (R/L) | RH | D508 | + (R/L) | Yes |
| | | LH | D509 | | |

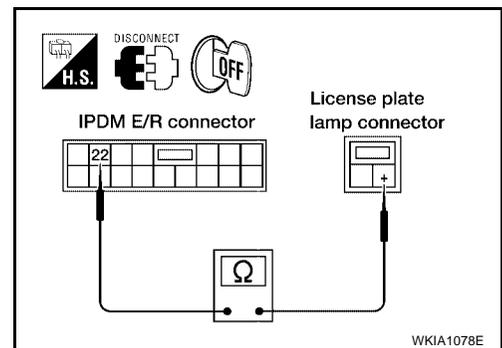

5. Check continuity between IPDM E/R harness connector and rear combination lamp harness connector.

| Terminals | | | | | Continuity |
|-----------|-----------------------|-----------------------|-----------------------|---------|------------|
| IPDM E/R | | Rear combination lamp | | | |
| Connector | Terminal (Wire color) | Connector | Terminal (Wire color) | | |
| E122 | 22 (R/L) | RH | B130 | 2 (R/L) | Yes |
| | | LH | B35 | | |

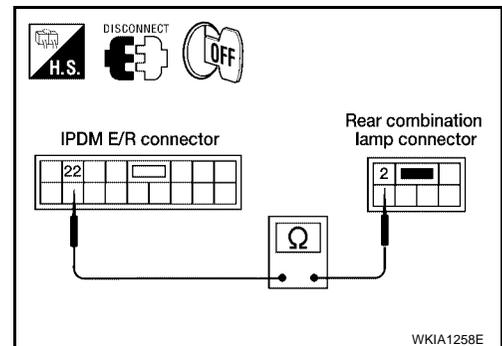

OK or NG


- OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#).
- NG >> Repair harness or connector.

PARKING, LICENSE PLATE AND TAIL LAMPS

6. CHECK GROUND


1. Check continuity between front combination lamp harness connector and ground.

| Terminals | | | | Continuity |
|------------------------|------|--------------------------|--------|------------|
| Front combination lamp | | Terminal (Wire color) | Ground | |
| Connector | | | | |
| RH | E107 | 1 (B) | Ground | Yes |
| LH | E11 | | | |

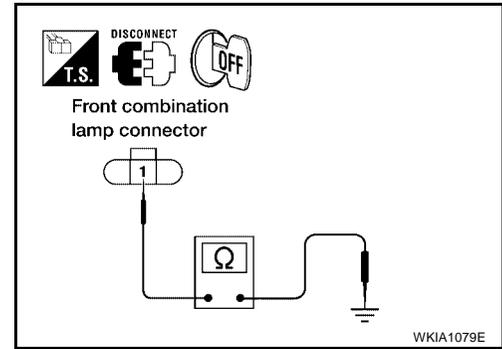


2. Check continuity between license lamp plate harness connector and ground.

| Terminals | | | | Continuity |
|--------------------|------|--------------------------|--------|------------|
| License plate lamp | | Terminal (Wire color) | Ground | |
| Connector | | | | |
| RH | D508 | - (B) | Ground | Yes |
| LH | D509 | | | |

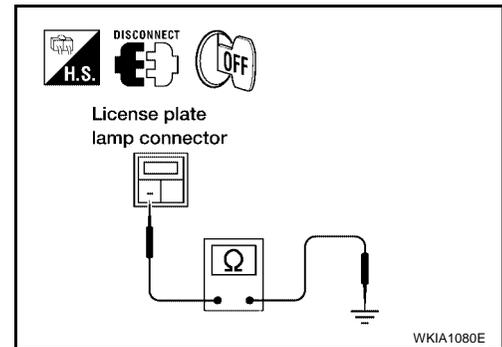

3. Check continuity between rear combination lamp harness connector and ground.

| Terminals | | | | Continuity |
|-----------------------|------|--------------------------|--------|------------|
| Rear combination lamp | | Terminal (Wire color) | Ground | |
| Connector | | | | |
| RH | B130 | 5 (B) | Ground | Yes |
| LH | B35 | | | |

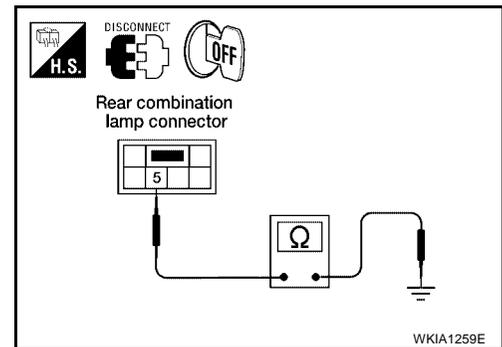

OK or NG

- OK >> Check bulbs.
- NG >> Repair harness or connector.

Parking, License Plate and Tail Lamps Do Not Turn OFF (After Approx. 10 Minutes)

EKS0050E

1. CHECK IPDM E/R

1. Turn ignition switch ON. Turn the combination switch (lighting switch) to the OFF position. Turn ignition switch OFF.
2. Verify that the parking, license plate, and tail lamps turn on and off after approximately 10 minutes.

OK or NG

- OK >> Ignition relay malfunction. Refer to [PG-17, "Function of Detecting Ignition Relay Malfunction"](#).
- NG >> Inspection End.

PARKING, LICENSE PLATE AND TAIL LAMPS

Front Parking Lamp BULB REPLACEMENT

EKS0050F

For bulb replacement, refer to [LT-28, "FRONT TURN SIGNAL/PARKING LAMP"](#) .

Tail Lamp BULB REPLACEMENT

EKS0050G

For bulb replacement, refer to [LT-126, "Bulb Replacement"](#) .

A

B

C

D

E

F

G

H

I

J

LT

L

M

REAR COMBINATION LAMP

REAR COMBINATION LAMP


PFP:26554

Bulb Replacement

EKS0050I

1. Remove rear combination lamp mounting bolts.
2. Pull rear combination lamp to remove from the vehicle.
3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb.

Installation is in the reverse order of removal.

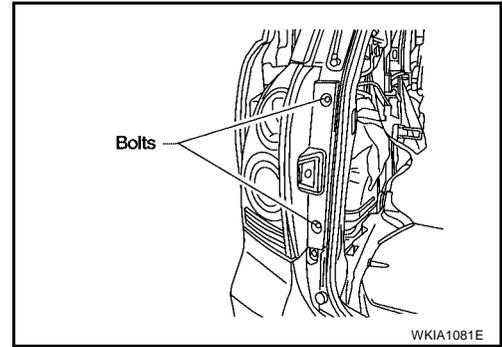


Removal and Installation

EKS0050J


1. Remove rear lower finisher assembly. Refer to [EI-36. "REAR LOWER FINISHER ASSEMBLY"](#) .
2. Disconnect rear combination lamp connector.
3. Remove rear combination lamp mounting bolts.
4. Pull rear combination lamp to remove from the vehicle.

Rear combination lamp mounting bolts : 2.6 N-m (0.27 kg-m, 23 in-lb)

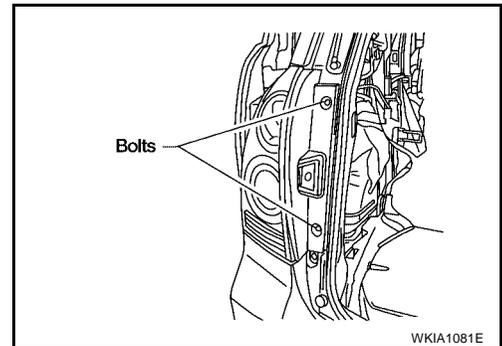

Installation is in the reverse order of removal.

- Install rear combination lamp harness and grommet so that paint mark on grommet is at top and harness points down.

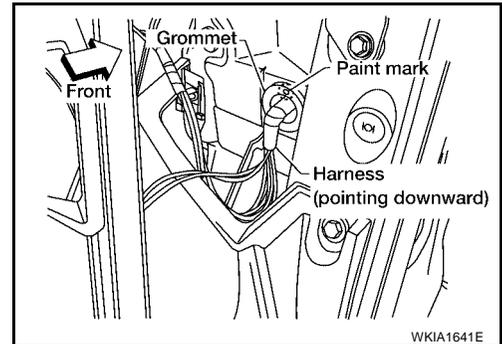


TRAILER TOW

PFP:93020

TRAILER TOW

Component Parts and Harness Connector Location

EKS006HZ

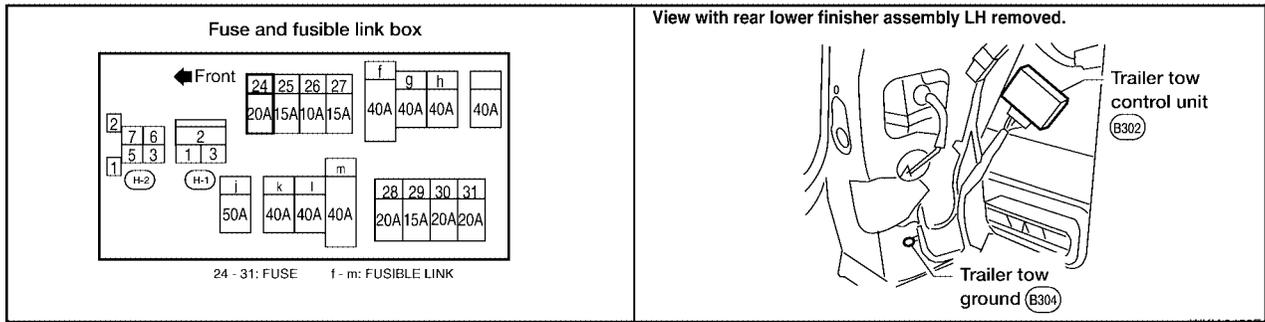

System Description

EKS006HW

Power is supplied at all times

- through 20A fuse (No. 24, located in the fuse and fusible link box)
- to trailer tow control unit terminal 7.

Ground is supplied

- to trailer tow control unit terminal 5
- to trailer harness connector terminal 5
- through ground B304.

TRAILER TAIL LAMP OPERATION

The trailer tail lamps are controlled by the trailer tow control unit.

With the lighting switch in the parking and tail lamp ON (1ST) position, AUTO position (and the auto light system is activated) or headlamp ON (2ND) position, power is supplied

- to trailer tow control unit terminal 3
- through rear combination lamp LH.

TRAILER STOP, TURN SIGNAL AND HAZARD LAMP OPERATION

The trailer stop, turn signal and hazard lamps are all controlled by the trailer tow control unit. The trailer tow control unit regulates the amount of voltage supplied to the trailer lamps. If either turn signal or the hazard lamps are turned on and the trailer tow control unit gets a brake lamp input, the trailer tow control unit supplies more voltage to the trailer lamps to make them illuminate brighter.

Stop lamp input is supplied

- to trailer tow control unit terminal 8
- through rear combination lamp LH.

Left turn signal and hazard lamp input is supplied

- to trailer tow control unit terminal 4
- through rear combination lamp LH.

Right turn signal and hazard lamp input is supplied

- to trailer tow control unit terminal 9
- through rear combination lamp RH.

Based on the stop lamp, turn signal lamp and hazard lamp inputs to the trailer tow control unit, power is supplied to trailer stop/turn lamp LH

- through trailer tow control unit terminal 2
- to trailer harness connector terminal 2.

Power is also supplied to trailer stop/turn lamp RH



- through trailer tow control unit terminal 6
- to trailer harness connector terminal 6.

TRAILER TOW

Wiring Diagram — T/TOW —

EKS006HX

LT-T/TOW-01

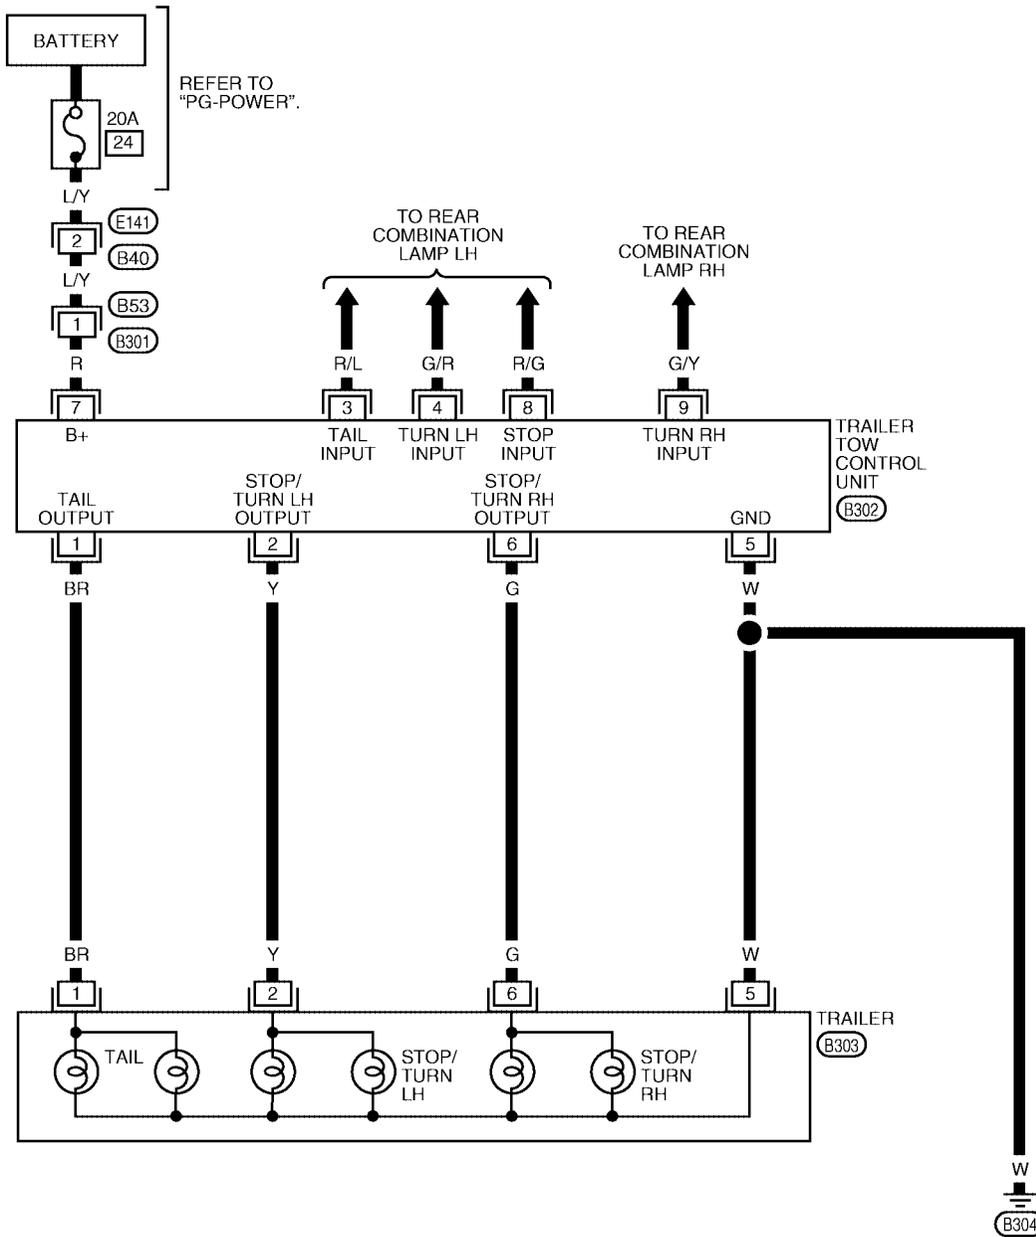

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

WKWA1940E

TRAILER TOW

Trouble Diagnoses TRAILER TOW CONTROL UNIT INSPECTION TABLE

EKS006HY

| Terminal No. | Wire color | Item | Condition | Voltage (Approx.) |
|--------------|------------|----------------------------|--|-----------------------------|
| 1 | BR | Tail lamps signal output | When tail lamps operate | Battery |
| | | | All other conditions | 0 |
| 2 | Y | Stop/LH turn lamp (output) | When brake pedal is depressed | Battery |
| | | | When LH turn lamps or hazard lamps operate | Battery (intermittently) |
| | | | All other conditions | 0 |
| 3 | R/L | Tail lamps signal input | When tail lamps operate | Battery |
| | | | All other conditions | 0 |
| 4 | G/B | LH turn lamps input | When LH turn lamps or hazard lamps operate | Battery (intermittently) |
| | | | All other conditions | 0 |
| 5 | W | Ground | — | — |
| 6 | G | Stop/RH turn lamp (output) | When brake pedal is depressed | Battery |
| | | | When RH turn lamps or hazard lamps operate | Battery (intermittently) |
| | | | All other conditions | 0 |
| 7 | R | Power supply | — | Battery |
| 8 | R/G | Stop lamps signal input | When brake pedal is depressed | Battery |
| | | | When brake pedal is released | 0 |
| 9 | G/Y | RH turn lamps input | When RH turn lamps or hazard lamps operate | Battery (intermittently) |
| | | | All other conditions | 0 |

A
B
C
D
E
F
G
H
I
J

LT

L
M


INTERIOR ROOM LAMP

PF2:26410

INTERIOR ROOM LAMP

Component Parts and Harness Connector Location

EKS0050K

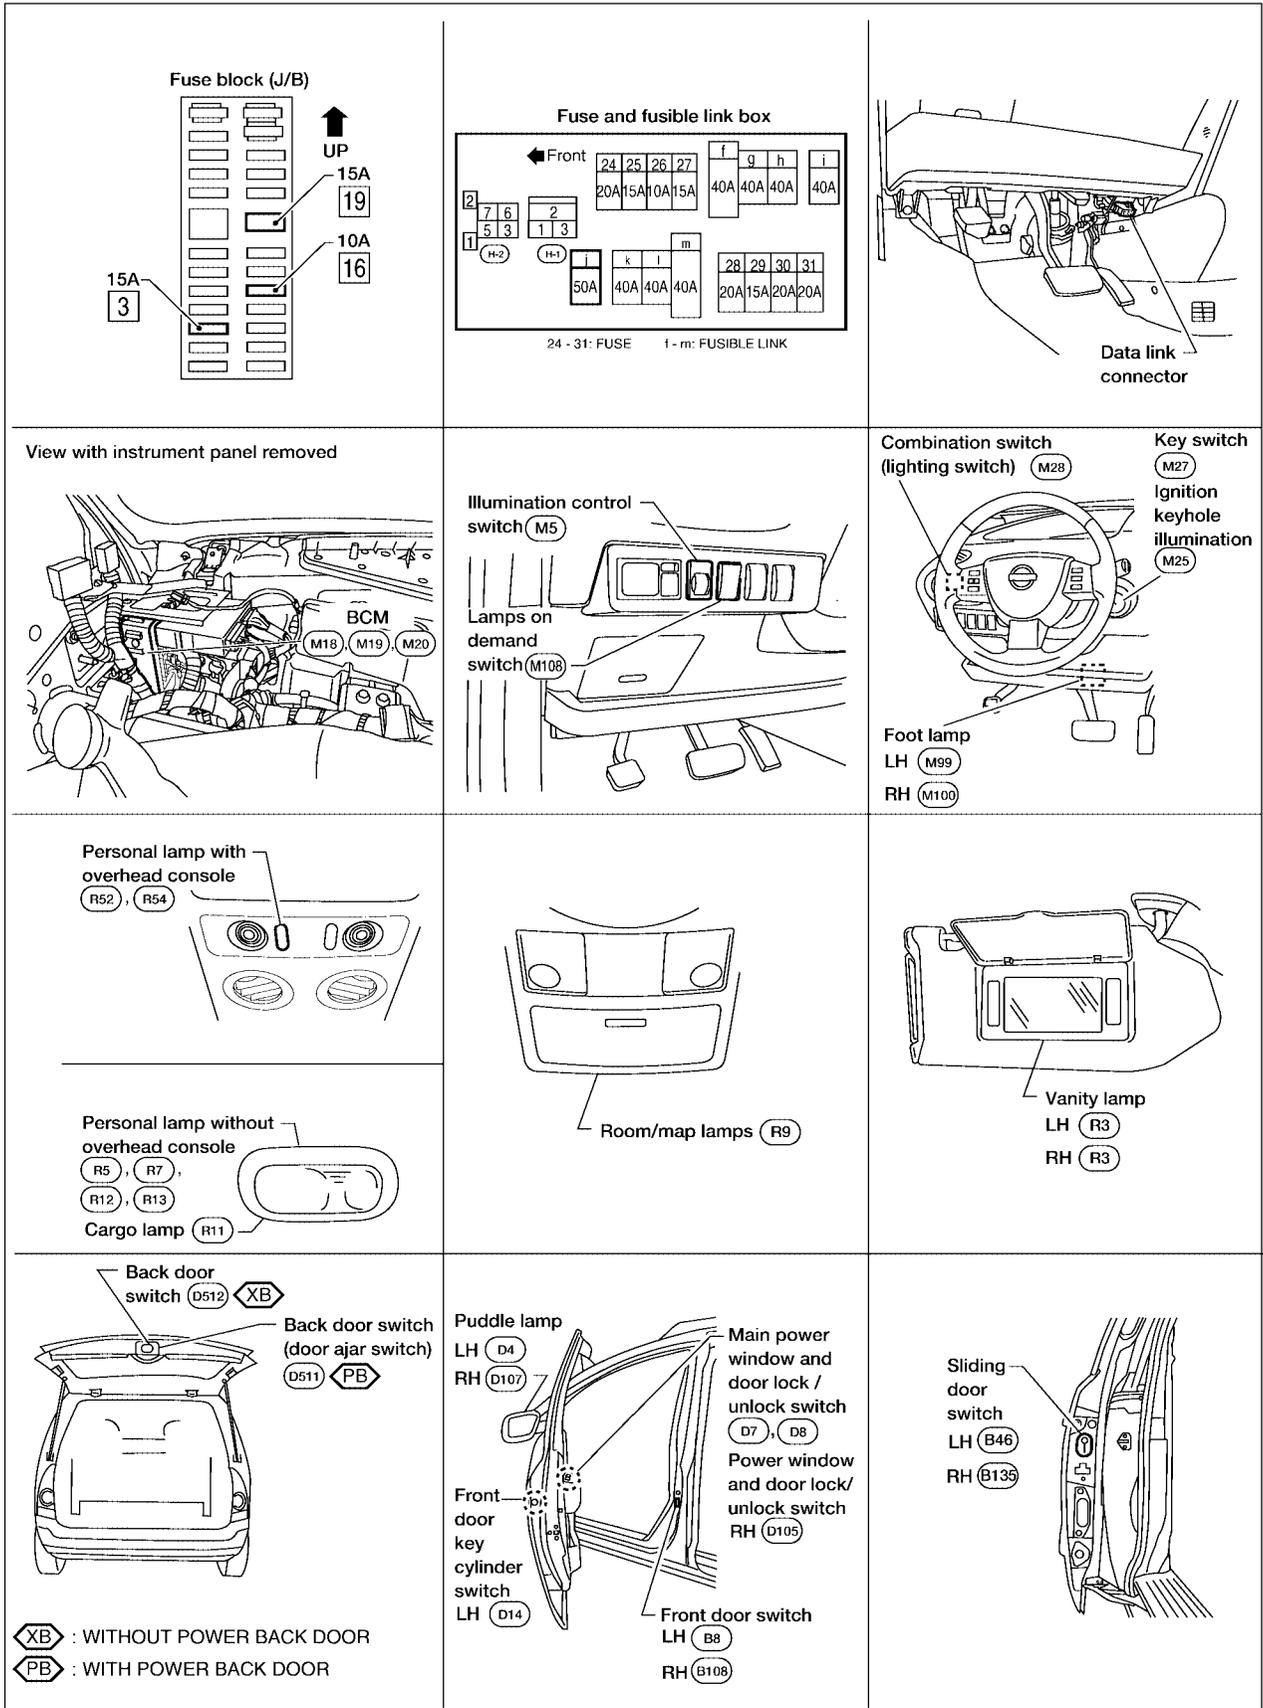

WKIA3151E

INTERIOR ROOM LAMP

System Description

EKS0050L

When lamps on demand switch is in DOOR position, room/map lamp and personal lamp ON/OFF is controlled by timer according to signals from switches including key switch, front door switch driver side, unlock signal from keyfob, door lock and unlock switch, key cylinder lock and unlock switch, ignition switch.

When room/map lamp and personal lamp turns ON, there is a gradual brightening over 1 second. When room/map lamp and personal lamp turns OFF, there is a gradual dimming over 1 second.

The room/map lamp and personal lamp timer is controlled by the BCM (body control module).

Room/map lamp and personal lamp timer control settings can be changed with CONSULT-II.

Ignition keyhole illumination turns ON when driver door is opened (door switch ON) or key is removed from key cylinder. Illumination turns OFF when driver door is closed (door switch OFF).

Step and foot lamp turns ON when driver door, passenger or rear doors are opened (door switch ON). Lamp turns OFF when driver, passenger and rear doors are closed (all door switches OFF).

POWER SUPPLY AND GROUND

Power is supplied at all times

- through 15A fuse [No. 19, located in the fuse block (J/B)]
- to key switch terminal 1, and
- through 15A fuse [No. 3, located in the fuse block (J/B)]
- to BCM terminal 42, and
- through 50A fusible link (letter j , located in the fuse and fusible link box)
- to BCM terminal 55.

When the key is inserted in key switch, power is supplied

- through the key switch terminal 2
- to BCM terminal 37.

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [No. 16, located in the fuse block (J/B)]
- to BCM terminal 38.

Ground is supplied

- to BCM terminal 52
- through grounds M57, M61 and M79.

When the driver side door is opened, ground is supplied

- to BCM terminal 62
- through case ground of front door switch LH.

When the passenger side door is opened, ground is supplied

- to BCM terminal 12
- through case ground of front door switch RH.

When the sliding door LH is opened, ground is supplied

- to BCM terminal 63
- through case ground of sliding door switch LH.

When the sliding door RH is opened, ground is supplied

- to BCM terminal 13
- through case ground of sliding door switch RH.

When the liftgate is opened, ground is supplied

- to BCM terminal 58
- through back door switch terminal 1 (without power back door auto closure system) or back door latch (door ajar switch) terminal 7 (with power back door auto closure system)
- through back door switch terminal 3 (without power back door auto closure system) or back door latch (door ajar switch) terminal 8 (with power back door auto closure system)
- through grounds D403 and D404.

When the driver or passenger side door is unlocked by the door lock and unlock switch, BCM receives a ground signal

- to BCM terminal 22

A
B
C
D
E
F
G
H
I
J
LT
L
M

INTERIOR ROOM LAMP

- to main power window and door lock/unlock switch terminal 14 (with rear power vent windows) or terminal 12 (without rear power vent windows) and power window and door lock/unlock switch RH terminal 16
- through grounds M57, M61 and M79.

When the driver side door is unlocked by the key, the BCM receives a ground signal

- to BCM terminal 22
- through main power window and door lock/unlock switch terminal 14 (with rear power vent windows) or terminal 12 (without rear power vent windows)
- through main power window and door lock/unlock switch terminal 6 (with rear power vent windows) or terminal 7 (without rear power vent windows)
- through front door key cylinder switch LH terminal 6
- through front door key cylinder switch LH terminal 5
- through grounds M57, M61 and M79.

When a signal, or combination of signals is received by BCM, ground is supplied

- through BCM terminal 48
- to door mirror (puddle lamp) LH and RH terminal 2 (if equipped)
- to running board lamps pre-wiring terminal 1
- to lamps on demand switch terminal 3
- through lamps on demand switch terminal 4
- to room/map lamps terminal 2
- to personal lamps terminal 2 (without rear roof console assembly) or terminal 3 (with rear roof console assembly).

With power and ground supplied, the lamps illuminate.

SWITCH OPERATION

When driver door switch is ON (door is opened), ground is supplied

- to ignition keyhole illumination terminal –
- through BCM terminal 1.

And power is supplied

- through BCM terminal 41
- to ignition keyhole illumination terminal +.

When any door switch is ON (door is opened), ground is supplied

- to front step lamp LH and RH and foot lamp LH and RH terminal –
- through BCM terminal 47.

And power is supplied

- through BCM terminal 41
- to front step lamp LH and RH terminal +
- to puddle lamp LH and RH terminal 1 (if equipped)
- to running board lamps terminal 2
- to foot lamp LH and RH terminal +.

When room/map lamps switch is ON, ground is supplied

- to room/map lamps terminal 3
- through grounds M57, M61 and M79.

And power is supplied

- through BCM terminal 41
- to room/map lamps terminal 1.

When vanity mirror lamp LH or RH is ON, ground is supplied

- to vanity mirror lamp LH and RH terminal –
- through grounds M57, M61 and M79.

And power is supplied

- through BCM terminal 41

INTERIOR ROOM LAMP

- to vanity mirror lamp LH and RH terminal +.

When personal lamps 2nd row LH or RH is ON, ground is supplied

- to personal lamps 2nd row terminal 3 (without rear roof console assembly) or terminal 2 (with rear roof console assembly)
- through grounds M57, M61 and M79.

And power is supplied

- through BCM terminal 41
- to personal lamps 2nd row LH and RH terminal 1.

When personal lamps 3rd row LH or RH is ON, ground is supplied

- to personal lamps 3rd row terminal 3 (without rear roof console assembly) or terminal 2 (with rear roof console assembly)
- through grounds M57, M61 and M79.

And power is supplied

- through BCM terminal 41
- to personal lamps 3rd row LH and RH terminal 1.

When cargo lamp is ON, ground is supplied

- to cargo lamp terminal 1
- through grounds M57, M61 and M79.

And power is supplied

- through BCM terminal 41
- to cargo lamp terminal 2.

ROOM LAMP TIMER OPERATION

When lamps on demand switch is in DOOR position and when all conditions below are met, BCM performs timer control (maximum 30 seconds) for interior room/map lamp ON/OFF.

Power is supplied

- through 15A fuse [No. 19, located in the fuse block (J/B)]
- to key switch terminal 1.

Key is removed from ignition key cylinder (key switch OFF), power will not be supplied to BCM terminal 37.

Ground is supplied

- to BCM terminal 22
- through main power window and door lock/unlock switch terminal 14 (with rear power vent windows) or 12 (without rear power vent windows).

At the time that driver door is opened, BCM detects that driver door is unlocked. It determines that interior room/map lamp timer operation conditions are met and turns the interior room/map lamp ON for 30 seconds.

Key is in ignition key cylinder (key switch ON), power is supplied

- through key switch terminal 2
- to BCM terminal 37.

When key is removed from key switch (key switch OFF), power supply to BCM terminal 37 is terminated. BCM detects that key has been removed, determines that interior room/map lamp timer conditions are met, and turns the interior room lamp and map lamp ON for 30 seconds.

When driver door opens → closes and the key is not inserted in the key switch (key switch OFF), BCM terminal 62 changes between 0V (door open) → 12V (door closed). The BCM determines that conditions for interior room/map lamp operation are met and turns the interior room/map lamp ON for 30 seconds.

Timer control is canceled under the following conditions.

- Driver door is locked (when locked with keyfob, main power window and door lock/unlock switch or front door key cylinder switch)
- Driver door is opened (driver door switch turns ON)
- Ignition switch ON.

INTERIOR LAMP BATTERY SAVER CONTROL

If interior lamp is left "ON", it will not be turned out even when door is closed.

BCM turns off interior lamp automatically to save battery 30 minutes after ignition switch is turned off.

BCM controls interior lamps listed below:

A
B
C
D
E
F
G
H
I
J
L
M

LT

INTERIOR ROOM LAMP

- Vanity mirror lamp
- Room/map lamp
- Cargo lamp
- Personal lamp
- Step lamps
- Puddle lamps
- Foot lamps
- Ignition keyhole illumination
- Running board lamps

After lamps turn OFF by the battery saver system, the lamps illuminate again when


- signal received from keyfob, or main power window and door lock/unlock switch or front door key cylinder switch is locked or unlocked
- door is opened or closed
- key is removed from or inserted in ignition key cylinder.

Interior lamp battery saver control period can be changed by the function setting of CONSULT-II.

INTERIOR ROOM LAMP


Schematic

EKS0050M

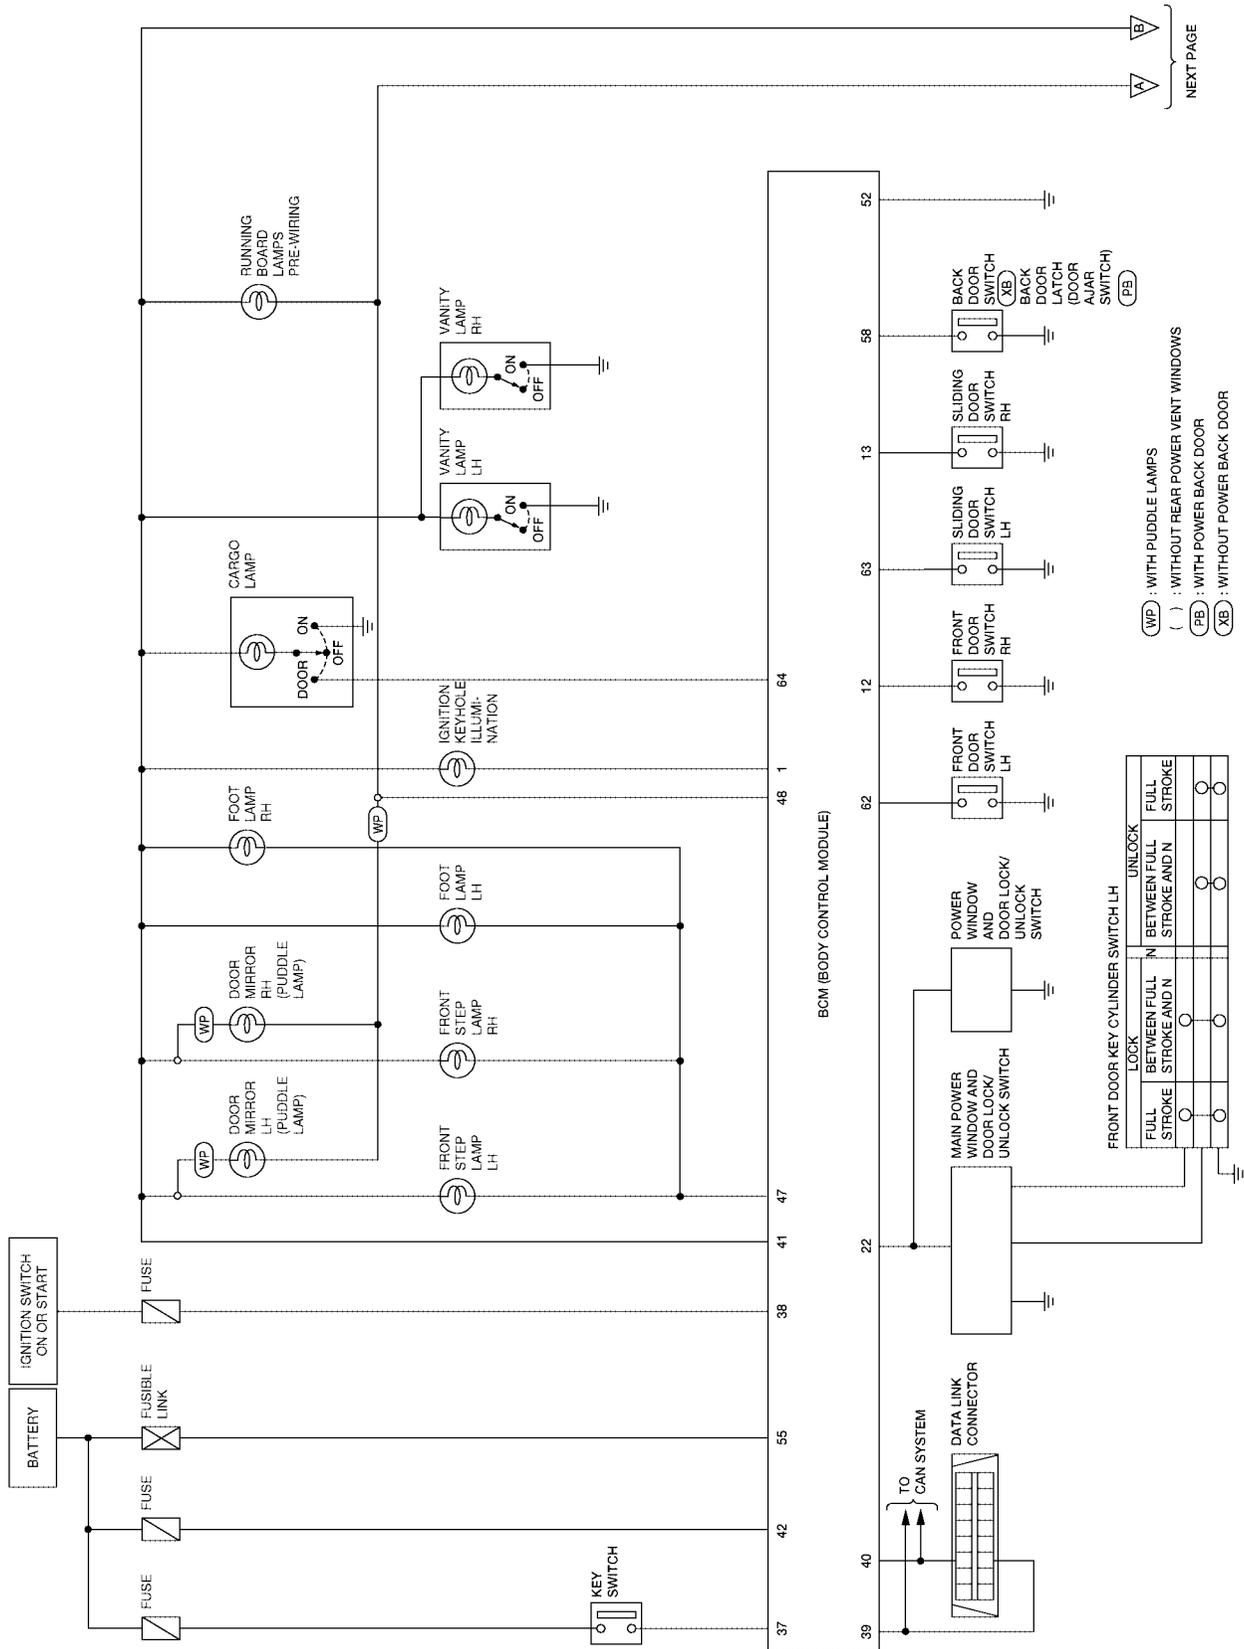

WKWA1941E

INTERIOR ROOM LAMP

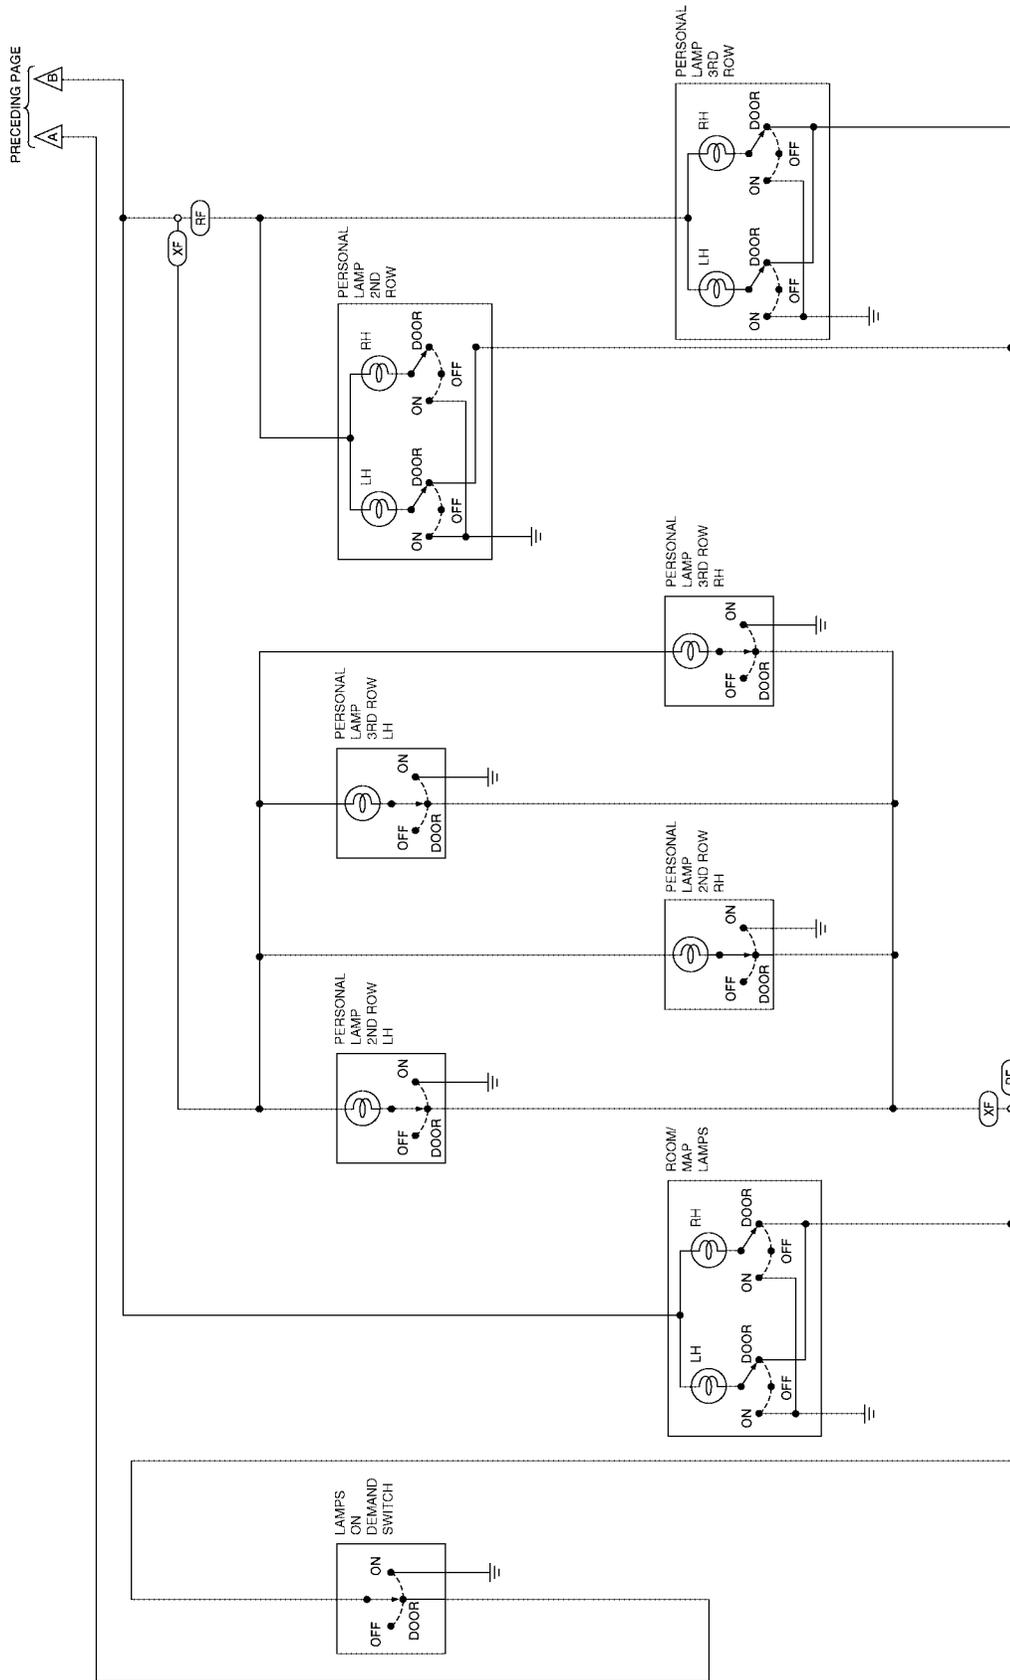

(RF) : WITH REAR ROOF CONSOLE
 (XF) : WITHOUT REAR ROOF CONSOLE

WKWA1942E



INTERIOR ROOM LAMP

Wiring Diagram — INT/L —

EKS0050N

LT-INT/L-01

▬ : DATA LINE

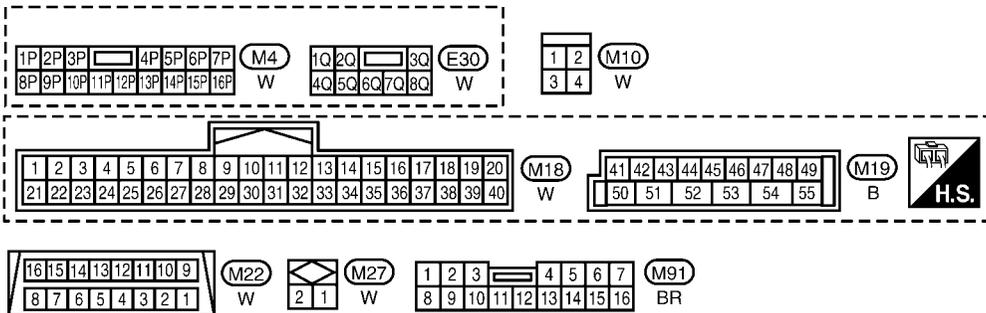
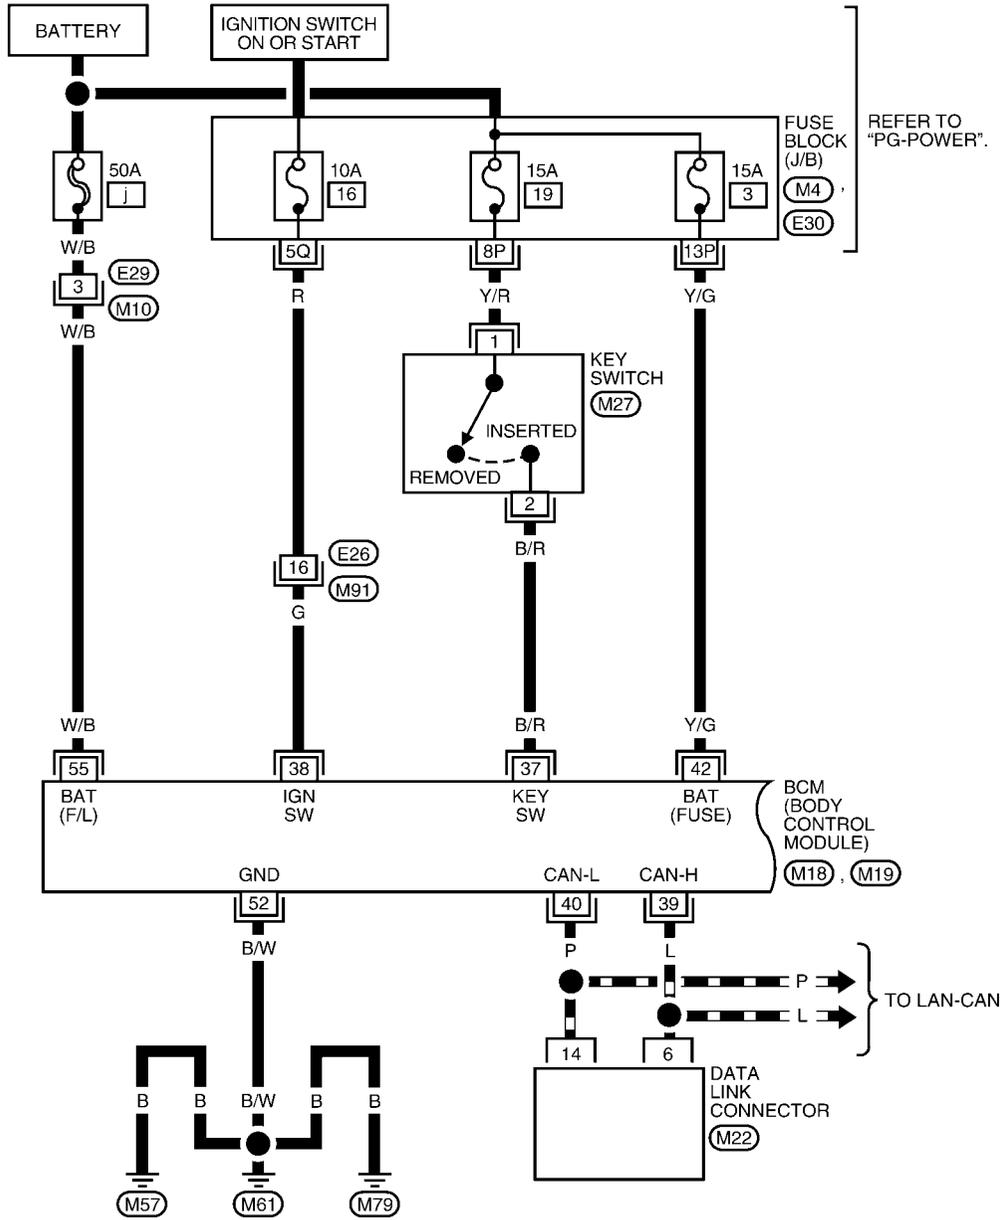


WKWA3916E

INTERIOR ROOM LAMP

LT-INT/L-02

- ◊PB : WITH POWER BACK DOOR
 ◊XB : WITHOUT POWER BACK DOOR
 *1 ◊PB : 4 *2 ◊PB : 4 *3 ◊PB : 14 *4 ◊PB : 7 *5 ◊PB : 8
 ◊XB : 1 *1 ◊XB : 1 *3 ◊XB : 6 *4 ◊XB : 1 *5 ◊XB : 3

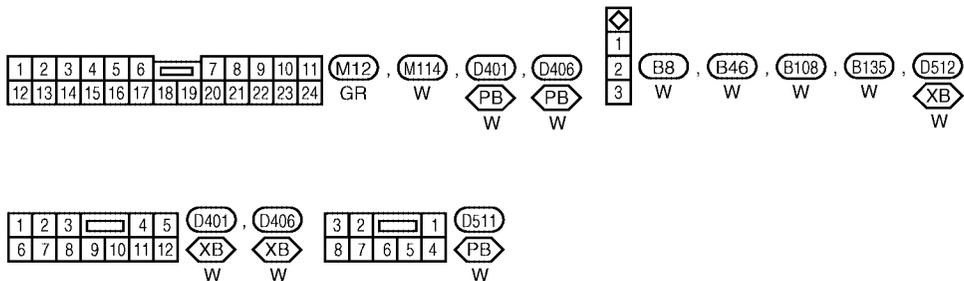
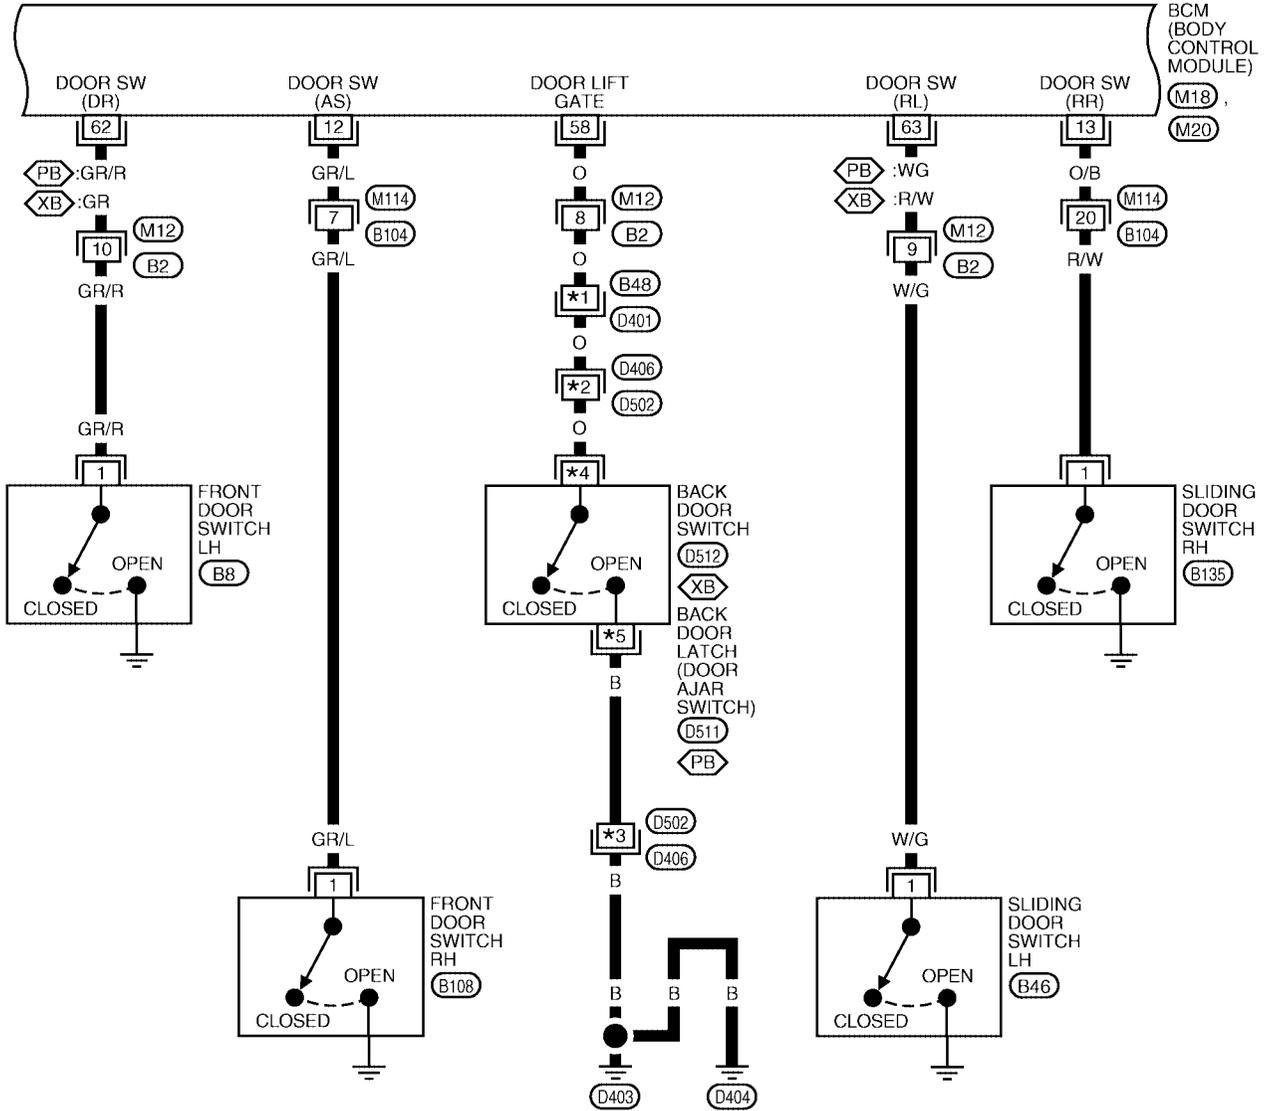


REFER TO THE FOLLOWING.
 (M18), (M20) - ELECTRICAL UNITS

WKWA1944E

INTERIOR ROOM LAMP




LT-INT/L-03

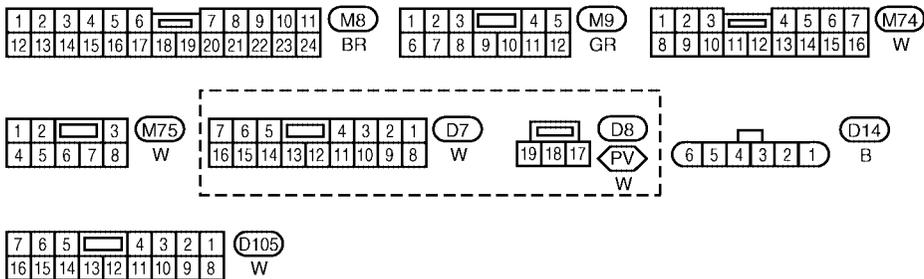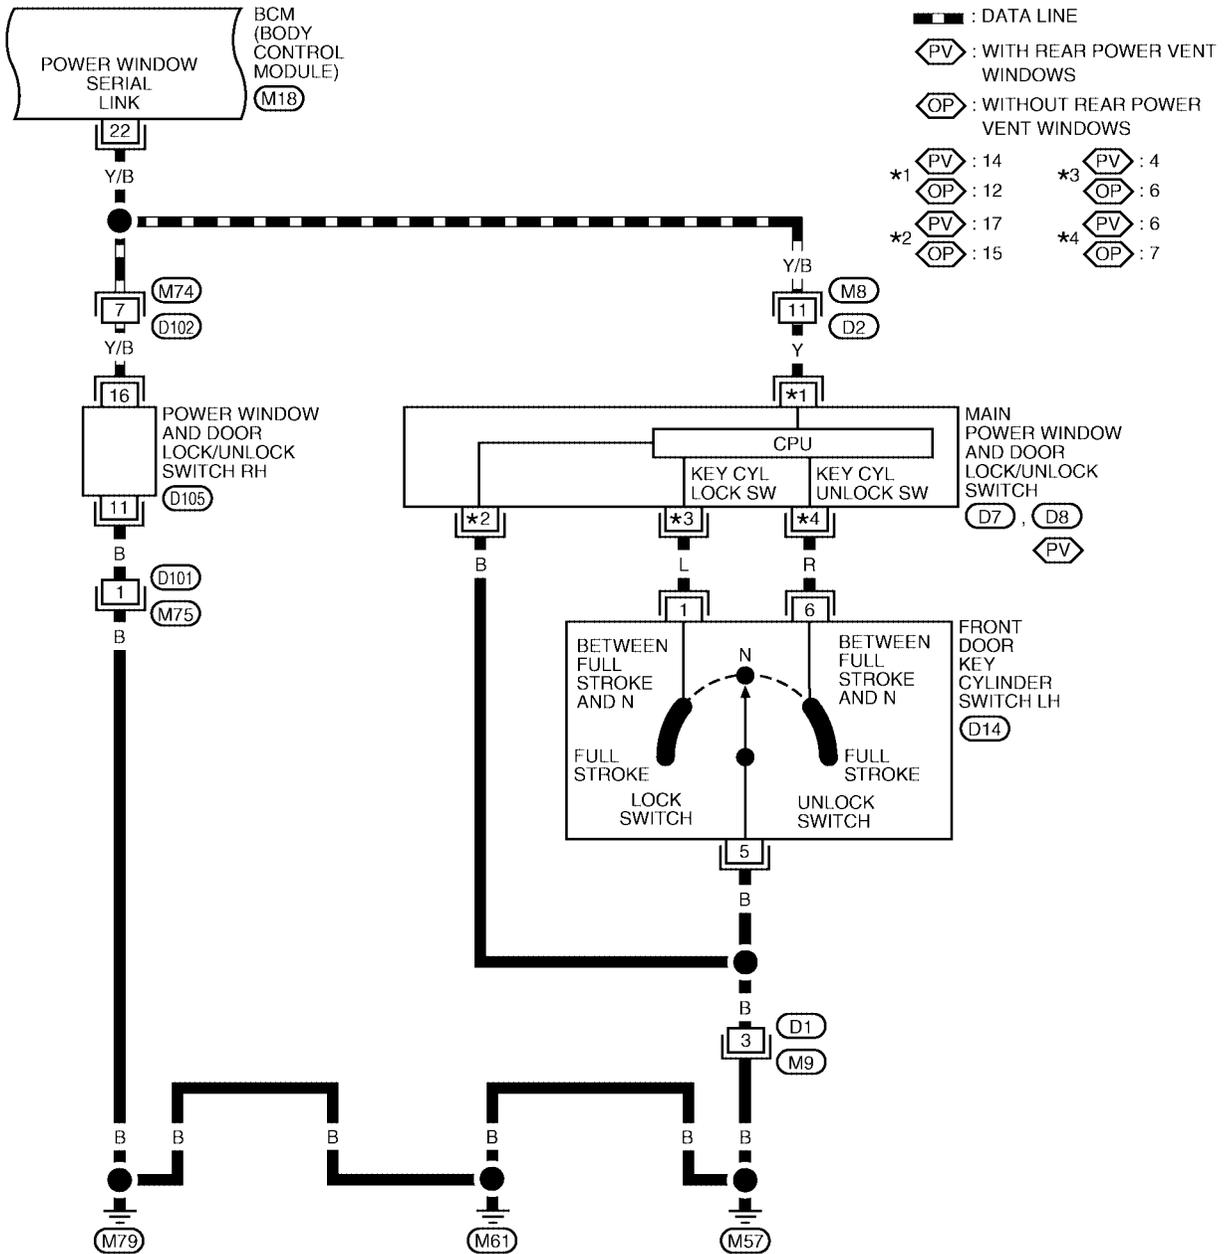

WKWA1945E

INTERIOR ROOM LAMP



LT-INT/L-04

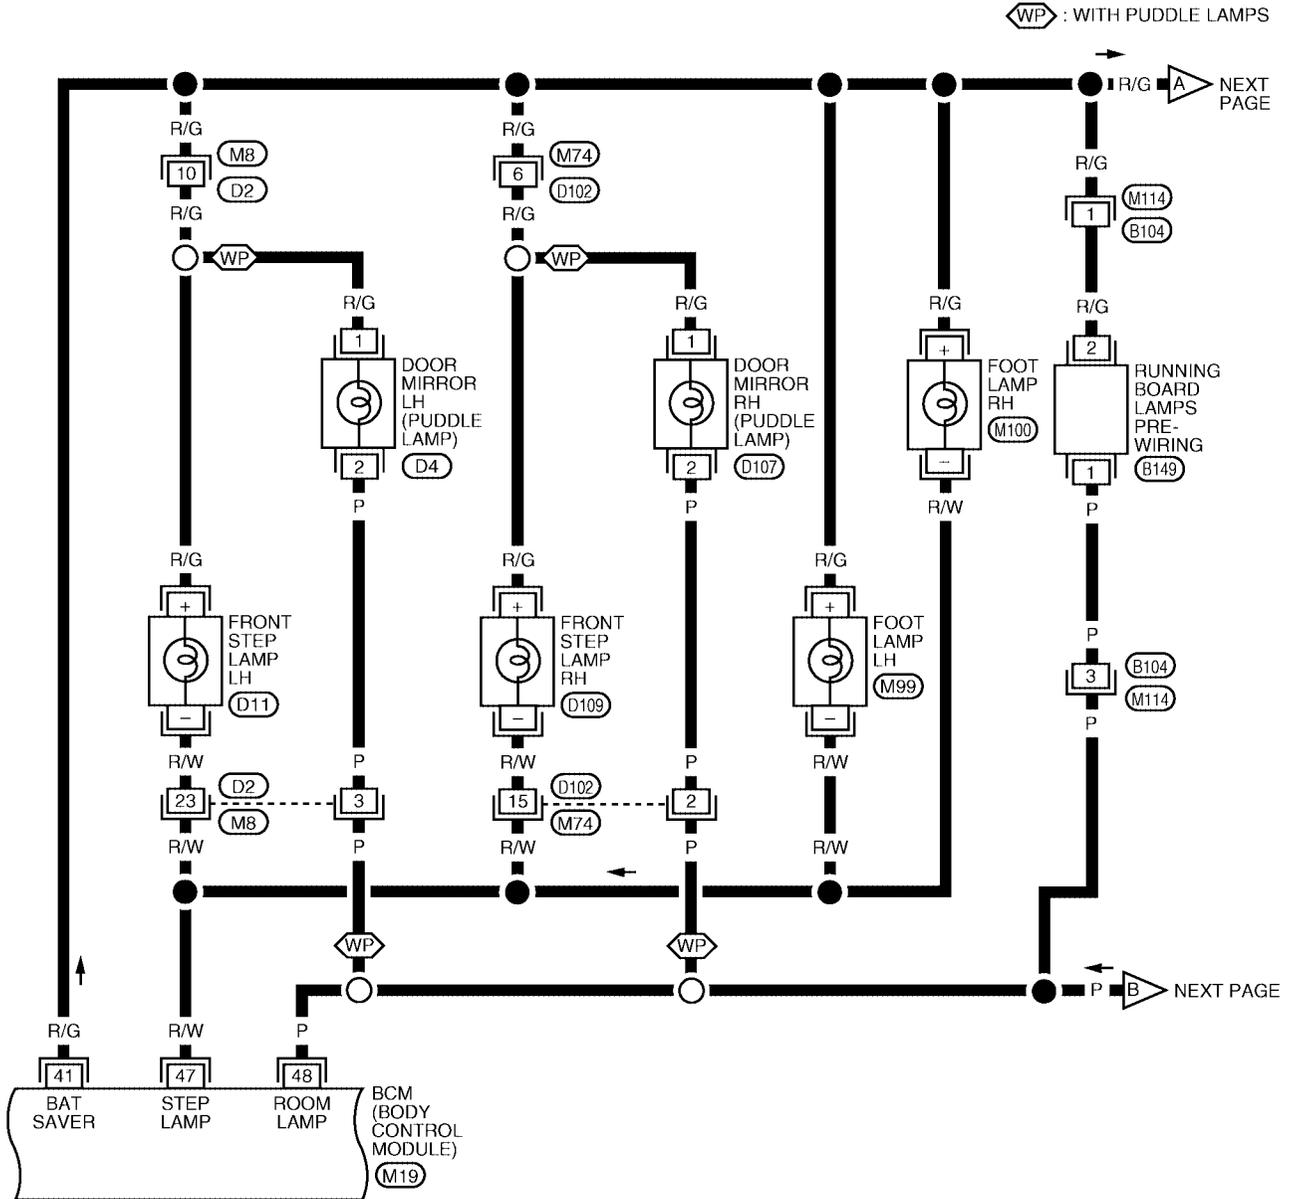

WKWA1946E

INTERIOR ROOM LAMP



LT-INT/L-05

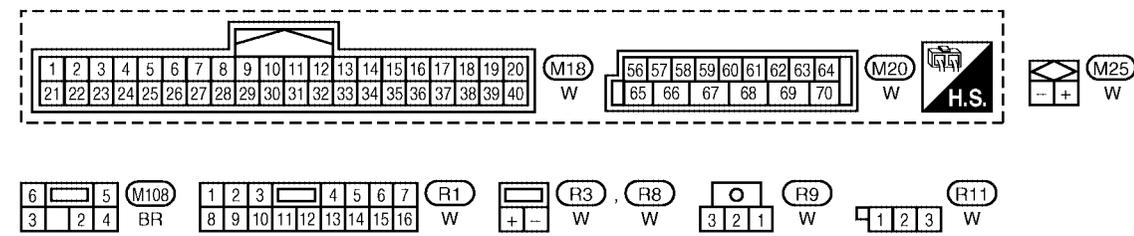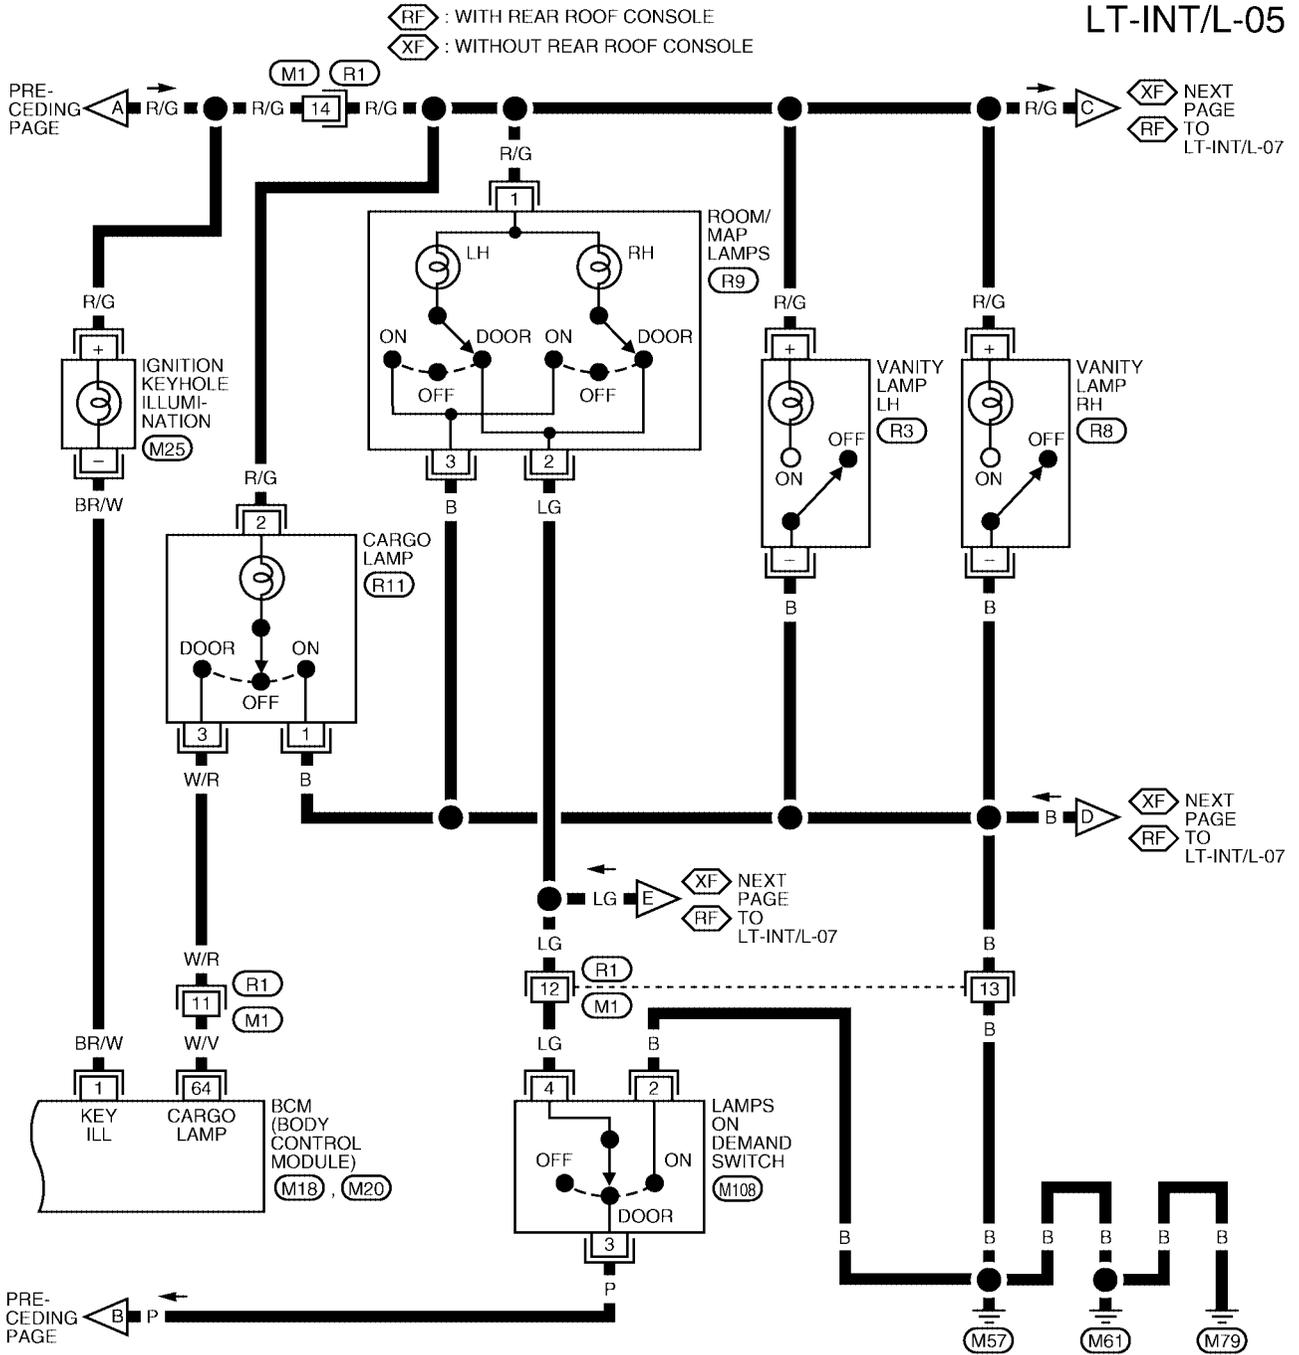

WKWA1947E

INTERIOR ROOM LAMP

LT-INT/L-06


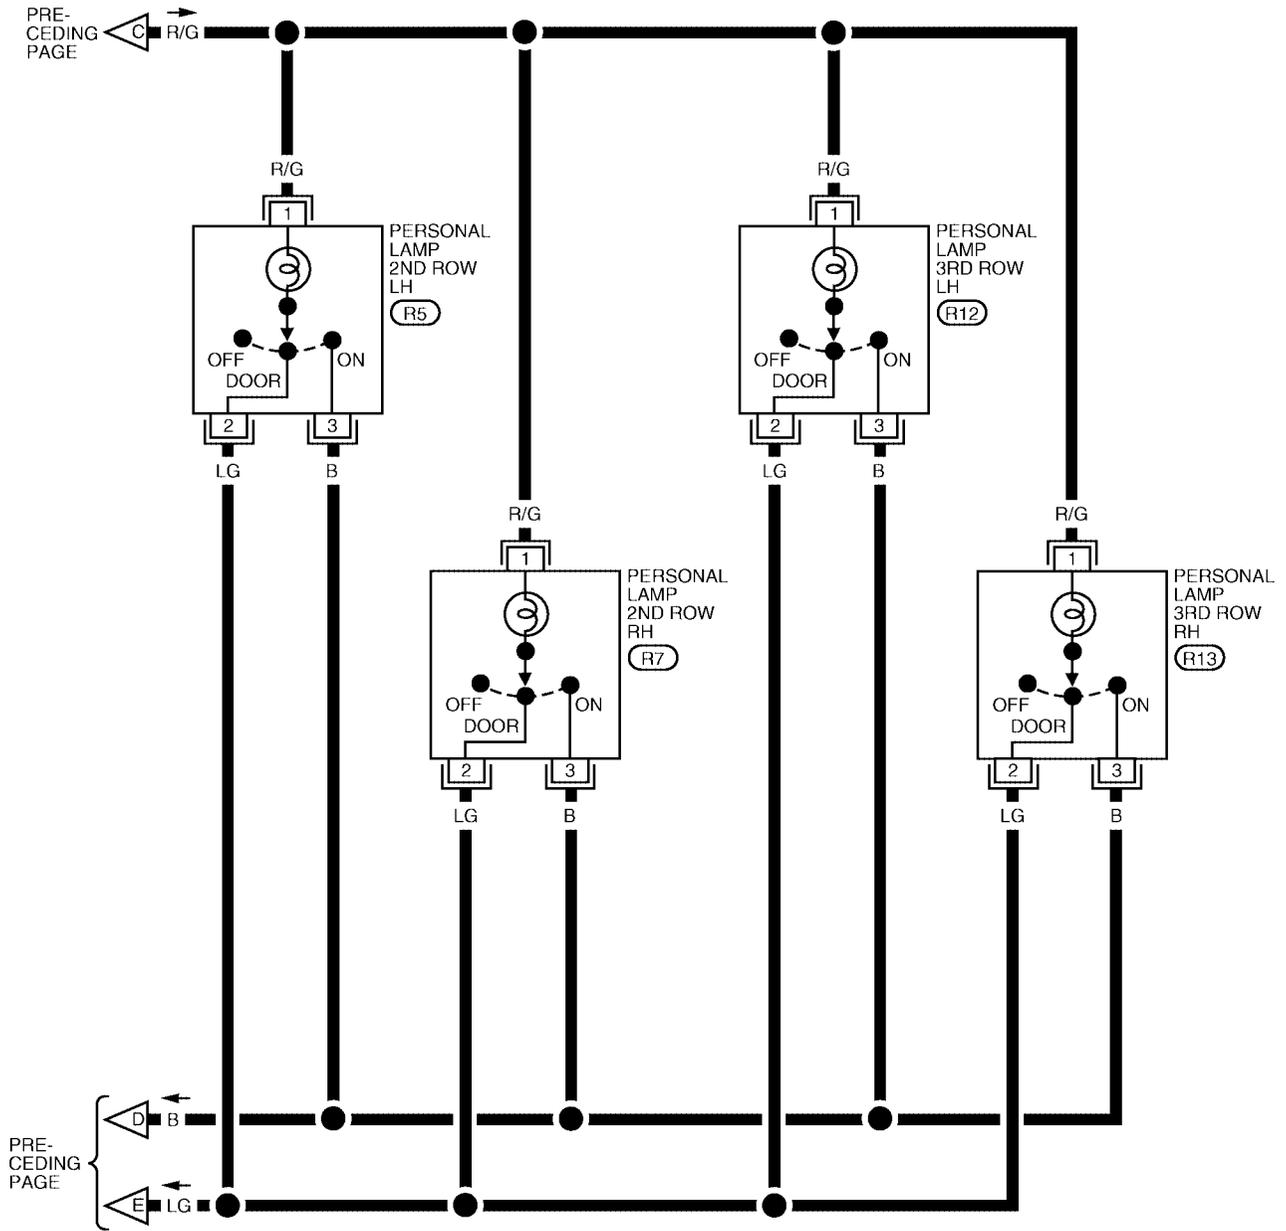


WKWA1948E

INTERIOR ROOM LAMP

LT-INT/L-07

WD : WITH DVD ENTERTAINMENT SYSTEM
 XD : WITHOUT DVD ENTERTAINMENT SYSTEM

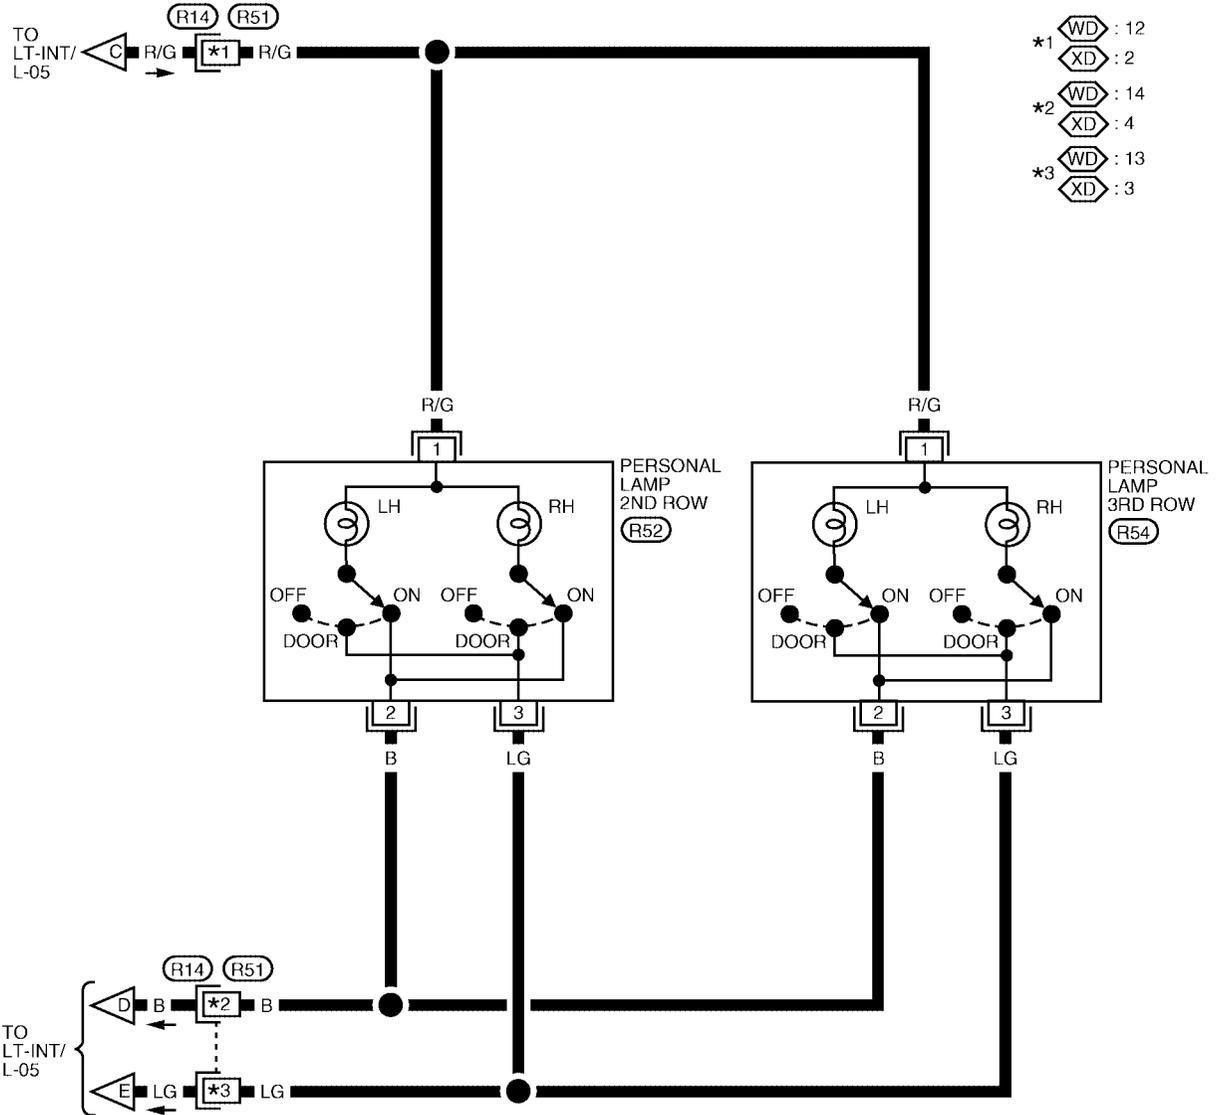

WKWA1949E

INTERIOR ROOM LAMP

Terminals and Reference Values for BCM

EKS00500

| Terminal No. | Wire color | Signal name | Measuring condition | | | Reference value (Approx.) |
|--------------|--------------------------------------|--|---------------------|---|-------------------------------|---------------------------|
| | | | Ignition switch | Operation or condition | | |
| 1 | BR/W | Ignition keyhole illumination signal | OFF | Door is locked. (SW OFF) | | Battery voltage |
| | | | | Door is unlocked. (SW ON) | | 0V |
| 12 | GR/L | Front door switch RH signal | OFF | Front door switch RH | ON (open) | 0V |
| | | | | | OFF (closed) | Battery voltage |
| 13 | O/B | Sliding door switch RH signal | OFF | Sliding door switch RH | ON (open) | 0V |
| | | | | | OFF (closed) | Battery voltage |
| 22 | Y/B | Power window switch serial link | — | — | | |
| 37 | B/R | Key-in detection switch signal | OFF | Vehicle key is removed. | | 0V |
| | | | | Vehicle key is inserted. | | Battery voltage |
| 38 | G | Ignition power supply | ON | — | | Battery voltage |
| 39 | L | CAN-H | — | — | | — |
| 40 | P | CAN-L | — | — | | — |
| 41 | R/G | Battery saver output signal | OFF | 30 minutes after ignition switch is turned to OFF | | 0V |
| | | | ON | — | | Battery voltage |
| 42 | Y/G | Battery power supply | OFF | — | | Battery voltage |
| 47 | R/W | Step lamp signal | OFF | Any door is open (ON) | | 0V |
| | | | | All doors are closed (OFF) | | Battery voltage |
| 48 | P | Interior room/map lamp signal | OFF | Lamps on demand switch: DOOR position | Any door switch ON (open) | 0V |
| | | | | | Any door switch OFF (closed) | Battery voltage |
| 52 | B/W | Ground | ON | — | | 0V |
| 55 | W/B | Battery power supply | OFF | — | | Battery voltage |
| 58 | O | Back door latch (door ajar switch) signal ¹ | OFF | Back door latch (door ajar switch) ¹ | ON (open) | 0V |
| | | Back door switch signal ² | | | Back door switch ² | OFF (closed) |
| 62 | GR/R ¹ GR ² | Front door switch LH signal | OFF | Front door switch LH | ON (open) | 0V |
| | | | | | OFF (closed) | Battery voltage |
| 63 | W/G ¹ R/W ² | Sliding door switch LH signal | OFF | Sliding door switch LH | ON (open) | 0V |
| | | | | | OFF (closed) | Battery voltage |
| 64 | W/V | Cargo lamp signal | OFF | Cargo lamp switch: DOOR position | ON (open) | 0V |
| | | | | | OFF (closed) | Battery voltage |

1 With power back door

2 Without power back door

INTERIOR ROOM LAMP

EKS0050P

How to Proceed With Trouble Diagnosis

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-131, "System Description"](#) .
3. Carry out the Preliminary Check. Refer to [LT-145, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the interior room lamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check SWITCH INSPECTION

EKS0050Q

- Ensure lamps on demand switch is in the DOOR or ON position.

INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES OR FUSIBLE LINK

Check for blown BCM fuses or fusible link.

| Unit | Power source | Fuse or fusible link No. |
|------|--------------------------------------|--------------------------|
| BCM | Battery | j |
| | | 3 |
| | Ignition switch ON or START position | 16 |

Refer to [LT-137, "Wiring Diagram — INT/L —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect BCM connectors.
2. Check voltage between BCM connector and ground.

| Terminals | | (-) | Ignition switch position | |
|-----------|--------------------------|--------|--------------------------|-----------------|
| (+) | | | OFF | ON |
| Connector | Terminal (Wire color) | Ground | Battery voltage | Battery voltage |
| | M19 | | 42 (Y/G) | Battery voltage |
| | 55 (W/B) | | 0V | Battery voltage |
| M18 | 38 (G) | | | |

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse.

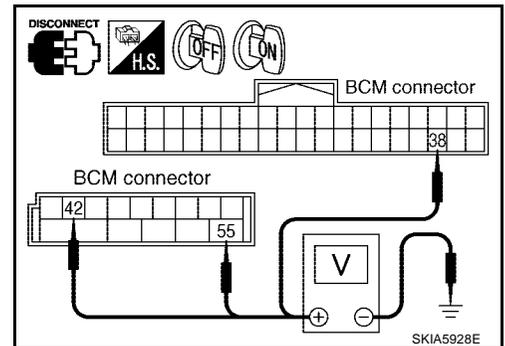

INTERIOR ROOM LAMP


3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

| Connector | Terminals | | Continuity |
|-----------|-----------------------|--------|------------|
| | Terminal (Wire color) | | |
| M19 | 52 (B/W) | Ground | Yes |

OK or NG

- OK >> Inspection End.
- NG >> Check harness ground circuit.

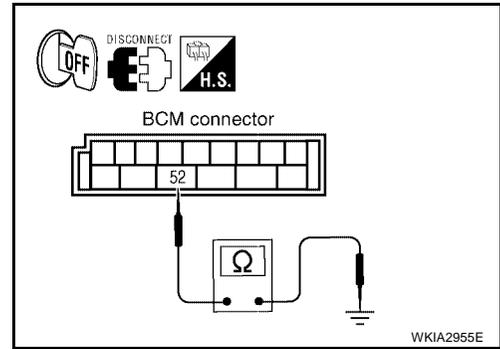

CONSULT-II Function (BCM)

EKS0050R

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


| BCM diagnostic test item | Diagnostic mode | Description |
|--------------------------|-----------------------|--|
| Inspection by part | WORK SUPPORT | Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed. |
| | DATA MONITOR | Displays BCM input/output data in real time. |
| | ACTIVE TEST | Operation of electrical loads can be checked by sending drive signal to them. |
| | SELF-DIAG RESULTS | Displays BCM self-diagnosis results. |
| | CAN DIAG SUPPORT MNTR | The result of transmit/receive diagnosis of CAN communication can be read. |
| | ECU PART NUMBER | BCM part number can be read. |
| | CONFIGURATION | Performs BCM configuration read/write functions. |

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.

- With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

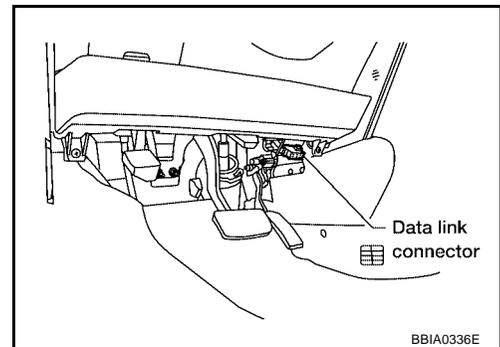


- Touch "START (NISSAN BASED VHCL)".

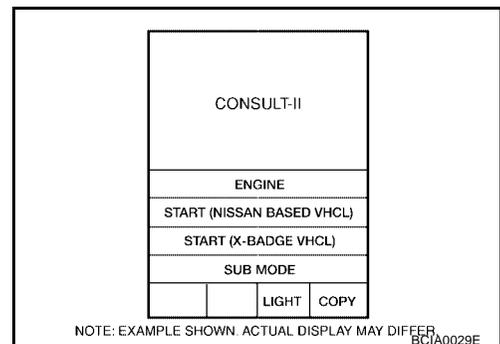


INTERIOR ROOM LAMP

3. Touch "BCM" on "SELECT SYSTEM" screen.
If "BCM" is not indicated, go to [GI-37, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#) .

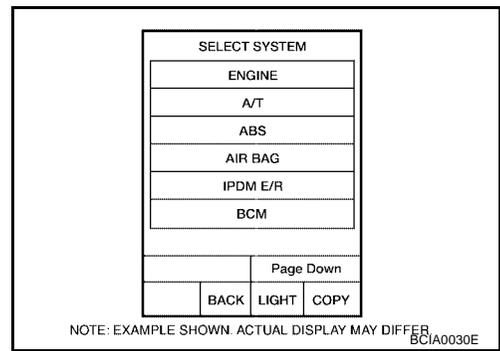

4. Touch "INT LAMP" on "SELECT TEST ITEM" screen.

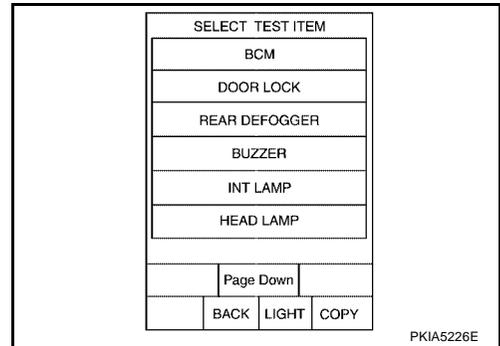

WORK SUPPORT

Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch "SET I/L D-UNLCK INTCON" on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "CHANGE SETT".
6. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
7. Touch "END".

Display Item List

| Item | Description | CONSULT-II |
|------------------------|---|------------|
| SET I/L D-UNLCK INTCON | The 30 seconds operating function of the interior room lamps and the ignition keyhole illumination can be selected when driver door is released (unlocked). | ON/OFF |
| ROOM LAMP ON TIME SET | The time in order to escalate illumination can be adjusted when the interior room lamps and the ignition keyhole illumination is turned on. | MODE 1 - 7 |
| ROOM LAMP OFF TIME SET | The time in order to diminish illumination can be adjusted when the interior room lamps and the ignition keyhole illumination is turned off. | MODE 1 - 7 |

Reference between "MODE" and "TIME" for "TURN ON/OFF".

| MODE | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
|-------------|-----|---|---|---|---|---|---|
| Time (sec.) | 0.5 | 1 | 2 | 3 | 4 | 5 | 0 |

DATA MONITOR

Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

INTERIOR ROOM LAMP

| | |
|---------------------|---|
| All signals | Monitors all the signals. |
| Selection from menu | Selects and monitors the individual signal. |

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

| Monitor item | Contents |
|-------------------------|---|
| IGN ON SW "ON/OFF" | Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal. |
| KEY ON SW "ON/OFF" | Displays "Key inserted (ON)/key removed (OFF)" status judged from the key switch signal. |
| DOOR SW-DR "ON/OFF" | Displays status of the driver door as judged from the driver door switch signal. (Door is open: ON/Door is closed: OFF) |
| DOOR SW-AS "ON/OFF" | Displays "Door open (ON)/Door closed (OFF)" status, determined from passenger door switch signal. |
| DOOR SW-RR "ON/OFF" | Displays "Door open (ON)/Door closed (OFF)" status, determined from sliding door switch RH signal. |
| DOOR SW-RL "ON/OFF" | Displays "Door open (ON)/Door closed (OFF)" status, determined from sliding door switch LH signal. |
| BACK DOOR SW "ON/OFF" | Displays "Door open (ON)/Door closed (OFF)" status, determined from back door switch signal. |
| KEY CYL LK-SW "ON/OFF" | Displays "Door locked (ON)" status, determined from key cylinder lock switch in driver door. |
| KEY CYL UN-SW "ON/OFF" | Displays "Door unlocked (OFF)" status, determined from key cylinder lock switch in driver door. |
| CDL LOCK SW "ON/OFF" | Displays "Door locked (ON)/Door unlocked (OFF)" status, determined from locking detection switch in driver door. |
| CDL UNLOCK SW "ON/OFF" | Displays "Door unlocked (OFF)" status, determined from locking detection switch in passenger door. |
| KEYLESS LOCK "ON/OFF" | Displays "Locked (ON)/Other (OFF)" status, determined from lock signal. |
| KEYLESS UNLOCK "ON/OFF" | Displays "Unlocked (ON)/Other (OFF)" status, determined from unlock signal. |

ACTIVE TEST

Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

Display Item List

| Test item | Description |
|-----------|--|
| INT LAMP | Interior room lamp can be operated by any ON-OFF operations. |
| IGN ILLUM | Ignition keyhole illumination can be operated by ON-OFF operation. |

INTERIOR ROOM LAMP

EKS0050S

Room/Map Lamp Control Does Not Operate

1. CHECK EACH SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-148, "Display Item List"](#) for switches and their functions.

OK or NG

- OK >> GO TO 2.
- NG >> Inspect malfunctioning switch system.

| DATA MONITOR | |
|---------------|-----|
| MONITOR | |
| IGN ON SW | ON |
| KEY ON SW | ON |
| DOOR SW-DR | ON |
| DOOR SW-AS | ON |
| DOOR SW-RR | OFF |
| DOOR SW-RL | OFF |
| BACK DOOR SW | OFF |
| KEY CYL LK-SW | OFF |
| KEY CYL UN-SW | OFF |

SKIA5930E

2. ACTIVE TEST

- Select "BCM" on CONSULT-II. Select "INT LAMP" active test.
- When lamps on demand switch is in "DOOR" position, use active test to make sure interior room lamp operates.

OK or NG

- OK >> Replace BCM. Refer to [BCS-19, "Removal and Installation of BCM"](#).
- NG >> GO TO 3.

| ACTIVE TEST | |
|-------------|-----|
| INT LAMP | |
| | ON |
| | OFF |

LKIA0092E


3. CHECK INTERIOR ROOM LAMP INPUT

- Turn ignition switch OFF.
- Check voltage between room/map lamp harness connector R9 terminal 1 (R/G) and ground.

1 (R/G) - Ground : Battery voltage should exist.

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 6.

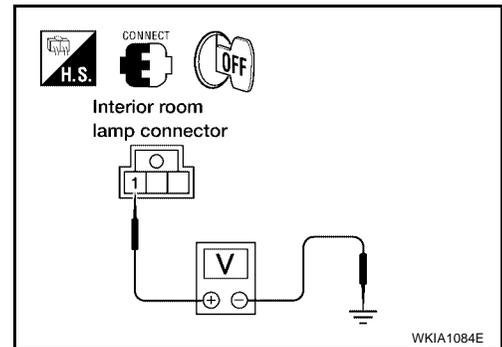


4. CHECK LAMPS ON DEMAND SWITCH

- Disconnect lamps on demand switch connector.
- Check continuity between lamps on demand switch terminals.

| Terminal | | Condition | Continuity |
|------------------------|---|---------------------------------------|------------|
| Lamps on demand switch | | | |
| 3 | 4 | Lamps on demand switch position: DOOR | Yes |
| | | Lamps on demand switch position: OFF | No |

OK or NG

- OK >> GO TO 5.
- NG >> Replace lamps on demand switch.

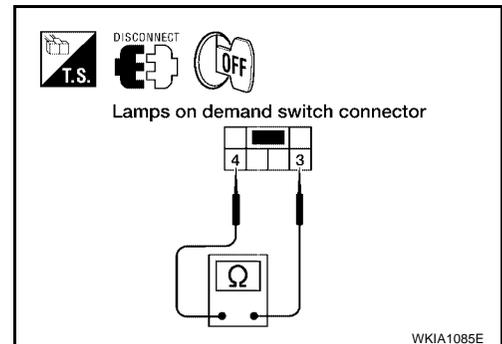

INTERIOR ROOM LAMP


5. CHECK INTERIOR ROOM LAMP CIRCUIT

1. Connect lamps on demand switch connector.
2. Turn lamps on demand switch to DOOR position.
3. Disconnect BCM connector.
4. Check continuity between BCM harness connector M19 terminal 48 (P) and lamps on demand switch harness connector M108 terminal 3 (P).

48 (P) - 3 (P) : Continuity should exist.

OK or NG

- OK >> Replace BCM if interior lamp does not work after setting the connector again. Refer to [BCS-19. "Removal and Installation of BCM"](#).
- NG >> Repair harness or connector.

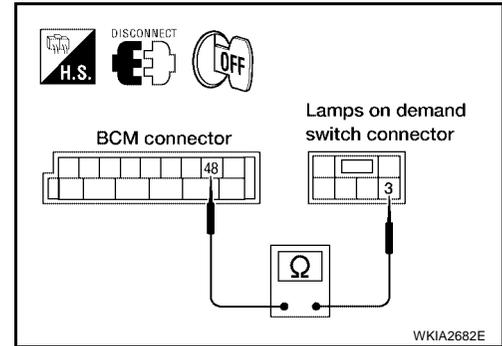


6. CHECK INTERIOR ROOM LAMP CIRCUIT

1. Disconnect BCM connector and interior room lamp connector.
2. Check continuity between BCM harness connector M19 terminal 41 (R/G) and interior room/map lamps harness connector R9 terminal 1 (R/G).

41 (R/G) - 1 (R/G) : Continuity should exist.

OK or NG

- OK >> Replace BCM if interior lamp does not work after setting the connector again. Refer to [BCS-19. "Removal and Installation of BCM"](#).
- NG >> Repair harness or connector between BCM and room/map lamp or between room/map lamp and lamps on demand switch.

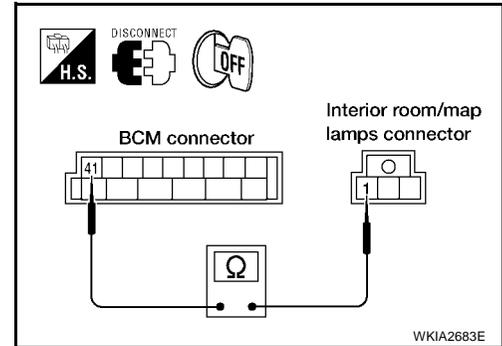

INTERIOR ROOM LAMP

Personal Lamp Control Does Not Operate (Room/Map Lamps Operate)

EKS0050U

1. CHECK EACH DOOR SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-132, "SWITCH OPERATION"](#) for switches and their function.

OK or NG

- OK >> GO TO 2.
- NG >> Inspect malfunctioning door switch.

| DATA MONITOR | |
|---------------|-----|
| MONITOR | |
| IGN ON SW | ON |
| KEY ON SW | ON |
| DOOR SW-DR | ON |
| DOOR SW-AS | ON |
| DOOR SW-RR | OFF |
| DOOR SW-RL | OFF |
| BACK DOOR SW | OFF |
| KEY CYL LK-SW | OFF |
| KEY CYL UN-SW | OFF |

SKIA5930E


2. CHECK PERSONAL LAMP OUTPUT

1. Turn ignition switch OFF.
2. Confirm lamps on demand switch is in the "DOOR" position.
3. Disconnect personal lamp connector.
4. Open any door.
5. Check voltage between personal lamp harness connector terminal 1 (R/G) and ground.

1 (R/G) - Ground : Battery voltage should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.

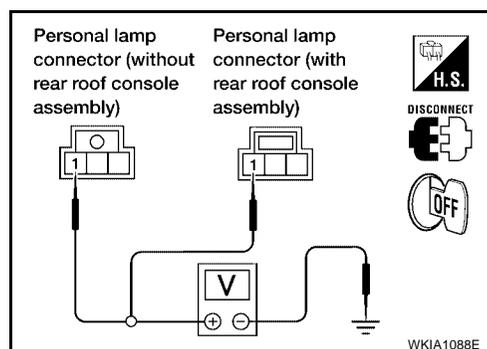


3. CHECK PERSONAL LAMP CONTROL CIRCUIT

1. Disconnect lamps on demand switch connector.
2. Check continuity between lamps on demand switch harness connector M108 terminal 4 (LG) and personal lamp harness connector terminal 2 (LG) (without rear roof console assembly) or terminal 3 (LG) (with rear roof console assembly).

4 (LG) - 2 (LG) or 3 (LG) : Continuity should exist.

OK or NG

- OK >> Replace personal lamp.
- NG >> Repair harness or connector.

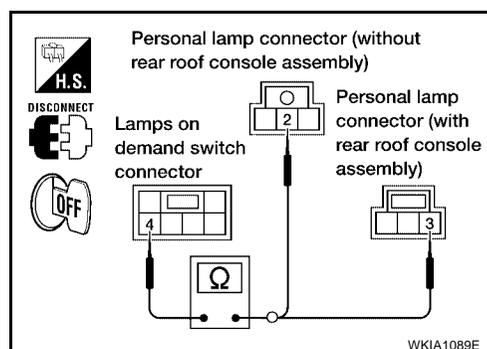

INTERIOR ROOM LAMP


5. CHECK IGNITION KEYHOLE ILLUMINATION CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector M18 terminal 1 (BR/W) and ignition keyhole illumination harness connector M25 terminal – (BR/W).

– (BR/W) - 1 (BR/W) : Continuity should exist.

OK or NG

- OK >> Replace BCM if ignition keyhole illumination does not work after setting the connector again. Refer to [BCS-19, "Removal and Installation of BCM"](#).
- NG >> Repair harness or connector.

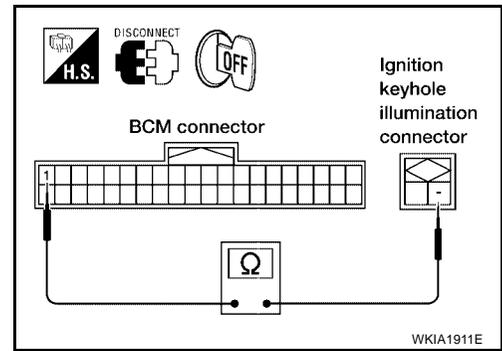


6. CHECK IGNITION KEYHOLE ILLUMINATION CIRCUIT

1. Disconnect BCM connector and ignition keyhole illumination connector.
2. Check continuity between BCM harness connector M19 terminal 41 (R/G) and ignition keyhole illumination harness connector M25 terminal + (R/G).

+ (R/G) - 41 (R/G) : Continuity should exist.

OK or NG

- OK >> Replace BCM if ignition keyhole illumination does not work after setting the connector again. Refer to [BCS-19, "Removal and Installation of BCM"](#).
- NG >> Repair harness or connector.

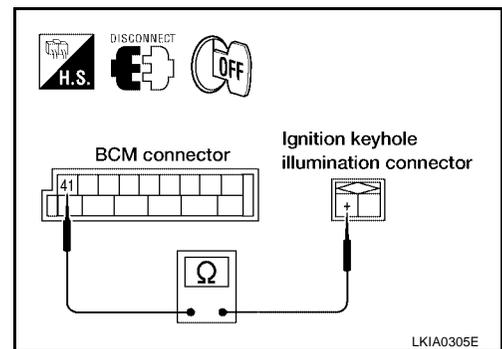

All Step/Foot/Puddle Lamps Do Not Operate

EKS0050W

1. CHECK EACH DOOR SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-148, "Display Item List"](#) for switches and their functions.

OK or NG

- OK >> GO TO 2.
- NG >> Inspect malfunctioning switch system.

| DATA MONITOR | |
|---------------|-----|
| MONITOR | |
| IGN ON SW | ON |
| KEY ON SW | ON |
| DOOR SW-DR | ON |
| DOOR SW-AS | ON |
| DOOR SW-RR | OFF |
| DOOR SW-RL | OFF |
| BACK DOOR SW | OFF |
| KEY CYL LK-SW | OFF |
| KEY CYL UN-SW | OFF |

SKIA5930E


2. CHECK STEP LAMP POWER SUPPLY

1. Turn ignition switch OFF.
2. Check voltage between front step lamp LH harness connector D11 terminal + (R/G) and ground.

+ (R/G) - Ground : Battery voltage should exist.

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 4.

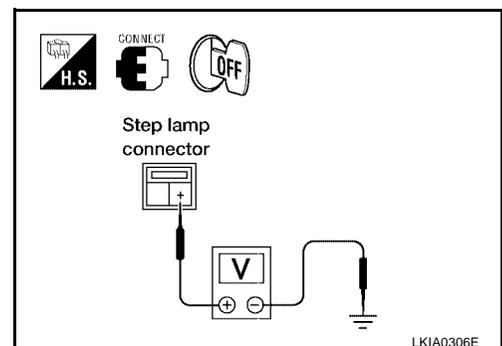

INTERIOR ROOM LAMP

3. CHECK STEP LAMP CONTROL CIRCUIT


1. Disconnect BCM connector and front step lamp LH connector.
2. Check continuity between BCM harness connector M19 terminal 47 (R/W) and front step lamp LH harness connector D11 terminal – (R/W).

– (R/W) - 47 (R/W) : Continuity should exist.

OK or NG

OK >> Replace BCM if step lamp does not work after setting the connector again. Refer to [BCS-19, "Removal and Installation of BCM"](#).

NG >> Repair harness or connector.

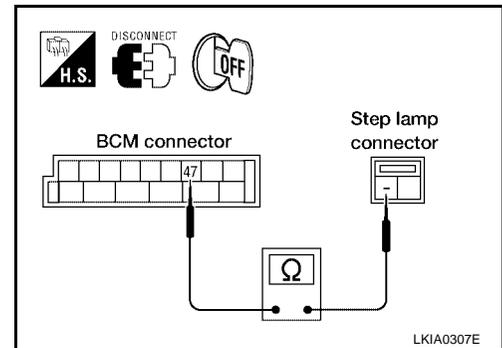

4. CHECK STEP LAMP CIRCUIT


1. Disconnect BCM connector and step lamp LH connector.
2. Check continuity between BCM harness connector M19 terminal 41 (R/G) and front step lamp LH harness connector D11 terminal + (R/G).

+ (R/G) - 41 (R/G) : Continuity should exist.

OK or NG

OK >> Replace BCM if step lamp does not work after setting the connector again. Refer to [BCS-19, "Removal and Installation of BCM"](#).

NG >> Repair harness or connector.

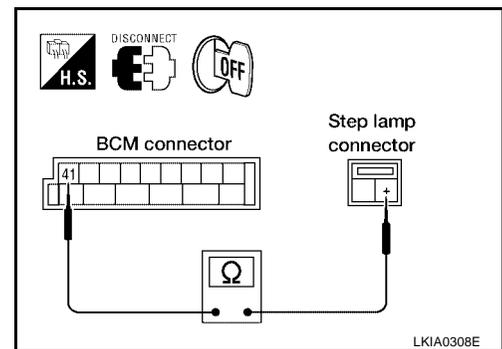

All Interior Room Lamps Do Not Operate

EKS0050Y

1. CHECK POWER SUPPLY CIRCUIT


1. All interior room lamps switch are OFF.
2. Turn ignition switch ON.
3. Check voltage between BCM harness connector M19 terminal 41 (R/G) and ground.

41 (R/G) - Ground : Battery voltage should exist.

OK or NG


OK >> Repair harness or connector. In a case of making a short circuit, be sure to disconnect battery negative cable after repairing harness and then reconnect.

NG >> Replace BCM. Refer to [BCS-19, "Removal and Installation of BCM"](#).

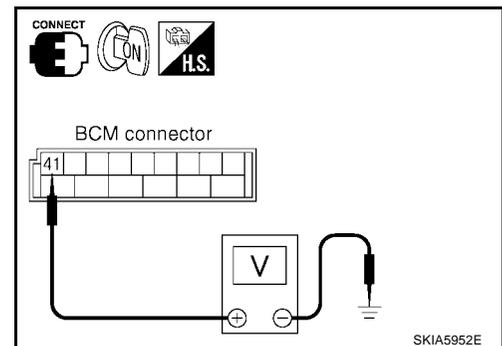

ILLUMINATION

Component Parts and Harness Connector Location

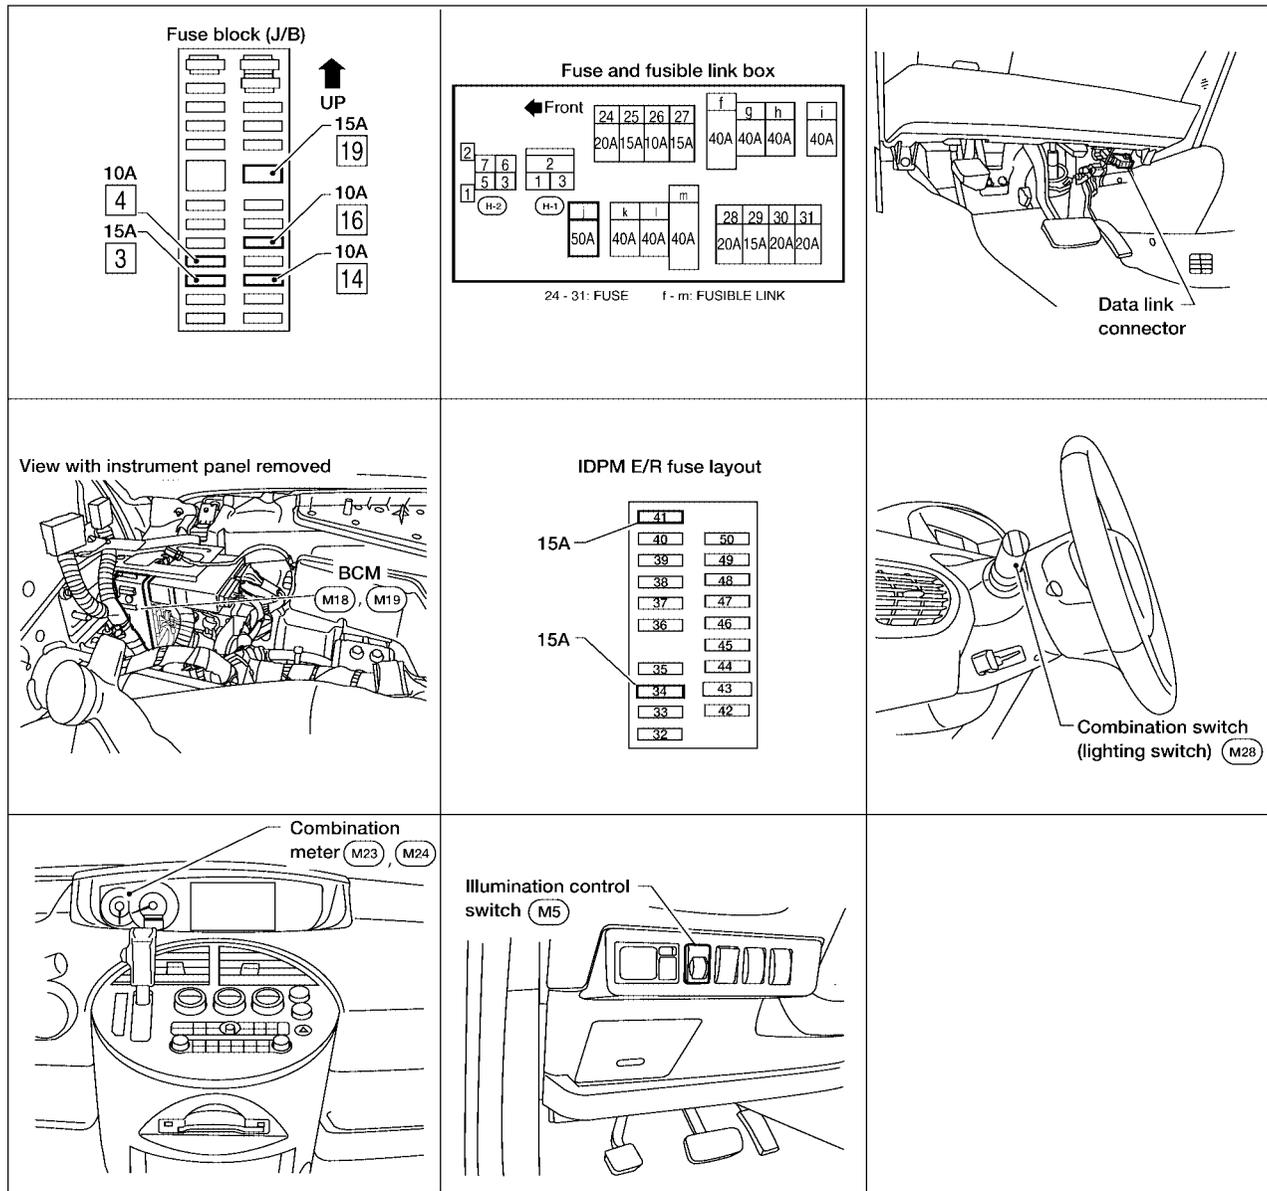

WKIA3152E

EKS005P0

System Description

Control of the illumination lamps operation is dependent upon the position of the lighting switch (combination switch). When the lighting switch is placed in the 1ST or 2ND position (or if the auto light system is activated) the BCM (body control module) receives input signal requesting the illumination lamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the tail lamp relay coil. This relay, when energized, directs power to the illumination lamps, which then illuminate. Power is supplied at all times

- through 15A fuse (No. 41, located in the IPDM E/R)
- to tail lamp relay, located in the IPDM E/R, and
- through 50A fusible link (letter j, located in the fuse and fusible link box)
- to BCM terminal 55, and
- through 15A fuse [No. 3, located in fuse block (J/B)]
- to BCM terminal 42, and
- through 15A fuse (No. 34, located in the IPDM E/R)

A
B
C
D
E
F
G
H
I
J
LT
L
M

ILLUMINATION

- to CPU in the IPDM E/R, and
- through 15A fuse [No.19, located in fuse block (J/B)]
- to combination meter terminal 31, and
- to ignition relay, located in the IPDM E/R, and
- through BCM terminal 54
- to power window and door lock/unlock switch RH terminal 10, and
- through BCM terminal 53
- to main power window and door lock/unlock switch terminal 10.

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [No. 16, located in the fuse block (J/B)]
- to BCM terminal 38, and
- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to combination meter terminal 30.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 52 and
- to combination meter terminal 32
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 60
- through grounds E9, E15 and E24.

ILLUMINATION OPERATION BY LIGHTING SWITCH

With the lighting switch in the 1ST or 2ND position (or if the auto light system is activated), the BCM receives input signal requesting the illumination lamps to illuminate. This input signal is communicated to the IPDM E/R across the CAN communication lines. The CPU of the IPDM E/R controls the tail lamp relay coil which, when energized, directs power

- through IPDM E/R terminal 22
- to illumination control switch terminal 1
- to A/T device (illumination) terminal 3
- to TCS OFF switch (illumination) terminal 3 (without VDC)
- to VDC OFF switch (illumination) terminal 3 (with VDC)
- to AV switch (illumination) terminal 3
- to hazard switch (illumination) terminal 3
- to audio unit terminal 8
- to rear sonar system OFF switch terminal 5 (with rear sonar system)
- to lamps on demand switch terminal 5
- to glove box lamp terminal +
- to display unit terminal 4 (without NAVI)
- to display control unit terminal 14 (with NAVI)
- to console lamp terminal 2
- to door mirror remote control switch (illumination) terminal 16
- to front air control terminal 23
- to DVD player terminal 12 (with DVD entertainment system)
- to NAVI control unit terminal 25 (with NAVI)
- to automatic door main switch terminal 5 (with power sliding door)
- to rear audio remote control unit terminal 6 (with rear audio remote control unit)
- to rear air control terminal 1.

ILLUMINATION

Illumination is controlled

- through illumination control switch terminal 2
- to A/T device terminal 4
- to TCS OFF switch terminal 4 (without VDC)
- to VDC OFF switch terminal 4 (with VDC)
- to AV switch terminal 4
- to hazard switch terminal 4
- to audio unit terminal 7
- to rear sonar system OFF switch terminal 4 (with rear sonar system)
- to lamps on demand switch terminal 6
- to door mirror remote control switch (illumination) terminal 15
- to front air control terminal 24
- to DVD player terminal 10 (with DVD entertainment system)
- to automatic door main switch terminal 7 (with power sliding door)
- to combination meter terminal 10.

Ground is supplied

- to illumination control switch terminal 3
- to glove box lamp terminal –
- to display unit terminal 6 (without NAVI)
- to display control unit terminal 3 (with NAVI)
- to console lamp terminal 1
- to main power window and door lock/unlock switch terminal 17 (with rear power vent windows) or terminal 15 (without rear power vent windows)
- to power window and door lock/unlock switch RH terminal 11
- through grounds M57, M61 and M79, and
- to rear audio remote control unit terminal 15 (with rear audio remote control unit)
- through grounds B7 and B19, and
- to NAVI control unit terminal 30 (with NAVI)
- to rear air control terminal 3
- through grounds B117 and B132.

With power and ground supplied, illumination lamps illuminate.

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 1ST or 2ND position (or if auto light system is activated) and the ignition switch is turned from ON or ACC to OFF, the battery saver control function is activated.

Under this condition, the illumination lamps remain illuminated for 5 minutes, then the illumination lamps are turned off.

When the lighting switch is turned from OFF to 1ST or 2ND position (or if auto light system is activated) after illumination lamps are turned off by the battery saver control, the illumination lamps illuminate again.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

CAN Communication System Description


EKS005P1

Refer to [LAN-5, "CAN COMMUNICATION"](#) .

ILLUMINATION


Schematic

EKS005P2

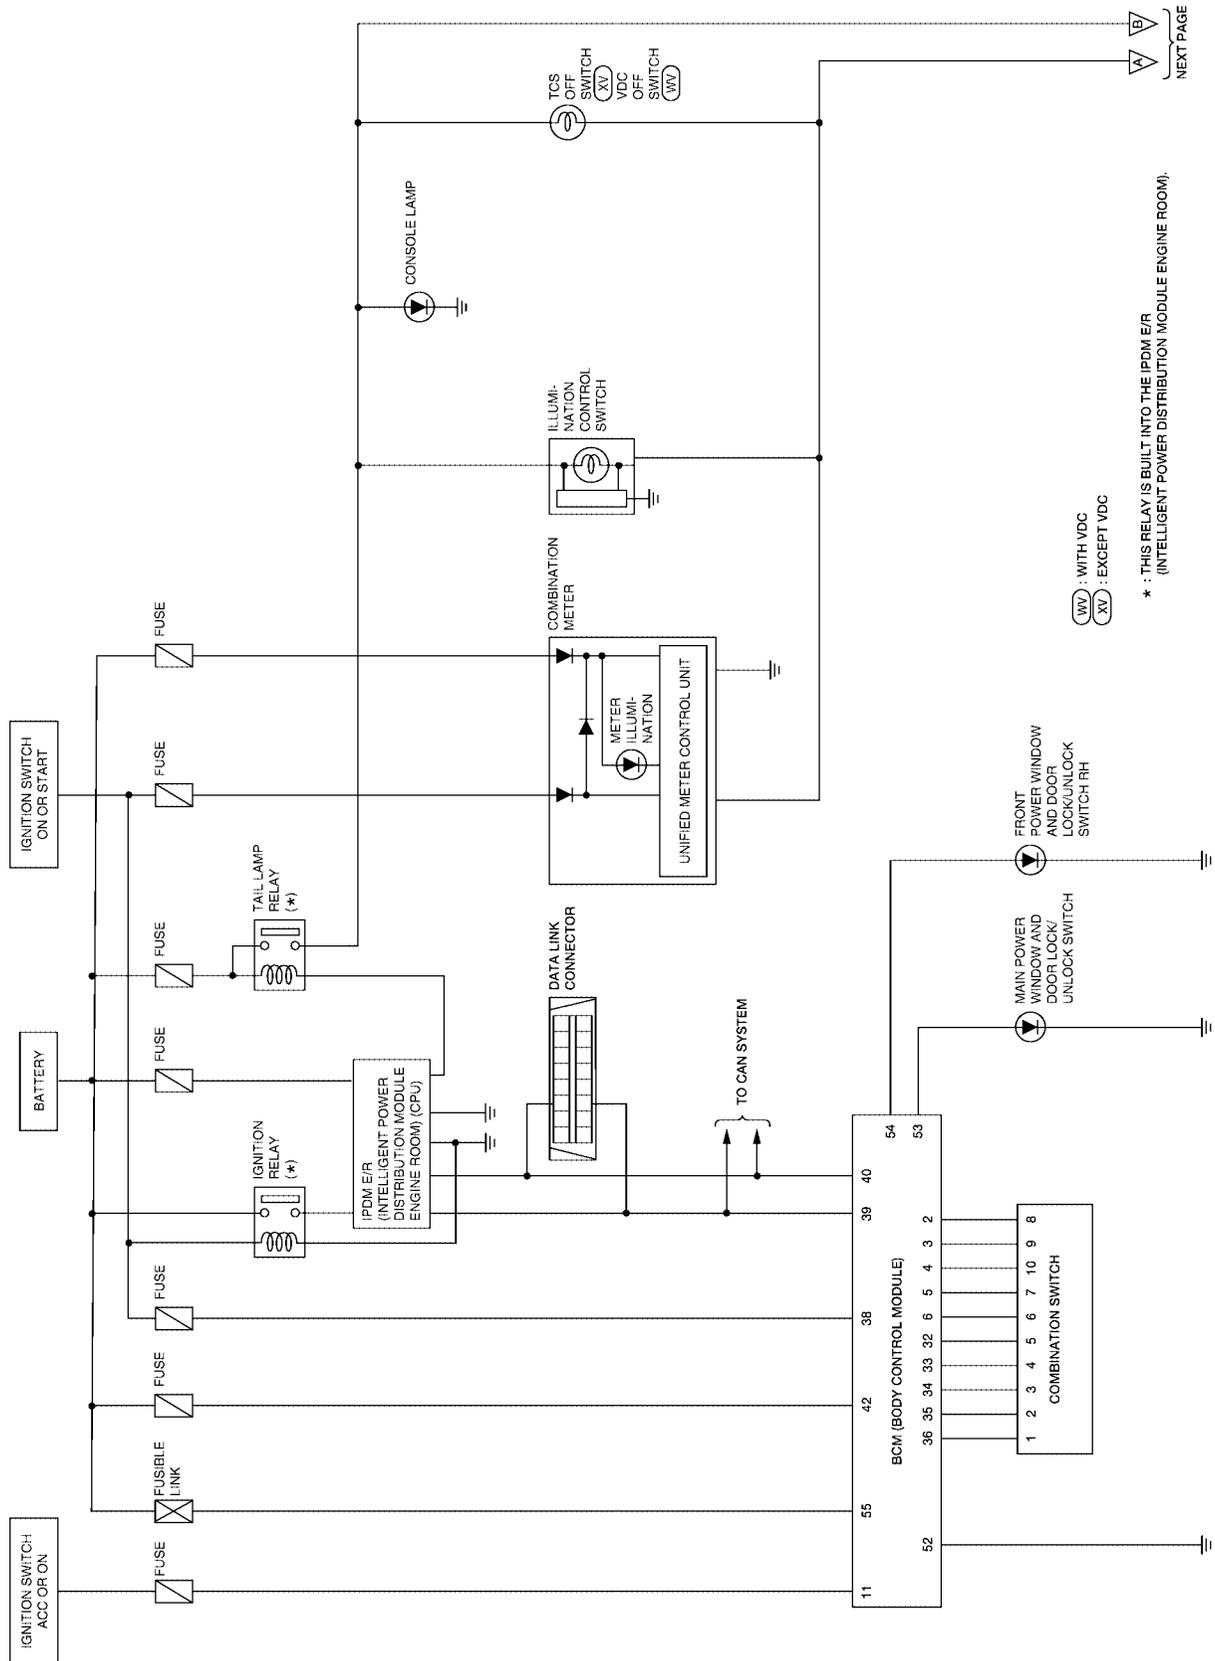

WKWA3917E

ILLUMINATION

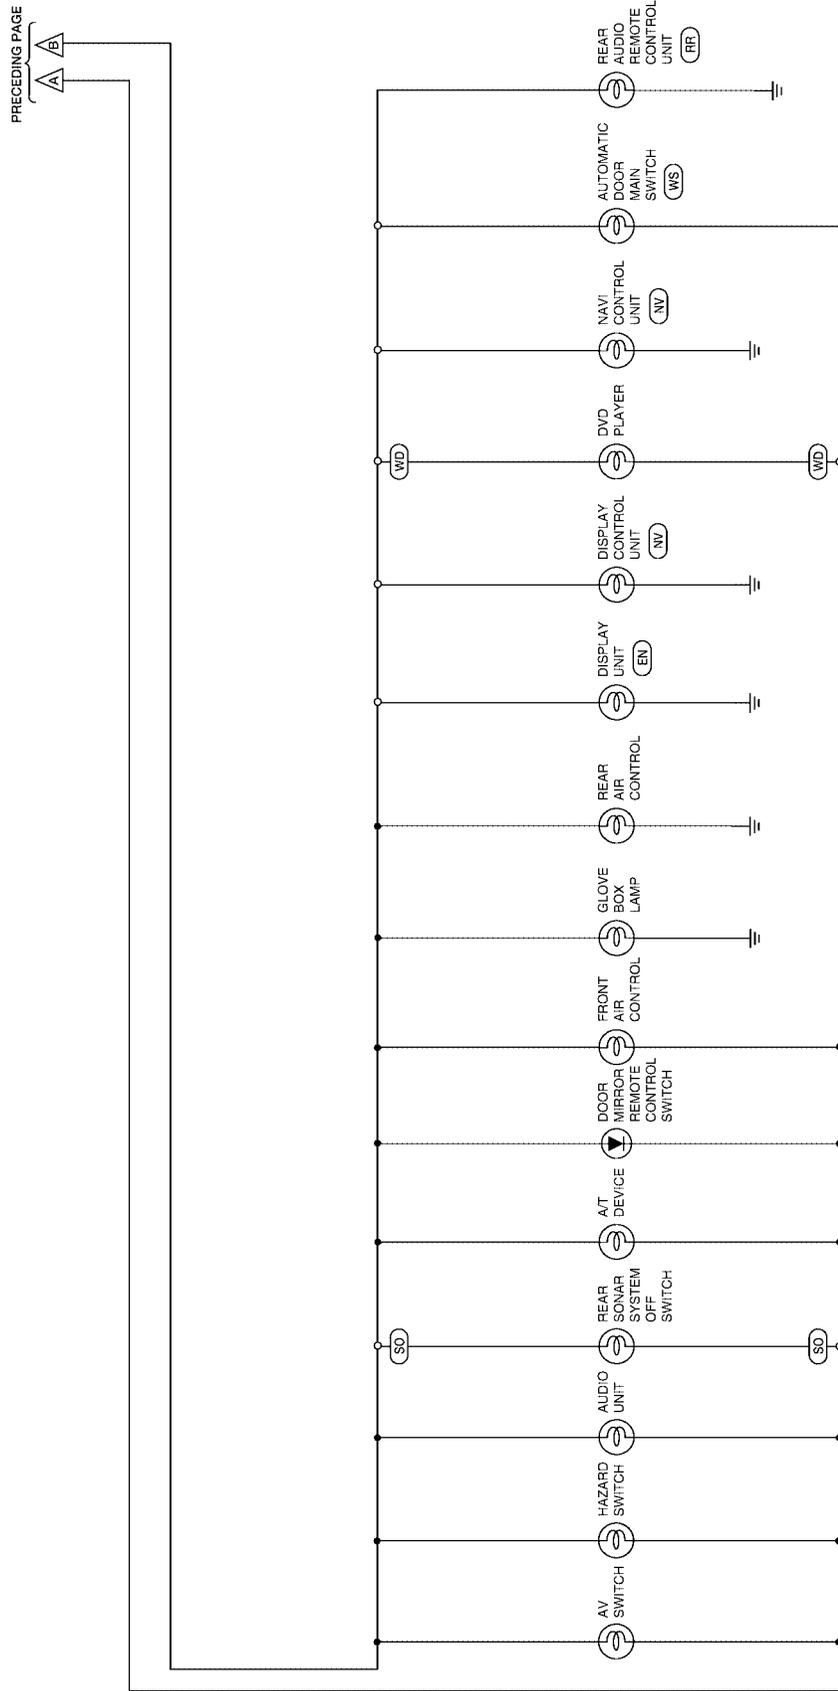

- (WS) : WITH POWER SLIDING DOOR
- (RF) : WITH REAR AUDIO REMOTE CONTROL UNIT
- (WD) : WITH DVD ENTERTAINMENT SYSTEM
- (EN) : WITHOUT NAVI
- (NV) : WITH NAVI
- (SO) : WITH REAR SONAR SYSTEM



A
B
C
D
E
F
G
H
I
J
LT
L
M

ILLUMINATION

EKS005P3

Wiring Diagram — ILL —

LT-ILL-01

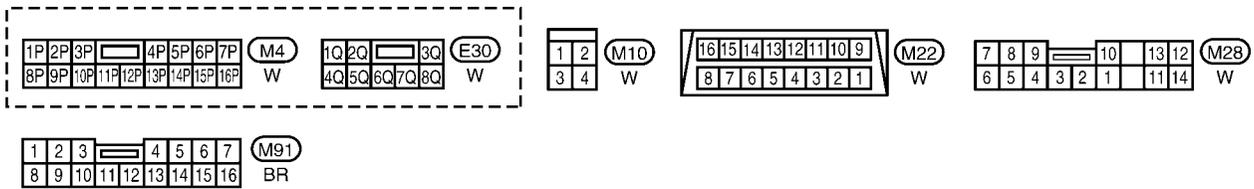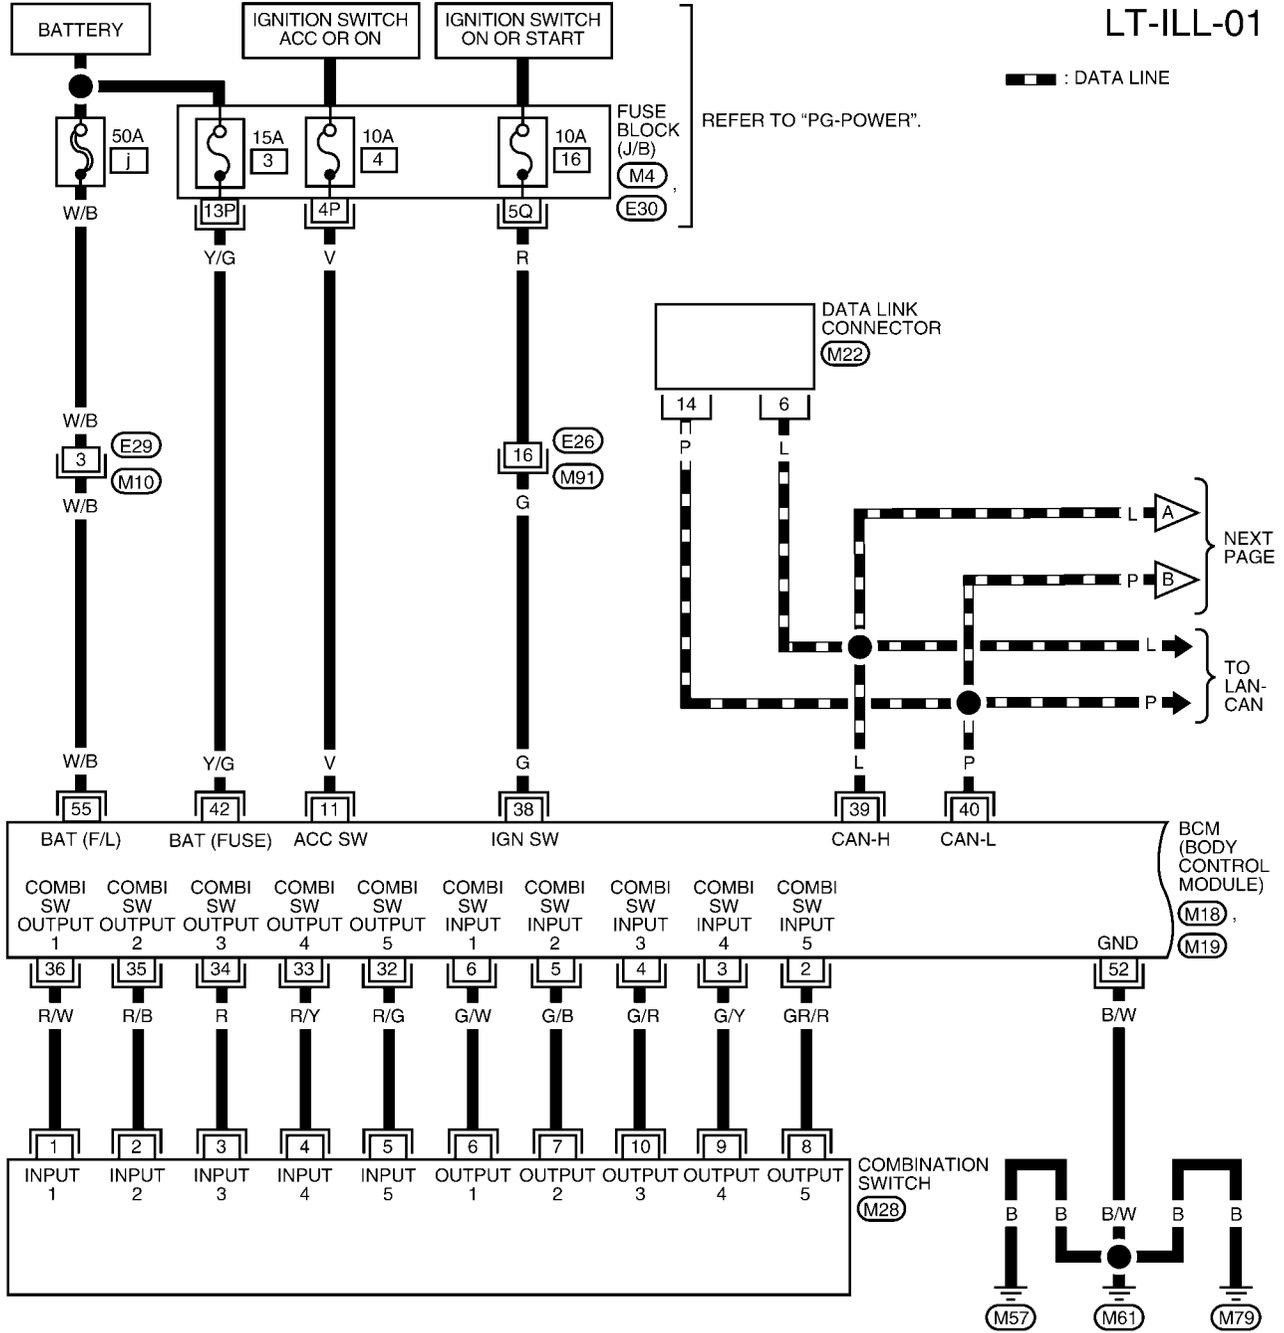


WKWA3918E



ILLUMINATION

LT-ILL-02

— : DATA LINE

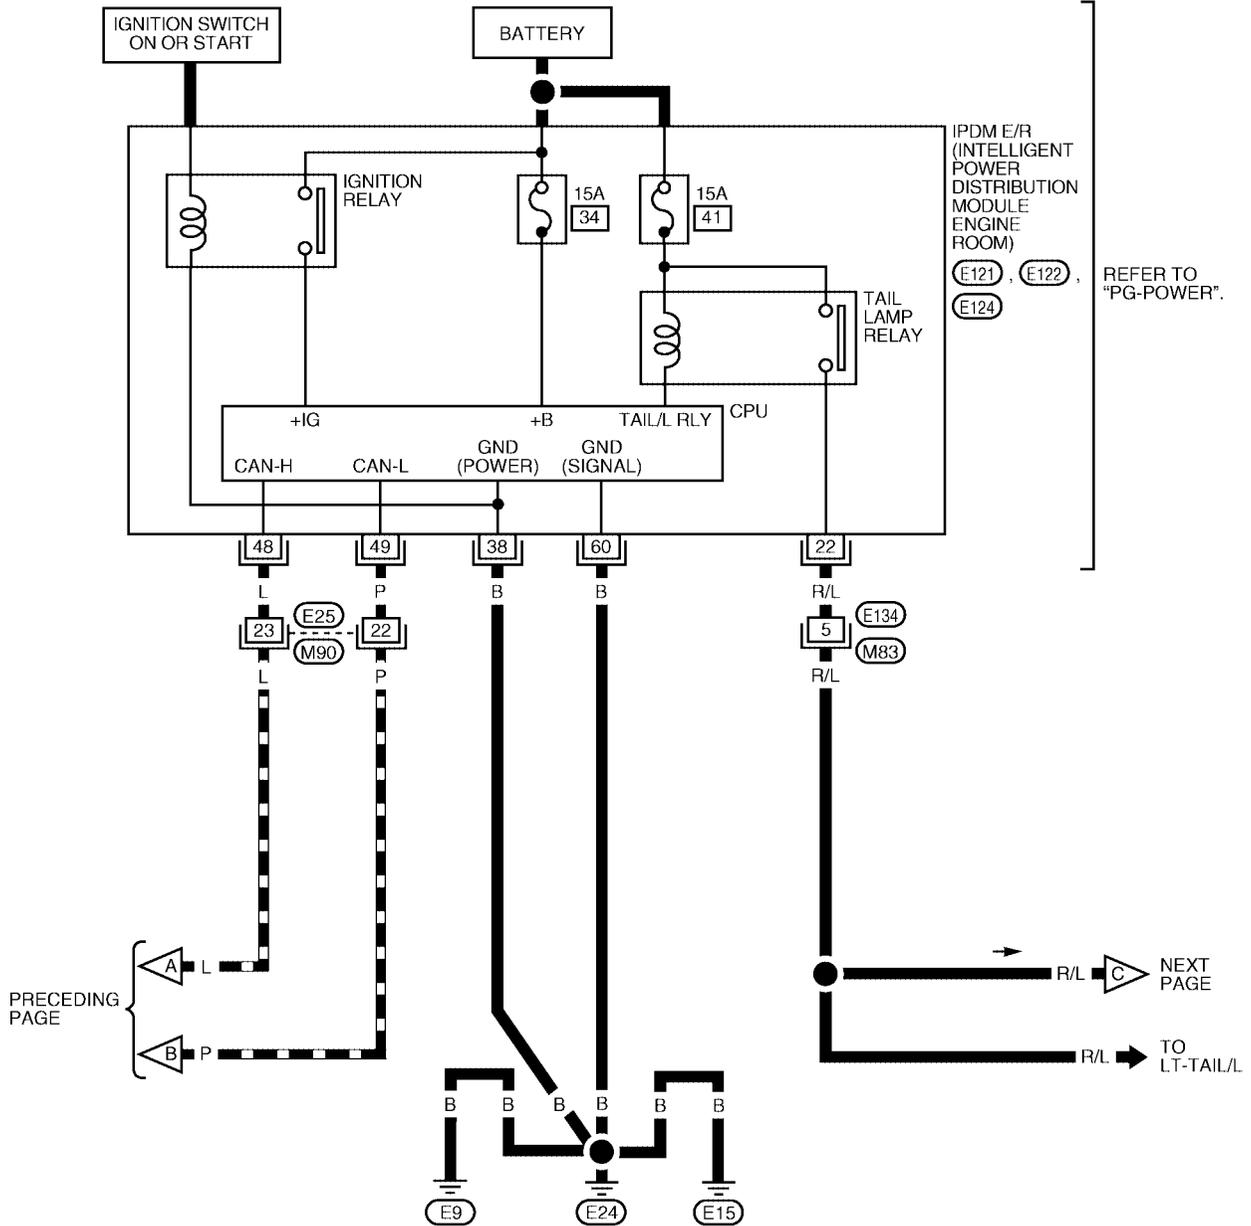



A
B
C
D
E
F
G
H
I
J
LT
L
M



WKWA1953E

ILLUMINATION

LT-ILL-03

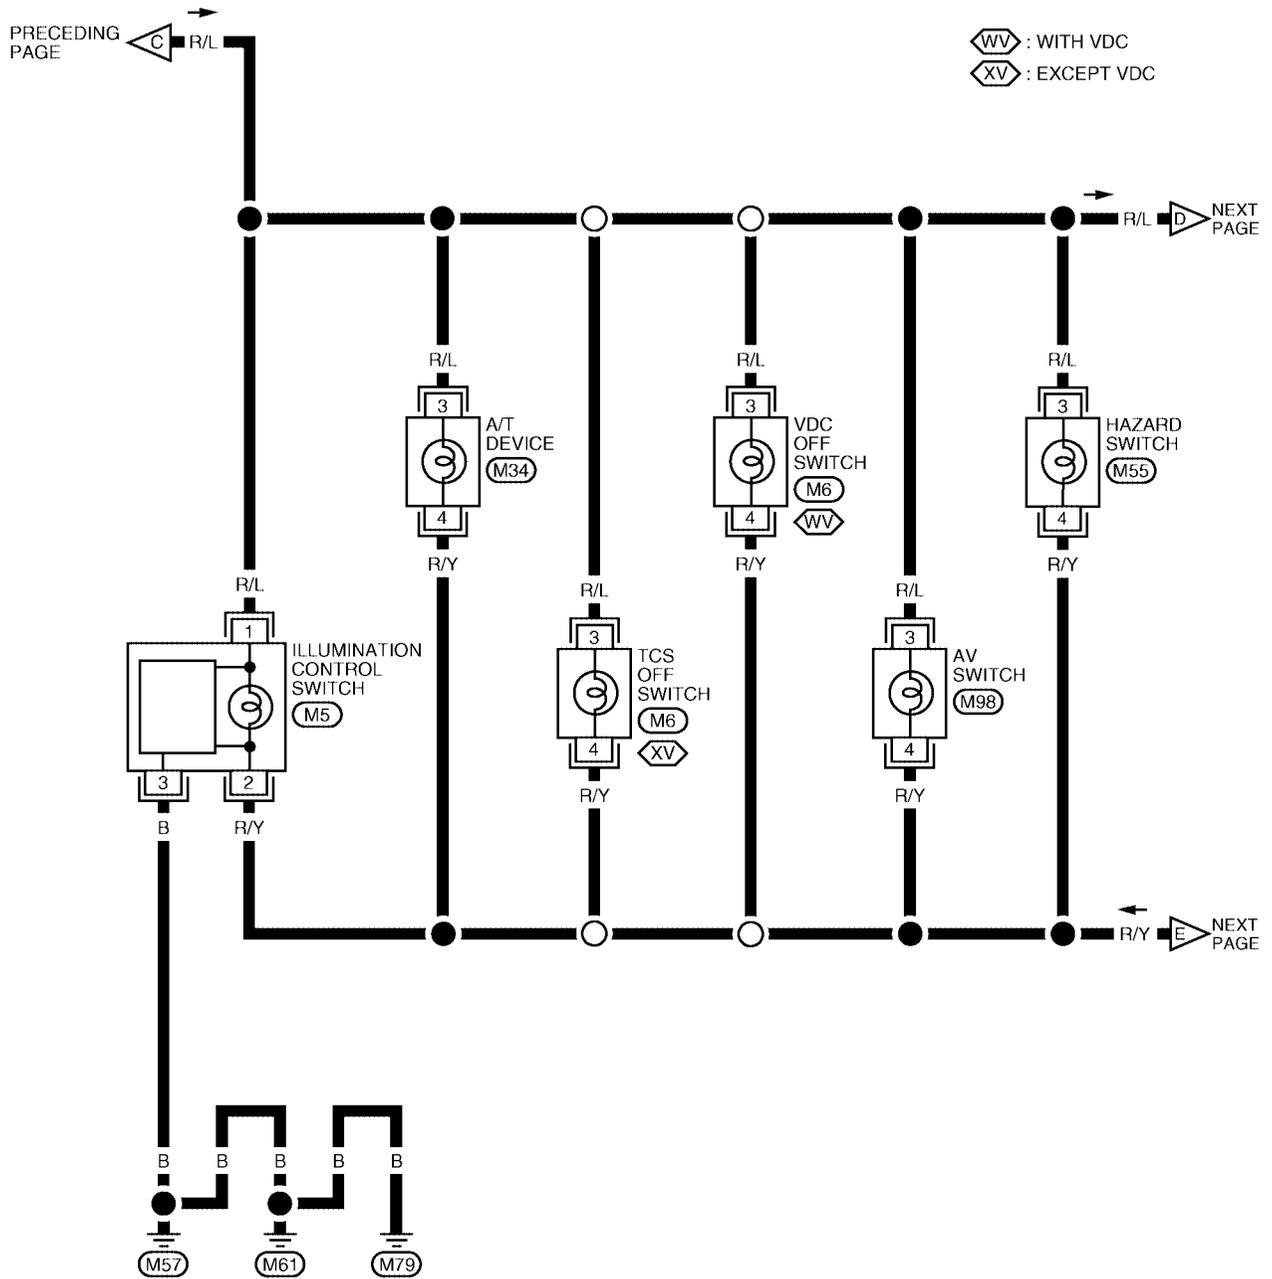


WKWA1954E





ILLUMINATION

LT-ILL-04

SO : WITH REAR SONAR SYSTEM

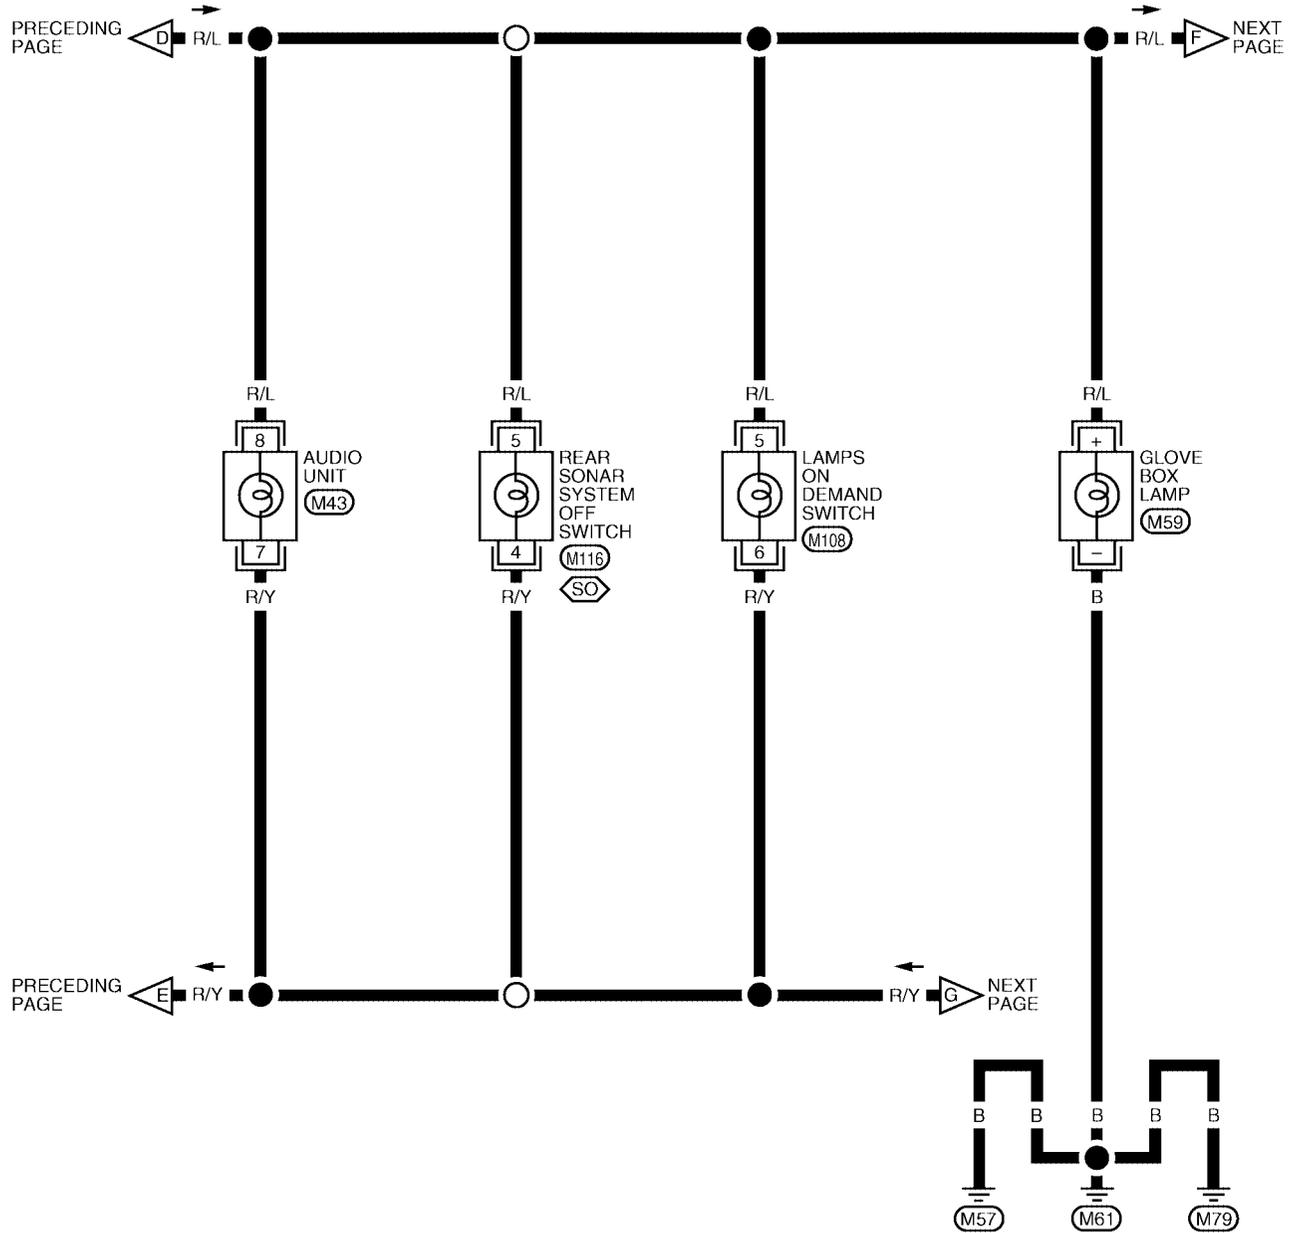

A
B
C
D
E
F
G
H
I
J
LT
L
M





WKWA1955E

ILLUMINATION

LT-ILL-05


NV : WITH NAVI
EN : WITHOUT NAVI

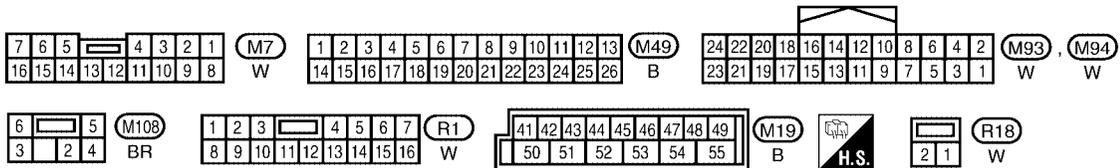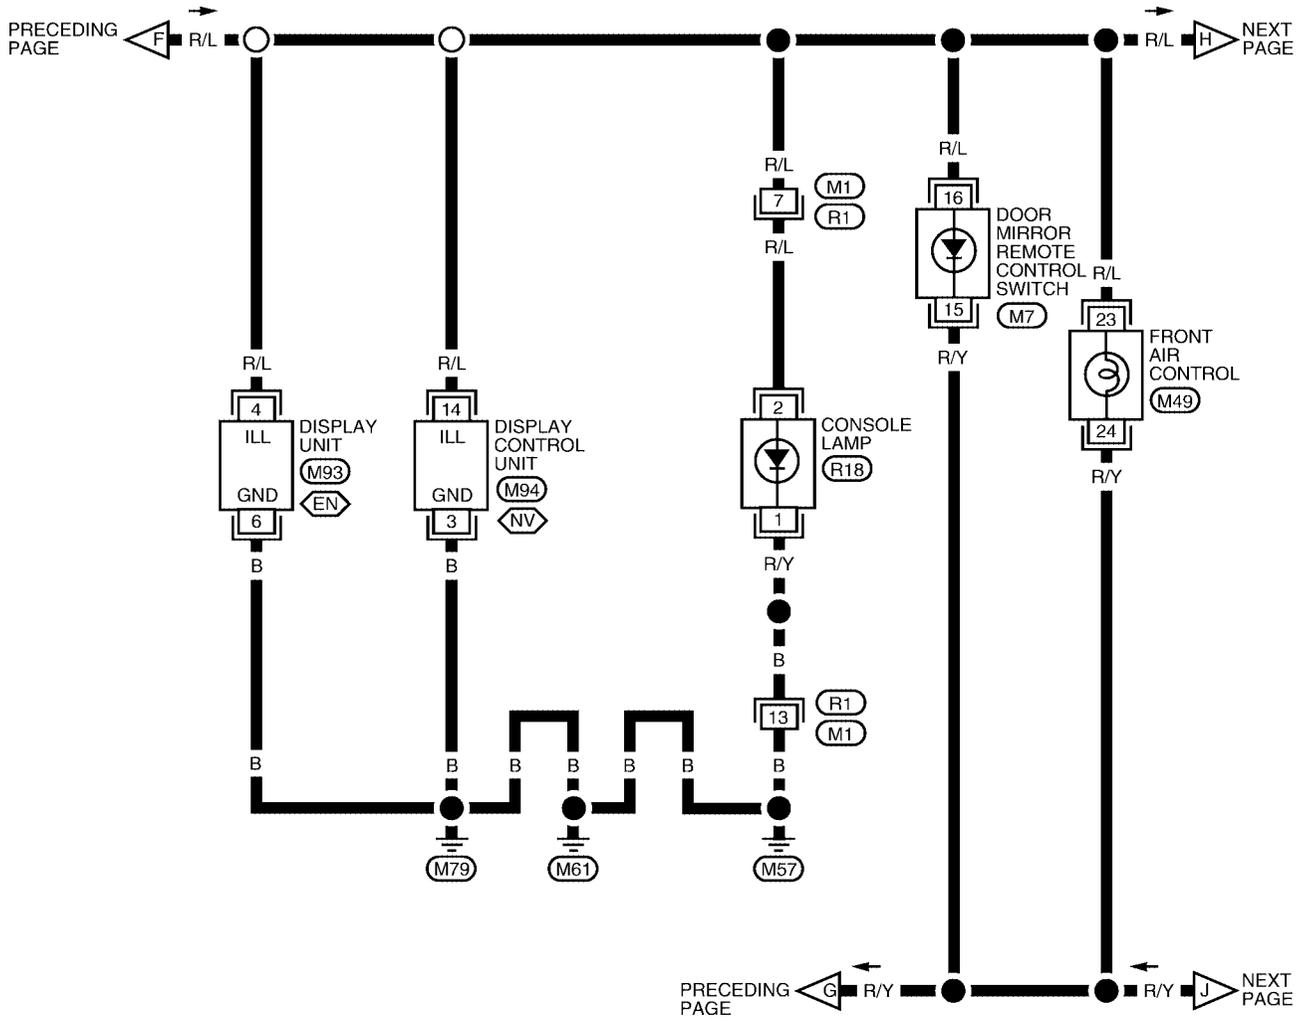


WKWA1956E

ILLUMINATION

LT-ILL-06

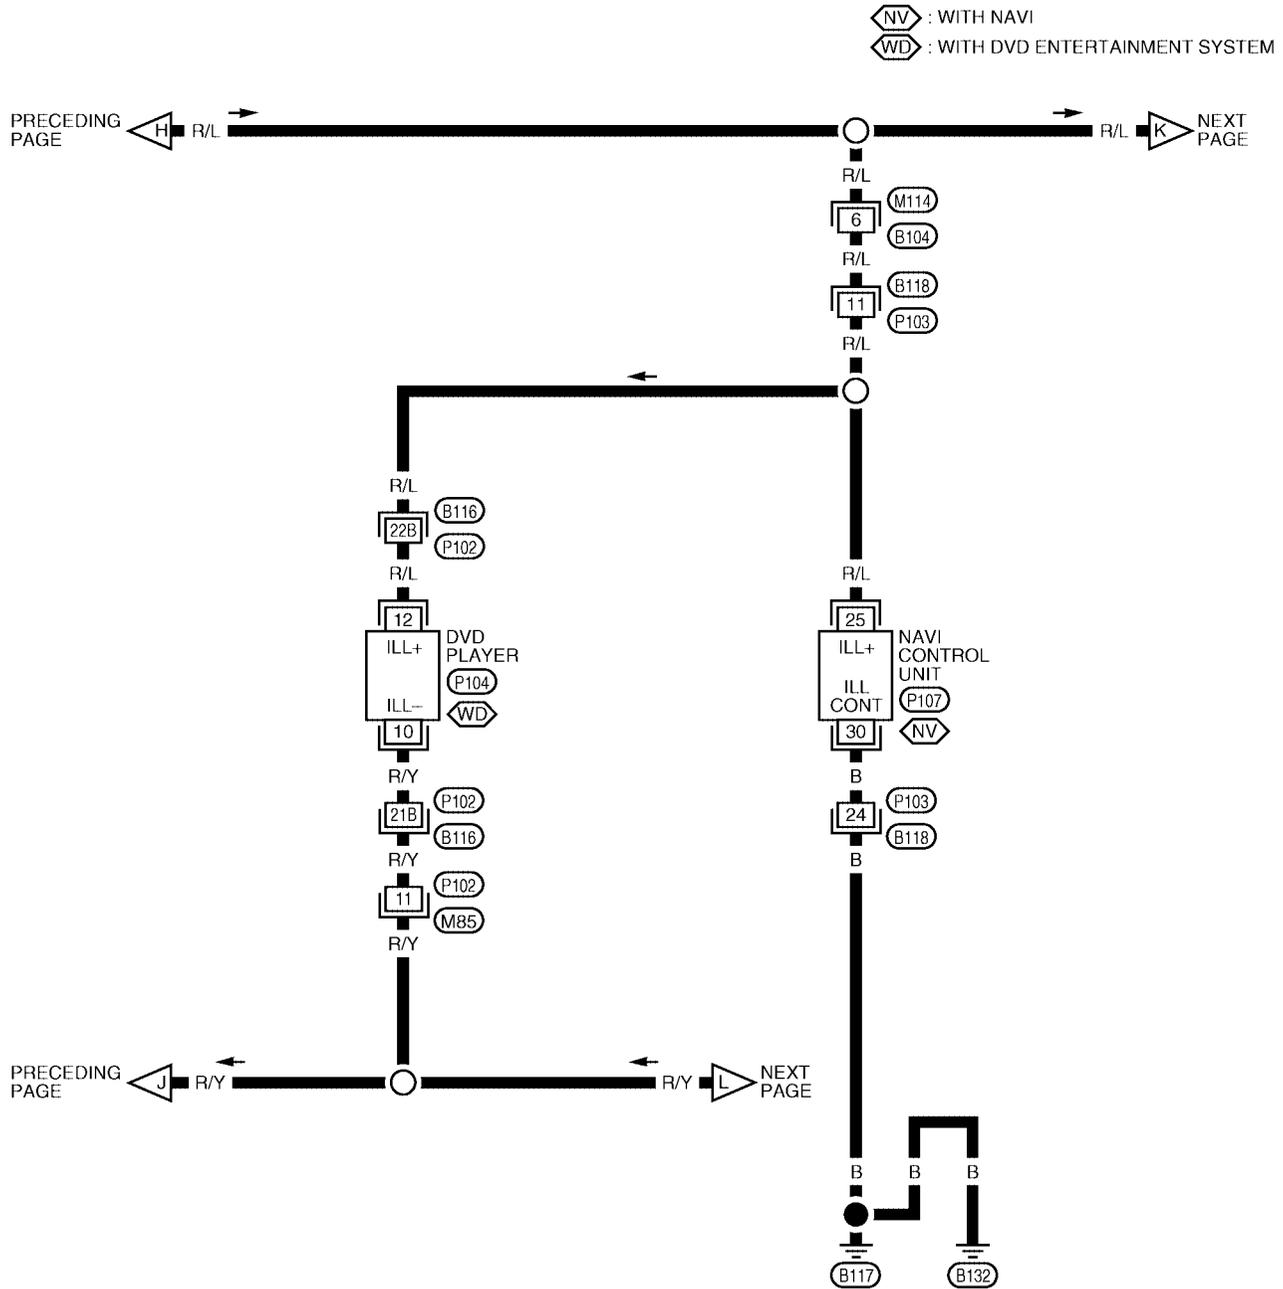

A
B
C
D
E
F
G
H
I
J
LT
L
M

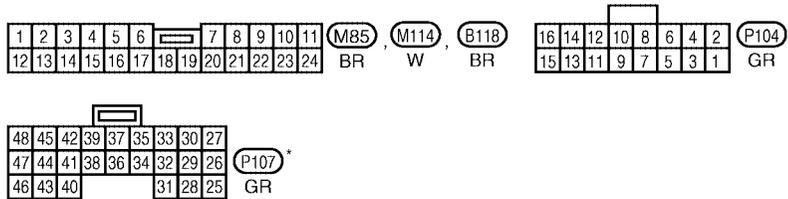

REFER TO THE FOLLOWING.
B116 - SUPER MULTIPLE JUNCTION (SMJ)



* : THIS CONNECTOR IS NOT SHOWN IN "HARNES LAYOUT" IN PG SECTION.

WKWA1957E

ILLUMINATION

LT-ILL-07


WS : WITH POWER SLIDING DOOR
 RR : WITH REAR AUDIO REMOTE CONTROL UNIT

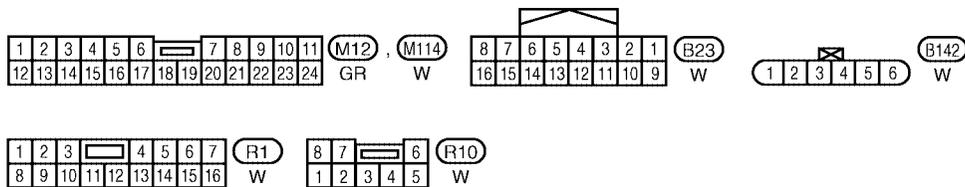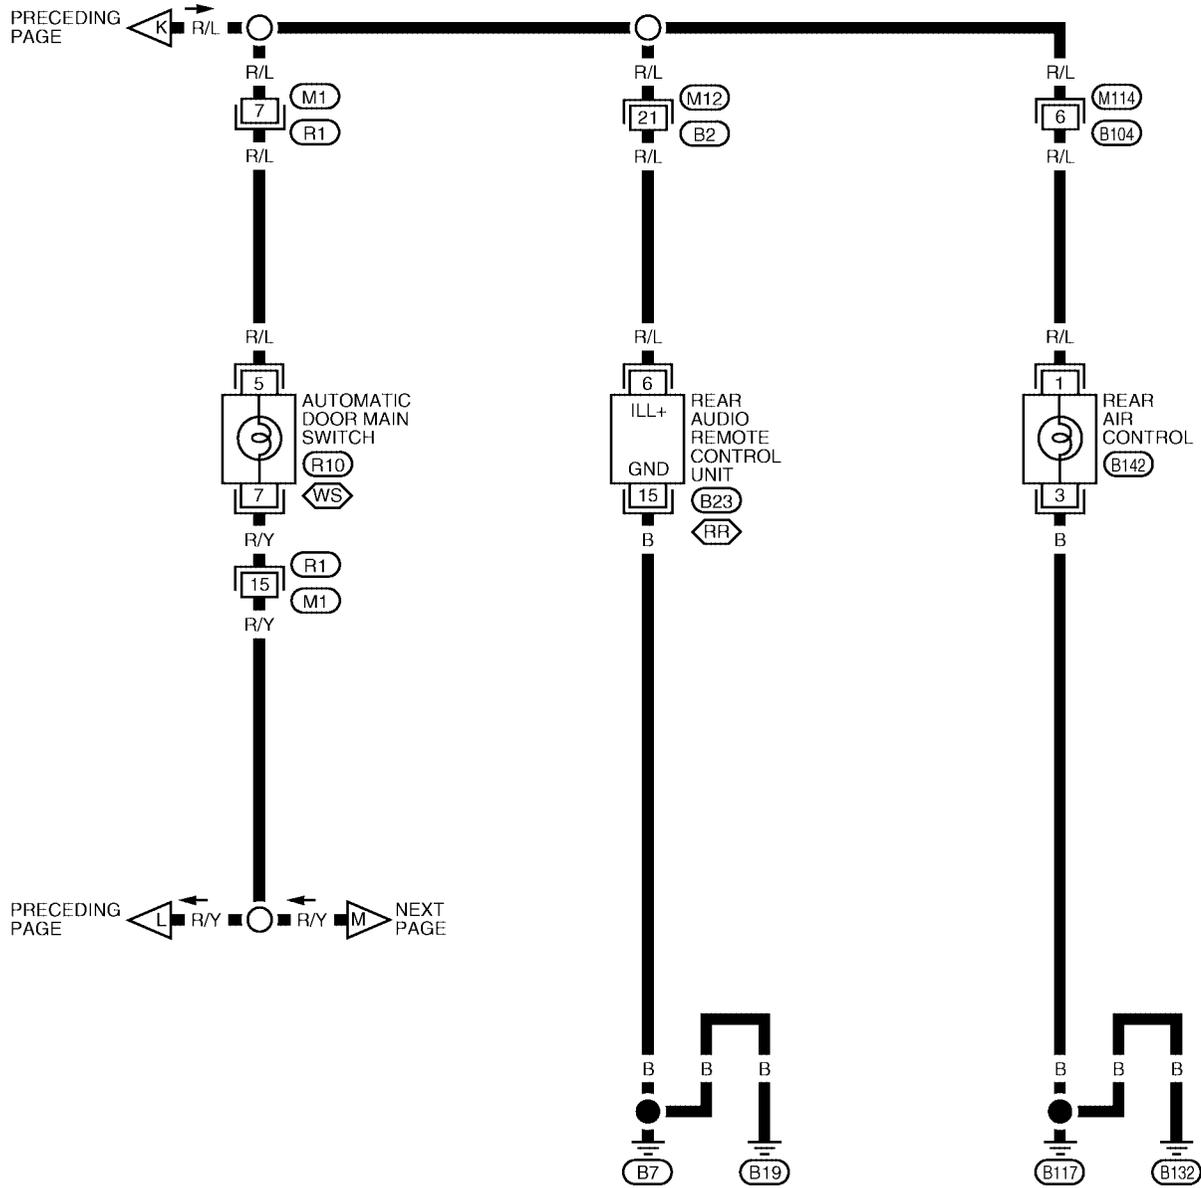


WKWA1958E

ILLUMINATION

LT-ILL-08

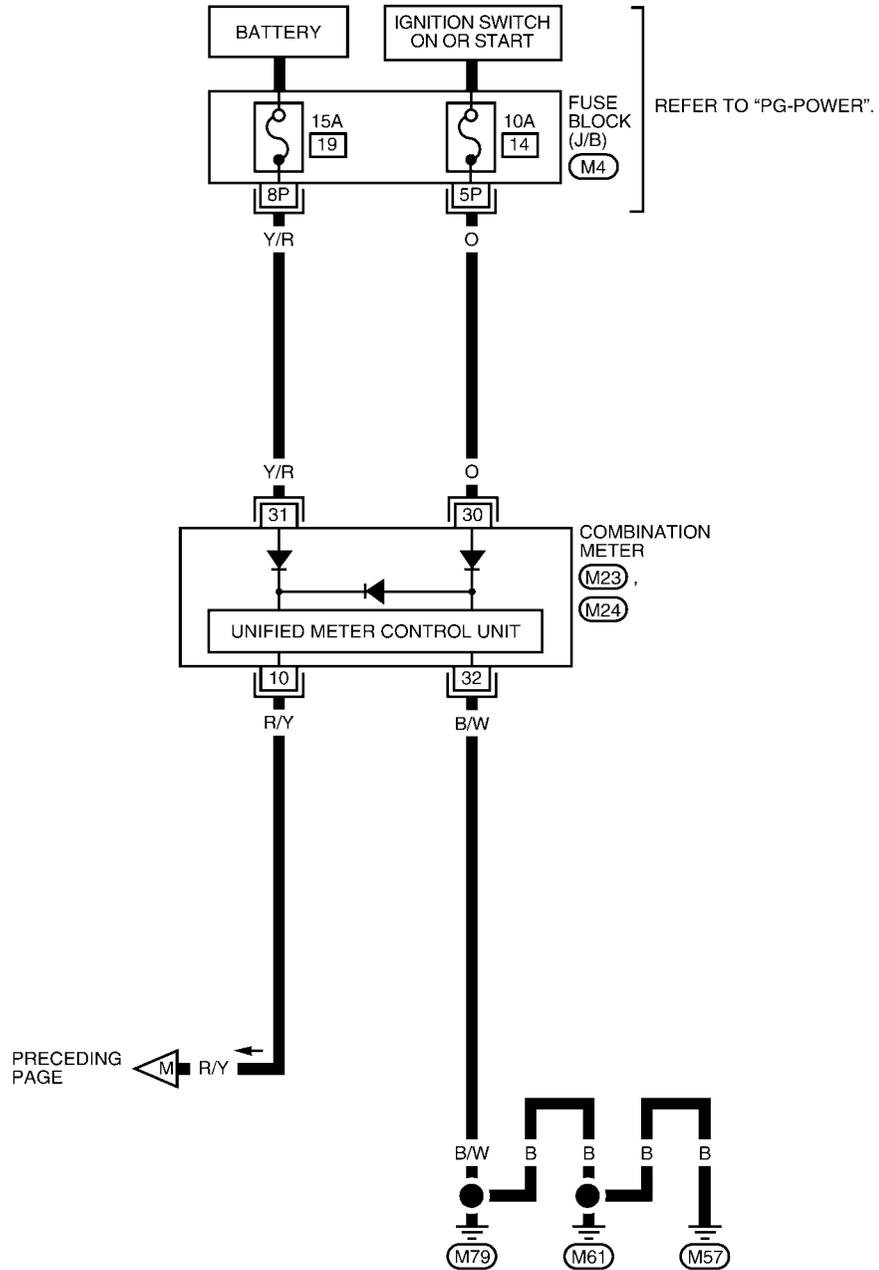

A
B
C
D
E
F
G
H
I
J
LT
L
M





WKWA3919E

ILLUMINATION

LT-ILL-09

- : DATA LINE
- ⬡ : WITH REAR POWER VENT WINDOWS
- ⬢ : WITHOUT REAR POWER VENT WINDOWS
- *1 ⬡ : 14 *2 ⬡ : 17
- ⬢ : 12 ⬢ : 15

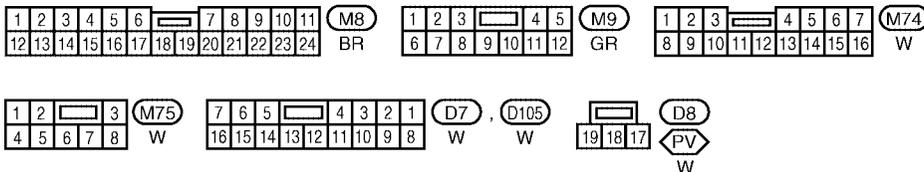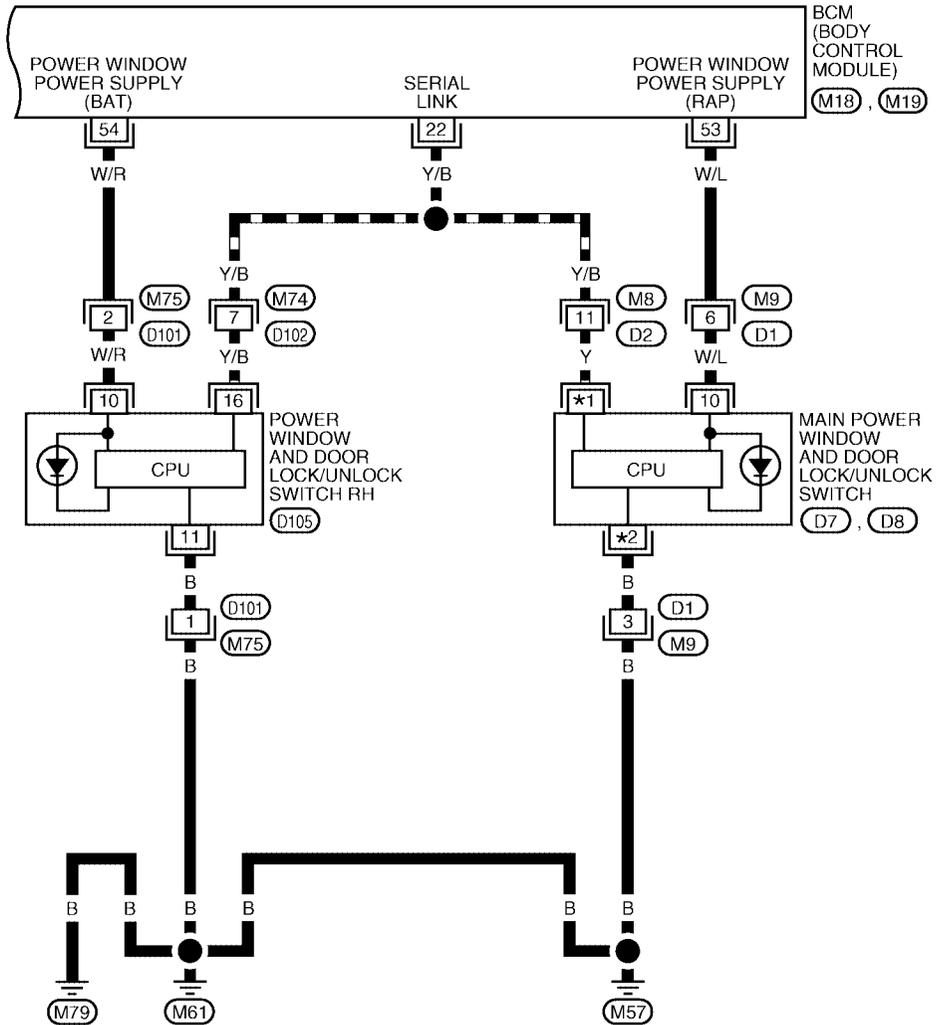

REFER TO THE FOLLOWING.
 (M18), (M19) - ELECTRICAL UNITS

WKWA1960E

ILLUMINATION


Removal and Installation

ILLUMINATION CONTROL SWITCH

EKS005P4

1. Remove lower driver instrument panel. Refer to [IP-12, "Instrument Lower Panel LH"](#) .
2. Carefully lift tabs and pull illumination control switch out of lower driver instrument panel.

Installation is in the reverse order of removal.

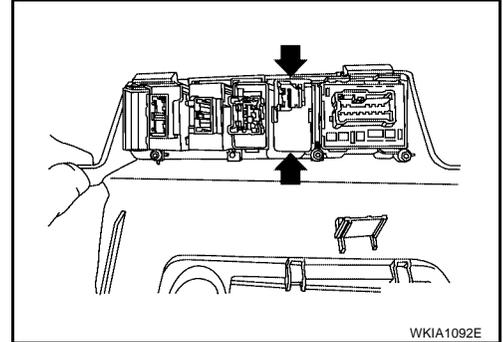

A

B

C

D

E

F

G

H

I

J

LT

L

M

BULB SPECIFICATIONS

BULB SPECIFICATIONS

PFP:26297

Headlamp

EKS00670

| Item | Wattage (W)* |
|------|--------------|
| Low | 51 (HB4) |
| High | 60 (HB3) |

*: Always check with the Parts Department for the latest parts information.

Exterior Lamp

EKS00671

| Item | Wattage (W)* | |
|------------------------|-------------------------------|------|
| Front combination lamp | Turn signal lamp/parking lamp | 29/8 |
| | Cornering lamp | 27 |
| Rear combination lamp | Stop/Tail lamp | 27/7 |
| | Turn signal lamp | 27 |
| | Back-up lamp | 18 |
| Fog lamp | 55 (H11) | |
| License plate lamp | 5 | |
| High-mounted stop lamp | 13 | |

*: Always check with the Parts Department for the latest parts information.

Interior Lamp/Illumination

EKS00672

| Item | Wattage (W)* |
|--|--------------|
| Glove box lamp | 3.4 |
| Ignition keyhole illumination lamp | 0.74 |
| Room/Map lamp | 8 |
| Console lamp | LED |
| A/T device lamp | 3 |
| Foot lamp | 3.4 |
| Step lamp | 3.8 |
| Cargo lamp | 7 |
| Vanity mirror lamp | 1.32 |
| Personal lamp (with rear roof console assembly) | 8 |
| Personal lamp (without rear roof console assembly) | 8 |
| Puddle lamp | 8 |
| Running board lamp | 3.4 |

*: Always check with the Parts Department for the latest parts information.