

LT
SECTION
LIGHTING SYSTEM

A
B
C
D
E
F
G
H
I
J
LT
L
M

CONTENTS

<p>PRECAUTIONS 4</p> <p style="padding-left: 20px;">Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER” 4</p> <p style="padding-left: 20px;">General precautions for service operations 4</p> <p>HEADLAMP (FOR USA) 5</p> <p style="padding-left: 20px;">Component Parts and Harness Connector Location... 5</p> <p style="padding-left: 20px;">System Description 5</p> <p style="padding-left: 40px;">OUTLINE 5</p> <p style="padding-left: 40px;">BATTERY SAVER CONTROL 6</p> <p style="padding-left: 40px;">AUTO LIGHT OPERATION 6</p> <p style="padding-left: 40px;">VEHICLE SECURITY SYSTEM (PANIC ALARM)... 7</p> <p style="padding-left: 20px;">CAN Communication System Description 7</p> <p style="padding-left: 20px;">Schematic 8</p> <p style="padding-left: 20px;">Wiring Diagram — H/LAMP — 9</p> <p style="padding-left: 20px;">Terminals and Reference Values for BCM 13</p> <p style="padding-left: 20px;">Terminals and Reference Values for IPDM E/R 14</p> <p style="padding-left: 20px;">How to Proceed With Trouble Diagnosis 14</p> <p style="padding-left: 20px;">Preliminary Check 15</p> <p style="padding-left: 40px;">CHECK POWER SUPPLY AND GROUND CIRCUIT 15</p> <p style="padding-left: 20px;">CONSULT-II Function (BCM) 17</p> <p style="padding-left: 40px;">CONSULT-II OPERATION 17</p> <p style="padding-left: 40px;">WORK SUPPORT 18</p> <p style="padding-left: 40px;">DATA MONITOR 18</p> <p style="padding-left: 40px;">ACTIVE TEST 19</p> <p style="padding-left: 40px;">SELF-DIAGNOSTIC RESULTS 19</p> <p style="padding-left: 20px;">CONSULT-II Function (IPDM E/R) 20</p> <p style="padding-left: 40px;">CONSULT-II OPERATION 20</p> <p style="padding-left: 40px;">DATA MONITOR 21</p> <p style="padding-left: 40px;">ACTIVE TEST 21</p> <p style="padding-left: 20px;">Headlamp HI Does Not Illuminate (Both Sides) 22</p> <p style="padding-left: 20px;">Headlamp HI Does Not Illuminate (One Side) 24</p> <p style="padding-left: 20px;">High-Beam Indicator Lamp Does Not Illuminate ... 25</p> <p style="padding-left: 20px;">Headlamp LO Does Not Illuminate (Both Sides) ... 25</p> <p style="padding-left: 20px;">Headlamp LO Does Not Illuminate (One Side) 27</p> <p style="padding-left: 20px;">Headlamps Do Not Turn OFF 28</p> <p style="padding-left: 20px;">Aiming Adjustment 29</p> <p style="padding-left: 40px;">LOW BEAM AND HIGH BEAM 29</p> <p style="padding-left: 20px;">Bulb Replacement 30</p>	<p style="padding-left: 20px;">HEADLAMP (OUTER SIDE), FOR LOW BEAM.. 30</p> <p style="padding-left: 20px;">HEADLAMP (INNER SIDE), FOR HIGH BEAM.. 30</p> <p style="padding-left: 20px;">FRONT TURN SIGNAL/PARKING LAMP 30</p> <p style="padding-left: 20px;">Removal and Installation 31</p> <p style="padding-left: 20px;">Disassembly and Assembly 31</p> <p>HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM - 32</p> <p style="padding-left: 20px;">Component Parts and Harness Connector Location.. 32</p> <p style="padding-left: 20px;">System Description 32</p> <p style="padding-left: 40px;">HEADLAMP OPERATION 33</p> <p style="padding-left: 40px;">BATTERY SAVER CONTROL 34</p> <p style="padding-left: 40px;">AUTO LIGHT OPERATION 34</p> <p style="padding-left: 40px;">DAYTIME LIGHT OPERATION 34</p> <p style="padding-left: 40px;">OPERATION 35</p> <p style="padding-left: 20px;">CAN Communication System Description 35</p> <p style="padding-left: 20px;">Schematic 36</p> <p style="padding-left: 20px;">Wiring Diagram — DTRL — 37</p> <p style="padding-left: 20px;">Trouble Diagnoses 40</p> <p style="padding-left: 40px;">DAYTIME LIGHT CONTROL UNIT INSPECTION TABLE 40</p> <p style="padding-left: 40px;">Aiming Adjustment 41</p> <p style="padding-left: 40px;">Bulb Replacement 41</p> <p style="padding-left: 40px;">Removal and Installation of Headlamp 41</p> <p style="padding-left: 40px;">Disassembly and Assembly of Headlamp 41</p> <p style="padding-left: 40px;">Removal and Installation of Daytime Light Control Unit 41</p> <p style="padding-left: 40px;">Removal and Installation of Daytime Light Relay ... 41</p> <p>AUTO LIGHT SYSTEM 42</p> <p style="padding-left: 20px;">Component Parts and Harness Connector Location.. 42</p> <p style="padding-left: 20px;">System Description 42</p> <p style="padding-left: 40px;">OUTLINE 42</p> <p style="padding-left: 40px;">COMBINATION SWITCH READING FUNCTION.. 43</p> <p style="padding-left: 40px;">EXTERIOR LAMP BATTERY SAVER CONTROL.. 43</p> <p style="padding-left: 40px;">DELAY TIMER FUNCTION 43</p> <p style="padding-left: 20px;">CAN Communication System Description 43</p> <p style="padding-left: 20px;">Major Components and Functions 43</p> <p style="padding-left: 20px;">Schematic 44</p> <p style="padding-left: 20px;">Wiring Diagram — AUTO/L — 45</p> <p style="padding-left: 20px;">Terminals and Reference Values for BCM 48</p> <p style="padding-left: 20px;">Terminals and Reference Values for IPDM E/R 49</p>
--	--

How to Proceed With Trouble Diagnosis	50	CONSULT-II Function (BCM)	82
Preliminary Check	50	CONSULT-II OPERATION	82
SETTING CHANGE FUNCTIONS	50	DATA MONITOR	83
CHECK BCM CONFIGURATION	50	ACTIVE TEST	83
CHECK POWER SUPPLY AND GROUND CIR- CUIT	50	Turn Signal Lamp Does Not Operate	84
CONSULT-II Function (BCM)	52	Rear Turn Signal Lamp Does Not Operate	85
CONSULT-II OPERATION	52	Hazard Warning Lamp Does Not Operate But Turn Signal Lamps Operate	86
WORK SUPPORT	53	Turn Signal Indicator Lamp Does Not Operate	87
DATA MONITOR	53	Bulb Replacement (Front Turn Signal Lamp)	88
ACTIVE TEST	54	Bulb Replacement (Rear Turn Signal Lamp)	88
CONSULT-II Function (IPDM E/R)	54	Removal and Installation of Front Turn Signal Lamp..	88
CONSULT-II OPERATION	55	Removal and Installation of Rear Turn Signal Lamp..	88
DATA MONITOR	55	CORNERING LAMP	89
ACTIVE TEST	56	Component Parts and Harness Connector Location..	89
Trouble Diagnosis Chart by Symptom	57	System Description	89
Lighting Switch Inspection	57	OUTLINE	89
Optical Sensor System Inspection	58	CORNERING LAMP OPERATION	89
Optical Sensor	59	COMBINATION SWITCH READING FUNCTION..	90
REMOVAL AND INSTALLATION	59	CAN Communication System Description	90
INSTALLATION	59	Schematic	91
FRONT FOG LAMP	60	Wiring Diagram — CORNER —	92
Component Parts and Harness Connector Location..	60	Terminals and Reference Values for BCM	95
System Description	60	Terminals and Reference Values for IPDM E/R	96
OUTLINE	60	How to Proceed With Trouble Diagnosis	96
COMBINATION SWITCH READING FUNCTION..	61	Preliminary Check	96
EXTERIOR LAMP BATTERY SAVER CONTROL..	61	CHECK POWER SUPPLY AND GROUND CIR- CUIT	96
CAN Communication System Description	61	CONSULT-II Function (IPDM E/R)	98
Wiring Diagram — F/FOG —	62	CONSULT-II OPERATION	98
Terminals and Reference Values for BCM	64	DATA MONITOR	98
Terminals and Reference Values for IPDM E/R	65	ACTIVE TEST	99
How to Proceed With Trouble Diagnosis	65	Cornering Lamp Does Not Operate	99
Preliminary Check	66	Bulb Replacement	101
CHECK BCM CONFIGURATION	66	LIGHTING AND TURN SIGNAL SWITCH	102
CHECK POWER SUPPLY AND GROUND CIR- CUIT	66	Removal and Installation	102
CONSULT-II Functions	67	HAZARD SWITCH	103
Front Fog Lamps Do Not Illuminate (Both Sides) ..	67	Removal and Installation	103
Front Fog Lamp Does Not Illuminate (One Side) ..	68	COMBINATION SWITCH	104
Aiming Adjustment	69	Wiring Diagram — COMBSW —	104
Bulb Replacement	70	Combination Switch Reading Function	105
Removal and Installation	70	CONSULT-II Function (BCM)	105
TURN SIGNAL AND HAZARD WARNING LAMPS..	71	CONSULT-II OPERATION	105
Component Parts and Harness Connector Location..	71	DATA MONITOR	106
System Description	71	Combination Switch Inspection	107
OUTLINE	71	Removal and Installation	109
TURN SIGNAL OPERATION	71	Switch Circuit Inspection	109
HAZARD LAMP OPERATION	72	STOP LAMP	110
REMOTE KEYLESS ENTRY SYSTEM OPERA- TION	73	System Description	110
COMBINATION SWITCH READING FUNCTION..	73	Wiring Diagram — STOP/L —	111
CAN Communication System Description	73	High-Mounted Stop Lamp	113
Schematic	74	BULB REPLACEMENT, REMOVAL AND INSTALLATION	113
Wiring Diagram — TURN —	75	Stop Lamp	113
Terminals and Reference Values for BCM	79	BULB REPLACEMENT	113
How to Proceed With Trouble Diagnosis	80	REMOVAL AND INSTALLATION	113
Preliminary Check	81	BACK-UP LAMP	114
CHECK POWER SUPPLY AND GROUND CIR- CUIT	81	Wiring Diagram — BACK/L —	114

Bulb Replacement	115	Component Parts and Harness Connector Location	136	
Removal and Installation	115	System Description	137	A
PARKING, LICENSE PLATE AND TAIL LAMPS ...	116	POWER SUPPLY AND GROUND	137	
Component Parts and Harness Connector Location	116	SWITCH OPERATION	138	B
System Description	116	ROOM LAMP TIMER OPERATION	139	
OPERATION BY LIGHTING SWITCH	117	INTERIOR LAMP BATTERY SAVER CONTROL	140	
COMBINATION SWITCH READING FUNCTION	117	Schematic	141	C
EXTERIOR LAMP BATTERY SAVER CONTROL	117	Wiring Diagram — INT/L —	143	
CAN Communication System Description	117	Terminals and Reference Values for BCM	150	
Schematic	118	How to Proceed With Trouble Diagnosis	151	D
Wiring Diagram — TAIL/L —	119	Preliminary Check	151	
Terminals and Reference Values for BCM	123	SWITCH INSPECTION	151	
Terminals and Reference Values for IPDM E/R ..	124	INSPECTION FOR POWER SUPPLY AND		E
How to Proceed With Trouble Diagnosis	124	GROUND CIRCUIT	151	
Preliminary Check	124	CONSULT-II Function (BCM)	152	
CHECK POWER SUPPLY AND GROUND CIR-		CONSULT-II OPERATION	152	F
CUIT	124	WORK SUPPORT	153	
CONSULT-II Functions	125	DATA MONITOR	153	
Parking, License Plate and/or Tail Lamps Do Not		ACTIVE TEST	154	G
Illuminate	126	Room/Map Lamp Control Does Not Operate	154	
Parking, License Plate and Tail Lamps Do Not Turn		Personal Lamp Control Does Not Operate (Room/		
OFF (After Approx. 10 Minutes)	129	Map Lamps Operate)	157	
Front Parking Lamp	130	Ignition Keyhole Illumination Control Does Not		H
BULB REPLACEMENT	130	Operate	158	
Tail Lamp	130	All Step/Foot/Puddle Lamps Do Not Operate	160	
BULB REPLACEMENT	130	All Interior Room Lamps Do Not Operate	161	
REAR COMBINATION LAMP	131	ILLUMINATION	162	
Bulb Replacement	131	Component Parts and Harness Connector Location	162	I
Removal and Installation	131	System Description	162	
.....	131	ILLUMINATION OPERATION BY LIGHTING		J
TRAILER TOW	132	SWITCH	163	
Component Parts and Harness Connector Location	132	EXTERIOR LAMP BATTERY SAVER CONTROL	164	
System Description	132	CAN Communication System Description	164	
TRAILER TAIL LAMP OPERATION	132	Schematic	165	
TRAILER STOP, TURN SIGNAL AND HAZARD		Wiring Diagram — ILL —	167	LT
LAMP OPERATION	132	Removal and Installation	176	
Wiring Diagram — T/TOW —	134	ILLUMINATION CONTROL SWITCH	176	
Trouble Diagnoses	135	BULB SPECIFICATIONS	177	L
TRAILER TOW CONTROL UNIT INSPECTION		Headlamp	177	
TABLE	135	Exterior Lamp	177	
INTERIOR ROOM LAMP	136	Interior Lamp/Illumination	177	M

PRECAUTIONS

PRECAUTIONS

PF0:00011

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

EKS00FAP

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

General precautions for service operations

EKS00FAQ

- Never work with wet hands.
- Turn the lighting switch OFF before disconnecting and connecting the connector.
- When checking the headlamp on/off operation, check it on vehicle and with the power connected to the vehicle-side connector.
- Do not touch the headlamp bulb glass surface with bare hands or allow oil or grease to get on it. Do not touch the headlamp bulb just after the headlamp is turned off, because it is very hot.
- When the bulb has burned out, wrap it in a thick vinyl bag and discard. Do not break the bulb.
- Leaving the bulb removed from the headlamp housing for a long period of time can deteriorate the performance of the lens and reflector (dirt, clouding). Always prepare a new bulb and have it on hand when replacing the bulb.
- Do not use organic solvent (paint thinner or gasoline) to clean lamps and to remove old sealant.


HEADLAMP (FOR USA)

PF26010

EKS00FAS

HEADLAMP (FOR USA)

Component Parts and Harness Connector Location

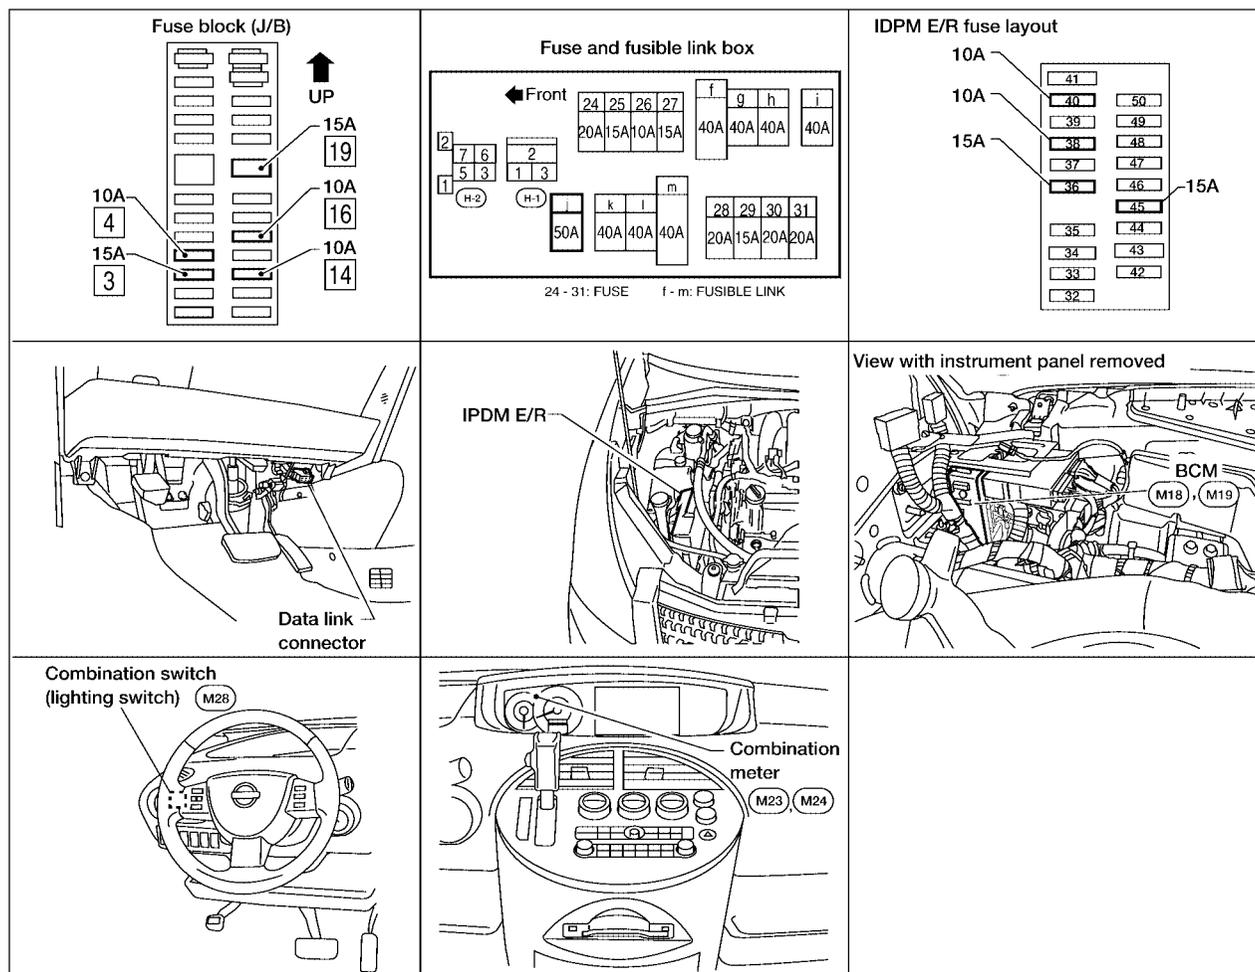

WKIA4183E

EKS00FAT

System Description

Control of the headlamp system operation is dependent upon the position of the combination switch (lighting switch). When the lighting switch is placed in the 2ND position, the BCM (body control module) receives input requesting the headlamps (and tail lamps) illuminate. This input is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the headlamp high and headlamp low relay coils. When energized, these relays direct power to the respective headlamps, which then illuminate.

OUTLINE

Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and
- to headlamp high relay, located in the IPDM E/R, and
- to headlamp low relay, located in the IPDM E/R, and
- through 50A fusible link (letter j, located in the fuse and fusible link box)
- to BCM terminal 55, and
- through 15A fuse [No. 3, located in the fuse block (J/B)]
- to BCM terminal 42, and
- through 15A fuse [No. 19, Located in the fuse block (J/B)]
- to combination meter terminal 31.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and

HEADLAMP (FOR USA)

- through 10A fuse [No. 16, located in the fuse block (J/B)]
- to BCM terminal 38, and
- through 10A fuse [No. 14, Located in the fuse block (J/B)]
- to combination meter terminal 30.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 52
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 60
- through grounds E9, E15 and E24.

Low Beam Operation

With the lighting switch in 2ND position, the BCM receives input requesting the headlamps to illuminate. This input is communicated to the IPDM E/R across the CAN communication lines. The CPU of the IPDM E/R controls the headlamp low relay coil. When energized, this relay directs power

- through 15A fuse (No. 36, located in the IPDM E/R)
- through IPDM E/R terminal 20
- to front combination lamp RH terminal 1, and
- through 15A fuse (No. 45, located in the IPDM E/R)
- through IPDM E/R terminal 30
- to front combination lamp LH terminal 1.

Ground is supplied

- to front combination lamp LH and RH terminal 2
- through grounds E9, E15 and E24.

With power and ground supplied, low beam headlamps illuminate.

High Beam Operation/Flash-to-Pass Operation

With the lighting switch in 2ND position and placed in HIGH or PASS position, the BCM receives input requesting the headlamp high beams to illuminate. This input is communicated to the IPDM E/R and combination meter across the CAN communication lines. The CPU of the combination meter controls the ON/OFF status of the HIGH BEAM indicator. The CPU of the IPDM E/R controls the headlamp high relay coil. When energized, this relay directs power

- through 10A fuse (No. 40, located in the IPDM E/R)
- through IPDM E/R terminal 27
- to front combination lamp RH terminal 3, and
- through 10A fuse (No. 38, located in the IPDM E/R)
- through IPDM E/R terminal 28
- to front combination lamp LH terminal 3.

Ground is supplied

- to front combination lamp LH and RH terminal 4
- through grounds E9, E15 and E24.

With power and ground supplied, the high beam headlamps illuminate.

BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON) and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the headlamps remain illuminated for 5 minutes, unless the combination switch (lighting switch) position is changed. If the combination switch (lighting switch) position is changed, then the headlamps are turned off.

AUTO LIGHT OPERATION

Refer to [LT-42, "System Description"](#) for auto light operation.

HEADLAMP (FOR USA)

VEHICLE SECURITY SYSTEM (PANIC ALARM)

The vehicle security system (panic alarm) will flash the high beams if the system is triggered. Refer to [BL-60, "Panic Alarm Operation"](#) .

CAN Communication System Description

EKS00FAU

Refer to [LAN-24, "CAN COMMUNICATION"](#) .

A

B

C

D

E

F

G

H

I

J

LT


L

M

HEADLAMP (FOR USA)

Schematic

EKS00FQG

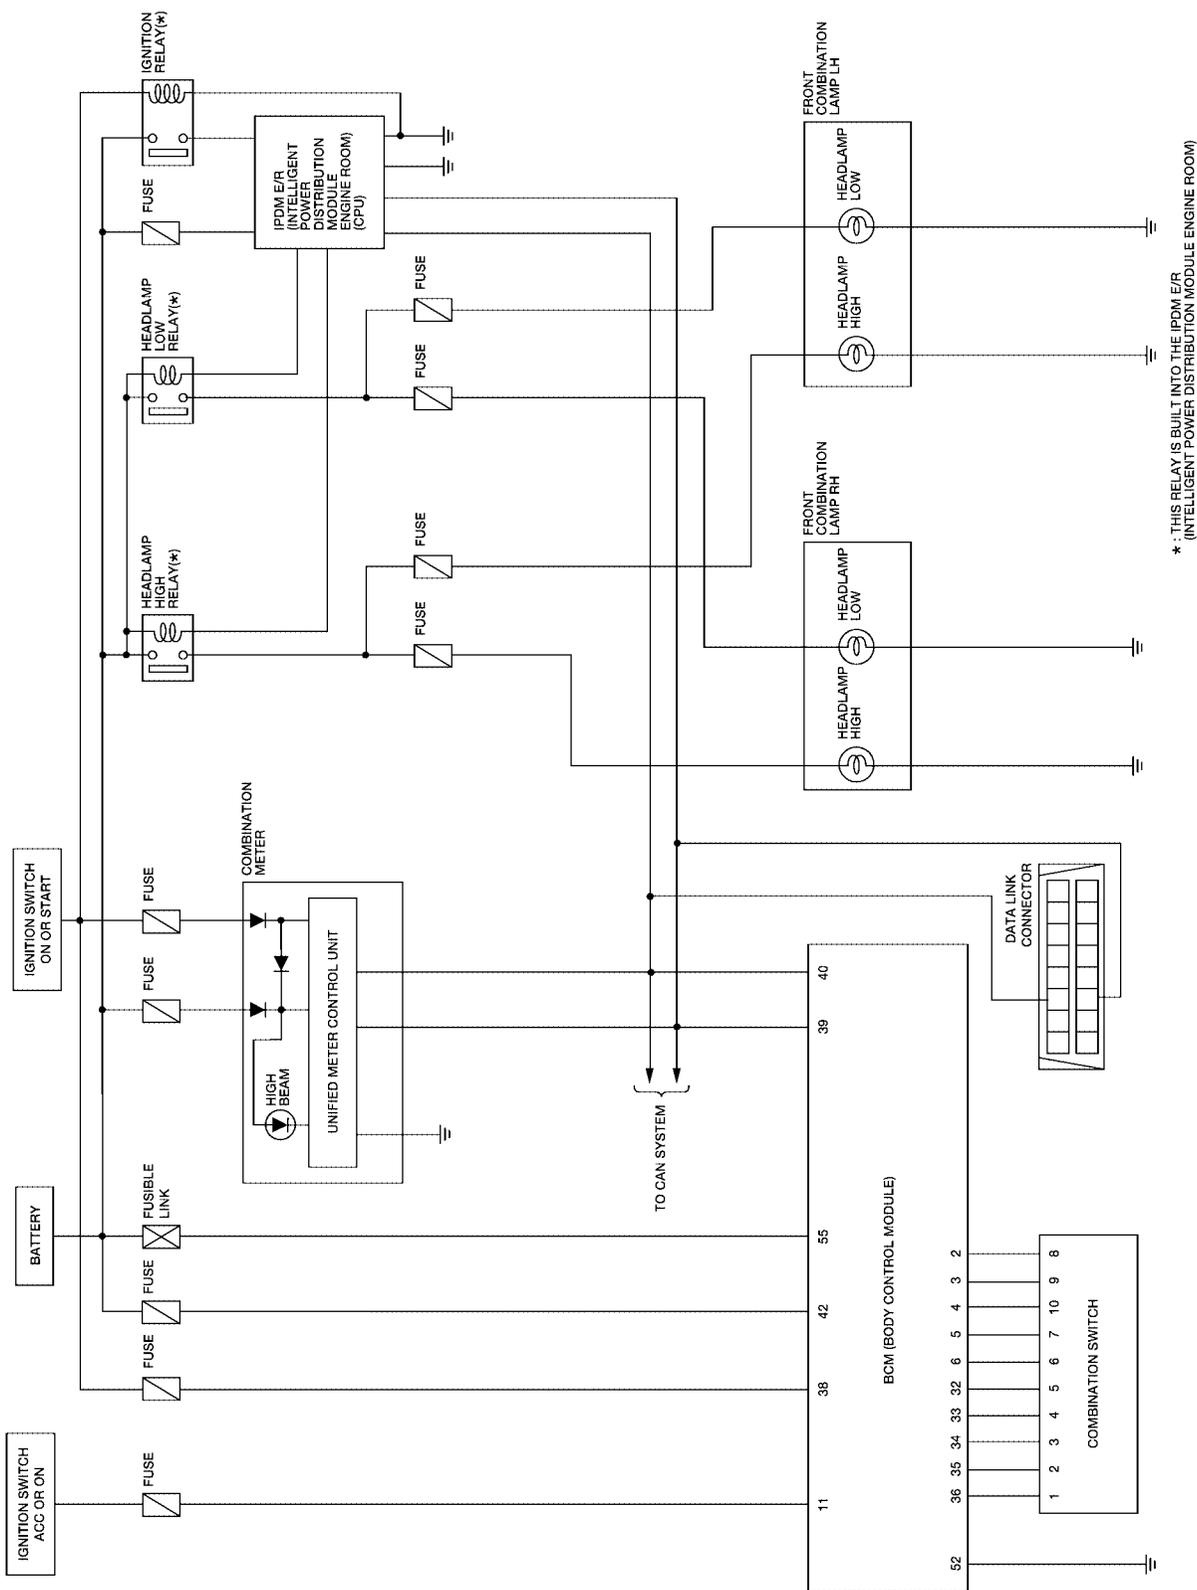

WKWA3199E



HEADLAMP (FOR USA)

Wiring Diagram — H/LAMP —

EKS00FAV

LT-H/LAMP-01


— : DATA LINE

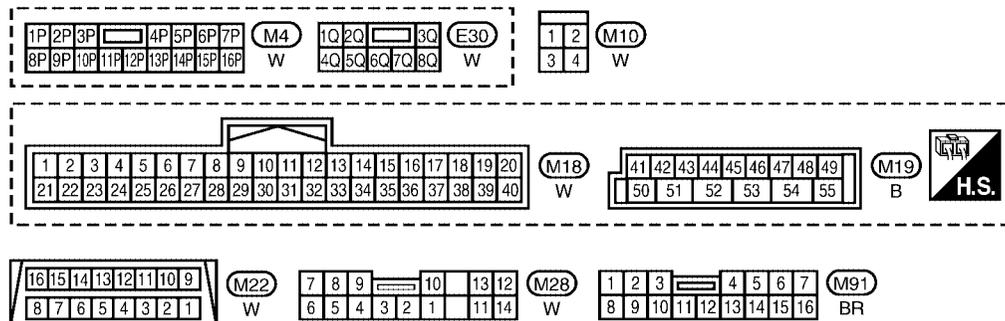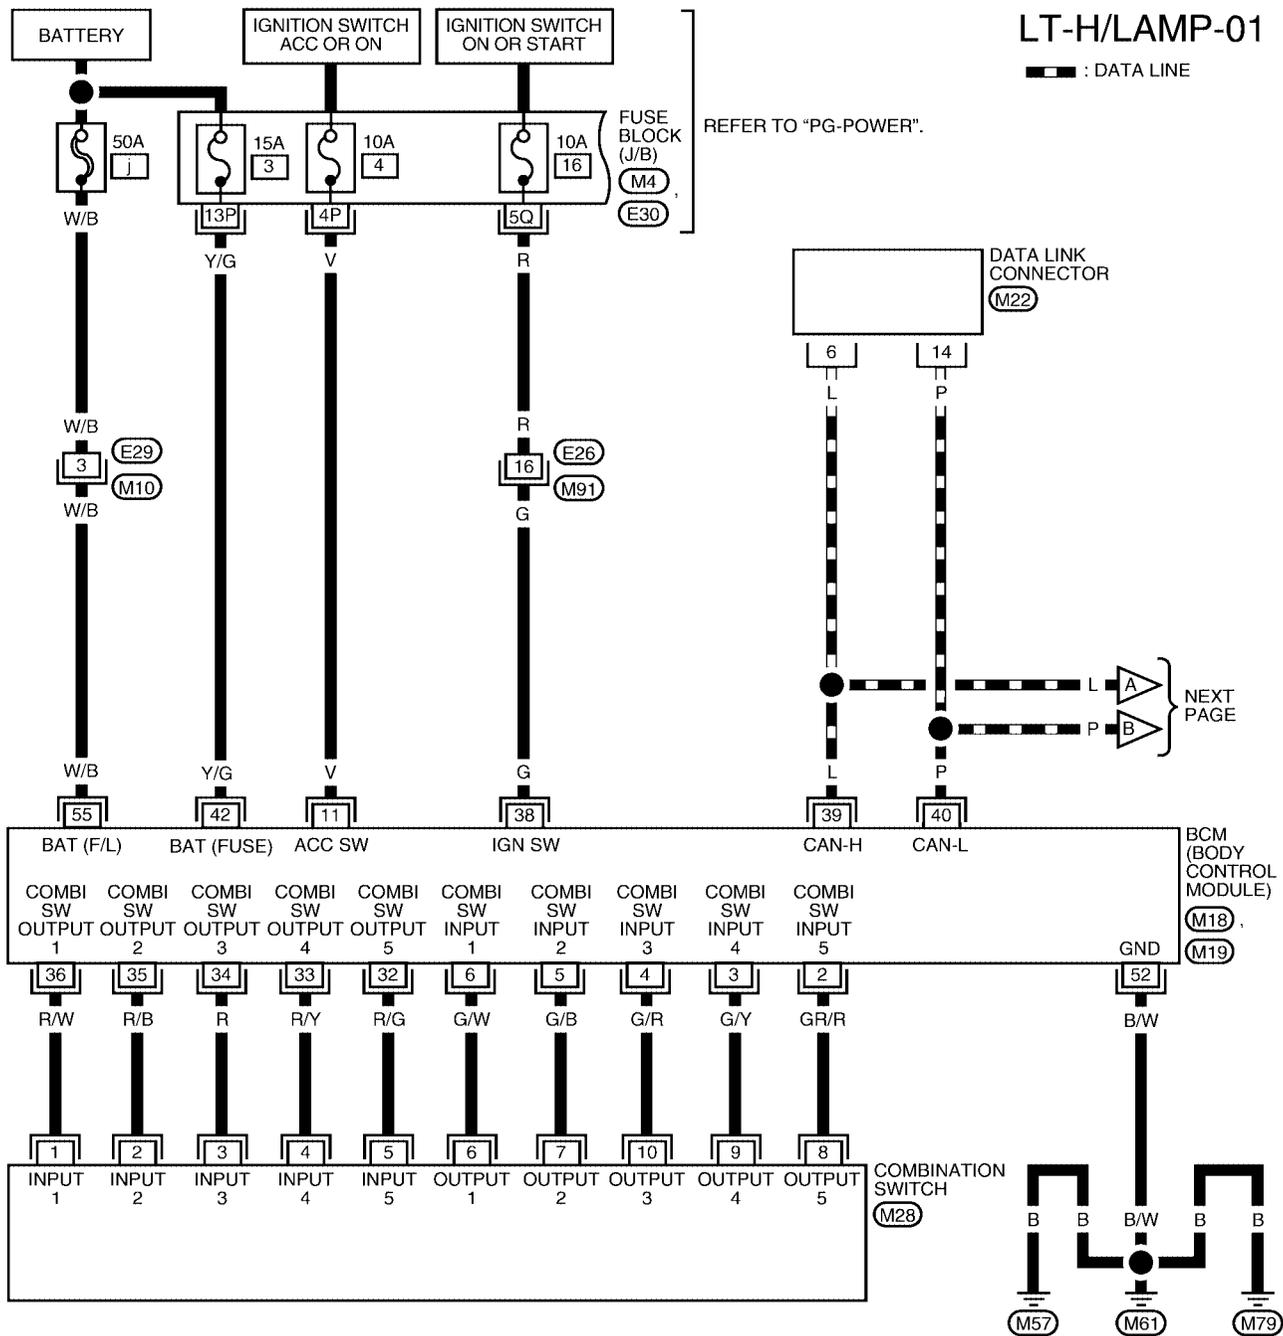

HEADLAMP (FOR USA)

LT-H/LAMP-02

▬ : DATA LINE

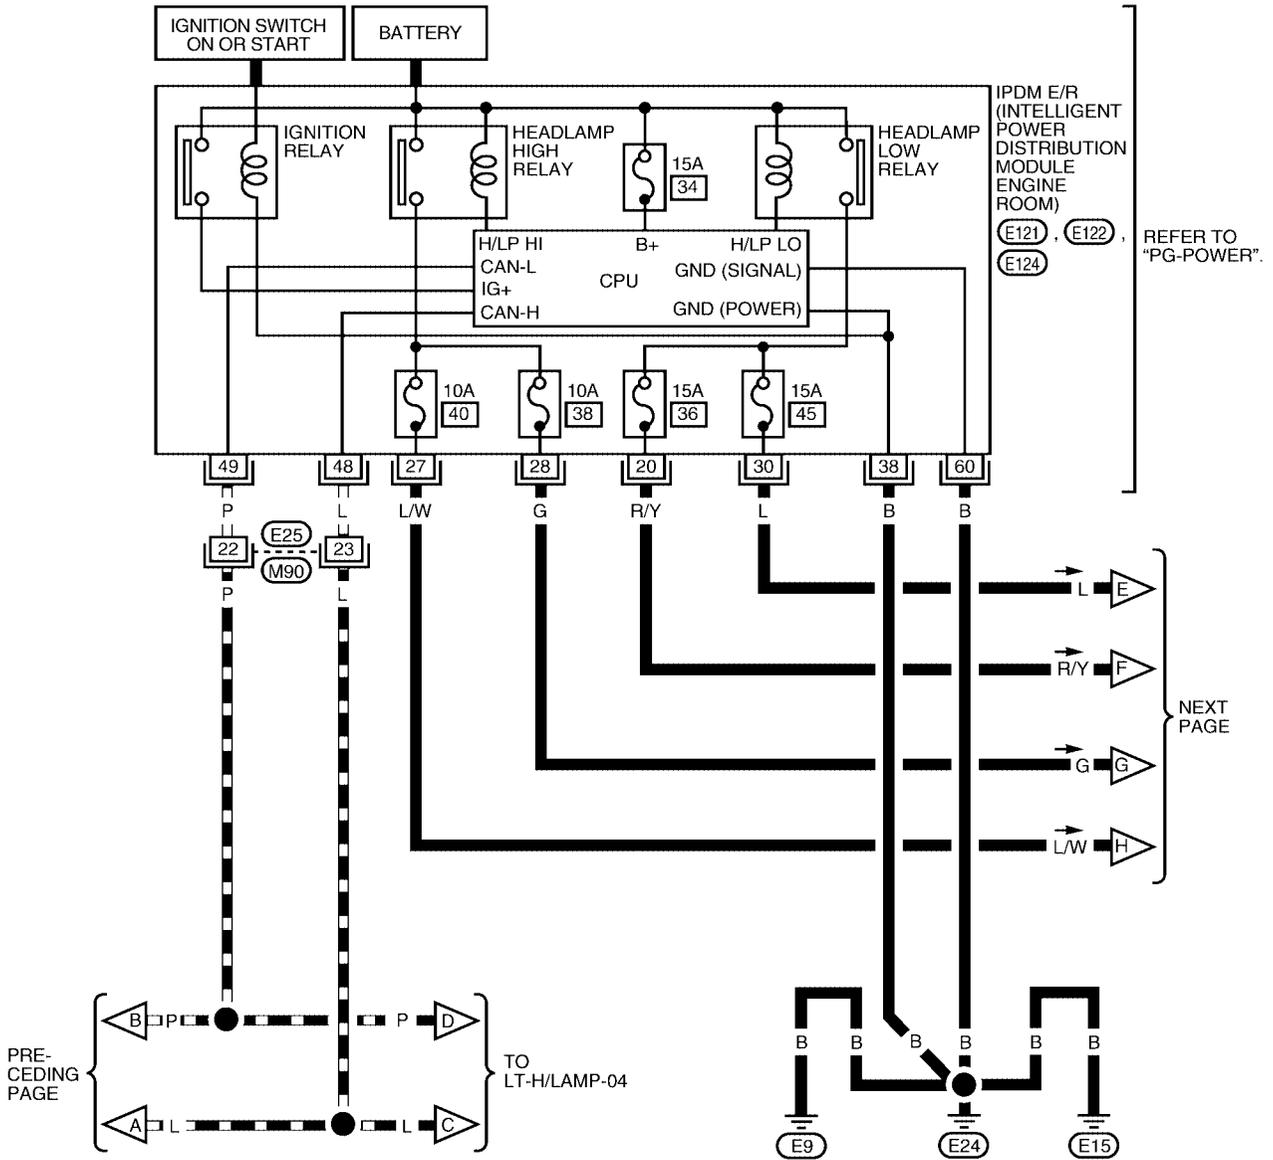

1	2	3	4	5	6	7	8	9	10	11		
12	13	14	15	16	17	18	19	20	21	22	23	24



(M90) W

45	46	47	48	49	50	51	52	E121	17	18	19	20	21	22	23	E122	33	34	35	36	37	E124				
53	54	55	56	57	58	59	60	W	24	25	26	27	28	29	30	31	32	GR	38	39	40	41	42	43	44	W

WKWA3201E

HEADLAMP (FOR USA)

LT-H/LAMP-03


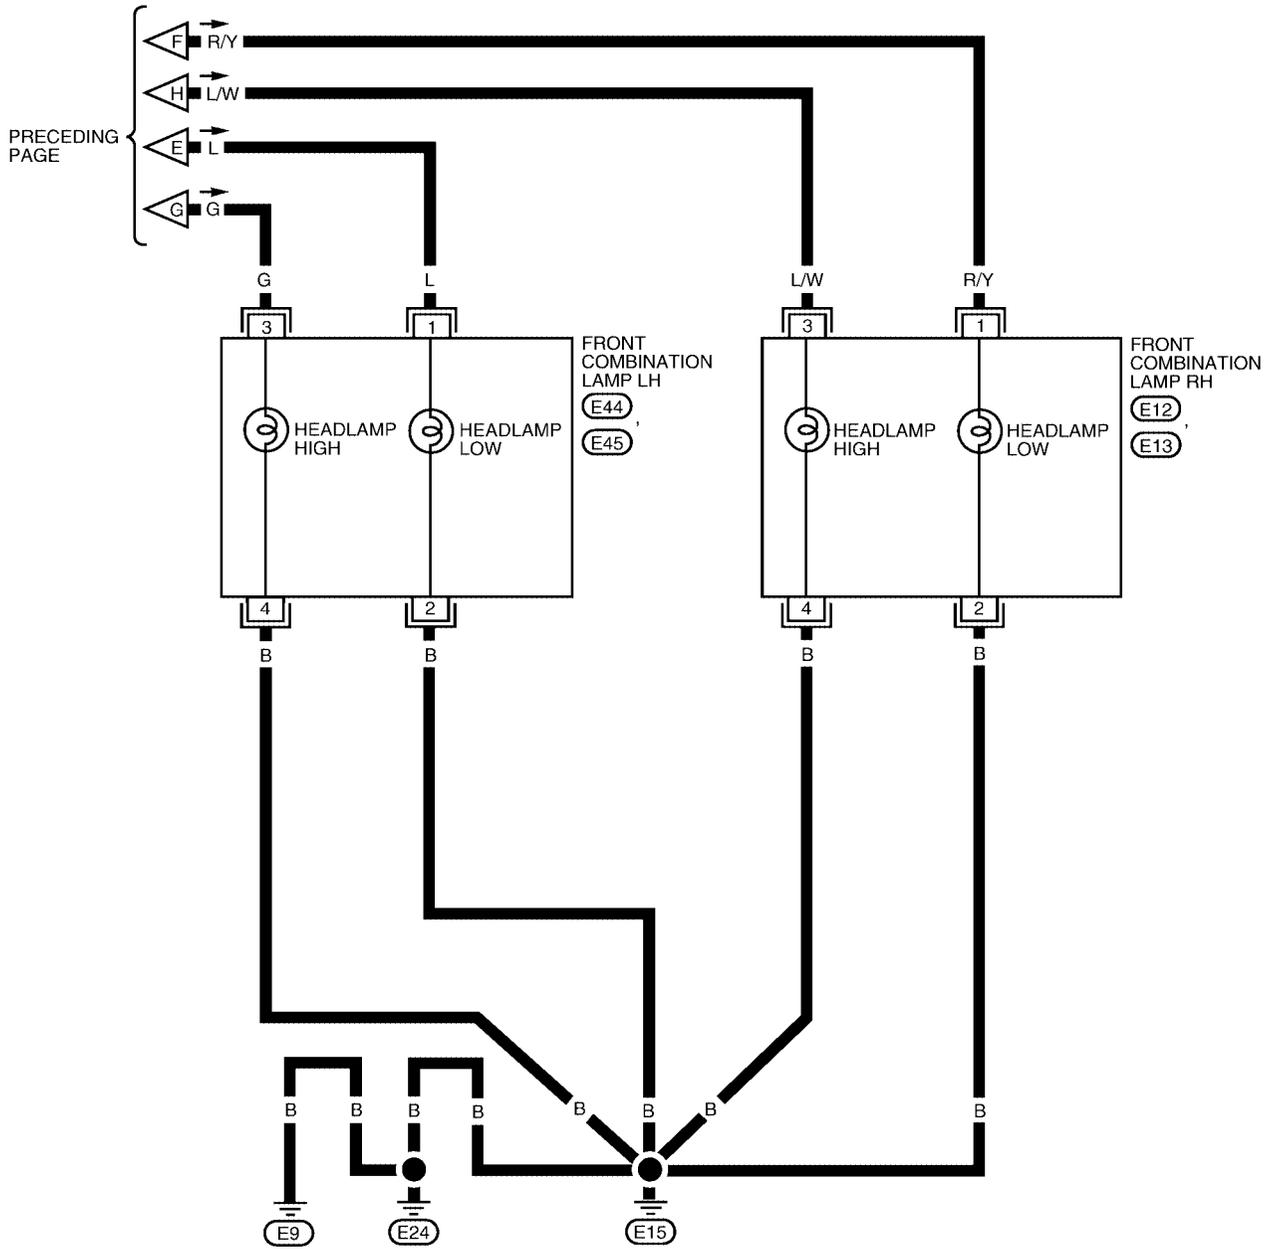


A
B
C
D
E
F
G
H
I
J
LT
L
M

HEADLAMP (FOR USA)

LT-H/LAMP-04

— : DATA LINE




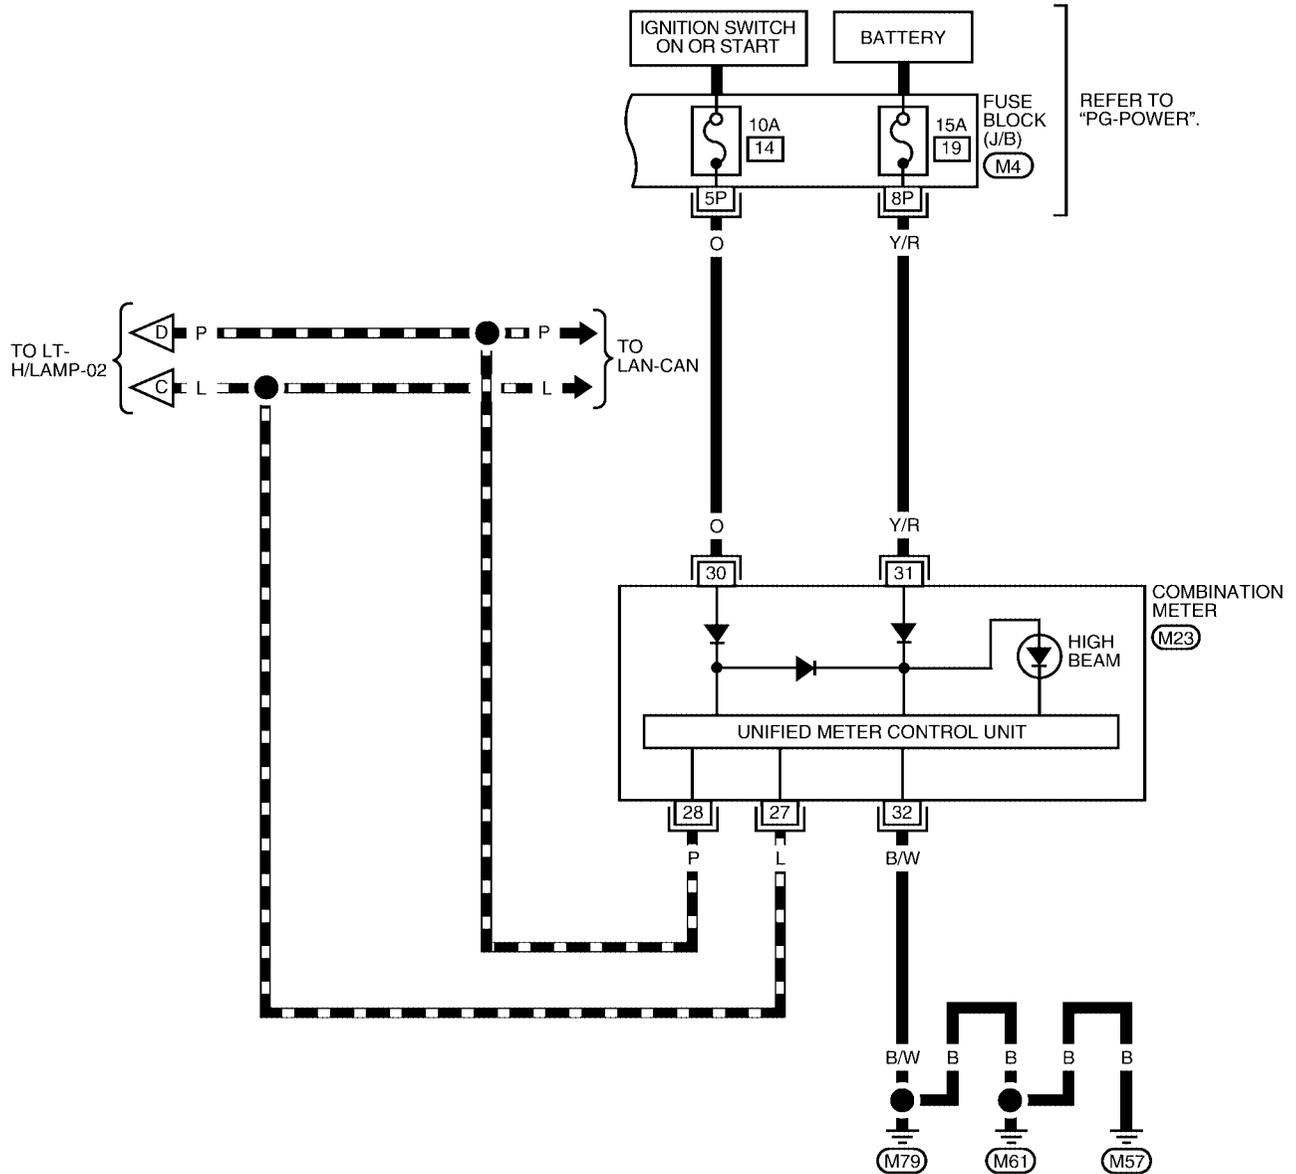


WKWA3203E

HEADLAMP (FOR USA)


Terminals and Reference Values for BCM

EKS00FAW

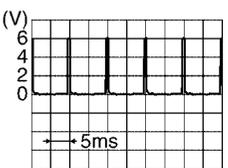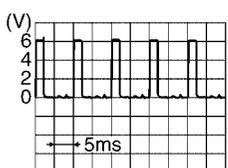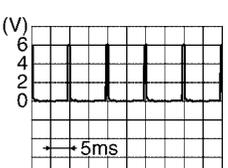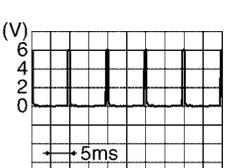Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
2	GR/R	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
3	G/Y	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
4	G/R	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
5	G/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
6	G/W	Combination switch input 1			
11	V	Ignition switch (ACC)	ACC	—	Battery voltage
32	R/G	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
33	R/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
34	R	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>

A
B
C
D
E
F
G
H
I
J
LT
L
M

HEADLAMP (FOR USA)

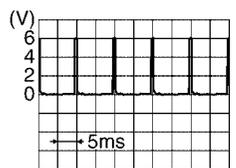Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
35	R/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
36	R/W	Combination switch output 1			
38	G	Ignition switch (ON)	ON	—	Battery voltage
39	L	CAN-H	—	—	—
40	P	CAN-L	—	—	—
42	Y/G	Battery power supply	OFF	—	Battery voltage
52	B/W	Ground	ON	—	0V
55	W/B	Battery power supply (fusible link)	OFF	—	Battery voltage

Terminals and Reference Values for IPDM E/R

EKS00FAX

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)	
			Ignition switch	Operation or condition		
20	R/Y	Headlamp low (RH)	ON	Lighting switch 2ND position	OFF	0V
					ON	Battery voltage
27	L/W	Headlamp high (RH)	ON	Lighting switch HIGH or PASS position	OFF	0V
					ON	Battery voltage
28	G	Headlamp high (LH)	ON	Lighting switch HIGH or PASS position	OFF	0V
					ON	Battery voltage
30	L	Headlamp low (LH)	ON	Lighting switch 2ND position	OFF	0V
					ON	Battery voltage
38	B	Ground	ON	—	0V	
48	L	CAN-H	—	—	—	
49	P	CAN-L	—	—	—	
60	B	Ground	ON	—	0V	

How to Proceed With Trouble Diagnosis

EKS00FAY

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-5, "System Description"](#) .
3. Perform the Preliminary Check. Refer to [LT-15, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the headlamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

HEADLAMP (FOR USA)

EKS00FAZ

Preliminary Check CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES OR FUSIBLE LINK

Check for blown fuses or fusible link.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	j
		3
	Ignition switch ON or START position	16
IPDM E/R	Battery	34
		36
		38
		40
		45

Refer to [LT-9, "Wiring Diagram — H/LAMP —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse or fusible link is blown, be sure to eliminate cause of malfunction before installing new fuse or fusible link. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

BCM (+)		(-)	Ignition switch position		
Connector	Terminal		OFF	ACC	ON
M18	11	Ground	0V	Battery voltage	Battery voltage
	38		0V	0V	Battery voltage
M19	42		Battery voltage	Battery voltage	Battery voltage
	55		Battery voltage	Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse or fusible link.

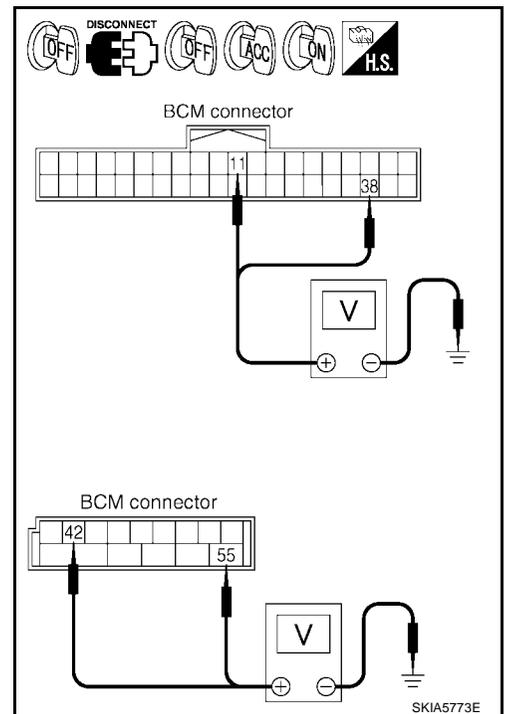

HEADLAMP (FOR USA)


3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Continuity
Connector	Terminal	
M19	52	Ground Yes

OK or NG

- OK >> Inspection End.
- NG >> Check ground circuit harness.

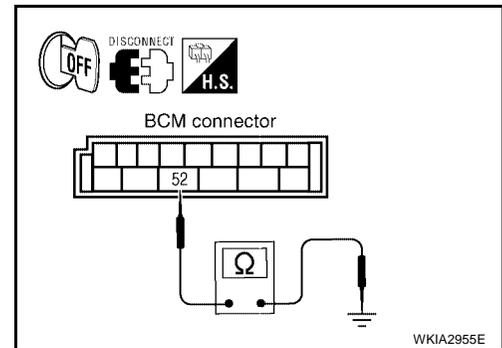

HEADLAMP (FOR USA)

EKS00FB0

CONSULT-II Function (BCM)

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

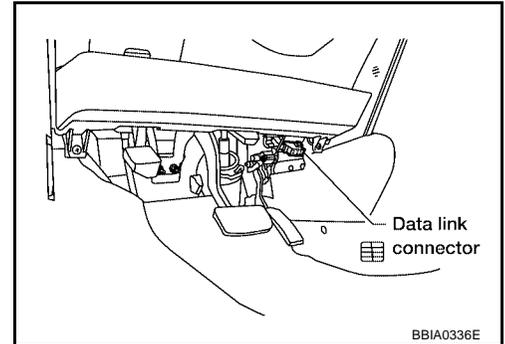

2. Touch "START (NISSAN BASED VHCL)".

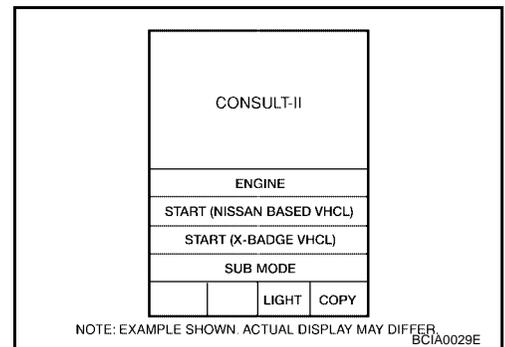

3. Touch "BCM" on "SELECT SYSTEM" screen. If "BCM" is not indicated, go to [GI-38, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

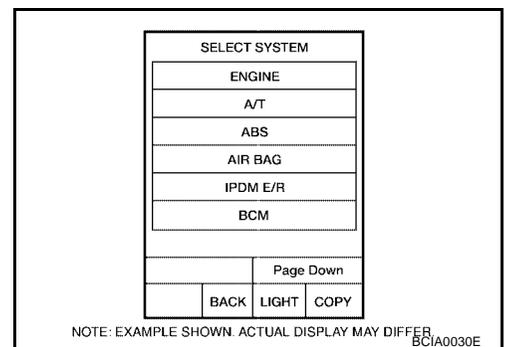

HEADLAMP (FOR USA)

4. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.

SELECT TEST ITEM			
HEAD LAMP			
WIPER			
FLASHER			
AIR CONDITIONER			
COMB SW			
BCM			
Scroll Up		Page Down	
BACK	LIGHT	COPY	

LKIA0183E

WORK SUPPORT

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch item on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "CHANGE SETT".
6. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
7. Touch "END".

Display Item List

Item	Description	CONSULT-II	Factory setting
BATTERY SAVER SET	Exterior lamp battery saver control mode can be changed in this mode. Selects exterior lamp battery saver control mode between ON/OFF.	ON	×
		OFF	—

DATA MONITOR

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch individual items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
ACC ON SW "ON/OFF"	Displays "ACC (ON)/OFF, Ignition OFF (OFF)" status judged from ignition switch signal.
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1 "ON/OFF"	Displays status (headlamp switch 1: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.

HEADLAMP (FOR USA)

Monitor item	Contents
LIGHT SW 1ST "ON/OFF"	Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
AUTO LIGHT SW "ON/OFF"	Displays status of the lighting switch as judged from the lighting switch signal. (AUTO position: ON/Other than AUTO position: OFF)
PASSING SW "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
FR FOG SW "ON/OFF"	Displays status (front fog lamp switch: ON/Others: OFF) of front fog lamp switch judged from lighting switch signal.
DOOR SW-DR "ON/OFF"	Displays status of the front door LH as judged from the front door switch LH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-AS "ON/OFF"	Displays status of the front door RH as judged from the front door switch RH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RR "ON/OFF"	Displays status of the rear door as judged from the rear door switch (RH) signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RL "ON/OFF"	Displays status of the rear door as judged from the rear door switch (LH) signal. (Door is open: ON/Door is closed: OFF)
BACK DOOR SW "ON/OFF"	Displays status of the back door as judged from the back door switch signal. (Door is open: ON/Door is closed: OFF)
TURN SIGNAL R "ON/OFF"	Displays status (Turn right: ON/Others: OFF) as judged from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays status (Turn left: ON/Others: OFF) as judged from lighting switch signal.
CARGO LAMP SW "ON/OFF"	Displays status of cargo lamp switch.
OPTICAL SENSOR [0 - 5V]	Displays "ambient light (close to 5V when dark/close to 0V when light)" judged from optical sensor signal.

ACTIVE TEST

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested, and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

Display Item List

Test item	Description
TAIL LAMP	Allows tail lamp relay to operate by switching ON-OFF.
HEAD LAMP	Allows headlamp relay (HI, LO) to operate by switching ON-OFF.
FR FOG LAMP	Allows fog lamp relay to operate by switching ON-OFF.
CARGO LAMP	Allows cargo lamp to operate by switching ON-OFF.
CORNERING LAMP	Allows cornering lamp relay (RH, LH) to operate by switching ON-OFF.

SELF-DIAGNOSTIC RESULTS

Operation Procedure

1. Touch "BCM" on "SELECT TEST ITEM" screen.
2. Touch "SELF-DIAG RESULTS" on "SELECT DIAG MODE" screen.
3. Self-diagnostic results are displayed.

Display Item List

Monitored item	CONSULT-II display	Description
CAN communication	CAN communication [U1000]	Malfunction is detected in CAN communication.
CAN communication system	CAN communication system 1 to 6 [U1000]	Malfunction is detected in CAN system.

HEADLAMP (FOR USA)

EKS00FB1

CONSULT-II Function (IPDM E/R)

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


IPDM E/R diagnostic Mode	Description
SELF-DIAG RESULTS	Displays IPDM E/R self-diagnosis results.
DATA MONITOR	Displays IPDM E/R input/output data in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn the ignition switch ON.

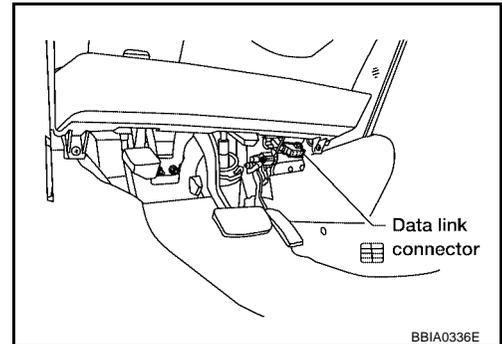

2. Touch "START (NISSAN BASED VHCL)".

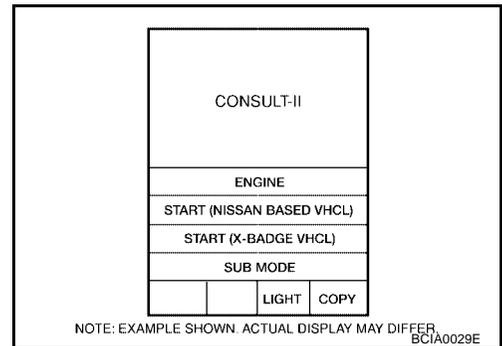


3. Touch "IPDM E/R" on "SELECT SYSTEM" screen. If "IPDM E/R" is not displayed, go to [GI-38, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

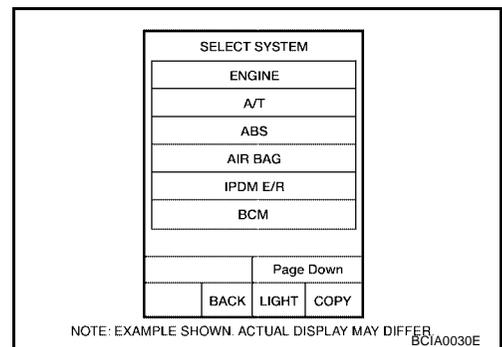

HEADLAMP (FOR USA)

- Select the desired part to be diagnosed on the "SELECT DIAG MODE" screen.

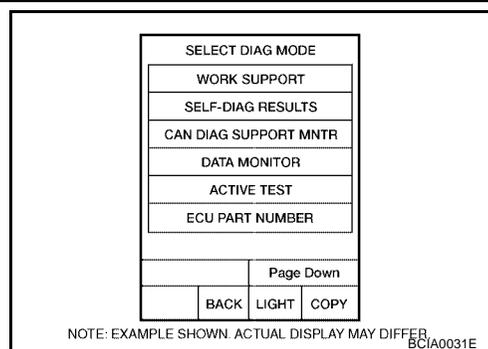

DATA MONITOR

Operation Procedure

- Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
- Touch "ALL SIGNALS", "MAIN SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

ALL SIGNALS	All items will be monitored.
MAIN SIGNALS	Monitor the predetermined item.
SELECTION FROM MENU	Select any item for monitoring.

- Touch "START".
- Touch the required monitoring item on "SELECTION FROM MENU". In "ALL SIGNALS", all items are monitored. In "MAIN SIGNALS", predetermined items are monitored.
- Touch "RECORD" while monitoring to record the status of the item being monitored. To stop recording, touch "STOP".

All Items, Main Items, Select Item Menu

Item name	CONSULT-II screen display	Display or unit	Monitor item selection			Description
			ALL SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
Parking, license plate and tail lamps request	TAIL&CLR REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp low beam request	HL LO REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp high beam request	HL HI REQ	ON/OFF	×	×	×	Signal status input from BCM
Cornering lamp	CRNRNG LMP REQ	ON/OFF	×	–	×	Signal status input from BCM
Front fog lamps request	FR FOG REQ	ON/OFF	×	×	×	Signal status input from BCM

NOTE:

Perform monitoring of IPDM E/R data with the ignition switch ON. When the ignition switch is at ACC, the display may not be correct.

ACTIVE TEST

Operation Procedure

- Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
- Touch item to be tested and check operation.
- Touch "START".
- Touch "STOP" while testing to stop the operation.

HEADLAMP (FOR USA)


4. CHECK HEADLAMP INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connectors.
3. Turn ignition switch ON.
4. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
5. Select "LAMPS" on "SELECT TEST ITEM" screen.
6. Touch "HI" on "ACTIVE TEST" screen.
7. When headlamp high beam is operating, check voltage between front combination lamp RH and LH harness connector terminals and ground.

Terminals		Terminal	(-)	Voltage
(+)				
Front combination lamp connector		3	Ground	Battery voltage
RH	E13			
LH	E45			

OK or NG

- OK >> GO TO 6.
 NG >> GO TO 5.

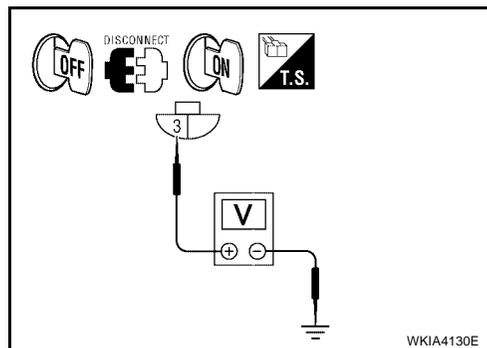


5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector terminals and front combination lamp RH and LH harness connector terminals.

A		B		Continuity
IPDM E/R connector	Terminal	Front combination lamp connector	Terminal	
E122	27	RH	E13	Yes
	28	LH	E45	

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#) .
 NG >> Repair harness or connector.

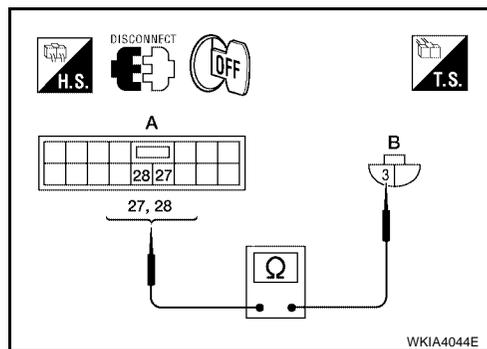


6. CHECK HEADLAMP GROUND

1. Turn ignition switch OFF.
2. Check continuity between front combination lamp RH and LH harness connector terminals and ground.

Terminals		Terminal		Continuity
Front combination lamp connector				
RH	E13	4	Ground	Yes
LH	E45			

OK or NG

- OK >> Check front combination lamp connector for damage or poor connection. Repair as necessary.
 NG >> Repair harness or connector.

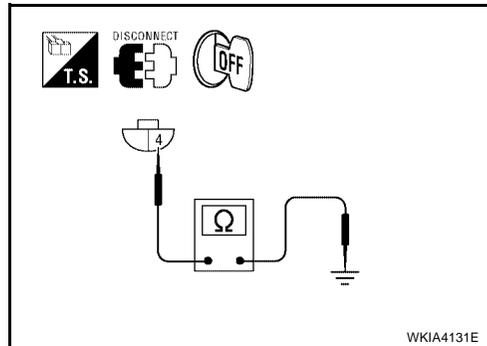

HEADLAMP (FOR USA)

EKS00FQE

Headlamp HI Does Not Illuminate (One Side)

1. BULB INSPECTION

Inspect inoperative headlamp bulb.

OK or NG

OK >> GO TO 2.

NG >> Replace headlamp bulb. Refer to [LT-30, "HEADLAMP \(INNER SIDE\), FOR HIGH BEAM"](#) .

2. CHECK POWER TO HEADLAMP


1. Disconnect inoperative front combination lamp connector.
2. Turn the high beam headlamps ON.
3. Check voltage between inoperative front combination lamp harness connector terminal and ground.

Terminals		Terminal	(-)	Voltage (Approx.)
(+)				
Front combination lamp connector		3	Ground	Battery voltage
RH	E13			
LH	E45			

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

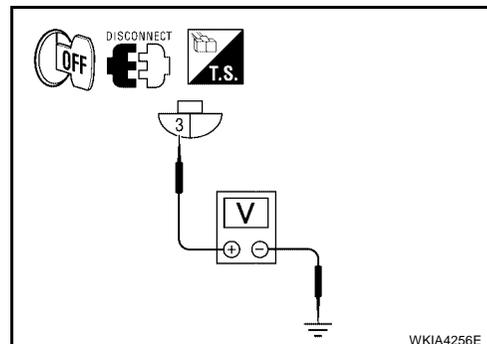

3. CHECK HEADLAMP GROUND


1. Turn the high beam headlamps OFF.
2. Check continuity between inoperative front combination lamp harness connector terminal and ground.

Terminals		Terminal	Ground	Continuity
Front combination lamp connector				
RH	E13	4	Ground	Yes
LH	E45			

OK or NG

OK >> Check front combination lamp connector for damage or poor connection. Repair as necessary.

NG >> Repair open circuit in harness between inoperative headlamp and ground.

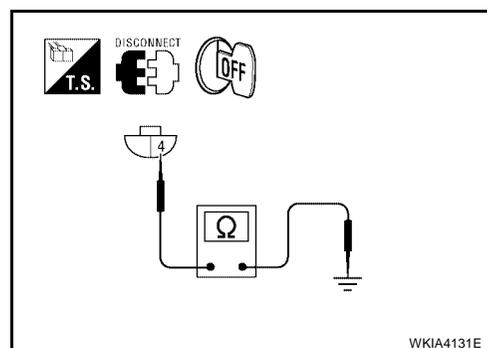

HEADLAMP (FOR USA)

4. INSPECTION BETWEEN IPDM E/R AND HEADLAMPS


1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector terminal and inoperative front combination lamp harness connector terminal.

A		B		Continuity
IPDM E/R connector	Terminal	Front combination lamp connector	Terminal	
E122	27	RH	E13	Yes
	28	LH	E45	

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#).

NG >> Check for short circuits and open circuits in harness between IPDM E/R and headlamps. Repair as necessary.

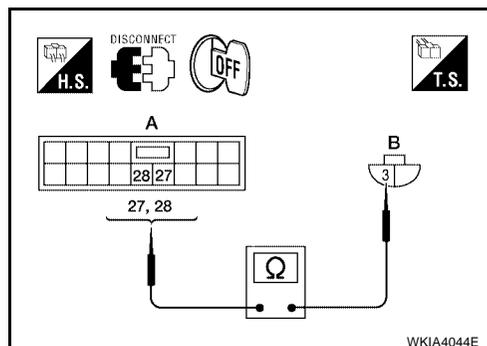

High-Beam Indicator Lamp Does Not Illuminate

EKS00FB4

1. CAN COMMUNICATION SYSTEM INSPECTION

Inspect CAN communication system. Refer to [LAN-24, "CAN COMMUNICATION"](#).

OK or NG

OK >> Replace combination meter. Refer to [IP-12, "COMBINATION METER"](#).

NG >> Repair as necessary.

Headlamp LO Does Not Illuminate (Both Sides)

EKS00FB5

1. CHECK COMBINATION SWITCH INPUT SIGNAL


Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "HEAD LAMP SW 1" and "HEAD LAMP SW 2" turns ON-OFF linked with operation of lighting switch.

When lighting switch is in 2ND position :
HEAD LAMP SW 1 ON
HEAD LAMP SW 2 ON

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-107, "Combination Switch Inspection"](#).

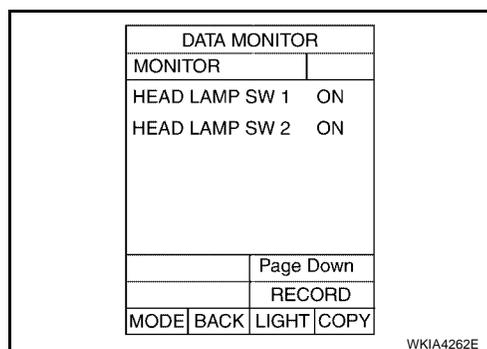

2. HEADLAMP ACTIVE TEST


1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "LO" on "ACTIVE TEST" screen.
4. Make sure headlamp low beam operates.

Headlamp low beam should operate.

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

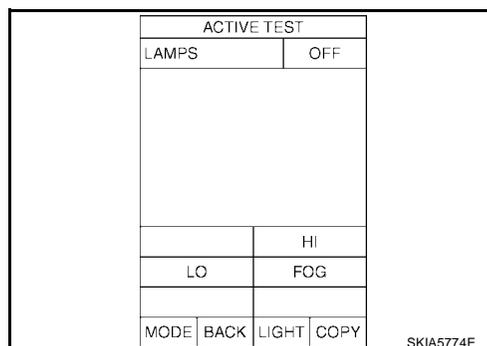

HEADLAMP (FOR USA)


3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "HL LO REQ" turns ON when lighting switch is in 2ND position.

When lighting switch is in 2ND position : HL LO REQ ON

OK or NG


- OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#).
- NG >> Replace BCM. Refer to [BCS-20, "Removal and Installation of BCM"](#).

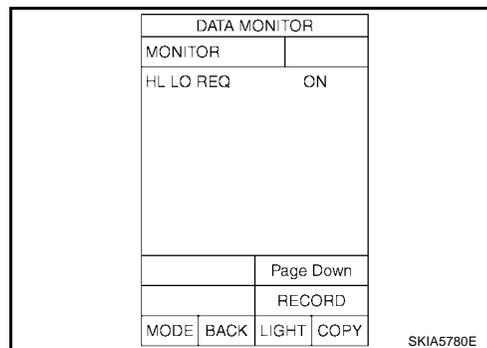

4. CHECK HEADLAMP INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connectors.
3. Turn ignition switch ON.
4. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
5. Select "LAMPS" on "SELECT TEST ITEM" screen.
6. Touch "LO" on "ACTIVE TEST" screen.
7. When headlamp low beam is operating, check voltage between front combination lamp RH and LH harness connectors and ground.

Terminals		Terminal	(-)	Voltage
(+)				
Front combination lamp connector		1	Ground	Battery voltage
RH	E12			
LH	E44			

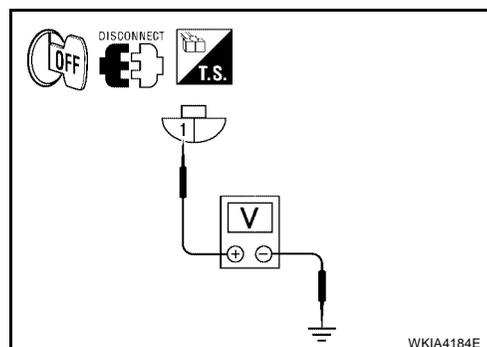


OK or NG

- OK >> GO TO 6.
- NG >> GO TO 5.

5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector terminal and front combination lamp harness connector terminal.

A		B		Continuity
IPDM E/R connector	Terminal	Front combination lamp connector	Terminal	
E122	20	RH	E12	Yes
	30	LH	E44	

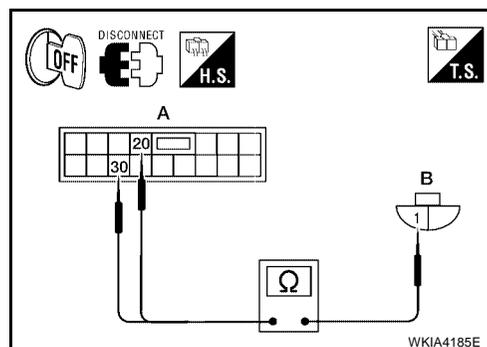

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#).
- NG >> Repair harness or connector.

HEADLAMP (FOR USA)


6. CHECK HEADLAMP GROUND

1. Turn ignition switch OFF.
2. Check continuity between front combination lamp harness connector terminal and ground.

Terminals		Terminal		Voltage
Front combination lamp connector				
RH	E12	2	Ground	Battery voltage
LH	E44			

OK or NG

- OK >> Check front combination lamp connector for damage or poor connection. Repair as necessary.
- NG >> Repair harness or connector.

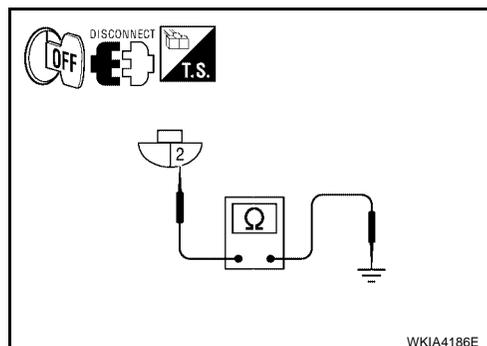

Headlamp LO Does Not Illuminate (One Side)

EKS00FB6

1. BULB INSPECTION

Inspect inoperative headlamp bulb.

OK or NG

- OK >> GO TO 2.
- NG >> Replace headlamp bulb. Refer to [LT-30, "HEADLAMP \(OUTER SIDE\), FOR LOW BEAM"](#).


2. CHECK POWER TO HEADLAMP

1. Disconnect inoperative front combination lamp connector.
2. Turn the low beam headlamps ON.
3. Check voltage between inoperative front combination lamp connector terminal and ground.

Terminals		Terminal	(-)	Voltage (Approx.)
(+)				
Front combination lamp connector		1	Ground	Battery voltage
RH	E12			
LH	E44			

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 4.

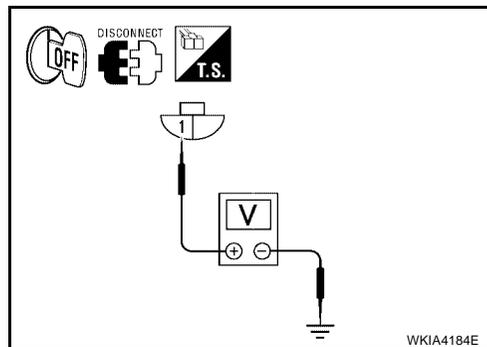

HEADLAMP (FOR USA)

3. CHECKING CAN COMMUNICATIONS BETWEEN BCM AND IPDM E/R

Select "BCM" on CONSULT-II and perform self-diagnosis for BCM.

Display of self-diagnosis results

NO DTC>>Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#).


CAN COMM CIRCUIT>> Refer to [BCS-13, "CAN Communication Inspection Using CONSULT-II \(Self-Diagnosis\)"](#).

SELF-DIAG RESULTS			
DTC RESULTS		TIME	
CAN COMM CIRCUIT [U1000]		PAST	
ERASE		PRINT	
MODE	BACK	LIGHT	COPY

SKIA1039E

Aiming Adjustment

EKS00FB8

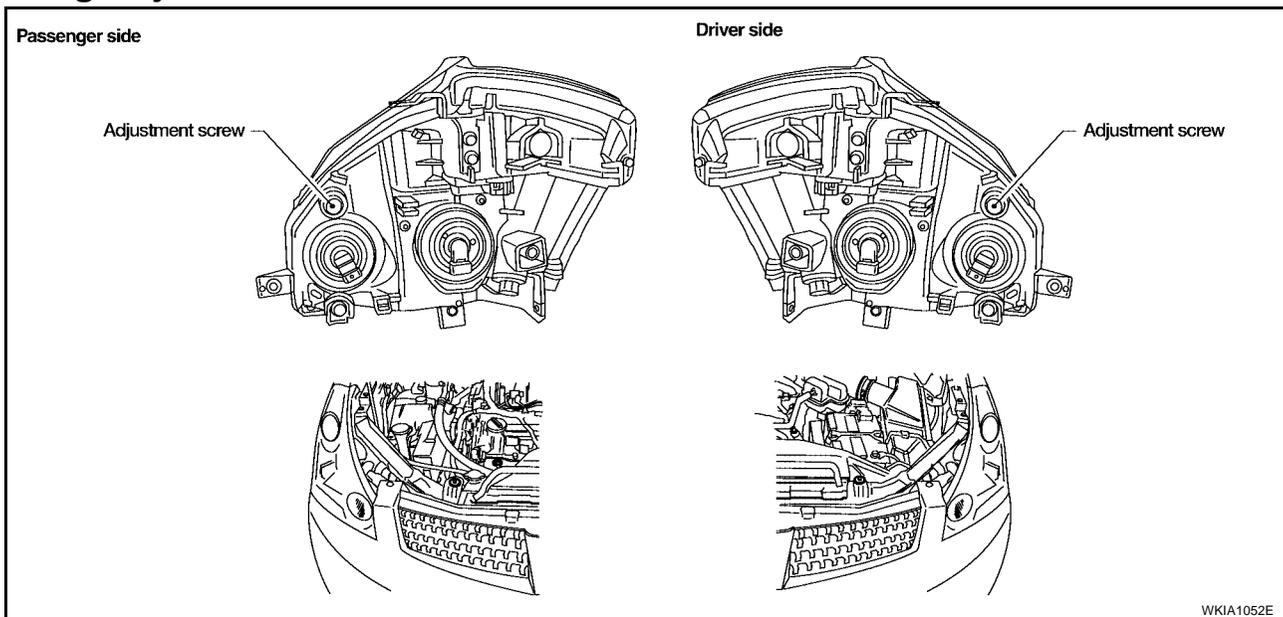

For details, refer to the regulations in your state.

Before performing aiming adjustment, check the following.

1. Ensure all tires are inflated to correct pressure.
2. Place vehicle and screen on level surface.
3. Ensure there is no load in vehicle other than the driver (or equivalent weight placed in driver's position). Coolant and engine oil filled to correct level and fuel tank full.
4. Confirm spare tire, jack and tools are properly stowed.


LOW BEAM AND HIGH BEAM

NOTE:

Aim each headlamp individually and ensure other headlamp beam pattern is blocked from screen.

1. Turn headlamp low beam on.
2. Use adjusting screw to perform aiming adjustment.

HEADLAMP (FOR USA)

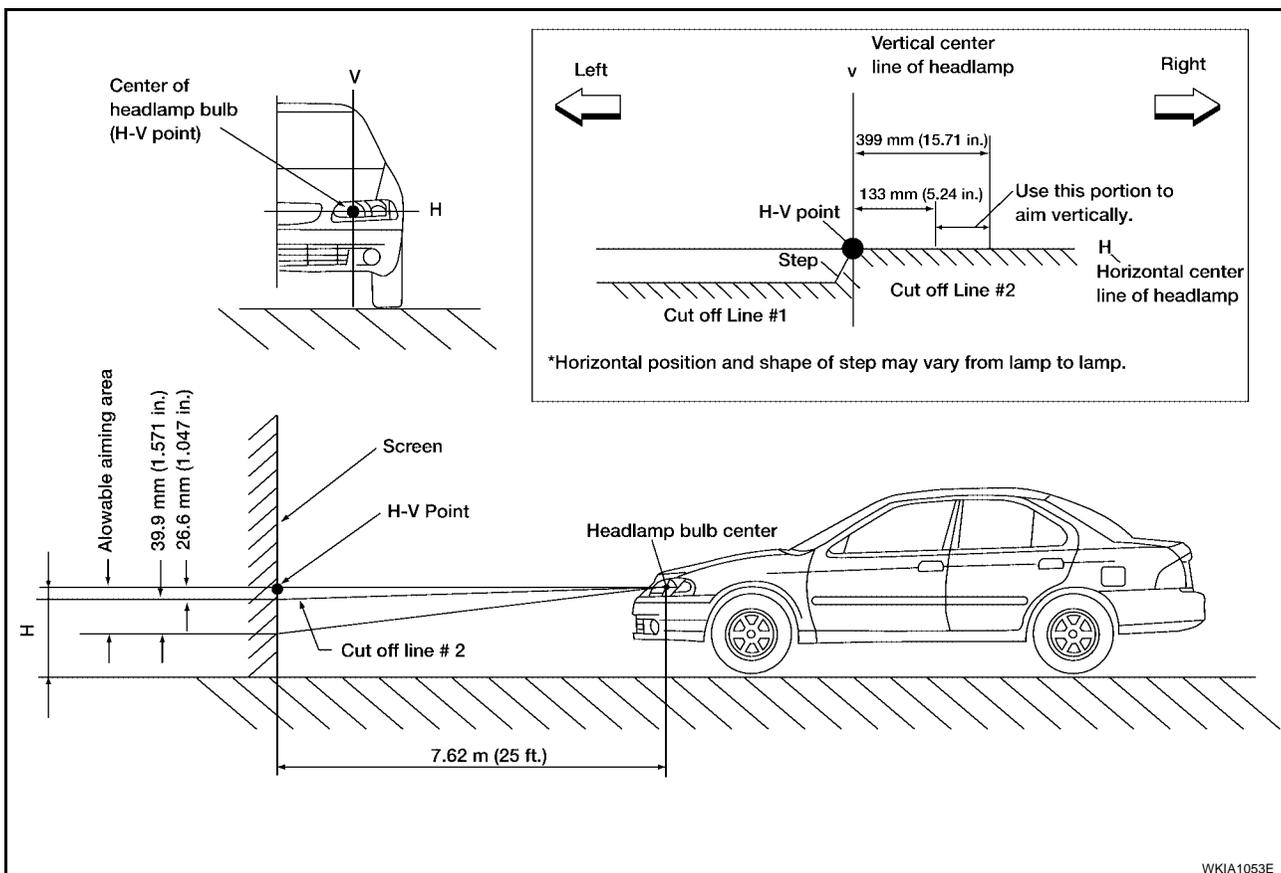

If the vehicle front body has been repaired and/or the headlamp assembly has been replaced, check aiming. Use the aiming chart shown in the figure.

- Basic illuminating area for adjustment should be within the range shown on the aiming chart. Adjust headlamps accordingly.

Bulb Replacement HEADLAMP (OUTER SIDE), FOR LOW BEAM

EKS00FB9

1. Turn headlamp switch OFF.
 2. Disconnect the electrical connector.
 3. Turn the bulb counterclockwise to remove it.
- Installation is in the reverse order of removal.

HEADLAMP (INNER SIDE), FOR HIGH BEAM

1. Turn headlamp switch OFF.
 2. Disconnect the electrical connector.
 3. Turn the bulb counterclockwise to remove it.
- Installation is in the reverse order of removal.

FRONT TURN SIGNAL/PARKING LAMP

1. Turn the bulb socket counterclockwise to unlock it.
 2. Pull the bulb to remove it from the socket.
- Installation is in the reverse order of removal.

CAUTION:

After installing the bulb, be sure to install the bulb socket securely to ensure watertightness.

HEADLAMP (FOR USA)

EKS00FBA

Removal and Installation

1. Remove the front fascia. Refer to [EI-14, "Removal and Installation"](#).
2. Remove the headlamp mounting bolts.
3. Pull the headlamp toward the front of the vehicle, disconnect connectors, and remove from vehicle.


Installation is in the reverse order of removal.

Headlamp-to-radiator support mounting bolts:

: 6.5 N-m (0.66 kg-m, 58 in-lb)


Headlamp-to-fender mounting bolt:

: 5.7 N-m (0.58 kg-m, 50 in-lb)

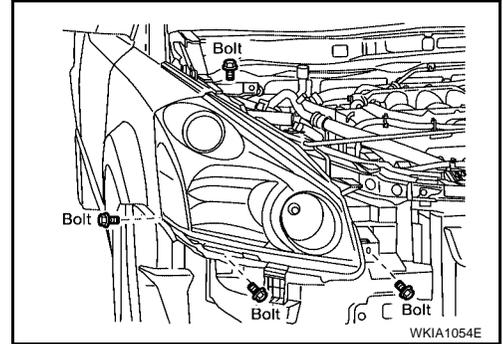

Disassembly and Assembly

EKS00FBB

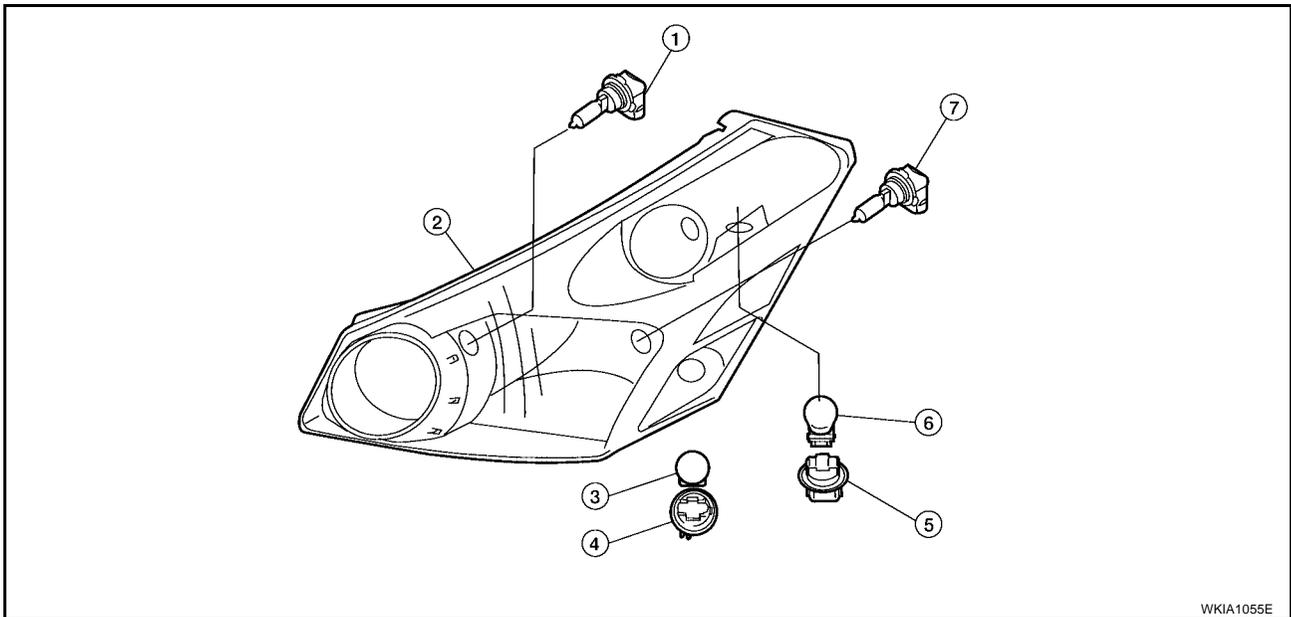

- | | | |
|-------------------------------|---|----------------------------------|
| 1. Headlamp bulb (High beam) | 2. Headlamp assembly | 3. Cornering lamp bulb |
| 4. Cornering lamp bulb socket | 5. Parking/turn signal lamp bulb socket | 6. Parking/turn signal lamp bulb |
| 7. Headlamp bulb (Low beam) | | |

A
B
C
D
E
F
G
H
I
J
LT
L
M


HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

PF2:26010

Component Parts and Harness Connector Location

EKS00FBC

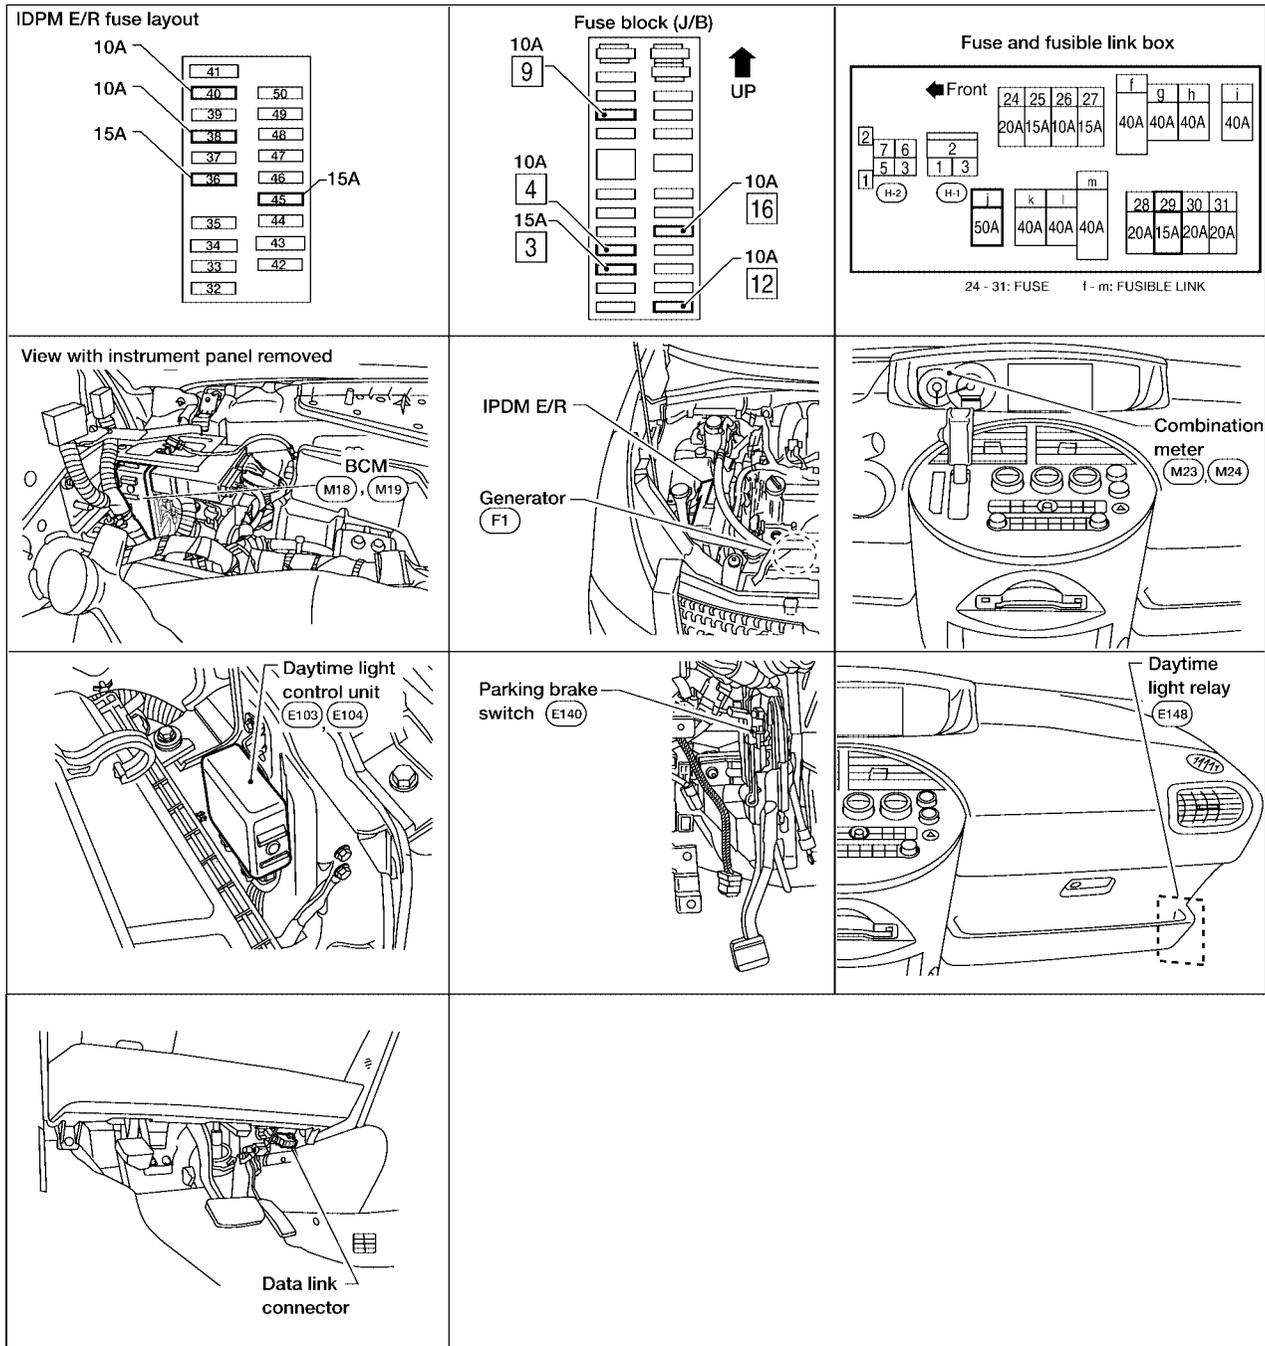

WKIA3174E

System Description

EKS00FBD

The headlamp system for Canada vehicles is equipped with a daytime light control unit that activates the high beam headlamps at approximately half illumination whenever the engine is running. If the parking brake is applied before the engine is started the daytime lights will not be illuminated. The daytime lights will illuminate once the parking brake is released. Thereafter, the daytime lights will continue to operate when the parking brake is applied.

Battery saver system is controlled by the BCM (body control module).

Power is supplied at all times

- to headlamp high relay, located in the IPDM E/R (intelligent power distribution module engine room), and
- to headlamp low relay, located in the IPDM E/R, and
- through 50A fusible link (letter j , located in the fuse and fusible link box)

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

- to BCM terminal 55, and
- through 15A fuse [No. 3, located in the fuse block (J/B)]
- to BCM terminal 42, and
- through 15A fuse (No. 29, located in the fuse and fusible link box)
- to daytime light control unit terminals 2 and 3.

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [No. 12, located in the fuse block (J/B)]
- to daytime light control unit terminal 12, and
- through 10A fuse [No. 16, located in the fuse block (J/B)]
- to BCM terminal 38.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to BCM terminal 11.

With the ignition switch in the START position, power is supplied

- through 10A fuse [No. 9, located in the fuse block (J/B)]
- to daytime light control unit terminal 1.

Ground is supplied

- to daytime light control unit terminal 9
- through grounds E9, E15 and E24, and
- to BCM terminal 52
- through grounds M57, M61 and M79.

HEADLAMP OPERATION

Low Beam Operation

With the lighting switch in 2ND position, the BCM receives input requesting the headlamps to illuminate. This input is communicated to the IPDM E/R across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the headlamp low relay coil. When energized, this relay directs power

- through 15A fuse (No. 45, located in the IPDM E/R)
- through IPDM E/R terminal 30
- to front combination lamp LH terminal 1, and
- through 15A fuse (No. 36, located in the IPDM E/R)
- through IPDM E/R terminal 20
- to front combination lamp RH terminal 1.

Ground is supplied

- to front combination lamp LH and RH terminal 2
- through grounds E9, E15 and E24.

With power and ground supplied, low beam headlamps illuminate.

High Beam Operation/Flash-to-Pass Operation

With the lighting switch in 2ND position and placed in HIGH or PASS position, the BCM receives input requesting the headlamp high beams to illuminate. This input is communicated to the IPDM E/R across the CAN communication lines. The CPU of the combination meter controls the ON/OFF status of the HIGH BEAM indicator. The CPU of the IPDM E/R controls the headlamp high relay coil. When energized, this relay directs power

- through 10A fuse (No. 40, located in the IPDM E/R)
- through IPDM E/R terminal 27
- to daytime light relay terminal 2
- through daytime light relay terminal 1
- to grounds E9, E15 and E24.

When energized, the daytime light relay directs power

- through daytime light relay terminal 3
- to daytime light control unit terminal 8 and

A

B

C

D

E

F

G

H

I

J

LT

L

M

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

- to front combination lamp RH terminal 3.
- Also when the headlamp high relay is energized, it directs power
- through 10A fuse (No. 38, located in the IPDM E/R)
 - through IPDM E/R terminal 28
 - to daytime light control unit terminal 5
 - through daytime light control unit terminal 6
 - to front combination lamp LH terminal 3.

Ground is supplied

- to front combination lamp RH terminal 4
- through grounds E9, E15 and E24, and
- to front combination lamp LH terminal 4
- to daytime light control unit terminal 7
- through daytime light control unit terminal 9
- through grounds E9, E15 and E24.

With power and ground supplied, the high beam headlamps illuminate.

BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON), and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the headlamps remain illuminated for 5 minutes unless the combination switch (lighting switch) position is changed. If the combination switch (lighting switch) position is changed, then the headlamps are turned off.

AUTO LIGHT OPERATION

For auto light operation, refer to [LT-42, "System Description"](#) .

DAYTIME LIGHT OPERATION

With the engine running, the lighting switch in the OFF or 1ST position and parking brake released, power is supplied

- through daytime light control unit terminal 6
- to front combination lamp LH terminal 3
- through front combination lamp LH terminal 4
- to daytime light control unit terminal 7, and
- through daytime light control unit terminal 8
- to front combination lamp RH terminal 3.

Ground is supplied

- to front combination lamp RH terminal 4
- through grounds E9, E15 and E24.

Because the high beam headlamps are now wired in series, they operate at half illumination.

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

OPERATION

After starting the engine with the lighting switch in the "OFF" or 1ST position, the headlamp high beam automatically turns on. Lighting switch operations other than the above are the same as conventional light systems.

Engine		With engine stopped									With engine running								
Lighting switch		OFF			1ST			2ND			OFF			1ST			2ND		
		Hi	Lo	P	Hi	Lo	P	Hi	Lo	P	Hi	Lo	P	Hi	Lo	P	Hi	Lo	P
Headlamp	High beam	-	-	-	-	-	×	×	-	×	●*	●*	×	●*	●*	×	×	-	×
	Low beam	-	-	-	-	-	×	×	×	×	-	-	×	-	-	×	×	×	×
Tail lamp		-	-	-	×	×	×	×	×	×	-	-	-	×	×	×	×	×	×
License and instrument illumination lamp		-	-	-	×	×	×	×	×	×	-	-	-	×	×	×	×	×	×

- Hi: "HIGH BEAM" position
- Lo: "LOW BEAM" position
- P: "FLASH TO PASS" position
- ×: Lamp "ON"
- -: Lamp "OFF"
- ●: Lamp dims. (Added functions)
- *: When starting the engine with the parking brake released, the daytime lights will operate.
When starting the engine with the parking brake applied, the daytime lights will not operate.

CAN Communication System Description

EKS00FBE

Refer to [LAN-24, "CAN COMMUNICATION"](#).

A

B

C

D

E

F

G

H

I

J

LT


L

M

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

Schematic

EKS00FBF

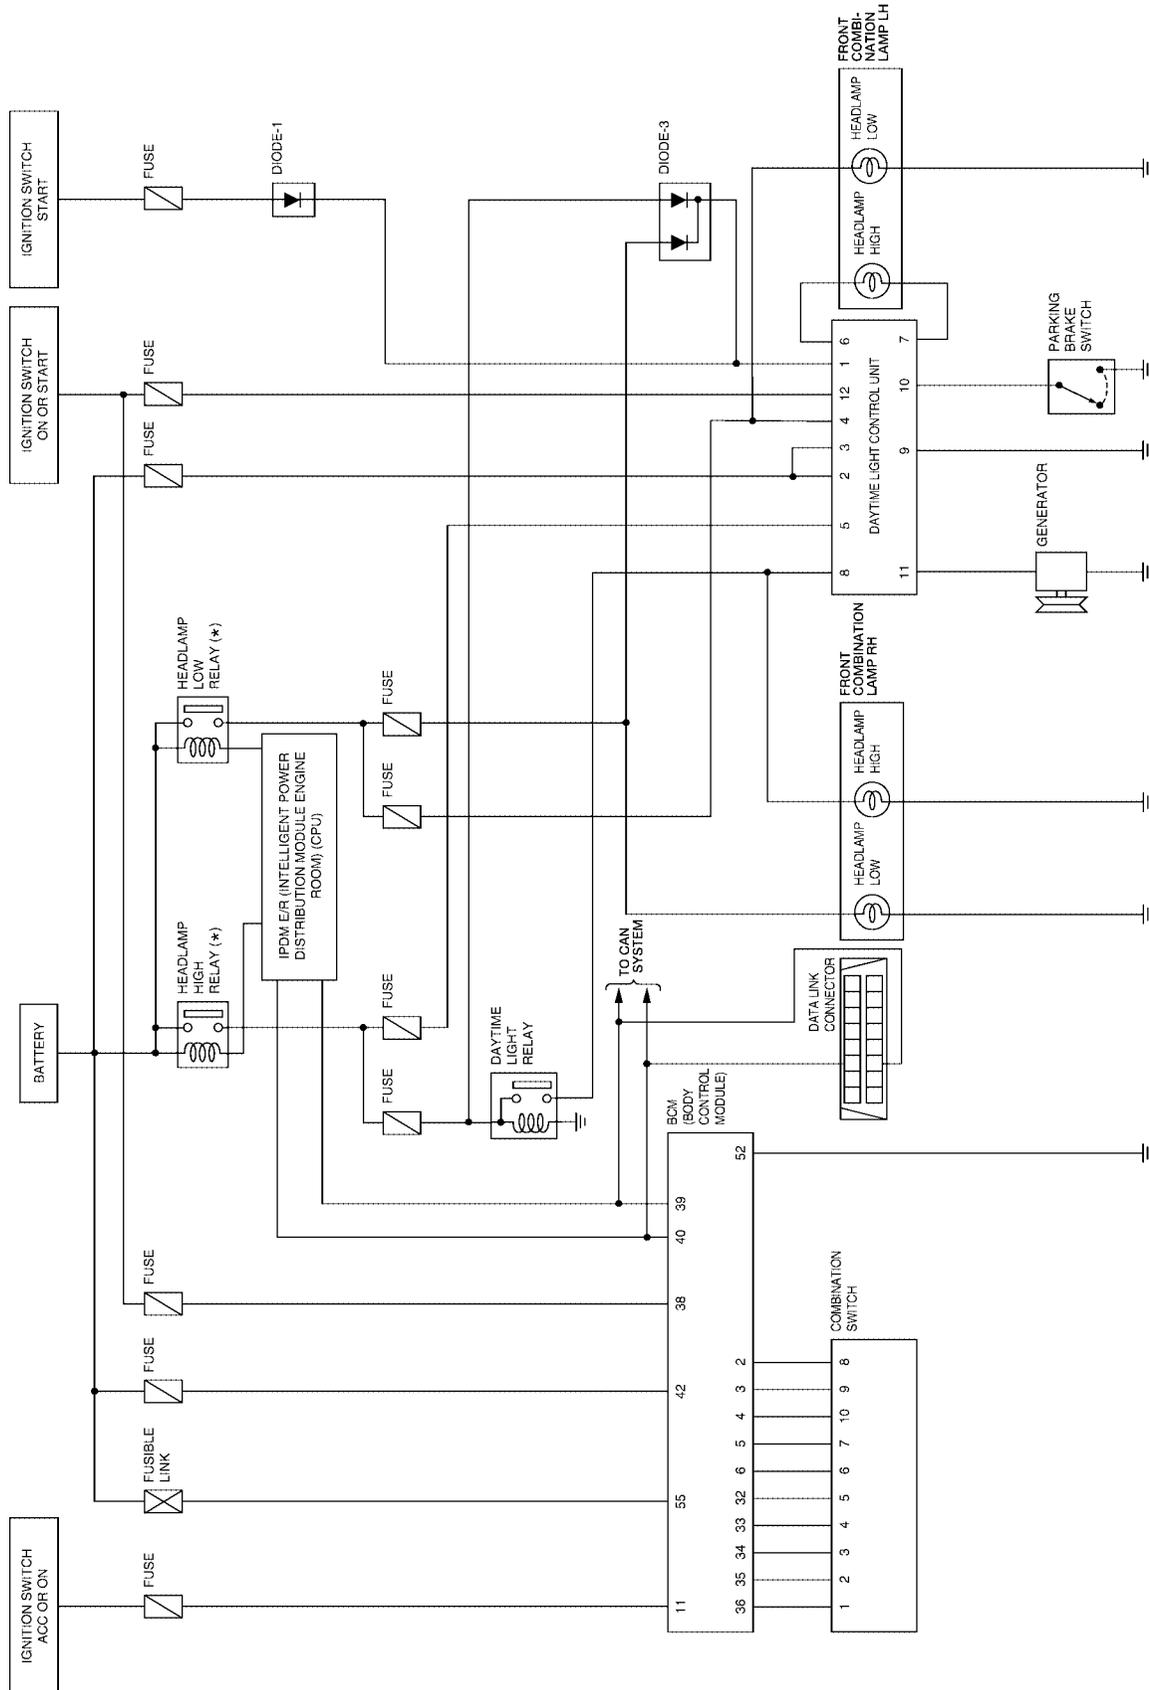

*: THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM).



WKWA3204E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

Wiring Diagram — DTRL —

EKS00FBG

LT-DTRL-01

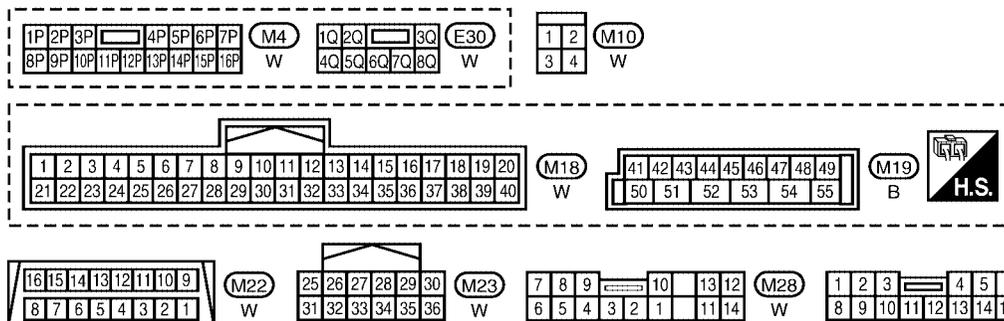
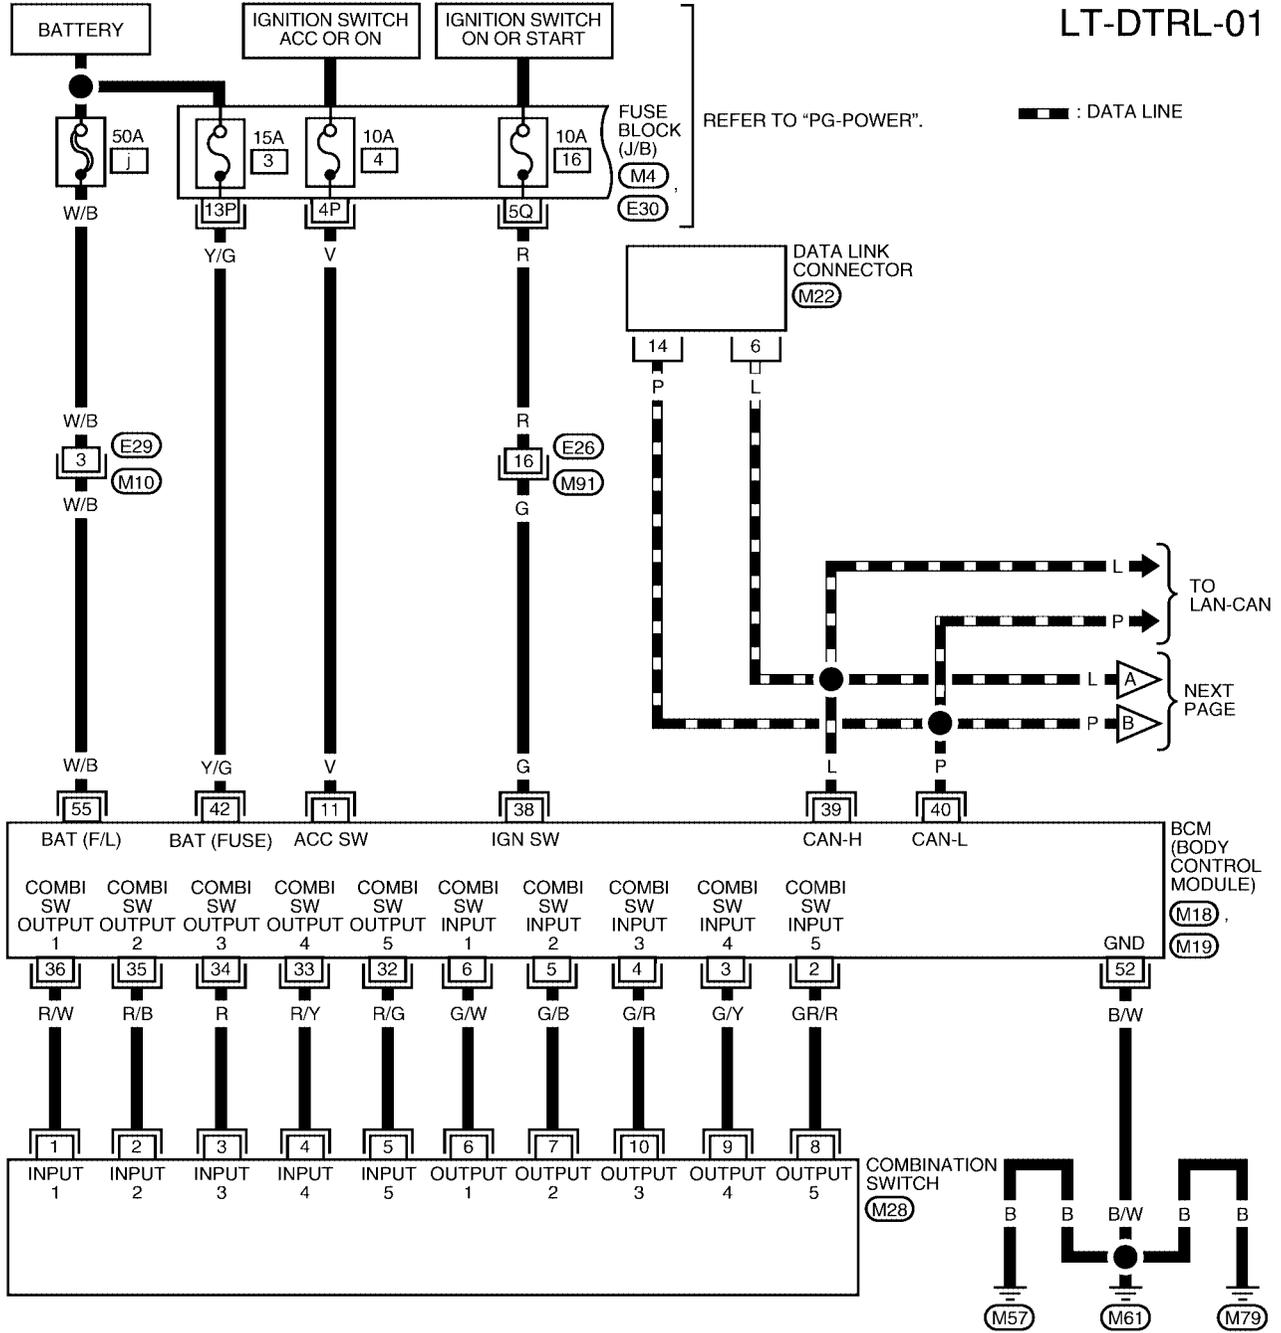


WKWA3205E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

LT-DTRL-02

— : DATA LINE

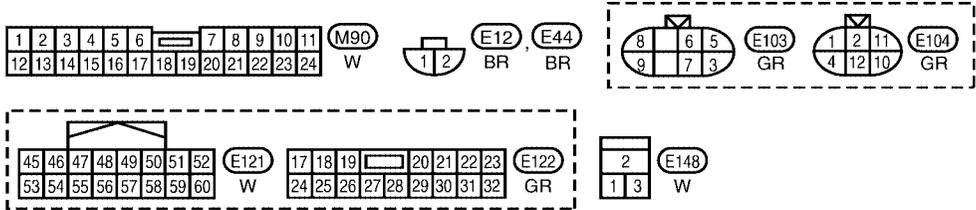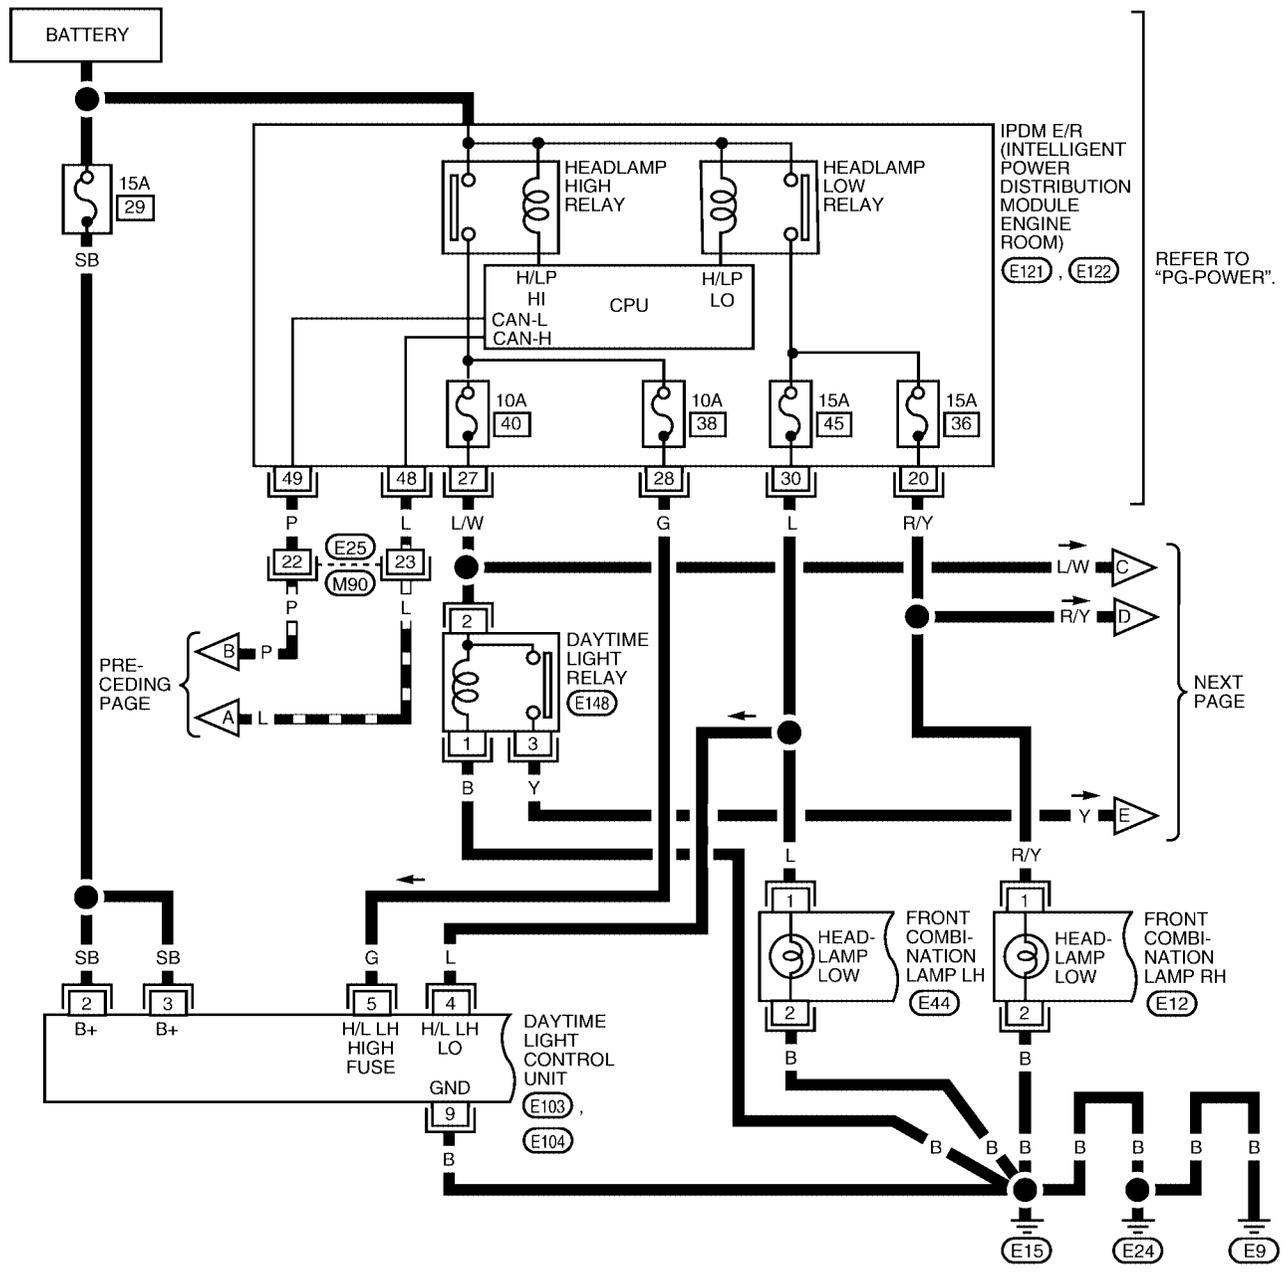

WKWA3206E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

EKS00FBH

Trouble Diagnoses DAYTIME LIGHT CONTROL UNIT INSPECTION TABLE

Terminal No.	Wire color	Item	Condition	Voltage (Approx.)
1	BR/W	Ignition switch start signal	Ignition switch in START position	Battery voltage
			All other conditions	0V
2	SB	Battery	Ignition switch in all positions	Battery voltage
3	SB	Battery	Ignition switch in all positions	Battery voltage
4	L	Lighting switch headlamp LH low beam output	Lighting switch in the headlamp ON (2ND) position and low beam (B) position	Battery voltage
			All other conditions	0V
5	G	Lighting switch headlamp LH high beam output	Lighting switch in the flash-to-pass (C) position or headlamp ON (2ND) position and high beam (A) position	Battery voltage
			All other conditions	0V
6	L/W	Headlamp LH high beam	Lighting switch in the flash-to-pass (C) position or headlamp ON (2ND) position and high beam (A) position	Battery voltage
			With parking brake released, engine running and lighting switch in OFF or parking and tail lamp ON (1ST) positions CAUTION: Block wheels and ensure selector lever is in P or N position.	Battery voltage
			All other conditions	0V
7	Y/G	Headlamp LH (high) control	Lighting switch in the flash-to-pass (C) position or headlamp ON (2ND) position and high beam (A) position and high beam position	0V
			With parking brake released, engine running and lighting switch in OFF or parking and tail lamp ON (1ST) positions CAUTION: Block wheels and ensure selector lever is in P or N position.	Battery voltage
			All other conditions	0V
8	Y	Lighting switch headlamp RH high beam output	Lighting switch in the flash-to-pass (C) position or headlamp ON (2ND) position and high beam (A) position	Battery voltage
			With parking brake released, engine running and lighting switch in OFF or parking and tail lamp ON (1ST) positions CAUTION: Block wheels and ensure selector lever is in P or N position.	6V
			All other conditions	0V
9	B	Ground	—	—
10	Y/G	Parking brake switch	Parking brake released	Battery voltage
			Parking brake set	0V
11	BR/Y	Generator (L terminal)	When engine is running	Battery voltage
			All other conditions	0V
12	G	Ignition switch on signal	Ignition switch OFF, ACC positions	0V
			Ignition switch ON, START positions	Battery voltage

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

Aiming Adjustment

EKS00FBI

Refer to [LT-29, "Aiming Adjustment"](#) .

A

Bulb Replacement

EKS00FBJ

Refer to [LT-30, "Bulb Replacement"](#) .

B

Removal and Installation of Headlamp

EKS00FBK

Refer to [LT-31, "Removal and Installation"](#) .

C

Disassembly and Assembly of Headlamp

EKS00FBL


Refer to [LT-31, "Disassembly and Assembly"](#) .

D

Removal and Installation of Daytime Light Control Unit

EKS00FBM

1. Remove the daytime light control unit mounting bolt.
 2. Disconnect connectors and remove from vehicle.
- Installation is in the reverse order of removal.

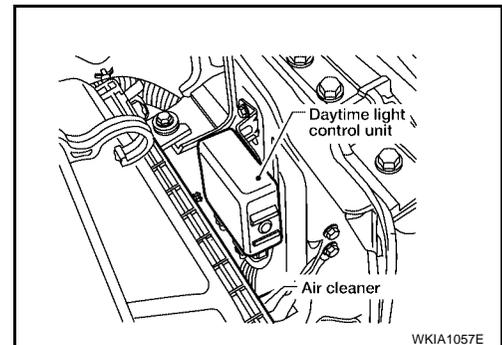

E

F

G

H

Removal and Installation of Daytime Light Relay


EKS00FBN

NOTE:

The daytime light relay is taped to the main wiring harness near the lower dash side finisher RH.

1. Remove the glove box assembly. Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#) .
2. Carefully remove the tape holding the daytime light relay to the main harness.
3. Disconnect the connector.

Installation is in the reverse order of removal.

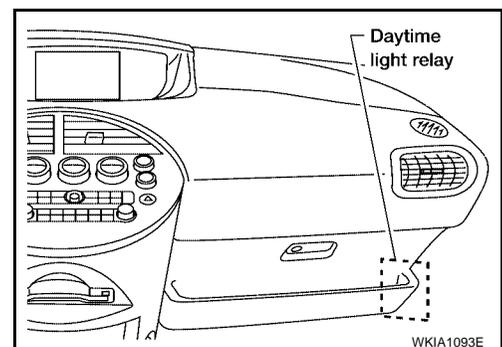

I

J

LT

L

M

AUTO LIGHT SYSTEM

- through BCM (body control module) terminal 18.

When ignition switch is turned to "ON" position and when outside brightness is darker than prescribed level, input is supplied

- to BCM terminal 43
- from optical sensor terminal 4.

The headlamps will then illuminate. For a description of headlamp operation, refer to [LT-5, "System Description"](#).

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#).

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the AUTO position, the ignition switch is turned from ON or ACC to OFF, and one of the front doors is opened, the battery saver control feature is activated.

Under this condition, the headlamps remain illuminated for 5 minutes, then the headlamp are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

DELAY TIMER FUNCTION

When the ignition switch is ON and auto light switch is ON, the BCM turns on/off the headlamps. In delay timer function, ignition is OFF, auto light sensor power source is OFF and the headlamps are not turned on/off by the BCM. On condition that:

- when the state of ignition switch ON or ACC is ON and output judgment by auto light function is headlamp ON changes to ignition switch and ACC are OFF and any door switch is ON, output judgment by BCM should be headlamp ON for 5 minutes by timer. After time out, output judgment by BCM should be headlamp OFF.
- when the state of any door switch is turned to ON from OFF while 45 second or 5 minute timer is counting, timer stops, and restarts counting for 5 minutes, then BCM judges output as headlamp ON. After time out, BCM judges output as headlamp OFF.
- when the state of front door switch LH, front door switch RH, rear door switch LH, rear door switch RH or back door latch (door ajar switch) is ON turns to all door switches are OFF while 45 second or 5 minute timer is counting, timer stops, and restarts counting for 45 seconds, then BCM judges output as headlamp ON. After timer out, BCM judges output as headlamp OFF.
- when the state is ignition switch ON or ACC is ON or auto light switch OFF while timer is counting, timer stops counting and BCM turns on/off lamps according to headlamp function, front fog lamp function, auto light function and headlamp battery save function.

Delay timer control mode can be changed by the function setting of CONSULT-II.

CAN Communication System Description

EKS00FBO

Refer to [LAN-24, "CAN COMMUNICATION"](#).

Major Components and Functions


EKS00FBR

Components	Functions
BCM	● Turns on/off circuits of tail light and headlamp according to signals from light sensor, lighting switch (AUTO), front door switch LH, front door switch RH, sliding door switch LH and RH, back door latch (door ajar switch), and ignition switch (ON, OFF).
Optical sensor	● Converts ambient light (lux) to voltage and sends it to BCM. (Detects lightness of 50 to 1,300 lux)

AUTO LIGHT SYSTEM

Schematic

EKS00FBS

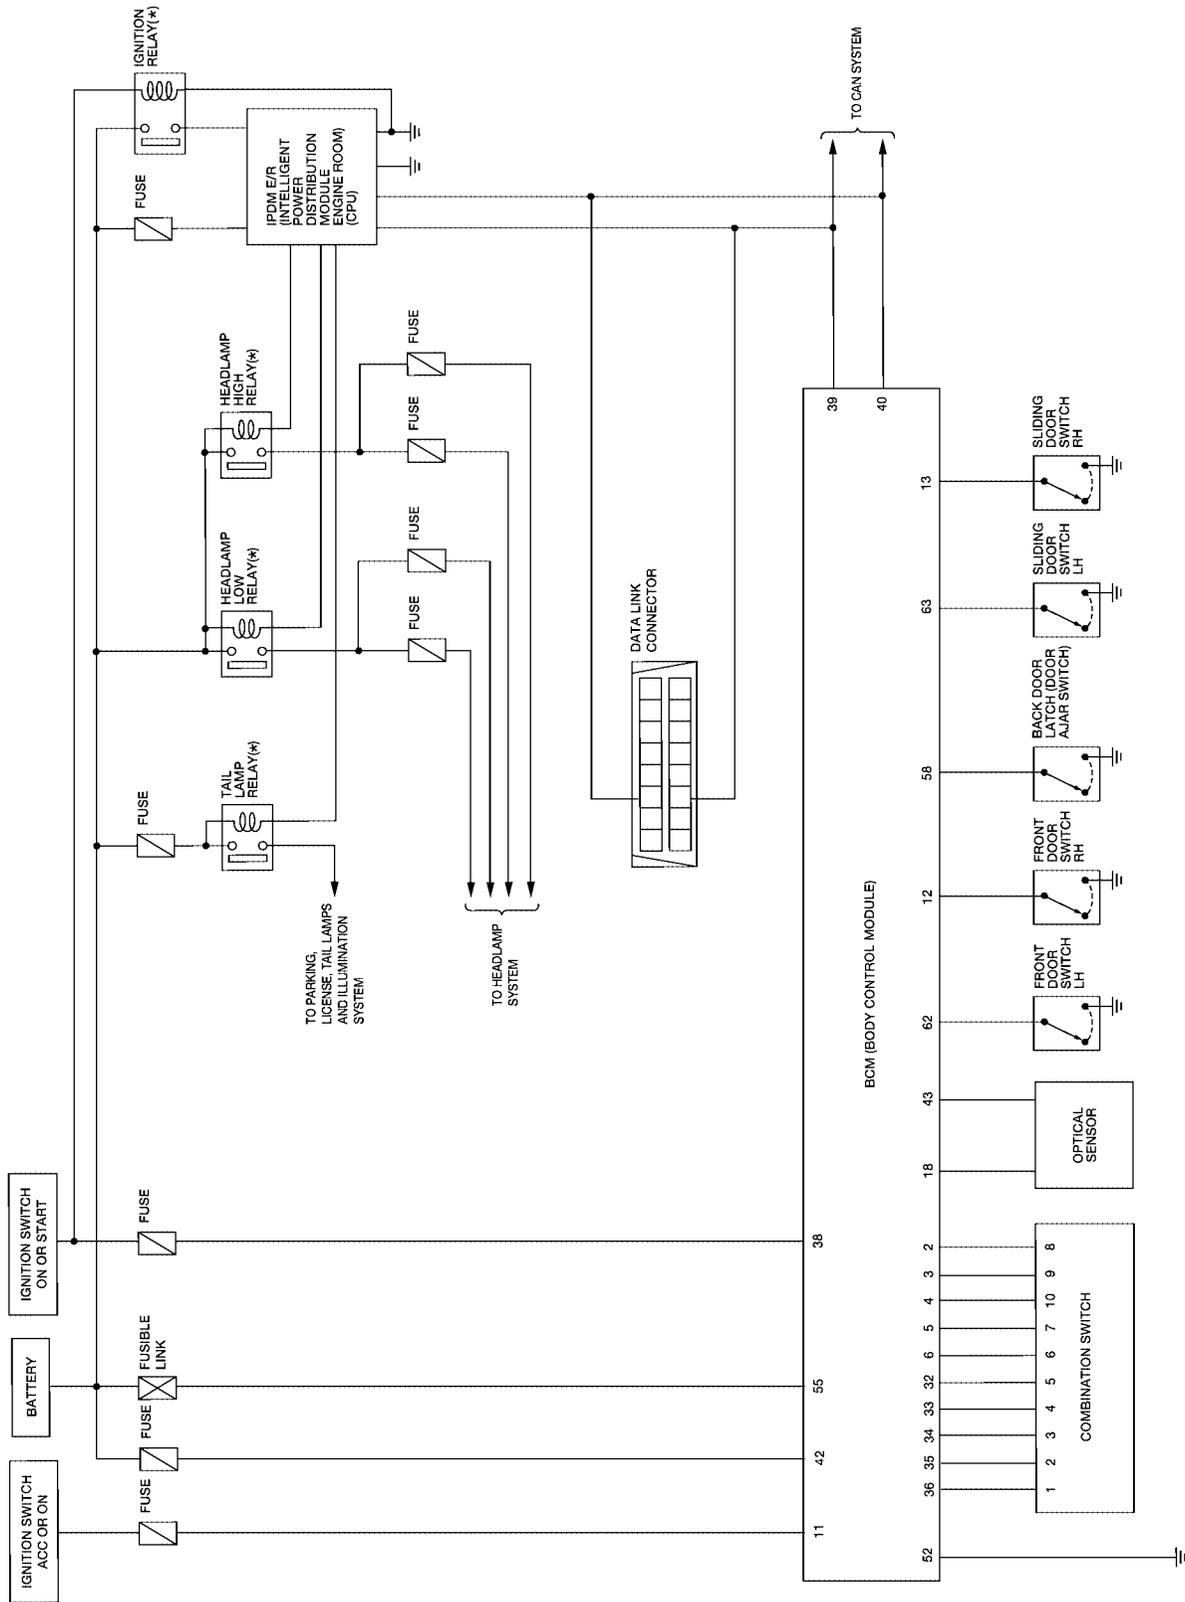

*: THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE - ENGINE ROOM).



WKWA3208E

AUTO LIGHT SYSTEM

Wiring Diagram — AUTO/L —

EKS00FBT

LT-AUTO/L-01


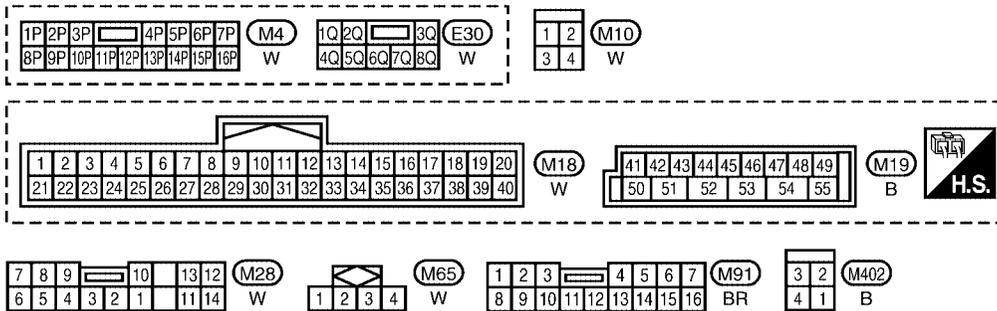
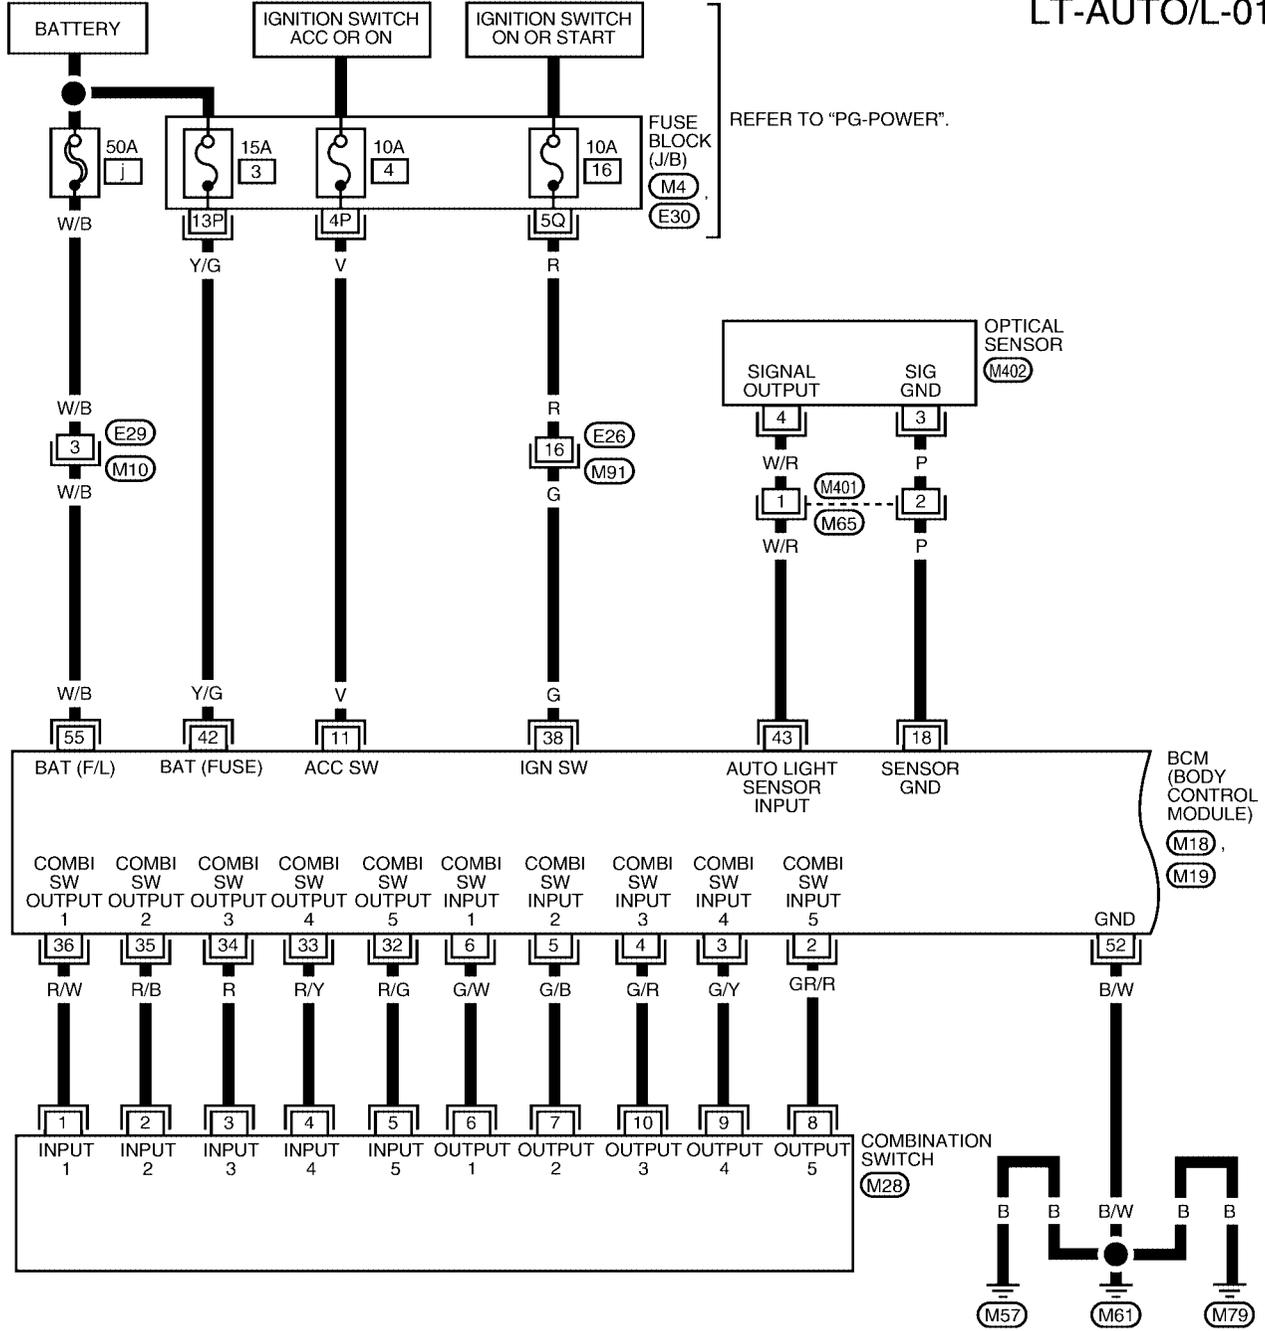


WKWA3209E

AUTO LIGHT SYSTEM

LT-AUTO/L-02


— : DATA LINE

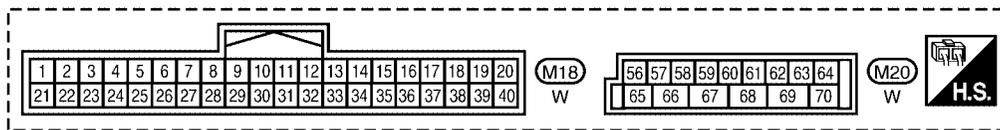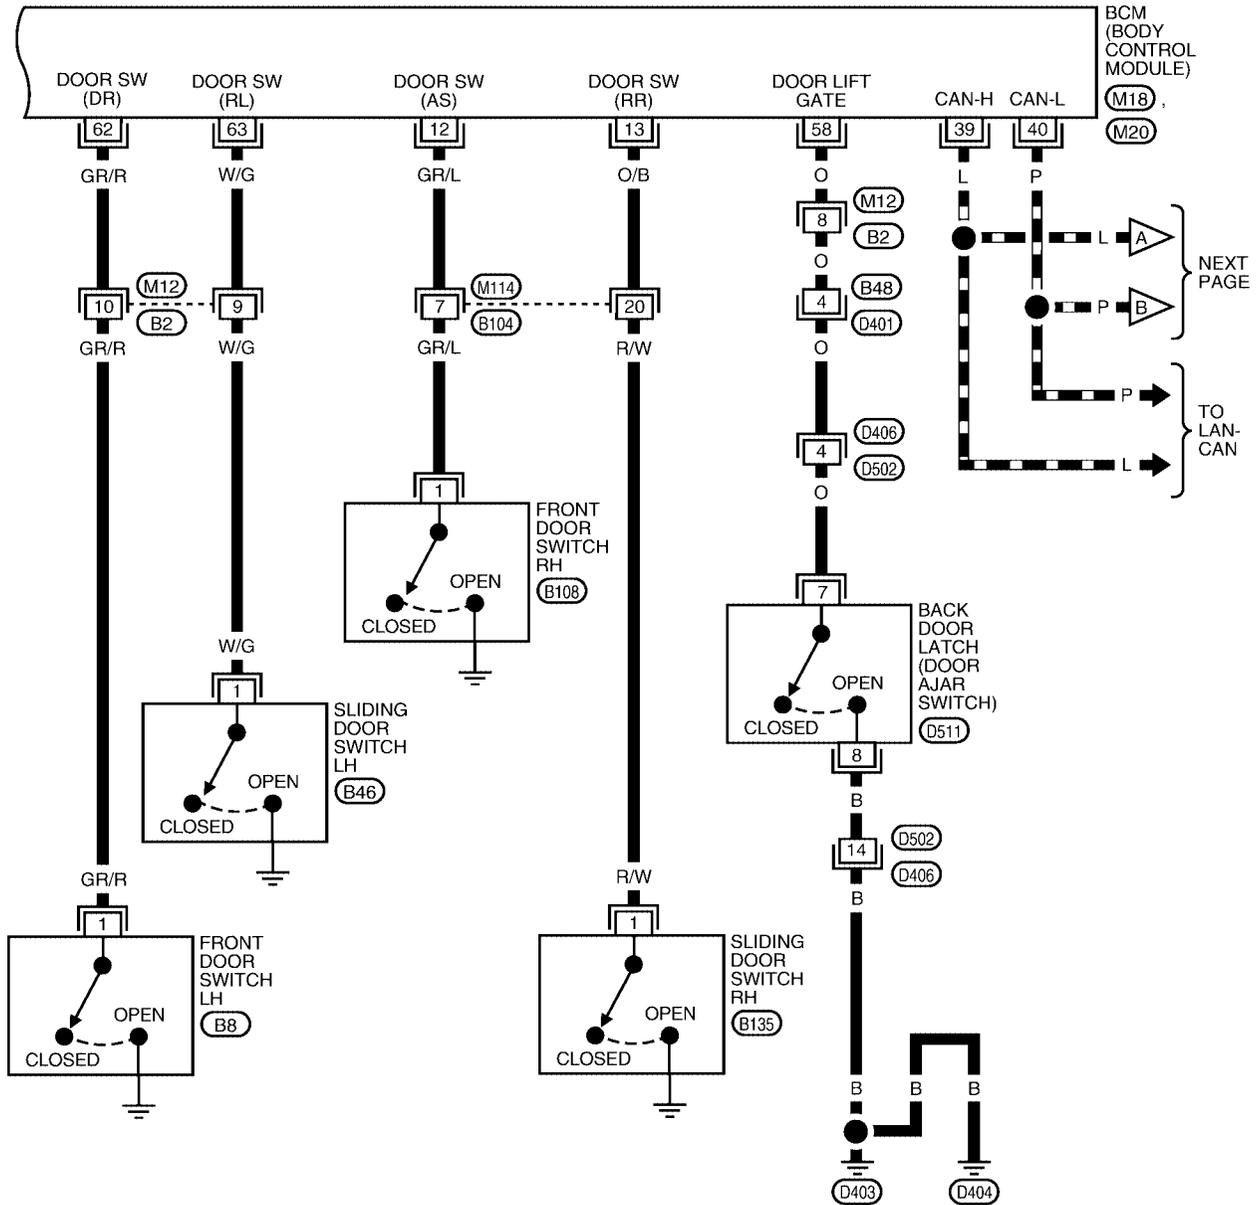



WKWA3210E

AUTO LIGHT SYSTEM

LT-AUTO/L-03

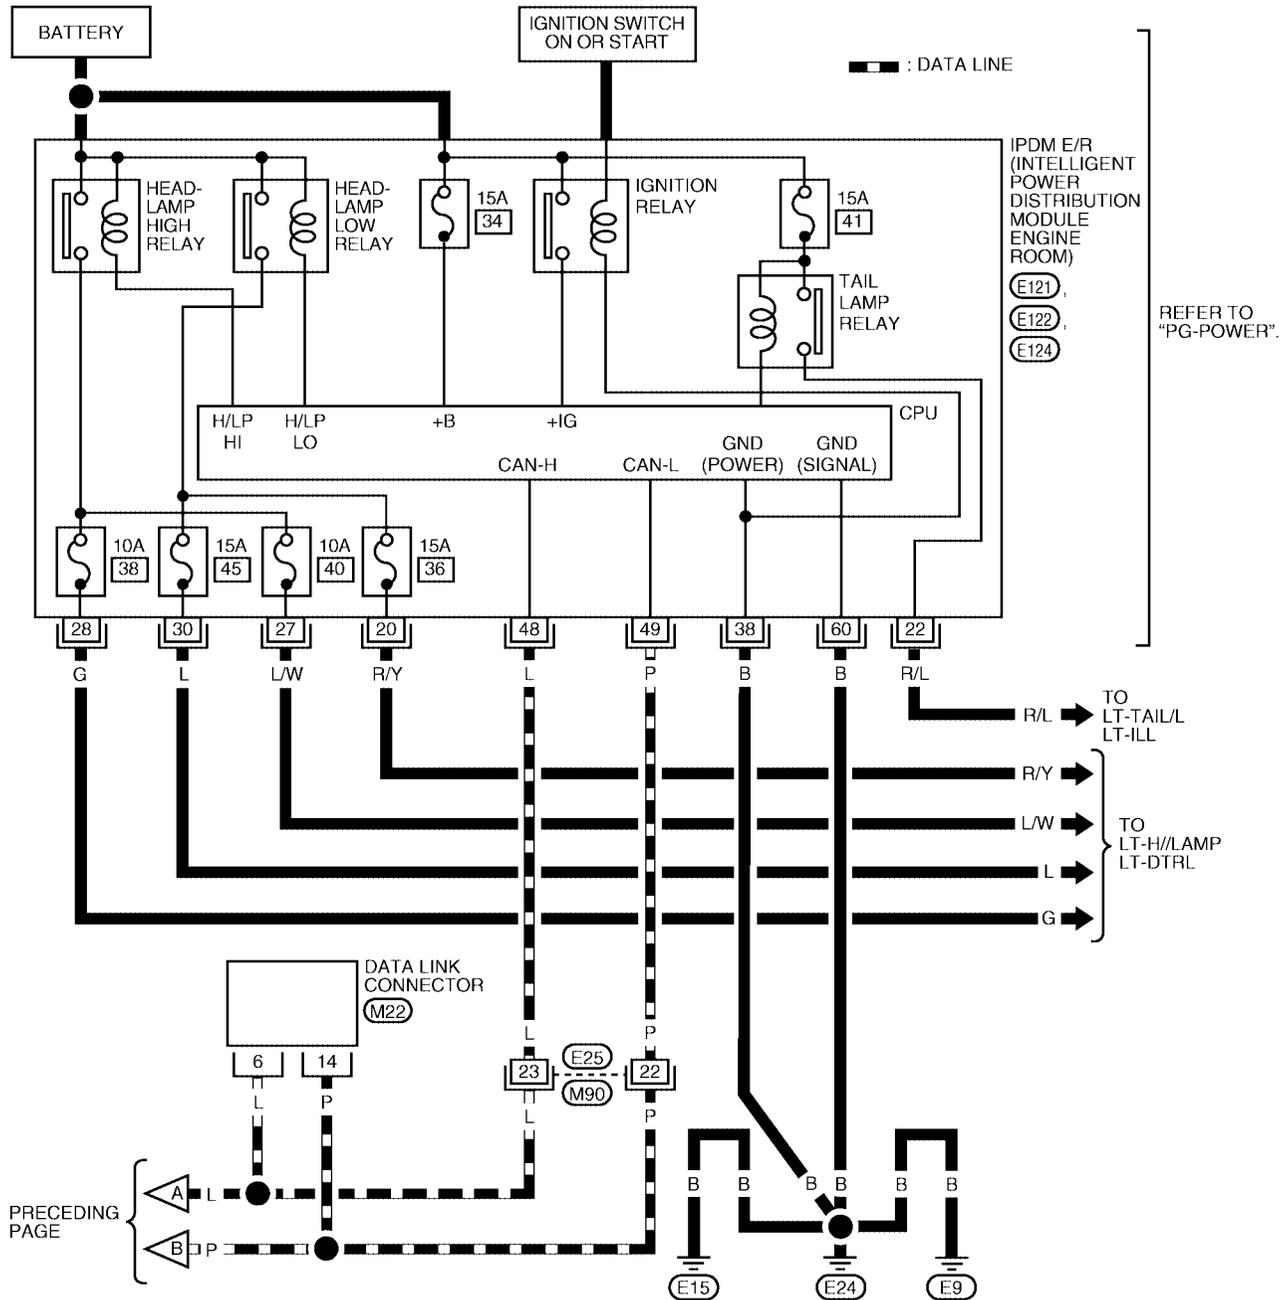

PRECEDING PAGE









WKWA1922E


AUTO LIGHT SYSTEM

Terminals and Reference Values for BCM

EKS00FBU

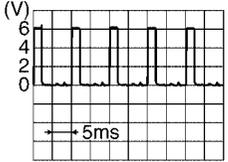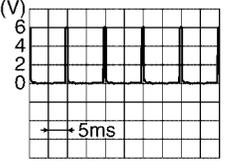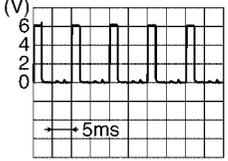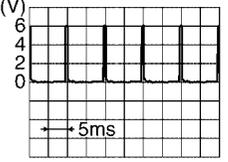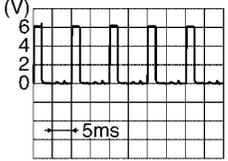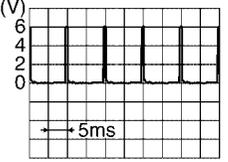Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)	
			Ignition switch	Operation or condition		
2	GR/R	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>	
3	G/Y	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>	
4	G/R	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>	
5	G/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>	
6	G/W	Combination switch input 1				
11	V	Ignition switch (ACC)	ACC	—	Battery voltage	
12	GR/L	Front door switch RH signal	OFF	Front door switch RH	ON (open)	0V
					OFF (closed)	Battery voltage
13	O/B	Sliding door switch RH signal	OFF	Sliding door switch RH	ON (open)	0V
					OFF (closed)	Battery voltage
18	P	Sensor ground	ON	—	0V	
32	R/G	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>	
33	R/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>	

AUTO LIGHT SYSTEM

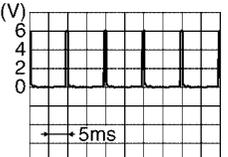Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)	
			Ignition switch	Operation or condition		
34	R	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E	
35	R/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E	
36	R/W	Combination switch output 1				
38	G	Ignition switch (ON)	ON	—	Battery voltage	
39	L	CAN-H	—	—	—	
40	P	CAN-L	—	—	—	
42	Y/G	Battery power supply	OFF	—	Battery voltage	
43	W/R	Optical sensor signal	ON	When optical sensor is illuminated	3.1 V or more ^{Note}	
				When optical sensor is not illuminated	0.6 V or less	
52	B/W	Ground	ON	—	0V	
55	W/B	Battery power supply	OFF	—	Battery voltage	
58	O	Back door latch (door ajar switch) signal	OFF	Back door latch (door ajar switch)	ON (open)	0V
					OFF (closed)	Battery voltage
62	GR/R	Front door switch LH signal	OFF	Front door switch LH	ON (open)	0V
					OFF (closed)	Battery voltage
63	W/G	Sliding door switch LH signal	OFF	Sliding door switch LH	ON (open)	0V
					OFF (closed)	Battery voltage

NOTE:

Optical sensor must be completely subjected to work lamp light. If the optical sensor is insufficiently illuminated, the measured value may not satisfy standard.

Terminals and Reference Values for IPDM E/R

EKS00FBV

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)	
			Ignition switch	Operation or condition		
20	R/Y	Headlamp low (RH)	ON	Lighting switch 2ND position	OFF	0V
					ON	Battery voltage
22	R/L	Parking, license, and tail lamp	ON	Lighting switch 1ST position	OFF	0V
					ON	Battery voltage
27	L/W	Headlamp high (RH)	ON	Lighting switch HIGH or PASS position	OFF	0V
					ON	Battery voltage
28	G	Headlamp high (LH)	ON	Lighting switch HIGH or PASS position	OFF	0V
					ON	Battery voltage

AUTO LIGHT SYSTEM

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
30	L	Headlamp low (LH)	ON	Lighting switch 2ND position	0V
					Battery voltage
38	B	Ground	ON	—	0V
48	L	CAN-H	—	—	—
49	P	CAN-L	—	—	—
60	B	Ground	ON	—	0V

How to Proceed With Trouble Diagnosis

EKS00FBW

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-42, "System Description"](#) .
3. Carry out the Preliminary Check. Refer to [LT-50, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction. Refer to [LT-57, "Trouble Diagnosis Chart by Symptom"](#) .
5. Does the auto light system operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

EKS00FBX

SETTING CHANGE FUNCTIONS

- Sensitivity of auto light system can be adjusted using CONSULT-II. Refer to [LT-53, "WORK SUPPORT"](#) .

CHECK BCM CONFIGURATION

1. CHECK BCM CONFIGURATION

Confirm BCM configuration for "AUTO LIGHT" is set to "WITH". Refer to [BCS-14, "READ CONFIGURATION PROCEDURE"](#) .

OK or NG

- OK >> Continue preliminary check. Refer to [LT-50, "CHECK POWER SUPPLY AND GROUND CIRCUIT"](#) .
- NG >> Change BCM configuration for "AUTO LIGHT" to "WITH". Refer to [BCS-16, "WRITE CONFIGURATION PROCEDURE"](#) .

CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES OR FUSIBLE LINK

Check for blown fuses or fusible link.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	j
		3
	Ignition switch ON or START position	16
	Ignition switch ACC or ON position	4
IPDM E/R	Battery	34
		36
		38
		40
		41
		45

AUTO LIGHT SYSTEM

Refer to [LT-45, "Wiring Diagram — AUTO/L —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse or fusible link is blown, be sure to eliminate cause of malfunction before installing new fuse or fusible link. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

BCM (+)		(-)	Ignition switch position		
Connector	Terminal		OFF	ACC	ON
M18	11	Ground	0V	Battery voltage	Battery voltage
	38		0V	0V	Battery voltage
M19	42		Battery voltage	Battery voltage	Battery voltage
	55		Battery voltage	Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse or fusible link.

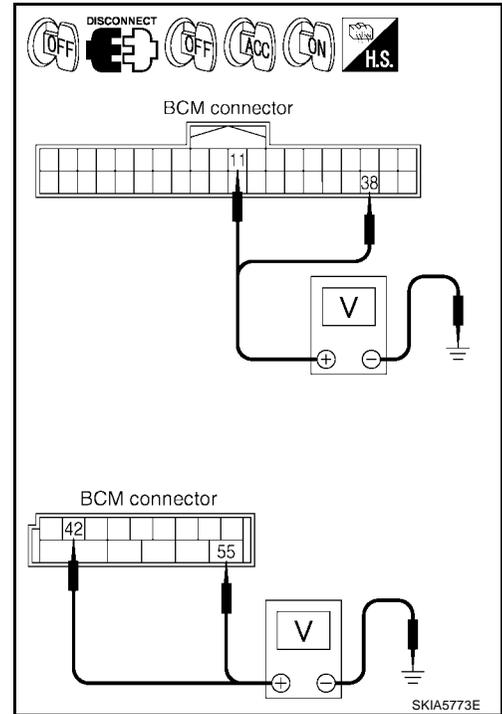

3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

BCM			Continuity
Connector	Terminal		
M19	52	Ground	Yes

OK or NG

OK >> Inspection End.

NG >> Check ground circuit harness.

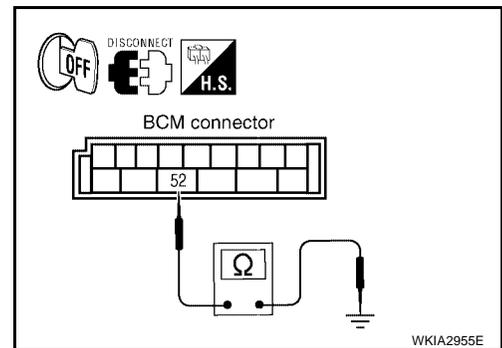

AUTO LIGHT SYSTEM

CONSULT-II Function (BCM)

EKS00FBY

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

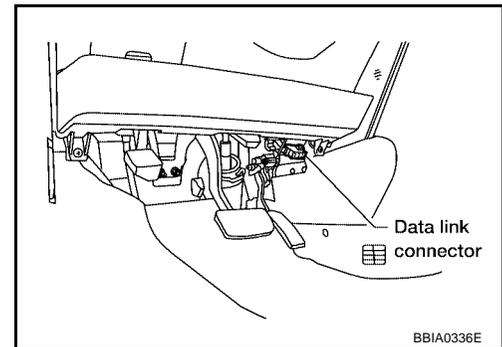

2. Touch "START (NISSAN BASED VHCL)".

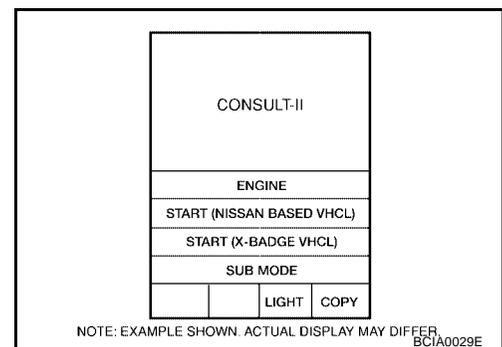


3. Touch "BCM" on "SELECT SYSTEM" screen.
If "BCM" is not indicated, go to [GI-38, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

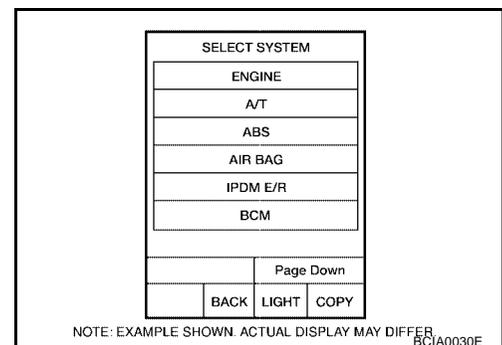

AUTO LIGHT SYSTEM

4. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.

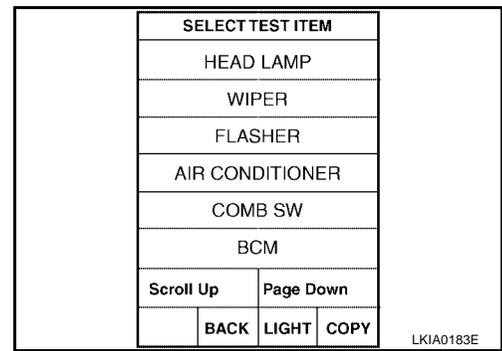

WORK SUPPORT

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch "CUSTOM A/LIGHT SETTING" or "ILL DELAY SET" on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "MODE 1-4" of setting to be changed (CUSTOM A/LIGHT SETTING). Touch "MODE1-8" of setting to be changed (ILL DELAY SET).
6. Touch "CHANGE SETT".
7. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
8. Touch "END".

Work Support Setting Item

- Sensitivity of auto light can be selected and set from four modes.

Work item	Description
CUSTOM A/LIGHT SETTING	Auto light sensitivity can be changed in this mode. Sensitivity can be adjusted in four modes. ● MODE 1 (Normal)/ MODE 2 (Sensitive)/MODE 3 (Desensitized)/MODE4 (Insensitive)
ILL DELAY SET	Auto light delay off timer period can be changed in this mode. Selects auto light delay off timer period among eight modes. ● MODE 1 (45 sec.)/MODE 2 (OFF)/MODE 3 (30 sec.)/MODE 4 (60 sec.)/MODE 5 (90 sec.)/MODE 6 (120 sec.)/MODE 7 (150 sec.)/MODE 8 (180 sec.)

DATA MONITOR

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch individual items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item	Contents	Contents
IGN ON SW	"ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
ACC ON SW	"ON/OFF"	Displays "ACC (ON)/OFF, Ignition OFF (OFF)" status judged from ignition switch signal.
HI BEAM SW	"ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.

AUTO LIGHT SYSTEM

Monitor item	Contents
HEAD LAMP SW 1 "ON/OFF"	Displays status (headlamp switch 1: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1ST "ON/OFF"	Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
AUTO LIGHT SW "ON/OFF"	Displays status of the lighting switch as judged from the lighting switch signal. (AUTO position: ON/Other than AUTO position: OFF)
PASSING SW "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
FR FOG SW "ON/OFF"	Displays status (front fog lamp switch: ON/Others: OFF) of front fog lamp switch judged from lighting switch signal.
DOOR SW-DR "ON/OFF"	Displays status of the front door LH as judged from the front door switch LH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-AS "ON/OFF"	Displays status of the front door RH as judged from the front door switch RH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RR "ON/OFF"	Displays status of the sliding door as judged from the sliding door switch (RH) signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RL "ON/OFF"	Displays status of the sliding door as judged from the sliding door switch (LH) signal. (Door is open: ON/Door is closed: OFF)
BACK DOOR SW "ON/OFF"	Displays status of the back door as judged from the back door switch signal. (Door is open: ON/Door is closed: OFF)
TURN SIGNAL R "ON/OFF"	Displays status (Turn right: ON/Others: OFF) as judged from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays status (Turn left: ON/Others: OFF) as judged from lighting switch signal.
CARGO LAMP SW "ON/OFF"	Displays status of cargo lamp.
OPTICAL SENSOR [0 - 5V]	Displays "ambient light (close to 5V when dark/close to 0V when light)" judged from optical sensor signal.

ACTIVE TEST

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

Display Item List

Test item	Description
TAIL LAMP	Allows tail lamp relay to operate by switching ON-OFF.
HEAD LAMP	Allows headlamp relay (HI, LO) to operate by switching ON-OFF.
FR FOG LAMP	Allows fog lamp relay to operate by switching ON-OFF.
CARGO LAMP	Allows cargo lamp to operate by switching ON-OFF.
CORNERING LAMP	Allows cornering lamp relay (RH, LH) to operate by switching ON-OFF.

CONSULT-II Function (IPDM E/R)

EKS00FBZ

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.

IPDM E/R diagnostic Mode	Description
SELF-DIAG RESULTS	Displays IPDM E/R self-diagnosis results.
DATA MONITOR	Displays IPDM E/R input/output data in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.


AUTO LIGHT SYSTEM

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn the ignition switch ON.

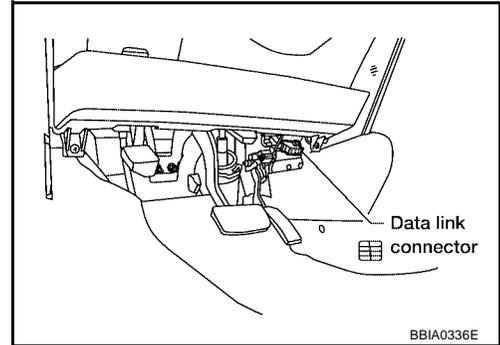


2. Touch "START (NISSAN BASED VHCL)".

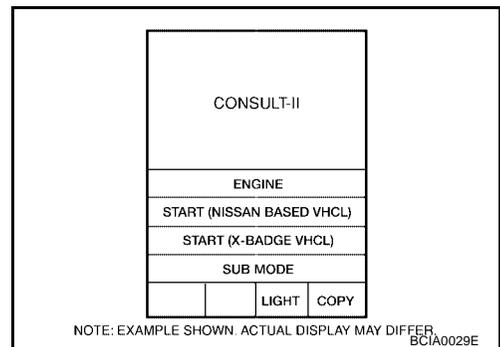

3. Touch "IPDM E/R" on "SELECT SYSTEM" screen.
If "IPDM E/R" is not displayed, go to [GI-38, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

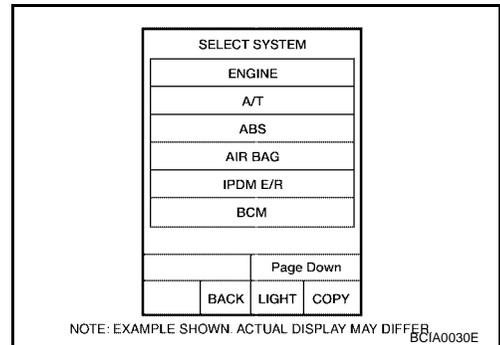

4. Select the desired part to be diagnosed on the "SELECT DIAG MODE" screen.

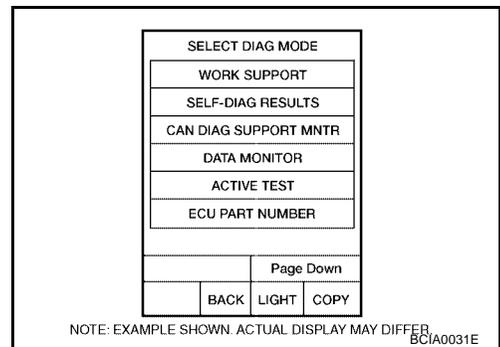

DATA MONITOR

Operation Procedure

1. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Touch "ALL SIGNALS", "MAIN SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

AUTO LIGHT SYSTEM

ALL SIGNALS	All items will be monitored.
MAIN SIGNALS	Monitor the predetermined item.
SELECTION FROM MENU	Select any item for monitoring.

3. Touch "START".
4. Touch the required monitoring item on "SELECTION FROM MENU". In "ALL SIGNALS", all items are monitored. In "MAIN SIGNALS", predetermined items are monitored.
5. Touch "RECORD" while monitoring to record the status of the item being monitored. To stop recording, touch "STOP".

All Items, Main Items, Select Item Menu

Item name	CONSULT-II screen display	Display or unit	Monitor item selection			Description
			ALL SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
Parking, license plate and tail lamps request	TAIL&CLR REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp low beam request	HL LO REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp high beam request	HL HI REQ	ON/OFF	×	×	×	Signal status input from BCM
Cornering lamp	CRNRNG LMP REQ	ON/OFF	×	-	×	Signal status input from BCM
Front fog lamps request	FR FOG REQ	ON/OFF	×	×	×	Signal status input from BCM

NOTE:

Perform monitoring of IPDM E/R data with the ignition switch ON. When the ignition switch is at ACC, the display may not be correct.

ACTIVE TEST

Operation Procedure

1. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Touch item to be tested, and check operation.
3. Touch "START".
4. Touch "STOP" while testing to stop the operation.

Test item	CONSULT-II screen display	Description
Tail lamp relay output	TAIL LAMP	Allows tail lamp relay to operate by switching operation ON-OFF at your option.
Headlamp relay (HI, LO) output	LAMPS	Allows headlamp relay (HI, LO) to operate by switching operation (OFF, HI, LO) at your option (Headlamp high beam repeats ON-OFF every 1 second).
Front fog lamp relay output		Allows fog lamp relay to operate by switching operation ON-OFF at your option.
Cornering lamp relay (RH, LH) output	CORNERING LAMP	Allows cornering lamp relay (RH, LH) to operate by switching operation ON-OFF at your option.

AUTO LIGHT SYSTEM

Trouble Diagnosis Chart by Symptom

EKS00FC0

Trouble phenomenon	Malfunction system and reference
<ul style="list-style-type: none"> ● Parking lamps and headlamps will not illuminate when outside of the vehicle becomes dark. (Lighting switch 1st position and 2nd position operate normally.) ● Parking lamps and headlamp will not go out when outside of the vehicle becomes light. (Lighting switch 1st position and 2nd position operate normally.) ● Headlamps go out when outside of the vehicle becomes light, but parking lamps stay on. 	<ul style="list-style-type: none"> ● Refer to LT-53, "WORK SUPPORT" . ● Refer to LT-57, "Lighting Switch Inspection" . ● Refer to LT-58, "Optical Sensor System Inspection" . <p>If above systems are normal, replace BCM. Refer to BCS-20, "Removal and Installation of BCM" .</p>
<p>Parking lamps illuminate when outside of the vehicle becomes dark, but headlamps stay off. (Lighting switch 1st position and 2nd position operate normally.)</p>	<ul style="list-style-type: none"> ● Refer to LT-53, "WORK SUPPORT" . ● Refer to LT-58, "Optical Sensor System Inspection" . <p>If above systems are normal, replace BCM. Refer to BCS-20, "Removal and Installation of BCM" .</p>
<p>Auto light adjustment system will not operate. (Lighting switch AUTO, 1st position and 2nd position operate normally.)</p>	<ul style="list-style-type: none"> ● Refer to LT-58, "Optical Sensor System Inspection" . <p>If above systems is normal, replace BCM. Refer to BCS-20, "Removal and Installation of BCM" .</p>
<p>Auto light adjustment system will not operate.</p>	<ul style="list-style-type: none"> ● CAN communication line to BCM inspection. Refer to BCS-13, "CAN Communication Inspection Using CONSULT-II (Self-Diagnosis)" .
<p>Shut off delay feature will not operate.</p>	<ul style="list-style-type: none"> ● CAN communication line inspection between BCM and combination meter. Refer to BCS-13, "CAN Communication Inspection Using CONSULT-II (Self-Diagnosis)" . ● Refer to BL-42, "Door Switch Check (Without Automatic Back Door System)" . <p>If above systems is normal, replace BCM. Refer to BCS-20, "Removal and Installation of BCM" .</p>

Lighting Switch Inspection

EKS00FC1

1. CHECK LIGHTING SWITCH INPUT SIGNAL

④ With CONSULT-II

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "AUTO LIGHT SW" turns ON-OFF linked with operation of lighting switch.

When lighting switch is in AUTO position : AUTO LIGHT SW ON

⊗ Without CONSULT-II

Refer to [LT-107, "Combination Switch Inspection"](#) .

OK or NG

OK >> Inspection End.

NG >> Check lighting switch. Refer to [LT-107, "Combination Switch Inspection"](#) .

DATA MONITOR	
MONITOR	
AUTO LIGHT SW	ON

SKIA4196E

AUTO LIGHT SYSTEM

EKS00FC2

Optical Sensor System Inspection

1. CHECK OPTICAL SENSOR INPUT SIGNAL

④ With CONSULT-II
Select "BCM" on CONSULT-II. With "OPTICAL SENSOR" data monitor, check difference in the voltage when the optical sensor is illuminated and not illuminated.

④ Illuminated

OPTICAL SENSOR : 3.1V or more

④ Not illuminated

OPTICAL SENSOR : 0.6V or less

CAUTION:


Optical sensor must be completely subjected to work lamp light. If the optical sensor is insufficiently illuminated, the measured value may not satisfy the standard.

⊗ Without CONSULT-II
GO TO 2.

OK or NG

OK >> Inspection End.

NG >> GO TO 2.

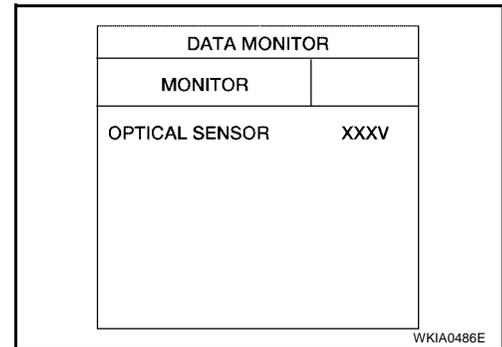


2. CHECK OPTICAL SENSOR SIGNAL GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and optical sensor connector.
3. Check continuity (open circuit) between BCM harness connector M18 terminal 18 and optical sensor harness connector M402 terminal 3.

18 - 3 : Continuity should exist.

4. Check continuity (short circuit) between BCM harness connector M18 terminal 18 and ground.

18 - Ground : Continuity should not exist.

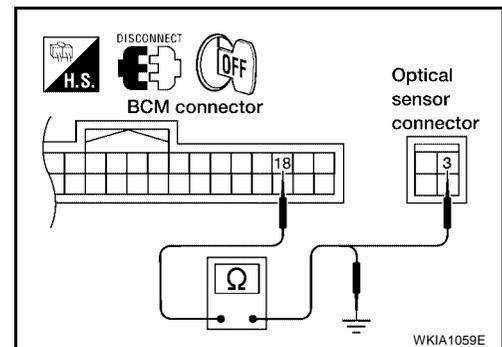

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.


3. CHECK OPTICAL SENSOR SIGNAL CIRCUIT

1. Check continuity (open circuit) between BCM harness connector M19 terminal 43 and optical sensor harness connector M402 terminal 4.

43 - 4 : Continuity should exist.

2. Check continuity (short circuit) between BCM harness connector M19 terminal 43 and ground.

43 - Ground : Continuity should not exist.

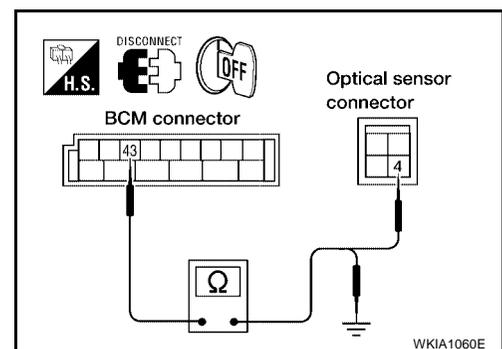

OK or NG

OK >> Replace optical sensor. Refer to [LT-59, "Optical Sensor"](#).
Recheck sensor output with CONSULT-II. If NG, replace BCM. Refer to [BCS-20, "Removal and Installation of BCM"](#).

NG >> Repair harness or connector.


AUTO LIGHT SYSTEM

Optical Sensor REMOVAL AND INSTALLATION

EKS00FC3

Removal

1. Remove defrost grille. Refer to [IP-10, "Removal and Installation"](#).
2. Disconnect the connector.
3. Turn the optical sensor counterclockwise to remove it from defroster grille.

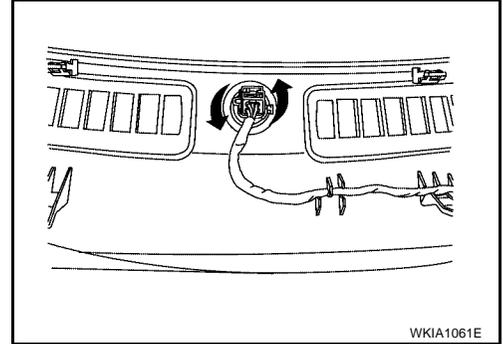

INSTALLATION

Installation is in the reverse order of removal.

A

B

C

D

E

F

G

H

I

J

LT

L

M


FRONT FOG LAMP

PFP:26150

FRONT FOG LAMP

Component Parts and Harness Connector Location

EKS00FC4

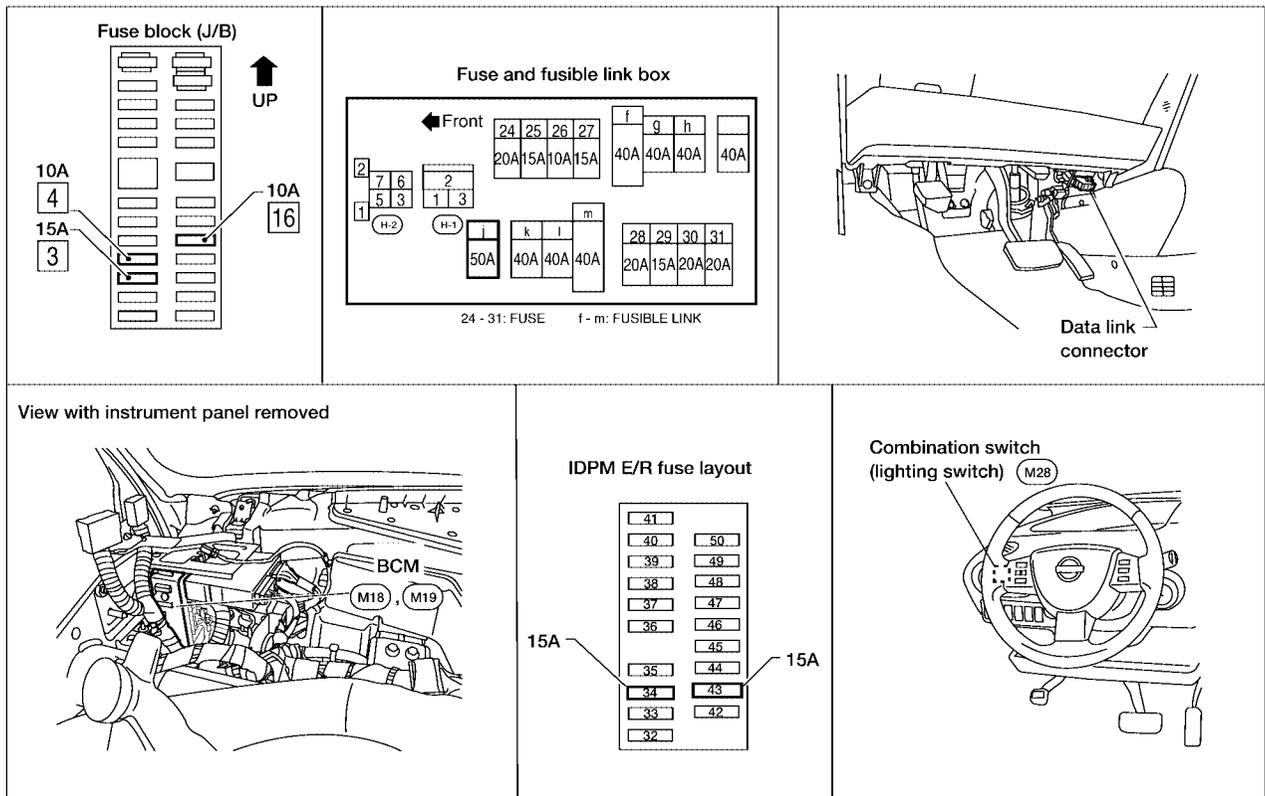

WKIA3448E

System Description

EKS00FC5

Control of the fog lamps is dependent upon the position of the combination switch (lighting switch). The lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) for front fog lamp operation. When the lighting switch is placed in the fog lamp position, the BCM (body control module) receives input signal requesting the fog lamps to illuminate. When the headlamps are illuminated, this input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the front fog lamp relay coil. When activated, this relay directs power to the front fog lamps.

OUTLINE

Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and
- through 15A fuse (No. 43, located in the IPDM E/R)
- to front fog lamp relay, located in the IPDM E/R, and
- through 15A fuse (No. 34, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 50A fusible link (letter j, located in the fuse and fusible link box)
- to BCM terminal 55, and
- through 15A fuse [No. 3, located in the fuse block (J/B)]
- to BCM terminal 42.

When the ignition switch is in ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 16, located in the fuse block (J/B)]
- to BCM terminal 38.

When the ignition switch is in ACC or ON position, power is supplied

FRONT FOG LAMP

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 52
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 60
- through grounds E9, E15 and E24.

FOG LAMP OPERATION

The fog lamp switch is built into the combination switch. The lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) and the fog lamp switch must be ON for fog lamp operation.

With the fog lamp switch in the ON position, the CPU of the IPDM E/R grounds the coil side of the fog lamp relay. The fog lamp relay then directs power

- through IPDM E/R terminal 37
- to front fog lamp LH terminal +, and
- through IPDM E/R terminal 36
- to front fog lamp RH terminal +.

Ground is supplied

- to front fog lamp LH and RH terminal –
- through grounds E9, E15 and E24.

With power and ground supplied, the front fog lamps illuminate.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON), the fog lamp switch is ON and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the fog lamps (and headlamps) remain illuminated for 5 minutes, then the fog lamps (and headlamps) are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

CAN Communication System Description

Refer to [LAN-24, "CAN COMMUNICATION"](#) .

EKS00FC6



LT

FRONT FOG LAMP

EKS00FC7

Wiring Diagram — F/FOG —



LT-F/FOG-01

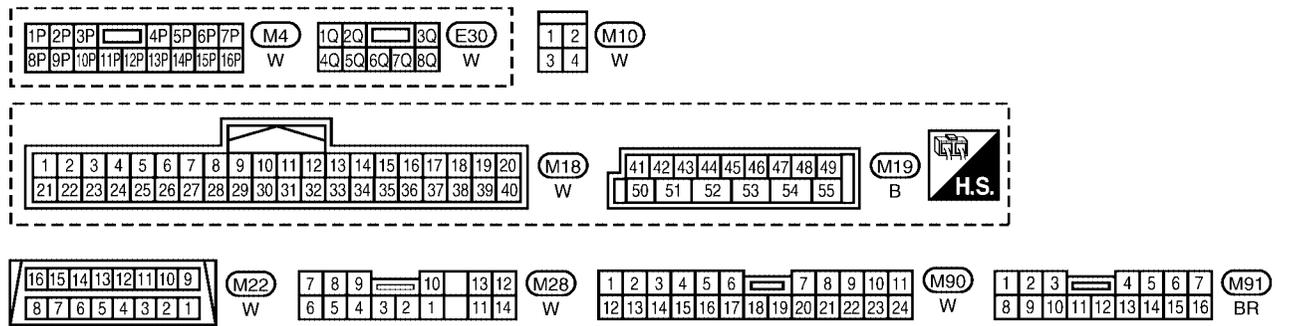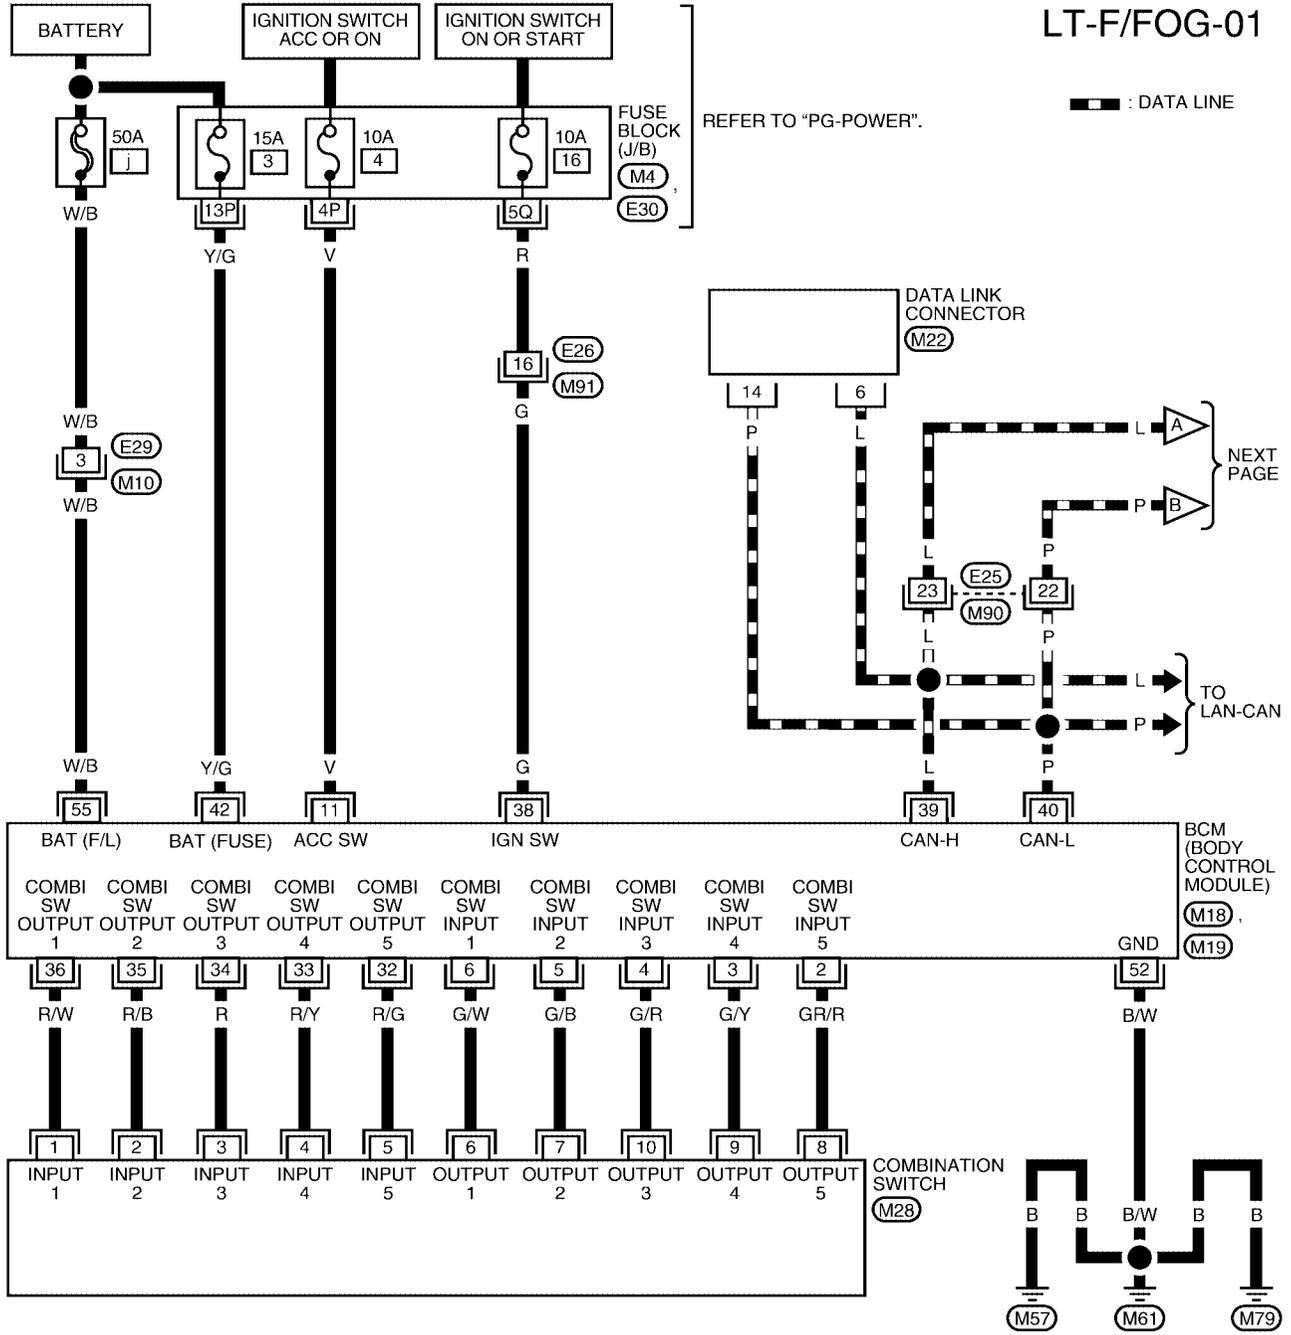

WKWA3211E

FRONT FOG LAMP

LT-F/FOG-02





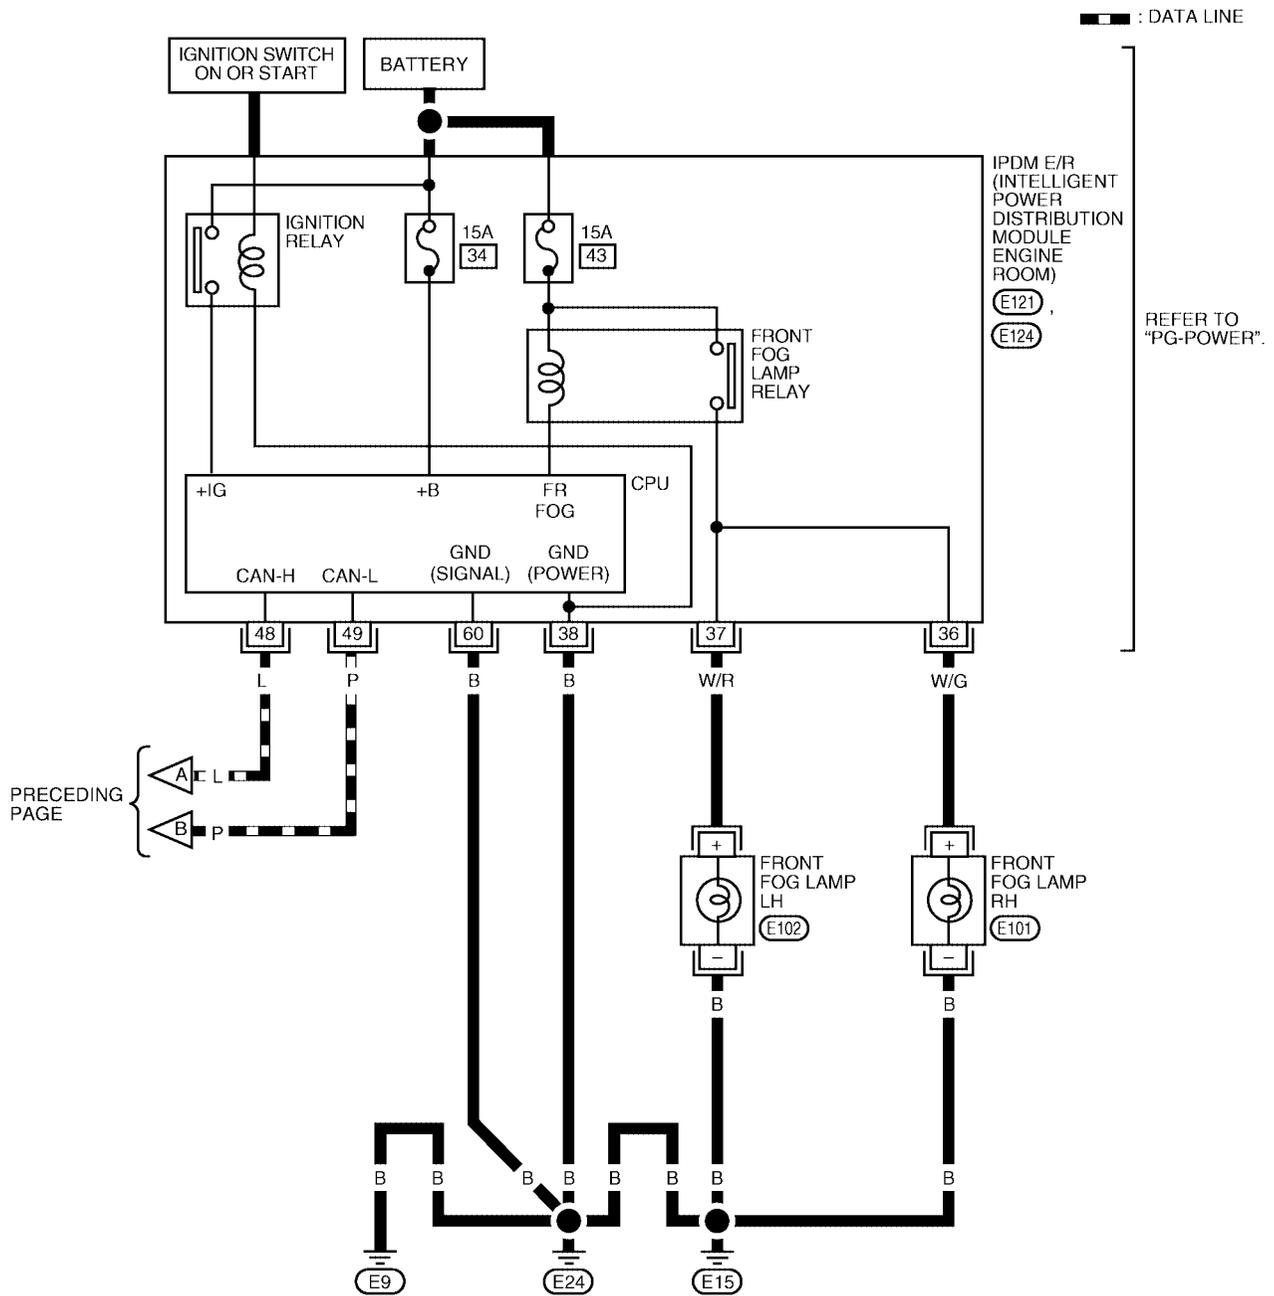


WKWA1924E

FRONT FOG LAMP

Terminals and Reference Values for BCM

EKS00FC8

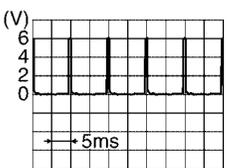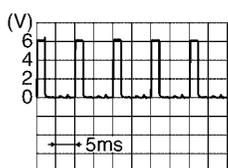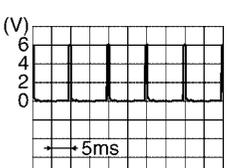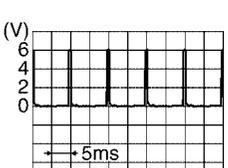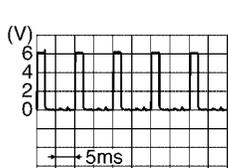Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
2	GR/R	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
3	G/Y	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
4	G/R	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
5	G/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
6	G/W	Combination switch input 1			
11	V	Ignition switch (ACC)	ACC	—	Battery voltage
32	R/G	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
33	R/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
34	R	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>

FRONT FOG LAMP

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
35	R/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	
36	R/W	Combination switch output 1			
38	G	Ignition switch (ON)	ON	—	Battery voltage
39	L	CAN-H	—	—	—
40	P	CAN-L	—	—	—
42	Y/G	Battery power supply	OFF	—	Battery voltage
52	B/W	Ground	ON	—	0V
55	W/B	Battery power supply (fusible link)	OFF	—	Battery voltage

Terminals and Reference Values for IPDM E/R

EKS00FC9

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
36	W/G	Front fog lamp RH	ON	Lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) and the front fog lamp switch must be ON	OFF 0V
					ON Battery voltage
37	W/R	Front fog lamp LH	ON	Lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) and the front fog lamp switch must be ON	OFF 0V
					ON Battery voltage
38	B	Ground	ON	—	0V
48	L	CAN-H	—	—	—
49	P	CAN-L	—	—	—
60	B	Ground	ON	—	0V

How to Proceed With Trouble Diagnosis

EKS00FCA

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-60, "System Description"](#) .
3. Perform the Preliminary Check. Refer to [LT-66, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the front fog lamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

FRONT FOG LAMP

EKS00FCB

Preliminary Check CHECK BCM CONFIGURATION

1. CHECK BCM CONFIGURATION

Confirm BCM configuration for "FR FOG LAMP" is set to "WITH". Refer to [BCS-14, "READ CONFIGURATION PROCEDURE"](#).

OK or NG

- OK >> Continue preliminary check. Refer to [LT-66, "CHECK POWER SUPPLY AND GROUND CIRCUIT"](#).
- NG >> Change BCM configuration for "FR FOG LAMP" to "WITH". Refer to [BCS-16, "WRITE CONFIGURATION PROCEDURE"](#).

CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES OR FUSIBLE LINK

Check for blown fuses or fusible link.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	j
		3
	Ignition switch ON or START position	16
IPDM E/R	Battery	4
		34
		43

Refer to [LT-62, "Wiring Diagram — F/FOG —"](#).

OK or NG

- OK >> GO TO 2.
- NG >> If fuse or fusible link is blown, be sure to eliminate cause of malfunction before installing new fuse or fusible link. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).


2. CHECK POWER SUPPLY CIRCUIT

1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

BCM (+)		(-)	Ignition switch position		
Connector	Terminal		OFF	ACC	ON
M18	11	Ground	0V	Battery voltage	Battery voltage
	38		0V	0V	Battery voltage
M19	42		Battery voltage	Battery voltage	Battery voltage
	55		Battery voltage	Battery voltage	Battery voltage

OK or NG

- OK >> GO TO 3.
- NG >> Check harness for open between BCM and fuse or fusible link.

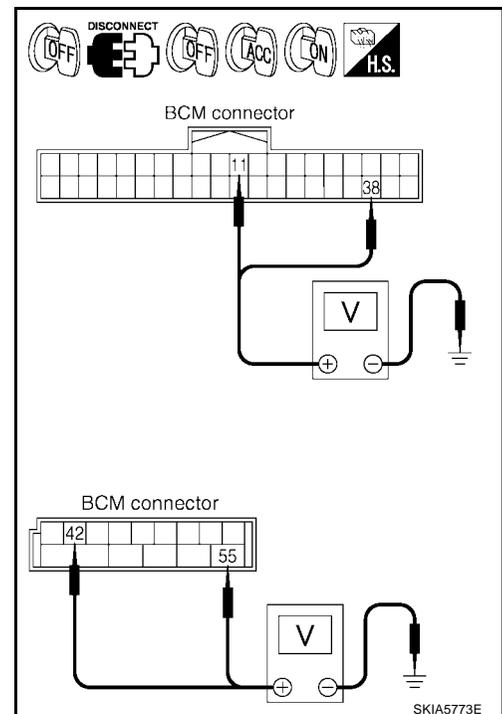

FRONT FOG LAMP


3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M19	52	Ground	Yes

OK or NG

- OK >> Inspection End.
- NG >> Check ground circuit harness.

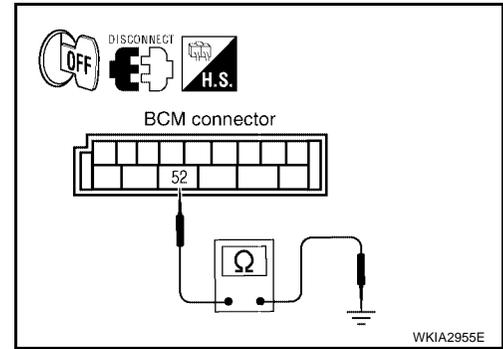

CONSULT-II Functions

Refer to [LT-17, "CONSULT-II Function \(BCM\)"](#) in HEADLAMP (FOR USA).
 Refer to [LT-20, "CONSULT-II Function \(IPDM E/R\)"](#) in HEADLAMP (FOR USA).

Front Fog Lamps Do Not Illuminate (Both Sides)


1. CHECK COMBINATION SWITCH INPUT SIGNAL

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "FR FOG SW" turns ON-OFF linked with operation of lighting switch.

When lighting switch is in FOG position : FR FOG SW ON

OK or NG

- OK >> GO TO 2.
- NG >> Check lighting switch. Refer to [LT-107, "Combination Switch Inspection"](#).

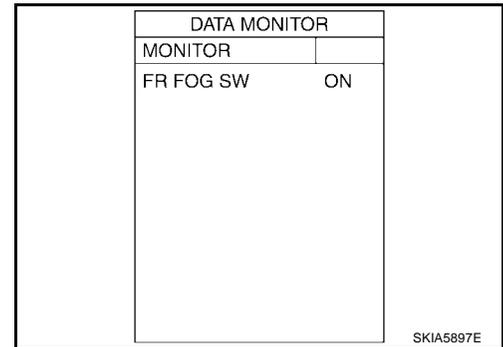


2. FOG LAMP ACTIVE TEST

- Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
- Select "LAMPS" on "SELECT TEST ITEM" screen.
- Touch "FOG" on "ACTIVE TEST" screen.
- Make sure fog lamps operate.

Fog lamps should operate.

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 4.

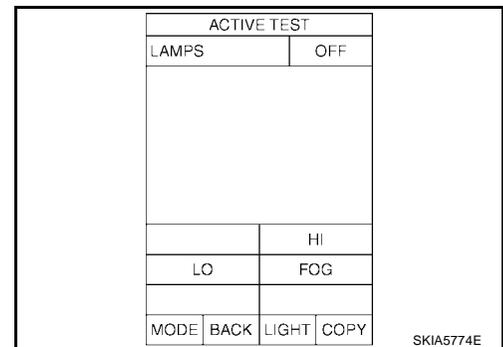

A
B
C
D
E
F
G
H
I
J
LT
L
M

FRONT FOG LAMP


3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "FR FOG REQ" turns ON when lighting switch is in FOG position.

When lighting switch is in FOG position : FR FOG REQ ON

OK or NG


- OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#) .
- NG >> Replace BCM. Refer to [BCS-20, "Removal and Installation of BCM"](#) .

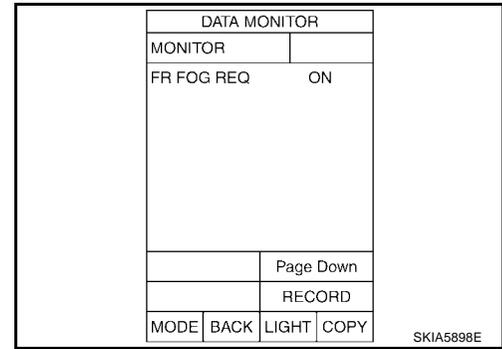

4. IPDM E/R INSPECTION

1. Disconnect front fog lamp LH/RH harness connector.
2. Start auto active test. Refer to [PG-22, "Auto Active Test"](#) . When front fog lamp relay is operating, check voltage between left/right front fog lamp connector terminals and ground.

Front fog lamp		(-)	Voltage (Approx.)	
(+)				
Connector	Terminal	+	Ground	Battery voltage
RH	E101			
LH	E102			

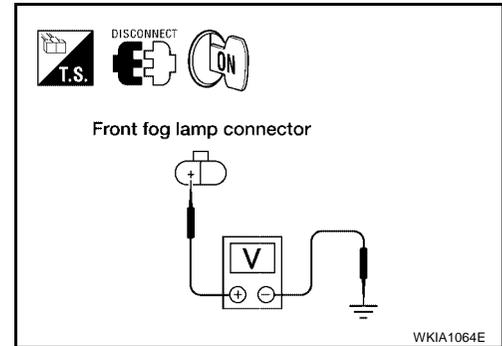

OK or NG

- OK >> Check front fog lamp bulbs and replace as necessary.
- NG >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#) .

Front Fog Lamp Does Not Illuminate (One Side)

EKS00FCE

1. BULB INSPECTION

Inspect bulb of lamp which does not illuminate.

OK or NG

- OK >> GO TO 2.
- NG >> Replace fog lamp bulb. Refer to [LT-70, "Bulb Replacement"](#) .


2. INSPECTION BETWEEN IPDM E/R AND FRONT FOG LAMPS

1. Disconnect IPDM E/R connector and inoperative front fog lamp connector.
2. Check continuity between harness connector terminals of IPDM E/R and inoperative front fog lamp harness connector terminal.

IPDM E/R		Front fog lamp		Continuity	
Connector	Terminal	Connector	Terminal		
E124	36	RH	E101	+	Yes
	37	LH	E102		

OK or NG

- OK >> Check ground circuit. If NG, repair harness or connector. If OK, replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#) .
- NG >> Check for short circuits and open circuits in harness between IPDM E/R and inoperative front fog lamp.

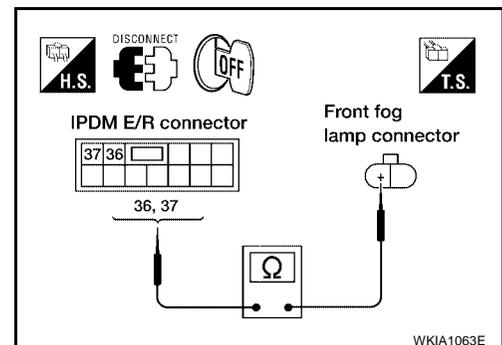

FRONT FOG LAMP


Aiming Adjustment

EKS00FCF


The fog lamp is a semi-sealed beam type which uses a replaceable halogen bulb. Before performing aiming adjustment, make sure of the following.

- Keep all tires inflated to correct pressure.
- Place vehicle on level ground.
- See that vehicle is unloaded (except for full levels of coolant, engine oil and fuel, and spare tire, jack, and tools). Have the driver or equivalent weight placed in driver seat.


Adjust aiming in the vertical direction by turning the adjusting screw.

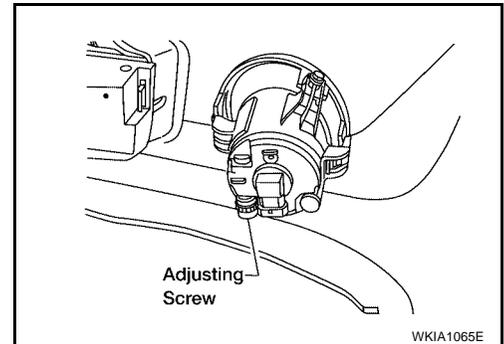

1. Set the distance between the screen and the center of the fog lamp lens as shown.
2. Turn front fog lamps ON.

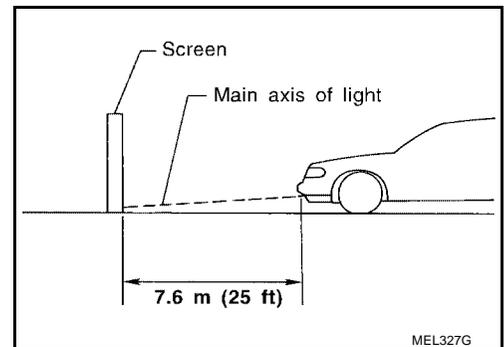

3. Adjust front fog lamps using adjusting screw so that the top edge of the high intensity zone is 100 mm (4 in) below the height of the fog lamp centers as shown.
- When performing adjustment, if necessary, cover the headlamps and opposite fog lamp.

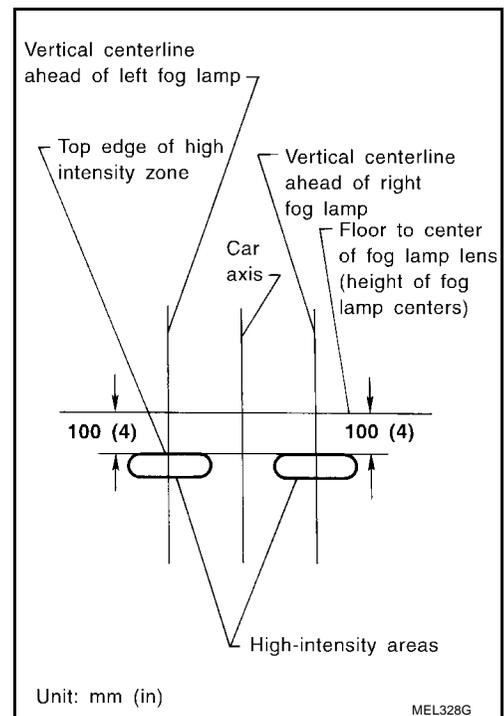

A
B
C
D
E
F
G
H
I
J
LT
L
M

FRONT FOG LAMP

Bulb Replacement


EKS00FCG

1. Position the front fender protector aside.
2. Disconnect electrical connector.
3. Turn the bulb counterclockwise to remove it.

CAUTION:

- Do not touch the glass of bulb directly by hand. Keep grease and other oily substances away from it. Do not touch bulb by hand while it is lit or right after being turned off. Burning may result.
- Do not leave bulb out of fog lamp reflector for a long time because dust, moisture smoke, etc., may affect the performance of fog lamp. When replacing bulb, be sure to replace it with new one.

Installation is in the reverse order of removal.

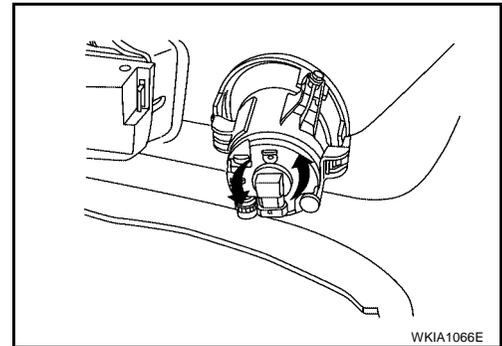

Removal and Installation

EKS00FCH


The fog lamp is a semi-sealed beam type which uses a replaceable halogen bulb.

CAUTION:

- Do not leave fog lamp assembly without bulb for a long period of time. Dust, moisture, smoke, etc. entering the fog lamp body may affect the performance. Remove the bulb from the headlamp assembly just before replacement bulb is installed.
- Grasp only the plastic base when handling the bulb. Never touch the glass envelope. Touching the glass could significantly affect the bulb life and/or fog lamp performance.

1. Position the fender protector aside.
2. Disconnect electrical connector.
3. Remove bolt and pull fog lamp out of front fascia.

Installation is in the reverse order of removal.

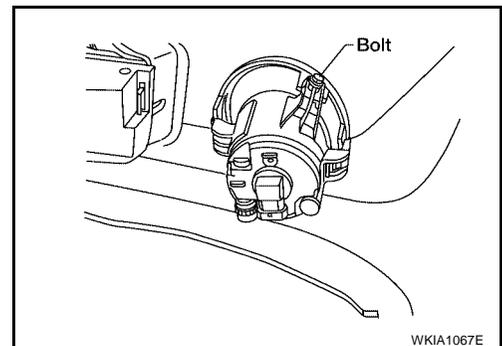


TURN SIGNAL AND HAZARD WARNING LAMPS

PF26120

EKS00FCI

TURN SIGNAL AND HAZARD WARNING LAMPS

Component Parts and Harness Connector Location

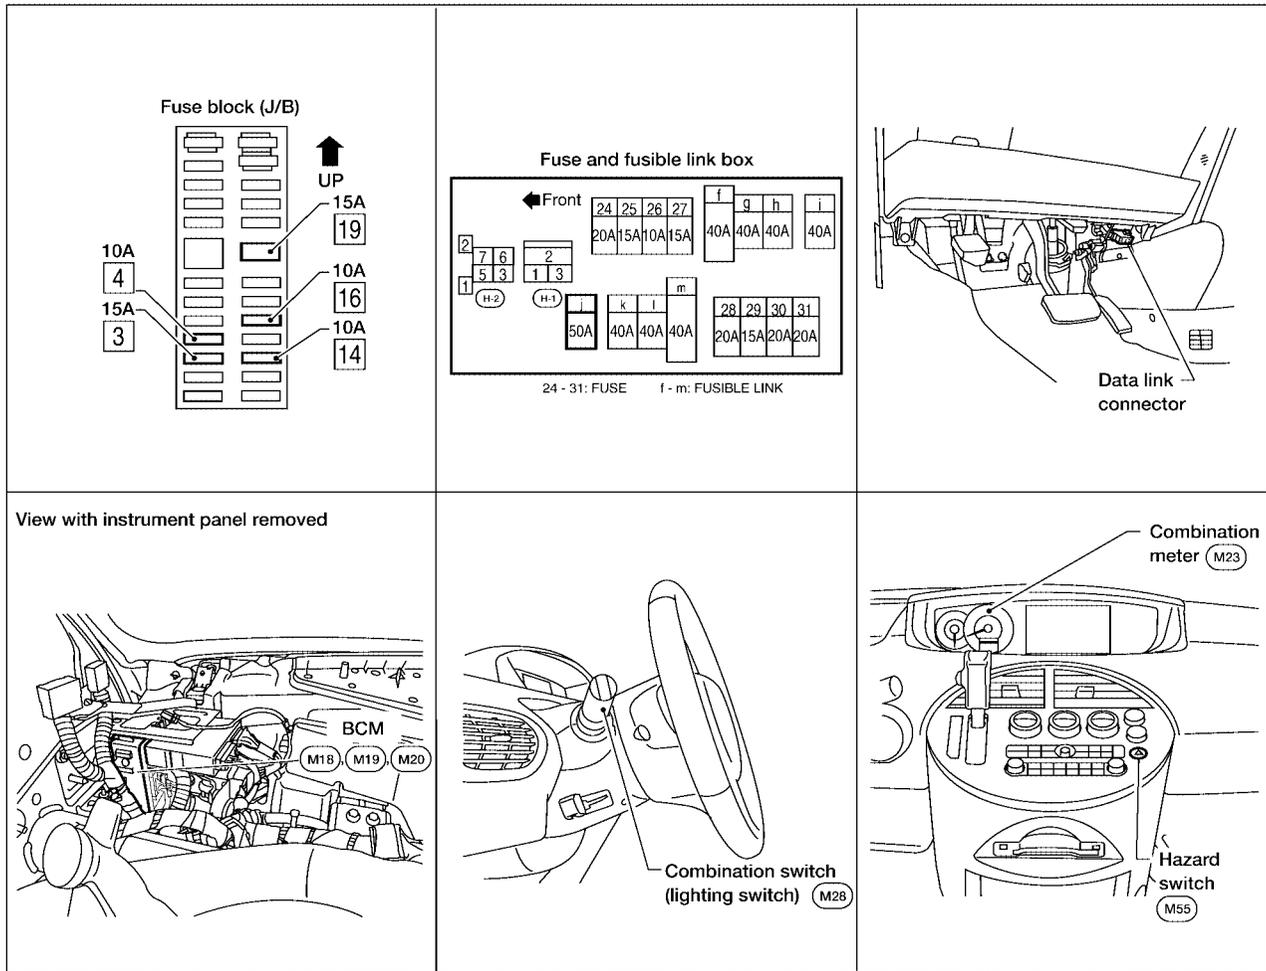

WKIA3143E

System Description

OUTLINE

EKS00FCJ

Power is supplied at all times

- through 50A fusible link (letter j , located in the fuse and fusible link box)
- to BCM (body control module) terminal 55, and
- through 15A fuse [No. 3, located in the fuse block (J/B)]
- to BCM terminal 42, and
- through 15A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 31.

TURN SIGNAL OPERATION

When the ignition switch is in the ON or START position, power is supplied

- through 10A fuse [No. 16, located in the fuse block (J/B)]
- to BCM terminal 38, and
- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to combination meter terminal 30.

Ground is supplied

- to BCM terminal 52 and
- to combination meter terminal 32
- through grounds M57, M61 and M79.

A
B
C
D
E
F
G
H
I
J

LT

L
M

TURN SIGNAL AND HAZARD WARNING LAMPS

LH Turn

When the turn signal switch is moved to the left position, the BCM, interpreting it as turn signal is ON, outputs turn signal from BCM terminal 45.

The BCM supplies power

- through BCM terminal 45
- to front combination lamp LH terminal 6
- through front combination lamp LH terminal 5
- to grounds E9, E15 and E24, and
- to rear combination lamp LH terminal 3
- through rear combination lamp LH terminal 5
- to grounds B7 and B19.

BCM sends signal to combination meter through CAN communication lines and turns on turn signal indicator lamp within combination meter.

RH Turn

When the turn signal switch is moved to the right position, the BCM, interpreting it as turn signal is ON, outputs turn signal from BCM terminal 46.

The BCM supplies power

- through BCM terminal 46
- to front combination lamp RH terminal 6
- through front combination lamp RH terminal 5
- to grounds E9, E15 and E24, and
- to rear combination lamp RH terminal 3
- through rear combination lamp RH terminal 5
- to grounds B117 and B132.

BCM sends signal to combination meter through CAN communication lines and turns on turn signal indicator lamp within combination meter.

HAZARD LAMP OPERATION

Power is supplied at all times

- through 50A fusible link (letter j , located in the fuse and fusible link box)
- to BCM terminal 55, and
- through 15A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 31.

Ground is supplied

- to BCM terminal 52 and
- to combination meter terminal 32
- through grounds M57, M61 and M79.

When the hazard switch is depressed, ground is supplied

- to BCM terminal 29
- through hazard switch terminal 2
- through hazard switch terminal 1
- through grounds M57, M61 and M79.

When the hazard switch is depressed, the BCM, interpreting it as hazard warning lamps are ON, outputs turn signal from BCM terminals 45 and 46.

The BCM supplies power

- through BCM terminals 45 and 46
- to front combination lamp LH and RH terminal 6
- through front combination lamp LH and RH terminal 5
- to grounds E9, E15 and E24, and
- to rear combination lamp LH terminal 3
- through rear combination lamp LH terminal 5

TURN SIGNAL AND HAZARD WARNING LAMPS

- to grounds B7 and B19, and
- to rear combination lamp RH terminal 3
- through rear combination lamp RH terminal 5
- to grounds B117 and B132.

BCM sends signal to combination meter through CAN communication lines and turns on turn signal indicator lamps within combination meter.

REMOTE KEYLESS ENTRY SYSTEM OPERATION

Power is supplied at all times

- through 50A fusible link (letter j , located in the fuse and fusible link box)
- to BCM terminal 55, and
- through 15A fuse [No. 3, located in the fuse block (J/B)]
- to BCM terminal 42, and
- through 15A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 31.

Ground is supplied

- to BCM terminal 52 and
- to combination meter terminal 32
- through grounds M57, M61 and M79.

When the remote keyless entry system is triggered by input from the key fob, the BCM, interpreting it as turn signal is ON, outputs turn signal from BCM terminals 45 and 46.

The BCM supplies power

- through BCM terminals 45 and 46
- to front combination lamp LH and RH terminal 6
- through front combination lamp LH and RH terminal 5
- to grounds E9, E15 and E24, and
- to rear combination lamp LH terminal 3
- through rear combination lamp LH terminal 5
- to grounds B7 and B19, and
- to rear combination lamp RH terminal 3
- through rear combination lamp RH terminal 5
- to grounds B117 and B132.

BCM sends signal to combination meter through CAN communication lines and turns on turn signal indicator lamps within combination meter.

With power and input supplied, the BCM controls the flashing of the hazard warning lamps when key fob is used to activate the remote keyless entry system.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

CAN Communication System Description

Refer to [LAN-24, "CAN COMMUNICATION"](#) .


EKS00FCK

A
B
C
D
E
F
G
H
I
J
LT
L
M

TURN SIGNAL AND HAZARD WARNING LAMPS

Schematic

EKS00FCL

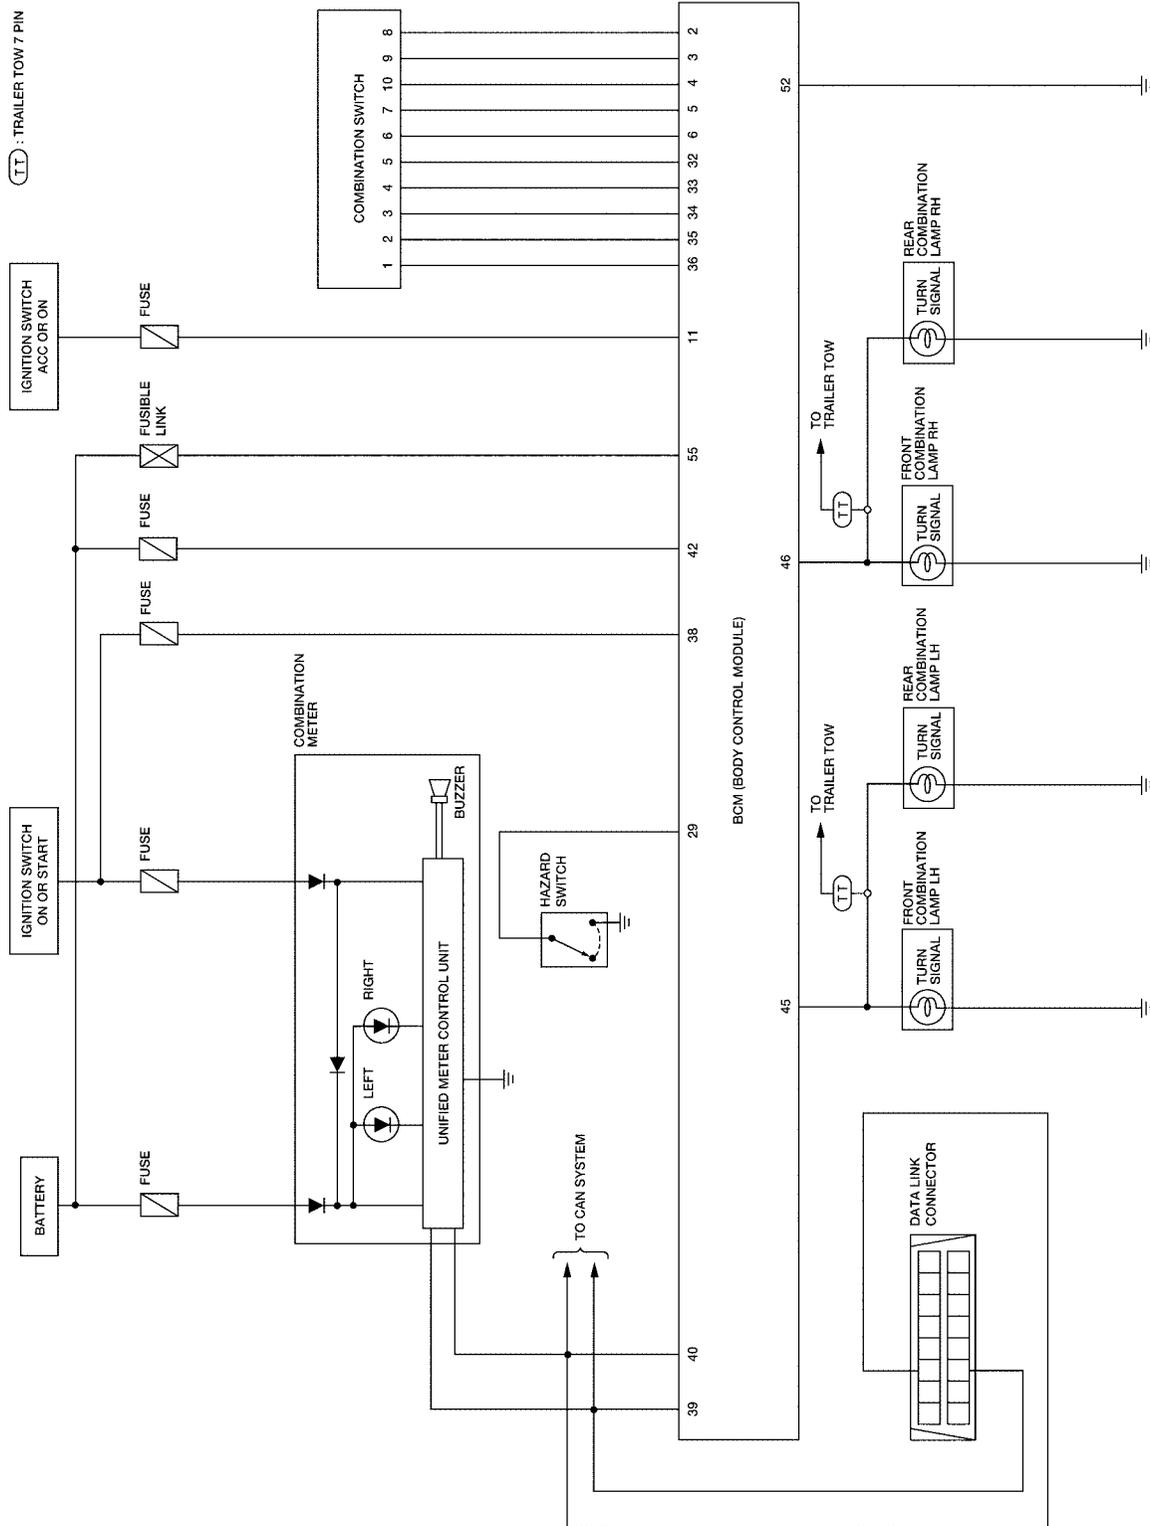



TURN SIGNAL AND HAZARD WARNING LAMPS

Wiring Diagram — TURN —

EKS00FCM

LT-TURN-01




— : DATA LINE

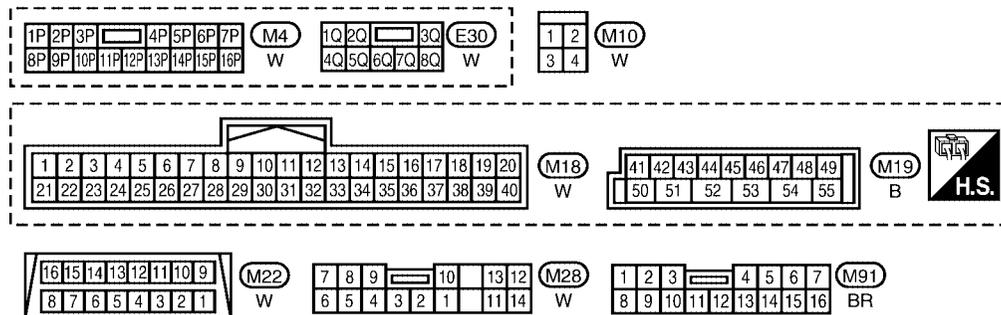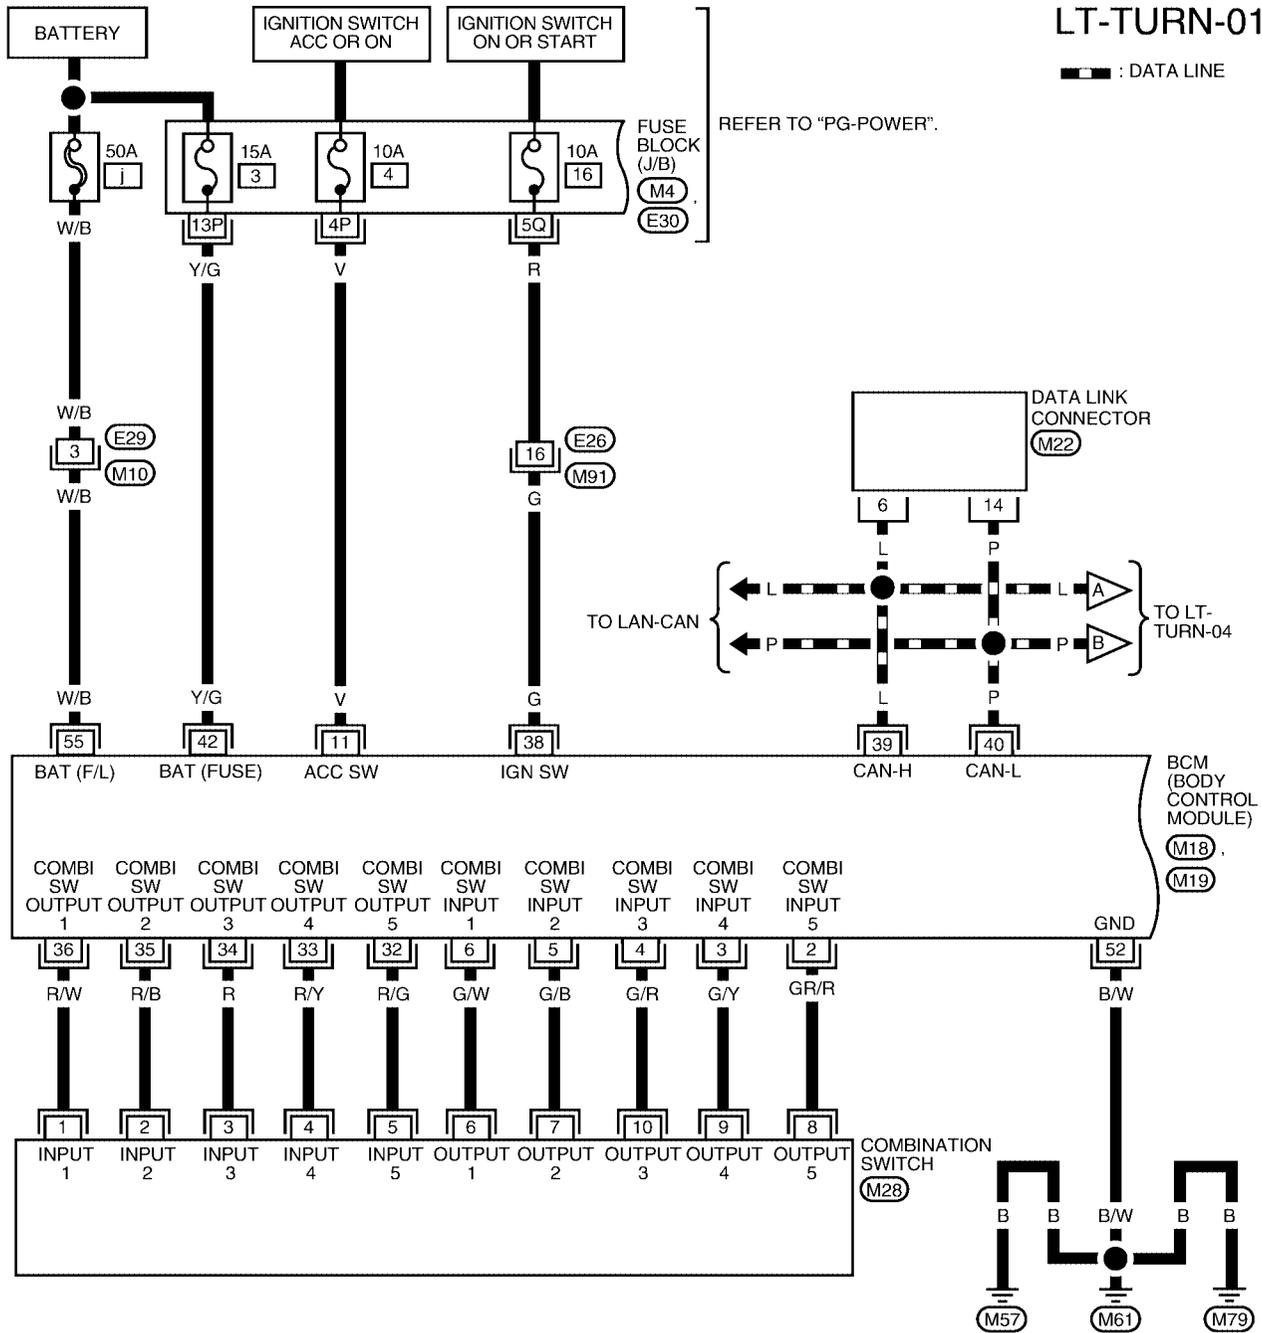

WKWA3213E

TURN SIGNAL AND HAZARD WARNING LAMPS



LT-TURN-02

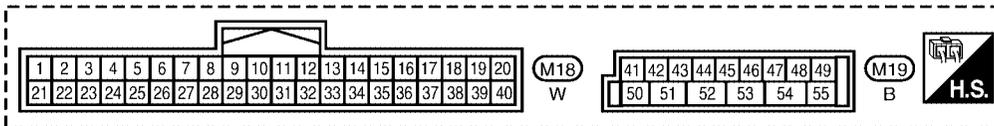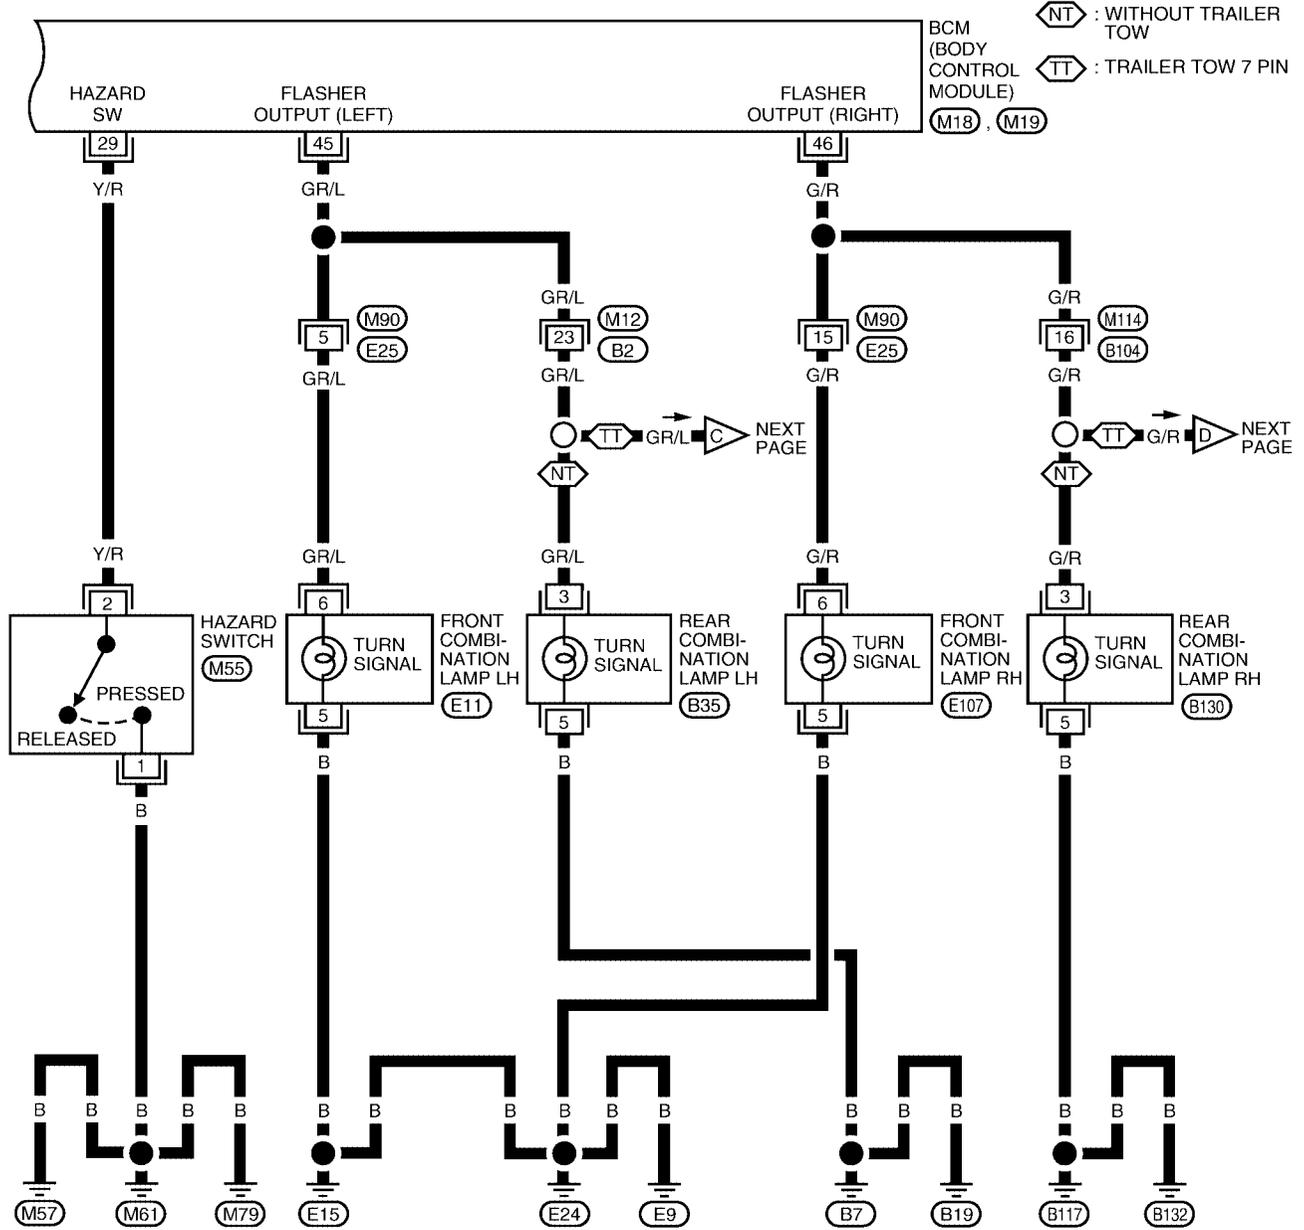

WKWA3214E

TURN SIGNAL AND HAZARD WARNING LAMPS

LT-TURN-03

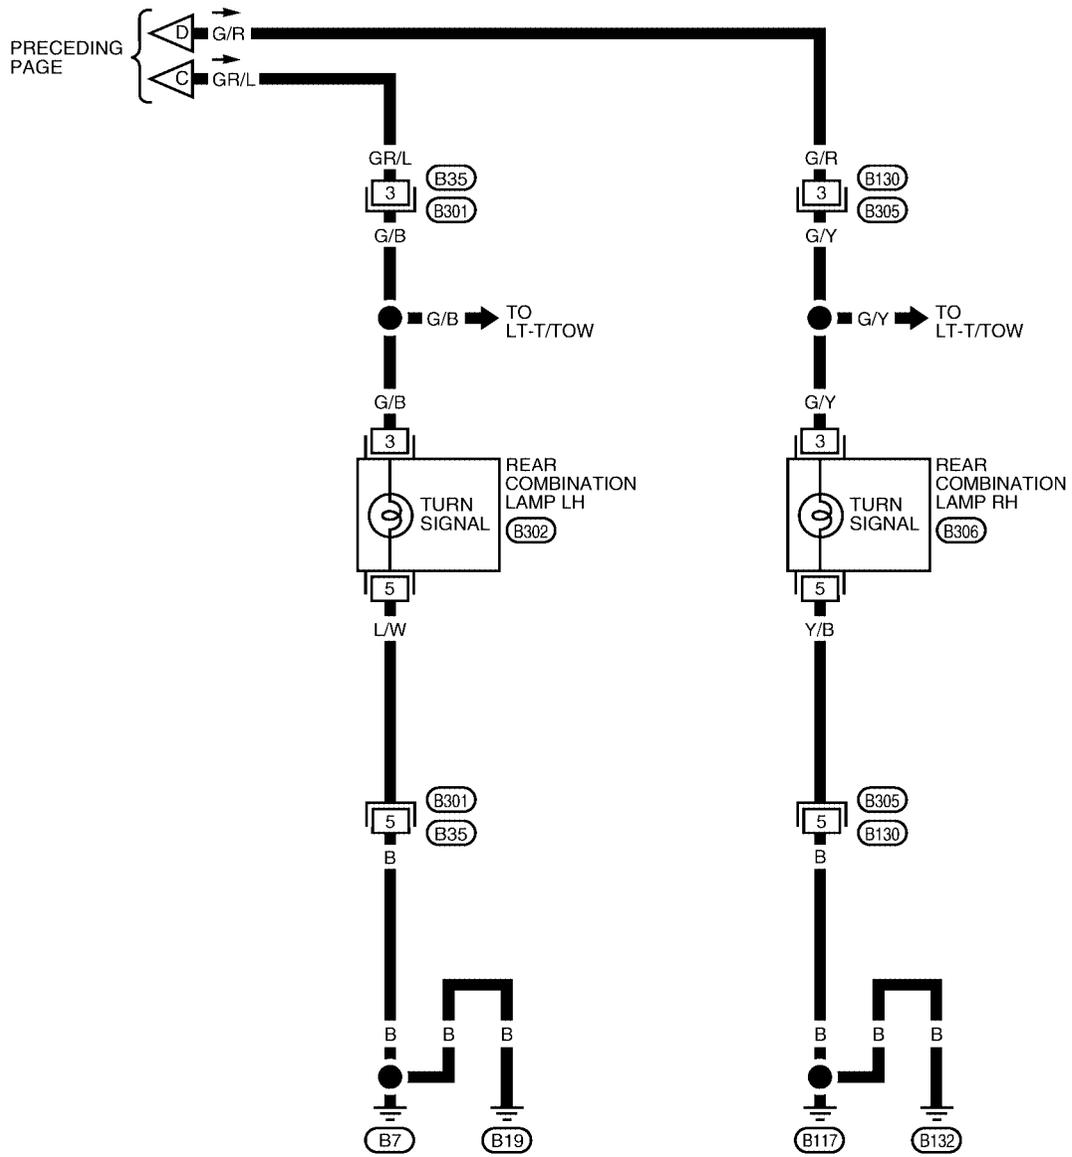


A
B
C
D
E
F
G
H
I
J
LT
L
M

TURN SIGNAL AND HAZARD WARNING LAMPS

LT-TURN-04

▬ : DATA LINE




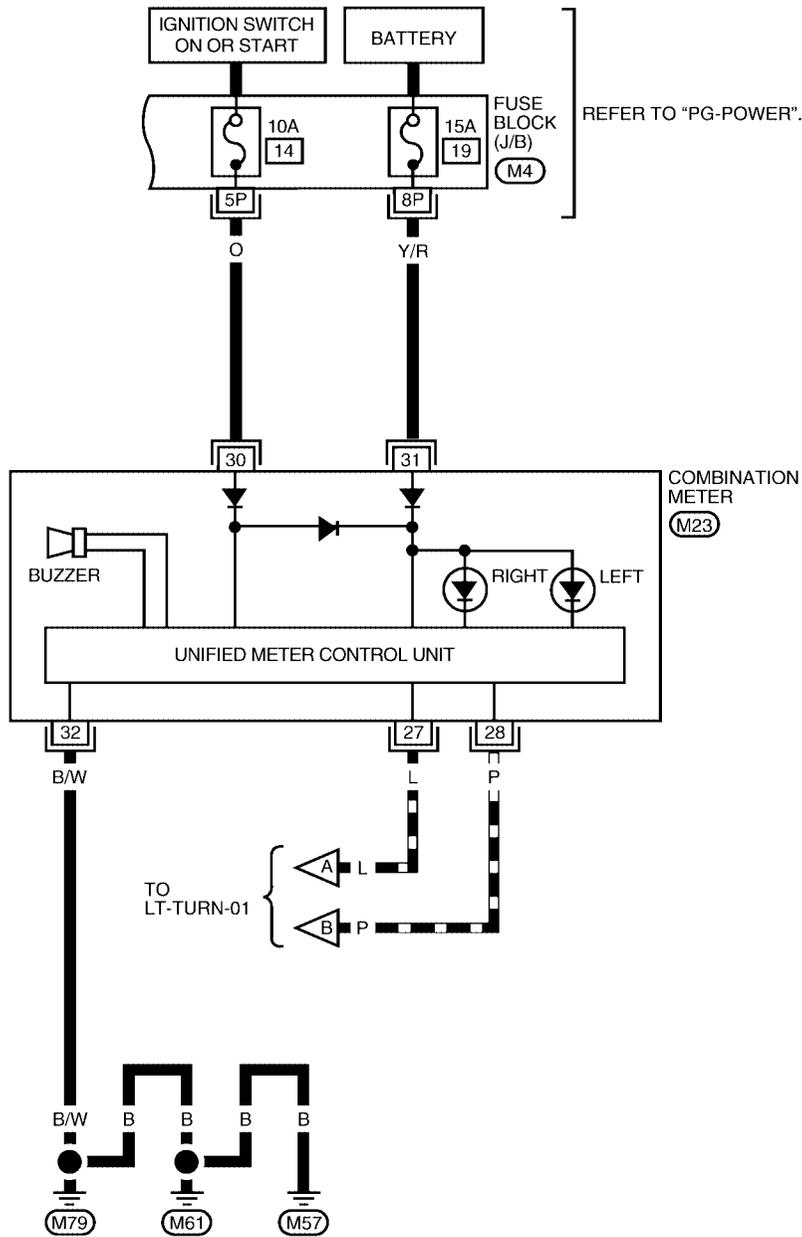


WKWA3215E

TURN SIGNAL AND HAZARD WARNING LAMPS

Terminals and Reference Values for BCM

EKS00FCN

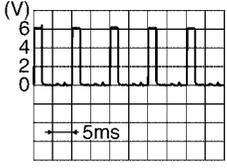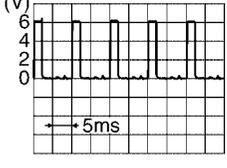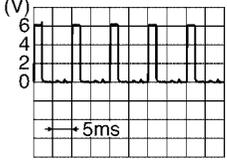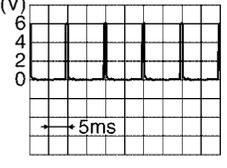Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)	
			Ignition switch	Operation or condition		
2	GR/R	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>	
3	G/Y	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>	
4	G/R	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>	
5	G/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>	
6	G/W	Combination switch input 1				
11	V	Ignition switch (ACC)	ACC	—	Battery voltage	
29	Y/R	Hazard switch signal	OFF	Hazard switch	ON	0V
					OFF	5V
32	R/G	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>	
33	R/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>	

A
B
C
D
E
F
G
H
I
J
LT
L
M

TURN SIGNAL AND HAZARD WARNING LAMPS

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)	
			Ignition switch	Operation or condition		
34	R	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E	
35	R/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E	
36	R/W	Combination switch output 1				
38	G	Ignition switch (ON)	ON	—	Battery voltage	
39	L	CAN-H	—	—	—	
40	P	CAN-L	—	—	—	
42	Y/G	Battery power supply	OFF	—	Battery voltage	
45	GR/L	Turn signal (left)	ON	Combination switch	Turn left ON	 SKIA3009J
46	G/R	Turn signal (right)	ON	Combination switch	Turn right ON	 SKIA3009J
52	B/W	Ground	ON	—	0V	
55	W/B	Battery power supply	OFF	—	Battery voltage	

How to Proceed With Trouble Diagnosis

EKS00FCO

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-71, "System Description"](#).
3. Perform preliminary check. Refer to [LT-81, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction.
5. Do turn signal and hazard warning lamps operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

TURN SIGNAL AND HAZARD WARNING LAMPS

EKS00FCP

Preliminary Check CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES OR FUSIBLE LINK

Check for blown fuses or fusible link.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	j
		3
	Ignition switch ON or START position	16
	Ignition switch ACC or ON position	4

Refer to [LT-75, "Wiring Diagram — TURN —"](#).

OK or NG

OK >> GO TO 2.

NG >> If fuse or fusible link is blown, be sure to eliminate cause of malfunction before installing new fuse or fusible link. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

BCM		(-)	Ignition switch position		
(+)	Terminal		OFF	ACC	ON
M18	11	Ground	0V	Battery voltage	Battery voltage
	38		0V	0V	Battery voltage
M19	42		Battery voltage	Battery voltage	Battery voltage
	55		Battery voltage	Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse or fusible link.

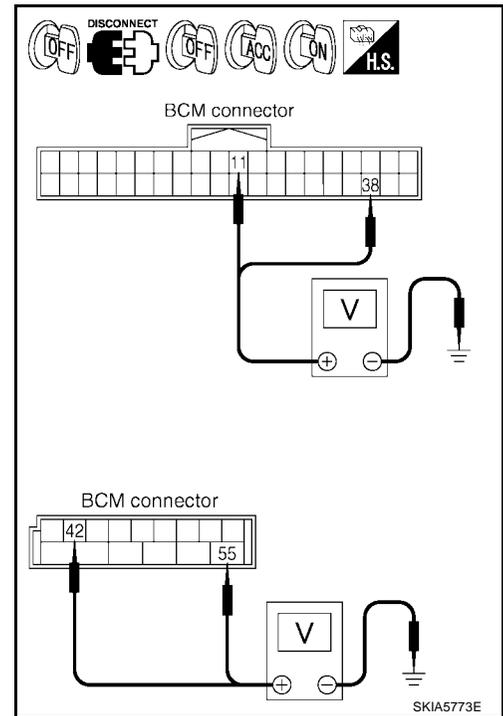

3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

BCM		Continuity
Connector	Terminal	
M19	52	Ground Yes

OK or NG

OK >> Inspection End.

NG >> Check ground circuit harness.

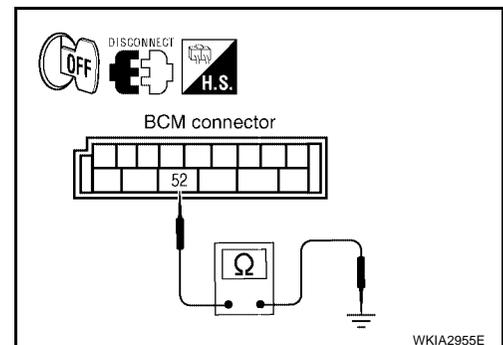

TURN SIGNAL AND HAZARD WARNING LAMPS

CONSULT-II Function (BCM)

EKS00FCQ

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

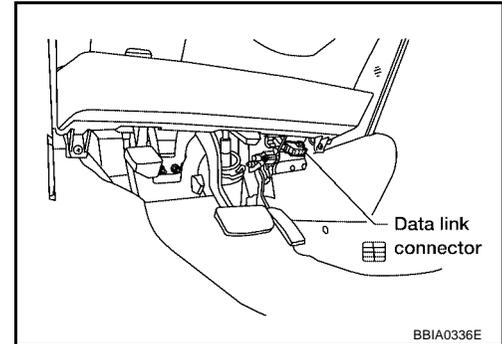

2. Touch "START (NISSAN BASED VHCL)".

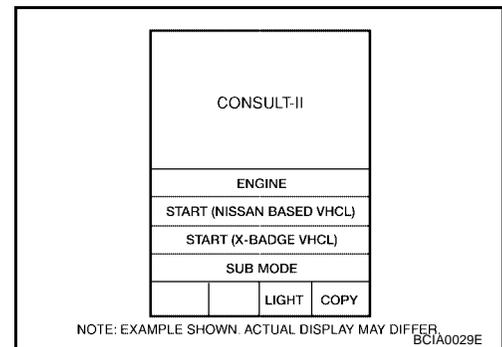

3. Touch "BCM" on "SELECT SYSTEM" screen. If "BCM" is not indicated, go to [GI-38, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

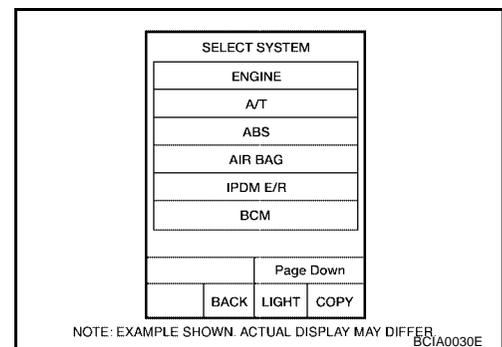

TURN SIGNAL AND HAZARD WARNING LAMPS

4. Touch "FLASHER" on "SELECT TEST ITEM" screen.

SELECT TEST ITEM			
HEAD LAMP			
WIPER			
FLASHER			
AIR CONDITIONER			
COMB SW			
BCM			
Scroll Up		Page Down	
BACK	LIGHT	COPY	

LKIA0183E

DATA MONITOR

Operation Procedure

1. Touch "FLASHER" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors the individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
HAZARD SW "ON/OFF"	Displays "Hazard ON (ON)/Hazard OFF (OFF)" status, determined from hazard switch signal.
TURN SIGNAL R "ON/OFF"	Displays "Turn right (ON)/Other (OFF)" status, determined from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays "Turn left (ON)/Other (OFF)" status, determined from lighting switch signal.
BRAKE SW "OFF"	Displays status of parking brake switch.

ACTIVE TEST

Operation Procedure

1. Touch "FLASHER" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

Display Item List

Test item	Description
FLASHER (RH)	Turn signal lamp (RH) can be operated by any ON-OFF operations.
FLASHER (LH)	Turn signal lamp (LH) can be operated by any ON-OFF operations.

TURN SIGNAL AND HAZARD WARNING LAMPS

EKS00FQF

Turn Signal Lamp Does Not Operate

1. CHECK COMBINATION SWITCH INPUT SIGNAL

Ⓟ With CONSULT-II

Select "BCM" on CONSULT-II. With "FLASHER" data monitor, make sure "TURN SIGNAL R" and "TURN SIGNAL L" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in : TURN SIGNAL R ON
TURN RH position**

**When lighting switch is in : TURN SIGNAL L ON
TURN LH position**


ⓧ Without CONSULT-II

Refer to [LT-107, "Combination Switch Inspection"](#).

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-107, "Combination Switch Inspection"](#).

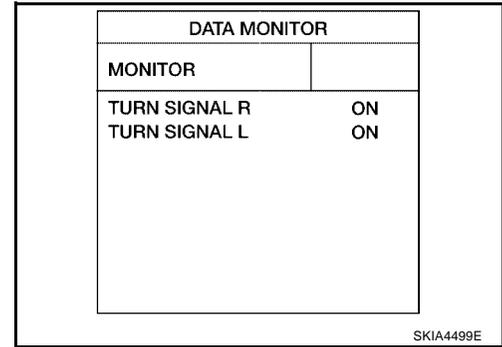

2. ACTIVE TEST

Ⓟ With CONSULT-II

1. Select "FLASHER" during active test. Refer to [LT-83, "ACTIVE TEST"](#).

2. Make sure "FLASHER RH" and "FLASHER LH" operate.


ⓧ Without CONSULT-II

GO TO 3.

OK or NG

OK >> Replace BCM. Refer to [BCS-20, "Removal and Installation of BCM"](#).

NG >> GO TO 3.

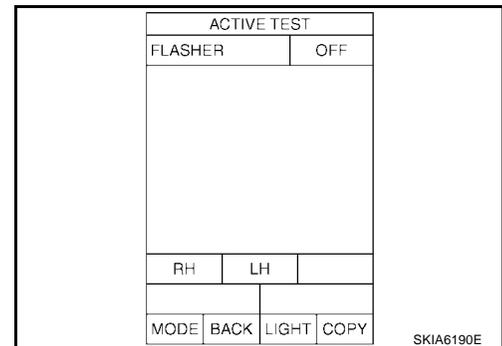

3. CHECK TURN SIGNAL LAMP CIRCUIT

1. Turn ignition switch OFF.

2. Disconnect BCM connector and inoperative front combination lamp harness connector.


3. Check continuity between BCM harness connector terminal and inoperative front combination lamp harness connector terminal.

A		B			Continuity	
BCM connector	Terminal	Front combination lamp connector		Terminal		
RH	M19	46	RH	E107	6	Yes
LH		45	LH	E11		

OK or NG

OK >> GO TO 4.

NG >> Repair harness or connector.

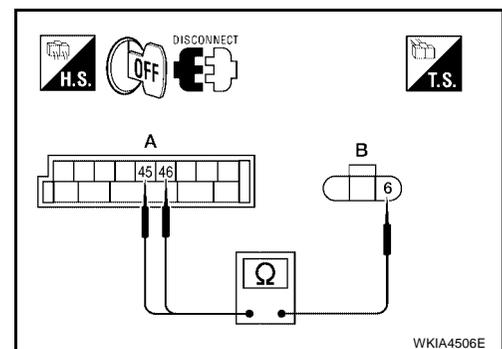

TURN SIGNAL AND HAZARD WARNING LAMPS


4. CHECK GROUND

Check continuity between inoperative front combination lamp harness connector terminal and ground.

Terminals			Continuity
Front combination lamp connector	Terminal		
RH	E107	5	Ground
LH	E11		
			Yes

OK or NG

- OK >> GO TO 5.
- NG >> Repair harness or connector.

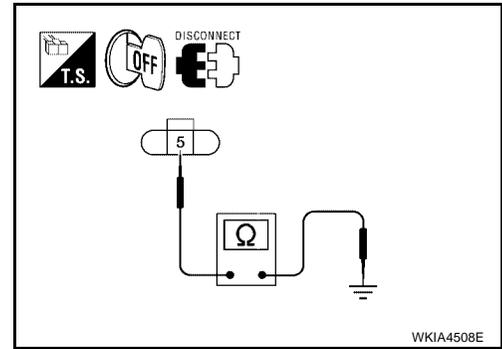

5. CHECK BULB

Check bulb standard of each turn signal lamp is correct. Refer to [LT-177, "Exterior Lamp"](#).

OK or NG

- OK >> Replace BCM if turn signal lamps do not work after setting the connector again. Refer to [BCS-20, "Removal and Installation of BCM"](#).
- NG >> Replace turn signal lamp bulb. Refer to [LT-88, "Bulb Replacement \(Front Turn Signal Lamp\)"](#).

Rear Turn Signal Lamp Does Not Operate

EKS00FCS

1. CHECK TAIL LAMPS AND STOP LAMPS

Check bulb standard of each turn signal lamp is correct. Refer to [LT-177, "Exterior Lamp"](#).

OK or NG


- OK >> GO TO 2.
- NG >> Replace turn signal lamp bulb. Refer to [LT-88, "Bulb Replacement \(Rear Turn Signal Lamp\)"](#).

2. CHECK TURN SIGNAL LAMPS CIRCUIT

1. Disconnect BCM connector and rear combination lamp connector.
2. Check continuity between BCM harness connector M19 terminal 46 and rear combination lamp RH harness connector B130 (without trailer tow), B306 (with trailer tow) terminal 3.

46 - 3 : Continuity should exist.
3. Check continuity between BCM harness connector M19 terminal 45 and rear combination lamp LH harness connector B35 (without trailer tow), B302 (with trailer tow) terminal 3.

45 - 3 : Continuity should exist.

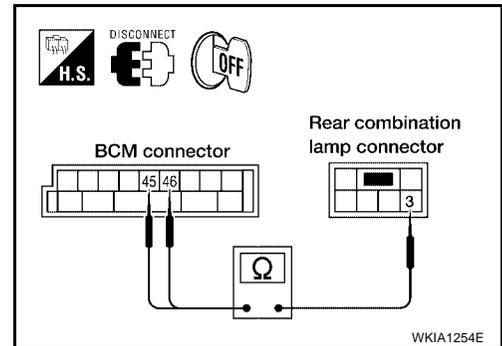

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.

TURN SIGNAL AND HAZARD WARNING LAMPS


3. CHECK GROUND CIRCUIT

Check continuity between rear combination lamp harness connector B35 (without trailer tow), B302 (with trailer tow) LH and B130 (without trailer tow), B306 (with trailer tow) RH terminal 5 and ground.

5 - Ground : Continuity should exist.

OK or NG

- OK >> Check rear combination lamp connector for proper connection. Repair as necessary.
- NG >> Repair harness or connector.

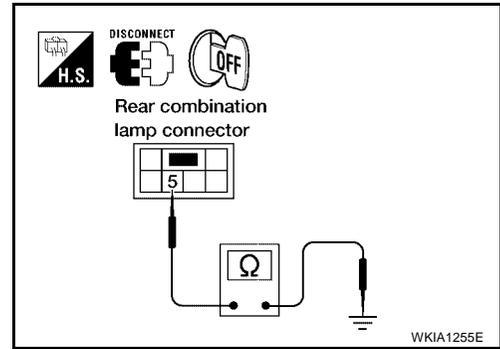

Hazard Warning Lamp Does Not Operate But Turn Signal Lamps Operate

EKS00FCT

1. CHECK BULB

Make sure bulb standard of each turn signal lamp is correct. Refer to [LT-177, "Exterior Lamp"](#).

OK or NG


- OK >> GO TO 2.
- NG >> Replace turn signal lamp bulb. Refer to [LT-88, "Bulb Replacement \(Front Turn Signal Lamp\)"](#) for front turn signal bulb. Refer to [LT-88, "Bulb Replacement \(Rear Turn Signal Lamp\)"](#) for rear turn signal bulb.

2. CHECK HAZARD SWITCH INPUT SIGNAL

Ⓟ With CONSULT-II

Select "BCM" on CONSULT-II. With "FLASHER" data monitor, make sure "HAZARD SW" turns ON-OFF linked with operation of hazard switch.

When hazard switch is in ON position : HAZARD SW ON

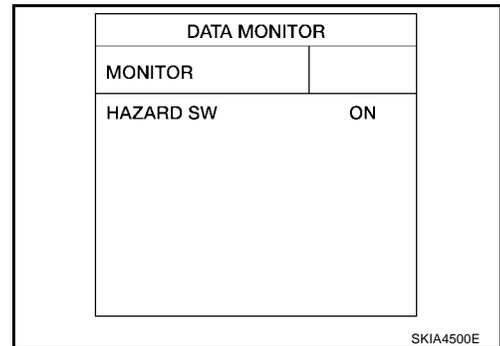


ⓧ Without CONSULT-II

Check voltage between BCM harness connector M18 terminal 29 and ground.

BCM (+)		(-)	Condition	Voltage (Approx.)
Connector	Terminal			
M18	29	Ground	Hazard switch is ON	0V
			Hazard switch is OFF	5V

OK or NG

- OK >> Replace BCM. Refer to [BCS-20, "Removal and Installation of BCM"](#).
- NG >> GO TO 3.

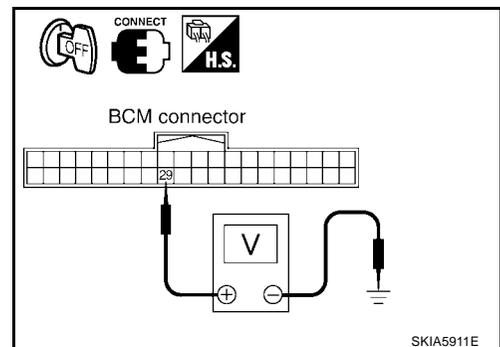

TURN SIGNAL AND HAZARD WARNING LAMPS


3. CHECK HAZARD SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and hazard switch connector.
3. Check continuity between BCM harness connector M18 terminal 29 and hazard switch harness connector M55 terminal 2.

29 - 2 : Continuity should exist.

OK or NG

- OK >> GO TO 4.
 NG >> Repair harness or connector.

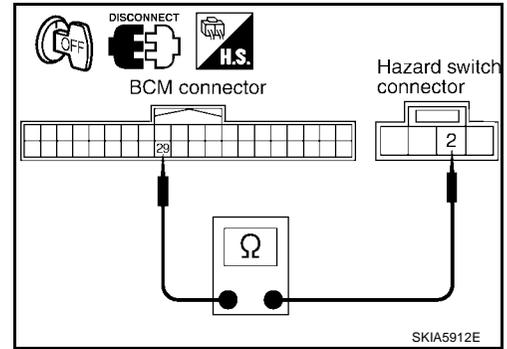


4. CHECK GROUND

Check continuity between hazard switch harness connector M55 terminal 1 and ground.

1 - Ground : Continuity should exist.

OK or NG

- OK >> GO TO 5.
 NG >> Repair harness or connector.

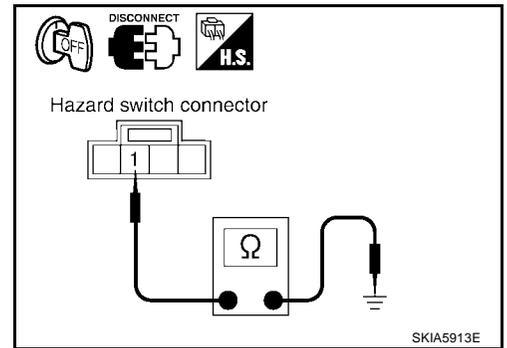


5. CHECK HAZARD SWITCH

Check continuity of hazard switch.

Hazard switch		Condition	Continuity
Terminal			
1	2	Hazard switch is ON	Yes
		Hazard switch is OFF	No

OK or NG

- OK >> Replace BCM if hazard warning lamps do not work after setting the connector again. Refer to [BCS-20, "Removal and Installation of BCM"](#) .
 NG >> Replace hazard switch. Refer to [LT-103, "Removal and Installation"](#) .

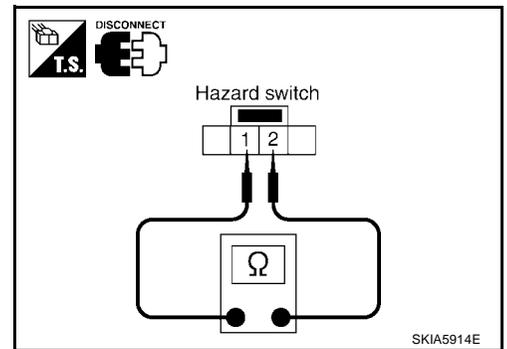

Turn Signal Indicator Lamp Does Not Operate

EKS00FCU

1. CHECK CAN COMMUNICATION SYSTEM

Check CAN communication. Refer to [LAN-24, "CAN COMMUNICATION"](#) .

OK or NG

- OK >> Replace combination meter. Refer to [IP-12, "COMBINATION METER"](#) .
 NG >> Repair as necessary.

TURN SIGNAL AND HAZARD WARNING LAMPS

Bulb Replacement (Front Turn Signal Lamp)

EKS00FCV

Refer to [LT-30, "FRONT TURN SIGNAL/PARKING LAMP"](#) .

Bulb Replacement (Rear Turn Signal Lamp)

EKS00FCW

Refer to [LT-131, "Bulb Replacement"](#) in REAR COMBINATION LAMP.

Removal and Installation of Front Turn Signal Lamp

EKS00FCX

Refer to [LT-31, "Removal and Installation"](#) .

Removal and Installation of Rear Turn Signal Lamp

EKS00FCY

Refer to [LT-131, "Removal and Installation"](#) in REAR COMBINATION LAMP.


CORNERING LAMP

PF26100

EKS00FCZ

CORNERING LAMP

Component Parts and Harness Connector Location

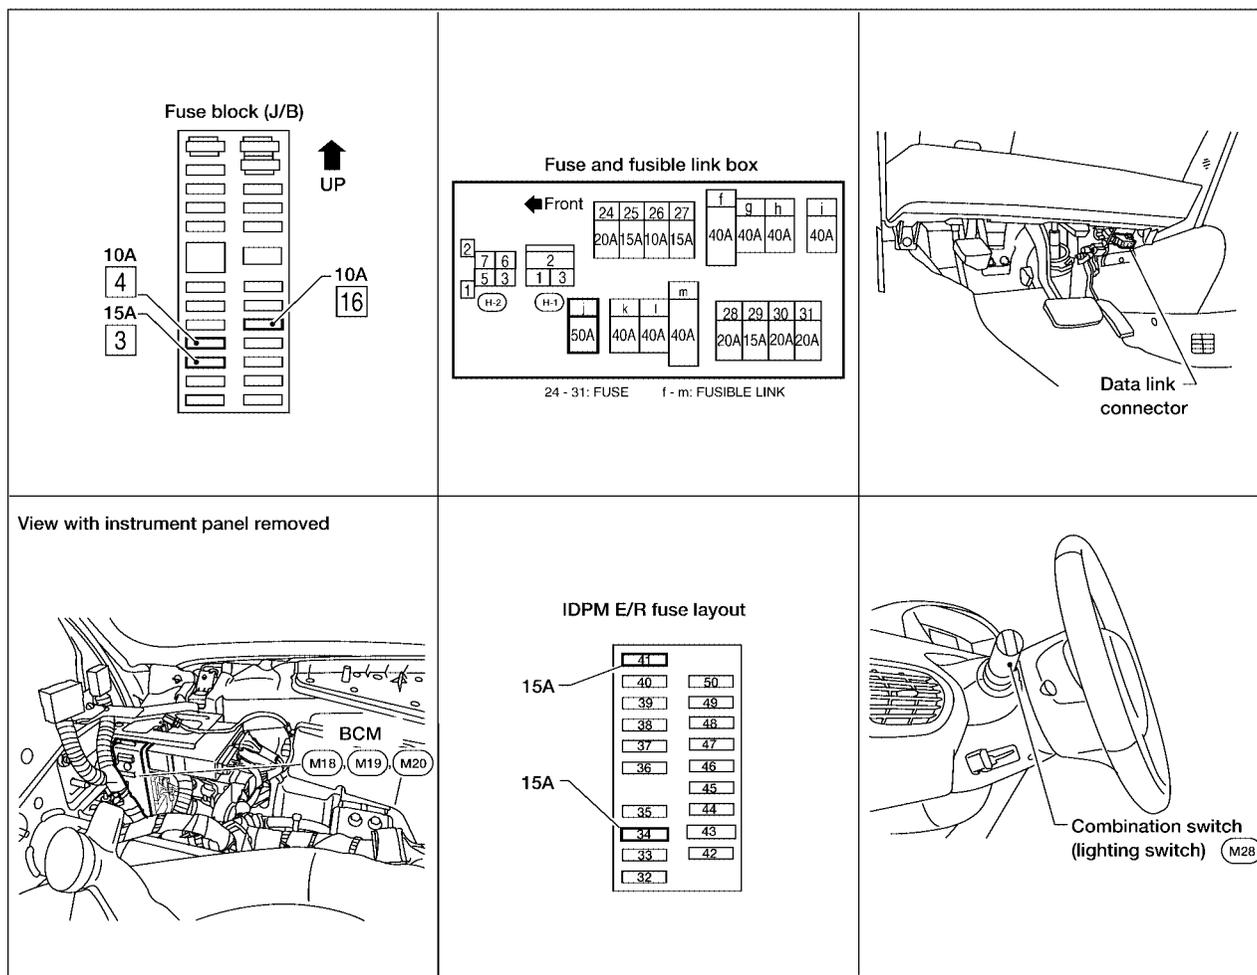

WKA3450E

System Description

OUTLINE

EKS00FD0

Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and
- through 50A fusible link (letter j, located in the fuse and fusible link box)
- to BCM (body control module) terminal 55, and
- through 15A fuse [No. 3, located in the fuse block (J/B)]
- to BCM terminal 42, and
- through 15A fuse (No. 34, located in the IPDM E/R)
- to CPU (central processing unit) of the IPDM E/R, and
- through 15A fuse (No. 41, located in the IPDM E/R)
- to cornering lamp relay LH and RH.

CORNERING LAMP OPERATION

When the ignition switch is in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 16, located in the fuse block (J/B)]
- to BCM terminal 38.

Ground is supplied

- to BCM terminal 52
- through grounds M57, M61 and M79, and

LT

A
B
C
D
E
F
G
H
I
J

CORNERING LAMP

- to IPDM E/R terminals 38 and 60
- through grounds E9, E15 and E24.

LH Turn

When the lighting switch is in the 2nd position or in the AUTO position (headlamp ON) and turn signal switch is moved to the left position, BCM sends signal through CAN communication lines to IPDM E/R. IPDM E/R then operates cornering lamp relay LH. When this relay is energized, power is supplied

- through IPDM E/R terminal 34
- to front combination lamp LH terminal 7.

Ground is supplied

- to front combination lamp LH terminal 8
- through grounds E9, E15 and E24.

RH Turn

When the lighting switch is in the 2nd position or in the AUTO position (headlamp ON) and turn signal switch is moved to the right position, BCM sends signal through CAN communication lines to IPDM E/R. IPDM E/R then operates cornering lamp relay RH. When this relay is energized, power is supplied

- through IPDM E/R terminal 23
- to front combination lamp RH terminal 7.

Ground is supplied

- to front combination lamp RH terminal 8
- through grounds E9, E15 and E24.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

CAN Communication System Description


Refer to [LAN-24, "CAN COMMUNICATION"](#) .

EKS00FD1

CORNERING LAMP

Schematic

EKS00FD2

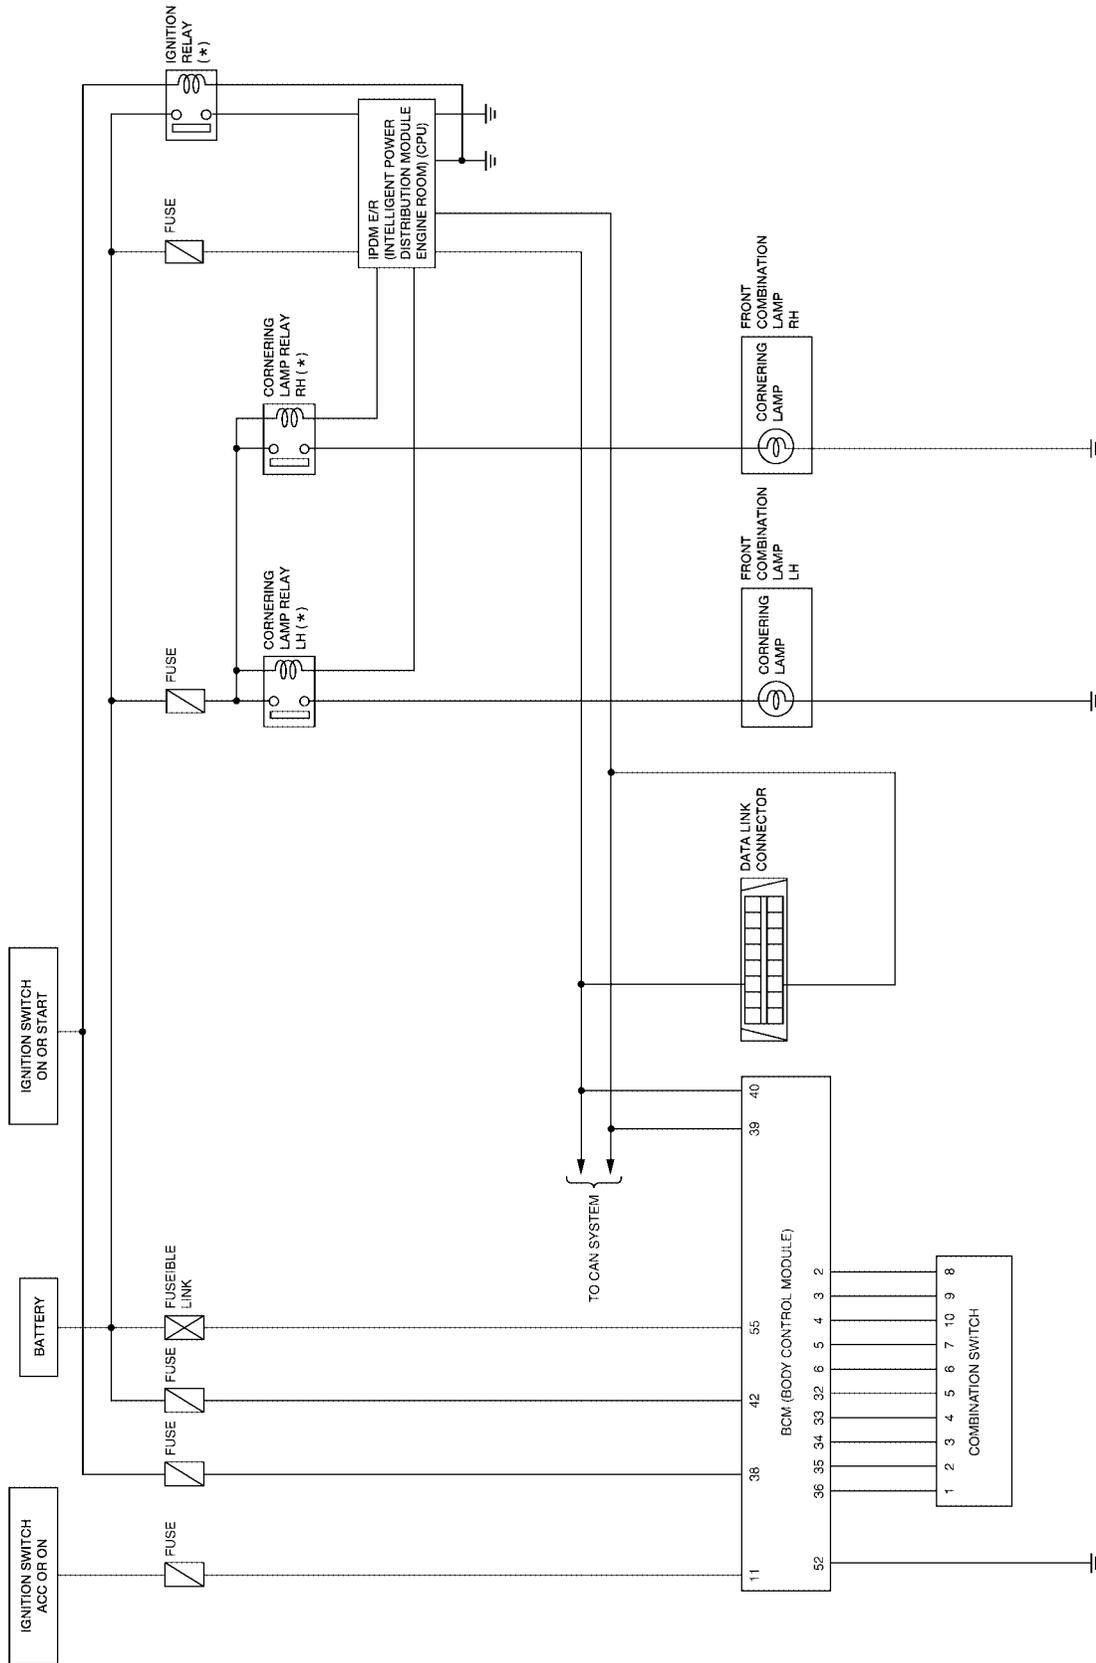

* : THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM).



A
B
C
D
E
F
G
H
I
J
LT
L
M

CORNERING LAMP

EKS00FD3

Wiring Diagram — CORNER —


LT-CORNER-01

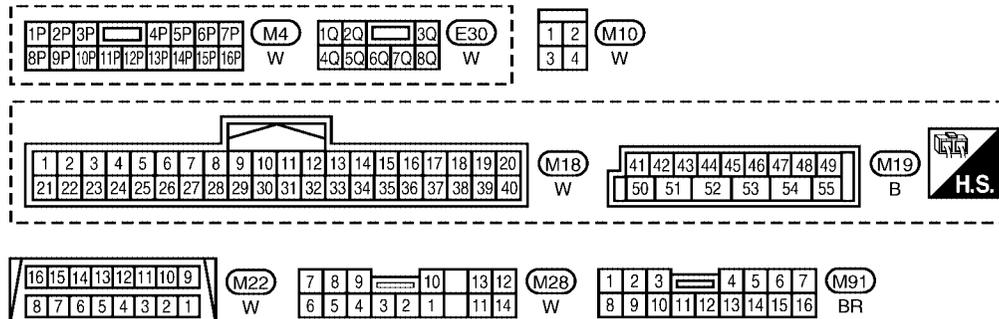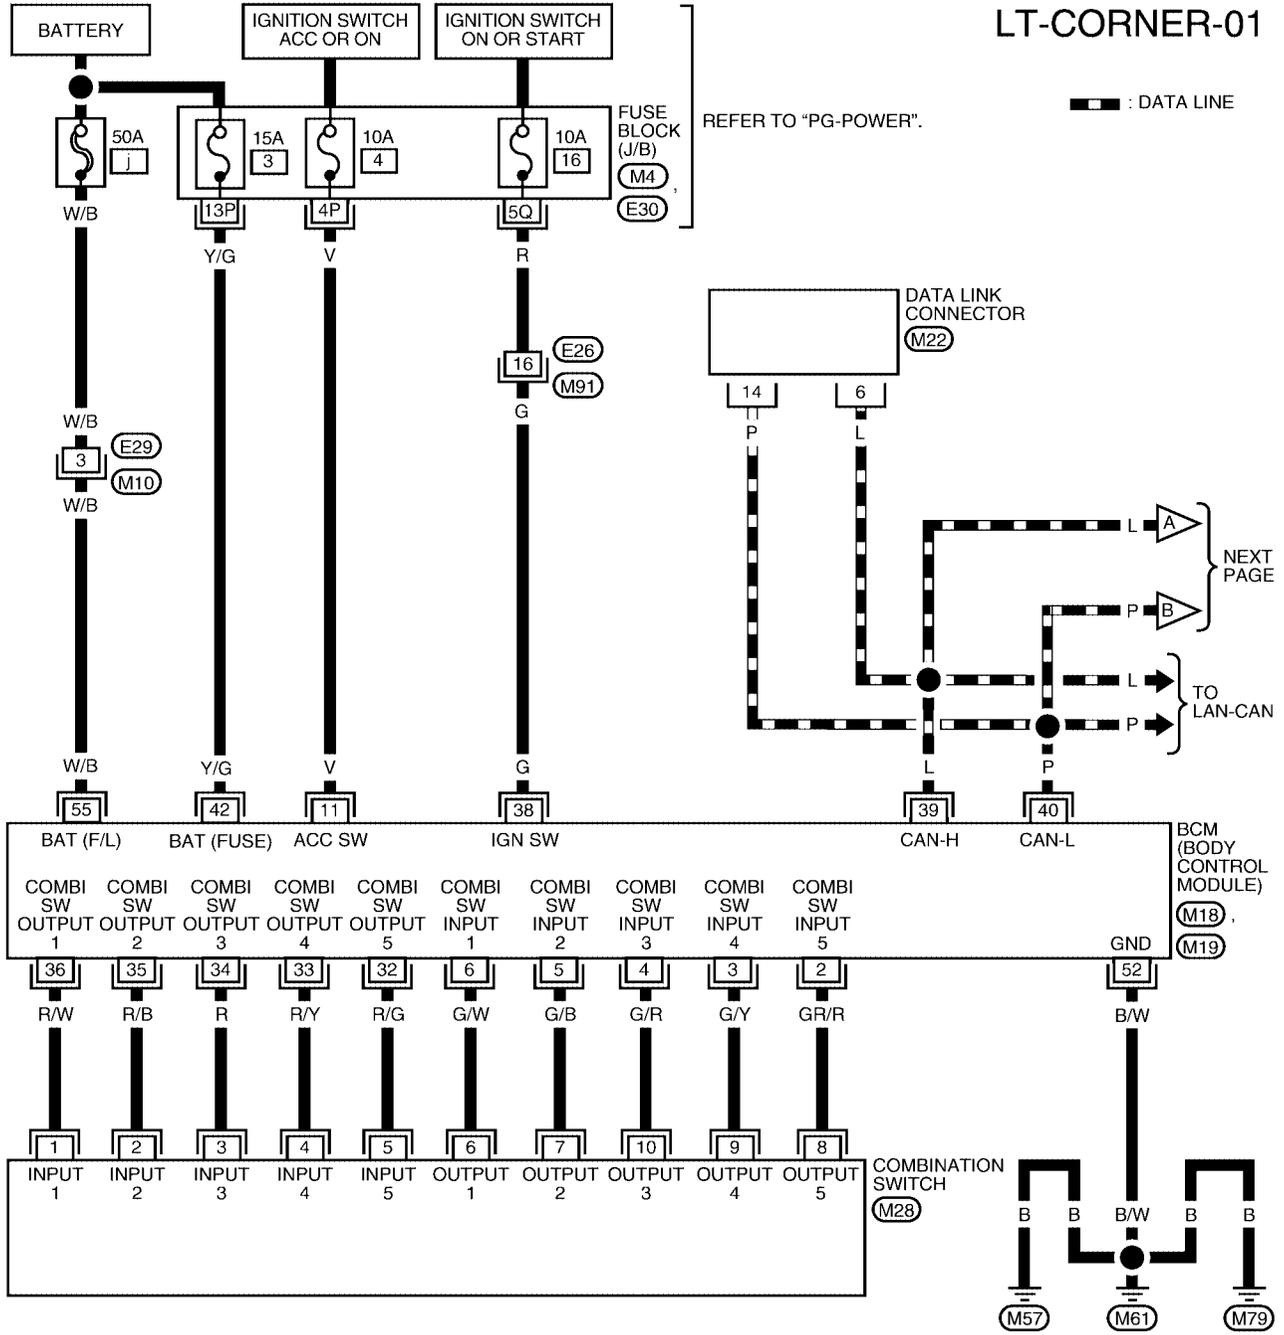

WKWA3217E

CORNERING LAMP

LT-CORNER-02

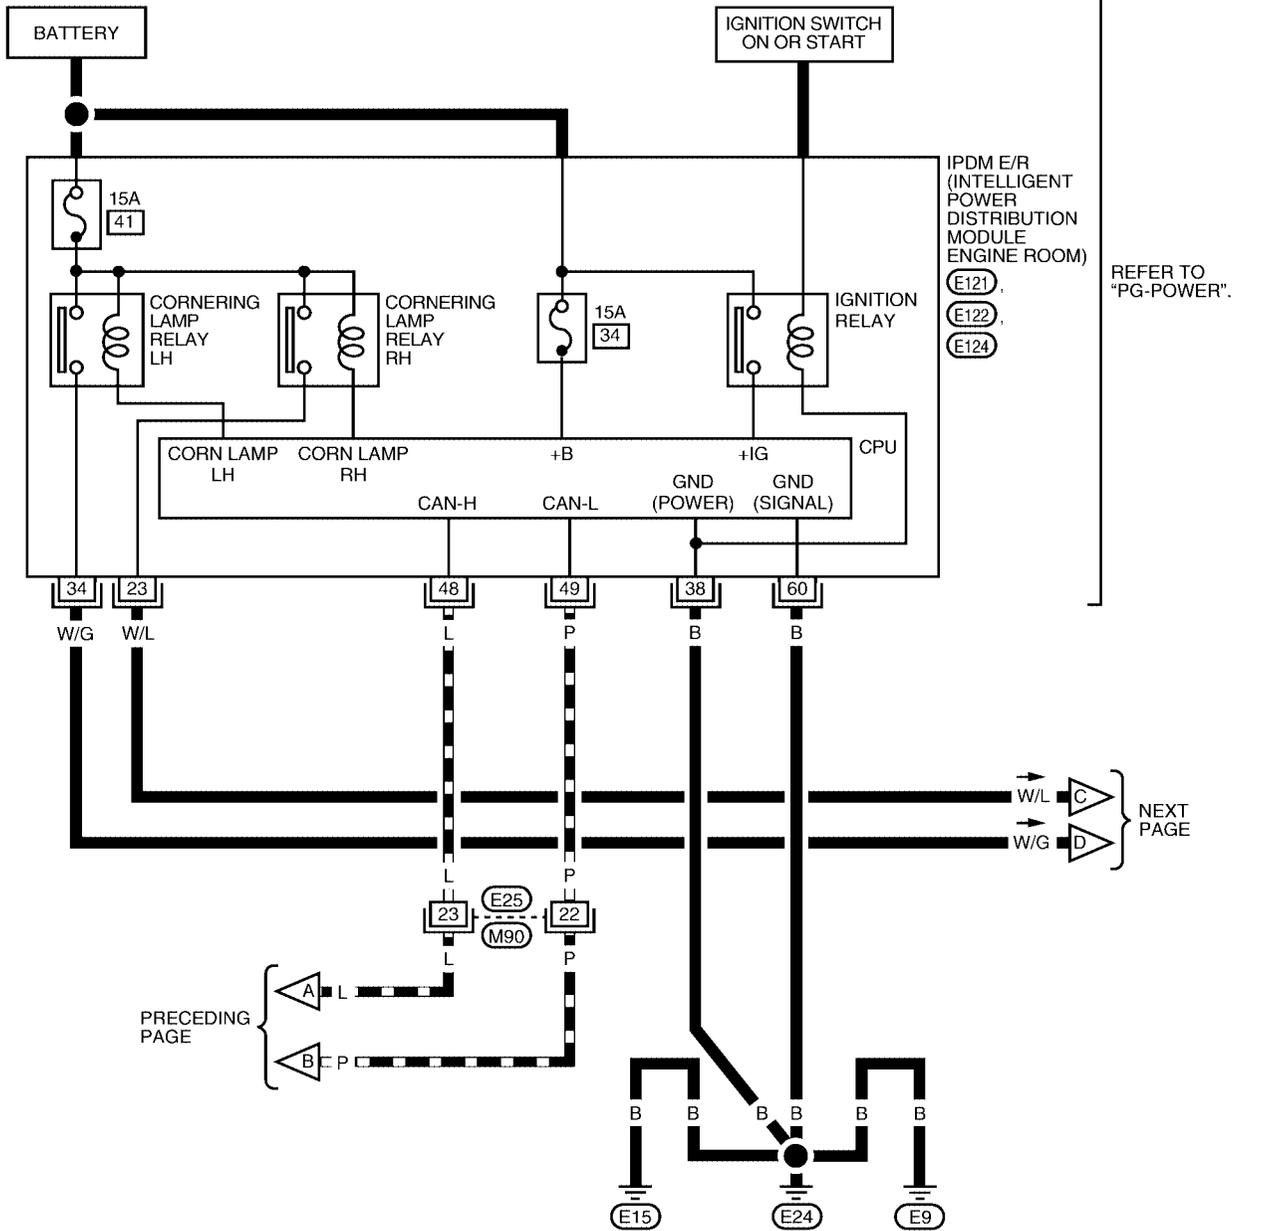


1	2	3	4	5	6	7	8	9	10	11	(M90)		
12	13	14	15	16	17	18	19	20	21	22	23	24	W

45	46	47	48	49	50	51	52	(E121)	17	18	19	20	21	22	23	(E122)	33	34	35	36	37	(E124)				
53	54	55	56	57	58	59	60	W	24	25	26	27	28	29	30	31	32	GR	38	39	40	41	42	43	44	W

WKWA3528E

CORNERING LAMP

LT-CORNER-03







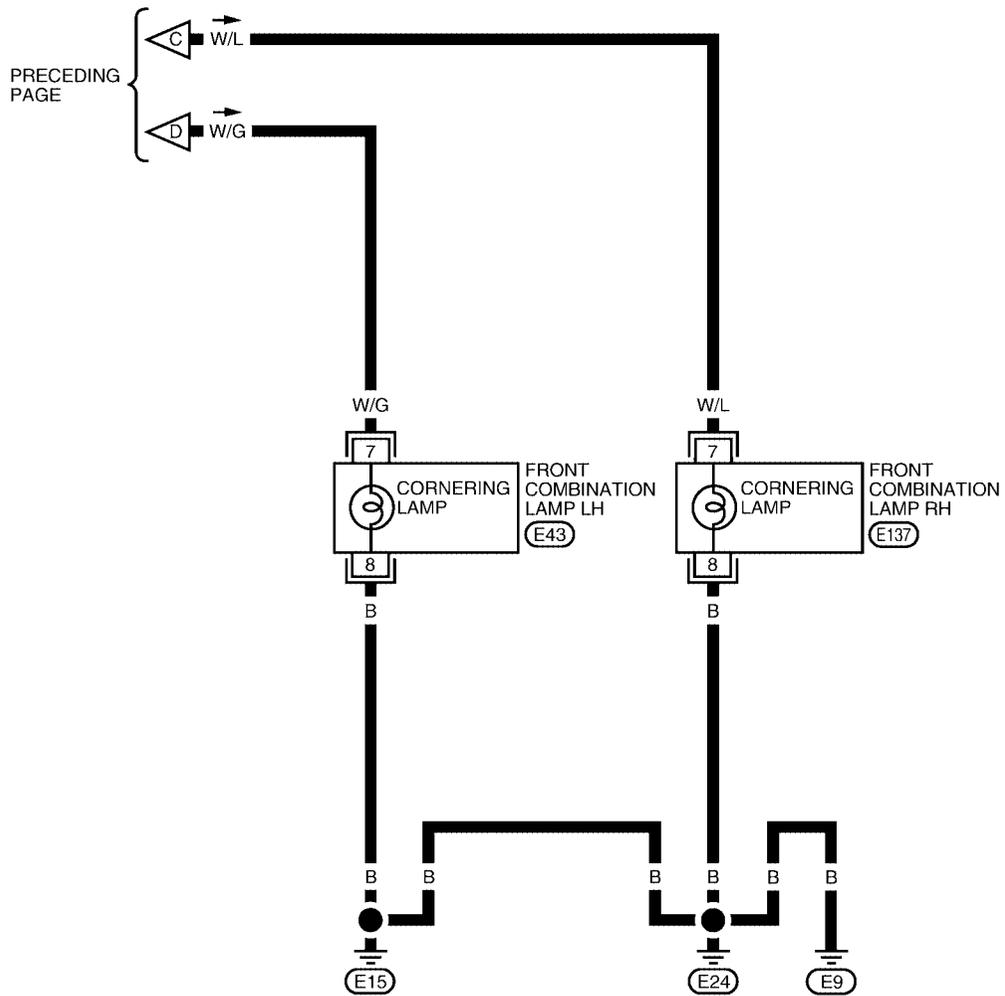


WKWA3218E

CORNERING LAMP


Terminals and Reference Values for BCM

EKS00FD4

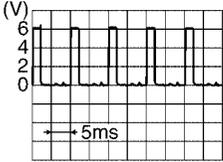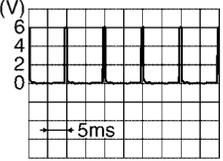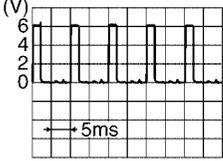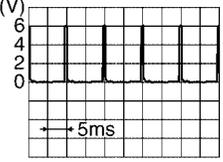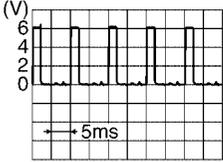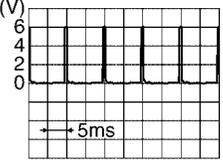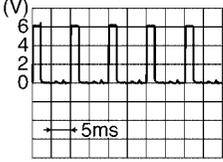Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
2	GR/R	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
3	G/Y	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
4	G/R	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
5	G/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
6	G/W	Combination switch input 1			
11	V	Ignition switch (ACC)	ACC	—	Battery voltage
32	R/G	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
33	R/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
34	R	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>

A
B
C
D
E
F
G
H
I
J
LT
L
M

CORNERING LAMP

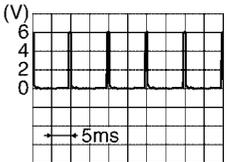Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
35	R/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	
36	R/W	Combination switch output 1			
38	G	Ignition switch (ON)	ON	—	Battery voltage
39	L	CAN-H	—	—	—
40	P	CAN-L	—	—	—
42	Y/G	Battery power supply	OFF	—	Battery voltage
52	B/W	Ground	ON	—	0V
55	W/B	Battery power supply (fusible link)	OFF	—	Battery voltage

Terminals and Reference Values for IPDM E/R

EKS00FD5

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
23	W/L	Cornering lamp RH	ON	Lighting switch in RH position	OFF 0V
					ON Battery voltage
34	W/G	Cornering lamp LH	ON	Lighting switch in LH position	OFF 0V
					ON Battery voltage
38	B	Ground	ON	—	0V
48	L	CAN-H	—	—	—
49	P	CAN-L	—	—	—
60	B	Ground	ON	—	0V

How to Proceed With Trouble Diagnosis

EKS00FD6

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-89, "System Description"](#).
3. Perform preliminary check. Refer to [LT-96, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction.
5. Do turn signal and hazard warning lamps operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

EKS00FD7

CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES OR FUSIBLE LINK

Check for blown fuses or fusible link.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	j
		3
	Ignition switch ON or START position	16
	Ignition switch ACC or ON position	4
IPDM E/R	Battery	34
		41

CORNERING LAMP

Refer to [LT-92, "Wiring Diagram — CORNER —"](#).

OK or NG

OK >> GO TO 2.

NG >> If fuse or fusible link is blown, be sure to eliminate cause of malfunction before installing new fuse or fusible link. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

BCM		(-)	Ignition switch position		
Connector	Terminal		OFF	ACC	ON
M18	11	Ground	0V	Battery voltage	Battery voltage
	38		0V	0V	Battery voltage
M19	42		Battery voltage	Battery voltage	Battery voltage
	55		Battery voltage	Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse or fusible link.

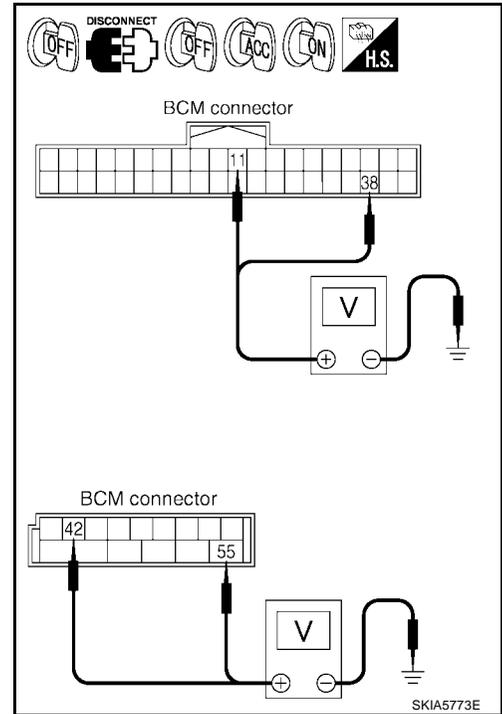

3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

BCM		Continuity
Connector	Terminal	
M19	52	Yes

OK or NG

OK >> Inspection End.

NG >> Check ground circuit harness.

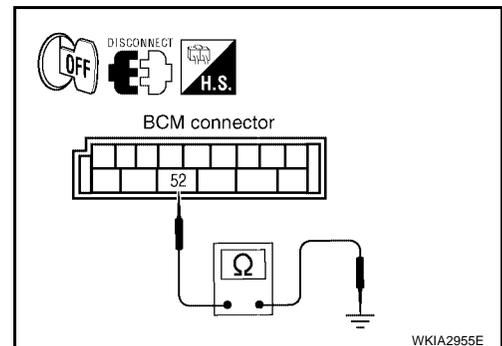

CORNERING LAMP

EKS00FD8

CONSULT-II Function (IPDM E/R)

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


IPDM E/R diagnostic Mode	Description
SELF-DIAG RESULTS	Displays IPDM E/R self-diagnosis results.
DATA MONITOR	Displays IPDM E/R input/output data in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

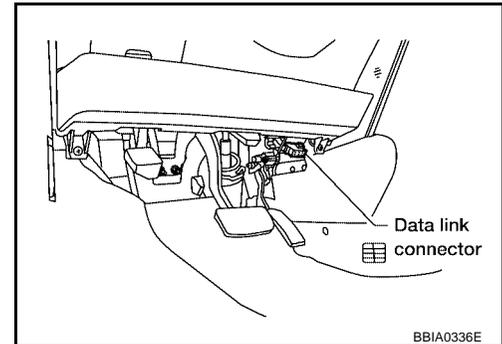

2. Touch "START (NISSAN BASED VHCL)".

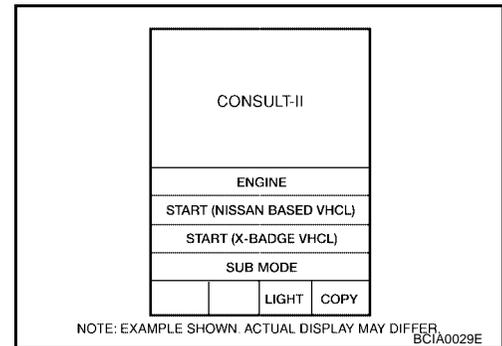

3. Touch "IPDM E/R" on "SELECT SYSTEM" screen. If "IPDM E/R" is not indicated, go to [GI-38, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

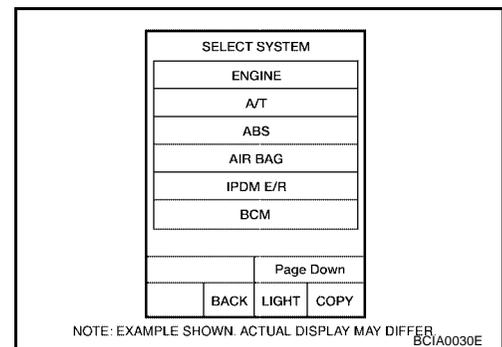

4. Touch appropriate item, "DATA MONITOR" or "ACTIVE TEST" on "SELECT DIAG MODE" screen.

DATA MONITOR

Operation Procedure

1. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Touch "ALL SIGNALS" or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

CORNERING LAMP

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors the individual signal.

3. Touch "START".
4. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
5. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

All Items, Main Items, Select Item Menu

Item name	CONSULT-II screen display	Display or unit	Monitor item selection			Description
			ALL SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
Cornering lamp	CRNRNG LMP REQ	ON/OFF	×	-	×	Signal status input from BCM

NOTE:

Perform monitoring of IPDM E/R data with the ignition switch ON. When the ignition switch is at ACC, the display may not be correct.

ACTIVE TEST

Operation Procedure

1. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Touch "CORNERING LAMP" on "SELECT TEST ITEM" screen.
3. Touch "RH" or "LH" item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

Display Item List

Test item	Description
CORNERING LAMP (RH)	Cornering lamp (RH) can be operated by any ON-OFF operations.
CORNERING LAMP (LH)	Cornering lamp (LH) can be operated by any ON-OFF operations.

Cornering Lamp Does Not Operate

EKS00FD9

1. ACTIVE TEST

Ⓜ With CONSULT-II


1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "CORNERING LAMP" during active test.
3. Select "RH", then "LH" on "ACTIVE TEST" screen.
4. Make sure cornering lamp LH and RH operate.

ⓧ Without CONSULT-II

GO TO 3.

OK or NG

- OK >> GO TO 2.
 NG >> GO TO 3.

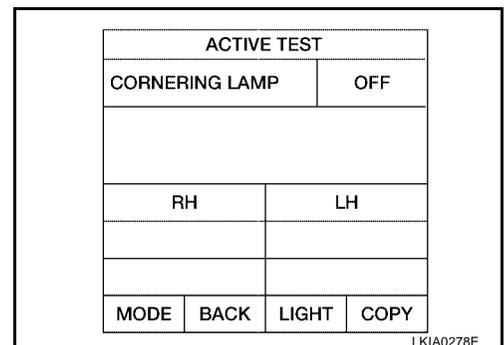

CORNERING LAMP

2. CHECK COMBINATION SWITCH INPUT SIGNAL


1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "CRNRNG LMP REQ" turns ON-OFF linked with operation of lighting switch.

NOTE:

Lighting switch must not be in OFF position.

When lighting switch is in TURN RH position : CRNRNG LMP REQ R

When lighting switch is in TURN LH position : CRNRNG LMP REQ L

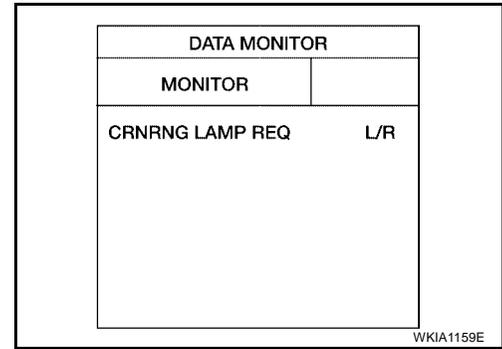

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#) .
- NG >> Replace BCM. Refer to [BCS-20, "Removal and Installation of BCM"](#) .

3. CHECK BULB

Check bulb standard of each cornering lamp is correct. Refer to [LT-177, "Exterior Lamp"](#) .


OK or NG

- OK >> GO TO 4.
- NG >> Replace cornering lamp bulb. Refer to [LT-101, "Bulb Replacement"](#) .

4. CHECK CORNERING LAMPS CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connectors and front combination lamp LH and RH connectors.
3. Check continuity between IPDM E/R harness connector terminal and front combination lamp harness connector terminal.

A			B		Continuity
IPDM E/R connector	Terminal	Front combination lamp connector	Terminal		
RH	E122	23	RH	E137	Yes
LH	E124	34	LH	E43	

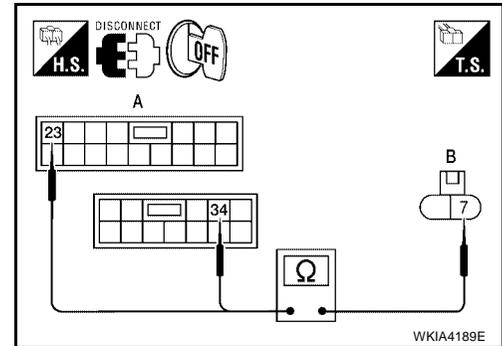


OK or NG

- OK >> GO TO 5.
- NG >> Repair harness or connector.

5. CHECK GROUND

Check continuity between front combination lamp harness connector terminal and ground.

Terminals		Continuity
Front combination lamp connector	Terminal	
RH	E137	No
LH	E43	

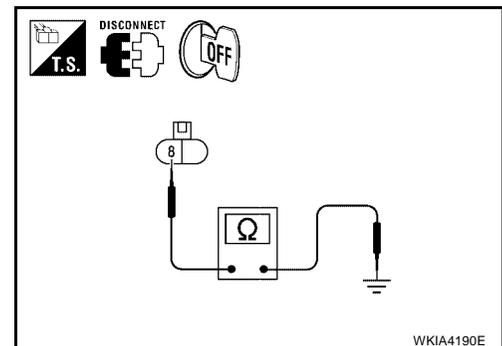

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#) .
- NG >> Repair harness or connector.

CORNERING LAMP

Bulb Replacement

EKS00FDA

1. Turn the bulb socket counterclockwise to unlock it.
 2. Pull the bulb to remove it from the socket.
- Installation is in the reverse order of removal.

A

B

C

D

E

F

G

H

I

J

LT

L

M

LIGHTING AND TURN SIGNAL SWITCH

LIGHTING AND TURN SIGNAL SWITCH


PF2:25540

Removal and Installation

EKS00FDB

1. Remove steering column cover.
2. While pressing tabs, pull lighting and turn signal switch toward driver door and disconnect from the base.

Installation is in the reverse order of removal.

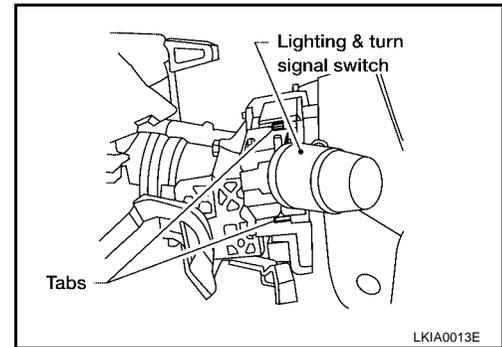

LKIA0013E

HAZARD SWITCH


HAZARD SWITCH

PFP:25290

Removal and Installation

EKS00FDC

1. Remove AV switch. Refer to [AV-77, "AV Switch"](#).
2. While pressing the tabs, push out the hazard switch. Installation is in the reverse order of removal.

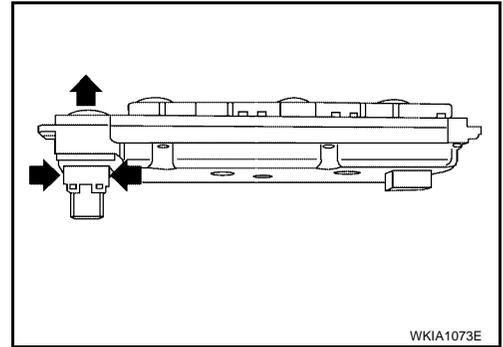

A
B
C
D
E
F
G
H
I
J
LT
L
M

COMBINATION SWITCH



PF:25567

EKS00FDD

COMBINATION SWITCH

Wiring Diagram — COMBSW —

LT-COMBSW-01

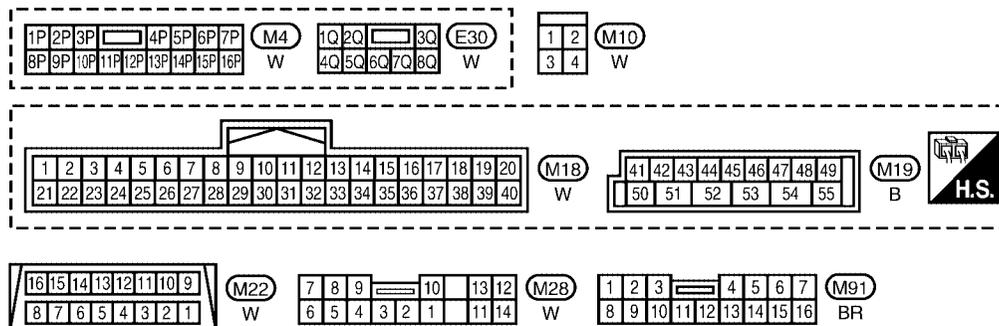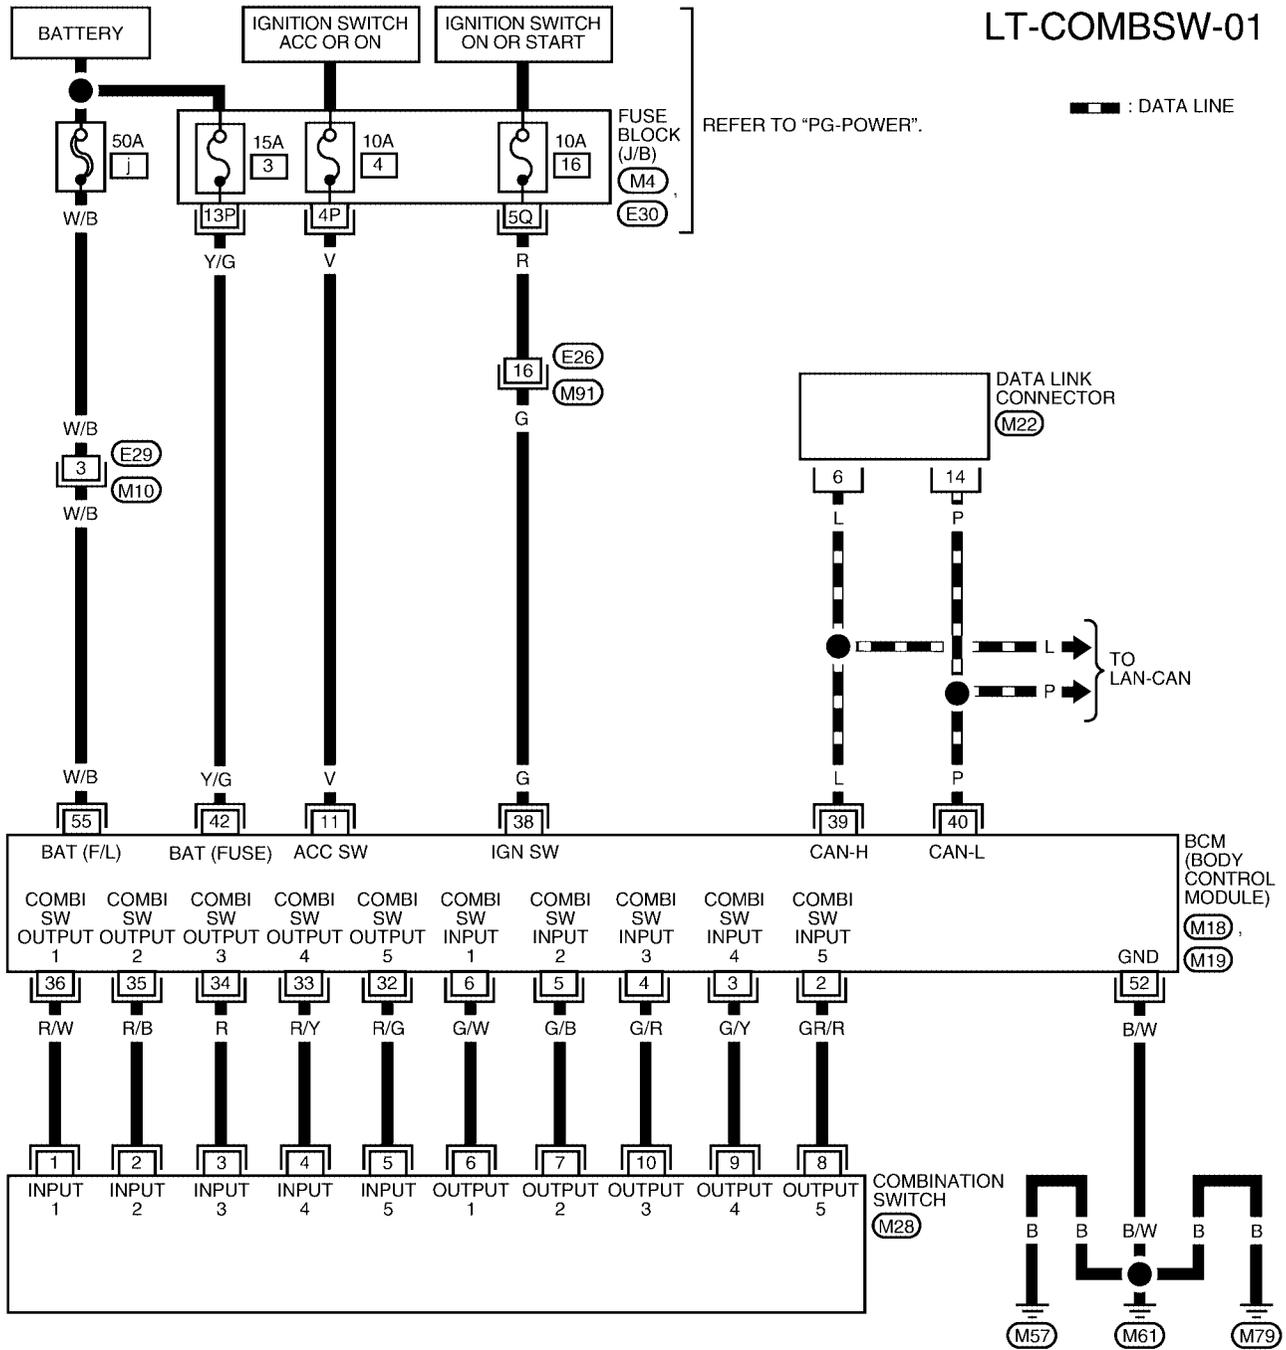

WKWA3219E

COMBINATION SWITCH

Combination Switch Reading Function

EKS00FDE

For details, refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#).

CONSULT-II Function (BCM)

EKS00FDF

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

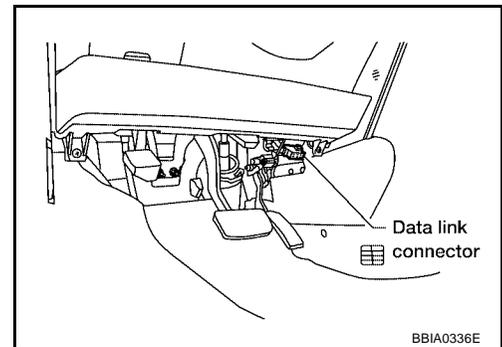

2. Touch "START (NISSAN BASED VHCL)".

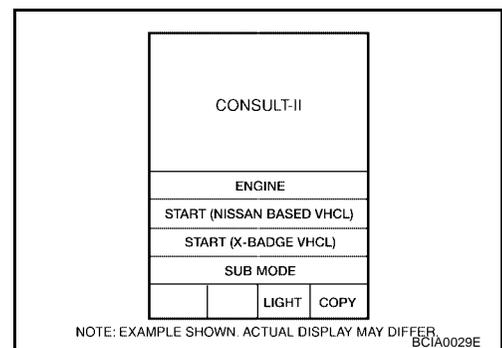


3. Touch "BCM" on "SELECT SYSTEM" screen. If "BCM" is not indicated, go to [GI-38, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

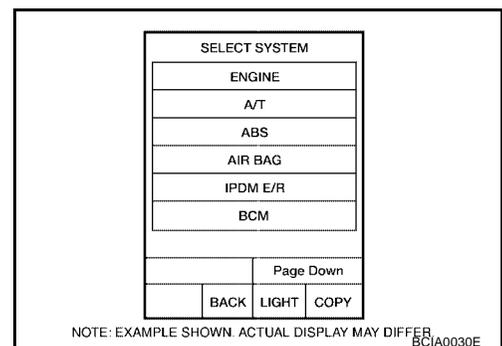

COMBINATION SWITCH

4. Touch "COMB SW" on "SELECT TEST ITEM" screen.

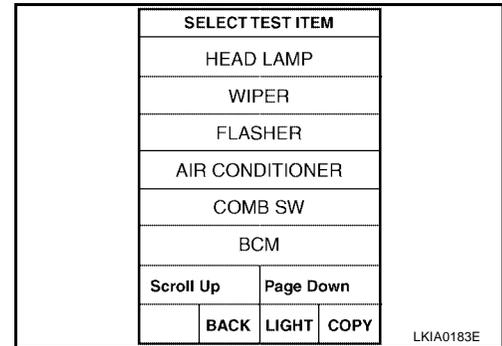

DATA MONITOR

Operation Procedure

1. Touch "COMB SW" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the signals will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item name "OPERATION OR UNIT"	Contents
TURN SIGNAL R "ON/OFF"	Displays "Turn Right (ON)/Other (OFF)" status, determined from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays "Turn Left (ON)/Other (OFF)" status, determined from lighting switch signal.
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1 "ON/OFF"	Displays "Headlamp switch 1 (ON)/Other (OFF)" status, determined from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1ST "ON/OFF"	Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
PASSING SW "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
AUTO LIGHT SW "ON/OFF"	Displays "Auto light switch (ON)/Other (OFF)" status, determined from lighting switch signal.
FR FOG SW "ON/OFF"	Displays "Front fog lamp switch (ON)/Other (OFF)" status, determined from lighting switch signal.
FR WIPER HI "ON/OFF"	Displays "Front Wiper HI (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WIPER LOW "ON/OFF"	Displays "Front Wiper LOW (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WIPER INT "ON/OFF"	Displays "Front Wiper INT (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WASHER SW "ON/OFF"	Displays "Front Washer Switch (ON)/Other (OFF)" status, determined from wiper switch signal.
INT VOLUME [1 - 7]	Displays intermittent operation knob setting (1 - 7), determined from wiper switch signal.
RR WIPER ON "ON/OFF"	Displays "Rear Wiper (ON)/(OFF)" status, determined from wiper switch signal.
RR WIPER INT "ON/OFF"	Displays "Rear Wiper INT (ON)/(OFF)" status, determined from wiper switch signal.
RR WASHER SW "ON/OFF"	Displays "Rear Washer (ON)/(OFF)" status, determined from wiper switch signal.

COMBINATION SWITCH

EKS00FDG

Combination Switch Inspection

1. SYSTEM CHECK

- Referring to table below, check to which system the malfunctioning switch belongs.

System 1	System 2	System 3	System 4	System 5
—	FR WASHER	FR WIPER LO	TURN LH	TURN RH
FR WIPER HI	—	FR WIPER INT	PASSING	HEAD LAMP1
INT VOLUME 1	RR WASHER	—	HEAD LAMP2	HI BEAM
RR WIPER INT	INT VOLUME 3	AUTO LIGHT	—	TAIL LAMP
INT VOLUME 2	RR WIPER ON	—	FR FOG	—

>> GO TO 2.

2. SYSTEM CHECK

 With CONSULT-II

CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.

- Connect CONSULT-II, and select "COMB SW" on "SELECT TEST ITEM" screen.
- Select "DATA MONITOR".
- Select "START" and confirm that other switches in malfunctioning system operate normally.

Example: When auto light switch is malfunctioning, confirm that "FRONT WIPER LOW" and "FRONT WIPER INT" in System 3, to which the auto light switch belongs, turn ON-OFF normally.

DATA MONITOR	
MONITOR	
TURN SIGNAL R	OFF
TURN SIGNAL L	OFF
HIBEAM SW	OFF
HEAD LAMP SW1	OFF
HEAD LAMP SW2	OFF
LIGHT SW 1ST	OFF
PASSING SW	OFF
AUTO LIGHT SW	OFF
FR FOG SW	OFF
	Page Down
	RECORD
MODE	BACK
LIGHT	COPY

SKIA7075E

 Without CONSULT-II

Operate combination switch and confirm that other switches in malfunctioning system operate normally.

Example: When auto light switch is malfunctioning, confirm that "FRONT WIPER LOW" and "FRONT WIPER INT" in System 3, to which the auto light switch belongs, operate normally.

Check results

Other switches in malfunctioning system operate normally.>>Replace lighting switch or wiper switch.


Other switches in malfunctioning system do not operate normally.>>GO TO 3.

COMBINATION SWITCH

3. HARNESS INSPECTION

1. Turn ignition switch OFF.
2. Disconnect BCM and combination switch connectors.
3. Check for continuity between BCM harness connector of the suspect system and the corresponding combination switch connector terminals.

Suspect system	BCM		Combination switch		Continuity
	Connector	Terminal	Connector	Terminal	
1	M18	Input 1	6	M28	6
		Output 1	36		1
2		Input 2	5		7
		Output 2	35		2
3		Input 3	4		10
		Output 3	34		3
4		Input 4	3		9
		Output 4	33		4
5		Input 5	2		8
		Output 5	32		5

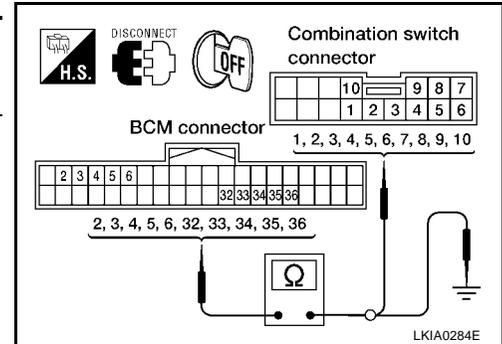

4. Check for continuity between each terminal of BCM harness connector in suspect malfunctioning system and ground.

Suspect system	BCM		Continuity		
	Connector	Terminal			
1	M18	Input 1	6	Ground	No
		Output 1	36		
2		Input 2	5		
		Output 2	35		
3		Input 3	4		
		Output 3	34		
4		Input 4	3		
		Output 4	33		
5		Input 5	2		
		Output 5	32		

OK or NG

OK >> GO TO 4.

NG >> Check harness between BCM and combination switch for open or short circuit.

COMBINATION SWITCH


4. BCM OUTPUT TERMINAL INSPECTION

1. Turn lighting switch and wiper switch to OFF.
2. Set wiper dial to position 4.
3. Connect BCM and combination switch connectors.
4. Turn ignition switch ON, and check combination switch input (BCM output) terminal voltage waveform of suspect malfunctioning system.

Suspect system	Combination switch		
	(+)		
	Connector	Terminal	
1	M28	Input 1	1
2		Input 2	2
3		Input 3	3
4		Input 4	4
5		Input 5	5

OK or NG

- OK >> Open circuit in combination switch, GO TO 5.
 NG >> Replace BCM. Refer to [BCS-20, "Removal and Installation of BCM"](#).

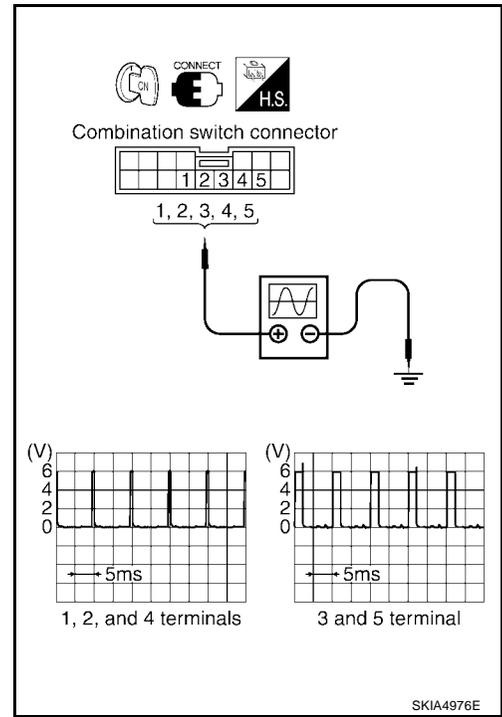

5. COMBINATION SWITCH INSPECTION

Referring to table below, perform combination switch inspection.

Procedure									
1	2		3	4		5	6		7
Replace lighting switch.	Confirm check results.	OK	INSPECTION END	Confirm check results.	OK	INSPECTION END	Confirm check results.	OK	INSPECTION END
		NG	Replace wiper switch.		NG	Replace switch base.		NG	Confirm symptom again.

>> Inspection End.

Removal and Installation

EKS00FDH

Refer to [LT-102, "Removal and Installation"](#).

Switch Circuit Inspection

EKS00FDI

Refer to [LT-107, "Combination Switch Inspection"](#).

STOP LAMP

STOP LAMP

PF2:26550

System Description

EKS00FDJ

Power is supplied at all times

- through 10A fuse [No. 20, located in fuse block (J/B)]
- to stop lamp switch terminal 1.

When the brake pedal is pressed, the stop lamp switch is closed and power is supplied

- through stop lamp switch terminal 2
- to rear combination lamp LH and RH terminal 1, and
- to high-mounted stop lamp terminal +.

Ground is supplied

- to rear combination lamp LH terminal 5
- through grounds B7 and B19, and
- to rear combination lamp RH terminal 5
- through grounds B117 and B132, and
- to high-mounted stop lamp terminal –
- through grounds D403 and D404.


With power and ground supplied, the stop lamps illuminate.

STOP LAMP


Wiring Diagram — STOP/L —

EKS00FDK

LT-STOP/L-01

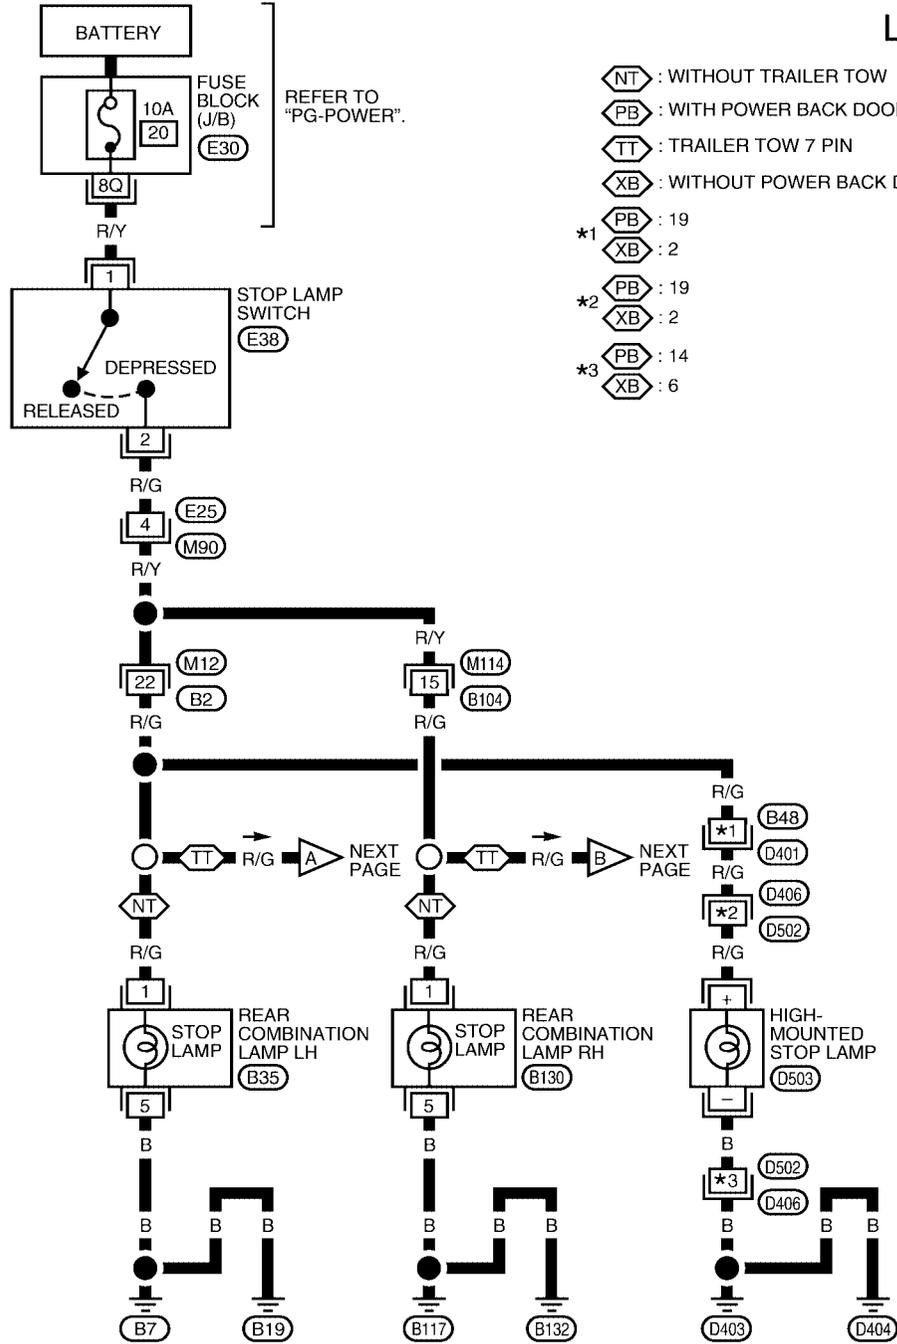



- ⬡ NT : WITHOUT TRAILER TOW
- ⬡ PB : WITH POWER BACK DOOR
- ⬡ TT : TRAILER TOW 7 PIN
- ⬡ XB : WITHOUT POWER BACK DOOR
- *1 ⬡ PB : 19
- ⬡ XB : 2
- *2 ⬡ PB : 19
- ⬡ XB : 2
- *3 ⬡ PB : 14
- ⬡ XB : 6

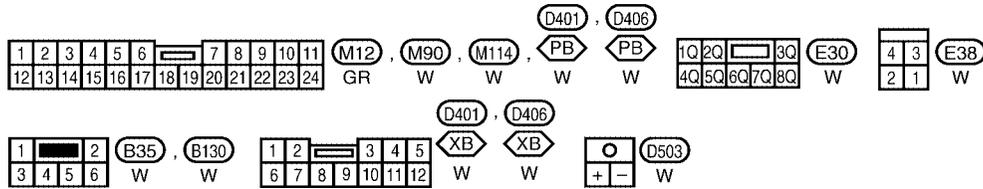

A
B
C
D
E
F
G
H
I
J
LT
L
M

STOP LAMP

LT-STOP/L-02

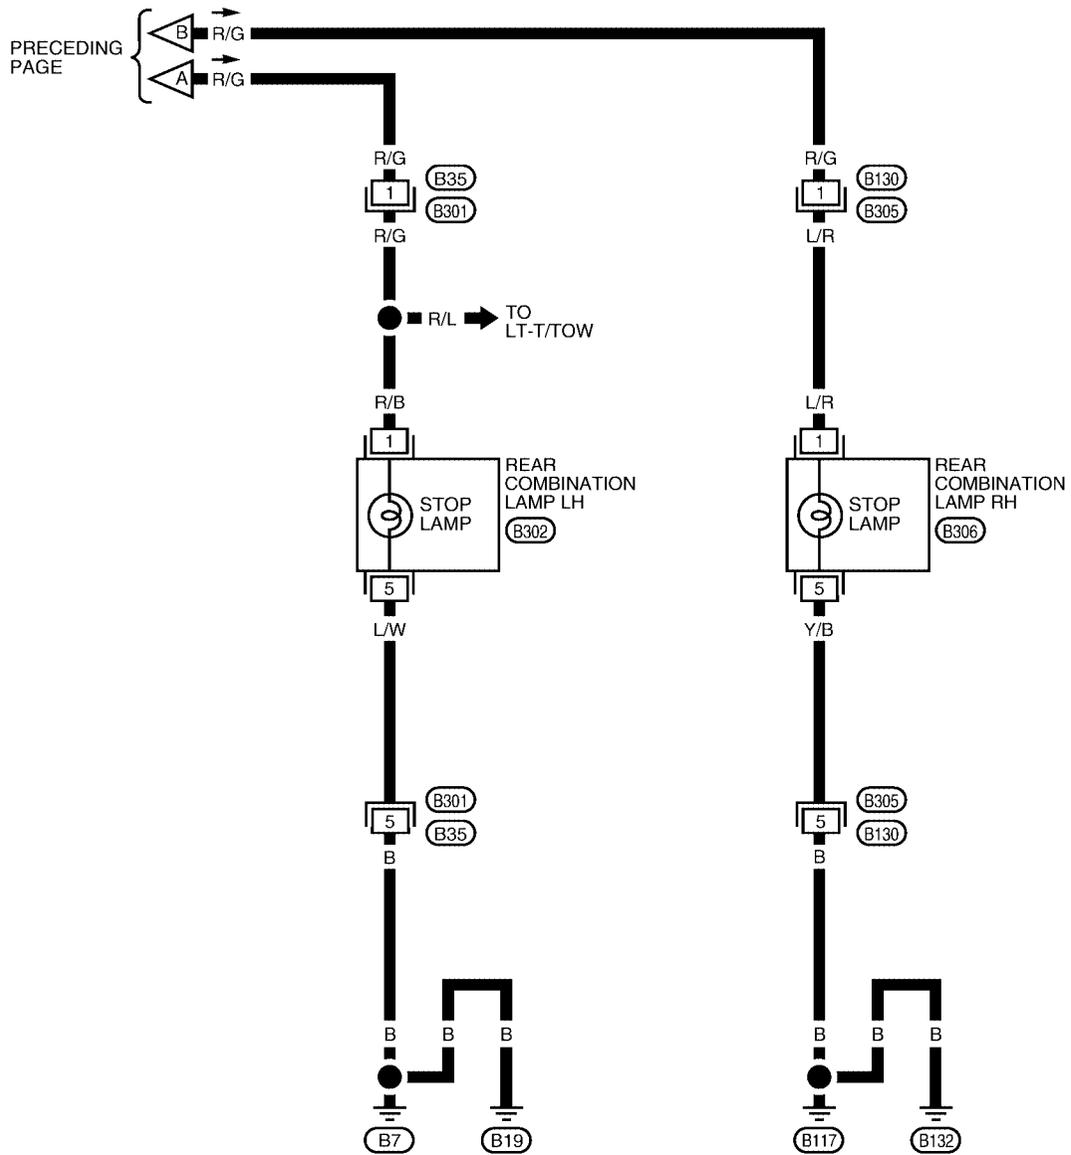

LKWA0311E

STOP LAMP


High-Mounted Stop Lamp

EKS00FDL

BULB REPLACEMENT, REMOVAL AND INSTALLATION

1. Remove back door upper finisher. Refer to [EI-37, "BACK DOOR UPPER FINISHER"](#) .
2. Remove rear washer nozzle.
3. Disconnect connector.
4. Remove 2 nuts and remove high-mounted stop lamp.
5. Turn bulb socket counterclockwise to remove it from the high-mounted stop lamp housing.
6. Pull bulb from socket.

Installation is in the reverse order of removal.

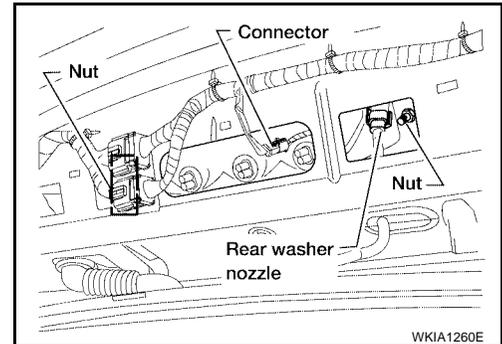

Stop Lamp

BULB REPLACEMENT

Refer to [LT-131, "Bulb Replacement"](#) in REAR COMBINATION LAMP.

REMOVAL AND INSTALLATION

Refer to [LT-131, "Removal and Installation"](#) in REAR COMBINATION LAMP.

EKS00FDM

A
B
C
D
E
F
G
H
I
J
LT
L
M

LT

BACK-UP LAMP



PF2:26550

BACK-UP LAMP

Wiring Diagram — BACK/L —

EKS00FDN

LT-BACK/L-01

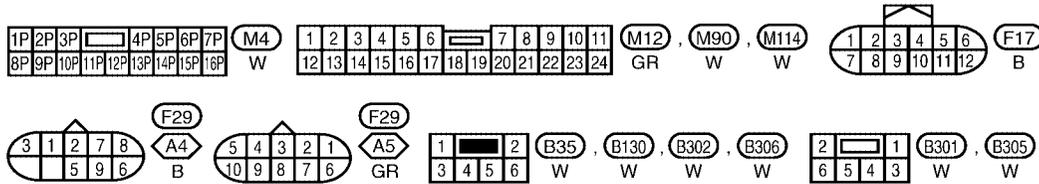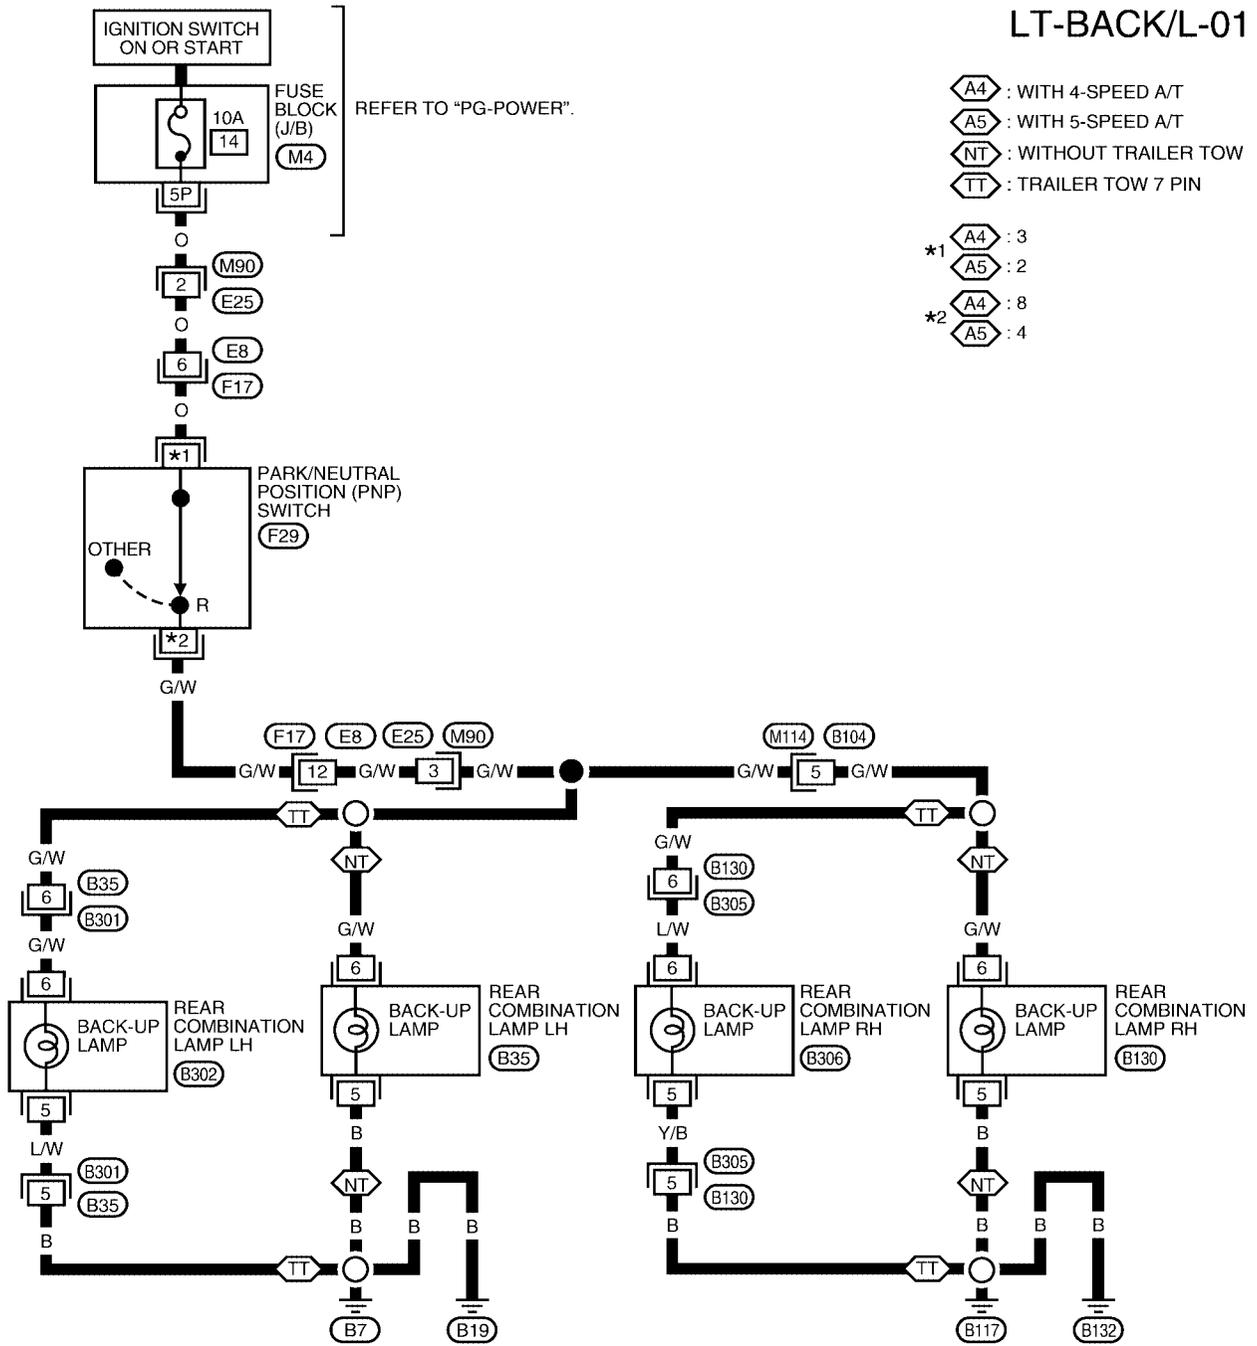

WKWA3221E

BACK-UP LAMP

Bulb Replacement

EKS00FDO

Refer to [LT-131, "Bulb Replacement"](#) in REAR COMBINATION LAMP.

A

Removal and Installation

EKS00FDP

Refer to [LT-131, "Removal and Installation"](#) in REAR COMBINATION LAMP.

B

C

D

E

F

G

H

I

J

LT

L

M


PARKING, LICENSE PLATE AND TAIL LAMPS

PARKING, LICENSE PLATE AND TAIL LAMPS

PF26550

Component Parts and Harness Connector Location

EKS00FDQ

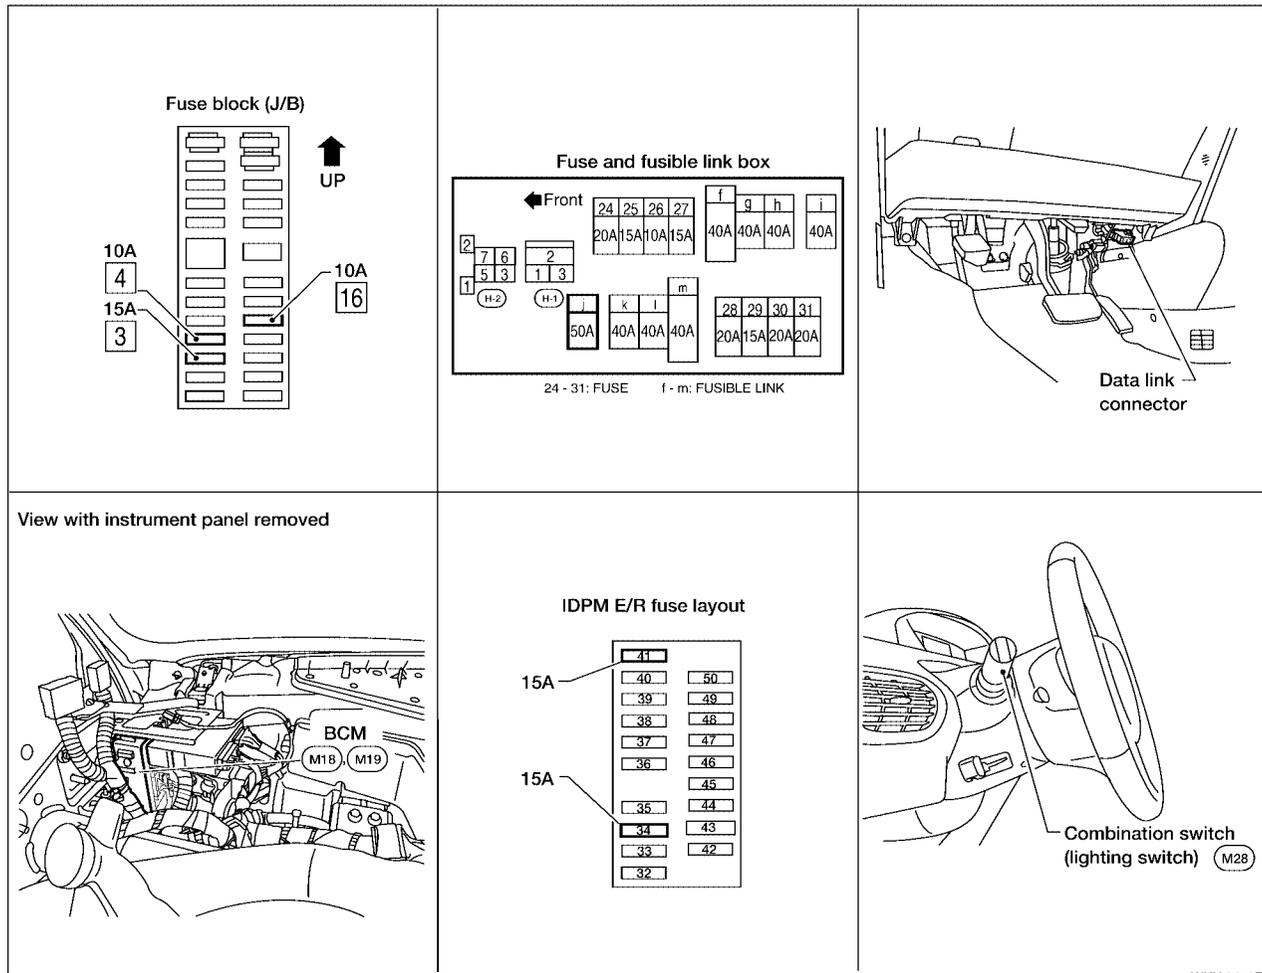

WK1A3451E

System Description

EKS00FDR

Control of the parking, license plate, and tail lamp operation is dependent upon the position of the lighting switch (combination switch). When the lighting switch is placed in the 1ST position, the BCM (body control module) receives input signal requesting the parking, license plate and tail lamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the tail lamp relay coil. This relay, when energized, directs power to the parking, license plate and tail lamps, which then illuminate. Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and
- through 15A fuse (No. 41, located in the IPDM E/R)
- to tail lamp relay, located in the IPDM E/R, and
- through 15A fuse (No. 34 located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 50A fusible link (letter j, located in the fuse and fusible link box)
- to BCM terminal 55, and
- through 15A fuse [No. 3, located in the fuse block (J/B)]
- to BCM terminal 42.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 16, located in the fuse block (J/B)]
- to BCM terminal 38.

PARKING, LICENSE PLATE AND TAIL LAMPS

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 52
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 60
- through grounds E9, E15 and E24.

OPERATION BY LIGHTING SWITCH

With the lighting switch in the 1ST or 2ND position (or if the auto light system is activated), the BCM receives input signal requesting the parking, license plate and tail lamps to illuminate. This input signal is communicated to the IPDM E/R across the CAN communication lines. The CPU in the IPDM E/R controls the tail lamp relay coil, which when energized, directs power

- through IPDM E/R terminal 22
- to front combination lamp LH and RH terminal 4
- to license plate lamp LH and RH terminal +
- to rear combination lamp LH and RH terminal 2.

Ground is supplied

- to front combination lamp LH and RH terminal 5
- through grounds E9, E15 and E24, and
- to license plate lamp LH and RH terminal –
- through grounds D403 and D404, and
- to rear combination lamp LH terminal 5
- through grounds B7 and B19, and
- to rear combination lamp RH terminal 5
- through grounds B117 and B132.

With power and ground supplied, the parking, license plate and tail lamps illuminate.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 1ST (or 2ND) position and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the parking, license and tail lamps remain illuminated for 5 minutes, then the parking, license plate and tail lamps are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

CAN Communication System Description

Refer to [LAN-24, "CAN COMMUNICATION"](#) .

EKS00FDS

A

B

C

D

E

F

G

H

I

J

LT


L

M

PARKING, LICENSE PLATE AND TAIL LAMPS

Schematic

EKS00FDT

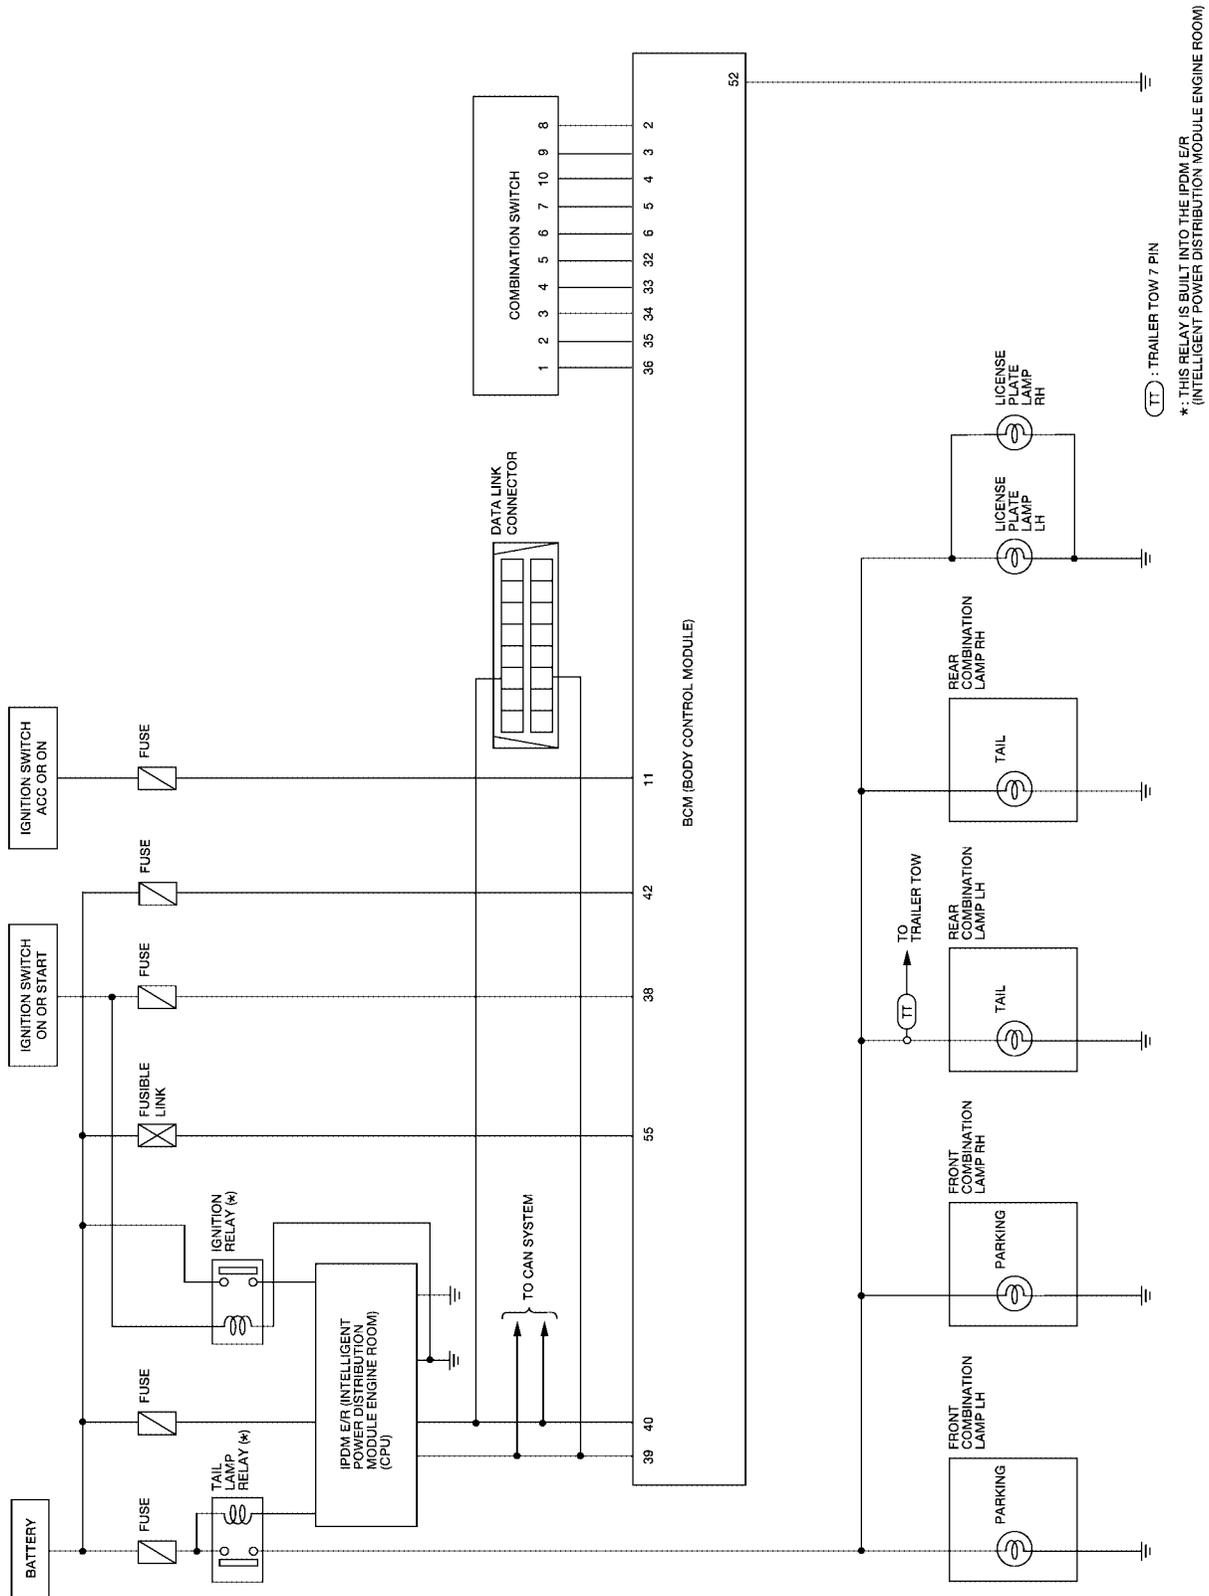

WKWA3222E



PARKING, LICENSE PLATE AND TAIL LAMPS

EKS00FDU

Wiring Diagram — TAIL/L —

LT-TAIL/L-01

— : DATA LINE

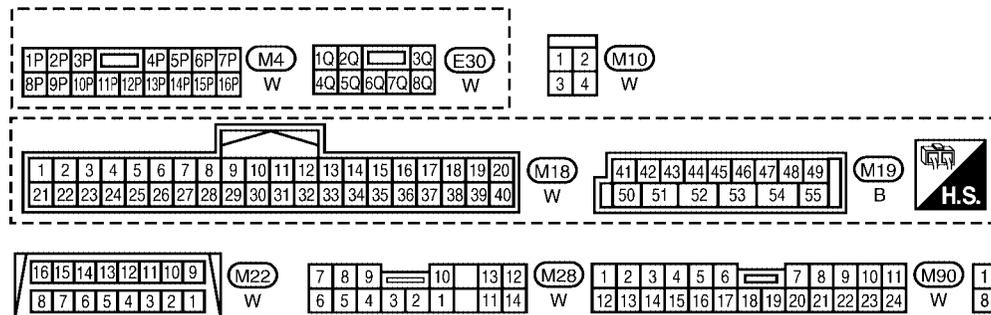
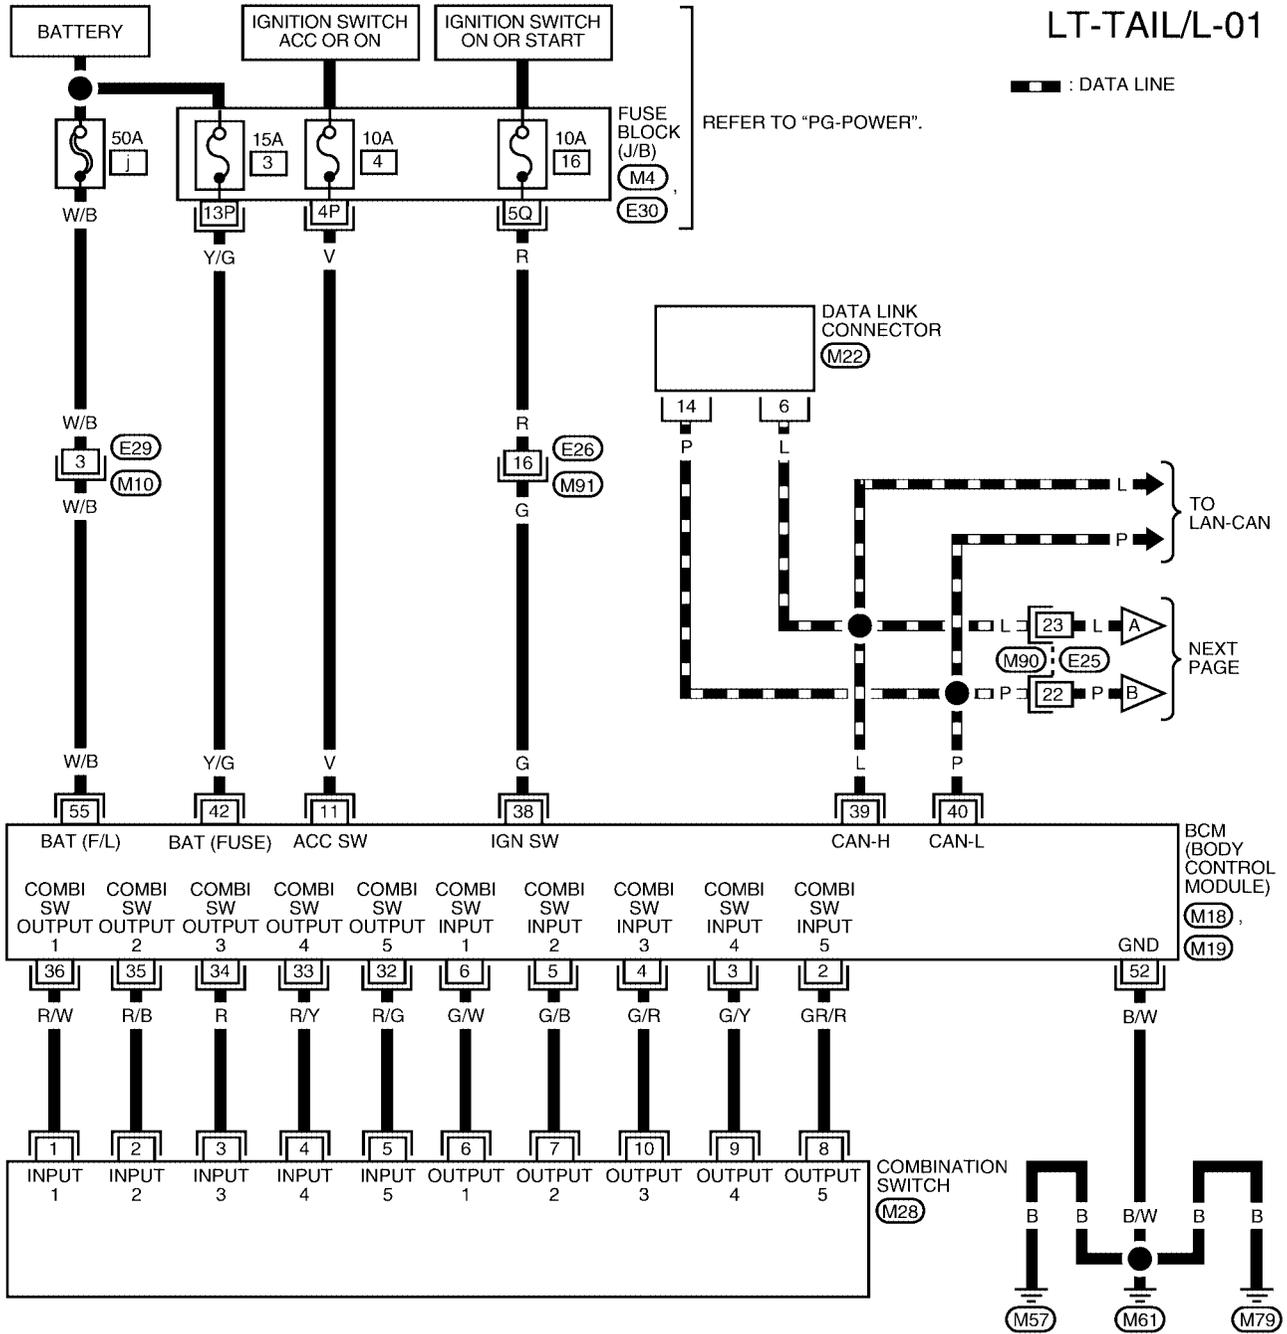


WKWA3223E

PARKING, LICENSE PLATE AND TAIL LAMPS

LT-TAIL/L-03



PRECEDING PAGE

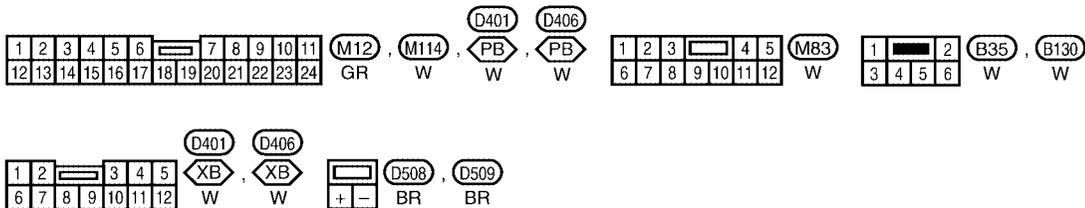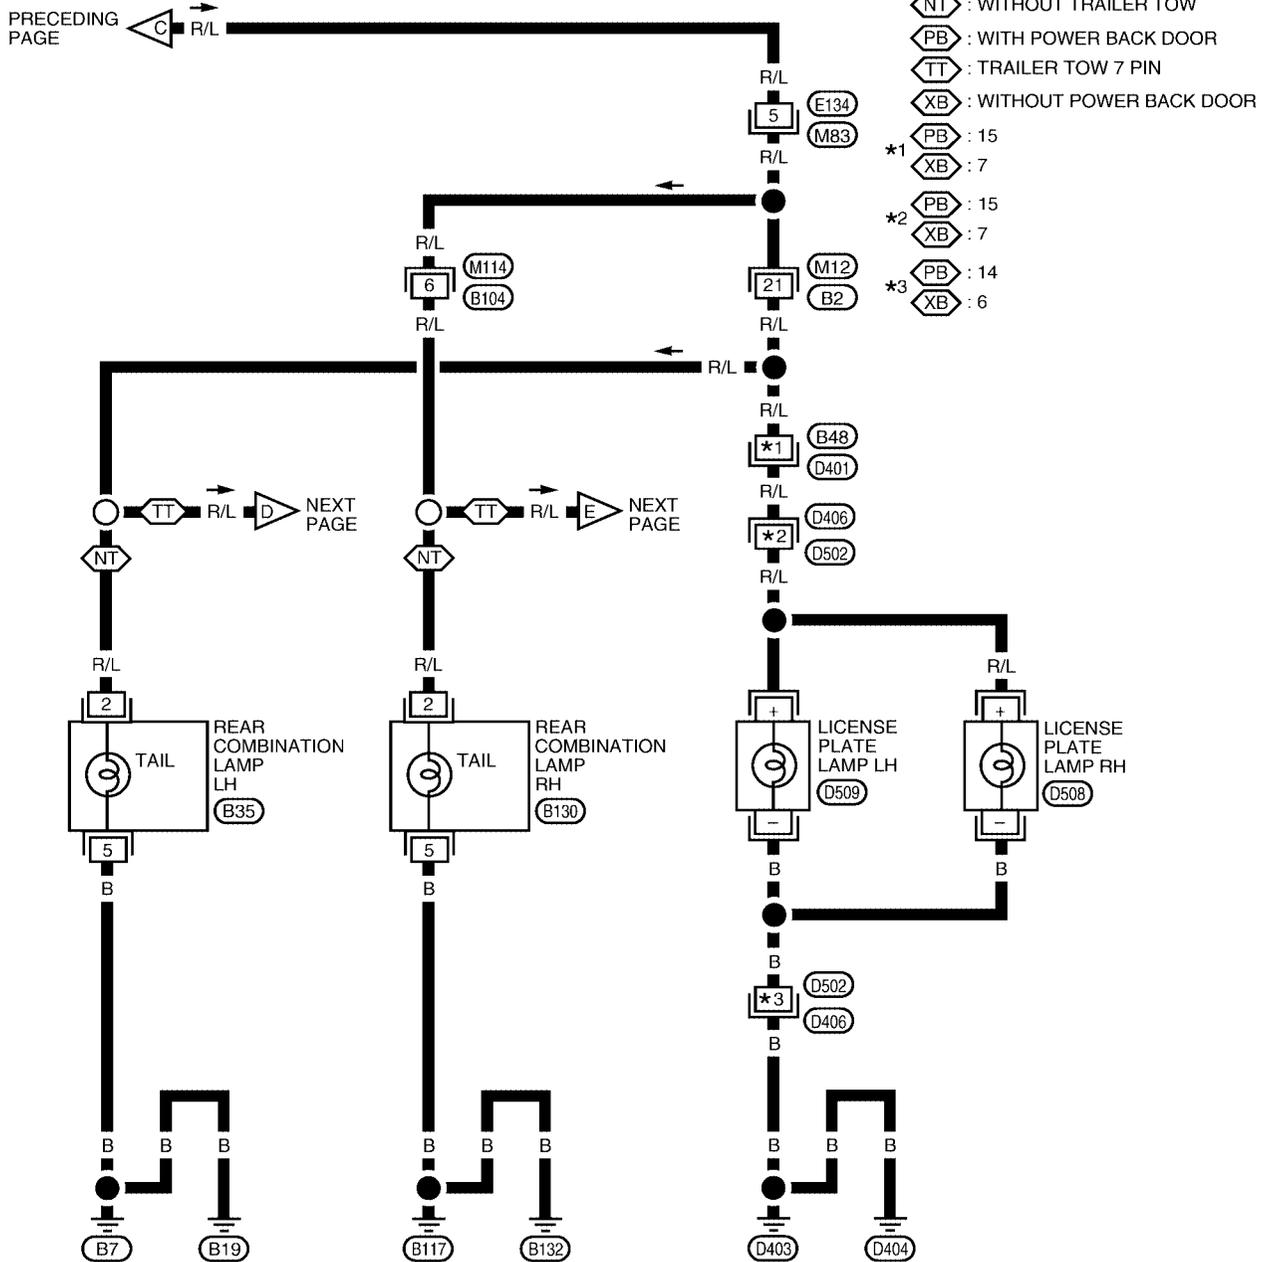

WKWA3254E

PARKING, LICENSE PLATE AND TAIL LAMPS

LT-TAIL/L-04





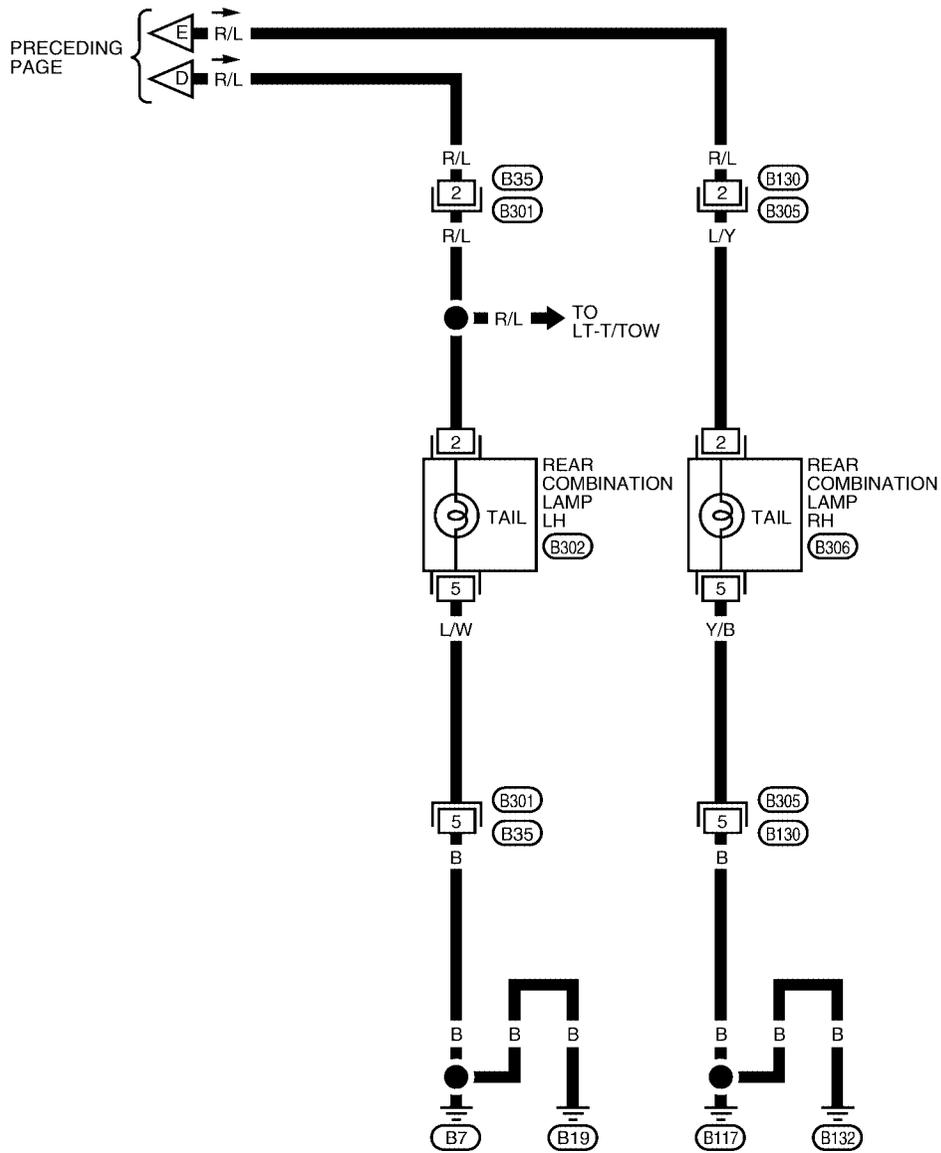


LKWA0312E

PARKING, LICENSE PLATE AND TAIL LAMPS

Terminals and Reference Values for BCM

EKS00FDV

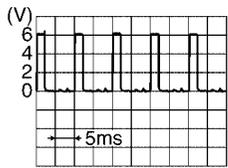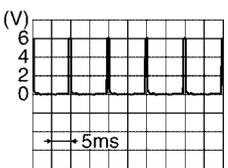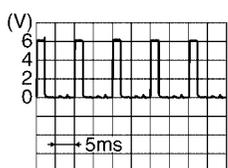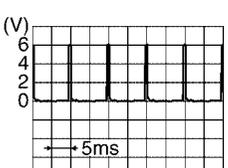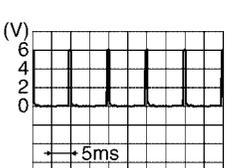Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
2	GR/R	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
3	G/Y	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
4	G/R	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
5	G/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
6	G/W	Combination switch input 1			
11	V	Ignition switch (ACC)	ACC	—	Battery voltage
32	R/G	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
33	R/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
34	R	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>

A
B
C
D
E
F
G
H
I
J
LT
L
M

PARKING, LICENSE PLATE AND TAIL LAMPS

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
35	R/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	
36	R/W	Combination switch output 1			
38	G	Ignition switch (ON)	ON	—	Battery voltage
39	L	CAN-H	—	—	—
40	P	CAN-L	—	—	—
42	Y/G	Battery power supply	OFF	—	Battery voltage
52	B/W	Ground	ON	—	0V
55	W/B	Battery power supply (fusible link)	OFF	—	Battery voltage

SKIA5292E

Terminals and Reference Values for IPDM E/R

EKS00FDW

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)	
			Ignition switch	Operation or condition		
22	R/L	Parking, license, and tail lamp	ON	Lighting switch 1ST position	OFF	0V
					ON	Battery voltage
38	B	Ground	ON	—	0V	
48	L	CAN-H	—	—	—	
49	P	CAN-L	—	—	—	
60	B	Ground	ON	—	0V	

How to Proceed With Trouble Diagnosis

EKS00FDX

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-116, "System Description"](#) .
3. Carry out the Preliminary Check. Refer to [LT-124, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Do the parking, license and tail lamps operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

EKS00FDY

CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES OR FUSIBLE LINK

Check for blown fuses or fusible link.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	j
		3
	Ignition switch ON or START position	16
	Ignition switch ACC or ON position	4
IPDM E/R	Battery	34
		41

PARKING, LICENSE PLATE AND TAIL LAMPS

Refer to [LT-119, "Wiring Diagram — TAIL/L —"](#).

OK or NG

OK >> GO TO 2.

NG >> If fuse or fusible link is blown, be sure to eliminate cause of malfunction before installing new fuse or fusible link. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

BCM (+)		(-)	Ignition switch position		
Connector	Terminal		OFF	ACC	ON
M18	11	Ground	0V	Battery voltage	Battery voltage
	38		0V	0V	Battery voltage
M19	42		Battery voltage	Battery voltage	Battery voltage
	55		Battery voltage	Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse or fusible link.

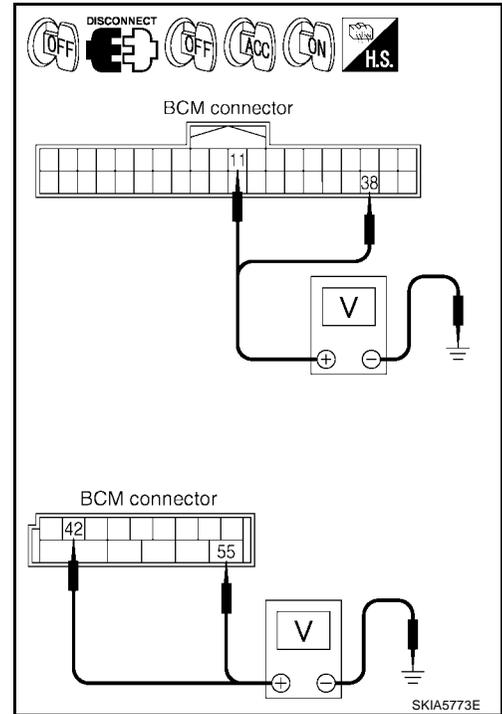

3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

BCM			Continuity
Connector	Terminal		
M19	52	Ground	Yes

OK or NG

OK >> Inspection End.

NG >> Check ground circuit harness.

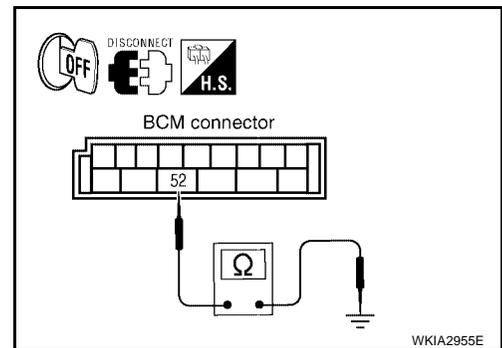

CONSULT-II Functions

Refer to [LT-17, "CONSULT-II Function \(BCM\)"](#) in HEADLAMP (FOR USA).

Refer to [LT-20, "CONSULT-II Function \(IPDM E/R\)"](#) in HEADLAMP (FOR USA).

PARKING, LICENSE PLATE AND TAIL LAMPS

EKS00FE0

Parking, License Plate and/or Tail Lamps Do Not Illuminate

1. CHECK COMBINATION SWITCH INPUT SIGNAL

④ With CONSULT-II

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "LIGHT SW 1ST" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in : LIGHT SW 1ST ON
1ST position**

⊗ Without CONSULT-II

Refer to [LT-107, "Combination Switch Inspection"](#) .

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-107, "Combination Switch Inspection"](#) .

DATA MONITOR	
MONITOR	
LIGHT SW 1ST	ON

SKIA5956E

2. ACTIVE TEST

④ With CONSULT-II

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "TAIL LAMP" on "SELECT TEST ITEM" screen.
3. Touch "ON" on "ACTIVE TEST" screen.
4. Make sure parking, license plate and tail lamp operation.

Parking, license plate and tail lamp should operate

⊗ Without CONSULT-II

1. Start auto active test. Refer to [PG-22, "Auto Active Test"](#) .
2. Make sure parking, license plate and tail lamp operation.

Parking, license plate and tail lamp should operate

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

ACTIVE TEST	
TAIL LAMP	OFF
ON	
MODE	BACK
LIGHT	COPY

SKIA5957E

3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "TAIL&CLR REQ" turns ON when lighting switch is in 1ST position.

**When lighting switch is in : TAIL&CLR REQ ON
1ST position**

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#) .

NG >> Replace BCM. Refer to [BCS-20, "Removal and Installation of BCM"](#) .

DATA MONITOR	
MONITOR	
TAIL&CLR REQ	ON
MODE	BACK
LIGHT	COPY
RECORD	

SKIA5958E

PARKING, LICENSE PLATE AND TAIL LAMPS

4. CHECK INPUT SIGNAL


Ⓟ With CONSULT-II

1. Turn ignition switch OFF.
2. Disconnect front combination lamp, license plate lamp and rear combination lamp connectors.
3. Turn ignition switch ON.
4. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
5. Select "TAIL LAMP" on "SELECT TEST ITEM" screen.
6. Touch "ON" on "ACTIVE TEST" screen.
7. When tail lamp is operating, check voltage between front combination lamp, license plate lamp, rear combination lamp harness connector and ground.


ⓧ Without CONSULT-II

1. Start auto active test. Refer to [PG-22, "Auto Active Test"](#).
2. When tail lamp is operating, check voltage between front combination lamp, license plate lamp, rear combination lamp harness connector and ground.


Terminals		Terminal	(-)	Voltage
(+)				
Front combination lamp connector		4	Ground	Battery voltage
RH	E107			
LH	E11			

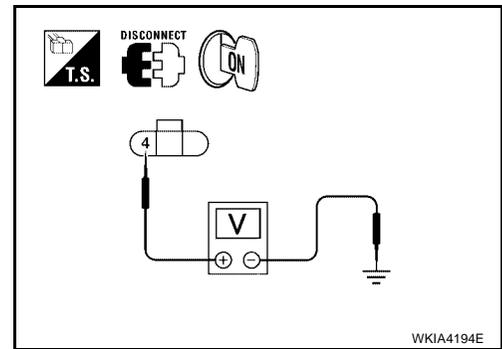

License plate lamp		Terminal	(-)	Voltage
(+)				
Connector		+	Ground	Battery voltage
RH	D508			
LH	D509			

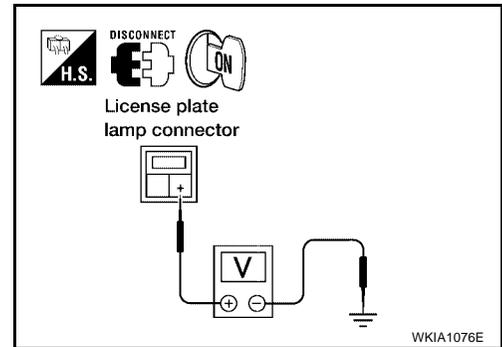

Rear combination lamp			Terminal	(-)	Voltage
(+)					
Connector			2	Ground	Battery voltage
RH	B130 (without trailer tow) B306 (with trailer tow)				
LH	B35 (without trailer tow) B302 (with trailer tow)				

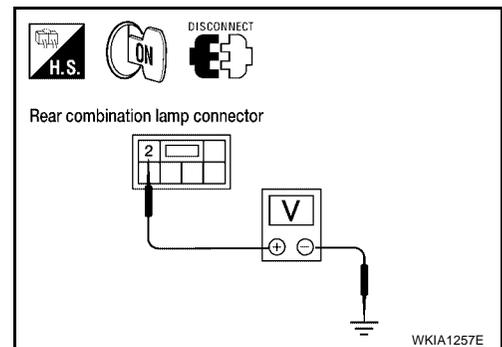

OK or NG


- OK >> GO TO 6.
NG >> GO TO 5.

PARKING, LICENSE PLATE AND TAIL LAMPS

5. CHECK PARKING, LICENSE PLATE AND TAIL LAMP CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front combination lamp harness connector.

A		B		Continuity	
IPDM E/R connector	Terminal	Front combination lamp connector	Terminal		
E122	22	RH	E107	4	Yes
		LH	E11		

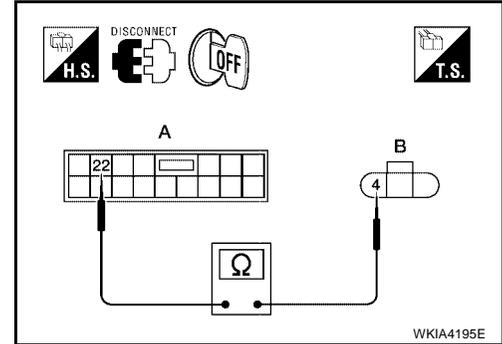


4. Check continuity between IPDM E/R harness connector and license plate lamp harness connector.

IPDM E/R		License plate lamp		Continuity	
Connector	Terminal	Connector	Terminal		
E122	22	RH	D508	+	Yes
		LH	D509		

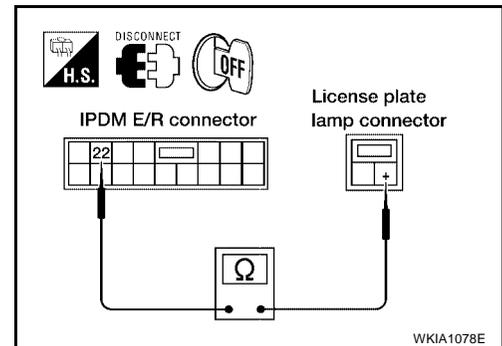

5. Check continuity between IPDM E/R harness connector and rear combination lamp harness connector.

IPDM E/R		Rear combination lamp		Continuity	
Connector	Terminal	Connector	Terminal		
E122	22	RH	B130 (without trailer tow) B306 (with trailer tow)	2	Yes
		LH	B35 (without trailer tow) B302 (with trailer tow)		

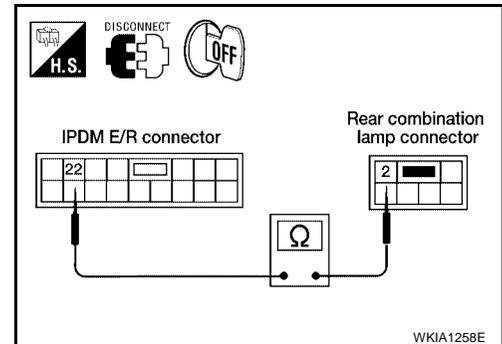

OK or NG


- OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#).
- NG >> Repair harness or connector.

PARKING, LICENSE PLATE AND TAIL LAMPS

6. CHECK GROUND


1. Turn ignition switch OFF.
2. Check continuity between front combination lamp harness connector and ground.

Terminals		Terminal	Ground	Continuity
Front combination lamp connector				
RH	E107	5	Ground	Yes
LH	E11			

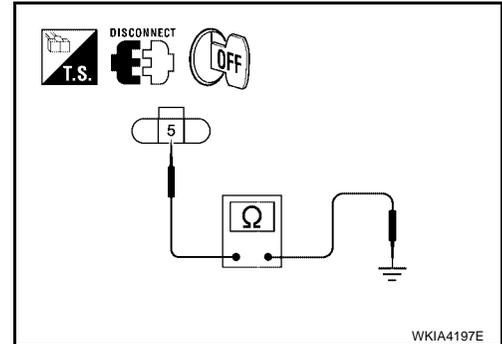


3. Check continuity between license lamp plate harness connector and ground.

License plate lamp		Terminal	Ground	Continuity
Connector				
RH	D508	-	Ground	Yes
LH	D509			

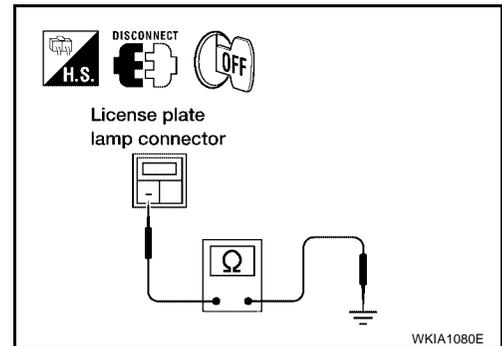

4. Check continuity between rear combination lamp harness connector and ground.

Rear combination lamp		Terminal	Ground	Continuity
Connector				
RH	B130 (without trailer tow) B306 (with trailer tow)	5	Ground	Yes
LH	B35 (without trailer tow) B302 (with trailer tow)			

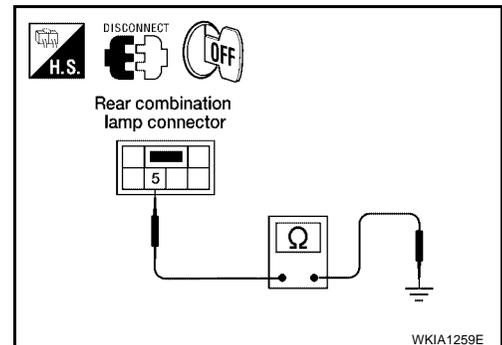

OK or NG

- OK >> Check bulbs.
- NG >> Repair harness or connector.

Parking, License Plate and Tail Lamps Do Not Turn OFF (After Approx. 10 Minutes)

EKS00FE1

1. CHECK IPDM E/R

1. Turn ignition switch ON. Turn the combination switch (lighting switch) to the OFF position. Turn ignition switch OFF.
2. Verify that the parking, license plate, and tail lamps turn on and off after approximately 10 minutes.

OK or NG

- OK >> Ignition relay malfunction. Refer to [PG-18, "Function of Detecting Ignition Relay Malfunction"](#).
- NG >> Inspection End.

PARKING, LICENSE PLATE AND TAIL LAMPS

Front Parking Lamp BULB REPLACEMENT

EKS00FE2

For bulb replacement, refer to [LT-30, "FRONT TURN SIGNAL/PARKING LAMP"](#) .

Tail Lamp BULB REPLACEMENT

EKS00FE3

For bulb replacement, refer to [LT-131, "Bulb Replacement"](#) .

REAR COMBINATION LAMP

PF2:26554


REAR COMBINATION LAMP

Bulb Replacement

1. Remove rear combination lamp mounting bolts.
2. Pull rear combination lamp to remove from the vehicle.
3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb.

Installation is in the reverse order of removal.

EKS00FE4

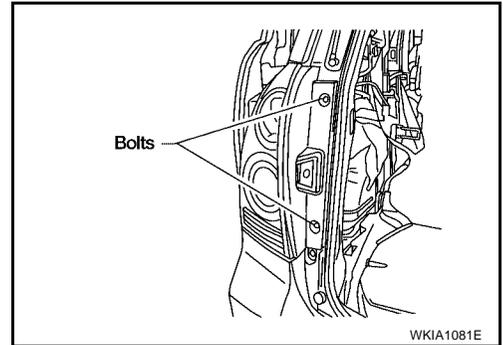


EKS00FE5

Removal and Installation


1. Remove rear lower finisher assembly. Refer to [EI-36, "REAR LOWER FINISHER ASSEMBLY"](#).
2. Disconnect rear combination lamp connector.
3. Remove rear combination lamp mounting bolts.
4. Pull rear combination lamp to remove from the vehicle.

Rear combination lamp mounting bolts : 2.6 N-m (0.27 kg-m, 23 in-lb)

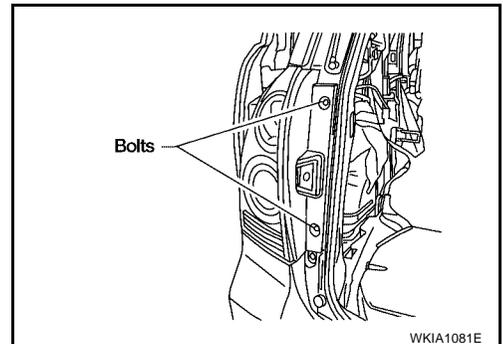

Installation is in the reverse order of removal.

- Install rear combination lamp harness and grommet so that paint mark on grommet is at top and harness points down.

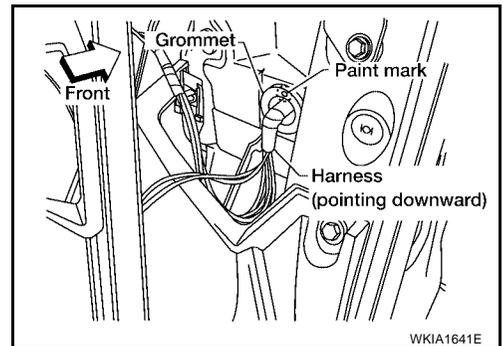

A
B
C
D
E
F
G
H
I
J
LT
L
M


TRAILER TOW

PFP:93020

TRAILER TOW

Component Parts and Harness Connector Location

EKS00FE6

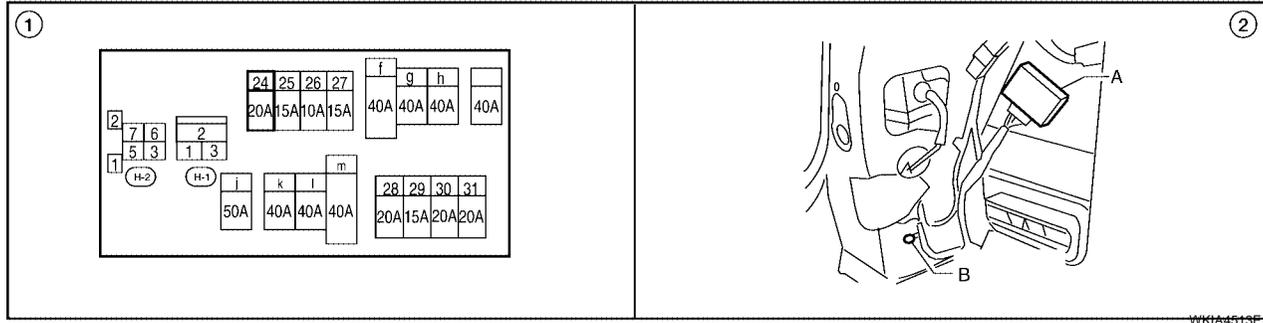

1. Fuse and fusible link box

2. A. Trailer tow control unit B303
B. Trailer tow ground B307
(View with rear lower finisher assembly LH removed)

System Description

EKS00FE7

Power is supplied at all times

- through 20A fuse (No. 24, located in the fuse and fusible link box)
- to trailer tow control unit terminal 7.

Ground is supplied

- to trailer tow control unit terminal 5, and
- to trailer connector terminal 5
- through ground B307.

TRAILER TAIL LAMP OPERATION

With the lighting switch in the parking and tail lamp ON (1ST) position, AUTO position (and the auto light system is activated) or headlamp ON (2ND) position, power is supplied

- through rear combination lamp LH
- to trailer tow control unit terminal 3.

The trailer tail lamps are controlled by the trailer tow control unit. The trailer tow control unit supplies power

- through trailer tow control unit terminal 1
- to trailer connector terminal 1.

TRAILER STOP, TURN SIGNAL AND HAZARD LAMP OPERATION

The trailer stop, turn signal and hazard lamps are all controlled by the trailer tow control unit. The trailer tow control unit regulates the amount of voltage supplied to the trailer lamps. If either turn signal or the hazard lamps are turned on and the trailer tow control unit gets a brake lamp input, the trailer tow control unit supplies more voltage to the trailer lamps to make them illuminate brighter.

Stop lamp input is supplied

- through rear combination lamp LH
- to trailer tow control unit terminal 8.

Left turn signal and hazard lamp input is supplied

- through rear combination lamp LH
- to trailer tow control unit terminal 4.

Right turn signal and hazard lamp input is supplied

- through rear combination lamp RH
- to trailer tow control unit terminal 9.

Based on the stop lamp, turn signal lamp and hazard lamp inputs to the trailer tow control unit, power is supplied to trailer stop/turn lamp LH

- through trailer tow control unit terminal 2
- to trailer harness connector terminal 2.

TRAILER TOW

Power is also supplied to trailer stop/turn lamp RH

- through trailer tow control unit terminal 6
- to trailer harness connector terminal 6.

A

B

C

D

E

F

G

H

I

J

LT

L



M

TRAILER TOW

Wiring Diagram — T/TOW —

EKS00FE8

LT-T/TOW-01

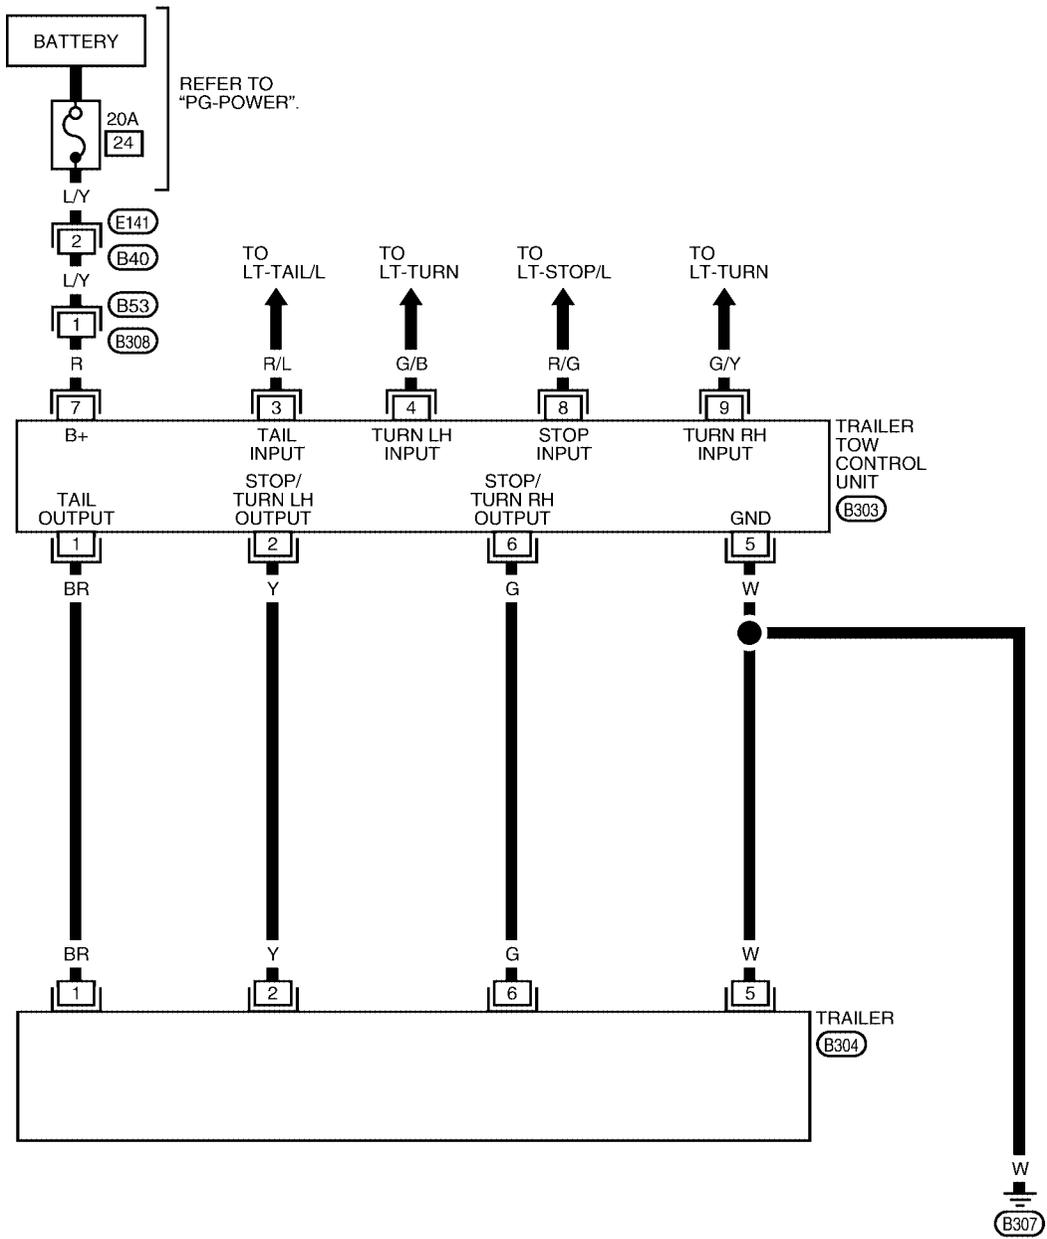

WKWA3253E

TRAILER TOW

EKS00FE9

Trouble Diagnoses TRAILER TOW CONTROL UNIT INSPECTION TABLE

Terminal No.	Wire color	Item	Condition	Voltage (Approx.)
1	BR	Tail lamps signal output	When tail lamps operate	Battery voltage
			All other conditions	0V
2	Y	Stop/LH turn lamp (output)	When brake pedal is depressed	Battery voltage
			When LH turn lamps or hazard lamps operate	Battery voltage (intermittently)
			All other conditions	0V
3	R/L	Tail lamps signal input	When tail lamps operate	Battery voltage
			All other conditions	0V
4	G/B	LH turn lamps input	When LH turn lamps or hazard lamps operate	Battery voltage (intermittently)
			All other conditions	0V
5	W	Ground	—	—
6	G	Stop/RH turn lamp (output)	When brake pedal is depressed	Battery voltage
			When RH turn lamps or hazard lamps operate	Battery voltage (intermittently)
			All other conditions	0V
7	R	Power supply	—	Battery voltage
8	R/G	Stop lamps signal input	When brake pedal is depressed	Battery voltage
			When brake pedal is released	0V
9	G/Y	RH turn lamps input	When RH turn lamps or hazard lamps operate	Battery voltage (intermittently)
			All other conditions	0V

A
B
C
D
E
F
G
H
I
J
LT
L
M

LT


INTERIOR ROOM LAMP

PFP:26410

INTERIOR ROOM LAMP

Component Parts and Harness Connector Location

EKS00FEA

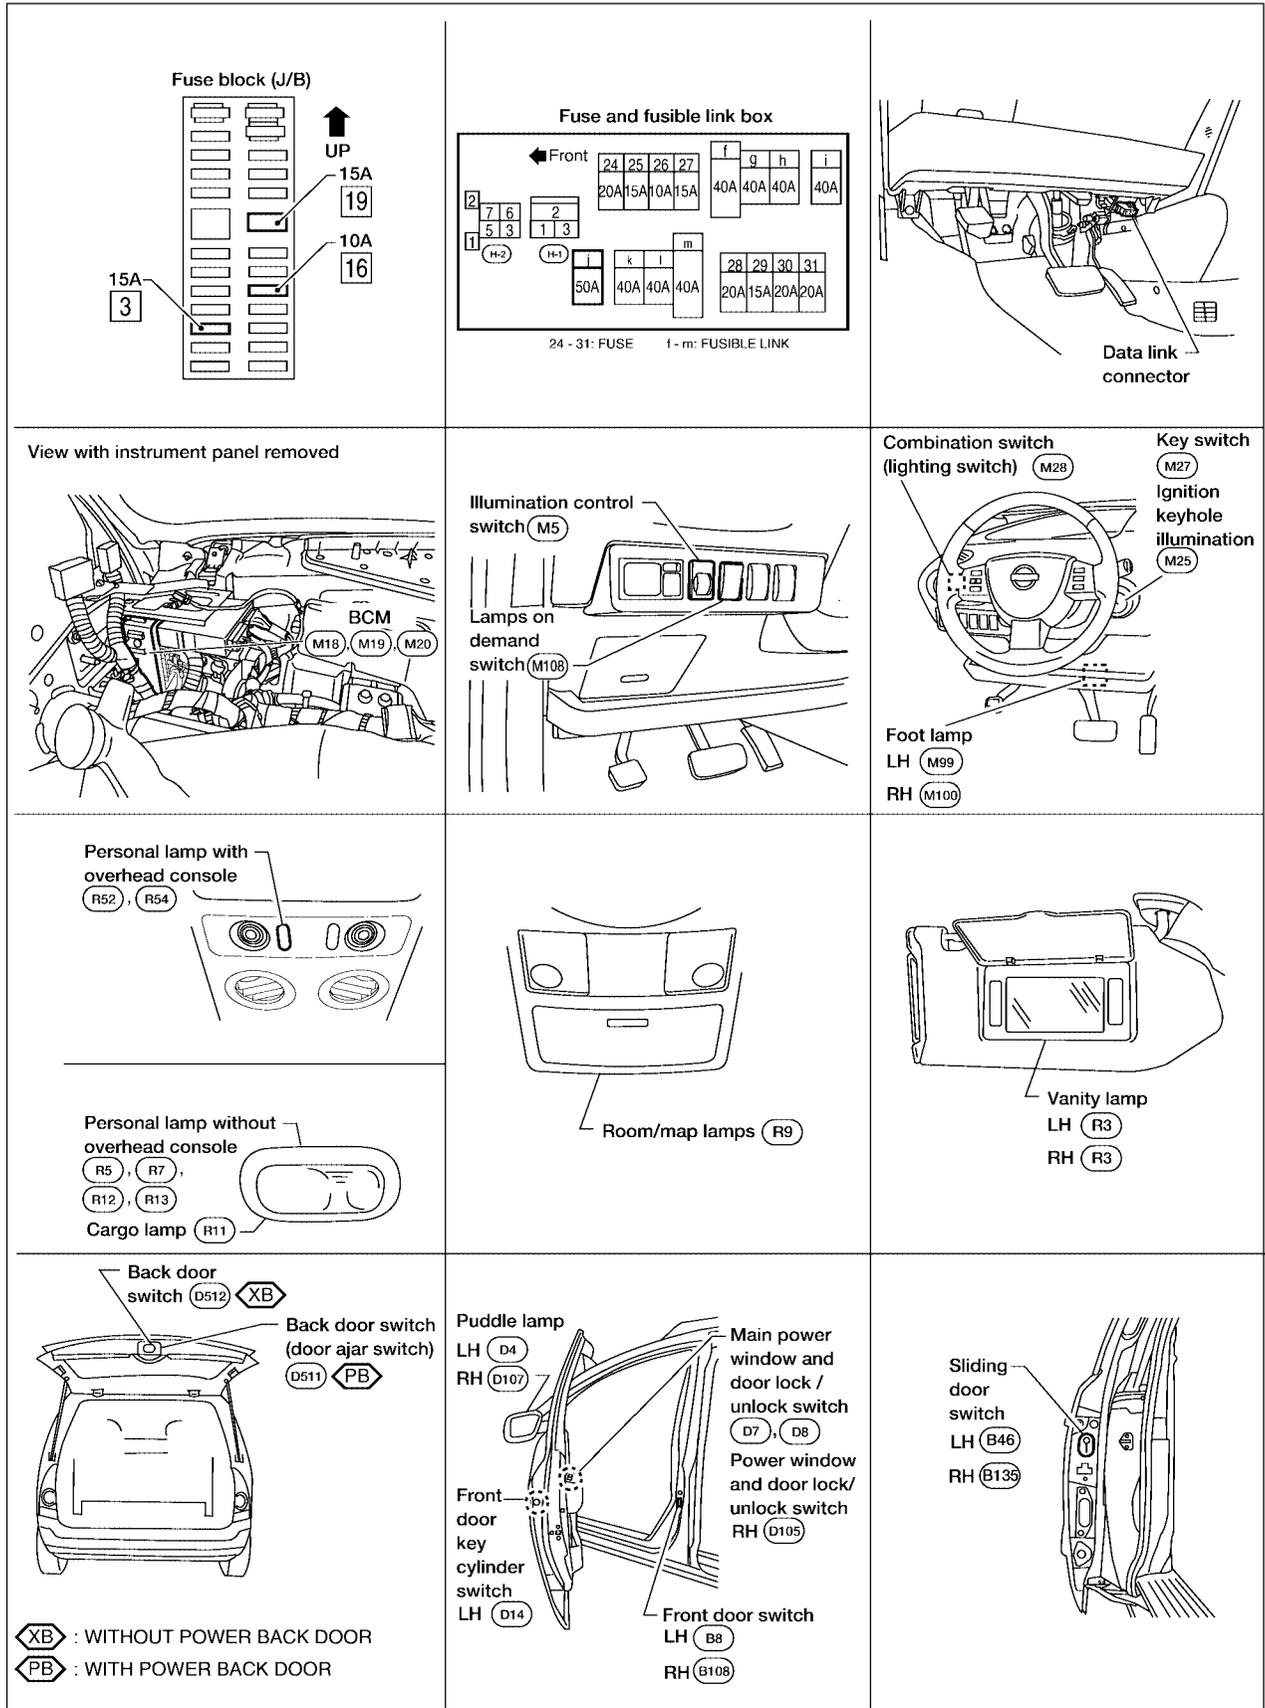

WKIA3151E

INTERIOR ROOM LAMP

EKS00FEB

System Description

When lamps on demand switch is in DOOR position, room/map lamp and personal lamp ON/OFF is controlled by timer according to signals from switches including key switch, front door switch LH, unlock signal from key fob, door lock and unlock switch, key cylinder switch, ignition switch.

When room/map lamp and personal lamp turns ON, there is a gradual brightening over 1 second. When room/map lamp and personal lamp turns OFF, there is a gradual dimming over 1 second.

The room/map lamp and personal lamp timer is controlled by the BCM (body control module).

Room/map lamp and personal lamp timer control settings can be changed with CONSULT-II.

Ignition keyhole illumination turns ON when front door LH is opened (door switch ON) or key is removed from key cylinder. Illumination turns OFF when front door LH is closed (door switch OFF).

Step and foot lamp turns ON when front or rear doors are opened (door switch ON). Lamp turns OFF when front and rear doors are closed (all door switches OFF).

POWER SUPPLY AND GROUND

Power is supplied at all times

- through 15A fuse [No. 19, located in the fuse block (J/B)]
- to key switch terminal 1, and
- through 15A fuse [No. 3, located in the fuse block (J/B)]
- to BCM terminal 42, and
- through 50A fusible link (letter j , located in the fuse and fusible link box)
- to BCM terminal 55.

When the key is inserted in key switch, power is supplied

- through the key switch terminal 2
- to BCM terminal 37.

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [No. 16, located in the fuse block (J/B)]
- to BCM terminal 38.

Ground is supplied

- to BCM terminal 52
- through grounds M57, M61 and M79.

When the front door LH is opened, ground is supplied

- to BCM terminal 62
- through front door switch LH terminal 1
- through case ground of front door switch LH.

When the front door RH is opened, ground is supplied

- to BCM terminal 12
- through front door switch RH terminal 1
- through case ground of front door switch RH.

When the sliding door LH is opened, ground is supplied

- to BCM terminal 63
- through sliding door switch LH terminal 1
- through case ground of sliding door switch LH.

When the sliding door RH is opened, ground is supplied

- to BCM terminal 13
- through sliding door switch RH terminal 1
- through case ground of sliding door switch RH.

When the liftgate is opened, ground is supplied

- to BCM terminal 58
- through back door switch terminal 1 (without power back door) or back door latch (door ajar switch) terminal 7 (with power back door)
- through back door switch terminal 3 (without power back door) or back door latch (door ajar switch) terminal 8 (with power back door)

A

B

C

D

E

F

G

H

I

J

LT

L

M

INTERIOR ROOM LAMP

- through grounds D403 and D404.

When doors are unlocked by either door lock/unlock switch, BCM receives a ground signal

- to BCM terminal 22
- through main power window and door lock/unlock switch terminal 14 (with rear power vent windows) or terminal 12 (without rear power vent windows)
- through main power window and door lock/unlock switch terminal 17 (with rear power vent windows) or terminal 15 (without rear power vent windows), or
- through power window and door lock/unlock switch RH terminal 16
- through power window and door lock/unlock switch RH terminal 11
- through grounds M57, M61 and M79.

When the front door LH is unlocked by the key, the BCM receives a ground signal

- to BCM terminal 22
- through main power window and door lock/unlock switch terminal 14 (with rear power vent windows) or terminal 12 (without rear power vent windows)
- through main power window and door lock/unlock switch terminal 6 (with rear power vent windows) or terminal 7 (without rear power vent windows)
- through front door lock assembly LH (key cylinder switch) terminal 6
- through front door lock assembly LH (key cylinder switch) terminal 5
- through grounds M57, M61 and M79.

When a signal, or combination of signals is received by BCM, ground is supplied

- through BCM terminal 48
- to door mirror (puddle lamp) LH and RH terminal 2 (if equipped)
- to running board lamps pre-wiring terminal 1
- to lamps on demand switch terminal 3
- through lamps on demand switch terminal 4 (with switch in DOOR position)
- to room/map lamps terminal 2
- to personal lamps terminal 2 (without rear roof console assembly) or terminal 3 (with rear roof console assembly).

With power and ground supplied, the lamps illuminate.

SWITCH OPERATION

When front door switch LH is ON (door is opened), ground is supplied

- to ignition keyhole illumination terminal –
- through BCM terminal 1.

And power is supplied

- through BCM terminal 41
- to ignition keyhole illumination terminal +.

When any door switch is ON (door is opened), ground is supplied

- to front step lamp LH and RH and foot lamp LH and RH terminal –
- through BCM terminal 47.

And power is supplied

- through BCM terminal 41
- to front step lamp LH and RH terminal +
- to puddle lamp LH and RH terminal 1 (if equipped)
- to running board lamps pre-wiring terminal 2
- to foot lamp LH and RH terminal +.

When room/map lamps switch is ON, ground is supplied

- to room/map lamps terminal 3
- through grounds M57, M61 and M79.

And power is supplied

INTERIOR ROOM LAMP

- through BCM terminal 41
- to room/map lamps terminal 1.

When vanity lamp LH or RH is ON, ground is supplied

- to vanity lamp LH and RH terminal –
- through grounds M57, M61 and M79.

And power is supplied

- through BCM terminal 41
- to vanity lamp LH and RH terminal +.

When personal lamps 2nd row LH or RH is ON, ground is supplied

- to personal lamps 2nd row terminal 3 (without rear roof console assembly) or terminal 2 (with rear roof console assembly)
- through grounds M57, M61 and M79.

And power is supplied

- through BCM terminal 41
- to personal lamps 2nd row terminal 1.

When personal lamps 3rd row LH or RH is ON, ground is supplied

- to personal lamps 3rd row terminal 3 (without rear roof console assembly) or terminal 2 (with rear roof console assembly)
- through grounds M57, M61 and M79.

And power is supplied

- through BCM terminal 41
- to personal lamps 3rd row terminal 1.

When cargo lamp is ON, ground is supplied

- to cargo lamp terminal 1
- through grounds M57, M61 and M79.

And power is supplied

- through BCM terminal 41
- to cargo lamp terminal 2.

ROOM LAMP TIMER OPERATION

When lamps on demand switch is in DOOR position and when all conditions below are met, BCM performs timer control (maximum 30 seconds) for interior room/map lamp ON/OFF.

Power is supplied

- through 15A fuse [No. 19, located in the fuse block (J/B)]
- to key switch terminal 1.

Key is removed from ignition key cylinder (key switch OFF), power will not be supplied to BCM terminal 37.

Ground is supplied

- to BCM terminal 22
- through main power window and door lock/unlock switch terminal 14 (with rear power vent windows) or 12 (without rear power vent windows).

At the time that front door LH is opened, BCM detects that front door LH is unlocked. It determines that interior room/map lamp timer operation conditions are met and turns the interior room/map lamp ON for 30 seconds.

Key is in ignition key cylinder (key switch ON), power is supplied

- through key switch terminal 2
- to BCM terminal 37.

When key is removed from key switch (key switch OFF), power supply to BCM terminal 37 is terminated. BCM detects that key has been removed, determines that interior room/map lamp timer conditions are met, and turns the interior room/map lamp ON for 30 seconds.

When front door LH opens → closes and the key is not inserted in the key switch (key switch OFF), BCM terminal 62 changes between 0V (door open) → 12V (door closed). The BCM determines that conditions for interior room/map lamp operation are met and turns the interior room/map lamp ON for 30 seconds.

Timer control is canceled under the following conditions.

A

B

C

D

E

F

G

H

I

J

LT

L

M

INTERIOR ROOM LAMP

- Front door LH is locked [when locked with key fob, main power window and door lock/unlock switch or front door lock assembly LH (key cylinder switch)]
- Front door LH is opened (front door switch LH turns ON)
- Ignition switch ON.

INTERIOR LAMP BATTERY SAVER CONTROL

If interior lamp is left "ON", it will not be turned out even when door is closed.

BCM turns off interior lamp automatically to save battery 30 minutes after ignition switch is turned OFF.

BCM controls interior lamps listed below:


- Vanity lamp
- Room/map lamp
- Cargo lamp
- Personal lamp
- Step lamps
- Puddle lamps (if equipped)
- Foot lamps
- Ignition keyhole illumination
- Running board lamps

After lamps turn OFF by the battery saver system, the lamps illuminate again when

- signal received from key fob, or main power window and door lock/unlock switch or front door lock assembly LH (key cylinder switch) is locked or unlocked
- door is opened or closed
- key is removed from or inserted in ignition key cylinder.

Interior lamp battery saver control period can be changed by the function setting of CONSULT-II.

INTERIOR ROOM LAMP

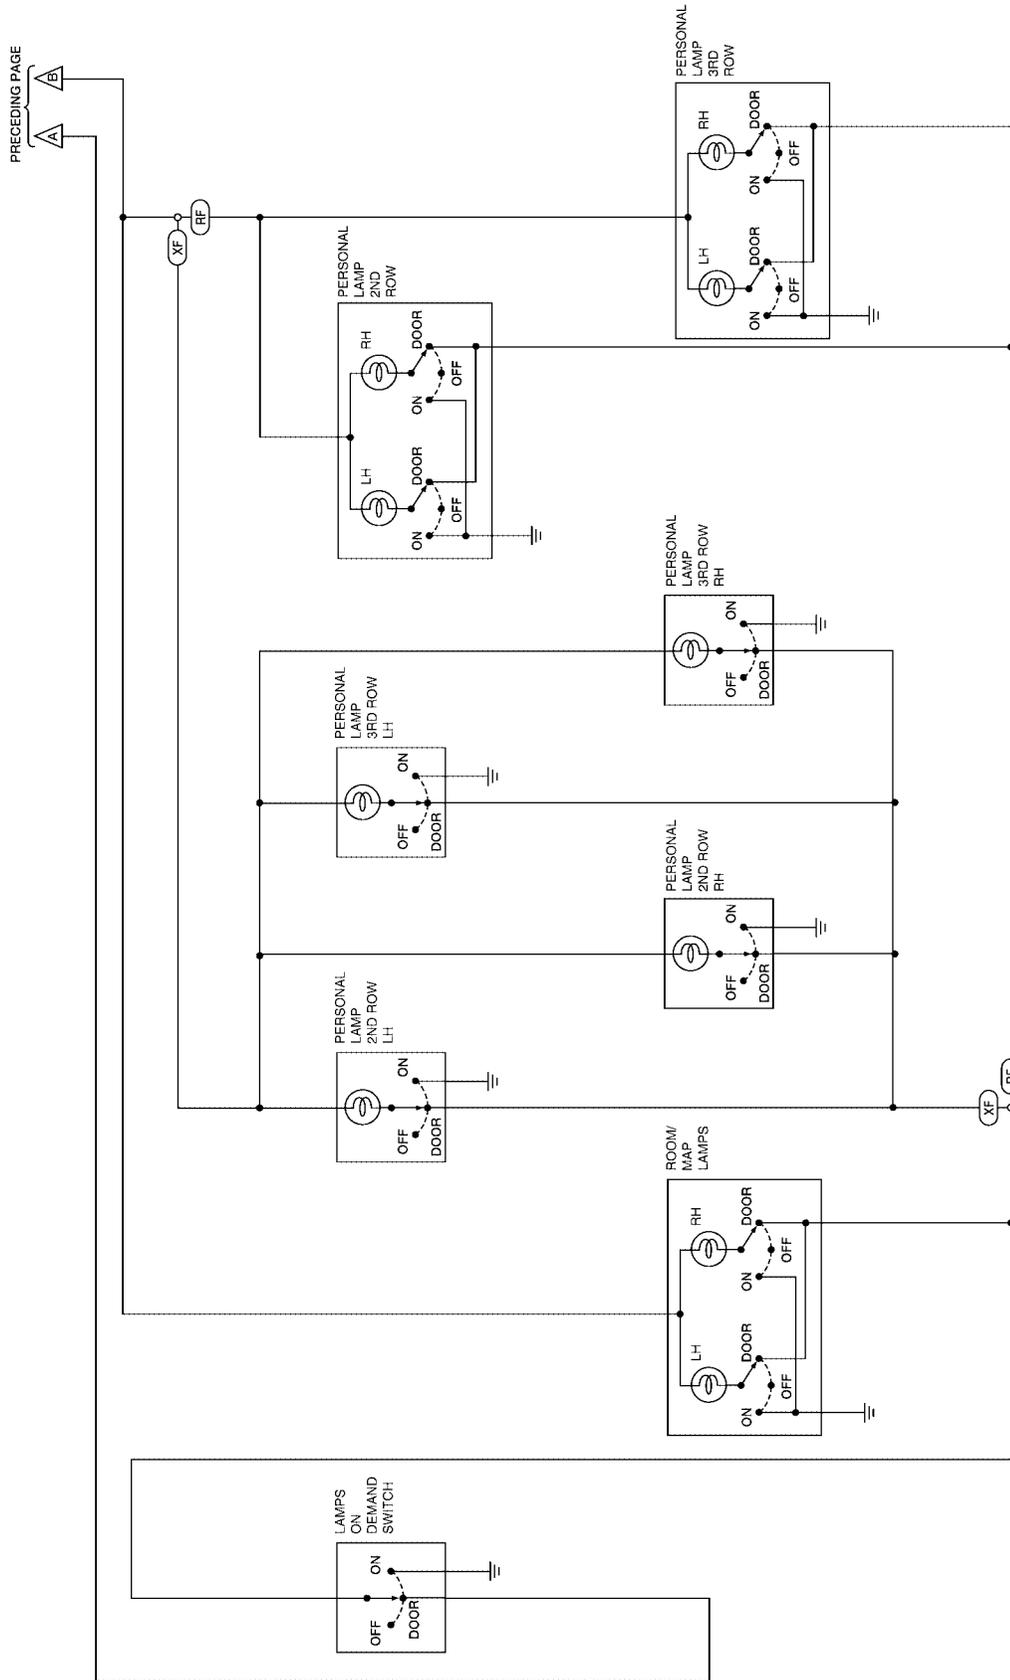

RF : WITH REAR ROOF CONSOLE
 XF : WITHOUT REAR ROOF CONSOLE

WKWA3529E



INTERIOR ROOM LAMP

Wiring Diagram — INT/L —

EKS00FED

LT-INT/L-01

— : DATA LINE

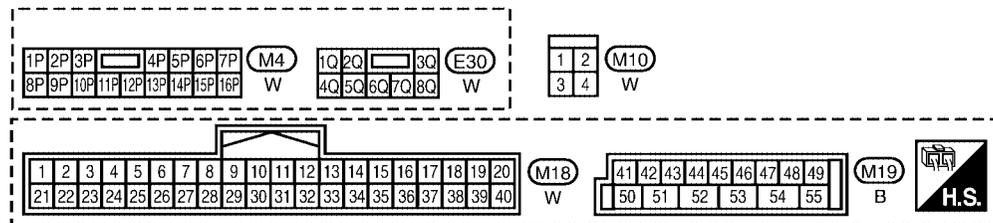
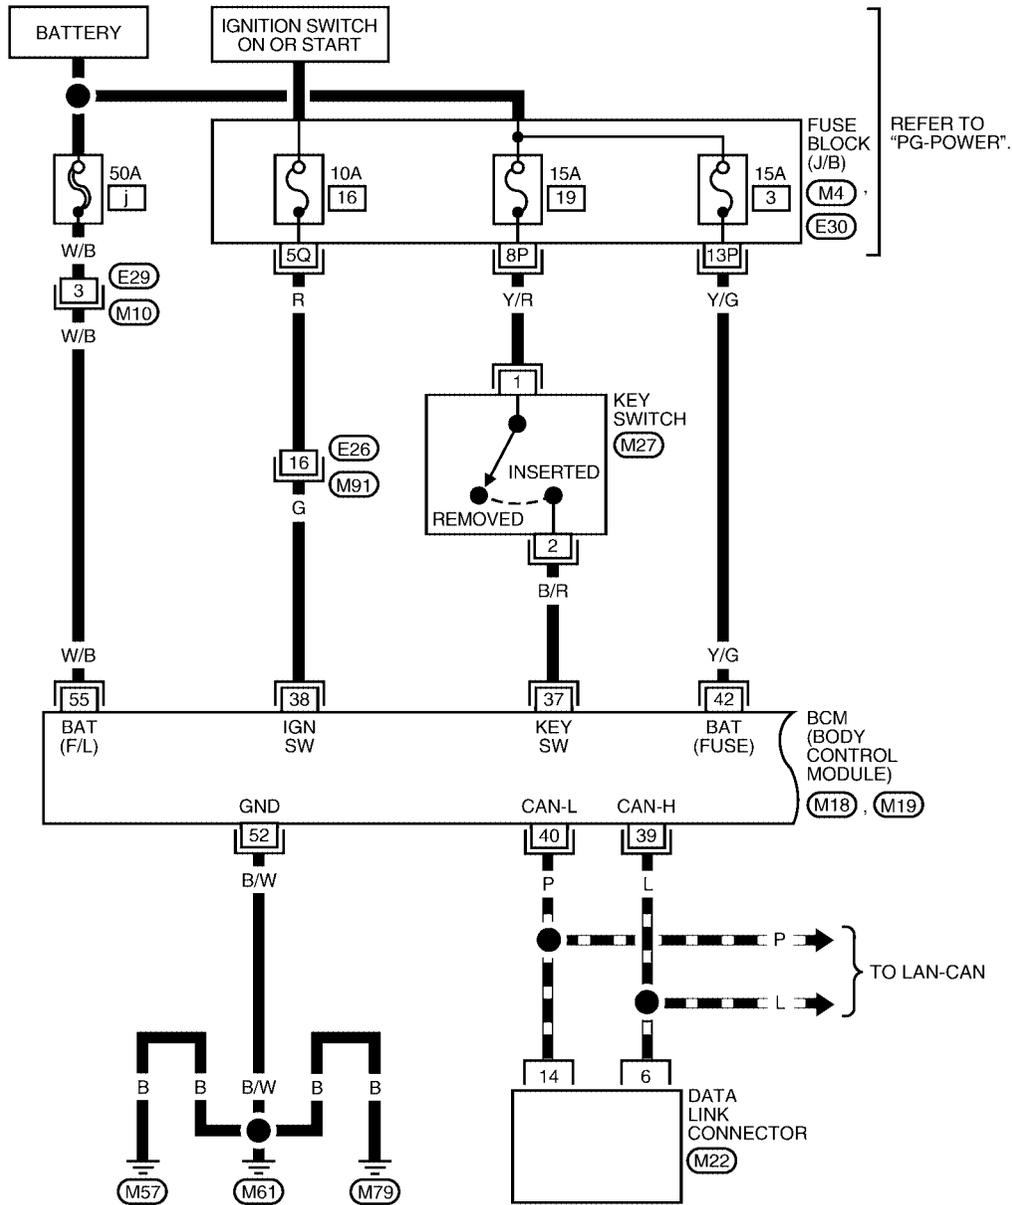


WKWA3226E

INTERIOR ROOM LAMP

LT-INT/L-02



- (PB) : WITH POWER BACK DOOR
 (XB) : WITHOUT POWER BACK DOOR
 *1 (PB) : 4 *2 (PB) : 4 *3 (PB) : 14 *4 (PB) : 7 *5 (PB) : 8
 (XB) : 1 (XB) : 1 (XB) : 6 (XB) : 1 (XB) : 3

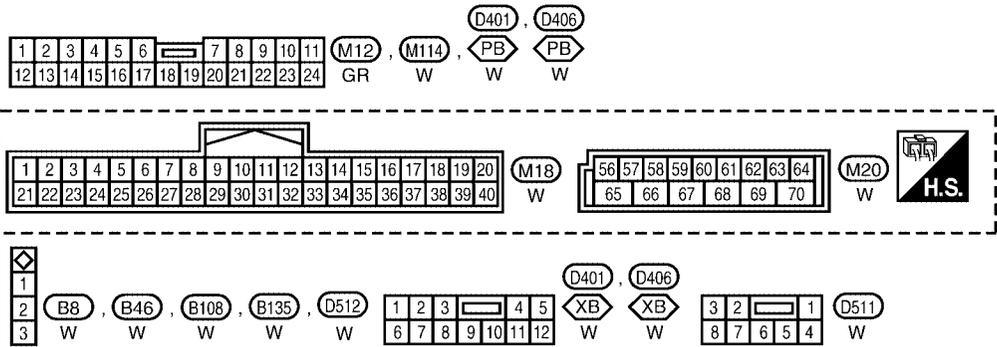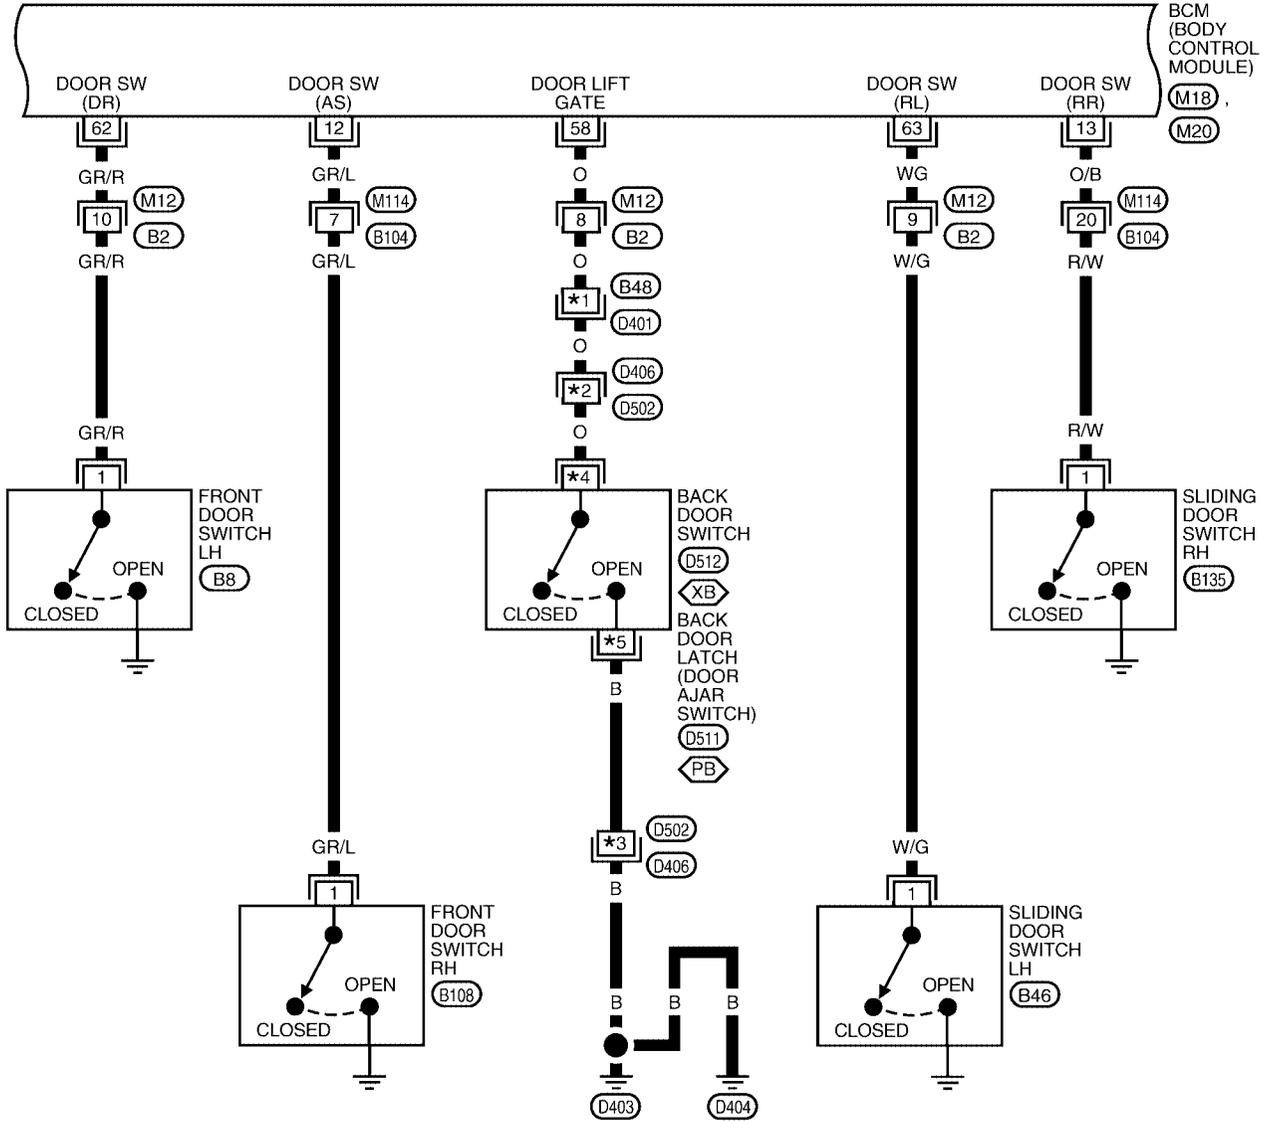

WKWA3227E

INTERIOR ROOM LAMP

LT-INT/L-03


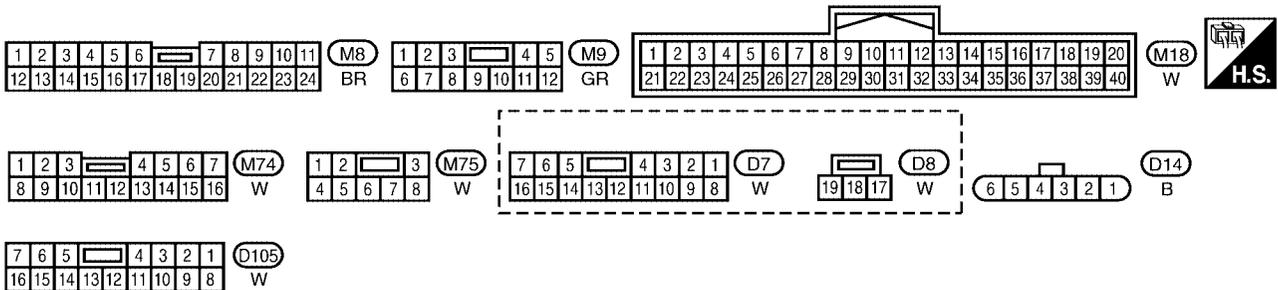
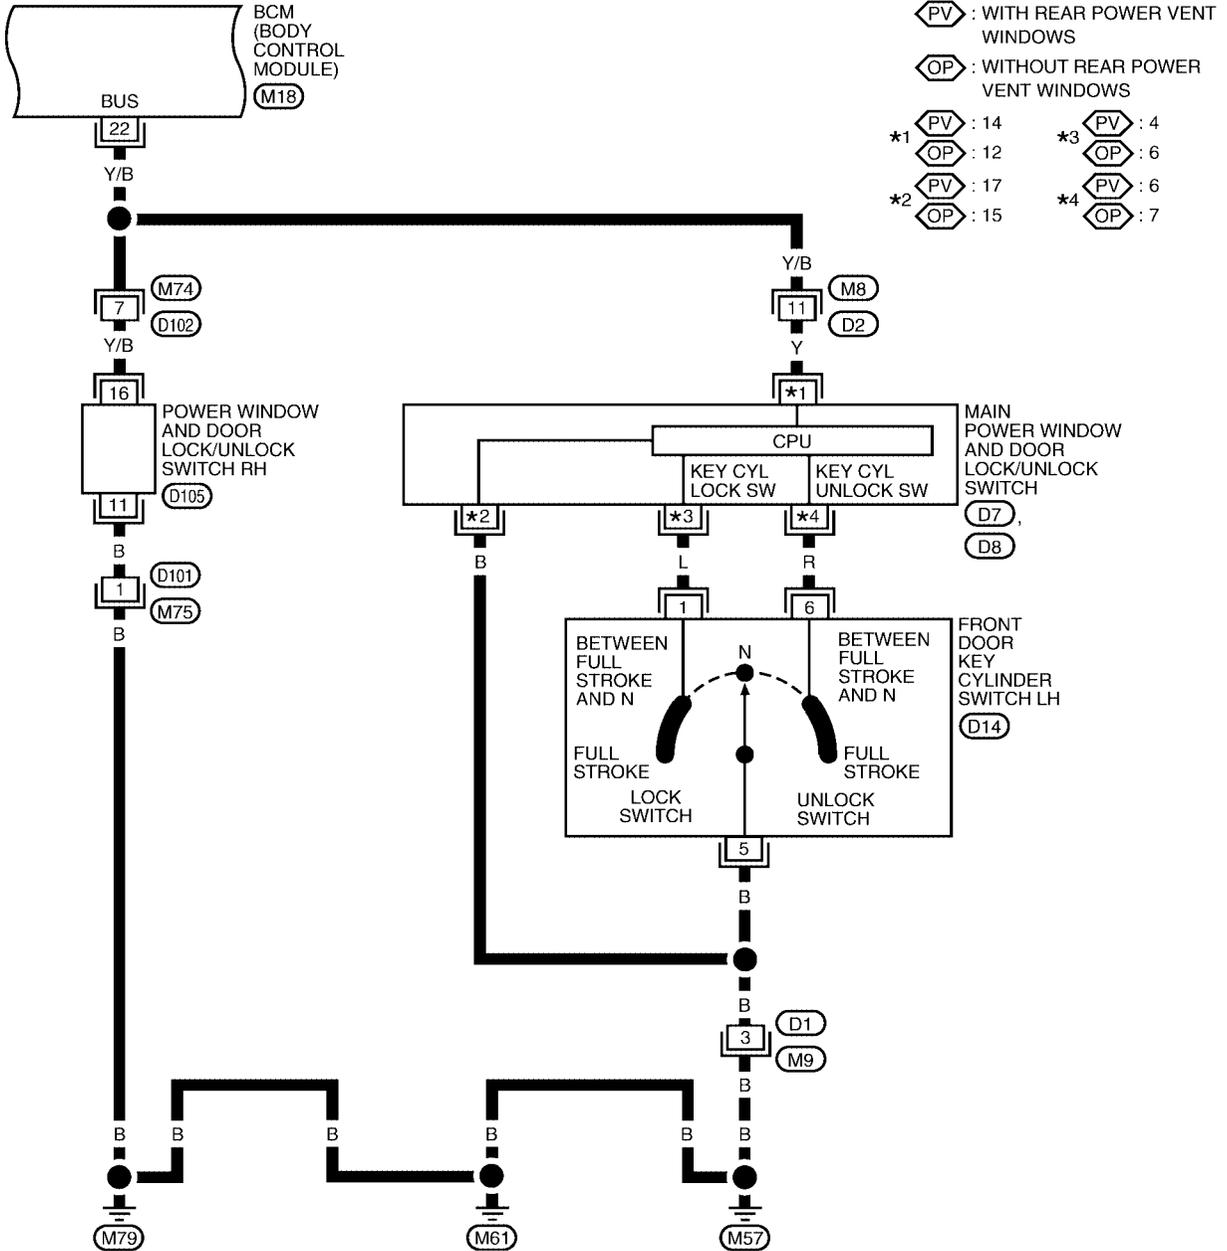


WKWA3228E

INTERIOR ROOM LAMP

LT-INT/L-04

(WP) : WITH PUDDLE LAMPS


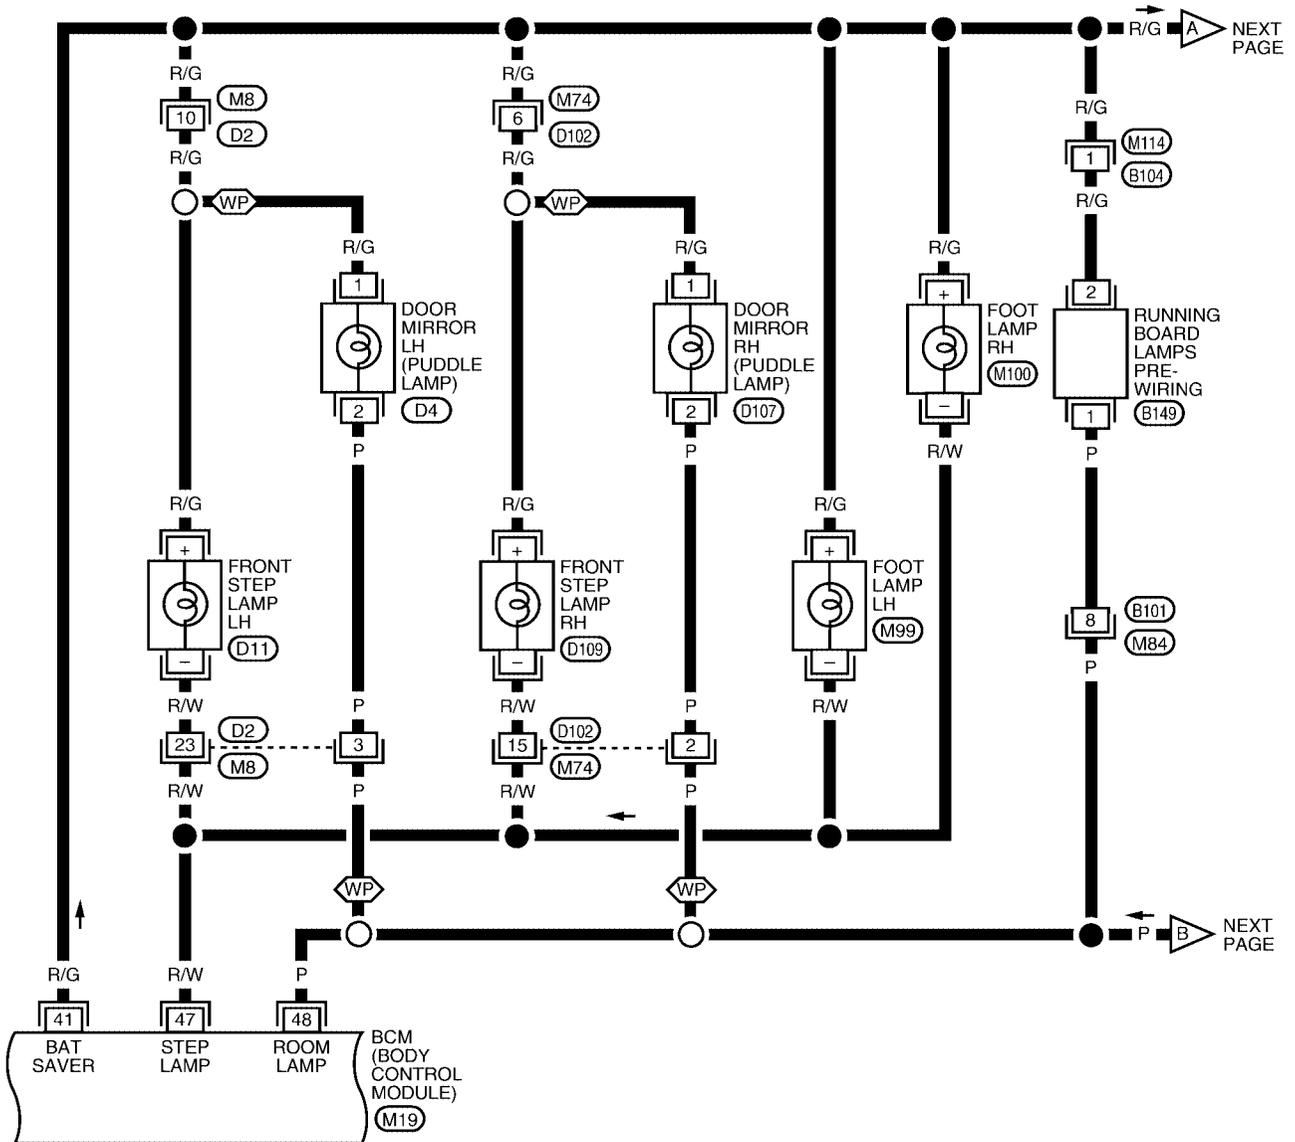


WKWA5235E

INTERIOR ROOM LAMP

LT-INT/L-05


EP : EARLY PRODUCTION RF : WITH REAR ROOF CONSOLE
LP : LATE PRODUCTION XF : WITHOUT REAR ROOF CONSOLE

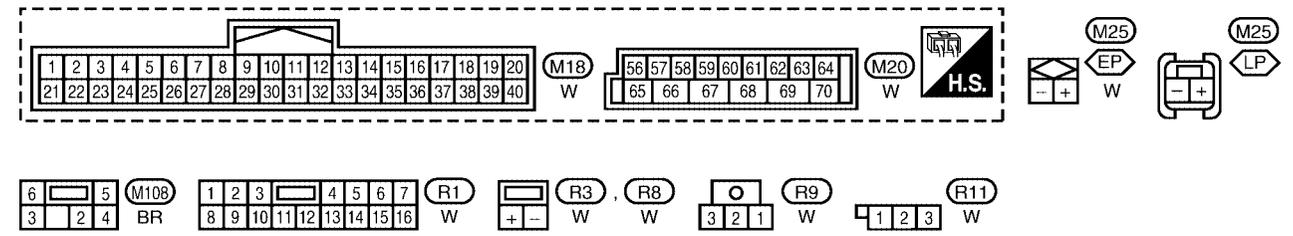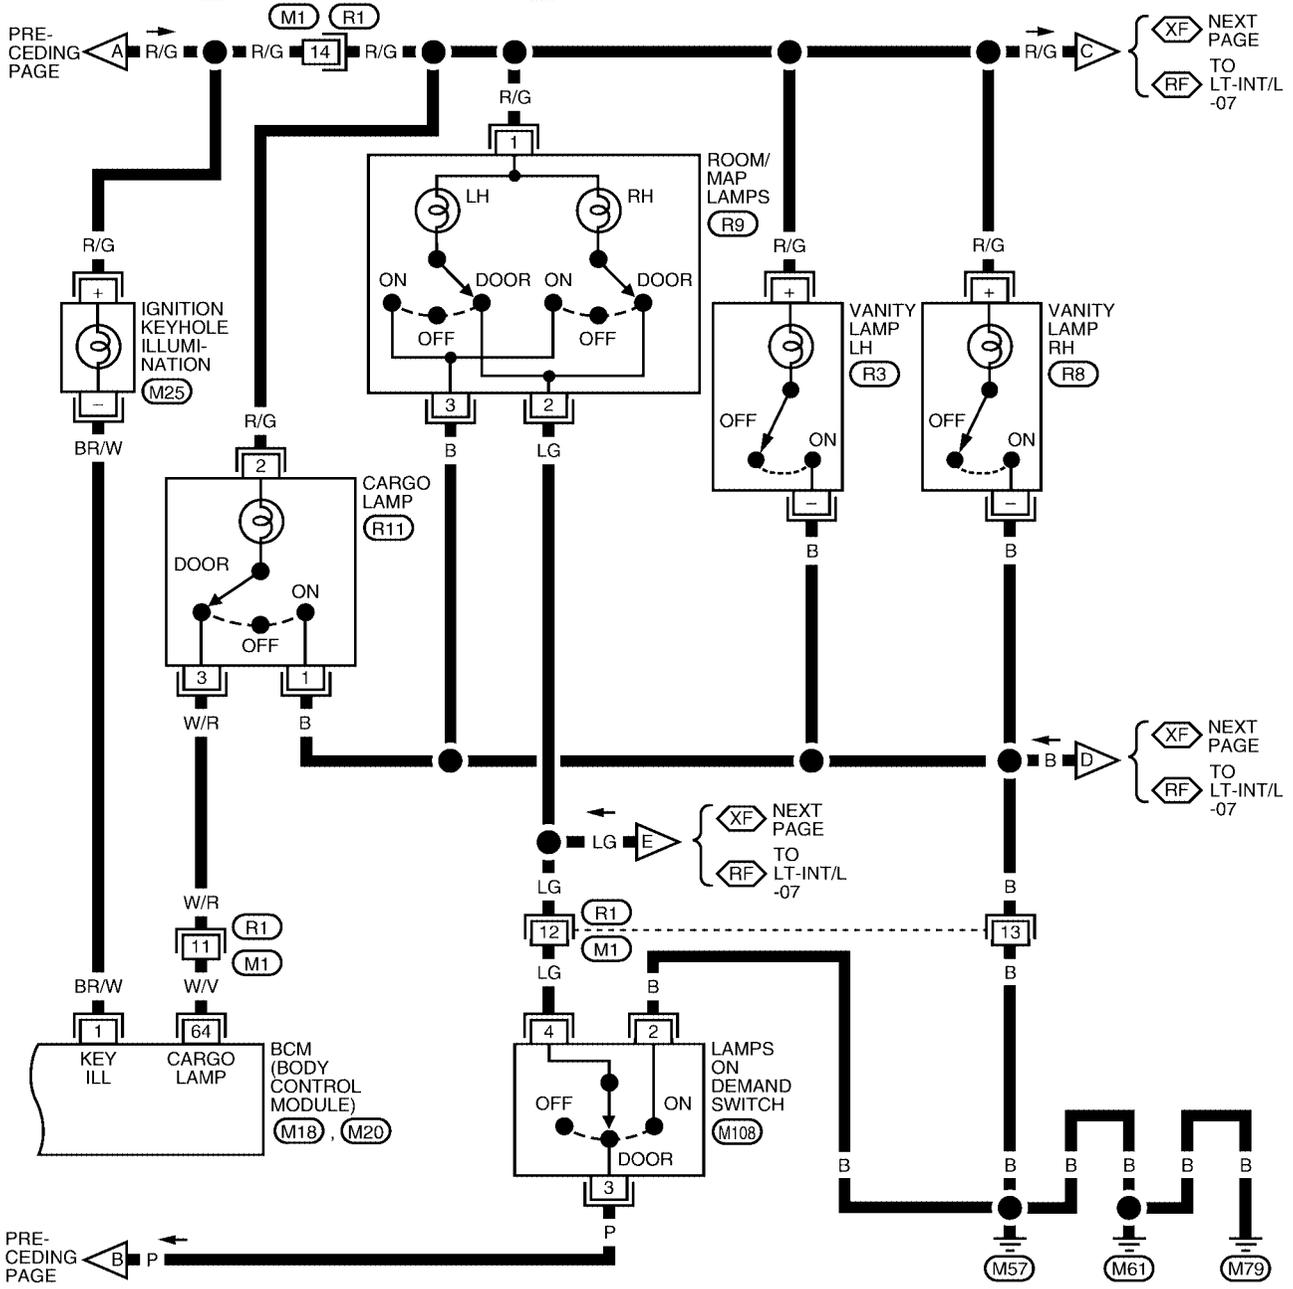


INTERIOR ROOM LAMP

LT-INT/L-07

WD : WITH DVD ENTERTAINMENT SYSTEM
 XD : WITHOUT DVD ENTERTAINMENT SYSTEM

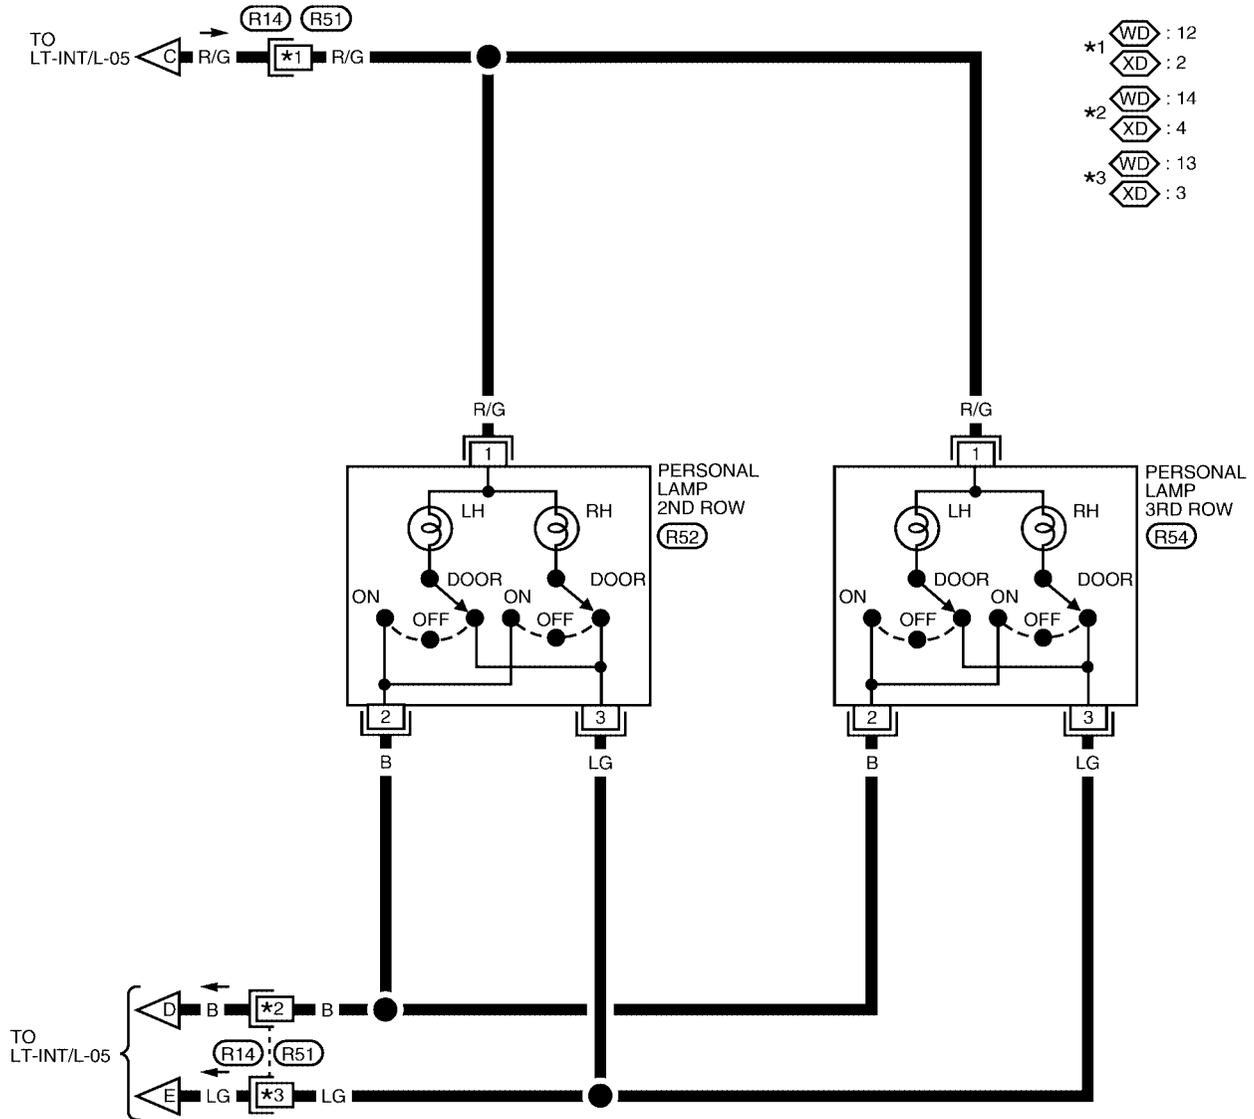

A
B
C
D
E
F
G
H
I
J
LT
L
M



WKWA3230E

INTERIOR ROOM LAMP

Terminals and Reference Values for BCM

EKS00FEE

Terminal No.	Wire color	Signal name	Measuring condition			Reference value (Approx.)
			Ignition switch	Operation or condition		
1	BR/W	Ignition keyhole illumination signal	OFF	Door is locked. (SW OFF)		Battery voltage
				Door is unlocked. (SW ON)		0V
12	GR/L	Front door switch RH signal	OFF	Front door switch RH	ON (open)	0V
					OFF (closed)	Battery voltage
13	O/B	Sliding door switch RH signal	OFF	Sliding door switch RH	ON (open)	0V
					OFF (closed)	Battery voltage
22	Y/B	Power window switch bus	—	—		
37	B/R	Key-in switch detection signal	OFF	Vehicle key is removed.		0V
				Vehicle key is inserted.		Battery voltage
38	G	Ignition power supply	ON	—		Battery voltage
39	L	CAN-H	—	—		—
40	P	CAN-L	—	—		—
41	R/G	Battery saver output signal	OFF	30 minutes after ignition switch is turned to OFF		0V
			ON	—		Battery voltage
42	Y/G	Battery power supply	OFF	—		Battery voltage
47	R/W	Step lamp signal	OFF	Any door is open (ON)		0V
				All doors are closed (OFF)		Battery voltage
48	P	Room/map lamp signal	OFF	Lamps on demand switch: DOOR position	Any door switch ON (open)	0V
					Any door switch OFF (closed)	Battery voltage
52	B/W	Ground	ON	—		0V
55	W/B	Battery power supply	OFF	—		Battery voltage
58	O	Back door latch (door ajar switch) signal ¹ Back door switch signal ²	OFF	Back door latch (door ajar switch) ¹ Back door switch ²	ON (open)	0V
					OFF (closed)	Battery voltage
62	GR/R ¹ GR ²	Front door switch LH signal	OFF	Front door switch LH	ON (open)	0V
					OFF (closed)	Battery voltage
63	W/G ¹ R/W ²	Sliding door switch LH signal	OFF	Sliding door switch LH	ON (open)	0V
					OFF (closed)	Battery voltage
64	W/V	Cargo lamp signal	OFF	Cargo lamp switch: DOOR position	ON (open)	0V
					OFF (closed)	Battery voltage

1 With power back door
2 Without power back door

INTERIOR ROOM LAMP

EKS00FEF

How to Proceed With Trouble Diagnosis

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-137, "System Description"](#) .
3. Carry out the Preliminary Check. Refer to [LT-151, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the interior room lamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check SWITCH INSPECTION

EKS00FEG

- Ensure lamps on demand switch is in the DOOR or ON position.

INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES OR FUSIBLE LINK

Check for blown BCM fuses or fusible link.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	j
		3
	Ignition switch ON or START position	16

Refer to [LT-143, "Wiring Diagram — INT/L —"](#) .

OK or NG


OK >> GO TO 2.

NG >> If fuse or fusible link is blown, be sure to eliminate cause of malfunction before installing new fuse or fusible link. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. CHECK POWER SUPPLY CIRCUIT

1. Disconnect BCM connectors.
2. Check voltage between BCM connector and ground.

BCM (+)		(-)	Ignition switch position	
Connector	Terminal		OFF	ON
M19	42	Ground	Battery voltage	Battery voltage
	55		Battery voltage	Battery voltage
M18	38		0V	Battery voltage

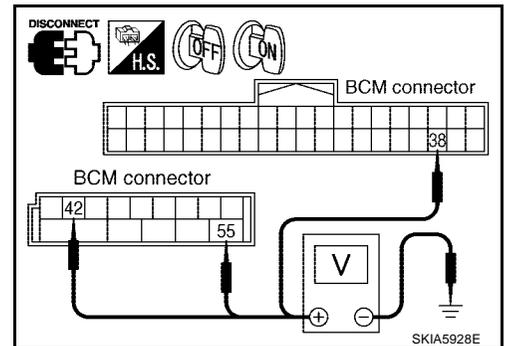

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse or fusible link.

3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

BCM			Continuity
Connector	Terminal		
M19	52	Ground	Yes

OK or NG

OK >> Inspection End.

NG >> Check harness ground circuit.

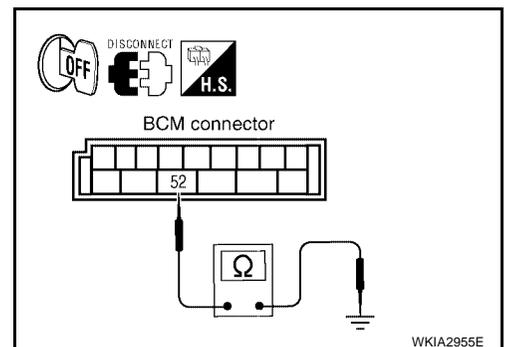

INTERIOR ROOM LAMP

CONSULT-II Function (BCM)

EKS00FEH

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

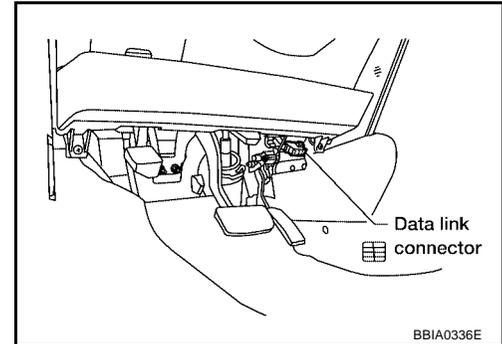

2. Touch "START (NISSAN BASED VHCL)".

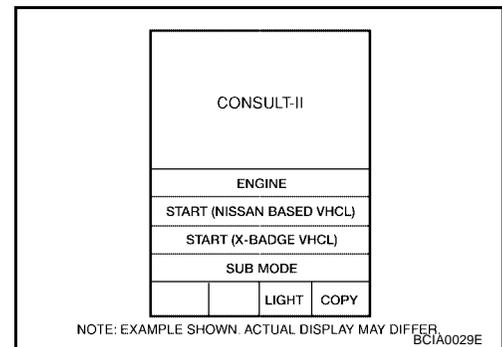


3. Touch "BCM" on "SELECT SYSTEM" screen. If "BCM" is not indicated, go to [GI-38, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

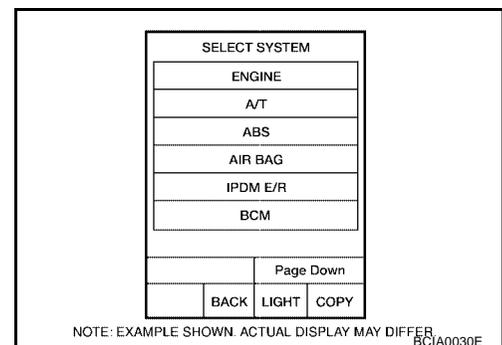

INTERIOR ROOM LAMP

4. Touch "INT LAMP" on "SELECT TEST ITEM" screen.

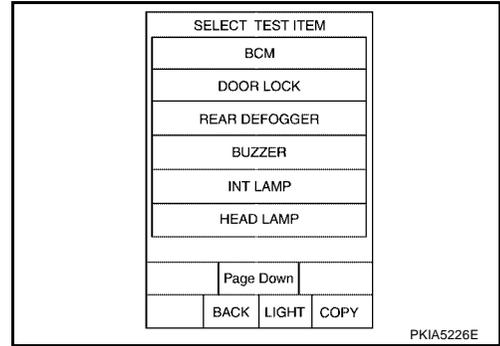

WORK SUPPORT

Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch "SET I/L D-UNLCK INTCON" on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "CHANGE SETT".
6. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
7. Touch "END".

Display Item List

Item	Description	CONSULT-II
SET I/L D-UNLCK INTCON	The 30 seconds operating function of the interior room lamps and the ignition keyhole illumination can be selected when front door LH is released (unlocked).	ON/OFF
ROOM LAMP ON TIME SET	The time in order to escalate illumination can be adjusted when the interior room lamps and the ignition keyhole illumination is turned on.	MODE 1 - 7
ROOM LAMP OFF TIME SET	The time in order to diminish illumination can be adjusted when the interior room lamps and the ignition keyhole illumination is turned off.	MODE 1 - 7

Reference between "MODE" and "TIME" for "TURN ON/OFF".

MODE	1	2	3	4	5	6	7
Time (sec.)	0.5	1	2	3	4	5	0

DATA MONITOR

Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors the individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

INTERIOR ROOM LAMP

Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
KEY ON SW "ON/OFF"	Displays "Key inserted (ON)/key removed (OFF)" status judged from the key switch signal.
DOOR SW-DR "ON/OFF"	Displays status of the front door LH as judged from the front door switch LH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-AS "ON/OFF"	Displays "Door open (ON)/Door closed (OFF)" status, determined from front door switch RH signal.
DOOR SW-RR "ON/OFF"	Displays "Door open (ON)/Door closed (OFF)" status, determined from sliding door switch RH signal.
DOOR SW-RL "ON/OFF"	Displays "Door open (ON)/Door closed (OFF)" status, determined from sliding door switch LH signal.
BACK DOOR SW "ON/OFF"	Displays "Door open (ON)/Door closed (OFF)" status, determined from back door switch signal.
KEY CYL LK-SW "ON/OFF"	Displays "Door locked (ON)" status, determined from key cylinder lock switch in front door LH.
KEY CYL UN-SW "ON/OFF"	Displays "Door unlocked (OFF)" status, determined from key cylinder lock switch in front door LH.
CDL LOCK SW "ON/OFF"	Displays "Door locked (ON)/Door unlocked (OFF)" status, determined from locking detection switch in front door LH.
CDL UNLOCK SW "ON/OFF"	Displays "Door unlocked (OFF)" status, determined from locking detection switch in front door RH.
KEYLESS LOCK "ON/OFF"	Displays "Locked (ON)/Other (OFF)" status, determined from lock signal.
KEYLESS UNLOCK "ON/OFF"	Displays "Unlocked (ON)/Other (OFF)" status, determined from unlock signal.

ACTIVE TEST

Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

Display Item List

Test item	Description
INT LAMP	Interior room lamp can be operated by any ON-OFF operations.
IGN ILLUM	Ignition keyhole illumination can be operated by ON-OFF operation.
STEP LAMP TEST	Step lamps can be operated by any ON-OFF operations.
LUGGAGE LAMP TEST	Cargo lamp can be operated by any ON-OFF operations.

Room/Map Lamp Control Does Not Operate

EKS00FEI

1. CHECK EACH SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-154, "Display Item List"](#) for switches and their functions.

OK or NG

- OK >> GO TO 2.
 NG >> Inspect malfunctioning switch system.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
KEY ON SW	ON
DOOR SW-DR	ON
DOOR SW-AS	ON
DOOR SW-RR	OFF
DOOR SW-RL	OFF
BACK DOOR SW	OFF
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

SKIA5930E


INTERIOR ROOM LAMP

2. ACTIVE TEST

1. Select "BCM" on CONSULT-II. Select "INT LAMP" active test.
2. When lamps on demand switch is in DOOR position, use active test to make sure interior room lamp operates.

OK or NG

- OK >> Replace BCM. Refer to [BCS-20, "Removal and Installation of BCM"](#).
- NG >> GO TO 3.

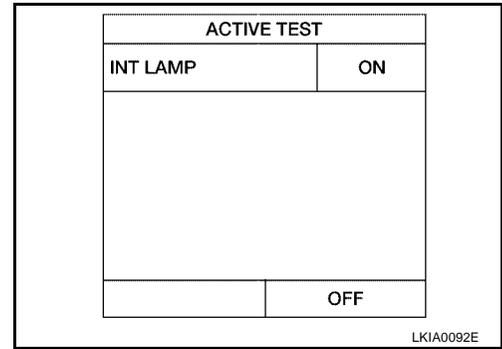


3. CHECK ROOM/MAP LAMPS INPUT

1. Turn ignition switch OFF.
2. Check voltage between room/map lamps harness connector terminal and ground.

Terminals		(-)	Voltage (approx.)
(+) Room/map lamps connector			
Room/map lamps connector	Terminal		
R9	1	Ground	Battery voltage

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 6.

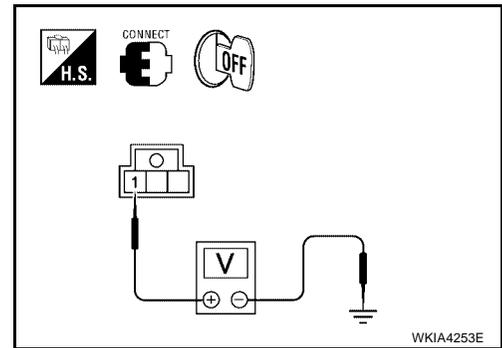


4. CHECK LAMPS ON DEMAND SWITCH

1. Disconnect lamps on demand switch connector.
2. Check continuity between lamps on demand switch terminals.

Lamps on demand switch		Condition	Continuity
Terminal			
3	4	Lamps on demand switch position: DOOR	Yes
		Lamps on demand switch position: OFF	No

OK or NG

- OK >> GO TO 5.
- NG >> Replace lamps on demand switch.

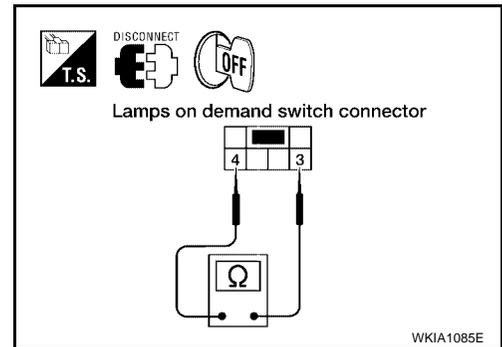

INTERIOR ROOM LAMP


5. CHECK LAMPS ON DEMAND CIRCUIT

1. Connect lamps on demand switch connector.
2. Turn lamps on demand switch to DOOR position.
3. Disconnect BCM connector.
4. Check continuity between BCM harness connector terminal and lamps on demand switch harness connector terminal.

A		B		Continuity
BCM connector	Terminal	Lamps on demand switch connector	Terminal	
M19	48	M108	3	Yes

OK or NG

- OK >> Replace BCM if room/map lamps do not work after setting the connector again. Refer to [BCS-20, "Removal and Installation of BCM"](#).
- NG >> Repair harness or connector.

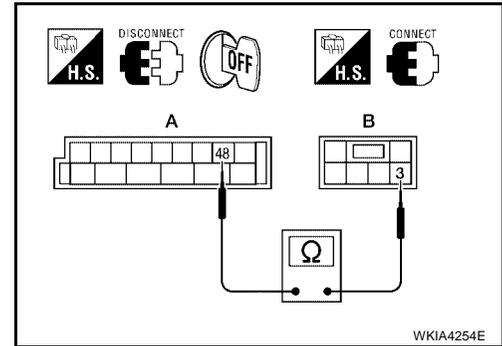


6. CHECK ROOM/MAP LAMPS CIRCUIT

1. Disconnect BCM connector and room/map lamps connector.
2. Check continuity between BCM harness connector terminal and room/map lamps harness connector terminal.

A		B		Continuity
BCM connector	Terminal	Room/map lamps connector	Terminal	
M19	41	R9	1	Yes

OK or NG

- OK >> Replace BCM if room/map lamps do not work after setting the connector again. Refer to [BCS-20, "Removal and Installation of BCM"](#).
- NG >> Repair harness or connector between BCM and room/map lamps or between room/map lamps and lamps on demand switch.

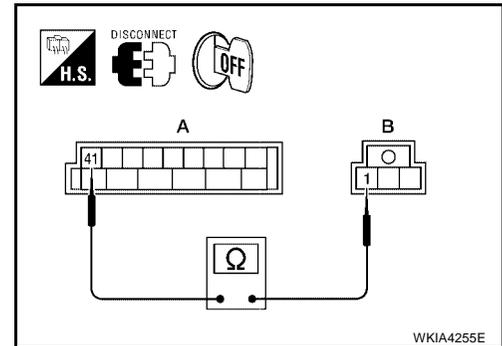

INTERIOR ROOM LAMP

EKS00FEJ

Personal Lamp Control Does Not Operate (Room/Map Lamps Operate)

1. CHECK EACH DOOR SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-138, "SWITCH OPERATION"](#) for switches and their function.

OK or NG

- OK >> GO TO 2.
- NG >> Inspect malfunctioning door switch.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
KEY ON SW	ON
DOOR SW-DR	ON
DOOR SW-AS	ON
DOOR SW-RR	OFF
DOOR SW-RL	OFF
BACK DOOR SW	OFF
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

SKIA5930E


2. CHECK PERSONAL LAMP OUTPUT

1. Turn ignition switch OFF.
2. Confirm lamps on demand switch is in the DOOR position.
3. Disconnect personal lamp connector.
4. Open any door.
5. Check voltage between personal lamp harness connector terminal 1 and ground.

1 - Ground : Battery voltage should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.

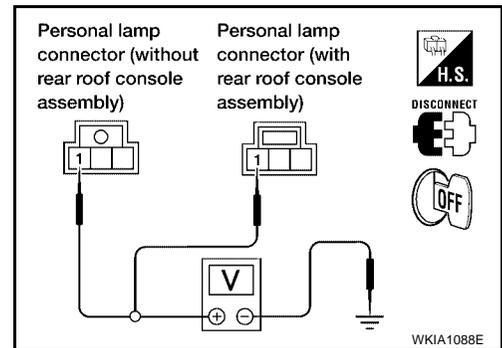


3. CHECK PERSONAL LAMP CONTROL CIRCUIT

1. Disconnect lamps on demand switch connector.
2. Check continuity between lamps on demand switch harness connector M108 terminal 4 and personal lamp harness connector terminal 2 (without rear roof console assembly) or terminal 3 (with rear roof console assembly).

4 - 2 or 3 : Continuity should exist.

OK or NG

- OK >> Replace personal lamp.
- NG >> Repair harness or connector.

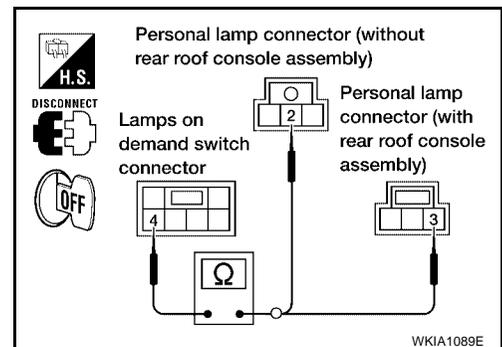

INTERIOR ROOM LAMP

EKS00FEK

Ignition Keyhole Illumination Control Does Not Operate

1. CHECK EACH SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-154, "Display Item List"](#) for switches and their functions.

OK or NG

- OK >> GO TO 2.
- NG >> Inspect malfunctioning switch system.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
KEY ON SW	ON
DOOR SW-DR	ON
DOOR SW-AS	ON
DOOR SW-RR	OFF
DOOR SW-RL	OFF
BACK DOOR SW	OFF
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

SKIA5930E

2. ACTIVE TEST

1. Select "BCM" on CONSULT-II. Select "INT LAMP".
2. Select "IGN ILLUM" active test to make sure lamp operates.

OK or NG

- OK >> Replace BCM. Refer to [BCS-20, "Removal and Installation of BCM"](#).
- NG >> GO TO 3.

ACTIVE TEST	
IGN ILLUM	ON
	OFF

SKIA3992E


3. CHECK IGNITION KEYHOLE ILLUMINATION INPUT

1. Check voltage between ignition keyhole illumination harness connector M25 (A)(early production) or (B)(late production) terminal + and ground.

+ - Ground : Battery voltage should exist.

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 6.

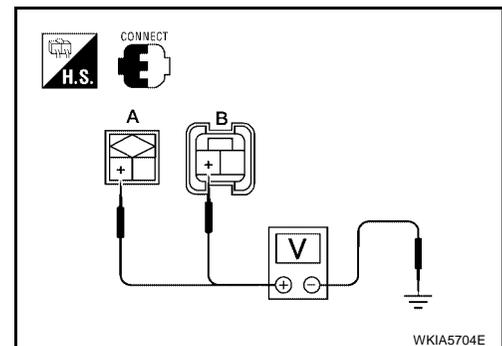

INTERIOR ROOM LAMP

4. CHECK IGNITION KEYHOLE ILLUMINATION BULB


1. Turn ignition switch OFF.
2. Disconnect ignition keyhole illumination connector.
3. Check continuity between ignition keyhole illumination terminals + and - (A)(early production) or (B)(late production).

+ - - : Continuity should exist.

OK or NG

OK >> GO TO 5.

NG >> Replace ignition keyhole illumination bulb.

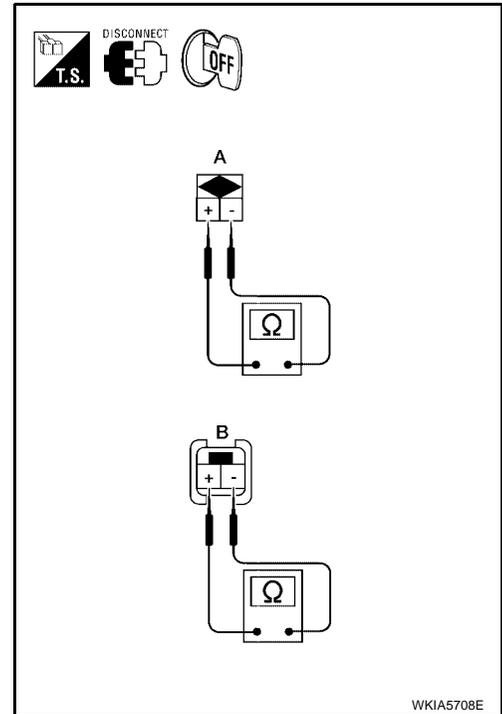

5. CHECK IGNITION KEYHOLE ILLUMINATION CONTROL CIRCUIT


1. Disconnect BCM connector.
2. Check continuity between BCM harness connector M18 (A) terminal 1 and ignition keyhole illumination harness connector M25 (B)(early production) or (C)(late production) terminal -.

- - 1 : Continuity should exist.

OK or NG

OK >> Replace BCM if ignition keyhole illumination does not work after setting the connector again. Refer to [BCS-20, "Removal and Installation of BCM"](#).

NG >> Repair harness or connector.

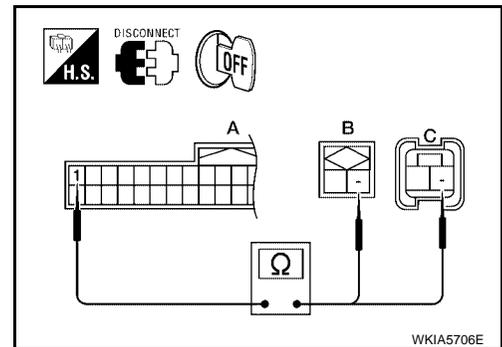

6. CHECK IGNITION KEYHOLE ILLUMINATION POWER SUPPLY CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect BCM connector and ignition keyhole illumination connector.
3. Check continuity between BCM harness connector M19 (A) terminal 41 and ignition keyhole illumination harness connector M25 (B)(early production) or (C)(late production) terminal +.

+ - 41 : Continuity should exist.

OK or NG

OK >> Replace BCM if ignition keyhole illumination does not work after setting the connector again. Refer to [BCS-20, "Removal and Installation of BCM"](#).

NG >> Repair harness or connector.

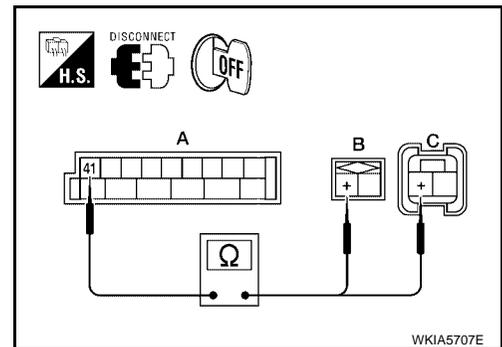

INTERIOR ROOM LAMP

EKS00FEL

All Step/Foot/Puddle Lamps Do Not Operate

1. CHECK EACH DOOR SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-154, "Display Item List"](#) for switches and their functions.

OK or NG

- OK >> GO TO 2.
- NG >> Inspect malfunctioning switch system.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
KEY ON SW	ON
DOOR SW-DR	ON
DOOR SW-AS	ON
DOOR SW-RR	OFF
DOOR SW-RL	OFF
BACK DOOR SW	OFF
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

SKIA5930E


2. CHECK STEP LAMP POWER SUPPLY

- Turn ignition switch OFF.
- Check voltage between front step lamp LH harness connector terminal and ground.

Terminals		(-)	Voltage (approx.)
(+) Terminal			
Front step lamp LH connector	Terminal	Ground	Battery voltage
D11	+		

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 4.

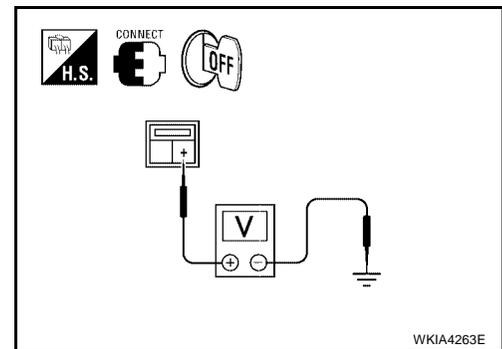


3. CHECK STEP LAMP CONTROL CIRCUIT

- Disconnect BCM connector and front step lamp LH connector.
- Check continuity between BCM harness connector terminal and front step lamp LH harness connector terminal.

A		B		Continuity
BCM connector	Terminal	Front step lamp LH connector	Terminal	
M19	47	D11	-	Yes

OK or NG

- OK >> Replace BCM if front step lamp does not work after setting the connector again. Refer to [BCS-20, "Removal and Installation of BCM"](#).
- NG >> Repair harness or connector.

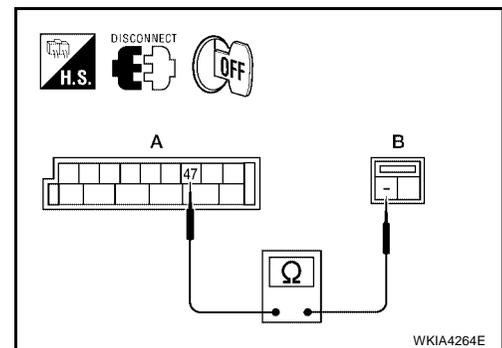

INTERIOR ROOM LAMP


4. CHECK STEP LAMP POWER SUPPLY CIRCUIT

1. Disconnect BCM connector and front step lamp LH connector.
2. Check continuity between BCM harness connector terminal and front step lamp LH harness connector terminal.

A		B		Continuity
BCM connector	Terminal	Front step lamp LH connector	Terminal	
M19	41	D11	+	Yes

OK or NG

- OK >> Replace BCM if front step lamp does not work after setting the connector again. Refer to [BCS-20, "Removal and Installation of BCM"](#).
- NG >> Repair harness or connector.

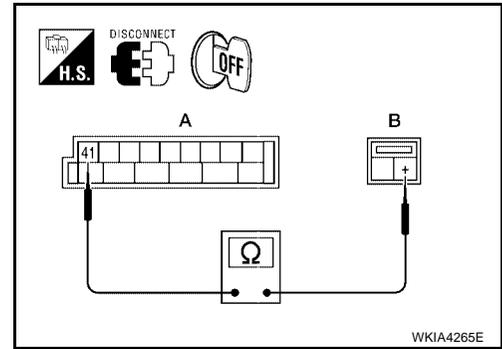

All Interior Room Lamps Do Not Operate

EKS00FEM


1. CHECK POWER SUPPLY CIRCUIT

1. All interior room lamps switch are OFF.
2. Turn ignition switch ON.
3. Check voltage between BCM harness connector M19 terminal 41 and ground.

41 - Ground : Battery voltage should exist.

OK or NG

- OK >> Repair harness or connector. In a case of making a short circuit, be sure to disconnect battery negative cable after repairing harness and then reconnect.
- NG >> Replace BCM. Refer to [BCS-20, "Removal and Installation of BCM"](#).

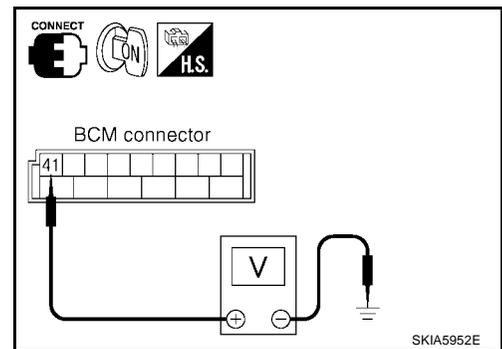


A
B
C
D
E
F
G
H
I
J
LT
L
M

ILLUMINATION

Component Parts and Harness Connector Location

EKS00FEN

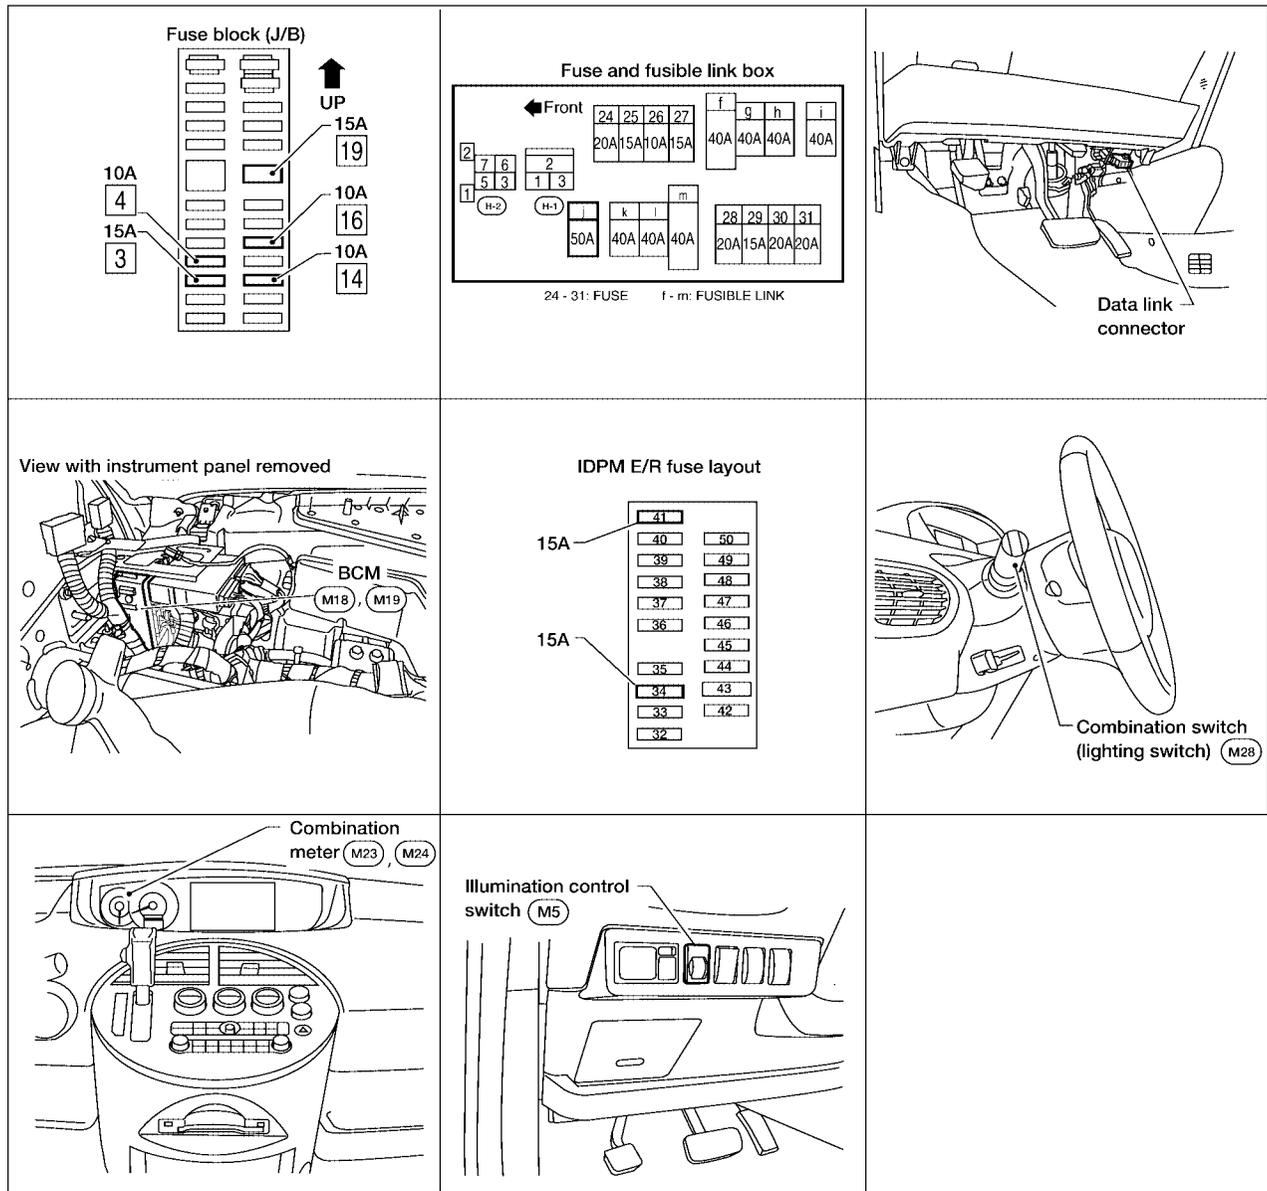

WKIA3152E

System Description

EKS00FEO

Control of the illumination lamps operation is dependent upon the position of the lighting switch (combination switch). When the lighting switch is placed in the 1ST or 2ND position (or if the auto light system is activated) the BCM (body control module) receives input signal requesting the illumination lamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the tail lamp relay. This relay, when energized, directs power to the illumination lamps, which then illuminate. Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and
- through 15A fuse (No. 41, located in the IPDM E/R)
- to tail lamp relay, located in the IPDM E/R, and
- through 50A fusible link (letter j , located in the fuse and fusible link box)
- to BCM terminal 55, and
- through 15A fuse [No. 3, located in fuse block (J/B)]
- to BCM terminal 42, and

ILLUMINATION

- through 15A fuse (No. 34, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 15A fuse [No.19, located in fuse block (J/B)]
- to combination meter terminal 31, and
- through BCM terminal 53
- to main power window and door lock/unlock switch terminal 10, and
- through BCM terminal 54
- to power window and door lock/unlock switch RH terminal 10.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 16, located in the fuse block (J/B)]
- to BCM terminal 38, and
- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to combination meter terminal 30.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 52 and
- to combination meter terminal 32
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 60
- through grounds E9, E15 and E24.

ILLUMINATION OPERATION BY LIGHTING SWITCH

With the lighting switch in the 1ST or 2ND position (or if the auto light system is activated), the BCM receives input signal requesting the illumination lamps to illuminate. This input signal is communicated to the IPDM E/R across the CAN communication lines. The CPU of the IPDM E/R controls the tail lamp relay which, when energized, directs power

- through IPDM E/R terminal 22
- to illumination control switch terminal 1
- to A/T device (illumination) terminal 3
- to TCS OFF switch (illumination) terminal 3 (without VDC)
- to VDC OFF switch (illumination) terminal 3 (with VDC)
- to AV switch (illumination) terminal 3
- to hazard switch (illumination) terminal 3
- to audio unit terminal 8
- to rear sonar system OFF switch terminal 5 (with rear sonar system)
- to lamps on demand switch terminal 5
- to glove box lamp terminal +
- to display unit terminal 4 (with monochrome display unit)
- to display control unit terminal 14 (with color display unit)
- to console lamp terminal 2
- to door mirror remote control switch (illumination) terminal 16
- to front air control terminal 23
- to DVD player terminal 12 (with DVD entertainment system)
- to NAVI control unit terminal 61 (with NAVI)
- to automatic door main switch terminal 5 (with power sliding door)
- to rear audio remote control unit terminal 6 (with rear audio remote control unit)
- to rear air control terminal 1

A

B

C

D

E

F

G

H

I

J

LT

L

M

ILLUMINATION

- through resistor-1 terminal 2 (with steering wheel audio control switches)
- through resistor-1 terminal 1 (with steering wheel audio control switches)
- through spiral cable terminal 26 (with steering wheel audio control switches)
- to spiral cable (steering switch) terminal 18 (with steering wheel audio control switches).

Illumination is controlled

- through illumination control switch terminal 2
- to A/T device terminal 4
- to TCS OFF switch terminal 4 (without VDC)
- to VDC OFF switch terminal 4 (with VDC)
- to AV switch terminal 4
- to hazard switch terminal 4
- to audio unit terminal 7
- to rear sonar system OFF switch terminal 4 (with rear sonar system)
- to lamps on demand switch terminal 6
- to door mirror remote control switch (illumination) terminal 15
- to front air control terminal 24
- to DVD player terminal 10 (with DVD entertainment system)
- to automatic door main switch terminal 7 (with power sliding door)
- to combination meter terminal 10
- through spiral cable terminal 27 (with steering wheel audio control switches)
- to spiral cable (steering switch) terminal 21 (with steering wheel audio control switches).

Ground is supplied

- to illumination control switch terminal 3
- to glove box lamp terminal –
- to display unit terminal 6 (with monochrome display unit)
- to display control unit terminal 3 (with color display unit)
- to console lamp terminal 1
- to main power window and door lock/unlock switch terminal 17 (with rear power vent windows) or terminal 15 (without rear power vent windows)
- to power window and door lock/unlock switch RH terminal 11
- to combination meter terminal 32
- through grounds M57, M61 and M79, and
- to rear audio remote control unit terminal 15 (with rear audio remote control unit)
- through grounds B7 and B19, and
- to NAVI control unit terminal 1 (with NAVI)
- to rear air control terminal 3
- through grounds B117 and B132.

With power and ground supplied, illumination lamps illuminate.

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 1ST or 2ND position (or if auto light system is activated) and the ignition switch is turned from ON or ACC to OFF, the battery saver control function is activated.

Under this condition, the illumination lamps remain illuminated for 5 minutes, then the illumination lamps are turned off.

When the lighting switch is turned from OFF to 1ST or 2ND position (or if auto light system is activated) after illumination lamps are turned off by the battery saver control, the illumination lamps illuminate again.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

CAN Communication System Description


EKS00FEP

Refer to [LAN-24, "CAN COMMUNICATION"](#) .

ILLUMINATION

Schematic


EKS00FEQ

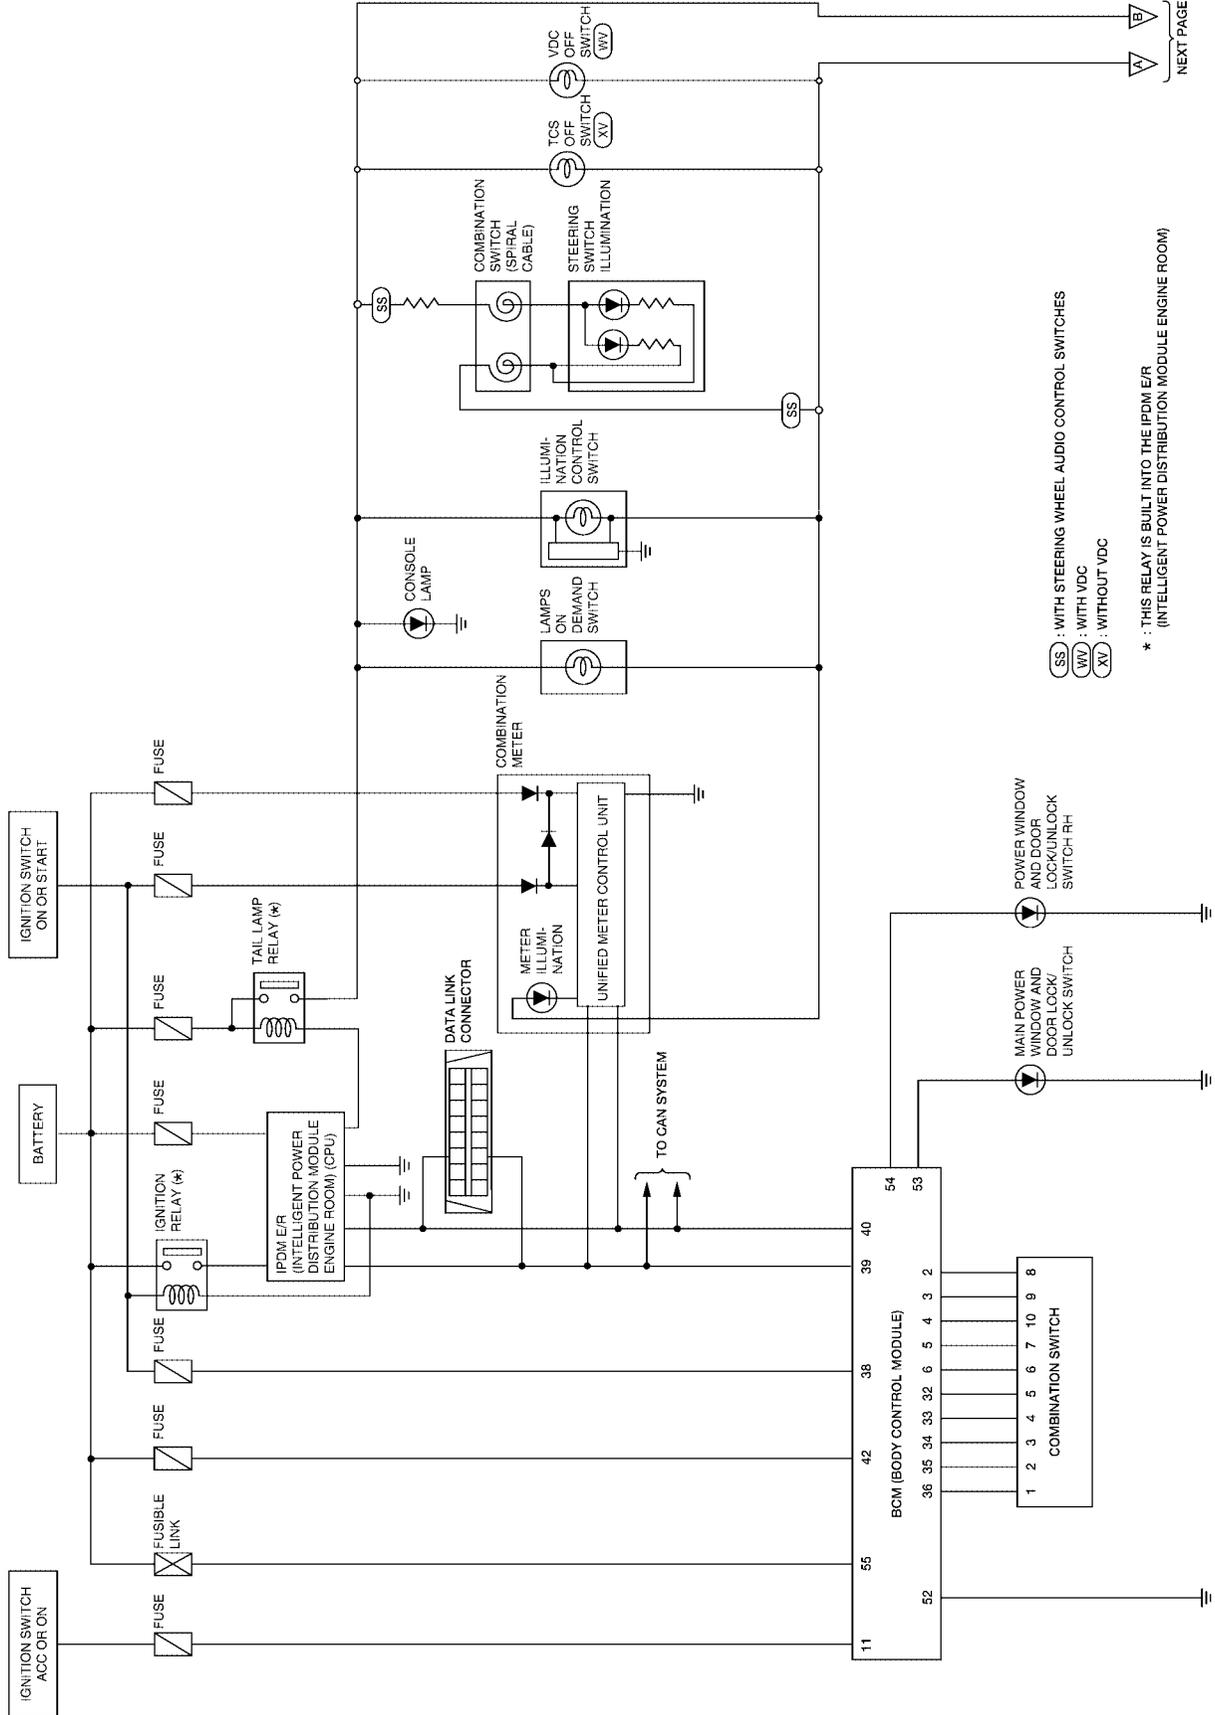

WKWA3231E

A
B
C
D
E
F
G
H
I
J
LT
L
M

ILLUMINATION

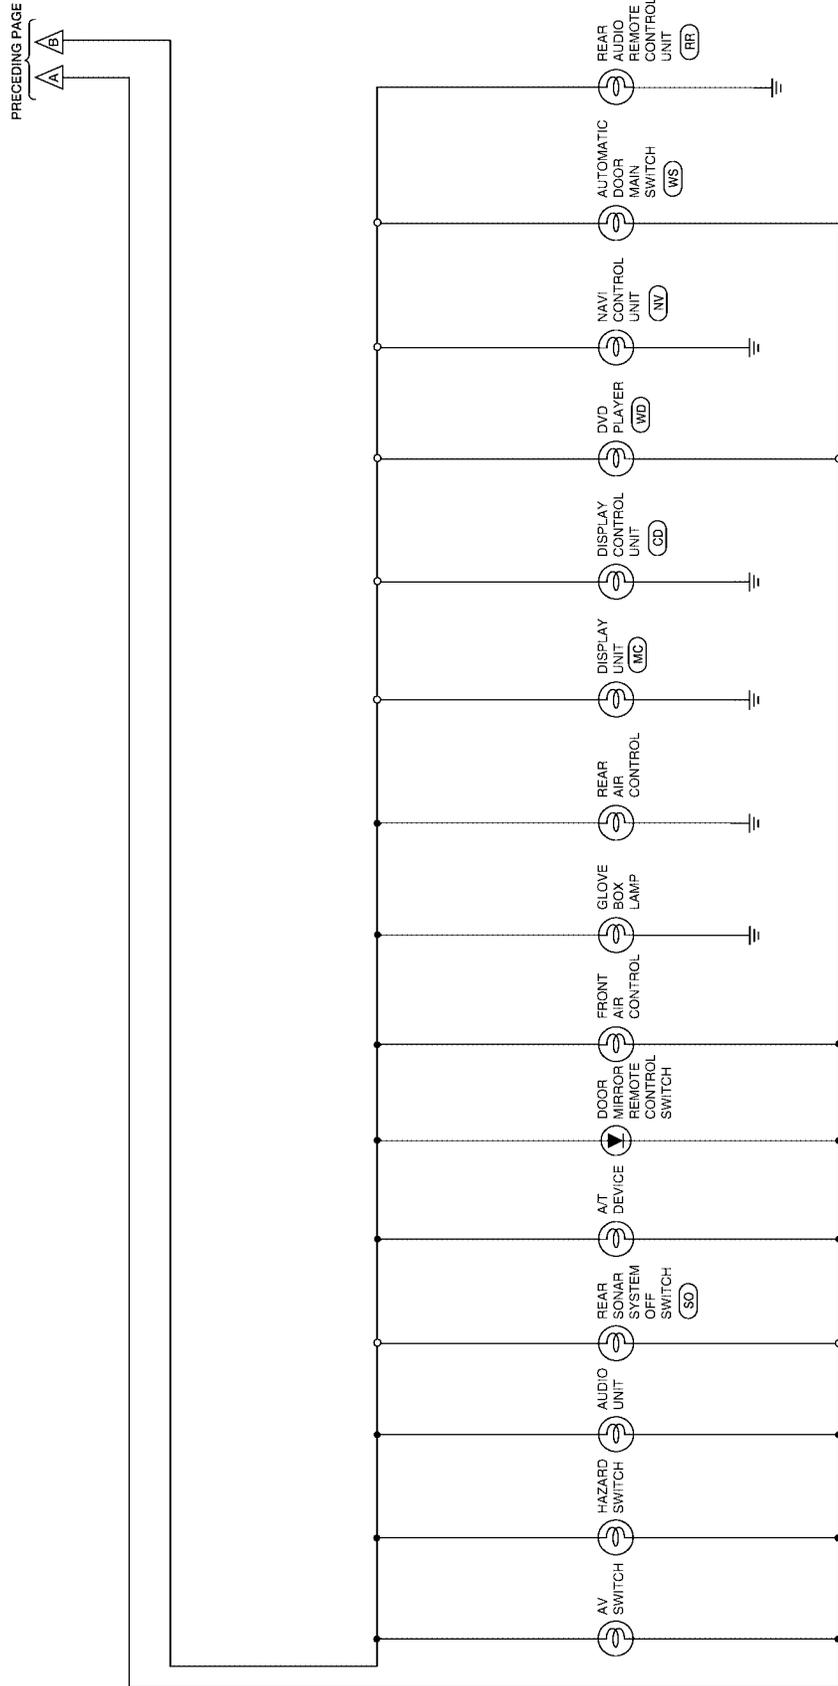

- (CD) : WITH COLOR DISPLAY
- (MC) : WITH MONOCHROME DISPLAY
- (NV) : WITH NAVI
- (RR) : WITH REAR AUDIO REMOTE CONTROL UNIT
- (SO) : WITH REAR SONAR SYSTEM
- (WD) : WITH DVD ENTERTAINMENT SYSTEM
- (WS) : WITH POWER SLIDING DOOR





WKWA3232E

ILLUMINATION

Wiring Diagram — ILL —

EKS00FER

LT-ILL-01

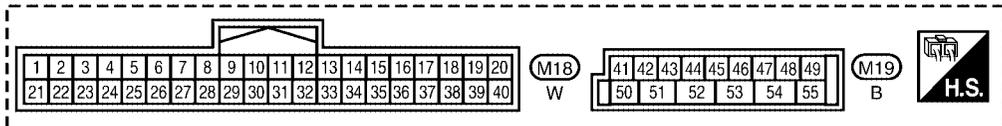

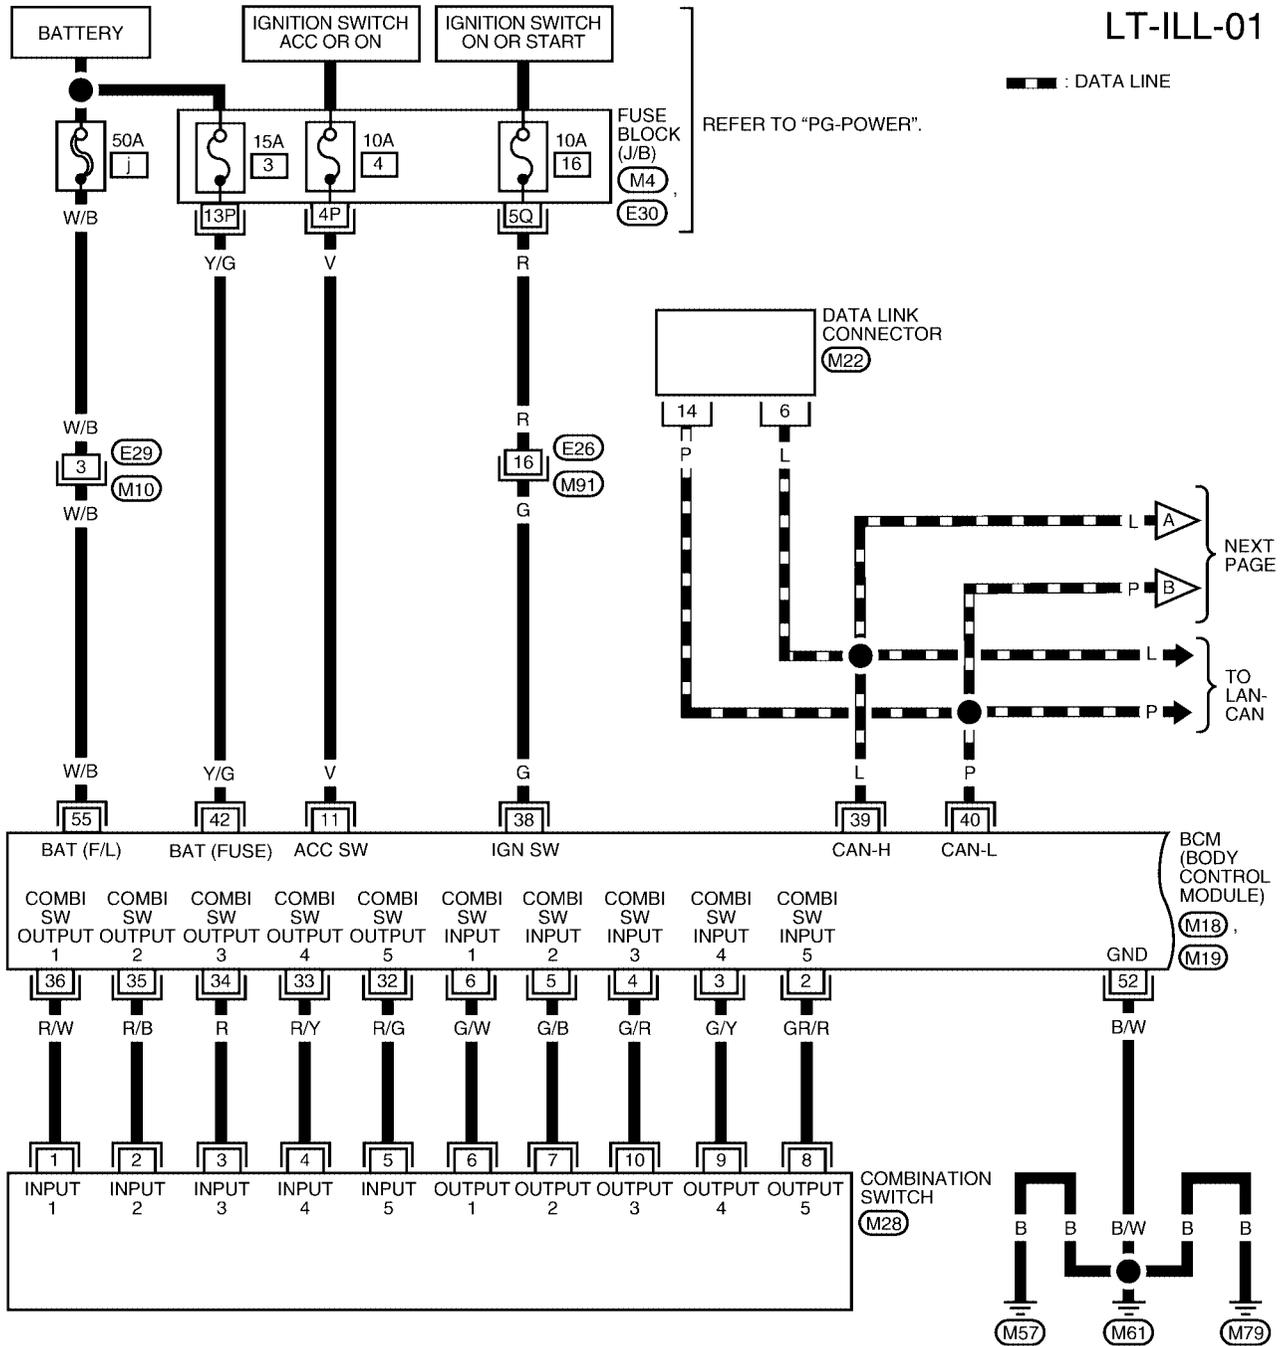


WKWA3233E

ILLUMINATION

LT-ILL-02


▬ : DATA LINE

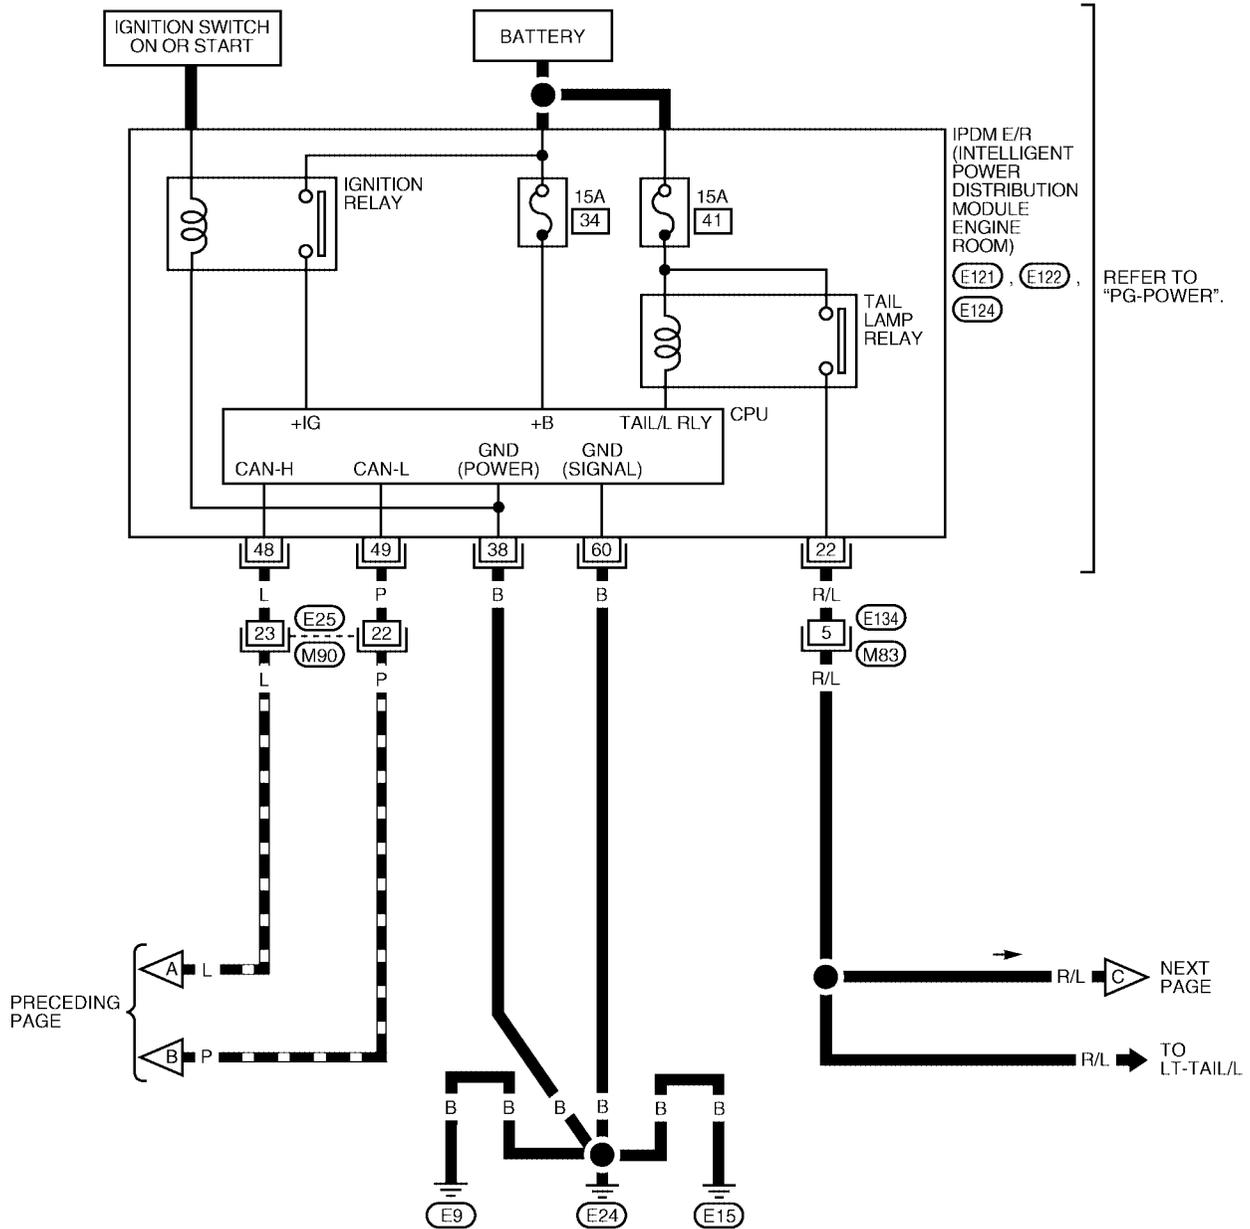


WKWA1953E

ILLUMINATION

LT-ILL-03

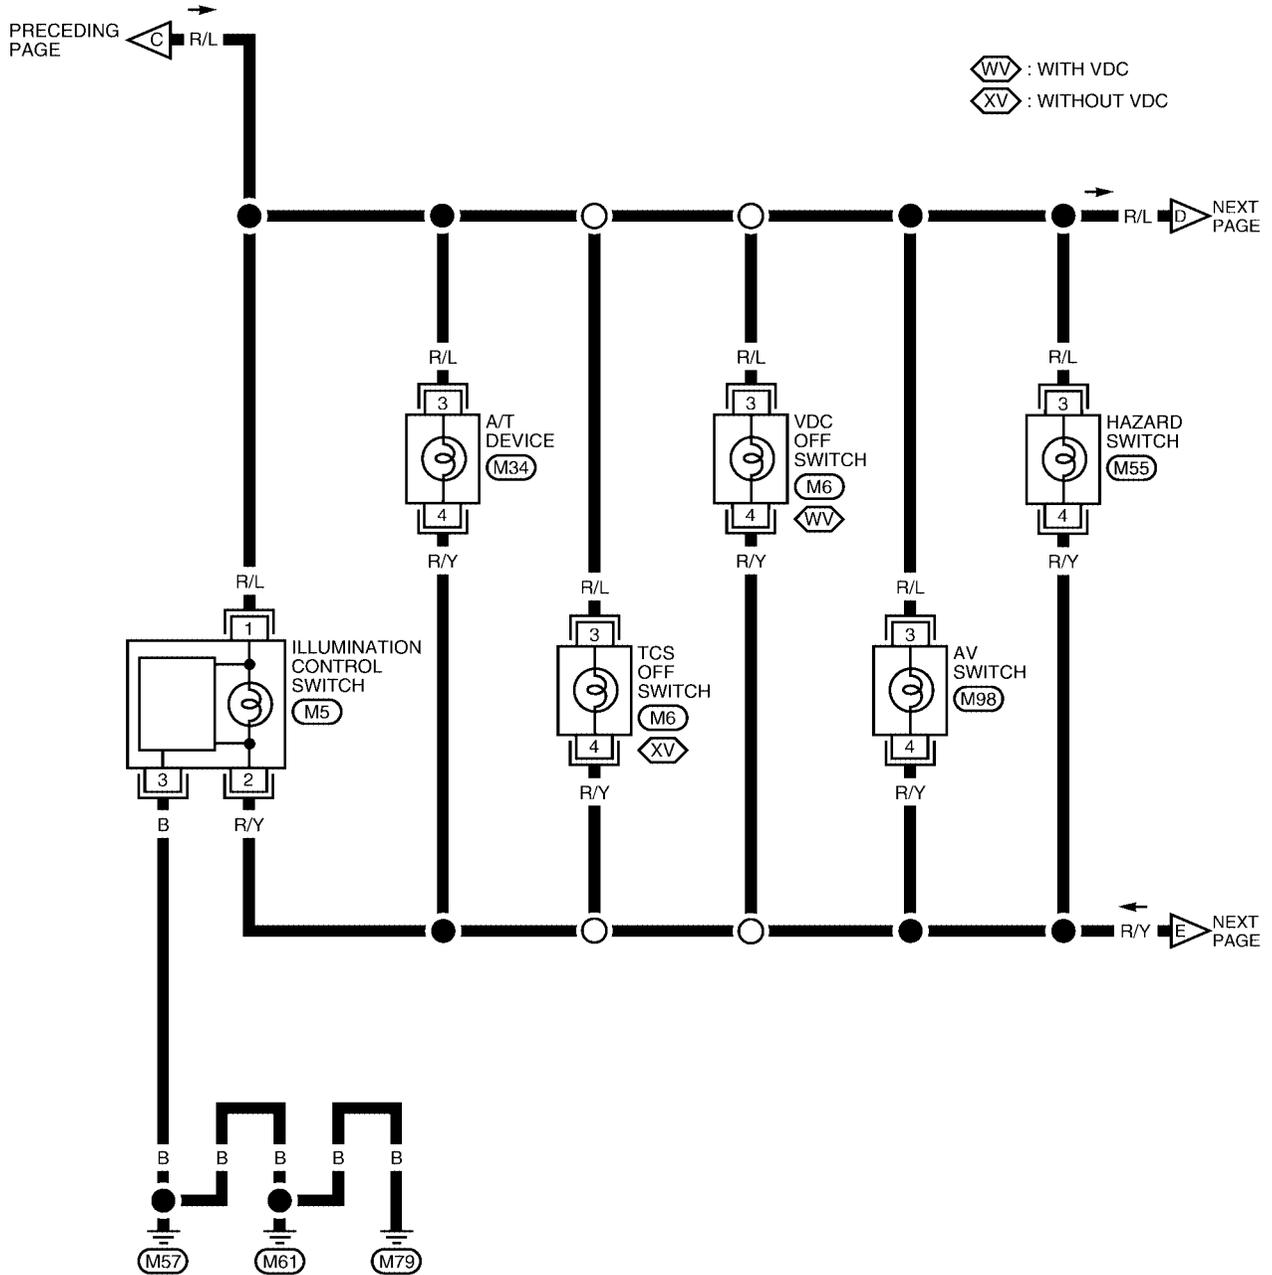

A
B
C
D
E
F
G
H
I
J
LT
L
M







WKWA3531E

ILLUMINATION

LT-ILL-04

SO : WITH REAR SONAR SYSTEM

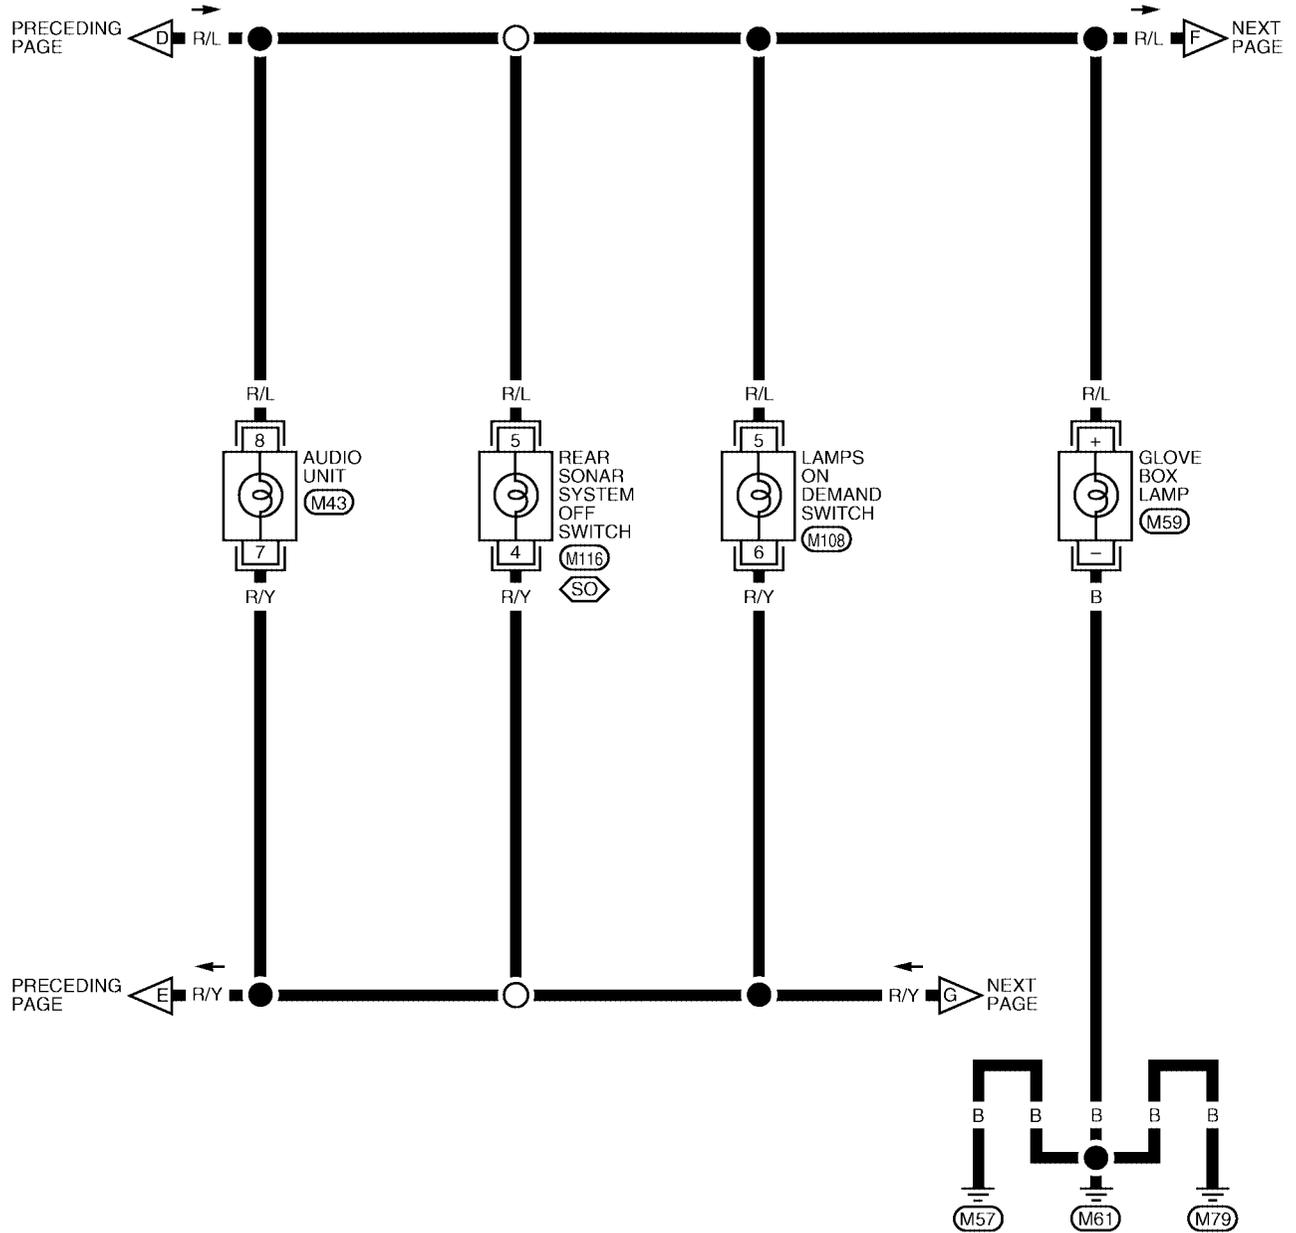


WKWA1955E

ILLUMINATION


LT-ILL-05

⬡CD : WITH COLOR DISPLAY

⬡MC : WITH MONOCHROME DISPLAY

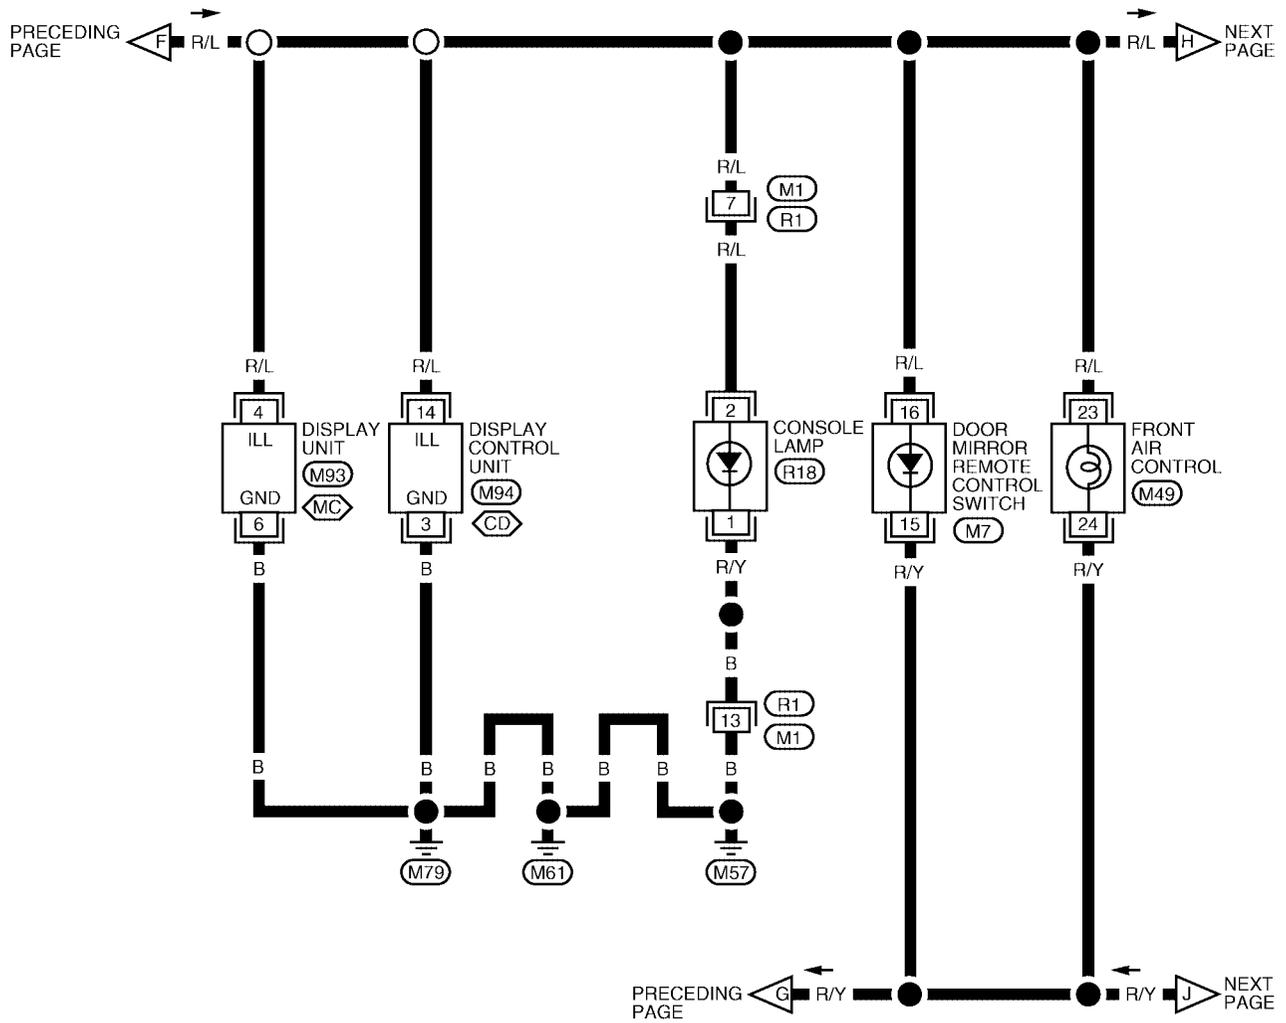

A
B
C
D
E
F
G
H
I
J
LT
L
M



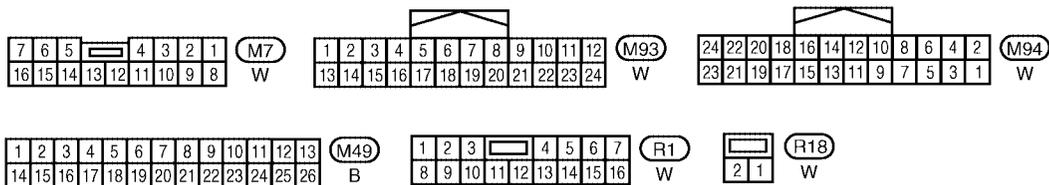


WKWA3234E



ILLUMINATION

LT-ILL-06

- : WITH NAVI
- : WITH STEERING WHEEL AUDIO CONTROL SWITCHES
- : WITH DVD ENTERTAINMENT SYSTEM

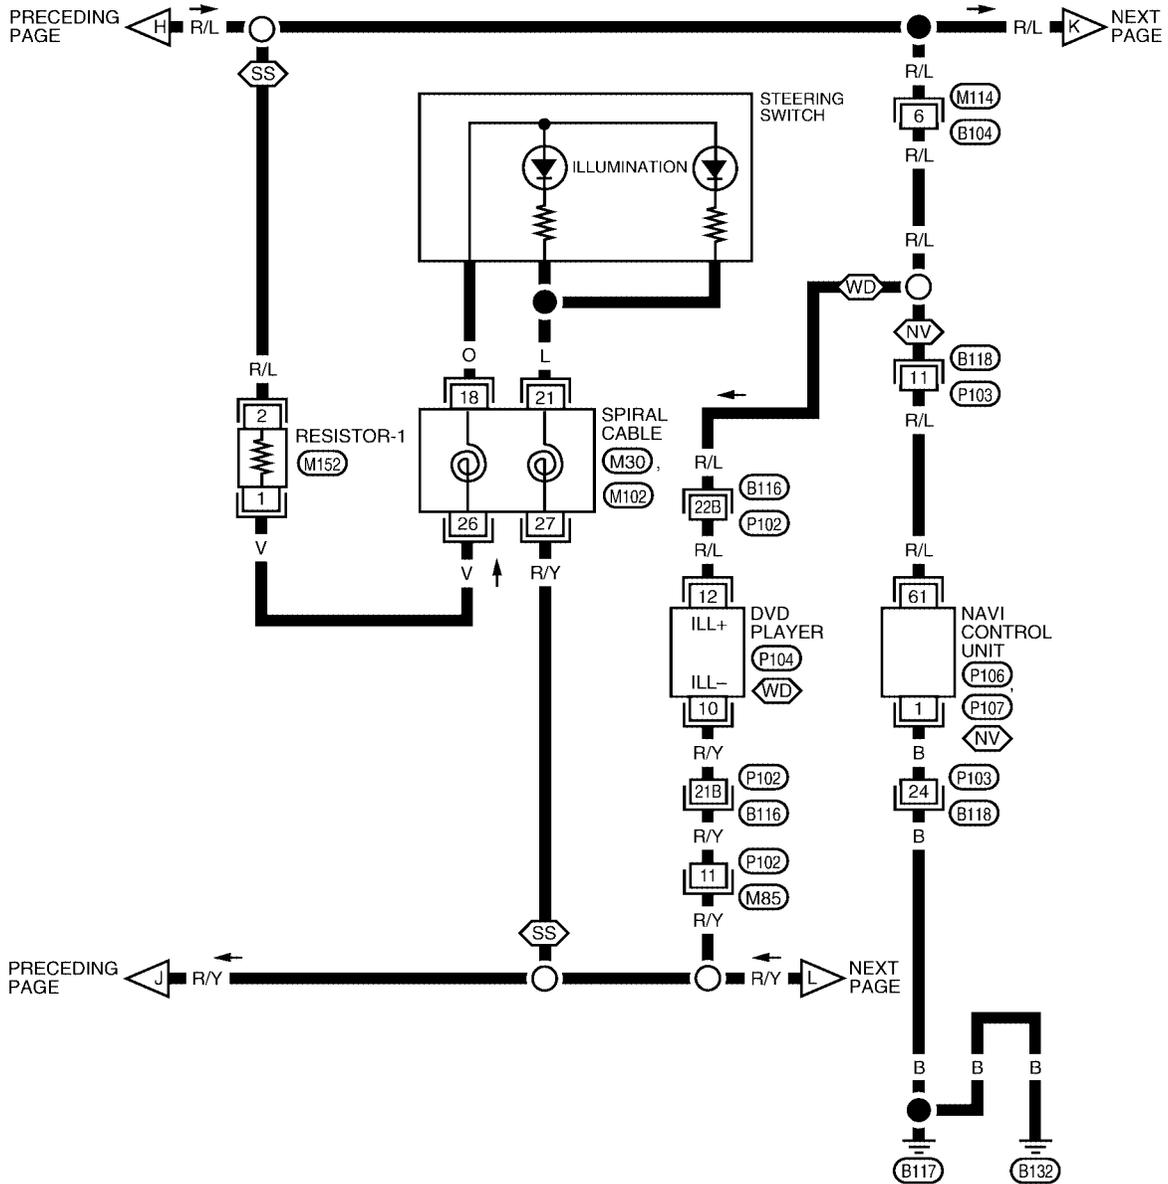

REFER TO THE FOLLOWING.
 - SUPER MULTIPLE JUNCTION (SMJ)





* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" IN PG SECTION.

WKWA5237E

ILLUMINATION

LT-ILL-07



WS : WITH POWER SLIDING DOOR
RR : WITH REAR AUDIO REMOTE CONTROL UNIT

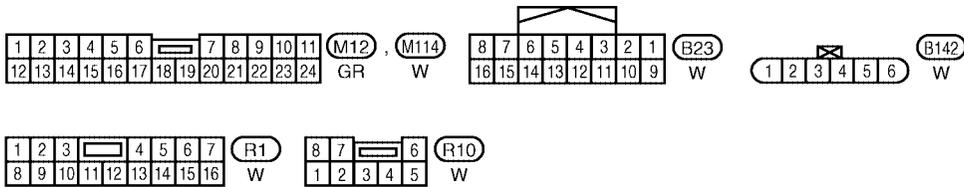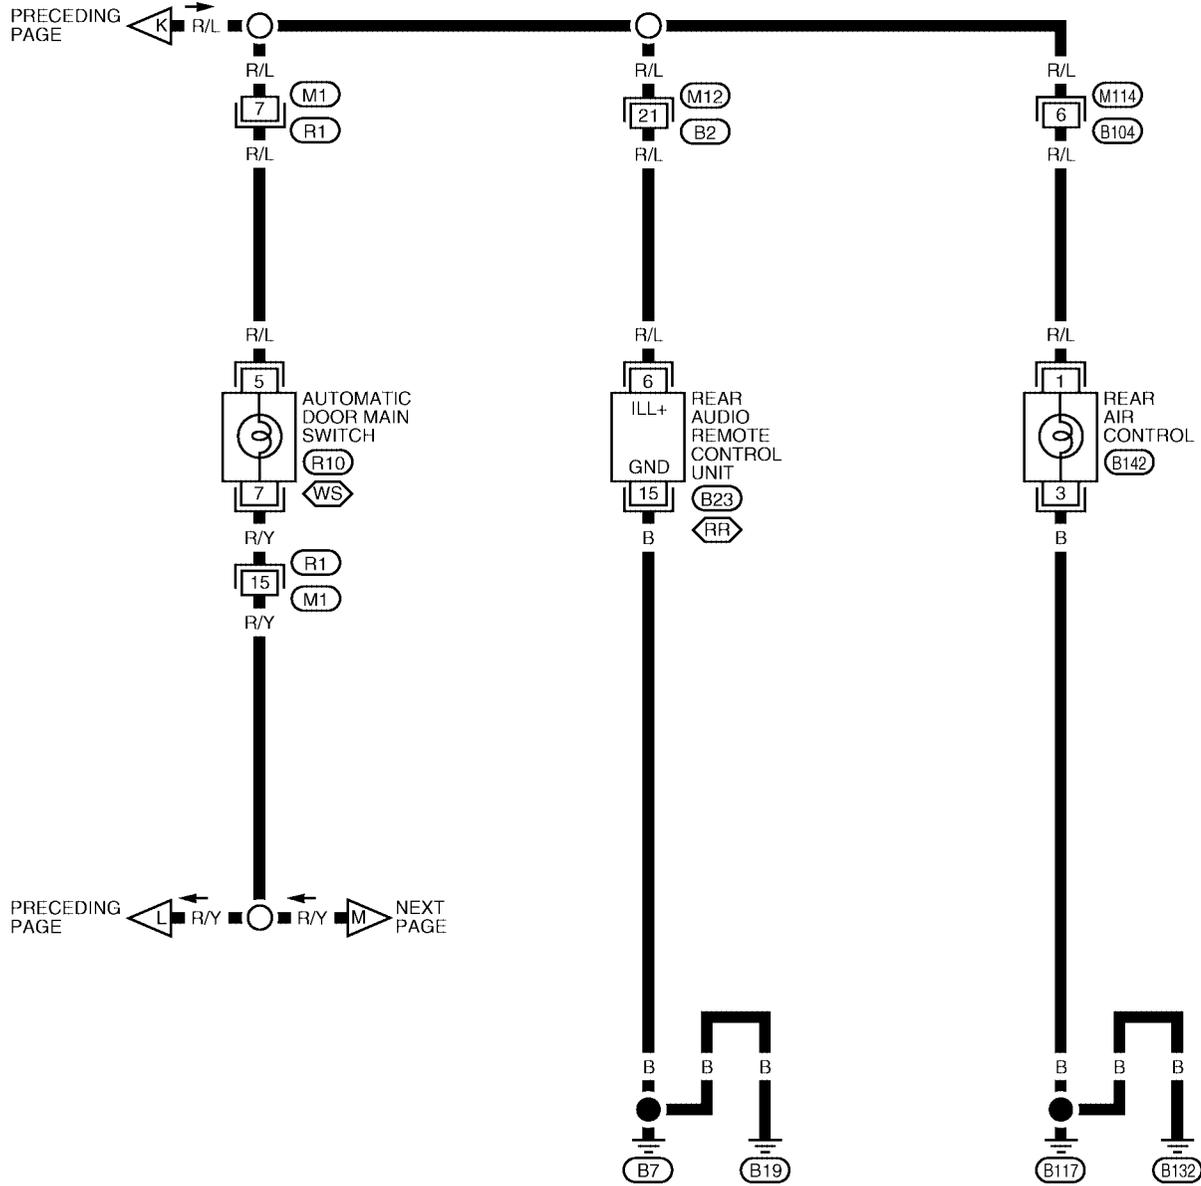

WKWA1958E

ILLUMINATION

LT-ILL-08

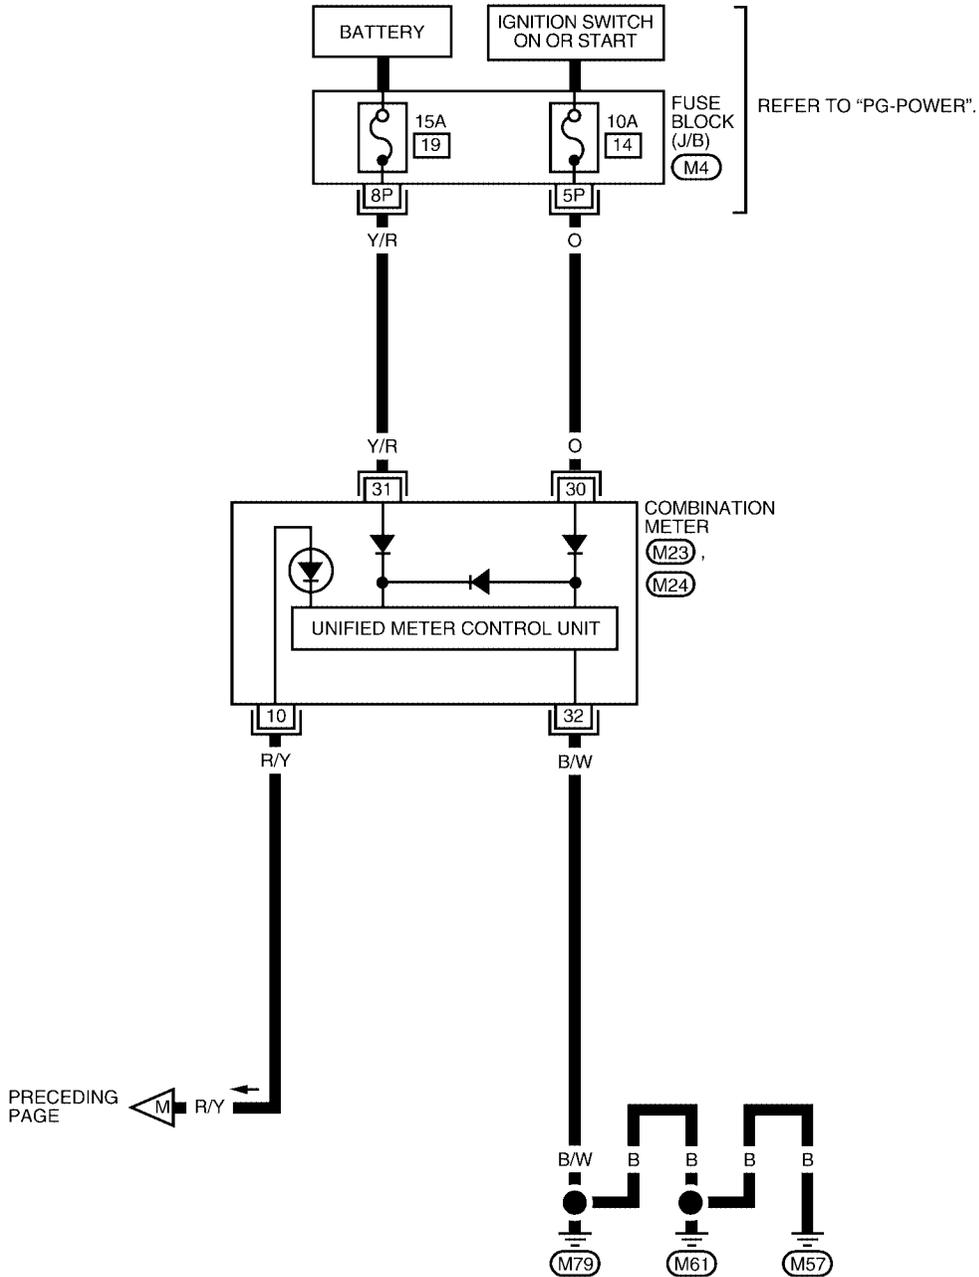

WKWA3236E

ILLUMINATION


EKS00FES

Removal and Installation

ILLUMINATION CONTROL SWITCH

1. Remove lower driver instrument panel. Refer to [IP-12, "Removal"](#) .
2. Carefully lift tabs and pull illumination control switch out of lower driver instrument panel.

Installation is in the reverse order of removal.

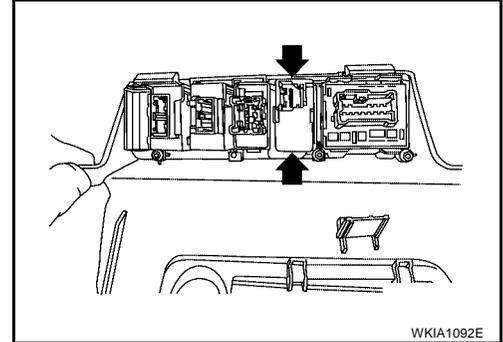

BULB SPECIFICATIONS

BULB SPECIFICATIONS

PF2:26297

Headlamp

EKS00FET

Item	Wattage (W)*
Low	51 (HB4)
High	60 (HB3)

*: Always check with the Parts Department for the latest parts information.

Exterior Lamp

EKS00FEU

Item	Wattage (W)*	
Front combination lamp	Turn signal lamp/parking lamp	29/8
	Cornering lamp	27
Rear combination lamp	Stop/Tail lamp	27/7
	Turn signal lamp	27
	Back-up lamp	18
Fog lamp	55 (H11)	
License plate lamp	5	
High-mounted stop lamp	13	

*: Always check with the Parts Department for the latest parts information.

Interior Lamp/Illumination

EKS00FEV

Item	Wattage (W)*
Glove box lamp	3.4
Ignition keyhole illumination lamp	0.74
Room/Map lamp	8
Console lamp	LED
A/T device lamp	3
Foot lamp	3.4
Step lamp	3.8
Cargo lamp	7
Vanity lamp	1.32
Personal lamp (with rear roof console assembly)	8
Personal lamp (without rear roof console assembly)	8
Puddle lamp	8
Running board lamp	3.4

*: Always check with the Parts Department for the latest parts information.

BULB SPECIFICATIONS
